 


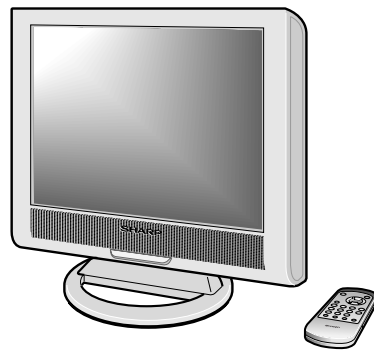

SHARP®


Quick Start Guide

LC-12A2E




Batteries for Remote Control

- 1** Open the battery cover.

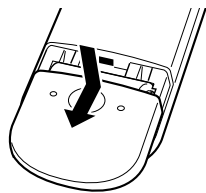

Slide the cover while pressing down.

- 2** Insert batteries (two size-AAA batteries, supplied with the product).

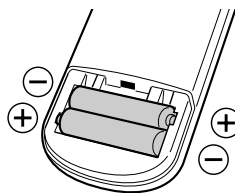

Position the positive and negative ends of the batteries as indicated.


- 3** Close the cover.



If problems persist, contact the SHARP Help Line (office hours) on tel: 0990-274277 and/or WEB-SITE: www.sharp.co.uk/support




Power Connection

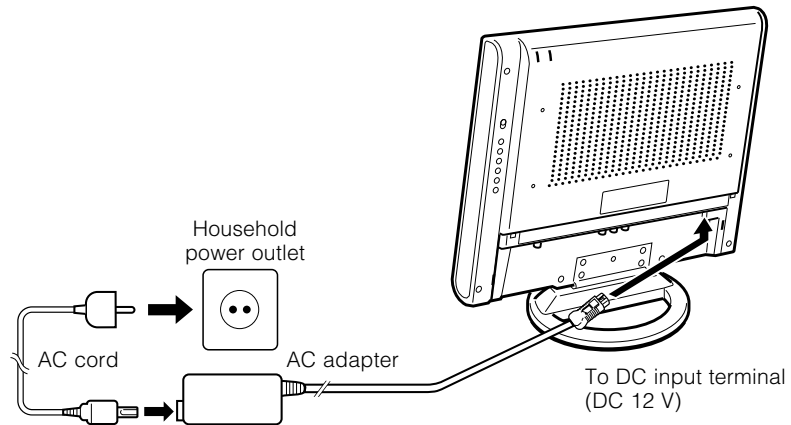

Antenna Connection

- 1) If your outdoor antenna uses a 75-ohm coaxial cable, change this for a new standard DIN45325 (IEC169-2) plug.
- 2) If your outdoor antenna uses a 300-ohm twin-lead flat feeder, change this for a 300-ohm to 75-ohm impedance converter.

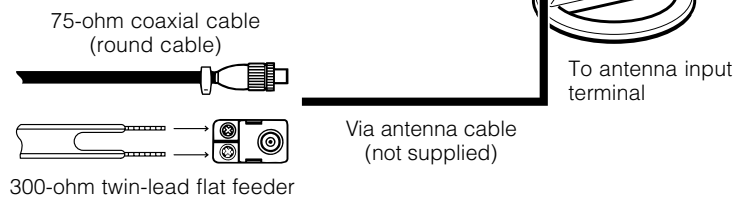


Web-site: www.sharp.co.uk/support Help Line (office hours only): 0990-274277



Presetting the Channels (AUTO)

This automatically tunes in and presets all receivable TV stations. Make sure the antenna cable is properly connected.

Rear control panel
of main unit

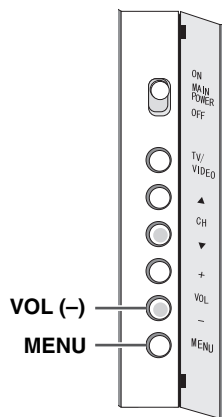

- 1 Press **MENU** on the main unit for more than 2 seconds.
The AUTO mode screen appears.

```

AUTO( 1 )
VHF      1
43.25MHz
  
```

- 2 Press **VOL (-)** on the main unit.
All the TV stations in your area that can be received by the LCD TV set are automatically preset between channels 1 to 99.
- 3 The screen shows whatever is on channel 1 when fully automatic channel preset is finished.


```

1
PAL
I
  
```

Presetting the Channels (MANUAL)

■ Setting a channel number for desired TV station

Rear control panel
of main unit

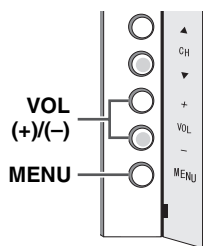

- 1 Press **MENU** on the main unit for more than 2 seconds.
The AUTO mode screen appears.
- 2 Press **MENU** until the MANUAL mode screen appears.

```

MANUAL( 1 )
VHF      1
48.25MHz
  
```

Web-site: www.sharp.co.uk/support Help Line (office hours only): 0990-274277



Presetting the Channels (MANUAL) (Continued)


- 3 Select the channel number with **CHANNEL SELECT** or **CH (▲)/(▼)**.




- 4 Press **VOL (+)/(-)** to locate the station you want to preset to the channel.
A search is initiated and when a TV signal is received during the search, the search stops.
- 5 Repeat steps 3 and 4 above to preset the channel numbers for other stations.
- 6 Press **MENU** until the normal screen appears.

■ In a weak reception area, or under bad reception conditions

Rear control panel of main unit

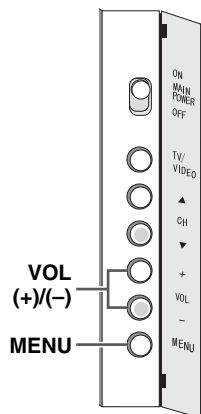

- 1 Press **MENU** on the main unit for more than 2 seconds.
The AUTO mode screen appears.
- 2 Press **MENU** until the MANUAL mode screen appears.
- 3 While the MANUAL mode screen is displayed, press **MENU** for more than 2 seconds to display the FINE mode screen.
The channel number remains in green.
- 4 Adjust for good reception with **VOL (+)/(-)**.
- 5 After finishing the adjustment, press **MENU** to continue channel presetting.

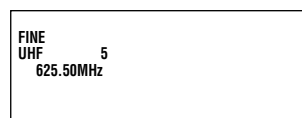

Web-site: www.sharp.co.uk/support Help Line (office hours only): 0990-274277

TINS-XXXXCEZZ

