

TELEVISION TECHNICAL BULLETIN

MODELS 37AM23H 37AT25H 37AM12H
 51AT15H

SYMPTOM The child lock mode cannot be released.

ACTION To reset the child lock mode, follow the procedure given below.

1. Switch the television on.
2. Press the volume down button on the television and the child lock button on the remote control simultaneously.
3. Press the mode button on the remote control.
4. Using the channel up and down buttons, move to the child lock position.
5. Press the mode button again.
6. Select a new PIN (Do not forget it).
7. Select exit and press mode again.

Note that this procedure is shown in the service manual.