

TELEVISION TECHNICAL BULLETIN

MODELS 37VT26H

SYMPTOM Postcode password has been forgotten.

ACTION Before removing the Postcode password from the product, please ensure legal ownership.

To remove the Postcode password, follow the instructions given below.

1. Enter the service mode by shorting together TP2002 and TP2003 (see page 9 of the Service Manual)
2. Press the DISPLAY button on the remote control to enter the NVM programming mode
3. To change the address use the channel up/down keys
4. To change the value use the volume up/down keys
5. Change address 380 to FF
6. Change address 381 to FF
7. Change address 382 to FF
8. Change address 383 to FF
9. Exit the service mode by removing the shorting link between TP2002 and TP2003
10. Turn the mains off then back on again
11. The Postcode password has now been removed