

## TELEVISION TECHNICAL BULLETIN

<u>MODELS</u>	37AM12H	37AM23H	37AT25H	51AT15H
	37DM23H	37EM33H	37DT25H	37ET35H
	51DT25H			

**REASON** As the NVM (IC1002) is supplied with default values for a number of models, it is necessary to reprogram the device on its installation.

**ACTION** Depending on the model number, reprogram the NVM as follows.

**37AM12H**

Location 0B  
Value 98

**37AM23H, 37AT25H, 51AT15H**

Location 0B  
Value B8

**37DM23H, 37EM33H, 37DT25H, 37ET35H, 51DT25H**

Location 0B  
Value F8

Location 47  
Value 70

Note that location 47 changes the OSD position and may need adjusting slightly.

For a full explanation of these codes, please refer to the service manual