

TELEVISION TECHNICAL BULLETIN

| MODELS | 56FW53H | 66FW53H | 66FW54H | 76FW53H |
|--------|---------|---------|---------|---------|
| | | | | |

76FW54H

<u>SYMPTOM</u> Loss of PIN code.

If you recieve a request to remove the PIN number for protection of the Post Code setting, please first ascertain the legal ownership of the product by checking for proof of purchase.

- **ACTION** To remove the PIN code follow the procedure outlined below.
 - 1. Enter the test mode.
 - 2. Select NVM page 08, position 3F and change its value from 01 to 00.
 - 3. Press the standby button on the remote control to memorise.
 - 4. Switch the set off, then on again using the mains switch.
 - 5. It will now be possible to enter a new PIN number and Post Code.



Revision 1 White – Carry out as required, Yellow – Carry out as required and whenever the unit comes in for service, Red – Carry out on all units

Sharp Electronics (UK) Limited Reference JC191199-1