

**MODELS**      DV5105H                      DV5107H

**SYMPTOM**    When the set is powered up the power LED goes red/green/red/green repeatedly or the set does not start up (LED goes from red to green then back to red).

**CAUSE**        Five volt supply current regulation problems.

**ACTION**        Replace R751 and R777 with the part number given below.

It is also advisable to check that the HT is 113V when in blue mute (remove the aerial and wait a few seconds).

<b><u>REF NO</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PART NUMBER</u></b>	<b><u>PRICE CODE</u></b>
R751/R777	0.33R, 1W	VRN-VV3ABR33J	AC

