

SHARP®

LC-20B6U

LIQUID CRYSTAL TELEVISION
TÉLÉVISEUR ACL
TELEVISOR CON PANTALLA DE
CRISTAL LÍQUIDO
TELEVISOR DE CRISTAL
LÍQUIDO

AQUOS

OPERATION MANUAL
MODE D'EMPLOI
MANUAL DE OPERACIÓN
MANUAL DE OPERAÇÃO



Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency.

ENGLISH

FRANÇAIS

ESPAÑOL

PORTUGUÊS

LC-20B6U

LIQUID CRYSTAL TELEVISION

ENGLISH

OPERATION MANUAL

IMPORTANT:

To aid reporting in case of loss or theft, please record the TV's model and serial numbers in the space provided. The numbers are located at the rear of the TV.



Model No.:

Serial No.:

U.S.A. ONLY

IMPORTANT INFORMATION

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

The enclosed RGB cable must be used with the device. The cable is provided to ensure that the device complies with FCC Rules.

U.S.A. ONLY

IMPORTANT INFORMATION (Continued)

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CAUTION:

DO NOT PLACE THIS PRODUCT ON AN UNSTABLE CART, STAND, TRIPOD, BRACKET, OR TABLE. THE PRODUCT MAY FALL CAUSING SERIOUS PERSONAL INJURY AND SERIOUS DAMAGE TO THE PRODUCT. USE ONLY WITH A CART, STAND, TRIPOD, BRACKET, OR TABLE RECOMMENDED BY THE MANUFACTURER OR SOLD WITH THE PRODUCT. FOLLOW THE MANUFACTURER'S INSTRUCTIONS WHEN INSTALLING THE PRODUCT AND USE MOUNTING ACCESSORIES RECOMMENDED BY THE MANUFACTURER. A PRODUCT AND CART COMBINATION SHOULD BE MOVED WITH CARE. QUICK STOPS, EXCESSIVE FORCE, AND UNEVEN SURFACES MAY CAUSE THE PRODUCT AND CART COMBINATION TO OVERTURN.



WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

U.S.A. ONLY

DECLARATION OF CONFORMITY

SHARP LIQUID CRYSTAL TELEVISION, MODEL LC-20B6U.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RESPONSIBLE PARTY:

SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430-2135
TEL: 1-800-BE-SHARP

For Business Customers: URL <http://www.sharppusa.com>

U.S.A. ONLY

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

U.S.A. ONLY

"Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical."

U.S.A. ONLY

This product utilizes tin-lead solder, and fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eia.org

Trademark

- Micronas® VOICE is a Speech Enhancement and Intelligibility Processing technology by Micronas GmbH.
- Micronas is a trademark of Micronas GmbH.

DEAR SHARP CUSTOMER

Thank you for your purchase of the Sharp Liquid Crystal Television. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Precautions carefully before using this product.


IMPORTANT SAFETY PRECAUTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your LCD color TV product, please read the following precautions carefully before using the product.


- Read instructions—All operating instructions must be read and understood before the product is operated.
- Keep this manual in a safe place—These safety and operating instructions must be kept in a safe place for future reference.
- Observe warnings—All warnings on the product and in the instructions must be observed closely.
- Follow instructions—All operating instructions must be followed.
- Attachments—Do not use attachments not recommended by the manufacturer. Use of inadequate attachments can result in accidents.
- Power source—This product must operate on a power source specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company. For units designed to operate on batteries or another power source, refer to the operating instructions.
- Power cord protection—The power cords must be routed properly to prevent people from stepping on them or objects from resting on them. Check the cords at the plugs and product.
- If the AC adapter is misplaced or needs to be replaced, obtain the same type of adapter from a SHARP service center or your dealer.
- Overloading—Do not overload AC outlets or extension cords.
Overloading can cause fire or electric shock.
- Entering of objects and liquids—Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.
- Servicing—Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions. Request a qualified service person to perform servicing.
- Repair—If any of the following conditions occurs, unplug the power cord from the AC outlet, and request a qualified service person to perform repairs.
 - a. When the power cord or plug is damaged.
 - b. When a liquid was spilled on the product or when objects have fallen into the product.
 - c. When the product has been exposed to rain or water.
 - d. When the product does not operate properly as described in the operating instructions.
Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.
 - e. When the product has been dropped or damaged.
 - f. When the product displays an abnormal condition. Any noticeable abnormality in the product indicates that the product needs servicing.
- Replacement parts—In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.
- Safety checks—Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.
- Wall or ceiling mounting—When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- Polarization—This AC adapter may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.
Do not defeat the safety purpose of the polarized plug.

IMPORTANT SAFETY PRECAUTIONS (Continued)

- **Cleaning**—Unplug the power cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners.

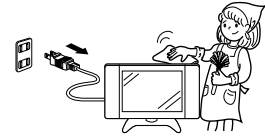

- **Water and moisture**—Do not use the product near water, such as bathtub, washbasin, kitchen sink and laundry tub, swimming pool and in a wet basement.

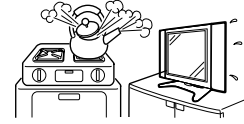


- **Stand**—Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.




- **Ventilation**—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

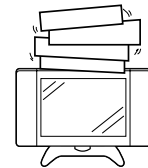

- The Liquid Crystal panel used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the Liquid Crystal panel breaks.



- **Heat sources**—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).

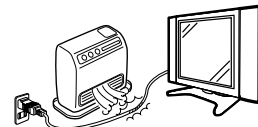


- The Liquid Crystal panel is a very high technology product with 2,359,296 thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.


IMPORTANT SAFETY PRECAUTIONS (Continued)

- If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.


EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

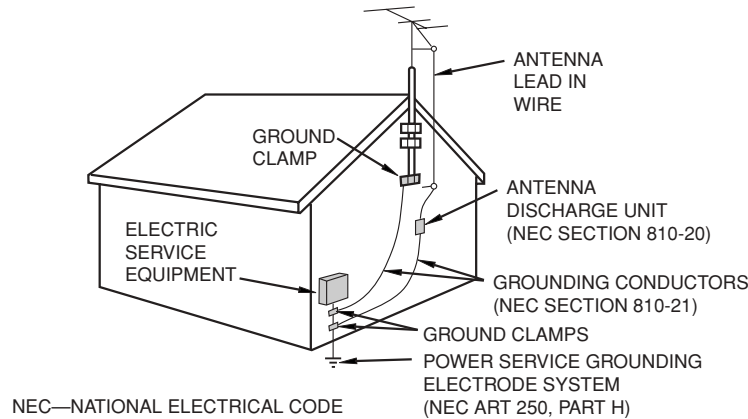


- Lightning – For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long period of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.

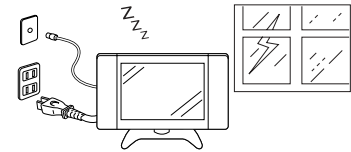

- Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

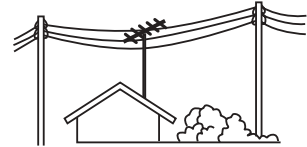


- To prevent fire, never place any type of candle or flames on the top or near the TV set.

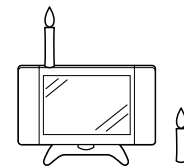

- To prevent fire or shock hazard, do not expose this products to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the products.



 - To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.


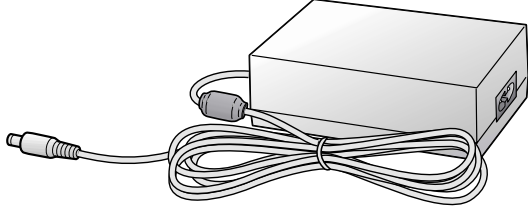









Contents

IMPORTANT INFORMATION	1	SLEEP TIMER	37
Trademark	2	WAKE-UP TIMER	38
DEAR SHARP CUSTOMER	3	NO SIGNAL OFF	38
IMPORTANT SAFETY PRECAUTIONS	3	NO OPERATION OFF	38
Supplied Accessories	7	PICTURE FLIP	39
Preparation	8	Connecting a PC	40
Installing Batteries in the Remote Control	8	Viewing an Image from a PC	40
Using Remote Control	8	Displaying an Image from a PC	40
Antenna Connection	9	INPUT SIGNAL (for PC mode)	41
Removing the Terminal Cover	9	FINE SYNC. Adjustments (for PC mode)	41
Power Connection	10	POWER MANAGEMENT (for PC mode)	42
Part Names of Main Unit	11	PC Compatibility Chart	42
Listening with Headphones	11	Connecting External Devices	43
How to Fix the Cables	12	Example of External Devices that can be	
Part Names of Remote Control	13	Connected	43
TV Signals in Your Region	13	Connecting a VCR, DVD Player or a Camcorder	
EZ SETUP (With AUTO CLOCK Setting)	14	to COMPONENT1/COMPONENT2/AV1/AV-IN2/PC-IN ...	44
EZ SETUP during the First Power On	14	Outputting Video and Audio (Video Output)	45
Setting the CLOCK	15	Troubleshooting	46
AUTO CLOCK Setting	15	Specifications	48
MANUAL CLOCK Setting	16	Dimensional Drawings	49
TIME DISPLAY	16	Calling for Service	50
Basic Operation	17	LIMITED WARRANTY	50
Turning On and Off the Main Power	17		
Standby	17		
Switching the Input Modes			
(AV1/AV2/COMPONENT/PC/TV)	17		
Sound Volume	18		
Changing Channels	18		
Selecting Menu Items	19		
Basic Adjustment Settings	21		
AV MODE	21		
OPC	22		
BACKLIGHT	22		
PICTURE Adjustments	23		
COLOR TEMPERATURE	23		
I/P SETTING	24		
NOISE CLEAN	24		
FILM MODE	24		
QUICK SHOOT	24		
Useful Features	25		
AUDIO Adjustments	25		
WIDE SOUND	25		
SPEECH EMPHASIS	25		
PC SOUND SELECT (for PC mode)	26		
CH-SETTING	26		
SETUP	28		
COMP. 2/AV1 SELECT	28		
V-CHIP Settings	29		
CLOSED CAPTION	35		
VIEW MODE	36		
AUDIO ONLY	36		

Supplied Accessories

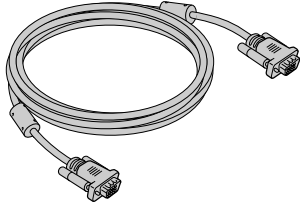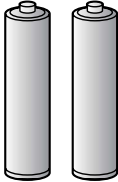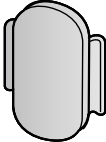Make sure the following accessories are provided with the LCD TV set.

Wireless remote control		AC adapter		
 <p>pages 8 and 13 RRMCGA293WJSA</p>		 <p>page 10 UADP-A065WJPZ</p>		
AC cord	Antenna cable	RGB cable		
 <p>page 10 QACDA037WJPA</p>	 <p>page 9 QCNWG0003CEPA</p>	 <p>page 40 QCNWGA050WJPZ</p>		
"AAA" size batteries (×2)	Cable holder	Operation manual		
 <p>page 8</p>	 <p>page 12 LHLDWA037WJSA</p>	 <p>TINS-B253WJZZ</p>		
	Cable clamp			
	 <p>page 12 LHLDWA002WJSA</p>			

NOTE


- The AC cord enclosed in this product is for 110-125V. In using it on the 125-240V AC, please consult to the following.
SHARP ELECTRONICS CORPORATION
6100 Blue Lagoon Drive, Suite 230, Miami, Florida 33126, U.S.A.

Preparation

Installing Batteries in the Remote Control


Before using the LCD TV set for the first time, install the two "AAA" size batteries supplied in the remote control. When the batteries become depleted and the remote control fails to operate, replace the batteries with new "AAA" size batteries.

1 Open the battery cover.

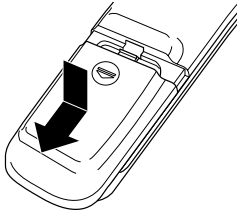


■ Slide the cover while pressing the (▼) part.

2 Insert two "AAA" size batteries.

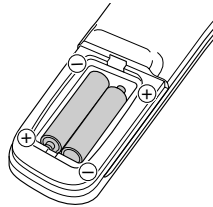

■ Place batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.

3 Close the battery cover.

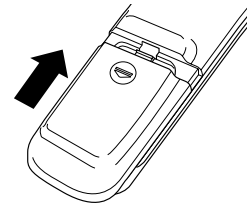

■ Engaging the lower claw with the remote control, close the cover.


⚠ Caution!

Precautions regarding batteries

- Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the instructions below.
 - Place batteries with their terminals corresponding to the (+) and (-) indications.
 - Different types of batteries have different characteristics. Do not mix batteries of different types.
 - Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
 - Remove batteries as soon as they are depleted. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe it off with a cloth.
 - The batteries supplied with the LCD TV set may have a shorter operating time due to storage conditions.
 - If the remote control is not to be used for an extended period of time, remove the batteries from the remote control.


Using Remote Control

- Use the remote control by pointing it towards the remote sensor window of the main unit. Objects between the remote control and sensor window may prevent proper operation.

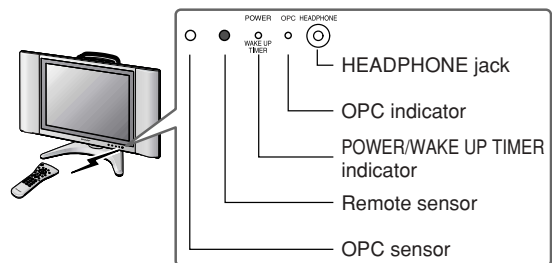

Cautions regarding use of remote control

- Do not apply shock to the remote control. In addition, do not expose the remote control to liquids, and do not place it in an area with high humidity.
- Do not install or place the remote control under direct sunlight. The heat may cause deformation of the unit.
- The remote control may not work properly if the remote sensor window is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or main unit, or operate the remote control closer to the remote sensor window.

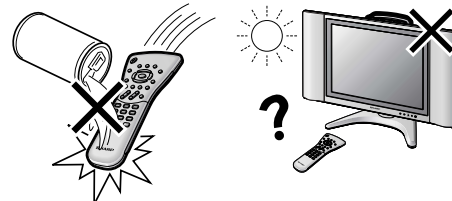


Antenna Connection

ANTENNAS


- The antenna requirements for good color television reception are more important than those for black & white television reception. For this reason, a good quality outdoor antenna is strongly recommended. The following is a brief explanation of the type of connections that are provided with the various antenna systems.

- A 75-ohm system is generally a round cable with F-type connector that can easily be attached to a terminal without tools (not supplied).
- A 300-ohm system is a flat "twin-lead" cable that can be attached to a 75-ohm terminal through a 300/75-ohm adapter (not supplied).

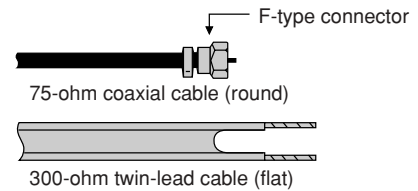

OUTDOOR ANTENNA CONNECTION


- Use one of the following two diagrams if you connect an outdoor antenna.
 - A: Using a VHF/UHF combination outdoor antenna
 - B: Using separate VHF and/or UHF outdoor antennas
- Connect the outdoor antenna cable lead-in to ANT. (Antenna terminal) on the rear of the main unit.

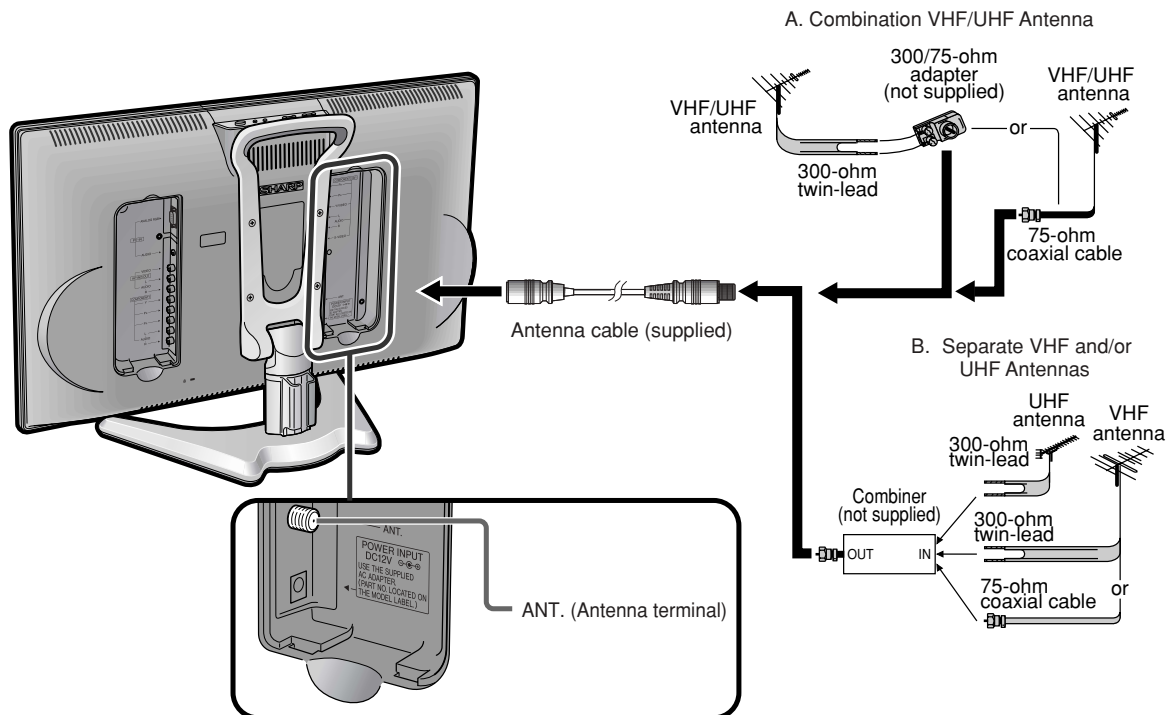

NOTICE

F-type connector


F-type connector should be finger-tightened only.

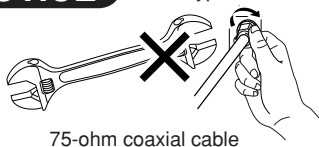

When connecting the RF cable to the LCD TV set, do not tighten F-type connector with tools. If tools are used, it may cause damage to your LCD TV set. (The breaking of internal circuit, etc.)

Removing the Terminal Cover

- Before connecting cables and cords to the rear terminals, remove the terminal covers. Push in the tabs and pull out the terminal covers carefully.
- To mount the cover, insert the 2 hooks on the bottom of the cover into the cabinet and press on the upper part of the terminal cover until the tab locks in place with a click.

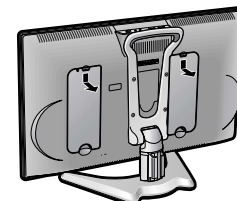

Preparation (Continued)


Antenna Connection (Continued)

CABLE TV (CATV) CONNECTION

- A 75-ohm coaxial cable connector is built into the set for easy hookup. When connecting the 75-ohm coaxial cable to the set, screw the 75-ohm cable to the ANT. terminal.
- Some cable TV companies offer “premium pay channels”. Since the signals of these premium pay channels are scrambled, a cable TV converter/descrambler is generally provided to the subscriber by the cable TV company. This converter/descrambler is necessary for normal viewing of the scrambled channels. (Set your TV to channel 3 or 4, typically one of these channels is used. If this is unknown, consult your cable TV company.) For more specific instructions on installing cable TV, consult your cable TV company. One possible method of utilizing the converter/descrambler provided by your cable TV company is explained below. Please note: An RF switch provided with two inputs (A and B) is required (not supplied).

“A” position on the RF switch (not supplied): You can view all unscrambled channels by using the TV’s channel keys.


“B” position on the RF switch (not supplied): You can view the scrambled channels via the converter/descrambler by using the converter’s channel keys.

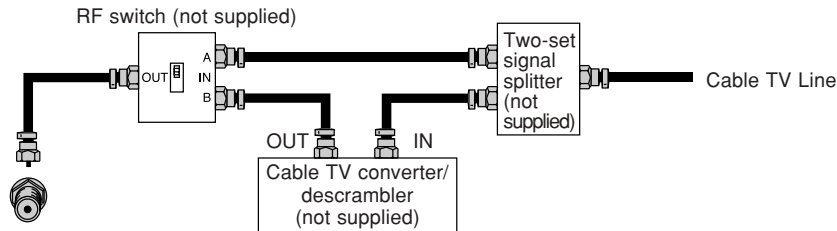

NOTE

- Consult your SHARP Dealer or Service Center for the type of splitter, RF switch or combiner that might be required.

Power Connection

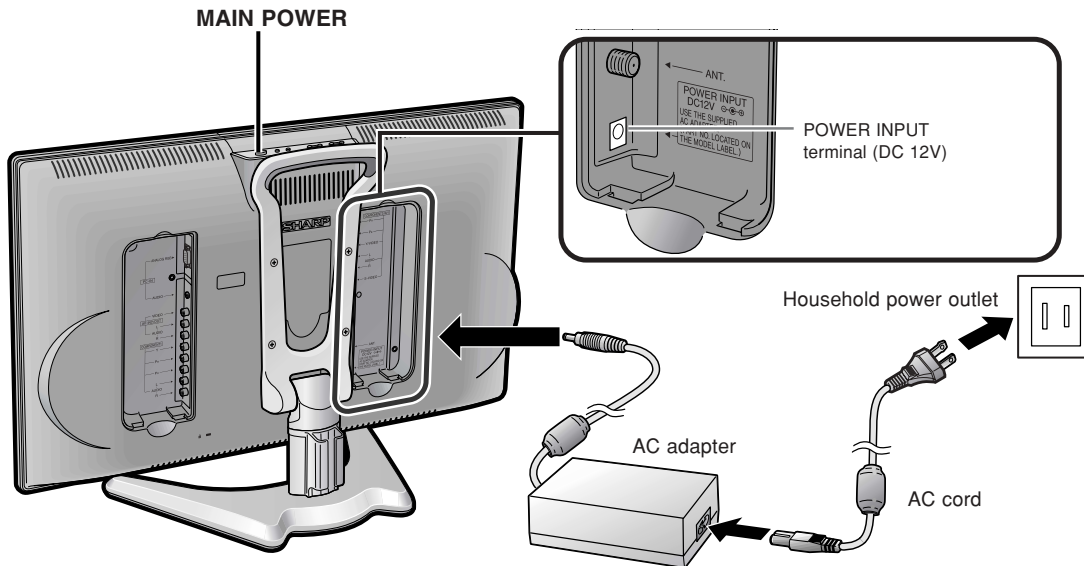

■ Using the AC Adapter

- Although the AC adapter may become warm during use, this is not a malfunction.
- Do not wrap or cover the AC adapter with a blanket or similar covering. This can cause a malfunction or accident.
- Do not attempt to disassemble or modify the AC adapter. The insides of the AC adapter contain high-voltage components that can result in the risk of electrical shock.


NOTE

- Use a commercially available AC plug adapter, if necessary, depending on the design of the wall outlet.
- Always turn the **MAIN POWER** switch of the main unit to off when connecting the AC adapter.
- Unplug the AC adapter from the product and power outlet when not using for a long period of time.


Part Names of Main Unit

Controls

Upper control panel

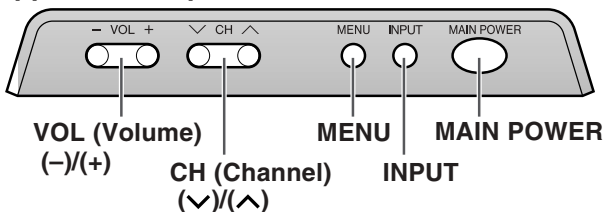

How to adjust the angle

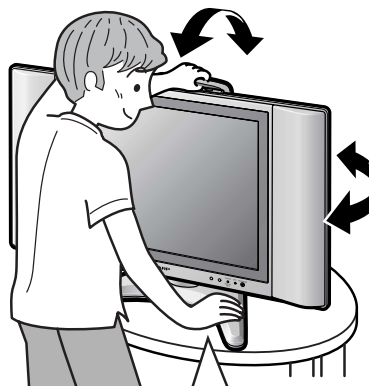

Tilt the display by grabbing onto the carrying handle while securely holding down the stand with your other hand.

To change the vertical angle of the LCD TV set, tilt the screen up to 5 degrees forward or 10 degrees backward. The LCD TV set can also be rotated up to 25 degrees to right and left. Please adjust the angle so that the LCD TV set can be watched most comfortably.

Speaker

Speaker

OPC (Optical Picture Control) sensor

HEADPHONE jack

Plug the headphone mini-plug into the Headphone jack located on the front of the main unit.

Remote sensor

OPC indicator (Optical Picture Control)

The OPC indicator lights up green when the "OPC" is set to "ON". (See page 22.)

POWER/WAKE UP TIMER indicator


POWER indicator lights up green when the power is on, and red when in the standby mode (the indicator will not light when the main power is off), and orange when the wake-up timer is set (the indicator will light when in the standby mode).

NOTE


- **INPUT**, **CH (v)/(^)**, **VOL (-)/(+)** and **MENU** on the main unit have the same functions as the same buttons on the remote control. Fundamentally, this operation manual provides a description based on operation using the remote control.

Listening with Headphones

- Plug the headphone mini-plug into the HEADPHONE jack located on the front of the main unit.

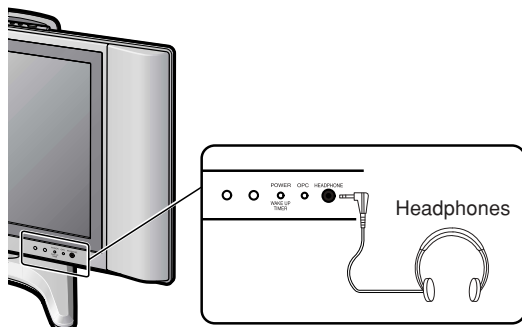

On-screen display

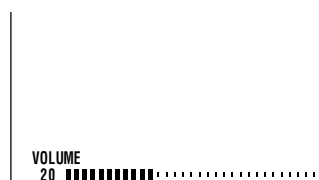

Adjust the sound volume using **VOL (+)/(−)** on the remote control.




NOTE

- Headphones are not included in the supplied accessories.
- No sound is heard from the main unit speakers when a headphone mini-plug is connected into the HEADPHONE jack.

Part Names of Main Unit (Continued)


Terminals

Rear View

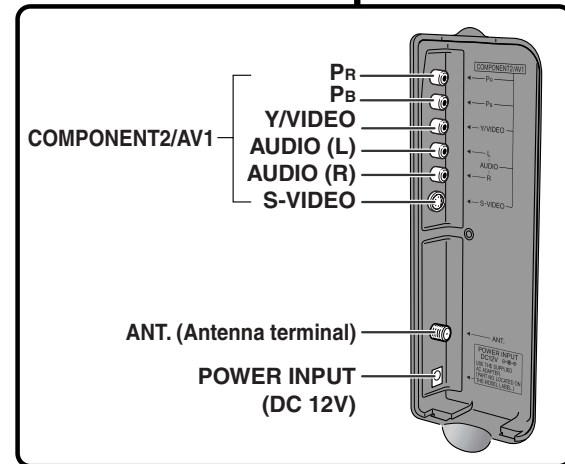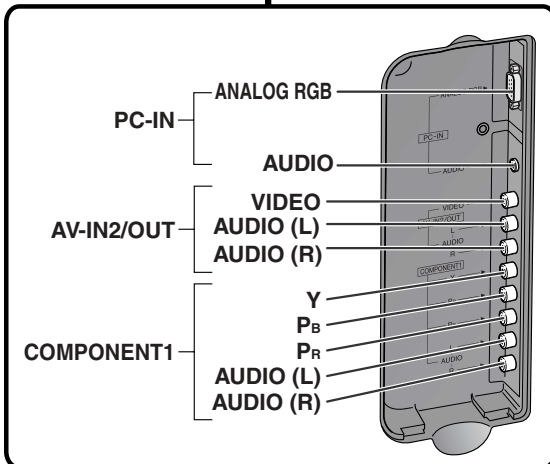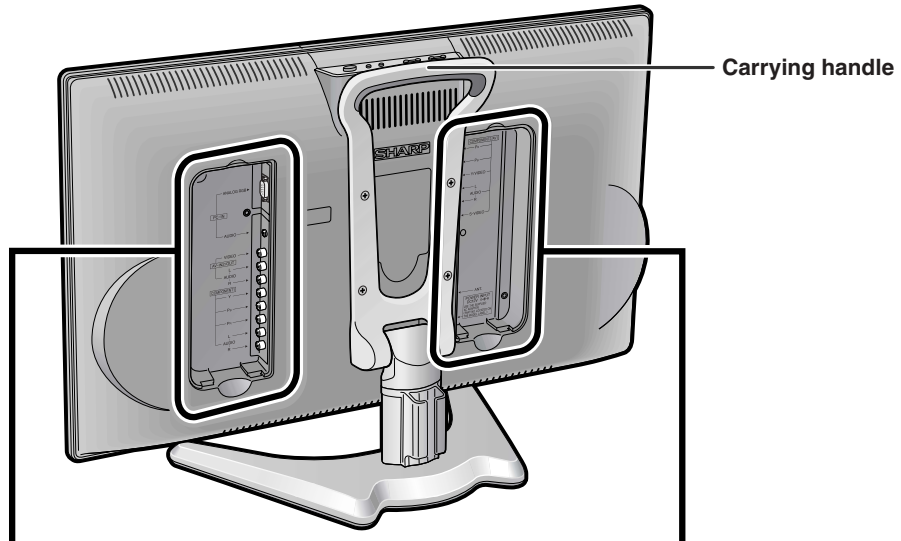


How to Fix the Cables

- Pull the cables connected to each terminal through the holes and close the left and right terminal covers. Push the cables into the grooves of the support cover. Insert the cable holder (supplied) from above the support cover and fix the cables.

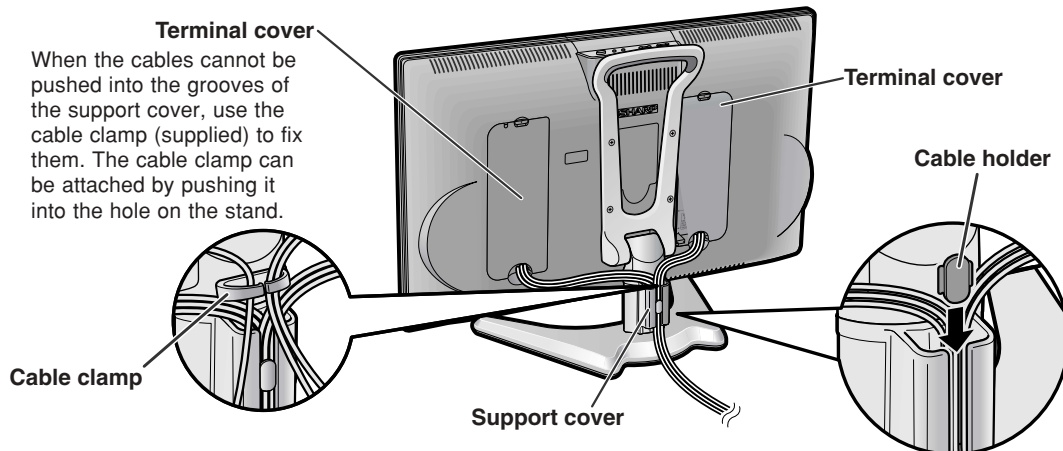

Part Names of Remote Control

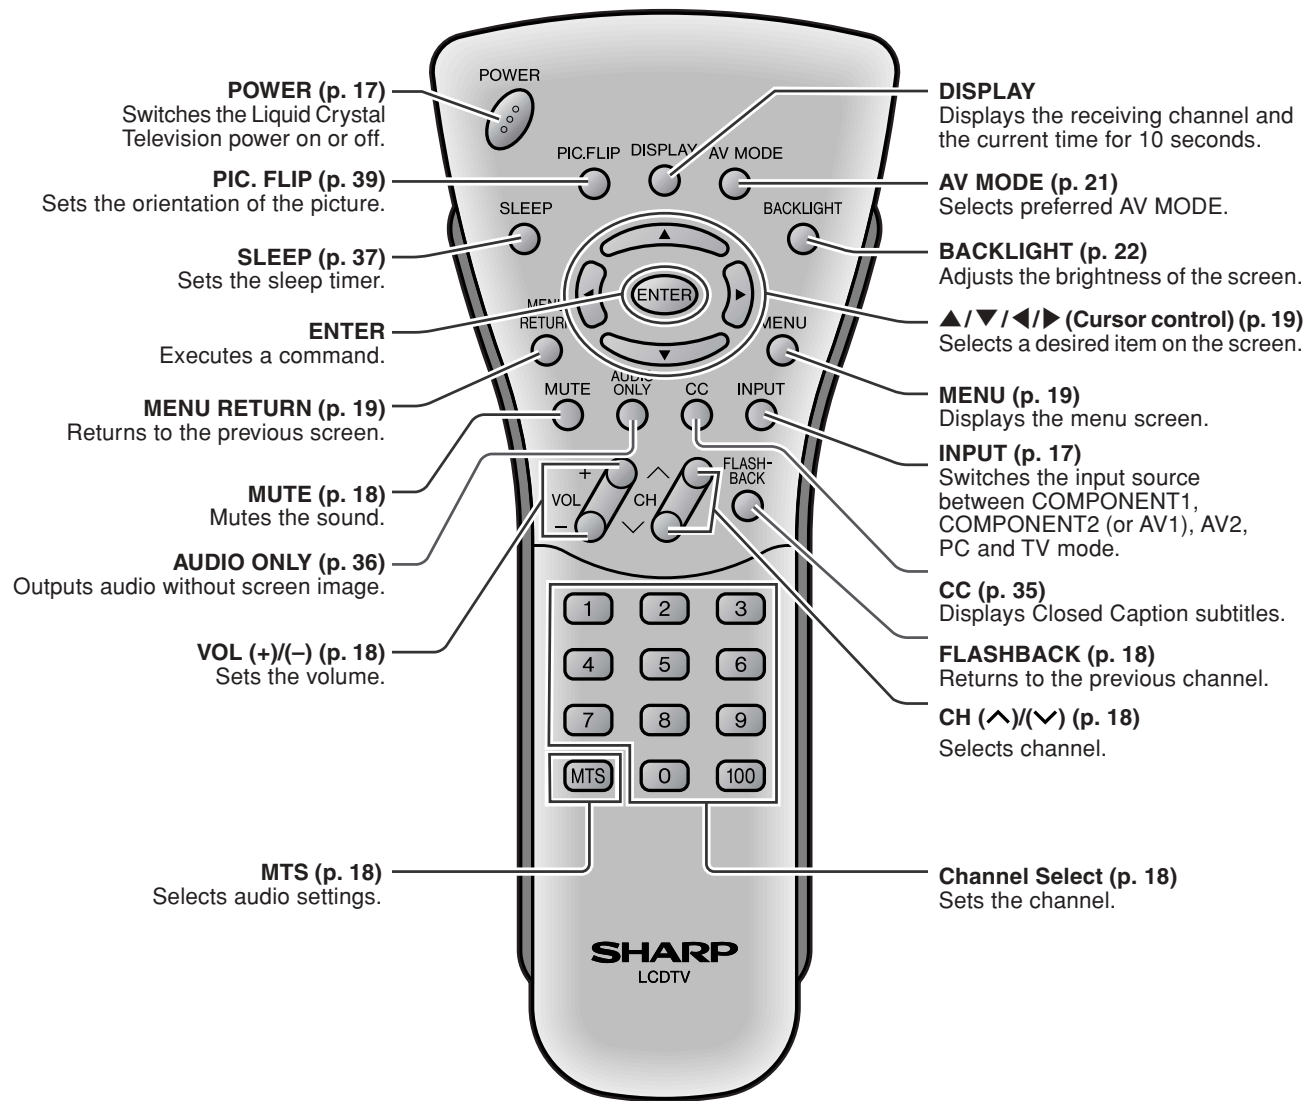

TV Signals in Your Region

This product is factory set to comply with the TV broadcasting system in the United States. For Brazil, Argentina and Uruguay, set the color system according to the country before using this product by following the table below.

Country	TV broadcasting system	Factory setting of color system		User setting TV/Video
		TV	Video	
U.S.A.	Color: NTSC TV ch: US ch	NTSC (N358) US ch	NTSC (N358) US ch	Not required or N/A
Canada, Mexico, Latin America	Color: NTSC TV ch: US ch	NTSC (N358) US ch	NTSC (N358) US ch	Not required or N/A
Brazil	Color: PAL-M TV ch: US ch	NTSC (N358) US ch	NTSC (N358) US ch	Set color system to PAL-M (see page 28)
Argentina, Uruguay	Color: PAL-N TV ch: US ch	NTSC (N358) US ch	NTSC (N358) US ch	Set color system to PAL-N (see page 28)

NOTE


- The 3 Dimensional Y/C separation circuit* only works when the color system is set to N358 in TV mode and Video mode.
- * The 3 Dimensional Y/C separation circuit is used to remove flickering and color bleeding.
- * The 3 Dimensional Y/C separation circuit does not function when S-VIDEO or COMPONENT signals are played.

EZ SETUP (With AUTO CLOCK Setting)


EZ SETUP during the First Power On

- When you turn on the TV for the first time, it will automatically memorize the broadcasting channels and clock. Please perform the following instructions before you press **MAIN POWER**.

- (1) Insert the batteries into the remote control. (See page 8.)
- (2) Connect the antenna cable to the LCD TV set. (See page 9.)
- (3) Connect the AC adapter to the POWER INPUT terminal of the LCD TV set and plug in the AC cord to the wall outlet. (See page 10.)

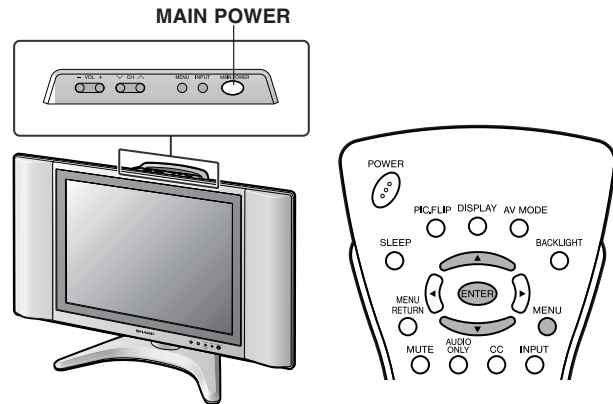

- 1 Press **MAIN POWER**, located on the upper side of the main unit, to turn on the TV. The SELECT LANGUAGE mode will be displayed. Press **▲/▼** to select “ENGLISH”, “ESPAÑOL” (Spanish) or “FRANÇAIS” (French).

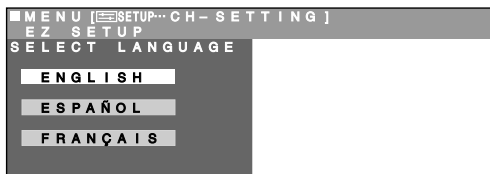

- 2 Press **ENTER** to access CH-SETTING mode. Press **▲/▼** to select “ON” or “OFF”. When you select “ON”, the LCD TV set will automatically memorize the broadcasting channels.



NOTE

- If you select “OFF” in “EZ SETUP, CH-SETTING”, EZ SETUP will be canceled.

- 3 Press **ENTER** to access AUTO CLOCK mode. Press **▲/▼** to select “ON” or “OFF”. When you select “ON”, the LCD TV set will automatically adjust the clock to search time-signals (EDS signals), which are provided by some TV stations. The AUTO CLOCK setting may take from several minutes to an hour depending on the number of channels to receive and signal status. If you know the channel of the EDS signal carrier (PBS or other) in your area, select “OFF” and follow the procedure in **AUTO CLOCK Setting**. (See page 15.)



- 4 Press **ENTER** to access START EZ SETUP mode. Press **▲/▼** to select “YES”, and press **ENTER**.

NOTE

- If you want to stop the EZ SETUP process once it has started, press **MENU** and it will be canceled. If you want to set up again, please refer to pages 26 and 27 on **CH-SETTING**.



The tuner will automatically search for the broadcasting and cable TV channels. (The channel number will automatically increase when it appears.)


PLEASE WAIT
AUTO PROGRAMMING

The LCD TV set will automatically switch to searching for EDS signals.

If EDS signals are received, the channel number and time will be displayed, and then the screen shown in step 5 appears.

PLEASE WAIT
NOW SEARCHING TIME

- 5 Once EZ SETUP is completed, the lowest channel number memorized will be displayed.

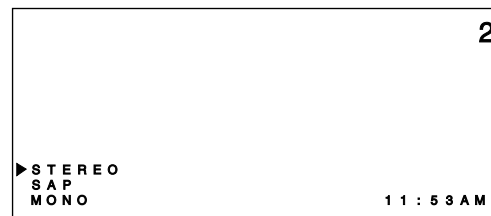


NOTE

- Do not let the EZ SETUP screen remain unattended for a long time.
- If EZ SETUP does not memorize all the channels in your region, please refer to pages 26 and 27 for more information on manually memorizing the channels using CH-SETTING.
- It may be difficult to preset when the broadcasting signals are weak, the channel cycle frequency is incorrect or the frequency jamming is occurring around the area. Please refer to pages 26 and 27 for more information on manually memorizing channels using CH-SETTING.
- If there are no channels with EDS signals or the antenna signal is weak, the AUTO CLOCK setting may not operate. In this case, a “EDS CH IS NOT AVAILABLE.” message will appear and the mode will change to MANUAL CLOCK setting. Refer to page 16 to set the clock manually.

Setting the CLOCK


AUTO CLOCK Setting

There are two methods of setting the clock: AUTO CLOCK and MANUAL CLOCK. AUTO CLOCK uses EDS signals, which are provided by some TV stations, to automatically adjust the clock. MANUAL CLOCK sets the clock manually in areas where no channel carries EDS signals.

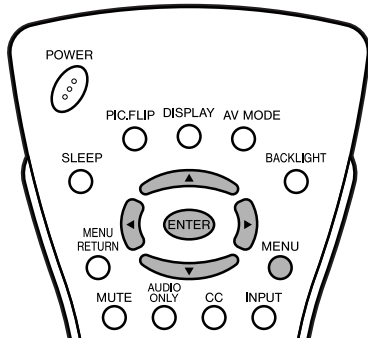


1 Press **MENU** to display the Menu screen.


2 Press **◀▶** to select "SETUP".

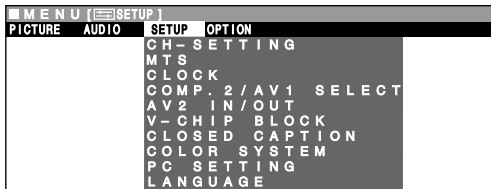


3 Press **▲▼** to select "CLOCK", and press **ENTER**.

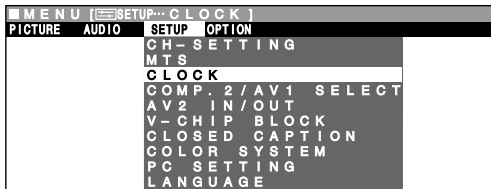


4 Press **▲▼** to select "SET", and press **ENTER**.

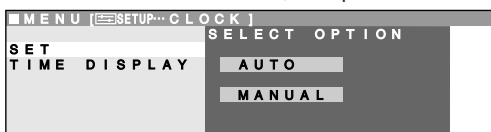

5 Press **▲▼** to select "AUTO", and press **ENTER**.

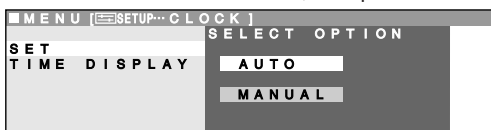

- If you do not know the channel that carries EDS signals in your area, select "EDS CH" to "AUTO" and press **ENTER**. If you know the channel of the EDS signal carrier in your area, press **◀▶** to select channel and press **ENTER**. Set the EDS CH and press **ENTER**.

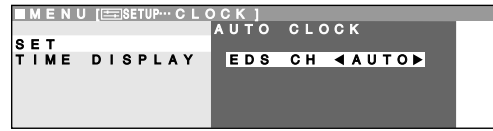

- When set to "AUTO CLOCK", the time is acquired automatically when MAIN POWER is turned OFF. (This function will not work when EDS CH is not set.)



NOTE

- **CLOCK:**
The AUTO CLOCK setting may take from several minutes to an hour depending on the number of channels to receive and signal status.
- **EDS CH < AUTO >:**
If there are no channels with EDS signals or the antenna signal is weak, the AUTO CLOCK Setting may not operate. In such a case, the message "EDS CH IS NOT AVAILABLE." appears, and the CLOCK setting screen (in step 4 in this page) is displayed. Refer to **MANUAL CLOCK Setting** on page 16 to set the clock manually.
- **EDS CH < Not AUTO >:**
If the channel you have selected for "EDS CH" is wrong or the EDS signal carrier is weak, or when there is no broadcast, the AUTO CLOCK Setting may not operate. In such cases, the message "EDS CH (XXX) EDS DATA IS NOT AVAILABLE." appears, and the CLOCK setting screen (in step 4) is displayed as in the case with EDS CH < AUTO >. Follow step 4 and repeat the AUTO CLOCK Setting procedure.
- If broadcasting channels are not memorized, EDS signals cannot be received even when the "EDS CH" is set to "AUTO". In this case, try EZ SETUP again. (See page 26.)

Backup


The clock function is maintained for about 10 minutes even when the AC adapter has been shut off due to a power outage or when moving the LCD TV set. (Since about 30 minutes are required to charge the backup power supply, it may not be possible to maintain the clock function if the charging time is excessively short.)

If the clock setting has been reset, refer to **Setting the CLOCK** on pages 15 and 16.

Setting the CLOCK (Continued)


MANUAL CLOCK Setting

If there are no channels with EDS signals, set the clock manually using MANUAL CLOCK.

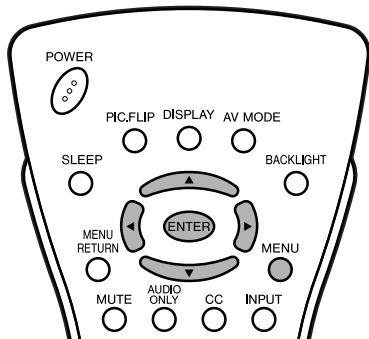


1 Press **MENU** to display the Menu screen.


2 Press **◀▶** to select "SETUP".

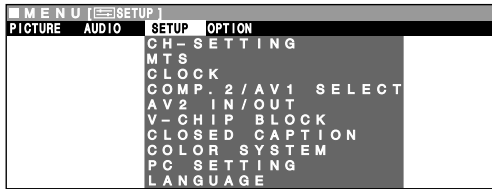


3 Press **▲▼** to select "CLOCK", and press **ENTER**.

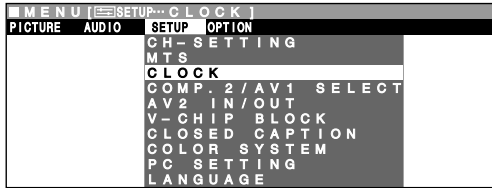


4 Press **▲▼** to select "SET", and press **ENTER**.
Press **▲▼** to select "MANUAL", and press **ENTER**.

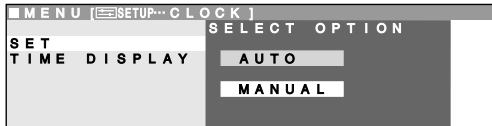

 5 Press **▲▼** to select "DST", and press **◀▶** to select "ON" or "OFF".
Press **▲▼** to select "TIME", and press **◀▶** to set the time, and press **ENTER**.



• Holding down **◀▶** changes the setting at a high speed.

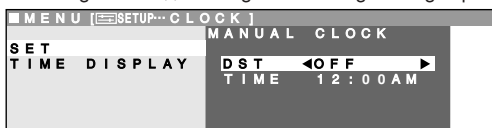

6 Press **MENU** to exit.

NOTE


- Make sure to press **ENTER** after adjusting the time. Otherwise, the time will not be set.
- When DST is set to "ON", the time entered is forwarded by 1 hour.
- Please be sure to set "DST" before setting "TIME".

Daylight Saving Time (DST) Adjustment

The Daylight Saving-Time changes as shown below, set the DST to "ON" to forward the clock by 1 hour. To rewind the clock by 1 hour, set the DST to "OFF".


(Spring)

On the first Sunday in April DST starts.

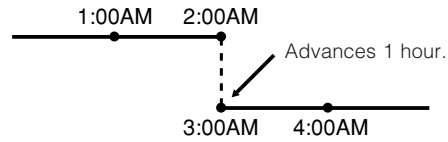


(Autumn)

On the last Sunday in October DST finishes.

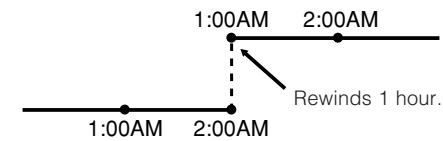


TIME DISPLAY

You can display the current time on the screen.

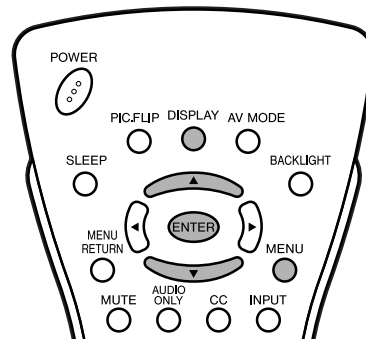

1 Repeat steps 1 to 3 of **MANUAL CLOCK Setting** on this page.

2 Press **▲▼** to select "TIME DISPLAY", and press **ENTER**.

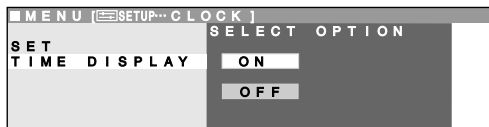

3 Press **▲▼** to select "ON" or "OFF", and press **ENTER**.

Selected item	Description
ON	Displays the current time on the screen.
OFF	No display


4 Press **MENU** to exit.

NOTE

- When you press **DISPLAY**, the current time is displayed for about 10 seconds.

Basic Operation

Turning On and Off the Main Power

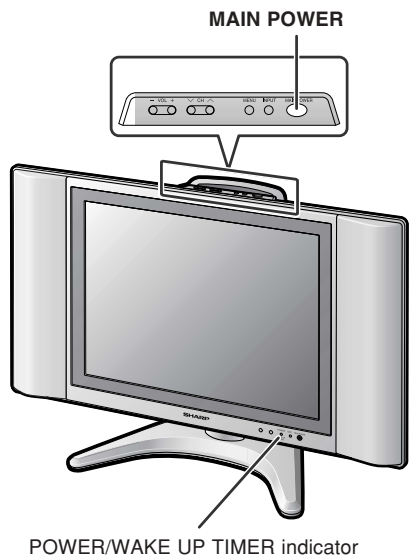

- Press **MAIN POWER**. The POWER/WAKE UP TIMER indicator instantly changes from red to green and the LCD TV set is turned on.


On-screen display



NOTE

- The On-screen display disappears after a few seconds.
- To turn off the main power, press **MAIN POWER** again.

Standby

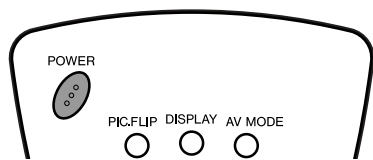


To turn off the LCD TV set

Press **POWER**. The POWER/WAKE UP TIMER indicator will turn red.


To turn the LCD TV set back on

Press **POWER** again. The POWER/WAKE UP TIMER indicator will turn green.

Switching the Input Modes (AV1/AV2/COMPONENT/PC/TV)

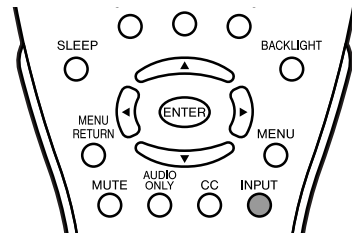

- 1 Turn on the power of the connected video equipment.
- 2 Press **INPUT** to select the applicable input source. The screen changes in order of COMPONENT1, COMPONENT2 or AV1, AV2, PC and TV mode each time **INPUT** is pressed.

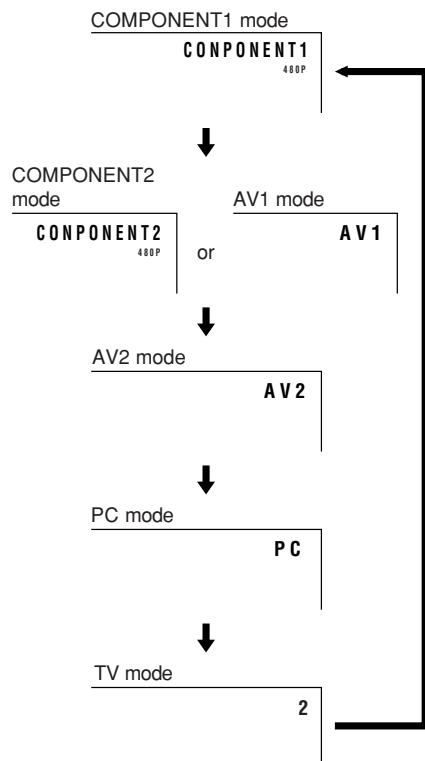



NOTE

- **COMPONENT1:** Used for video equipment connected to the COMPONENT input terminals.
- **COMPONENT2:** When COMPONENT2 or AV1 is set as COMPONENT2. (See page 28.)
- **AV1:** Used for video equipment connected to the AV1 input terminals. The S-video input terminal is additionally provided for the AV1 input. If both the S-video terminal and normal video terminals are connected with cables, the S-video input terminal takes priority.
- **AV2:** AV2 mode is used to adjust the preset settings and IN or OUT can be selected. AV2 indication is not displayed when OUT is selected. (For details on setting AV2 IN/OUT, see page 28.)
- **PC:** If you connect the PC to the PC-IN terminals, you can view the PC image on the LCD TV set.

Basic Operation (Continued)

Sound Volume

To adjust the volume

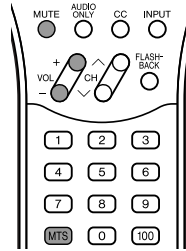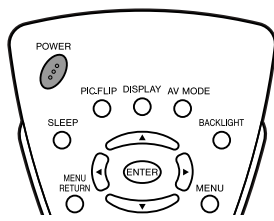

- Press **VOL (+)** to increase the sound volume. The bar indicator shifts right.

 


- Press **VOL (-)** to decrease the sound volume. The bar indicator shifts left.



To mute the sound

- Press **MUTE** to temporarily turn off the sound. The MUTE mark is displayed for 4 seconds.



- Press **MUTE** or **VOL (+)/(-)** to turn the sound back to the previous level. The mute function is automatically turned off when any of the following buttons are pressed: **POWER**, **MUTE**, **VOL (+)/(-)** or **MTS**.



NOTE

- When **VOL (+)/(-)** is pressed in the Mute mode, the sound turns on and the volume indicator is displayed.
- The Mute function is cancelled when **POWER** is pressed.

To select MTS (Multichannel TV Sound)

1 Press **MTS** to display the MTS screen.



2 Press **MTS** to select the MTS settings.
 STEREO: stereo audio
 SAP: secondary audio program
 MONO: monophonic audio



NOTE

- "ON AIR" appears when a STEREO or SAP broadcast is being aired.

Changing Channels

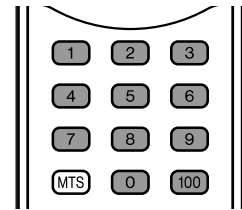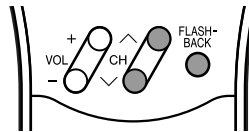

You can select channels using **Channel Select** or **CH (▲)/(▼)**.

- This LCD TV set allows you to select up to 125 channels (1 to 125). To select a channel, enter a 2- or 3-digit number.

Using Channel Select

When selecting the channel using **Channel Select**, complete input of the channel number by holding down the button for the last digit for a moment.

To select a 1- or 2-digit channel number (e.g., Channel 5): Complete the following procedure within 4 seconds.

1 Press the **0** button.
 0-

2 Press the **5** button.
 5

NOTE

- When selecting a 1-digit channel number, do not fail to press the **0** button first.

To select a 3-digit channel number (e.g., Channel 115): Complete the following procedure within 4 seconds.

1 Press the **100** button.
 1--

2 Press the **1** button.
 11-

3 Press the **5** button.
 115

NOTE

- The 3-digit channel number can be selected only when the receiving mode is set to CABLE in CH-SETTING. (For details on setting the receiving mode, see page 26.)

Changing channels with CH (▲)/(▼) on the remote control

Air: Press **CH (▲)** and the channels change in the order shown below:
 2 γ 3 γ ... γ 68 γ 69 γ 2 γ 3 γ ...
 Press **CH (▼)** and the channels change in the order shown below:
 3 γ 2 γ 69 γ 68 γ ... γ 3 γ 2 γ ...
Cable: Press **CH (▲)** and the channels change in the order shown below:
 1 γ 2 γ 3 γ ... γ 125 γ 1 γ 2 γ 3 γ ...
 Press **CH (▼)** and the channels change in the order shown below:
 3 γ 2 γ 1 γ 125 γ ... γ 3 γ 2 γ 1 γ ...

Using FLASHBACK

- Press **FLASHBACK** to switch the currently tuned channel to the previously tuned channel.
- Press **FLASHBACK** again to switch back to the currently tuned channel.


Selecting Menu Items

The menus can be used to adjust the various settings of your LCD TV set. Select the desired menu item by following the steps below. See the next page for each Menu screen.


NOTE

- The items displayed differ depending on the setting conditions.
- The item selected is displayed in yellow.
- Settings most recently adjusted will be saved in memory.

Using menus

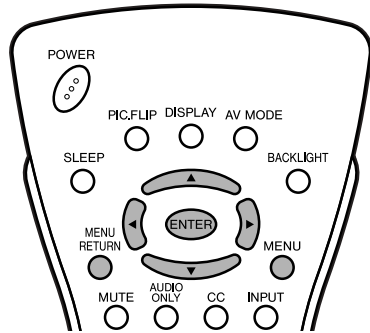


- 1 Press **MENU** on the remote control to display the Menu Screen.
- 2 Press **◀▶** to select the desired menu item.
 - The cursor moves left or right.
 - The cursor indicates the selected menu item.
- 3 Press **▲▼** to select the desired item, and press **◀▶** to adjust the selected item.
 - For "AV MODE", "OPC", "ADVANCED" and "RESET", press **ENTER** to display the setting screen.

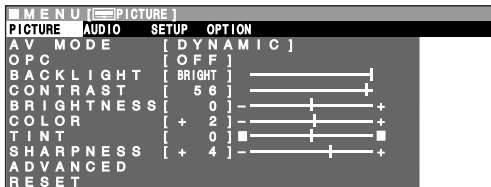


- 4 Press **MENU RETURN** to return to the previous screen, or press **MENU** to exit.

Using direct control menu

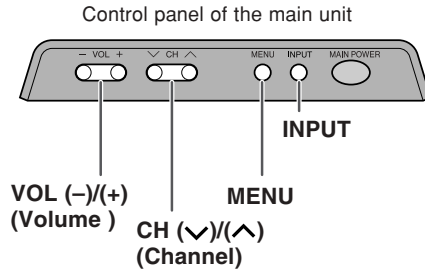

- 1 Press **MENU** on the main unit to display the Menu Screen.
- 2 Press **VOL (-)/(+)** to select the desired menu item.
 - The cursor moves left or right.
 - The cursor indicates the selected menu item.
- 3 Press **CH (▼)/(▲)** to select the desired item and press **VOL (-)/(+)** to adjust the selected item.
 - For "AV MODE", "OPC", "ADVANCED" and "RESET", press **INPUT** to display the setting screen.

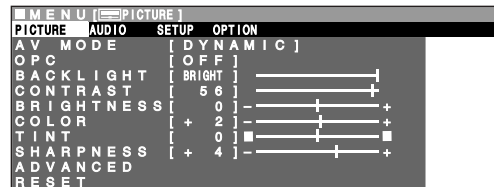

- 4 Press **MENU** to return to the previous screen.
 - Each time **MENU** is pressed, you will return to the screen previously shown.

Basic Operation (Continued)


■ Menu setting screens

For details on setting each menu item, refer to the page number indicated below.

NOTE

- The illustrations and on-screen displays in this manual are for explanation purposes and may vary slightly from the actual appearance.
- Depending on the setting condition, such as an input mode, it may not be possible to adjust or set some items. In such cases, a message will be displayed on the menu setting screen.


PICTURE

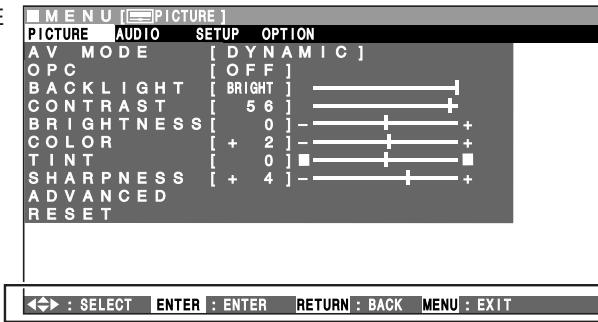

	Page
AV MODE	21
OPC	22
BACKLIGHT	22
CONTRAST	23
BRIGHTNESS	23
COLOR	23
TINT	23
SHARPNESS	23
ADVANCED	23, 24
RESET	23


The bar above is an operational guide for the remote control. The bar will change in accordance with each menu setting screen.

AUDIO

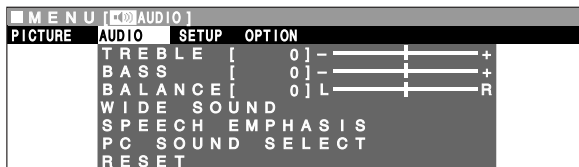


	Page
TREBLE	25
BASS	25
BALANCE	25
WIDE SOUND	25
SPEECH EMPHASIS	25
PC SOUND SELECT (for PC mode)	26
RESET	25

SETUP

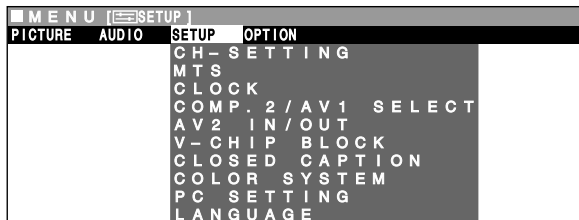

	Page
CH-SETTING	26, 27
MTS	18, 28
CLOCK	15, 16
COMP.2/AV1 SELECT	28
AV2 IN/OUT	28
V-CHIP BLOCK	29-34
CLOSED CAPTION	35
COLOR SYSTEM	13, 28
PC SETTING (for PC mode)	41
LANGUAGE	14, 28

OPTION

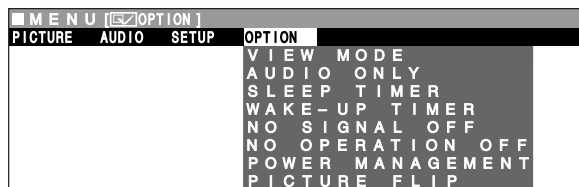


	Page
VIEW MODE	36
AUDIO ONLY	36
SLEEP TIMER	37
WAKE-UP TIMER	38
NO SIGNAL OFF	38
NO OPERATION OFF	38
POWER MANAGEMENT (for PC mode)	42
PICTURE FLIP	39


Basic Adjustment Settings

AV MODE


AV MODE gives you preset options to choose from, to best match the image based on room-brightness and playback software used.

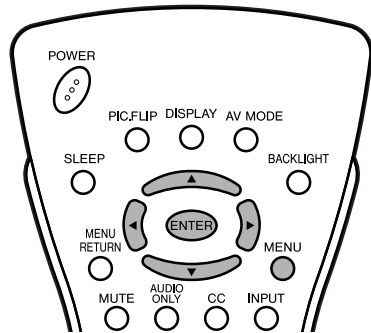

- 1 Press **MENU** to display the Menu Screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select "AV MODE", and press **ENTER**.

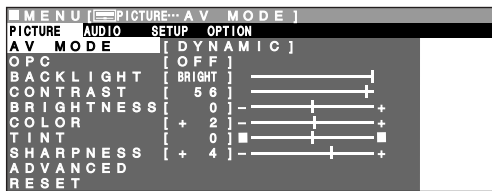

- 4 Press **▲▼** to select desired setting, and press **ENTER**.

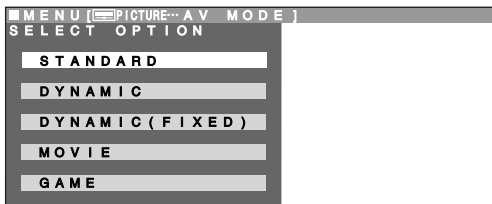


- 5 Press **MENU** to exit.


NOTE

- You can select a different AV MODE item for each input mode. (For example, select "STANDARD" for TV input and "DYNAMIC" for VIDEO input.)
- When "AV MODE" is set to "DYNAMIC (FIXED)", "NO PICTURE ADJUSTMENTS AVAILABLE IN [DYNAMIC (FIXED)]." is displayed and the items in the PICTURE screen (except "OPC" and "ADVANCED") cannot be set.

Directly setting the AV MODE

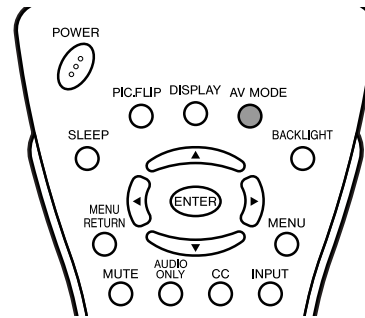

- 1 Press **AV MODE**.
- 2 Before the AV MODE display disappears, press **AV MODE** again and select your desired setting.
 - Each time you press **AV MODE**, the mode changes as shown below.

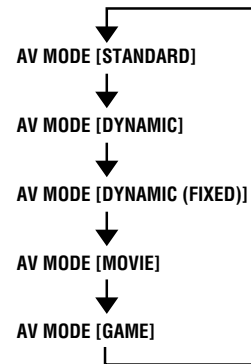


Selected item	Description
STANDARD	Changing image settings to standard values.
DYNAMIC	For a clear-cut image emphasizing high contrast for sports viewing.
DYNAMIC (FIXED)	Changing image settings to factory preset values. No adjustments are allowed.
MOVIE	Controlling the contrast to enable easier viewing of dark images.
GAME	Controlling the brightness of video games and other images for easier viewing.


Basic Adjustment Settings (Continued)

OPC

Automatically adjusts the brightness of the screen.

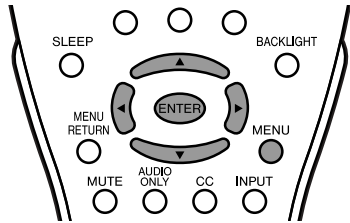

- 1 Press **MENU** to display the Menu Screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select "OPC", and press **ENTER**.

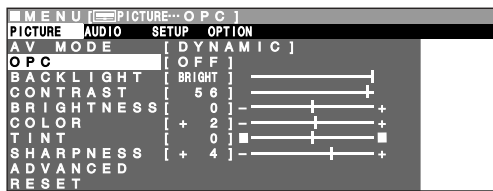

- 4 Press **▲▼** to select "ON" or "OFF", and press **ENTER**.



Selected item	Description
ON	Automatically adjusts
OFF	No adjustment


- 5 Press **MENU** to exit.

NOTE


- When setting to "ON", the OPC indicator lights up green, senses the surrounding light and automatically adjusts the backlight brightness. Make sure no object obstructs the OPC sensor, which could affect its ability to sense surrounding light.

BACKLIGHT

You can adjust the brightness of the picture.

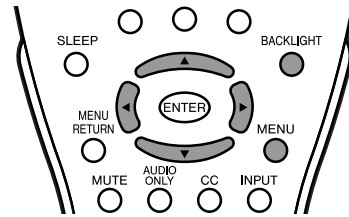

- 1 Press **MENU** to display the Menu Screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select "BACKLIGHT".

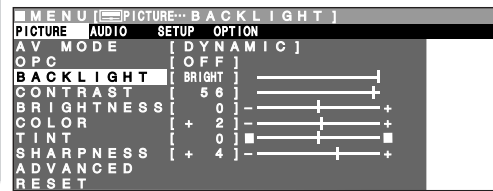

- 4 Press **◀▶** to adjust the item to your desired position.

 
- 5 Press **MENU** to exit.

NOTE

- "BACKLIGHT" cannot be adjusted while "OPC" is set to "ON".

Directly setting the BACKLIGHT

- 1 Press **BACKLIGHT** to display the BACKLIGHT screen.
- 2 Press **BACKLIGHT** to change the setting.




NOTE


- The BACKLIGHT screen automatically disappears in 3 seconds.
- [BRIGHT]: maximum brightness
- [NORMAL]: 60% brightness (Suitable for viewing in a well-lit area. Saves energy.)
- [DARK]: 10% brightness (Sufficiently bright when viewing in dim areas.)
- [VARIABLE]: The brightness can be adjusted to suit your preference using **◀▶**.
- [AUTO]: Screen brightness adjusts according to the ambient light of the room to conserve power consumption. The OPC indicator lights up green.
- When set to "AUTO", make sure no object obstructs the OPC sensor, which could affect its ability to sense surrounding light.

PICTURE Adjustments

You can adjust the picture to your preference with the following picture settings.

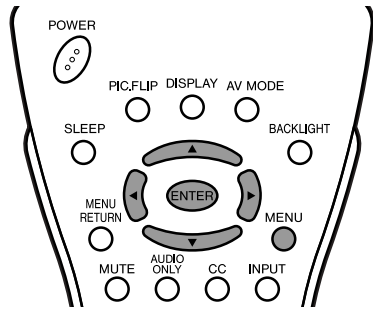

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select a specific adjustment item.

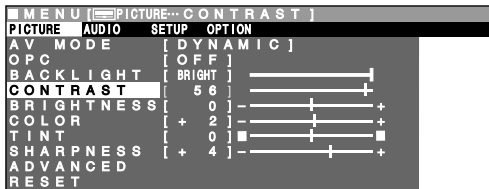

- 4 Press **◀▶** to adjust the item to your desired position.
- 5 Press **MENU** to exit.


Selected item	◀ button	▶ button
BACKLIGHT	The screen dims	The screen brightens
CONTRAST	For less contrast	For more contrast
BRIGHTNESS	For less brightness	For more brightness
COLOR	For less color intensity	For more color intensity
TINT	Skin tones become purplish	Skin tones become greenish
SHARPNESS	For less sharpness	For more sharpness

NOTE


- Select "ADVANCED", and press **ENTER** to set "COLOR TEMP.", "I/P SETTING", "NOISE CLEAN", "FILM MODE" or "QUICK SHOOT". See pages 23 and 24.
- The items on the "ADVANCED" menu (except for "COLOR TEMP.") cannot be set when the PC mode is selected as an input mode.
- When resetting all adjustment items (except for the items on the AV MODE, OPC and ADVANCED menus, and the items other than "VARIABLE" in the BACKLIGHT setting) to factory preset values, perform the following procedures.
 - ① Press **▲▼** to select "RESET" in the PICTURE screen, and press **ENTER**.
 - ② Press **▲▼** to select "YES", and press **ENTER**.

COLOR TEMPERATURE


You can adjust the color temperature to give a better white balance.

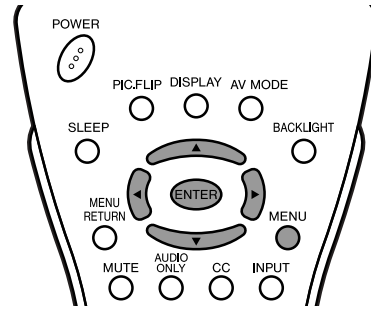

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select "ADVANCED", and press **ENTER**.

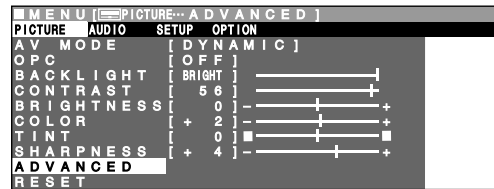

- 4 Press **▲▼** to select "COLOR TEMP.", and press **ENTER**.

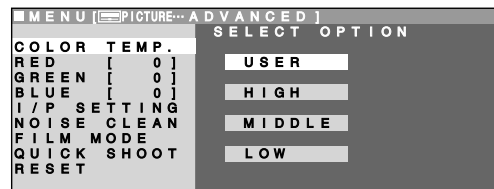

- 5 Press **▲▼** to select the desired item, and press **ENTER**.
- 6 Press **MENU** to exit.

Selected item	Description
USER	Can set your desired color*
HIGH	White with Bluish tone
MIDDLE	↓
LOW	White with Reddish tone

*When you select "USER", the following items are adjustable.

Selected item	Press ◀	Press ▶
RED	Weaker red	Stronger red
GREEN	Weaker green	Stronger green
BLUE	Weaker blue	Stronger blue


NOTE

- When resetting the items in the "USER" setting to factory preset values, perform the following procedures.
 - ① Press **▲▼** to select "RESET" in the ADVANCED screen, and press **ENTER**.
 - ② Press **▲▼** to select "YES", and press **ENTER**.


Basic Adjustment Settings (Continued)

I/P SETTING


Adjusting the image and input signal can give you a more beautiful picture.

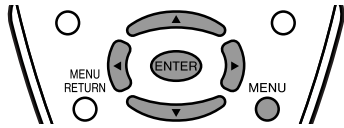

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "PICTURE".
- 3 Press **▲▼** to select "ADVANCED", and press **ENTER**.

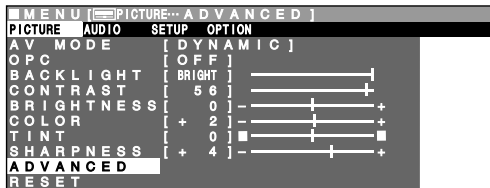

- 4 Press **▲▼** to select "I/P SETTING", and press **ENTER**.

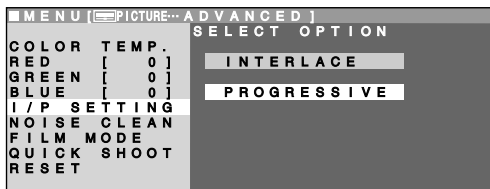

- 5 Press **▲▼** to select "INTERLACE" or "PROGRESSIVE", and press **ENTER**.
- 6 Press **MENU** to exit.

Selected item	Description
INTERLACE	Use this setting when you cannot get a clear picture with PROGRESSIVE. (Especially suitable for media with special effects like game software.)
PROGRESSIVE	Normally, you should select this setting.


NOTE

- "I/P SETTING" cannot be set when 480P, 576P, 720P or 1080I signal or no signal is received from the COMPONENT terminals.
- "I/P SETTING" cannot be adjusted when the PC mode is selected as an input mode.

NOISE CLEAN

Produces a clearer video image.

- 1 Repeat Steps 1 to 3 of **I/P SETTING**.
- 2 Press **▲▼** to select "NOISE CLEAN", and press **ENTER**.

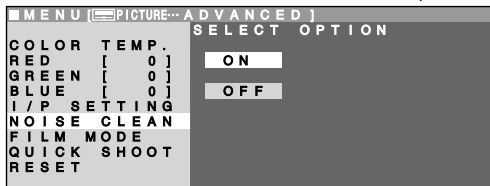


- 3 Press **▲▼** to select "ON", and press **ENTER**.
- 4 Press **MENU** to exit.

NOTE


- "NOISE CLEAN" cannot be set when 1080I or 720P signal or no signal is received from the COMPONENT terminals.
- "NOISE CLEAN" cannot be adjusted when the PC mode is selected as an input mode.
- "NOISE CLEAN" cannot be adjusted when "I/P SETTING" is set to "INTERLACE".

FILM MODE

Automatically detects a film-based source (originally encoded at 24 frames/second), analyses it, and then recreates each still film frame for cinematic picture quality.

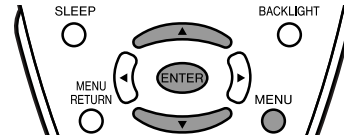

- 1 Repeat Steps 1 to 3 of **I/P SETTING**.
- 2 Press **▲▼** to select "FILM MODE", and press **ENTER**.

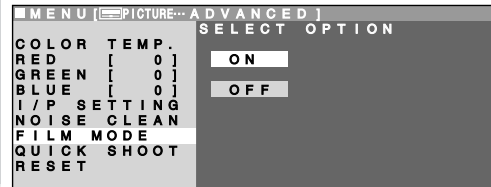

- 3 Press **▲▼** to select "ON", and press **ENTER**.
- 4 Press **MENU** to exit.


NOTE

- Set "FILM MODE" to "ON" manually to detect a film-based source (originally encoded at 24 frames/second) when the input source has vertical frequency of 50 Hz (e.g. PAL, SECAM, etc.).
- "FILM MODE" cannot be set when 480P, 576P, 720P or 1080I signal or no signal is received from the COMPONENT terminals.
- "FILM MODE" cannot be adjusted when the PC mode is selected as an input mode.

QUICK SHOOT

Provides sharp pictures suitable for fast moving images such as a sports program.

- 1 Repeat Steps 1 to 3 of **I/P SETTING**.
- 2 Press **▲▼** to select "QUICK SHOOT", and press **ENTER**.

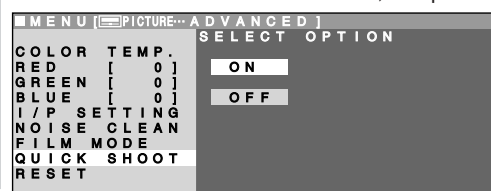

- 3 Press **▲▼** to select "ON", and press **ENTER**.
- 4 Press **MENU** to exit.


NOTE

- "QUICK SHOOT" may cause image noise. If this occurs, set the function to "OFF".
- "QUICK SHOOT" cannot be adjusted when the PC mode is selected as an input mode.


Useful Features

AUDIO Adjustments

You can adjust the sound quality to your preference with the following settings.

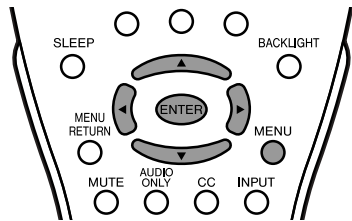

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "AUDIO".
- 3 Press **▲▼** to select a specific adjustment item.
- 4 Press **◀▶** to adjust the item to your desired position.
- 5 Press **MENU** to exit.

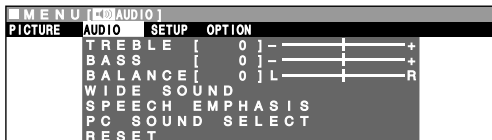

Selected item	Press ◀	Press ▶
TREBLE	For weaker treble	For stronger treble
BASS	For weaker bass	For stronger bass
BALANCE	Decrease audio from the right speaker	Decrease audio from the left speaker


NOTE

- The items on the AUDIO menu cannot be set when headphones are not used and "AV2 IN/OUT" is set to [OUT VAO].
- When resetting all adjustment items (except for "WIDE SOUND", "SPEECH EMPHASIS", "PC SOUND SELECT") to factory preset values, perform the following procedures.
 - ① Press **▲▼** to select "RESET", and press **ENTER**.
 - ② Press **▲▼** to select "YES", and press **ENTER**.

WIDE SOUND

This feature can increase the spread of the sound.

- 1 Repeat steps 1 and 2 of **AUDIO Adjustments**.
- 2 Press **▲▼** to select "WIDE SOUND" and press **ENTER**.
- 3 Press **▲▼** to select "ON" and press **ENTER**.
- 4 Press **MENU** to exit.

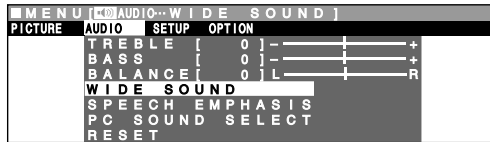

NOTE


- "WIDE SOUND" menu cannot be set when "AV2 IN/OUT" is set to [OUT VAO].

SPEECH EMPHASIS

Micronas® VOICE, Speech Enhancement and Intelligibility Processing technology by Micronas GmbH, has the following features:

- Increases the speech signal over background noise to increase intelligibility.
- Separates voice from the background and moves it to the foreground: Voices are moved to closer to listener, while other sounds are moved to the back.
- Improves voices that are hard to understand, but leaves clear voices undisturbed.

- 1 Repeat steps 1 and 2 of **AUDIO Adjustments**.
- 2 Press **▲▼** to select "SPEECH EMPHASIS" and press **ENTER**.
- 3 Press **▲▼** to select "ON" and press **ENTER**.
- 4 Press **MENU** to exit.

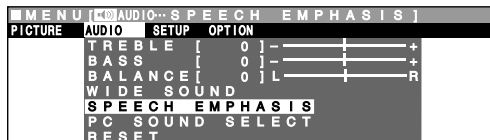


NOTE

- "SPEECH EMPHASIS" menu cannot be set when "AV2 IN/OUT" is set to [OUT VAO].


Useful Features (Continued)

PC SOUND SELECT (for PC mode)


You can switch the sound mode while the LCD TV set is connected to the PC. Make sure the PC mode is selected before making this setting.

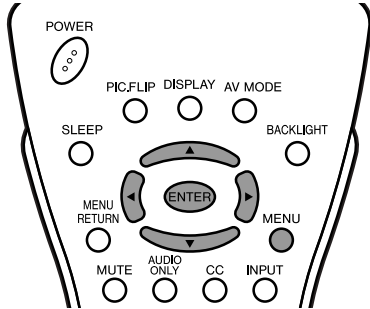

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "AUDIO".
- 3 Press **▲▼** to select "PC SOUND SELECT", and press **ENTER**.

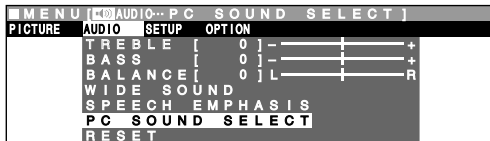

- 4 Press **▲▼/◀▶** to select desired setting and press **ENTER**.

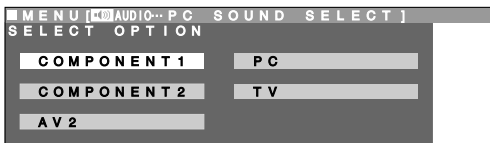

- 5 Press **MENU** to exit.

NOTE

- "AV2" in the PC SOUND SELECT menu cannot be set when "AV2 IN/OUT" is set to [OUT FAO] or [OUT VAO] in the SETUP menu.
- "COMPONENT2" can be changed to "AV1" also in the COMP.2/AV1 SELECT screen. (See page 28.)

CH-SETTING

EZ SETUP


When you move to an area with different broadcasting signals, you may have to set the channel numbers and the time with the EZ SETUP function. To activate EZ SETUP, perform the following procedures.

- ① Press **▲▼** to select "CH-SETTING" in the SETUP screen and press **ENTER**.
- ② Press **▲▼** to select "EZ SETUP", and press **ENTER**.
- ③ Press **▲▼** to select "YES", and press **ENTER**.


Refer to page 14 for more information on EZ SETUP.

Setting the AIR/CABLE


It is necessary to set the receiving mode to AIR or CABLE channels to receive locally broadcast TV programs.

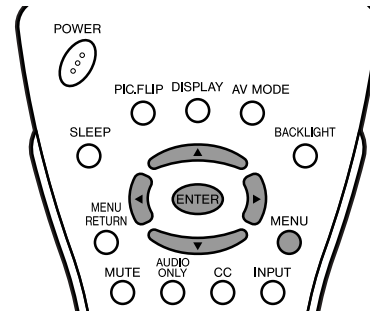

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "CH-SETTING", and press **ENTER**.

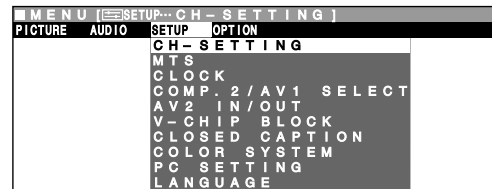

- 4 Press **▲▼** to select "AIR/CABLE", and press **ENTER**. Press **▲▼** to select desired setting, and press **ENTER**.

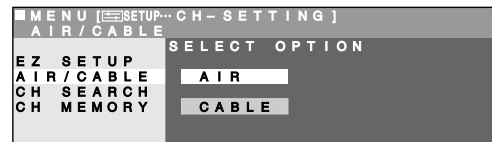


- 5 Press **MENU** to exit.

NOTE


- Receivable channels of your LCD TV set are:
 AIR channels: CABLE channels:
 VHF: 2 through 13. 1 (HRC and IRC)
 UHF: 14 through 69. 2 through 125 (STD, HRC and IRC)

CH-SETTING (Continued)

■ Saving broadcast TV channels in the memory

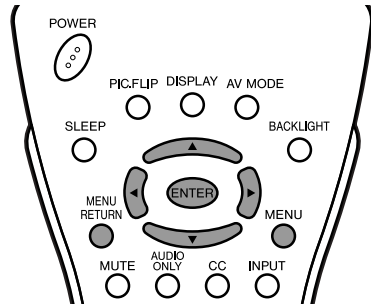

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "CH-SETTING", and press **ENTER**.

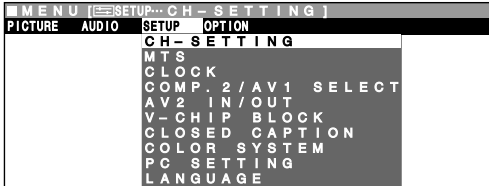

- 4 Press **▲▼** to select "CH SEARCH", and press **ENTER**.



- 5 Press **ENTER**. The tuner will search through all available channels in your area and add them to the TV memory.




NOTE


- To interrupt CH SEARCH, press **MENU RETURN**. CH SEARCH will stop at the current channel and will not add any higher channels.

■ Adding weak or additional channels or erasing unwanted channels from TV memory

Individual settings of programs can be adjusted.

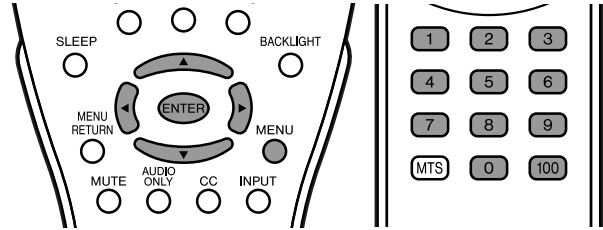

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "CH-SETTING", and press **ENTER**.

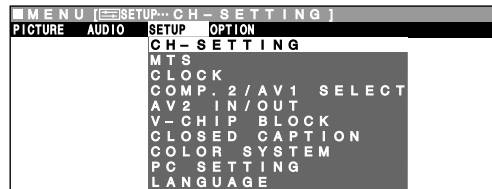

- 4 Press **▲▼** to select "CH MEMORY", and press **ENTER**.




- 5 Press **▲▼** to move the cursor to "CHANNEL", and use **◀▶** or **Channel Select** to select each desired channel to add or erase.
- 6 Press **▲▼** to move the cursor to "SKIP", and use **◀▶** to select "ON" or "OFF".
- 7 Press **MENU** to exit.


NOTE

- If CH SEARCH is performed again, the previously memorized channels will be lost.

Useful Features (Continued)

SETUP

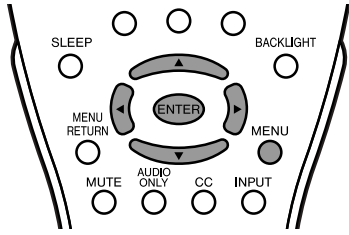

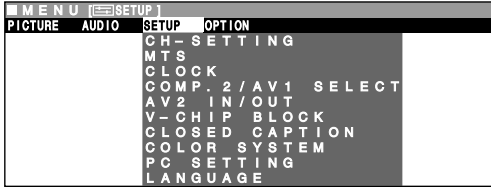- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select desired item, and press **ENTER**.

- 4 Press **▲▼** to change the setting, and press **ENTER**.
- 5 Press **MENU** to exit.

Selected Item	Factory setting	Setting options
MTS	[STEREO] Stereo audio	[SAP] Secondary audio program [MONO] Monophonic audio
AV2 IN/OUT*	[IN] AV-IN2/OUT terminals selected as input terminals	[OUT FAO] Line Output is selected, Output volume is fixed, Speaker output is available. [OUT VAO] Line Output is selected, Output volume is variable, Speaker output is mute.
COLOR SYSTEM	TV mode: N358/PAL-M/PAL-N AV mode: N358/N443/PAL/PAL-M/PAL-N/ (AV1/AV2) SECAM/PAL60/AUTO • When the COMPONENT or PC mode is selected: NO display	
LANGUAGE	[ENGLISH]	[ESPAÑOL] [FRANÇAIS]


* "AV2 IN/OUT" cannot be set when "AV2" is selected in "PC SOUND SELECT" in the AUDIO screen or in "WAKE-UP TIMER" in the OPTION screen.



NOTE

- For details about the following items, refer to the each indicated page.
 - CH-SETTING Pages 26 and 27
 - CLOCK Pages 15 and 16
 - V-CHIP BLOCK Pages 29 to 34
 - CLOSED CAPTION Page 35
 - PC SETTING Page 41
- TV mode:
This LCD TV is factory set to comply with the color system in the United States (NTSC-N358).
For Brazil (PAL-M), Argentina (PAL-N) or Uruguay (PAL-N), adjust the color system before using this LCD TV.

COMP.2/AV1 SELECT

You can select the input mode according to the external device connected to the COMPONENT2/AV1 terminal.

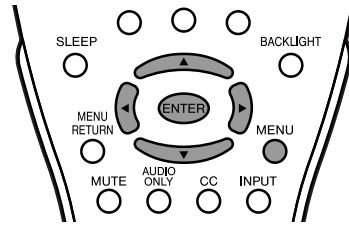

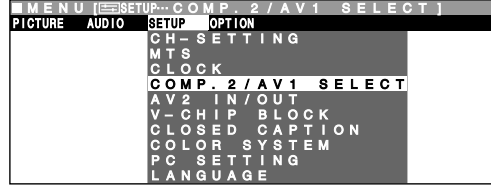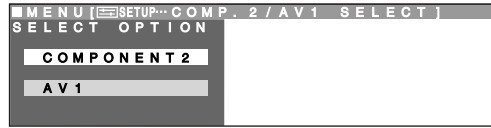- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "COMP.2/AV1 SELECT", and press **ENTER**.

- 4 Press **▲▼** to select "COMPONENT2" or "AV1".

- 5 Press **MENU** to exit.

Selected Item	Description
COMPONENT2	Select when connecting external devices such as DVD Player and digital TV tuner.
AV1	Select when connecting external devices such as camcorder and home video game system.

NOTE

- For more details, refer to pages 43 and 44.

V-CHIP Settings

V-CHIP

- This function allows TV programs to be restricted and TV usage to be controlled based on FCC data. It prevents children from watching violent or sexual scenes that may be harmful.
- Restriction of TV programs includes two ratings that contain information about the program: the MPAA (Motion Picture Association of America) rating and the TV Parental Guidelines. The MPAA rating is restricted by age. TV Parental Guidelines are restricted by age and content.
- Since a TV program may use either the MPAA rating or the TV Guidelines, both should be adjusted for complete control.

MPAA rating

RATING		
age based	G	GENERAL AUDIENCES. All ages admitted.
	PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
	PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
	R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
	NC-17	NO ONE 17 AND UNDER ADMITTED.
	X	X is an older rating that is unified with NC-17 but may be encoded in the data of older movies.

MPAA rating

Example 1:

PG-13 in the age-based rating is blocked, this will also automatically block the higher ratings R, NC-17 and X.

1. User setting

G	----
PG	----
PG-13	BLOCK
R	BLOCK
NC-17	BLOCK
X	BLOCK

2. Block table

G	not to block
PG	not to block
PG-13	Select block
R	auto-block
NC-17	auto-block
X	auto-block

Example 2:

R in the age-based rating is blocked, this will also automatically block the higher ratings NC-17 and X.

1. User setting

G	----
PG	----
PG-13	----
R	BLOCK
NC-17	BLOCK
X	BLOCK

2. Block table

G	not to block
PG	not to block
PG-13	not to block
R	Select block
NC-17	auto-block
X	auto-block

NOTE

- The MPAA rating is only age-based.

TV parental guidelines

Rating	~ content based ≡					
	FV (Fantasy Violence)	V (Violence)	S (Sexual Situation)	L (Adult Language)	D (Sexually Suggestive Dialog)	
age based	TV-Y (All children)	☒	☒	☒	☒	☒
	TV-Y7 (Direct to Older Children)	X	☒	☒	☒	☒
	TV-G (General Audience)		☒	☒	☒	☒
	TV-PG (Parental Guidance Suggested)		X	X	X	X
	TV-14 (Parents Strongly Cautioned)		X	X	X	X
	TV-MA (Mature Audience Only)		X	X	X	X

☒: The content rating can be set, but this rating is not normally broadcast by TV stations.

X: The content rating can be set.

TV parental guidelines

Example:

When TV-Y7 in the age-based rating is set to BLOCK, this will automatically block the higher ratings: TV-G, TV-PG, TV-14 and TV-MA. In addition, D, L, S, V and FV in BLOCK CONTENT are automatically blocked unless you manually set BLOCK CONTENT.

1. User setting

TV-Y	----
TV-Y7	BLOCK
TV-G	BLOCK
TV-PG	BLOCK
TV-14	BLOCK
TV-MA	BLOCK
BLOCK CONTENT	(D L S V FV)

2. Block table

age based	content based				
	FV	V	S	L	D
TV-Y					
TV-Y7					
TV-G					
TV-PG					
TV-14					
TV-MA					

TV-Y7 Select block
 auto-block


NOTE

- Age-based ratings can be modified by the content-based ratings, but only in the combinations indicated by an X in the table above.
- Choosing a lower age-based rating blocks the higher age-based ratings regardless of content rating settings.
- If you set TV-Y and TV-Y7 to BLOCK, BLOCK CONTENT will display all items.


Useful Features (Continued)

V-CHIP Settings (Continued)


■ Setting V-CHIP (MPAA rating)

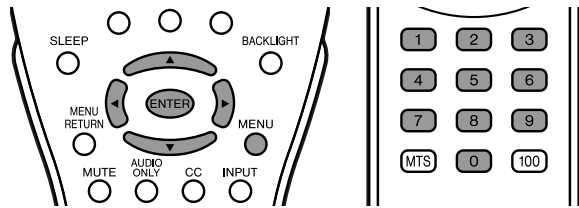

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "V-CHIP BLOCK", and press **ENTER**.

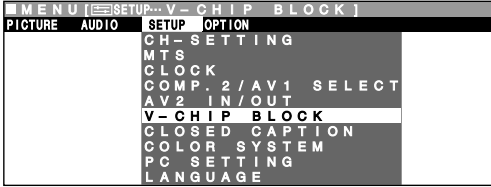

 
- 4 "INPUT SECRET NO." will be displayed. Input the 4-digit secret number by using **Channel Select**.
- NOTE**
- When you input the secret number for the first time, press **ENTER** to register. Otherwise, continue to step 5.



- 5 Press **▲▼** to select "MPAA", and press **ENTER**.



- 6 Press **▲▼** to select the desired item, press **◀▶** to select "BLOCK".

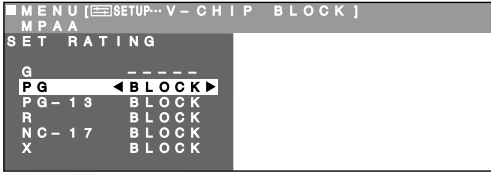


If you set "PG" to "BLOCK", then "PG-13", "R", "NC-17" and "X" are automatically blocked.


- 7 Press **MENU** to exit.
- NOTE**
- If you set "G" to "BLOCK", all ratings are automatically blocked.
 - If you set "X" to "BLOCK", then "G", "PG", "PG-13", "R" and "NC-17" are not blocked.

■ Setting V-CHIP (TV GUIDELINES)

● Setting TV GUIDELINES

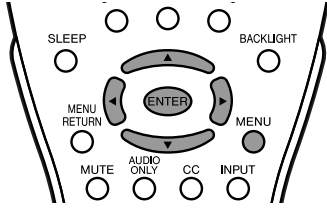


- 1 Repeat steps 1 to 4 of **Setting V-CHIP (MPAA rating)**.
- 2 Press **▲▼** to select "TV GUIDELINES", and press **ENTER**.
- 3 Press **▲▼** to select the desired item, press **◀▶** to select "BLOCK".

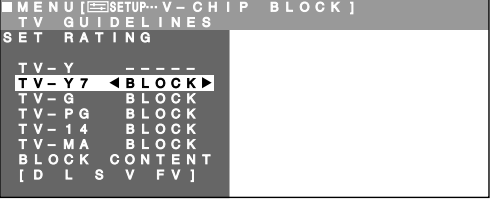

If you set "TV-Y7" to "BLOCK", then "TV-G", "TV-PG", "TV-14" and "TV-MA" are automatically blocked. In addition, "D", "L", "S", "V" and "FV" in "BLOCK CONTENT" are automatically blocked.


- 4 Press **MENU** to exit.

● Setting BLOCK CONTENT

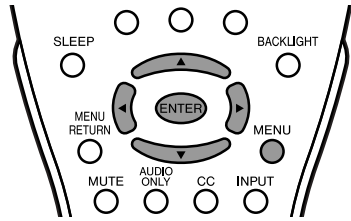


1 Repeat steps 1 to 4 of **Setting V-CHIP (MPAA rating)**. (See page 30.)


2 Press ▲/▼ to select “TV GUIDELINES”, and press **ENTER**.

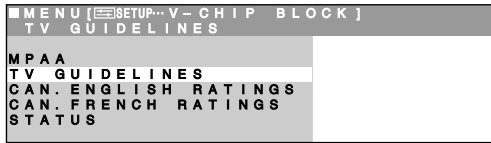

3 Press ▲/▼ to select “BLOCK CONTENT”, and press **ENTER**.

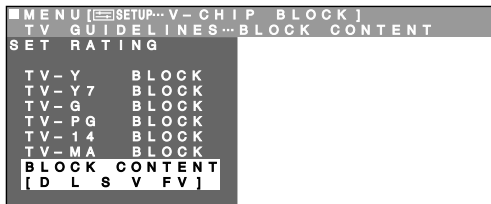

4 Press ▲/▼ to select the desired item, and press ◀/▶ to select “BLOCK” or “-----” (unblock).

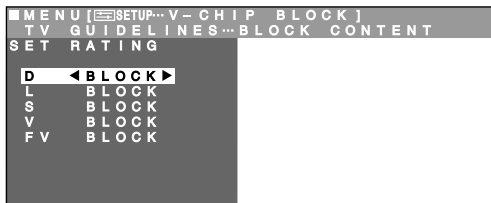


5 Press **MENU** to exit.

■ Activating V-CHIP BLOCK


● Setting STATUS

You can activate V-CHIP BLOCK after setting **MPAA rating** or **TV GUIDELINES**.

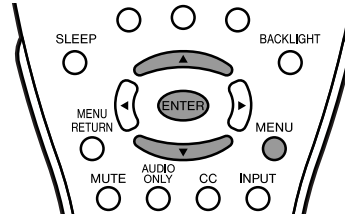


1 Repeat steps 1 to 4 of **Setting V-CHIP (MPAA rating)**. (See page 30.)

2 Press ▲/▼ to select “STATUS”, and press **ENTER**.

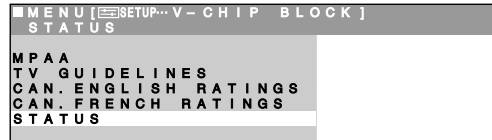

3 Press ▲/▼ to set “STATUS” to “ON”, and press **ENTER**.

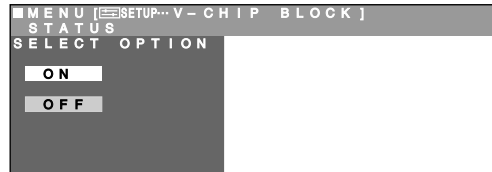


NOTE

- If “STATUS” is set to “OFF”, V-CHIP BLOCK will not be activated.

4 Press **MENU** to exit.

Useful Features (Continued)

■ Canceling the V-CHIP BLOCK screen while V-CHIP BLOCK is activated

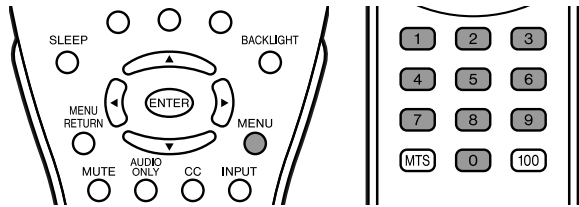

- 1 "V-CHIP HAS BEEN ACTIVATED" appears if you watch a program with the same Program Rating data you configured.



NOTE


- "V-CHIP HAS BEEN ACTIVATED" will not be displayed if "STATUS" is set to "OFF".

- 2 Press **MENU** to display "INPUT SECRET NO.".



- 3 Input the 4-digit secret number by using **Channel Select**; V-CHIP BLOCK is temporarily canceled. If you input an incorrect secret number, "SECRET NO. IS INCORRECT" is displayed. In this case, input the correct secret number.


■ Changing V-CHIP BLOCK settings

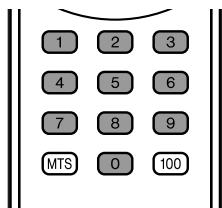

- 1 Repeat steps 1 to 3 of **Setting V-CHIP (MPAA rating)**, then "INPUT SECRET NO." will be displayed. (See page 30.)




- 2 Input the 4-digit secret number by using **Channel Select**; the V-CHIP select mode will be displayed. Set the V-CHIP BLOCK again.

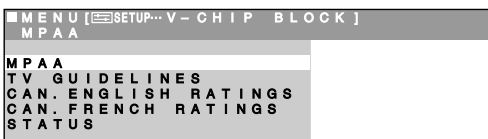

■ Changing or clearing the SECRET NUMBER

If you forget the secret number, clear the secret number as follows.

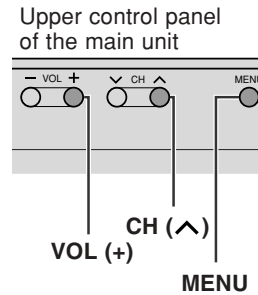

- 1 Repeat steps 1 to 3 of **Setting V-CHIP (MPAA rating)** (see page 30), or 1 and 2 of **Canceling the V-CHIP BLOCK screen while V-CHIP BLOCK is activated**, then "INPUT SECRET NO." will be displayed.

- 2 Press and hold both **CH (^)** and **VOL (+)** on the main unit simultaneously until the message "INPUT SECRET NO." blinks.

- 3 Press **MENU** to exit.

Canadian Rating Systems

- The TV rating systems in Canada are based on the Canadian Radio-Television and Telecommunications Commission (CRTC) policy on violence in television programming.
- While violence is the most important content element to be rated, the structure developed takes into consideration other program content like language, nudity, sexuality and mature themes.
- When setting the V-CHIP on the Canadian system you can choose either the Canadian English ratings or the Canadian French ratings.

Canadian English ratings


Rating		Description
Age	C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of security and well-being.
	C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen.
	G	General: Considered acceptable for all age groups. Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
	PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
	14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline, but it must be integral to the development of plot or character. Language usage could be profane and nudity present within the context of the theme.
	18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of sex and nudity.

Canadian French ratings


Rating		Description
Age	G	General: All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner.
	8ans +	General but inadvisable for young children: May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with parent.
	13ans +	Over 13 years: Could contain scenes of frequent violent scenes and therefore recommended for viewing with parent.
	16ans +	Over 16 years: Could contain frequent violent scenes and intense violence.
	18ans +	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

Useful Features (Continued)

■ Setting V-CHIP (Canadian English ratings)

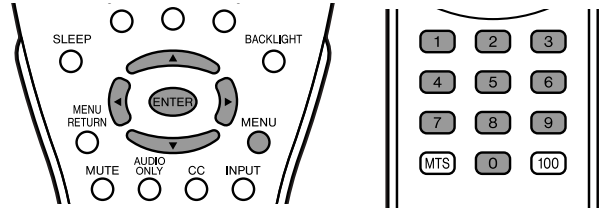


- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲/▼** to select "V-CHIP BLOCK", and press **ENTER**.
 - Secret number setting menu is displayed only when "SECRET NO." is set. (See page 30.)
 - "V-CHIP BLOCK" and "STATUS" will not be selectable from the menu if you do not first configure your secret number. (See page 30.)

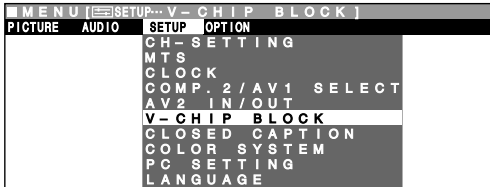


- 4 Input the 4-digit secret number by using **Channel Select**.



- 5 Press **▲/▼** to select "CAN. ENGLISH RATINGS", and press **ENTER**.

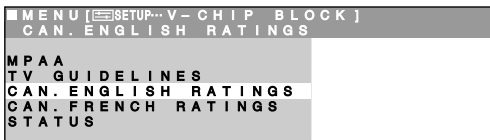

- 6 Press **▲/▼** to select the desired item, press **◀▶** to select "BLOCK" and press **ENTER**.

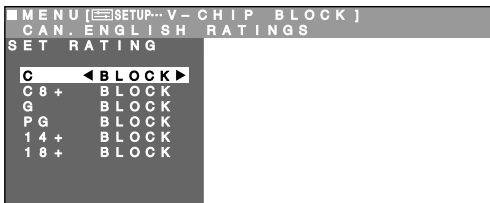


- 7 Press **"MENU"** to exit.


NOTE

- The setting automatically enters "BLOCK" for any ratings below your selection.
- If you set "C" to "BLOCK", all ratings are automatically blocked.

■ Setting V-CHIP (Canadian French ratings)

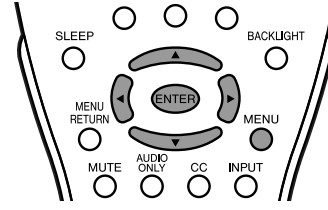

- 1 Repeat steps 1 to 4 of **Setting V-CHIP (Canadian English ratings)**.
- 2 Press **▲/▼** to select "CAN. FRENCH RATINGS", and press **ENTER**.
- 3 Press **▲/▼** to select the desired item, press **◀▶** to select "BLOCK" and press **ENTER**.

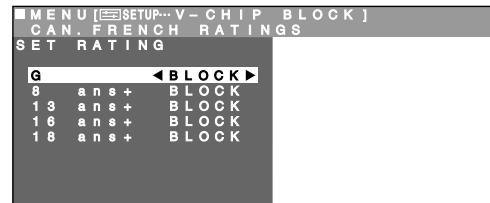

- 4 Press **"MENU"** to exit.


NOTE

- The setting automatically enters "BLOCK" for any ratings below your selection.
- If you set "G" to "BLOCK", all ratings are automatically blocked.


■ Activating V-CHIP BLOCK

● Setting STATUS

You can activate "V-CHIP BLOCK" after setting **Canadian English ratings** or **Canadian French ratings**.

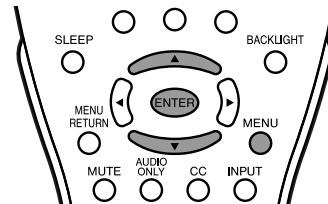

- 1 Repeat steps 1 to 4 of **Setting V-CHIP (Canadian English ratings)**.
- 2 Press **▲/▼** to select "STATUS", and press **ENTER**.

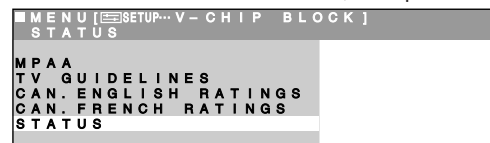

- 3 Press **▲/▼** to set "STATUS" to "ON", and press **ENTER**.



NOTE

- If "STATUS" is set to "OFF", "V-CHIP BLOCK" will not be activated.

- 4 Press **MENU** to exit.

CLOSED CAPTION

Setting CLOSED CAPTION


- This LCD TV set is equipped with an internal Closed Caption decoder. "Closed Caption" is a system which allows conversations, narration, and sound effects in TV programs and home videos to be viewed as captions on the TV screen (see the illustration).
- Not all programs and videos will offer closed captioning. Please look for the "CC" symbol to ensure that captions will be shown.
- The Closed Caption broadcasts can be viewed in two modes: CAPTION and TEXT. For each mode, two channels are available: CH1 and CH2.

The CAPTION mode shows subscripsts of dialogs and commentaries of TV dramas and news programs while allowing a clear view of the picture.

The TEXT mode displays various information over the picture (such as TV program schedules and weather forecasts, etc.) that is independent of the TV programs.



Directly setting the CLOSED CAPTION

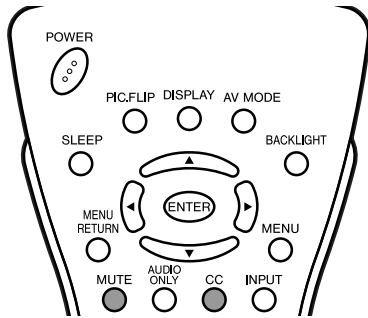

- 1 Press **CC** to display the CC/TEXT screen.



- 2 Press **CC** to change the setting.




NOTE

- CC1**: CLOSED CAPTION mode for CH1 data
- CC2**: CLOSED CAPTION mode for CH2 data
- T1**: TEXT mode for CH1 data
- T2**: TEXT mode for CH2 data


NOTE

- If a broadcast contains Closed Caption data and **MUTE** is pressed, the LCD TV set enters CLOSED CAPTION mode automatically. Pressing **MUTE** again will return the LCD TV set to its previous condition.
- Closed Caption may malfunction (white blocks, strange characters, etc.) if signal conditions are poor or if there are problems at the broadcast source. This does not necessarily indicate a problem with your LCD TV set.
- If any button is pressed to call up the On-Screen Display while viewing a Closed Caption broadcast, the closed captions will disappear momentarily.
- If no TEXT broadcast is being received while viewing in the TEXT mode, the screen may become blank for some programs. Should this occur, switch the CLOSED CAPTION mode to OFF.

Setting the CLOSED CAPTION on the Menu screen

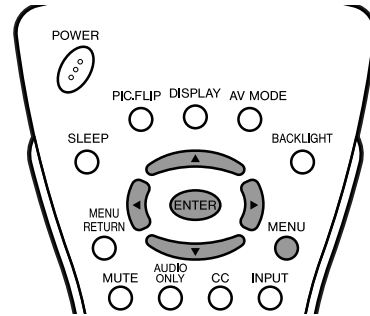

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "SETUP".
- 3 Press **▲▼** to select "CLOSED CAPTION", and press **ENTER**.

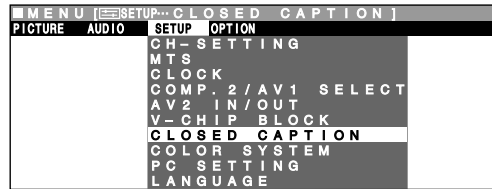

- 4 Press **▲▼** to change the CLOSED CAPTION setting, and press **ENTER**.



NOTE

- CC1**: CLOSED CAPTION mode for CH1 data
- CC2**: CLOSED CAPTION mode for CH2 data
- T1**: TEXT mode for CH1 data
- T2**: TEXT mode for CH2 data

- 5 Press **MENU** to exit.


Useful Features (Continued)

VIEW MODE


You can select the picture display size for the playback image of the DVD player from the following four modes: "4:3", "16:9", "ZOOM" and "STRETCH".

NOTE


- VIEW MODE settings are not available when HDTV signals are input. All HDTV programs will be displayed in letter box format (bars at top and bottom of screen).
- "VIEW MODE" cannot be set when the PC mode is selected as an input mode.

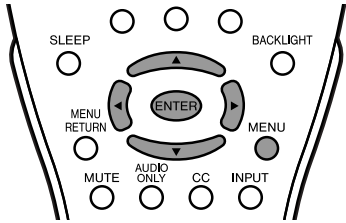

- Press **MENU** to display the Menu screen.
- Press **◀▶** to select "OPTION".
- Press **▲▼** to select "VIEW MODE", and press **ENTER**.

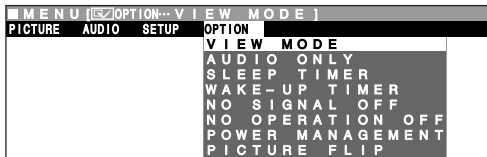

- Press **▲▼** to select desired setting, and press **ENTER**.

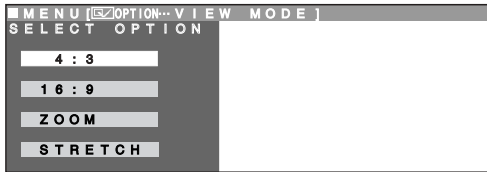

Selected item	Description
4:3	Displays the image in a 4:3 size.
16:9	Stretches the image horizontally to display it in a 16:9 size.
ZOOM	Displays the center part of the image by enlarging it towards the horizontal and vertical directions.
STRETCH	Stretches the image horizontally.

Image type	4:3	16:9	ZOOM	STRETCH
(For an image stretched vertically)				
(For an image stretched vertically with bands at the left and right sides)				
(For a 4:3 image)				


NOTE

- The 4:3 image will be distorted on the screen when the "VIEW MODE" is set to "16:9".

- Press **MENU** to exit.

AUDIO ONLY

When listening to music from a music program, you can set the Liquid Crystal display off and enjoy audio only.

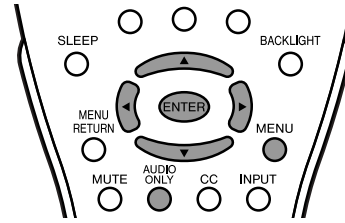

Setting the AUDIO ONLY on the Menu screen

- Press **MENU** to display the Menu screen.
- Press **◀▶** to select "OPTION".
- Press **▲▼** to select "AUDIO ONLY", and press **ENTER**.
- Press **▲▼** to select "ON", and press **ENTER**.



Selected item	Description
ON	Audio is output without screen image.
OFF	Both screen images and audio are output.

Directly setting the AUDIO ONLY


- Press **AUDIO ONLY**. 'PRESS "AUDIO ONLY" FOR VIDEO OFF' is displayed on the screen.



- Press **AUDIO ONLY** again. The screen image will disappear.
- Press **AUDIO ONLY** again. The screen image will be displayed again.


SLEEP TIMER

You can set the SLEEP TIMER to automatically turn off the TV.

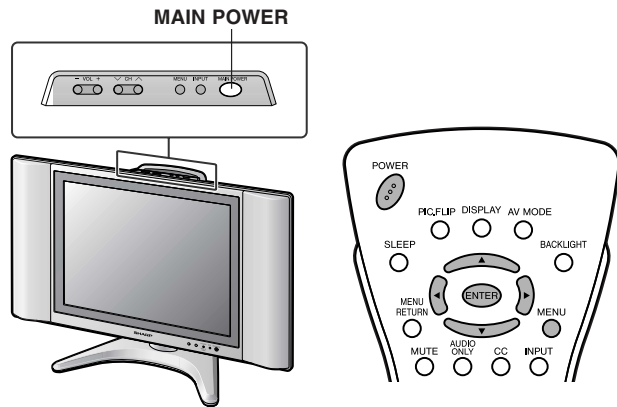


Setting the SLEEP TIMER on the Menu screen

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "OPTION".
- 3 Press **▲▼** to select "SLEEP TIMER", and press **ENTER**.

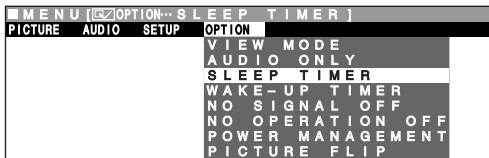

- 4 Press **▲▼/◀▶** to select "30MIN", "60MIN", "90MIN", "120MIN", "150MIN" or "OFF", and press **ENTER**.

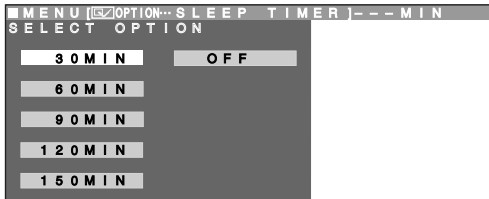


- 5 Press **MENU** to exit.

NOTE

- After you set the SLEEP TIMER, pressing **MAIN POWER** on the main unit or **POWER** on the remote control will cancel the SLEEP TIMER setting.
- 5 minutes before the SLEEP TIMER turns off the LCD TV, "5 MIN REMAINING" is displayed on the screen for 4 seconds. The SLEEP TIMER counts down and shows a similar 4-second display for each remaining minute until the timer turns off the LCD TV set.


Directly setting the SLEEP TIMER

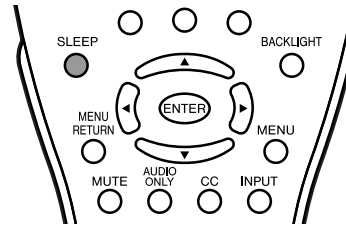

- 1 Press **SLEEP** to display the SLEEP TIMER screen.



- 2 Press **SLEEP** to set the sleep timer (in minutes).

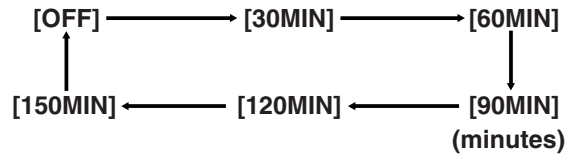


NOTE

- The SLEEP TIMER screen automatically disappears in 3 seconds.



Useful Features (Continued)

WAKE-UP TIMER

You can set the WAKE UP TIMER to automatically turn on the TV.

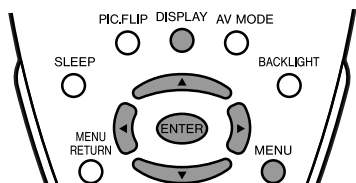

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select "OPTION".
- 3 Press **▲▼** to select "WAKE-UP TIMER", and press **ENTER**.
- 4 Press **▲▼** to select the items, and press **◀▶** to adjust them.

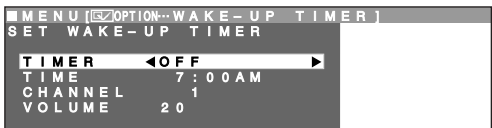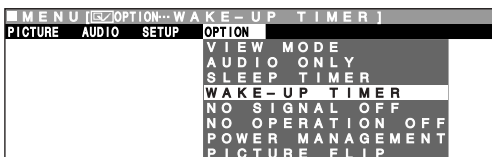

Selected item	Description
TIMER	To activate the WAKE-UP TIMER, set this item to "ON".
TIME	Set the time at which you want to turn on the TV.
CHANNEL	Set the TV channel or input mode when the TV is turned on.
VOLUME	Set the volume when the TV is turned on.

- 5 Press **MENU** to exit.
- 6 Make sure to turn off the LCD TV with the remote control.
 - The WAKE-UP TIMER will not be activated if the LCD TV is turned off with **MAIN POWER** on the main unit.


NOTE

- When you set "WAKE-UP TIMER", the POWER indicator lights up orange while in the standby mode.
- Be sure to adjust the clock with "CLOCK" in "SETUP" before setting "SLEEP TIMER" and "WAKE-UP TIMER".
- You can output the picture and sound of the external device with the WAKE-UP TIMER function. Make sure that the external device turns on at the time you specified.
- The CHANNEL setting for "WAKE-UP TIMER" changes in the following order: COMPONENT1γ COMPONENT2 or AV1γ AV2γ TV (AIR or CABLE)*
 - * The skipped channels cannot be selected.
- When not using LCD TV set for a long period of time, either turn the main power off or set "WAKE-UP TIMER" to "OFF".
- When "WAKE-UP TIMER" has been set to "ON", the TV is turned on at the set time every day until it is set to "OFF".
- After the TV has been turned "ON" by "WAKE-UP TIMER", "SLEEP TIMER" is automatically set to 120 minutes for safety reason.
- The time that is currently set can be checked on the screen by pressing **DISPLAY**.
- When the time set for "WAKE-UP TIMER" is reached when the power is on, the TV changes to the set channel. The volume does not change at this time.

NO SIGNAL OFF

Power control setting allows you to save energy. When set to "ENABLE", the power will automatically shut down if no signal inputs for 5 minutes.

- 1 Repeat steps 1 and 2 of **WAKE-UP TIMER**.
- 2 Press **▲▼** to select "NO SIGNAL OFF", and press **ENTER**.
- 3 Press **▲▼** to select "ENABLE", and press **ENTER**.
- 4 Press **MENU** to exit.

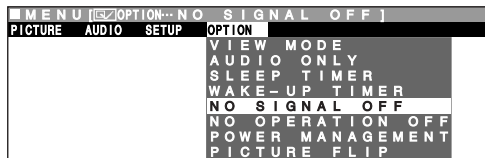


NOTE

- "DISABLE" is factory preset value.

NO OPERATION OFF

When set to "ENABLE", the power will automatically shut down if there is no operation for 3 hours.

- 1 Repeat steps 1 and 2 of **WAKE-UP TIMER**.
- 2 Press **▲▼** to select "NO OPERATION OFF", and press **ENTER**.
- 3 Press **▲▼** to select "ENABLE", and press **ENTER**.
- 4 Press **MENU** to exit.

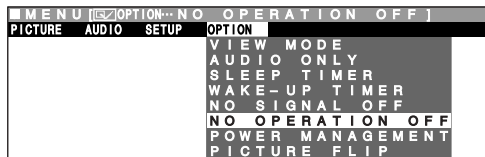

- 5 minutes before the power shuts down, remaining time is displayed every minute.


NOTE

- "DISABLE" is factory preset value.


PICTURE FLIP

You can set the orientation of the picture.


Setting the PICTURE FLIP on the MENU screen

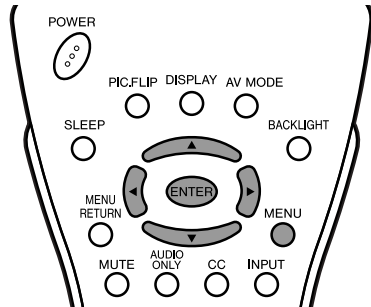

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select "OPTION".
- 3 Press **▲/▼** to select "PICTURE FLIP", and press **ENTER**.

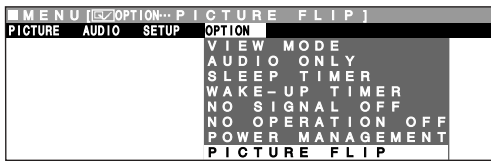


- 4 Press **▲/▼** to select the desired mode, and press **ENTER**.

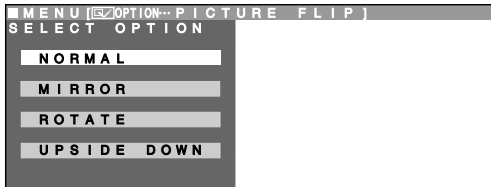


- 5 Press **MENU** to exit.

Directly setting the PICTURE FLIP

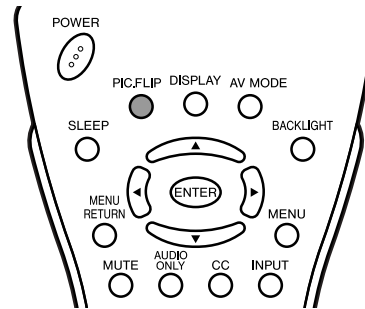

 
- 1 Press **PICTURE FLIP** to display the PICTURE FLIP screen.
- 2 Press **PICTURE FLIP** to change the setting.



NOTE

- The PICTURE FLIP screen automatically disappears in 3 seconds.
- [NORMAL]: normal image
- [MIRROR]: mirror image
- [ROTATE]: rotated image
- [UPSIDE DOWN]: upside down image

[NORMAL]
Normal image orientation.

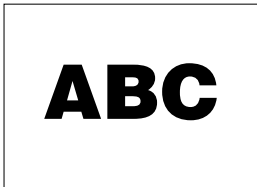

[MIRROR]
To display mirror images for special uses.



[ROTATE]
To display rotated images for special uses.



[UPSIDE DOWN]
To display upside down images for special uses.




Connecting a PC

Viewing an Image from a PC

Use the PC-IN terminals to connect a PC.


NOTE

- The PC input terminals are DDC1/2B-compatible.
- Refer to page 42 for a list of PC signals compatible with the System.
- Make sure to select the same signal values for the output signal of a PC and the input signal of the LCD-TV before connecting with the PC. (See pages 41 and 42.)
- Depending on the PC being used, images may not be shown without converting the output signals into external output. Please refer to your PC's manuals regarding converting to external output.

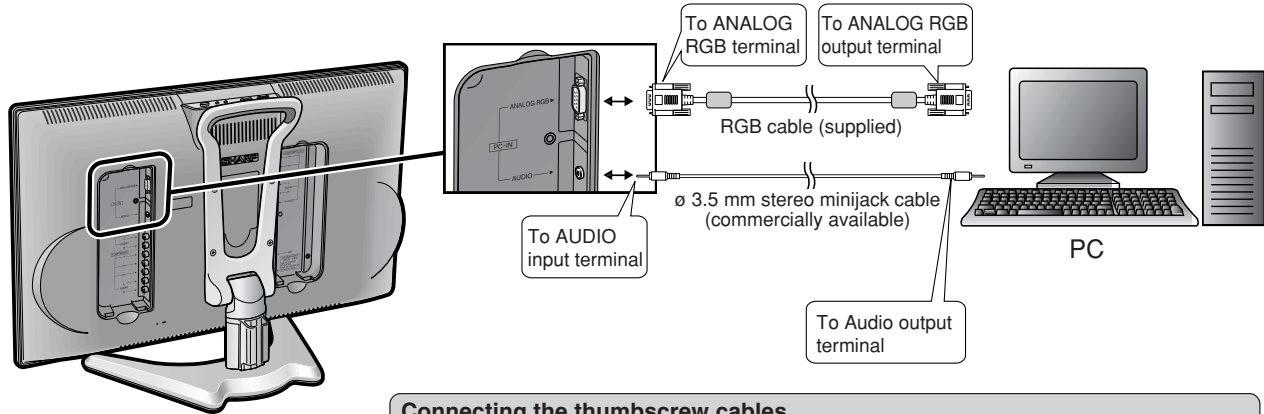


Connecting the thumbscrew cables

- Connect the thumbscrew cable making sure that it fits correctly into the terminal. Then, firmly secure the connectors by tightening the screws on both sides of the plug.
- Do not remove ferrite cores attached to the RGB cable.

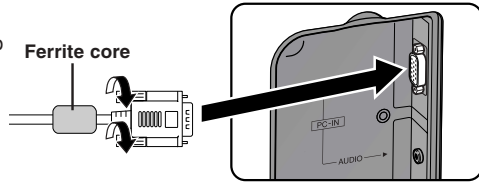

 Signal names for 15-pin mini D-sub connector



Pin No.	Signal name	Pin No.	Signal name	Pin No.	Signal name
①	R	⑥	GND (Ground)	⑪	Not connected
②	G	⑦	GND (Ground)	⑫	SDA
③	B	⑧	GND (Ground)	⑬	HD
④	Not connected	⑨	+5V	⑭	VD
⑤	CSYNC	⑩	GND (Ground)	⑮	SCL


NOTE

- Pin No. 5 on the LCD TV set is not used for inputting the signal.
- Pin No. 9 is not connected with the supplied RGB cable.

Displaying an Image from a PC

To view an image from a PC, perform the following procedures.

- ① Select the PC mode using **INPUT** on the remote control or the LCD TV set. (See page 17.)
- ② Select the PC input signal. (See page 41.)
- ③ Select the PC sound input mode. (See page 26.)
- ④ Adjust the "FINE SYNC." items if the PC image does not come in clearly. (See page 41.)

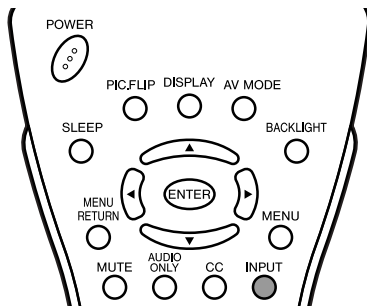


INPUT SIGNAL (for PC mode)

Select the computer input signal before displaying the PC image on the LCD TV screen.

NOTE


- Make sure to select the input signal to “1024 x 768” or “640 x 480”, before connecting a PC.

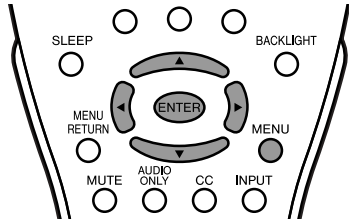

1 Press **MENU** to display the Menu screen.

2 Press **◀▶** to select “SETUP”.


3 Press **▲/▼** to select “PC SETTING”, and press **ENTER**.

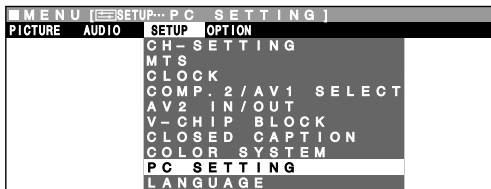

4 Press **▲/▼** to select “INPUT SIGNAL”, and press **ENTER**.




5 Press **▲/▼** to select the desired input signal and press **ENTER**.

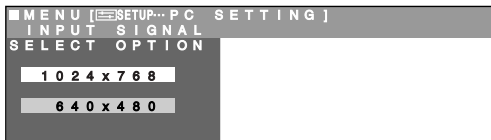

6 Press **MENU** to exit.

FINE SYNC. Adjustments (for PC mode)

You can adjust the PC image using the FINE SYNC. menu.

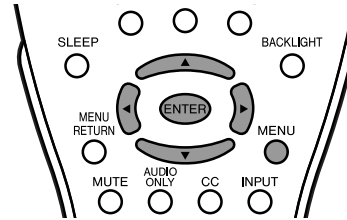


1 Perform steps 1 to 3 in **INPUT SIGNAL (for PC mode)** to display the PC SETTING screen.

2 Press **▲/▼** to select “FINE SYNC.”, and press **ENTER**.



3 Press **▲/▼** to select the specific adjustment item.

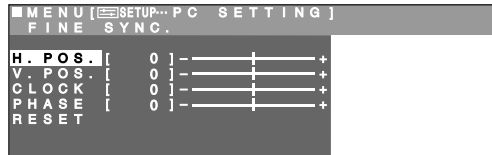

4 Press **◀▶** to adjust the item to your desired position.

5 Press **MENU** to exit.

Selected item	Description
H.POS.	Centers the image by moving it to the left or right.
V.POS.	Centers the image by moving it up or down.
CLOCK	Adjusts the clock frequency.
PHASE	Adjusts the clock phase.


NOTE

- When resetting all adjustment items to factory preset values, perform the following procedures.
 - ① Press **▲/▼** to select “RESET”, and press **ENTER**.
 - ② Press **▲/▼** to select “YES” and press **ENTER**.



Connecting a PC (Continued)

POWER MANAGEMENT (for PC mode)

When this function is set to “ON”, the power will automatically shut down.

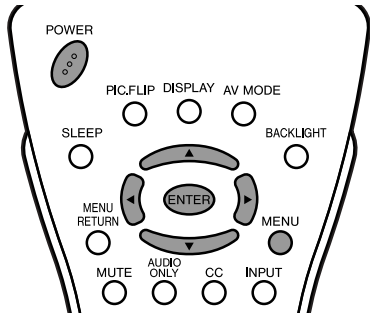

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀▶** to select “OPTION”.
- 3 Press **▲▼** to select “POWER MANAGEMENT”, and press **ENTER**.
- 4 Press **▲▼** to select “ON” or “OFF”, and press **ENTER**.

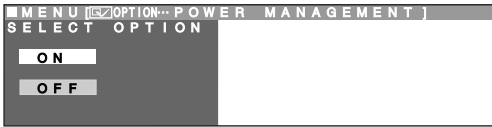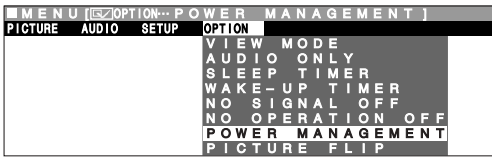

- 5 Press **MENU** to exit.

Selected Item	Description
ON	If no signal inputs for 8 minutes, the power shuts down.
OFF	No power management

NOTE

- The remaining time is displayed 5 minutes before the power is turned off.
- Even if you start using the PC and the signal inputs again, the LCD TV set stays off.
- The LCD TV set turns on again by pressing **MAIN POWER** on the main unit or **POWER** on the remote control. (See page 17.)
- “OFF” is factory preset value.

PC Compatibility Chart

PC/MAC	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Compatible	
PC	VGA	640 × 400	31.5	60	
			37.9	85	
		720 × 400	31.5	60	
			37.9	85	
		640 × 480	31.5	60	✓
			37.9	72	
	37.5		75		
	43.3		85		
	WVGA	848 × 480	31.5	60	
	SVGA	800 × 600	35.1	56	
			37.9	60	
			48.1	72	
46.9			75		
53.7			85		
XGA	1,024 × 768	48.4	60	✓	
		56.5	70		
		60.0	75		
WXGA	1,280 × 720	68.7	85		
		45.0	60		
		48.1	60		
SXGA	1,280 × 1,024	64.0	60		
MAC 13"	VGA	640 × 480	34.9	67	
MAC 16"	SVGA	832 × 624	49.7	75	
MAC 19"	XGA	1,024 × 768	60.2	75	

NOTE

- The numerical values of resolutions and frequencies mentioned above are standard. They may differ from the values when actually displayed.

Connecting External Devices


You can enjoy picture and sound by connecting a VCR or a home video game system to the terminals located on the rear of the main unit.

When connecting an external device, turn off the **MAIN POWER** of the main unit first to prevent any possible damage.

Example of External Devices that can be Connected

To PC-IN terminal

- PC

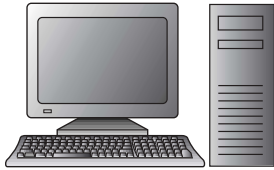

To AV-IN2/OUT terminal

- <Example>
- VCR
- Laser disc player



To COMPONENT1 terminal


- <Example>
- DVD Player, etc.



- Digital TV tuner




* If your external device has a component terminal, COMPONENT connection is recommended (you can view high-quality pictures).

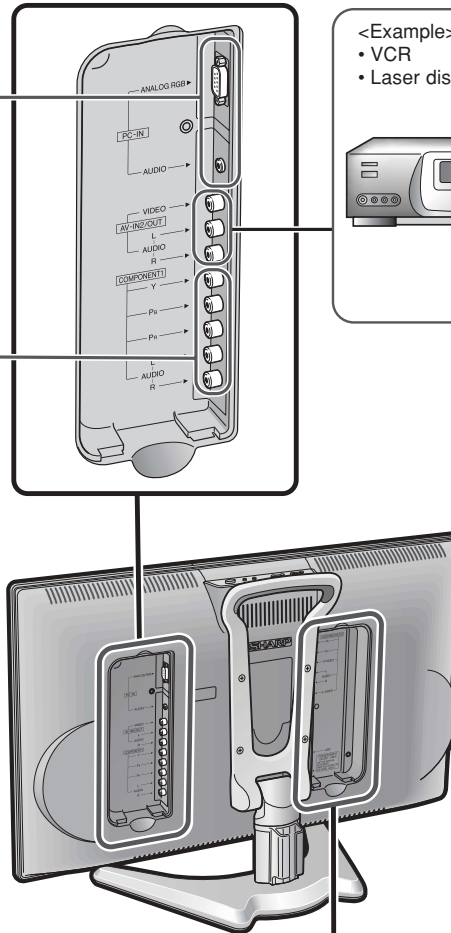

To AV1 terminal

- <Example>
- Camcorder
- Home video game system

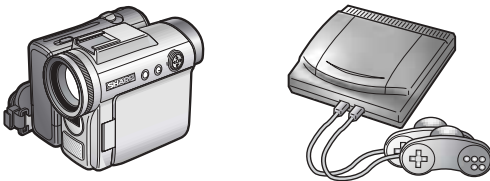

* If your external device has an S-video terminal, S-VIDEO connection is recommended.

To COMPONENT2 terminal

- <Example>
- DVD Player, etc.



- Digital TV tuner




NOTE

- For the cable, use a commercially available audio/video cable.
- Only connect audio/video signals to AV1 and AV-IN2 terminals. Connecting other signals may result in a malfunction.
- AV1 has 2 video input terminals: VIDEO and S-VIDEO. When you connect external devices to both terminals (and if you select "AV1"), you can only view pictures from the S-VIDEO terminal. To view the picture from the VIDEO terminal, do not connect any external device to the S-VIDEO terminal.
- For more information about external device connections, see the manuals of your external devices.

Connecting External Devices (Continued)

Connecting a VCR, DVD Player or a Camcorder to COMPONENT1/COMPONENT2/AV1/AV-IN2/PC-IN

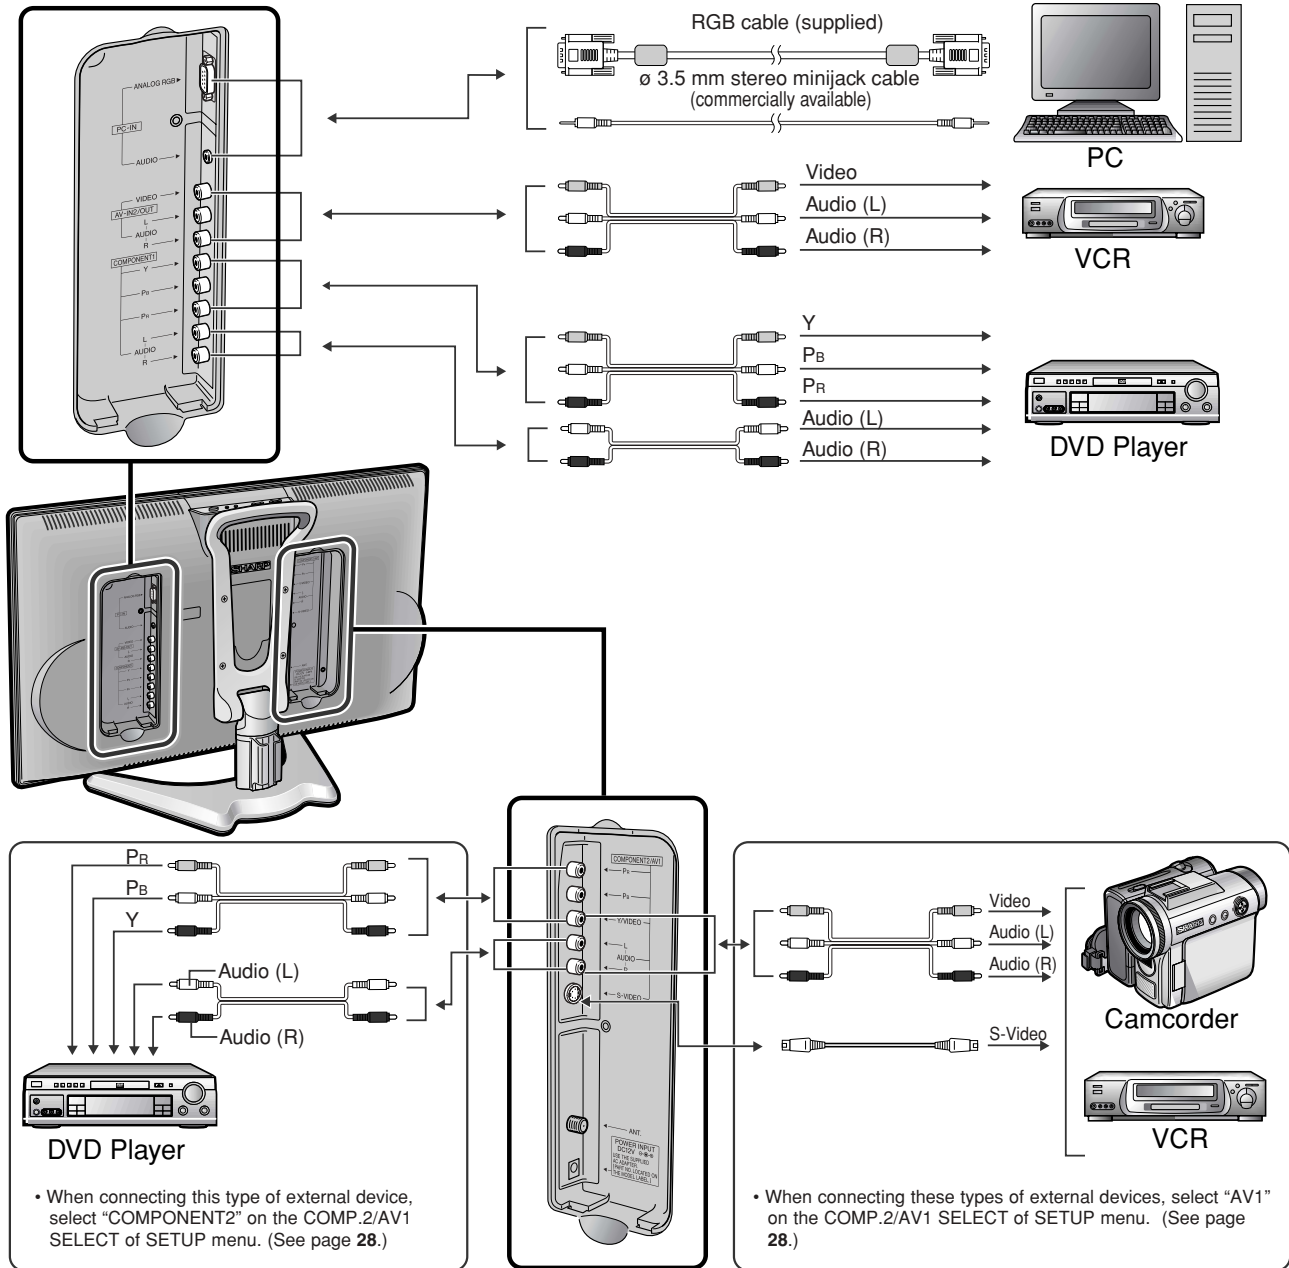


NOTE

- If your VCR (or other external devices) has an S-video terminal, S-VIDEO connection is recommended. (Use an S-video cable.)
- When you connect external devices to both S-VIDEO and VIDEO terminals (and if you select "AV1"), you can only view pictures from the S-VIDEO terminal.
- You cannot view multiple or synthesized pictures by connecting two or more external devices. When connecting an external device, use care to connect the video and audio cables to the corresponding terminals.

Outputting Video and Audio (Video Output)

You can output video and audio signals from the TV set through the AV output terminals (AV-OUT).

- When using AV-IN2/OUT as an output terminal, select "SETUP" in the Menu and set "AV2 IN/OUT" to "OUT". (See page 28.)
- The factory setting for "AV2 IN/OUT" is "IN".

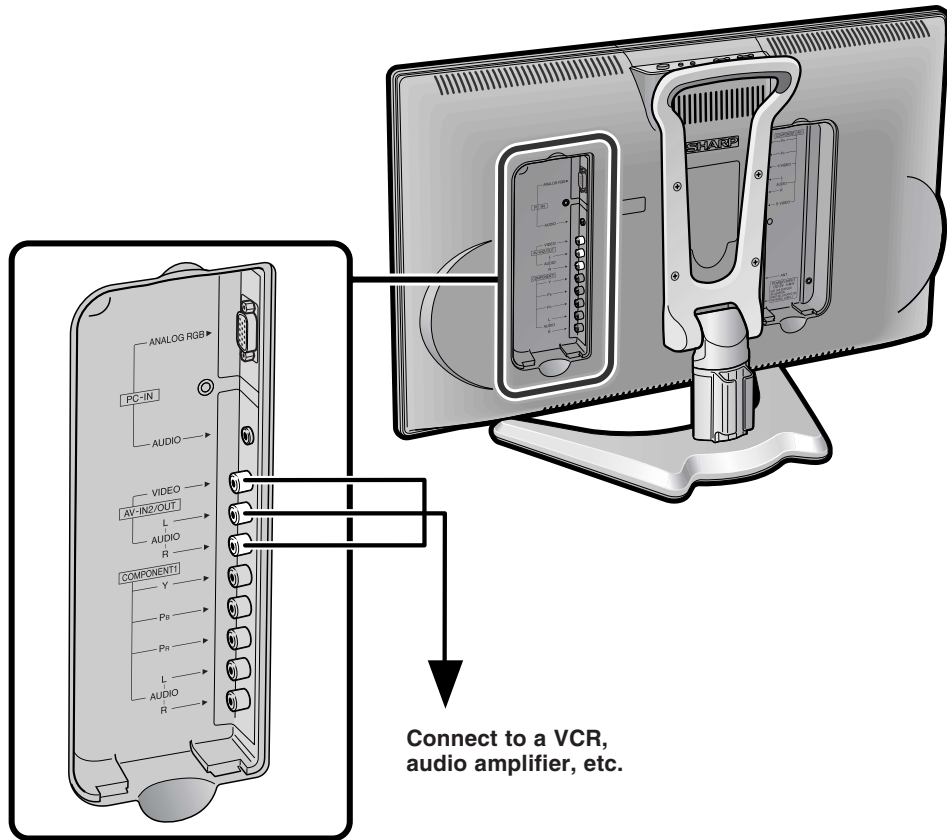




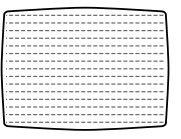
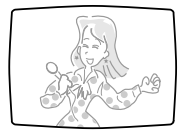
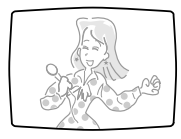
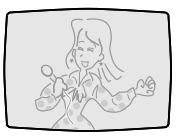
NOTE

- The AV-IN2/OUT terminal has 2 output modes (see page 28).
- When using the S-VIDEO input for AV1, no video output will be made to the AV output terminal, but audio output will be made for connection to external audio systems.
- When using the S-VIDEO input for AV1, or Y, Pb or Pr input for COMPONENT, no video output will be made to the AV output terminal, but audio output will be made for connection to external audio systems.

Troubleshooting

■ Before calling for repair services, make the following checks for possible remedies to the encountered symptoms.



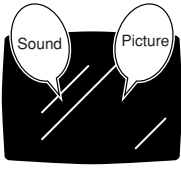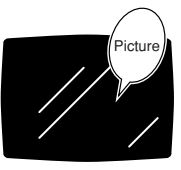


LCD TV set

Problem	Check item	Reference page
 <p>There is no picture or sound.</p>	<ul style="list-style-type: none"> • Make sure the AC adapter is properly inserted in the power outlet. • Reception other than those of broadcasting stations can be considered. • Make sure the input mode is set to TV. • Make sure the MAIN POWER switch of the main unit is on. 	<p>10</p> <p>—</p> <p>17</p> <p>17</p>
 <p>There is no picture. There is no picture from AV1 or AV-IN2.</p>	<ul style="list-style-type: none"> • Make sure the BRIGHTNESS is properly adjusted. • Fluorescent lamp may have reached the end of service life. • Make sure the S-VIDEO terminal has nothing connected. • Make sure the AUDIO ONLY is not set to ON. 	<p>23</p> <p>48</p> <p>44</p> <p>36</p>
 <p>There is no sound.</p>	<ul style="list-style-type: none"> • Make sure the volume is not set to minimum. • Make sure the sound is not set to mute. • Make sure that headphones are not connected. 	<p>18</p> <p>18</p> <p>11</p>
 <p>There is no picture or sound, just noise.</p>	<ul style="list-style-type: none"> • Make sure the antenna cable is properly connected. • Bad reception could be the problem. 	<p>9, 10</p> <p>—</p>
 <p>Picture is not clear.</p>	<ul style="list-style-type: none"> • Make sure the antenna cable is properly connected. • Bad reception could be the problem. 	<p>9, 10</p> <p>—</p>
 <p>Picture is light or improperly tinted.</p>	<ul style="list-style-type: none"> • Check color adjustment. • Check COLOR SYSTEM setting. 	<p>23</p> <p>28</p>
 <p>The picture is too dark.</p>	<ul style="list-style-type: none"> • Press the BACKLIGHT button or set the BACKLIGHT or BRIGHTNESS settings. • Check CONTRAST and BRIGHTNESS adjustment. • Fluorescent lamp may have reached the end of service life. 	<p>22, 23</p> <p>23</p> <p>48</p>
Remote control does not work.	<ul style="list-style-type: none"> • Check the batteries of the remote control. • Make sure the remote sensor window is not under strong lighting. 	<p>8</p> <p>8</p>
The clock (AUTO CLOCK) cannot be set.	<ul style="list-style-type: none"> • The broadcasted EDS signal may be weak. Check the antenna. • Carry out EZ SETUP or Setting the CLOCK again. • If EDS signal is not sent, set the clock using MANUAL CLOCK Setting. 	<p>—</p> <p>14-16, 26</p> <p>16</p>
Unit cannot be operated.	<ul style="list-style-type: none"> • External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the unit after first turning the power off the LCD TV set, or unplugging the AC cord and re-plugging it in after 1 or 2 minutes. 	<p>—</p>

Troubleshooting (Continued)

■ Before calling for repair services, make the following checks for possible remedies to the encountered symptoms.

Antenna

Problem	Check item
 <p>The picture is not sharp.</p>	<ul style="list-style-type: none"> • The reception may be weak. • The quality of the broadcast may also be bad. • Make sure the antenna is facing the right direction. • Make sure the outside antenna is connected.
 <p>The picture moves.</p>	
 <p>The picture is doubled or tripled.</p>	<ul style="list-style-type: none"> • Make sure the antenna is facing the right direction. • There may be reflected electric waves from mountains or buildings.
 <p>The picture is spotted.</p>	<ul style="list-style-type: none"> • There may be interference from automobiles, trains, high voltage lines, neon lights, etc. • There may be interference between the antenna cable and AC cord. Try positioning them further apart.
 <p>There are stripes on the screen or colors fade.</p>	<ul style="list-style-type: none"> • Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations, transmission antennas of amateur radios and cellular phones may also cause interference. • Use the unit as far apart as possible from devices that may cause possible interference.

PC

Problem	Check item	Reference page
There is no image.	<ul style="list-style-type: none"> • Make sure the RGB cable is properly connected. • Make sure the output signal of the PC and the input signal setting of the LCD TV set are matched. • Some software prohibit video playback on an external display when playing back a video with a notebook PC. This is not attributable to a problem with the LCD TV set. 	<p>40</p> <p>41</p> <p>–</p>
There is no sound.	<ul style="list-style-type: none"> • Make sure the PC audio cable is properly connected. • Check if “PC SOUND SELECT” is set to “PC”. • Check if the mute function activates, or if the volume is not set to minimum. • V-CHIP BLOCK may have been activated while an item other than “PC” is selected in “PC SOUND SELECT”. 	<p>40</p> <p>26</p> <p>18</p> <p>26</p>
The text is blurred.	<ul style="list-style-type: none"> • Adjust “CLOCK” and “PHASE” using the FINE SYNC. menu. 	41
The image is not displayed in the center of the screen.	<ul style="list-style-type: none"> • Adjust “H.POS.” and “V.POS.” using the FINE SYNC. menu. 	41

■ Cautions regarding use in high and low temperature environments

- When the unit is used in a low temperature space (e.g. room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
 - Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the LCD panel to malfunction.
- Storage temperature: –4°F to +140°F (–20°C to +60°C)

Specifications


Items	Model	LC-20B6U
LCD panel		20.1" Advanced Super View & BLACK TFT LCD
Number of dots		2,359,296 dots XGA
Video color systems		N358, N443, PAL, PAL-M, PAL-N, SECAM, PAL-60
TV function	TV Standard (CCIR)	NTSC/PAL-M/PAL-N
	TV Tuning System	PLL 181 ch.
	STEREO	MTS+SAP
	CATV	125 ch.
Y/C FILTER		3D Y/C FILTER
Brightness		430 cd/m ²
Lamp life (Fluorescent lamp)		60,000 hours*
Viewing angles		H: 170° V: 170°
Audio amplifier		2.1 W × 2
Speakers		ø2.1 in. (ø5.7 cm), 2 pcs.
Terminals	COMPONENT1	COMPONENT1-IN, AUDIO-IN
	COMPONENT2/AV1	COMPONENT2/AV1-IN, AUDIO-IN, S-VIDEO-IN
	AV-IN2	AV-IN2/AV-OUT
	PC-IN	PC Connector: 15-pin mini D-sub PC AUDIO: Mini-jack for stereo (ø3.5 mm)
	Antenna	F-Type
	Headphone	Mini-jack for stereo (ø3.5 mm)
OSD language		English/Spanish/French
Power supply		DC 12V, AC 110-240V, 50/60Hz (AC adapter), AC 110-125V (AC cord)
Power consumption		81 W (0.5 W standby): AC 120V
		71 W: DC 12V
Weight		18.9 lbs. (8.6 kg), w/o accessories
Accessories		Remote control, Battery (×2), Antenna cable, AC adapter, RGB cable, AC cord, Cable holder, Cable clamp, Operation manual

* Typical time for power output decrease of about one-half assuming continuous use in a room with normal lighting, normal brightness and temperature at 77°F/25°C

■ As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Dimensional Drawings

Unit: inch (mm)

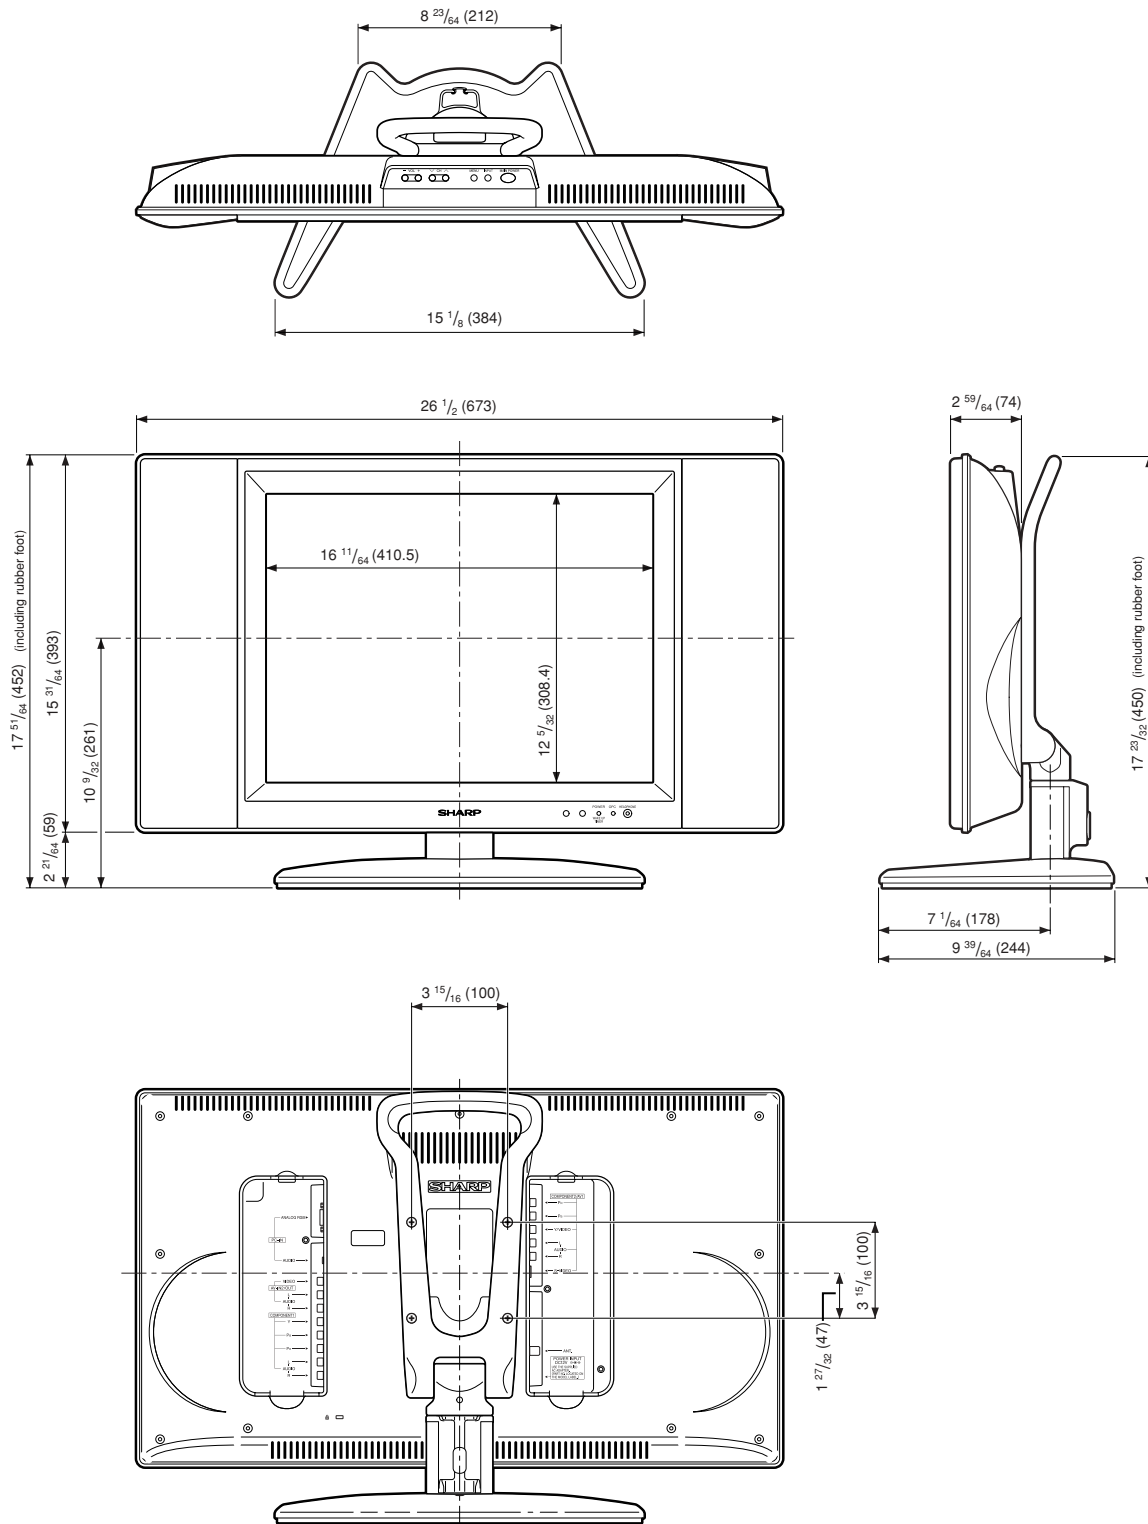

Calling for Service

For location of the nearest Sharp Authorized Service, or to obtain product literature, accessories, supplies, or customer assistance, please call 1-800-BE-SHARP.

LIMITED WARRANTY

CONSUMER LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Model Specific Section

Your Product Model Number & Description:	LC-20B6U LCD Color Television (Be sure to have this information available when you need service for your Product.)
Warranty Period for this Product:	One (1) year parts and labor from the date of purchase.
Additional Item(s) Excluded from Warranty Coverage (if any):	Non-rechargeable batteries.
Where to Obtain Service:	From a Sharp Authorized Servicer located in the United States. To find the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.
What to do to Obtain Service:	Ship prepaid or carry in your Product to a Sharp Authorized Servicer. Be sure to have Proof of Purchase available. If you ship the Product, be sure it is insured and packaged securely.

TO OBTAIN PRODUCT INFORMATION, CALL 1-800-BE-SHARP OR VISIT www.sharppusa.com

SHARP®

SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey 07430-2135

SHARP CORPORATION

SHARP®

LIMITED WARRANTY

Consumer Electronics Products

Congratulations on your purchase!

Sharp Electronics of Canada Ltd. (hereinafter called "Sharp") gives the following express warranty to the first consumer purchaser for this Sharp brand product, when shipped in its original container and sold or distributed in Canada by Sharp or by an Authorized Sharp Dealer:

Sharp warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, Sharp shall, at its option, repair or replace the product as specified herein.

This warranty shall not apply to:

- (a) Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- (b) Any Sharp product tampered with, modified, adjusted or repaired by any party other than Sharp, Sharp's Authorized Service Centres or Sharp's Authorized Servicing Dealers.
- (c) Damage caused or repairs required as a result of the use with items not specified or approved by Sharp, including but not limited to head cleaning tapes and chemical cleaning agents.
- (d) Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, belts, ribbons, cables and paper.
- (e) Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- (f) Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- (g) Any product received without appropriate model, serial number and CSA/cUL markings.
- (h) Any products used for rental or commercial purposes.
- (i) Any installation, setup and/or programming charges.

Should this Sharp product fail to operate during the warranty period, warranty service may be obtained upon delivery of the Sharp product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized Sharp Service Centre or an Authorized Sharp Servicing Dealer. In home warranty service may be provided at Sharp's discretion on any Sharp television with the screen size of 27" or larger and on any Sharp Over-the-Range Microwave Oven.

This warranty constitutes the entire express warranty granted by Sharp and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of Sharp. To the extent the law permits, Sharp disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this Sharp product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of Sharp to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

WARRANTY PERIODS:

	Parts & Labour (exceptions noted)
Audio Products	1 year
Camcorder	1 year
DVD Products	1 year
Projector	1 year (lamp 90 days)
LCD & Plasma Display TV	1 year
Microwave Oven	1 year (magnetron component-4 additional years)
Television Products	1 year (picture tube component-1 additional year)
VCR Products	1 year
Vacuum Cleaner	1 year

To obtain the name and address of the nearest Authorized Sharp Service Centre or Dealer, please contact:
SHARP ELECTRONICS OF CANADA LTD. 335 Britannia Road East, Mississauga, Ontario L4Z 1W9

For more information on this Warranty, Sharp Extended Warranty Offers, Sharp Canada Products, Accessory Sales, Dealer or Service Locations, please call (905) 568-7140
Visit our Web site: www.sharp.ca



SHARP®
SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430-2135
SHARP CORPORATION



Printed on 100% post-consumer recycled paper.
Imprimé sur 100% de papier recyclé.
Impreso en 100% de papel reciclado de postconsumo.
Papel 100% Reciclado-Cuidado do Meio Ambiente.

Printed in Japan
Imprimé au Japon
Impreso en Japón
Impresso no Japão
TINS-B253WJZZ
04P05-JMM