

SONY

**Car Stereo
Service Bulletin**

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: XR-250/6300

No. 110

Subject: Part Number Correction - Tuner
Preset Buttons


Date: September 19, 1988

Symptom:
(**)

The part numbers for the Tuner Preset Buttons (Numbers 3 to 6) are listed incorrectly on page 24 of the service manual. Please note the correct part numbers are listed below:

Solution:

Ref. No.	Description	Part Number	
		Incorrect	Correct
58	Preset Button No. 3	3-391-757-01 (XR-6300)	3-391-758-21 (XR-6300)
		3-391-757-21 (XR-250)	3-391-758-81 (XR-250)
53	Preset Button No. 4	3-391-758-21 (XR-6300)	3-391-757-01 (XR-6300)
		3-391-758-61 (XR-250)	3-391-757-21 (XR-250)
52	Preset Button No. 5	3-391-758-31 (XR-6300)	3-391-757-11 (XR-6300)
		3-391-758-71 (XR-250)	3-391-757-31 (XR-250)
51	Preset Button No. 6	3-391-757-11 (XR-6300)	3-391-758-31 (XR-6300)
		3-391-757-31 (XR-250)	3-391-758-71 (XR-250)

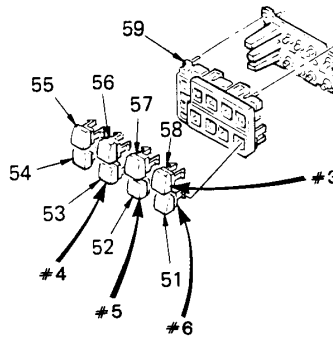

Reference: KCP

PRINTED IN U.S.A.
CSA-14888-3

Tuner/Tape Deck
CSA-14