

**Model:** CDX-81, CDX-91**No.** 420**Subject:** AUDIO DROPOUTS**Date:** March 28, 1997**Symptom:****(257)**

Audio Dropouts may be heard while certain CD's are being played. This may be caused by subcodes not being read correctly, which causes data to dropout. The audio passage may **sound** as if the CD is spinning faster.

**Solution:**

Replace IC31, the resistors, and capacitor, with the new parts shown in the table below.

| REF     | FORMER                  |              | NEW                    |              |
|---------|-------------------------|--------------|------------------------|--------------|
|         | DESCRIPTION             | PART NUMBER  | DESCRIPTION            | PART NUMBER  |
| IC31    | CXP-84332-020Q          | 8-752-871-74 | CXP-84332-044Q         | 8-752-883-12 |
| R50,R51 | 15K OHM RESISTOR        | 1-216-835-11 | 18K OHM RESISTOR       | 1-216-836-11 |
| C50     | 12 PICO FARAD CAPACITOR | 1-163-229-11 | 6 PICO-FARAD CAPACITOR | 1-163-223-11 |

**Applicable Serial Numbers:**

|        |             |
|--------|-------------|
| CDX-81 | up to 48940 |
| CDX-91 | up to 33310 |

