

# Car Stereo Service Bulletin

**CSA-14**

Sony Service Company - Technical Services  
A Division of Sony Electronics Inc.  
Sony Drive, Park Ridge, New Jersey 07656

**Model:** CDX-65/65RF**No.** 330**Subject:** Controller's Display Shows "FULL" When Entering Disc Titles.**Date:** November 21, 1995**Symptom:**  
(13)

The changer controller's display shows "FULL" when trying to enter disc titles, even though the customer has not yet entered the maximum of 110 disc titles. This occurs because some units did not have the factory-entered titles erased before they were shipped from the factory.

**Solution:** Erase the factory-entered disc titles by using one of the procedures shown below.

**Procedure 1- Erasing all previously entered disc titles at once. Caution!** This procedure will also erase titles entered by the customer.

1- Connect the changer to an "XR" type Unilink head unit (i.e. XR-U330).  
Do not use an XR-U770 or XR-U880.

2- Remove the disc magazine.

3- Place the "XR" head unit in the test mode by pressing the "4" key once, then the "5" key once, then press and hold the "1" key for more than 2 seconds. All segments of the LCD will light to indicate that the test mode has been entered.

4- Press the "CD" key (ERR-0010 will appear on the display).

5- Press the "FILE" key for more than 2 seconds (a beep will be heard).

To confirm that all titles have been erased, use the following procedure:

1- Insert a magazine into the changer.

2- Press the "CD" key.

3- Press the "FILE" key for more than 2 seconds.

4- Press the "5" key while pressing the "SEL" key. The display should show "NO DATA".

5- Press the "FILE" key for more than 2 seconds.



**Procedure 2- Erasing disc titles individually (using an "XR" type controller).**

- 1- Play any disc.
- 2- Press the "FILE" key for more than 2 seconds.
- 3- Press the "5" key while pressing the "SEL" key.
- 4- Press the "+" or "-" key until the disc title to be erased is shown on the display.
- 5- Press the "SEL" key for more than 2 seconds.
- 6- Repeat steps 4 and 5 until all unnecessary titles have been erased.
- 7- Press the "FILE" key for more than 2 seconds. The unit will enter the normal play mode.

**Procedure 3- Erasing disc titles individually (using the controller and infra-red remote commander supplied with RF models)..**

- 1- Play any disc.
- 2- Press the "LIST" key for more than 2 seconds.
- 3- Press the "DSPL" key for more than 2 seconds..
- 4- Press the "+" or "-" key until the disc title to be erased is shown on the display.
- 5- Press the "SEL" key for more than 2 seconds.
- 6- Repeat steps 4 and 5 until all unnecessary titles have been erased.
- 7- Press the "DSPL" key for more than 2 seconds.
- 8- Press the "LIST" key for more than 2 seconds. The unit will enter the normal play mode.

