

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: RM-P101/P102/P103/P700A/P700E/E7 **No. 55**

Subject: Resetting or Clearing the Remote Control **Date:** January 2, 1989

Symptom:
(**)

Under some conditions, the Remote Control may "lock-up". This could be caused by trying to memorize an incompatible remote command or by interference from outside sources such as lights during the learning sequence.

The instructions that follow will reset the Remote Controller. In some situations, it may also be desirable to completely erase the user programmed memory. This can also be accomplished by following the same instructions.

Important Note: These "reset" instructions will clear the entire user programmed memory. It will not affect the Sony standard codes in memory.


Solution: RM-P101/102/103

Step 1 - Place the unit in "Learn" mode.

Step 2 - Press and hold the "VTR Rewind" button in the upper left corner of the control.

Step 3 - Press the "Muting" button in the lower right corner of the control.

Note: If the "Ready" light is blinking after this sequence is performed, it means that the buttons were not pressed in the correct sequence. Please repeat the process.

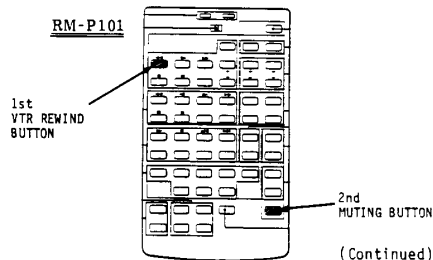

(Continued)

Reference: Technical Department

PRINTED IN U.S.A.
CSA-131288-5


Miscellaneous
CSA-13

RM-P700A/P700E

- Step 1 - Open the cover.
- Step 2 - Place the unit in "Learn" mode.
- Step 3 - Press and hold the "Sleep" button in the upper right corner of the control.
- Step 4 - Press the "Tape Deck Stop" button in the lower left corner of the control.

Note: If the "Ready" light is blinking after this sequence is performed, it means that the buttons were not pressed in the correct sequence. Please repeat the process.

RM-P700A/P700E

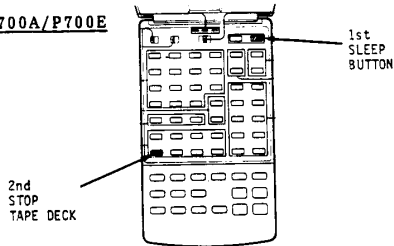

RM-E7

- Step 1 - Open the cover.
- Step 2 - Place the unit in "Learn" mode.
- Step 3 - Press and hold the "VDP FF" button in the upper right corner of the control.
- Step 4 - Press the "TV/Video" button in the lower left corner of the control.

Note: If the "Ready" light is blinking after this sequence is performed, it means that the buttons were not pressed in the correct sequence. Please repeat the process.

RM-E7

