

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: TC-W7ES/W9ES/W600/WR700/WR800

No. 76

Subject: High Speed Adjustment Procedure

Date: June 28, 1989

Symptom:
(**)


The high speed adjustment procedure, as listed in the manual, is incomplete.

- Solution:**
1. Power down.
 2. Ground Pin 40 of the System Control IC. See table below.
 3. Power Up.
 4. Press and hold the high speed dubbing button, while setting the speed, as per manual specification.
 5. Release it to set the normal speed, as per manual specifications.

Note: High speed must be set first since it will affect low speed adjustment.

Model	System Control Pin #	Connector #
TC-W7ES/W600	40	CN701
TC-W9ES/WR800	40	CN701
TC-WR700	40	CN811

[AUDIO SYSTEM CONTROL BOARD]

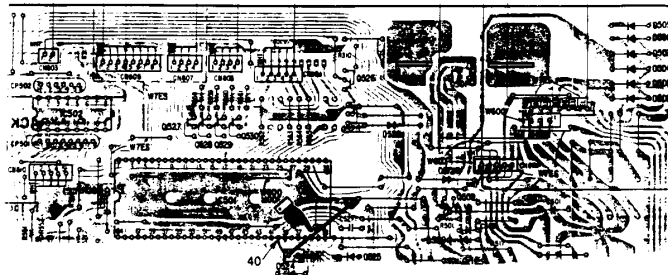

Reference:

PRINTED IN U.S.A.
CSA-13689-1

CSA-13
Tape Deck