

**SONY**

Hi-Fi Products  
**Service Bulletin**

Sony Service Company - Technical Services  
A Division of Sony Corporation of America  
Sony Drive, Park Ridge, New Jersey 07656

**Model:** CDP-227ESD/507ESD/707ESD

**No. 84**

**Subject:** Non-Selected Piece Is Played  
In PGM Mode


**Date:** August 7, 1989

**Symptom:**  
(54)

When skipping from the first selection to a physically non-adjacent track in the PGM mode, a piece of music is momentarily heard (e.g. when skipping from track 1 to track 5, the beginning of track 2 is heard for c. 0.3 sec.). This symptom is only apparent on discs which the music signal starts at 00M 00S.

**Solution:** This is caused by a malfunction in the muting circuit. Replace the mechanism control IC (IC301).

Designation	Description	Part Number	
		Former	New
IC301	MSM6408 Mechanism Micro	8-759-972-50	8-759-971-41

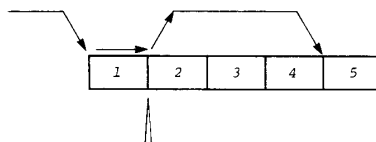

Compact Disc  
CSA-13