

**SONY**

Hi-Fi Products  
Service Bulletin

Sony Service Company - Technical Services  
A Division of Sony Corporation of America  
Sony Drive, Park Ridge, New Jersey 07656

**Model:** D-35

**No. 154**

**Subject:** Directions For Setting Clock

**Date:** December 26, 1990

**Symptom:**  
(13)

The service manual does not include a proper sequence of events for setting the clock.

**Solution:** Please update your service manual with the correct procedure listed below:

Remove all power sources (AC, Ni-Cad Battery, Lithium Battery).

1. Connect AC power.
2. Install Lithium Battery - CR2016  
**Note:** If an abnormal indication should appear in the display, then remove AC power and the Lithium Battery and reinstall them.
3. Press Time and Set Buttons at the same time until the Hour digit and Clock indicator flash on the display.
4. Press +10 button to select AM or PM.
5. Set the current time with the numeric buttons. A mistake may be corrected by pressing the "C" button.
6. Press Set when finished entering correct time. The display stops flashing.  
**Note:** The unit will accept any inadequate number. This is not a malfunction. Input a correct number in 12-hour format.

CSA-13 Portable Compact Disc