

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: CDP-C70/C7ESD

No. 171

Subject: Test Mode Information

Date: February 28, 1991

Symptom:
(**)

There are no instructions listed in the service manual for putting the unit into Test Mode.

Solution: To put the unit into Test Mode, perform the following procedure:

- A. To Play Disc 5:
 - 1. Ground IC301/Pin 47 (check TP).
 - 2. Turn unit On.

- B. To Check the Display:
 - 1. Ground IC801/Pin 65.
 - 2. Turn unit On.
 - 3. Press each key and check the display (refer to attached table).

(See Display Table on Next Page)

CSA-13 Multi-Disc Player

DISPLAY TABLE

BUTTON PRESSED		DISPLAY										SEGMENT BREAKDOWN								
		1	2	3	4	5	6	7	8	9	10									
	ALL																			
	1																			
	DISC																			
	S																			
		D	I	S	C		S	K	I	P										
		P	L	A	Y															
		P	A	U	S	E														
		P	T	O	P	E														
		O	P	E	N	/	C	L	O	S	E									
PROGRAM	PGM OVER	P	P	R	O	G	R	C	L	M	E									
SHUFFLE	SHUFFLE	S	S	H	U	F	F	A	L	M	E									
PLAY MODE		R	P	L	A	Y	A	T	M	O	D	E								
REPEAT	REPEAT																			
DISC 1																				
2																				
3																				
4																				
5																				
TRACK 1																				
2																				
3																				
4																				
5																				
6																				
7																				
8																				
9																				
10																				
+10																				
CHECK																				
CLEAR																				
FILE																				
ERASE		E	R	A	S	E														
TIME MEMO		D	I	S	P	L	A	Y												



ZFXJLHCHTFOBPA

