

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
 A Division of Sony Corporation of America
 Sony Drive - Park Ridge, New Jersey 07656

Model: D-303

No. 237

Subject: Unit Will Not Play


Date: January 20, 1992

Symptom:
 (12) Unit will not play.

- Solution:**
1. Check the current into the laser diode as per instructions on page 4 of the Service Manual:
 2. If the current measured is greater than the allowed range, perform the following:
 - a. Change the optical pick-up block.
 - b. Change R553 from 10K ohms to 33K ohms.

REF. NO.	DESCRIPTION		PART NUMBER
	FORMER	NEW	
910	PICK-UP, OPTICAL	PICK-UP, OPTICAL	X-4921-260-1
R553	10K	33K	1-216-839-11

CSA-13

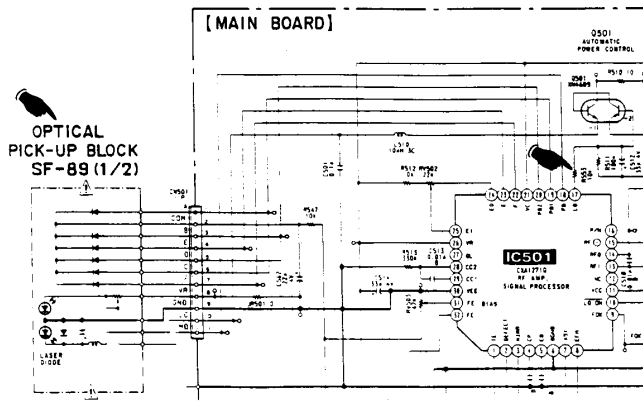

(continued)

Reference: Tech News GADS091-0001


PRINTED IN U.S.A.
 CSA-13192-3

3. After performing Step 2., use green or orange magic marker and mark IC501 as shown.

Applicable Serial Numbers: 24000 and less

4. For units with Serial Numbers 24000 and more, the modification has been performed.
To verify, check:

- a. Label on box as shown:

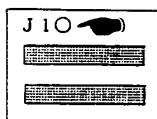

- b. Green or orange mark on IC501

