

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: D-802K

No. 256

Subject: No Power When Using AC Adaptor

Date: March 20, 1992


Symptom:
(11) No power when using AC adaptor.

Solution: Attach a spacer on the DC in jack as shown below. Be sure to attach it at 1mm from the CD in jack edges.

DESCRIPTION	PART NUMBER
SPACER (VOL)	3-376-165-01

After refitting the board with the screw, remove the solder at the DC in jack terminal to loosen the jack; then reposition the jack so that it touches the board without having any play between the DC in jack and the chassis. Afterwards, resolder the terminal.

Serial Numbers Applicable: Up to 62728

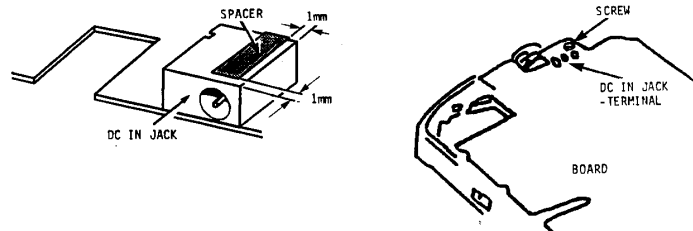

CSA-13 Discman