

SONY

Hi-Fi Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: HTC-D159

No. 340

Subject: Jig board to interface unit to SEN jig now available

Date: April 30, 1993

Symptom:

(**)

A repair jig board and extension cables, which will provide the means for connecting the unit to the SEN jig, are now available.

Solution:

The part numbers for the extension cables and the jig board are shown in the chart below. Connect the jig board, unit and SEN jig as shown in the diagram below.

DESCRIPTION	PART NUMBER
11 PIN CABLE, CONNECTS JIG BOARD TO SEN JIG	J-6181-029-A
15 PIN CABLE, CONNECTS JIG BOARD TO SEN JIG	J-6181-030-A
13 PIN CABLE, CONNECTS UNIT TO JIG BOARD	1-696-860-11
JIG BOARD	J-2501-055-A

Operating the Function Select Switch (SW1) on the jig board

1. When troubleshooting the tape deck portion of the unit, set switch SW1 to the DECK position.
2. When troubleshooting the CD section of the unit, set switch SW1 to the CD position.



PRINTED ON RECYCLED PAPER


Reference: FPR-01104
Autoflagged - NO

(Continued)

PRINTED IN U.S.A.
CSA-13493-9

CSA-13 Compact System

JIG FOR CENTRALIZED POWER SUPPLY SYSTEM

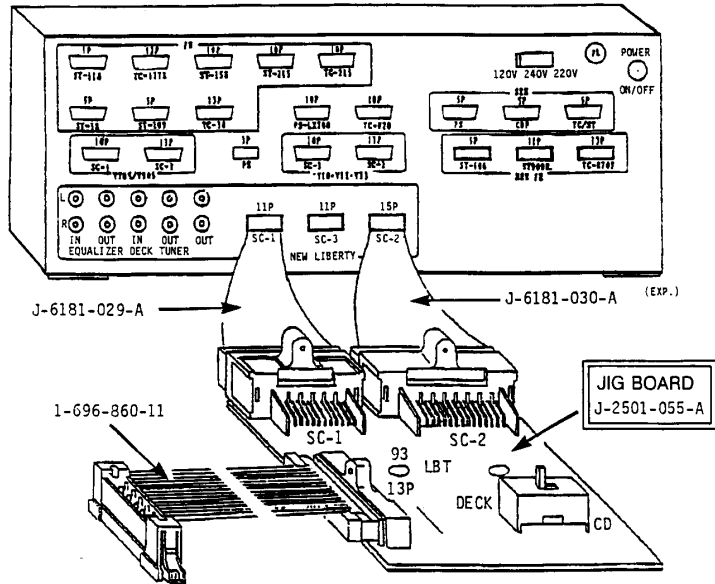

HOW TO USE THE FUNCTION SELECTOR

1. TO CHECK DECK, SELECT THE DECK POSITION OF THE FUNCTION SELECTOR SW.
2. TO CHECK THE CD PLAYER, SELECT THE CD POSITION OF THE FUNCTION SELECTOR SW.