

SONY.

Hi-Fi Products
Service Bulletin

CSA-13

Sony Service Company - Technical Services
A Division of Sony Electronics Inc.
Sony Drive, Park Ridge, New Jersey 07656

Model: D-311

No. 366R1

Subject: LCD Display Doesn't Function Properly.

Date: March 4, 1994

This bulletin supersedes Hi-Fi Service Bulletin No.366.


Symptom:
(13)

LCD display doesn't function properly.

Solution:

1. Replace the damaged LCD flexible flat wire.
2. Stick a lumilar sheet on the point of screw that attaches the open button return spring to the upper panel.

REF	DESCRIPTION	PART NUMBER
-	LUMILAR SHEET	4-958-091-01

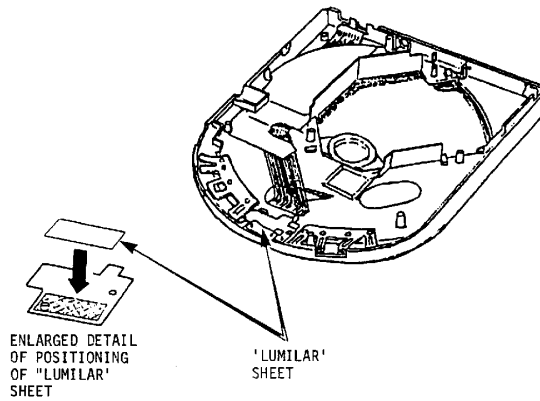

Reference: Tokyo Fax GA-93007
Autoflagged - NO



PRINTED IN USA
CSA-13394-1