

**SONY.**

Hi-Fi Products  
**Service Bulletin**

**CSA-13**

Sony Service Company - Technical Services  
A Division of Sony Electronics Inc.  
Sony Drive, Park Ridge, New Jersey 07656

**Model:** HCD-541

**No. 394**

**Subject:** Extension Board available for powering the HCD-541


**Date:** May 13, 1994

**Symptom:**  
(\*\*)

The HCD-541 can not be powered up without the SA-W541, base unit. An extension board (P/N J-2501-074-A) is available to power the HCD-541 when used with the Sen power supply jig.

**Solution:**

Using the Sen power supply jig, connect the cable used for the LBT-V725 (P/N J-6181-030-A) into the Sen Jig's SC-2, (New Liberty) connector. Attach the cable from the SC-2 connector to CN1 of the HCD-541 extension board (P/N J-2501-074-A). Plug the cable included with the extension board (P/N 1-765-121-11) into the HCD-541 system control connector, which is located on the rear of the unit. See diagram below.

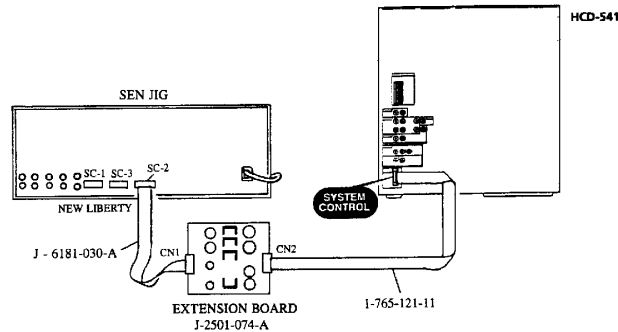

Reference:  
Autoflagged - NO



PRINTED IN USA