

# Hi-Fi Products Service Bulletin

CSA-13

Sony Service Company - Technical Services  
A Division of Sony Electronics Inc.  
Sony Drive, Park Ridge, New Jersey 07656

**Model:** MDS-501

**No.** 417

**Subject:** Track name does not appear  
Applicable Serial no. 504,899 and lower

**Date:** November 30, 1994


**Symptom:**

(\*\*)

When selecting the last track by quickly rotating the Jog dial, the name of the last track does not appear and "No Name" is shown in the display.

**Solution:**

Replace the System controller (on the display board), IC301, M38197MA-071-FP with the improved version M38197MA-076-FP. In addition you must remove the small board located between the Digital board and the Mechanism. Remove both the board and its lead wires. If attached, remove the jumper wires from the Display board and restore the PCB patterns that have been cut (See diagram). Failure to restore the patterns will result in faulty clock and date operation. Note that on some sets there are no patterns cut, instead two jumper wires are missing on the Display board (one jumper is located near S321 and the other near R314). In this case attach the missing jumper wires.

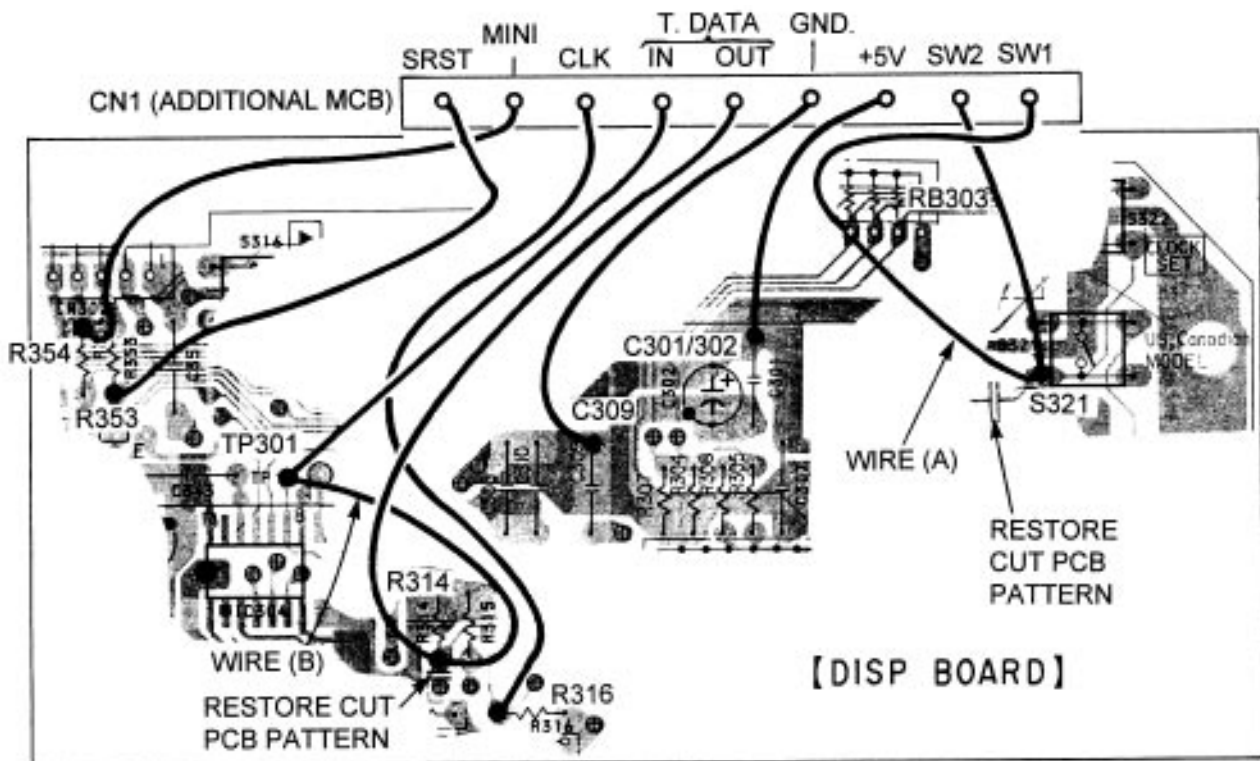





Filename: HFP0417.SB  
Directory: J:\SBDOC\NOV94  
Template: C:\WINWORD\S\_BULL.DOT  
Title: Track name does not appear  
Subject:  
Author: Hoyt Wing Lee  
Keywords:  
Comments:  
Creation Date: 11/30/94 1:42 PM  
Revision Number: 2  
Last Saved On: 11/30/94 1:42 PM  
Last Saved By: Hoyt Wing Lee  
Total Editing Time: 1 Minute  
Last Printed On: 04/01/96 10:04 AM  
As of Last Complete Printing  
Number of Pages: 3  
Number of Words: 205 (approx.)  
Number of Characters: 1,171 (approx.)