

Hi-Fi Products Service Bulletin

CSA-13

Sony Service Company - Technical Services
A Division of Sony Electronics Inc.
Sony Drive, Park Ridge, New Jersey 07656

Model: SAVA3

No. 420

Subject: The Unit Won't Shut Down or Shuts Down Prematurely

Date: December 27, 1994

Symptom:
(12)

The SAVA3 will not shut down after an input signal has been removed or, the unit will shut down while an input signal is still active to the speaker.

Solution:

Replace IC801 syscon, on the system board, and add a 1K 1/4W resistor between pin 1 of CN802 and pin 17 of IC801. Then, cut the foil pattern between these two points. See the diagram below.

REF	DESCRIPTION	PART NUMBER
N/A	1K OHM 1/4 WATT RESISTOR	1-247-713-11



