

Hi-Fi Products Service Bulletin

CSA-13

Sony Service Company - Technical Services
A Division of Sony Electronics Inc.
Sony Drive, Park Ridge, New Jersey 07656

Model: DTC59ES; DTC690

No. 443

Subject: No Play Mode

Date: June 23, 1995


Symptom:

(**)

The unit will not enter PLAY when changing from a FF or REW mode. This is due to tape slack when the mechanism stops.

Solution:

Remove the Slider Reel Lock (ref.#359 p/n 3-368-411-01) and the screw (ref. #397). See diagram below.

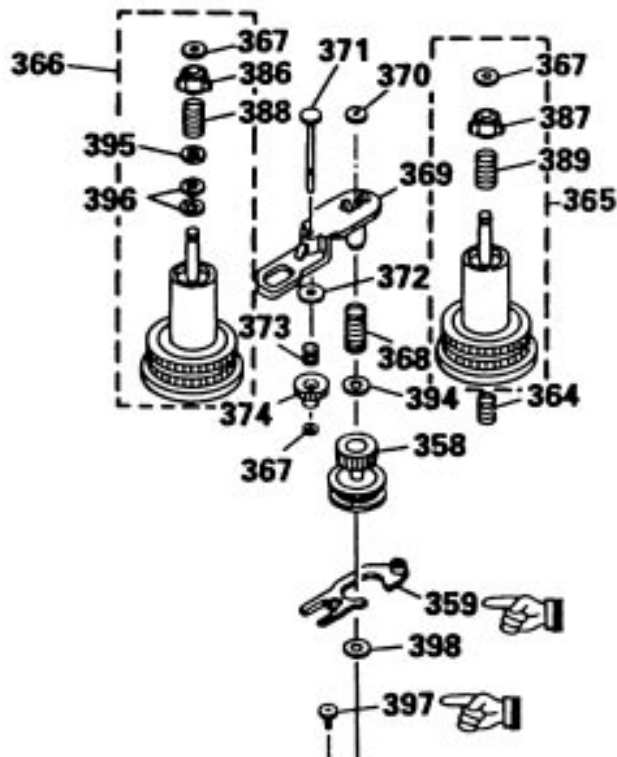

Filename: HFP0443.SB
Directory: J:\SBDOC\JUN95
Template: C:\WINWORD\TEMPLATE\S_BULL.DOT
Title:
Subject:
Author: Hoyt Wing Lee
Keywords:
Comments:
Creation Date: 06/23/95 2:40 PM
Revision Number: 2
Last Saved On: 06/23/95 2:40 PM
Last Saved By: Hoyt Wing Lee
Total Editing Time: 1 Minute
Last Printed On: 04/01/96 9:09 AM
As of Last Complete Printing
Number of Pages: 1
Number of Words: 111 (approx.)
Number of Characters: 635 (approx.)