

Model: D-335

No. 485

Subject: Does Not Operate

Date: April 29, 1996

Symptom:

(12) Does not operate.

Will not accept any key command and LED is distorted.

Solution:

If this symptom occurs:

Make continuity between the upper lid and the PCB ground.

1. File the pattern of power PCB (Fig-1) lightly and clean with alcohol.
2. Add a rubber cushion on the DC Jack. (Fig-2)
3. Put the upper lid and confirm the continuity between the mount screw of upper lid and the negative battery terminal.

REF	DESCRIPTION	PART NUMBER
-	RUBBER CUSHION	3-355-463-01

Applicable Serial Nos: 100,001 to 251,510

