

Model: D-141, D-142CK, D-143, D-242CK, D-245, D-247 **No. 486**

Subject: Unable To Playback Or Power On **Date:** April 29, 1996

Symptom:
(11) Unable to playback or power on.

Solution: If this symptom occurs:
Replace Q402 then add a new resistor (R411) in parallel with C410.

REF	FORMER		NEW	
	DESCRIPTION	PART NUMBER	DESCRIPTION	PART NUMBER
Q402	2SD1963-Q. R	8-729-923-36	2SD1963-Q. R	8-729-923-36
R411			CHIP 470K 1/16W	1-216-853-11

