

## CONFIDENTIAL

CSA-13

Sony Service Company National Technical Services A Division of Sony Electronics Inc. Park Ridge, New Jersey 07656

## Service Bulletin Hi-Fi Products

Model: MHC-C33, TC-WR445

No. 493

**Subject: No Operation of Deck A** 


**Date:** August 29, 1996

Symptom:

(161) The Capstan belt slips due to the excessive load exerted by Cam (A).

**Solution:** Replace Cam (A) with the improved part 3-908-597-05 and Belt (A) with the


improved part 3-913-845-11.

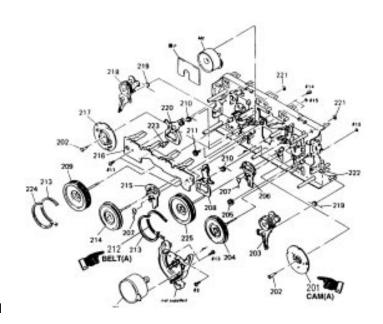

**PROCEDURE:** 

1. Remove the Flywheel

Washers.

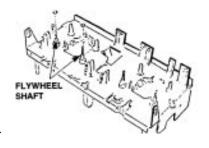


2. Remove the Capstan Motor Lead Connector


EH6P.

Cont.


## 3. REMOVE THE AUDIO BOARD

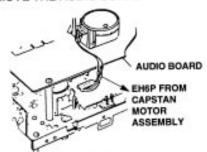


4. REMOVE THE FR BELT

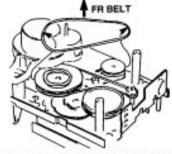

 
 REMOVE THE CAPSTAN BELTS (A) AND (B), AND TENTATIVELY HOOK THEM ON TO THE MOTOR HOLDER




 REMOVE THE CAPSTAN MOTOR ASSEMBLY. THEN INSTALL THE NEW CAPSTAN BELT (A)

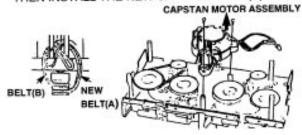


7. REMOVE THE FLYWHEELS

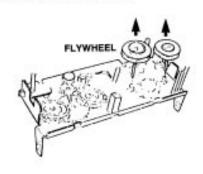


8. REMOVE THE FR LEVER

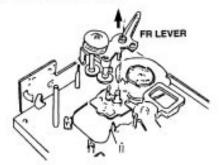


9. REMOVE THE TRIGGER LEVER

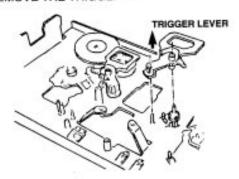

10. REMOVE CAM (A). TURN THE SCREW CLOCKWISE

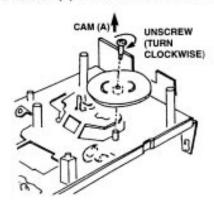

 INSTALL THE NEW CAM (A). APPLY GL-701 GREASE ON THE SPOTS INDICATED. TURN SCREW COUNTER-CLOCKWISE

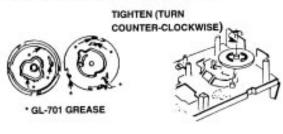


(Continued)


## 12. INSTALL THE TRIGGER SPRING




13. RE-INSTALL THE TRIGGER LEVER. SIDE A
OF THE TRIGGER SHOULD BE LOCATED
ALONGSIDE THE PIN. MAKE SURE THAT THE
MARKED HOLE ON THE CAM GEAR IS POINTING
IN THE DIRECTION OF THE ARROW SHOWN

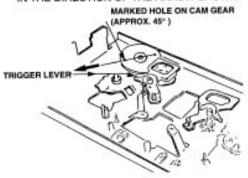


 HOOK THE SPRING, TURN THE FR LEVER UPSIDE DOWN AND RE-INSTALL

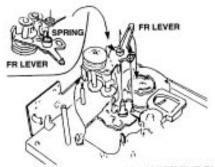


15. RE-INSTALL THE FLYWHEELS

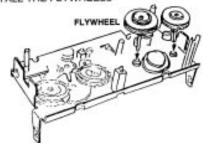


16. RE-INSTALL THE CAPSTAN MOTOR ASSEMBLY CAPSTAN MOTOR ASSEMBLY

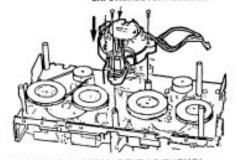

17. PLACE THE CAPSTAN BELT AS SHOWN

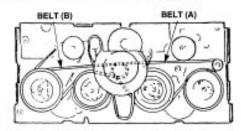

 18. PLACE THE FR BELT AROUND THE FLYWHEEL



19. RE-INSTALL THE AUDIO BOARD

