

Model: MZ-R3

No. 518

Subject: Unit powers off during recording/ powers on by itself.

Date: February 11, 1997


Symptom:
(212)

Unit will power off while in record or play back mode, or unit will power on by itself.


Solution:

Replace S817 (the open switch) and change C825 as described below.

REF	FORMER		NEW	
	DESCRIPTION	PART NUMBER	DESCRIPTION	PART NUMBER
S817	SWITCH, PUSH (1 KEY)	1-572-467-31	REPLACE WITH SAME TYPE	
C825	.01UF CHIP CAP	1-164-118-11	.022UF CHIP CAP	1-115-467-11

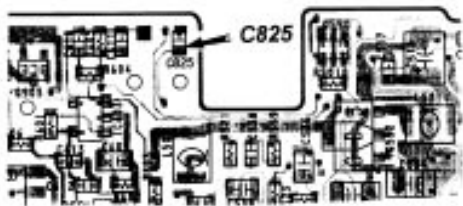

[MAIN2 BOARD] (SIDE B)

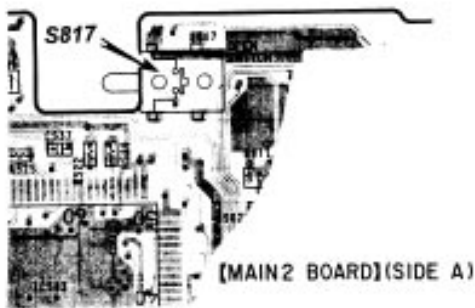

[MAIN2 BOARD] (SIDE A)

