

Model: CDP-XA7ES**No.** 529**Subject:** Disc Tray Will Not Open**Date:** May 23, 1997**Symptom:****(22)**

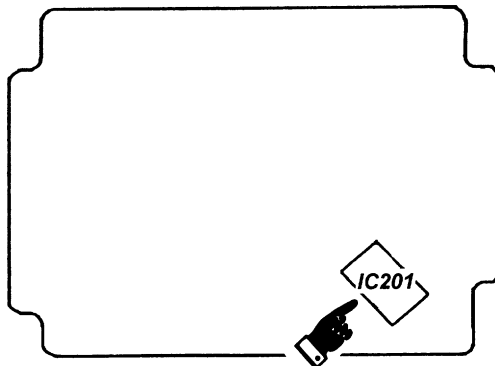
If the customer complaint is any of the following:

- 1.) While in PLAY mode or STOP mode the Disc Tray does not respond when the OPEN/CLOSE button is pushed.
- 2.) If the EDIT FADE TIME is set to 10 minutes and the power is switched ON/OFF the fade time changes to 5 minutes.

Solution:

Replace the Microprocessor and resistor listed below.

REF	FORMER		NEW	
	DESCRIPTION	PART NUMBER	DESCRIPTION	PART NUMBER
IC201	CXP84120-025Q	8-752-864-35	CXP84120-064Q	8-752-883-09
R281	680 OHM 1/4W	1-247-711-11	6.8K OHM 1.4W	1-249-415-11

SERVO BOARD**LOADING SWITCH BOARD**