


- |                 |  |                  |
|-----------------|--|------------------|
| REAR LCH+ 1     |  | 7 REAR RCH+      |
| REAR LCH- 2     |  | 8 REAR RCH-      |
| FRONT LCH+ 3    |  | 9 FRONT RCH+     |
| FRONT LCH- 4    |  | 10 FRONT RCH-    |
| BATT 5          |  | 11 ACC           |
| NC 6            |  | 12 GND           |
| DK OUT 13       |  | 20 NC            |
| AMP-REM 14      |  | 21 ANT-REM       |
| REM-IN 15       |  | 22 AUX INPUT LCH |
| REM-OUT 16      |  | 23 AUX INPUT GND |
| LINE OUT LCH 17 |  | 24 AUX INPUT RCH |
| LINE OUT GND 18 |  | 25 GND (ANT)     |
| LINE OUT RCH 19 |  | 26 ANT           |

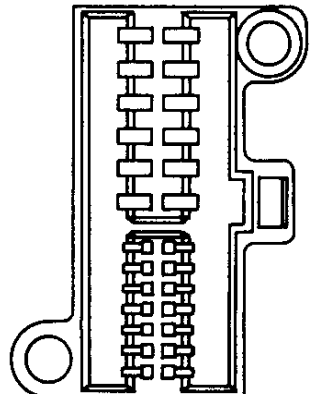

**CAUTION**

The pin assignment shown above is only for the XR-7082 SONY

SONY XR-7082  
 HTTP://WWW.NEONET.LV/AUTORADIO  
 FAX:+371 7184532  
 E-Mail:juris@mailbox.neonet.lv