

# XR-U550/U550RDS/U551RDS XR-U660/U660RDS/U661RDS

## SONY SERVICE MANUAL

*US Model*

*XR-U550/U660*

*Canadian Model*

*XR-U550*

*AEP Model*

*XR-U550RDS/U551RDS*

*XR-U660RDS/U661RDS*

*UK Model*

*XR-U551RDS/U661RDS*

*E Model*

*XR-U550/U660*

### CORRECTION-3

Correct your service manual as shown below.

 : Indicates corrected portion

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
57	3	X-3365-035-1	SWITCH ASSY	—	Not supplied —