

MHC-D60/GR7/GR7J/RX70

SERVICE MANUAL

US Model
MHC-D60/RX70

Canadian Model

AEP Model

UK Model

MHC-RX70

E Model

MHC-GR7/GR7J

Australian Model

MHC-GR7

- MHC-D60/GR7/GR7J/RX70 are composed following models.
As for the service manual, it is issued for each component model,
then, please refer to it.

COMPONENTS MODEL NAME FOR MHC-D60/GR7/GR7J/RX70

	MHC-D60	MHC-GR7		MHC-GR7J	MHC-RX70	
COMPACT DISC DECK RECEIVER SYSTEM	HCD-D60	HCD-GR7		HCD-GR7J	HCD-RX70	
SPEAKER SYSTEM	SS-L80	SS-L80 (Black Model)	SS-L80H (Silver Model)	SS-L80H	SS-L80 (Black Model)	SS-L80H (Silver Model)

SPECIFICATIONS

General

Power requirements

120 V AC, 60 Hz (US, CND model)
120 V AC, 50/60 Hz (MX model)
220-230 V AC, 50/60 Hz
(AEP, UK, G, AED, EE, CIS model)
220-240 V AC, 50/60 Hz (AUS, SA, TH model)
110-120 V or 220-240 V AC, 50/60 Hz
Adjustable with the voltage selector
(OTHER models)

Power consumption

115 W (AEP, UK, G, AED, EE, CIS model)
195 W (US, CND model)
135 W (OTHER models)

• Abbreviation

CND : Canadian model
G : German model
EE : East European model
AUS : Australian model
TH : Thailand model
AED : Northern European model
SA : South African model
MX : Mexican model

Supplied accessories

AM loop aerial (1)
Remote RM-SD70 (1)
Sony SUM-3 (NS) batteries (2)
FM lead aerial (1)
Speaker cords (2)

Design and specifications are subject to change without notice.

COMPACT Hi-Fi STEREO SYSTEM



SONY®

PARTS LIST

NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• Abbreviation

CND : Canadian model
 G : German model
 EE : East European model
 EA : Saudi Arabia model
 MX : Mexican model

SA : South African model
 SP : Singapore model
 HK : Hong Kong model
 TH : Thailand model
 TW : Taiwan model
 AUS : Australian model
 AED : Northern European model
 E3 : 240 V AC AREA

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
	1-501-374-11	ANTENNA, LOOP	
	1-501-659-11	ANTENNA (FM) (EXCEPT AEP, UK, G, AED, EE, CIS)	
	1-501-807-11	ANTENNA, (FM) (AEP, UK, G, AED, EE, CIS)	
	1-769-306-11	CORD, SPEAKER (SS) (2 m)	
	3-859-542-11	MANUAL, INSTRUCTION (ENGLISH) (US/CND/E/EA/MY/SP/HK/TW/MX/AUS/SA)	
	3-859-542-21	MANUAL, INSTRUCTION (FRENCH) (CND)	
	3-859-542-31	MANUAL, INSTRUCTION (FRENCH, SPANISH) (E/EA/MY/SP/HK/TW/MX)	
	3-859-542-41	MANUAL, INSTRUCTION (CHINESE) (E3/EA/MY/SP/HK/TW)	
	3-859-542-51	MANUAL, INSTRUCTION (ARABIC) (EA)	
	3-859-543-11	MANUAL, INSTRUCTION (ENGLISH) (AEP, UK, EE, CIS)	
	3-859-543-21	MANUAL, INSTRUCTION (FRENCH, SPANISH, PORTUGUESE) (AEP)	
	3-859-543-31	MANUAL, INSTRUCTION (GERMAN) (AEP, G)	
	3-859-543-41	MANUAL, INSTRUCTION (DUTCH, ITALIAN) (AEP)	
	3-859-543-51	MANUAL, INSTRUCTION (DANISH, FINISH, SWEDISH) (AED)	
	3-859-543-61	MANUAL, INSTRUCTION (POLISH, RUSSIAN) (EE, CIS)	
	3-859-763-11	MANUAL, INSTRUCTION (HUNGARIAN) (EE, CIS)	
	4-979-371-01	COVER, BATTERY (for RM-SD70)	
	8-917-581-90	REMOTE COMMANDER (RM-SD70)	