

SONY®

Service Bulletin

NO:ME2-02-003

SUBJECT: No Display

DATE: 7/11/2002

MODEL (S): CDXCA660X CDXCA650X CDXL550X CDXCA750X
CDXCA760X XRCA640X XRCA600X MDXCA680X

Symptom: Display disappears when the front panel is pushed.

Solution: Loosen the each screw on the front panel, and pull the connector to the top, then fasten the screws again.(see the picture below)

Clean the front panel connector and sub-panel connector with alcohol.



Loosen the each screw

Pull to the downside

Sony of Canada Ltd.

115 Gordon Baker Road, Toronto, Ontario M2H-3R6
NATIONAL LAB - CONSUMER SERVICE

ME02XAU504