SONY

Technical Bulletin

Date	Ref. No.	Model	DT
16.07.99	IP00399	CMD-C1	
Subject			IRIS
No Display for Battery Charging			

SYMPTOM

No power on, and after connecting to the battery charger the phone does not switch on and the display shows no charging image.

CAUSE

If the battery is completely discharged, the charging procedure needs a minimum time of 30 minutes before the display will show the normal images.

SOLUTION

- 1. Wait at least 30 minutes for the display to show the normal images.
- 2. Then charge the battery for a minimum of 5 hours.