


A { CHROMINANCE, AUDIO H.OUT, V.OUT POWER SYSTEM CONTROL }

E
F
G
H
I
J
K
L
M
N
O

RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
 www.rtv-horvat-dj.hr

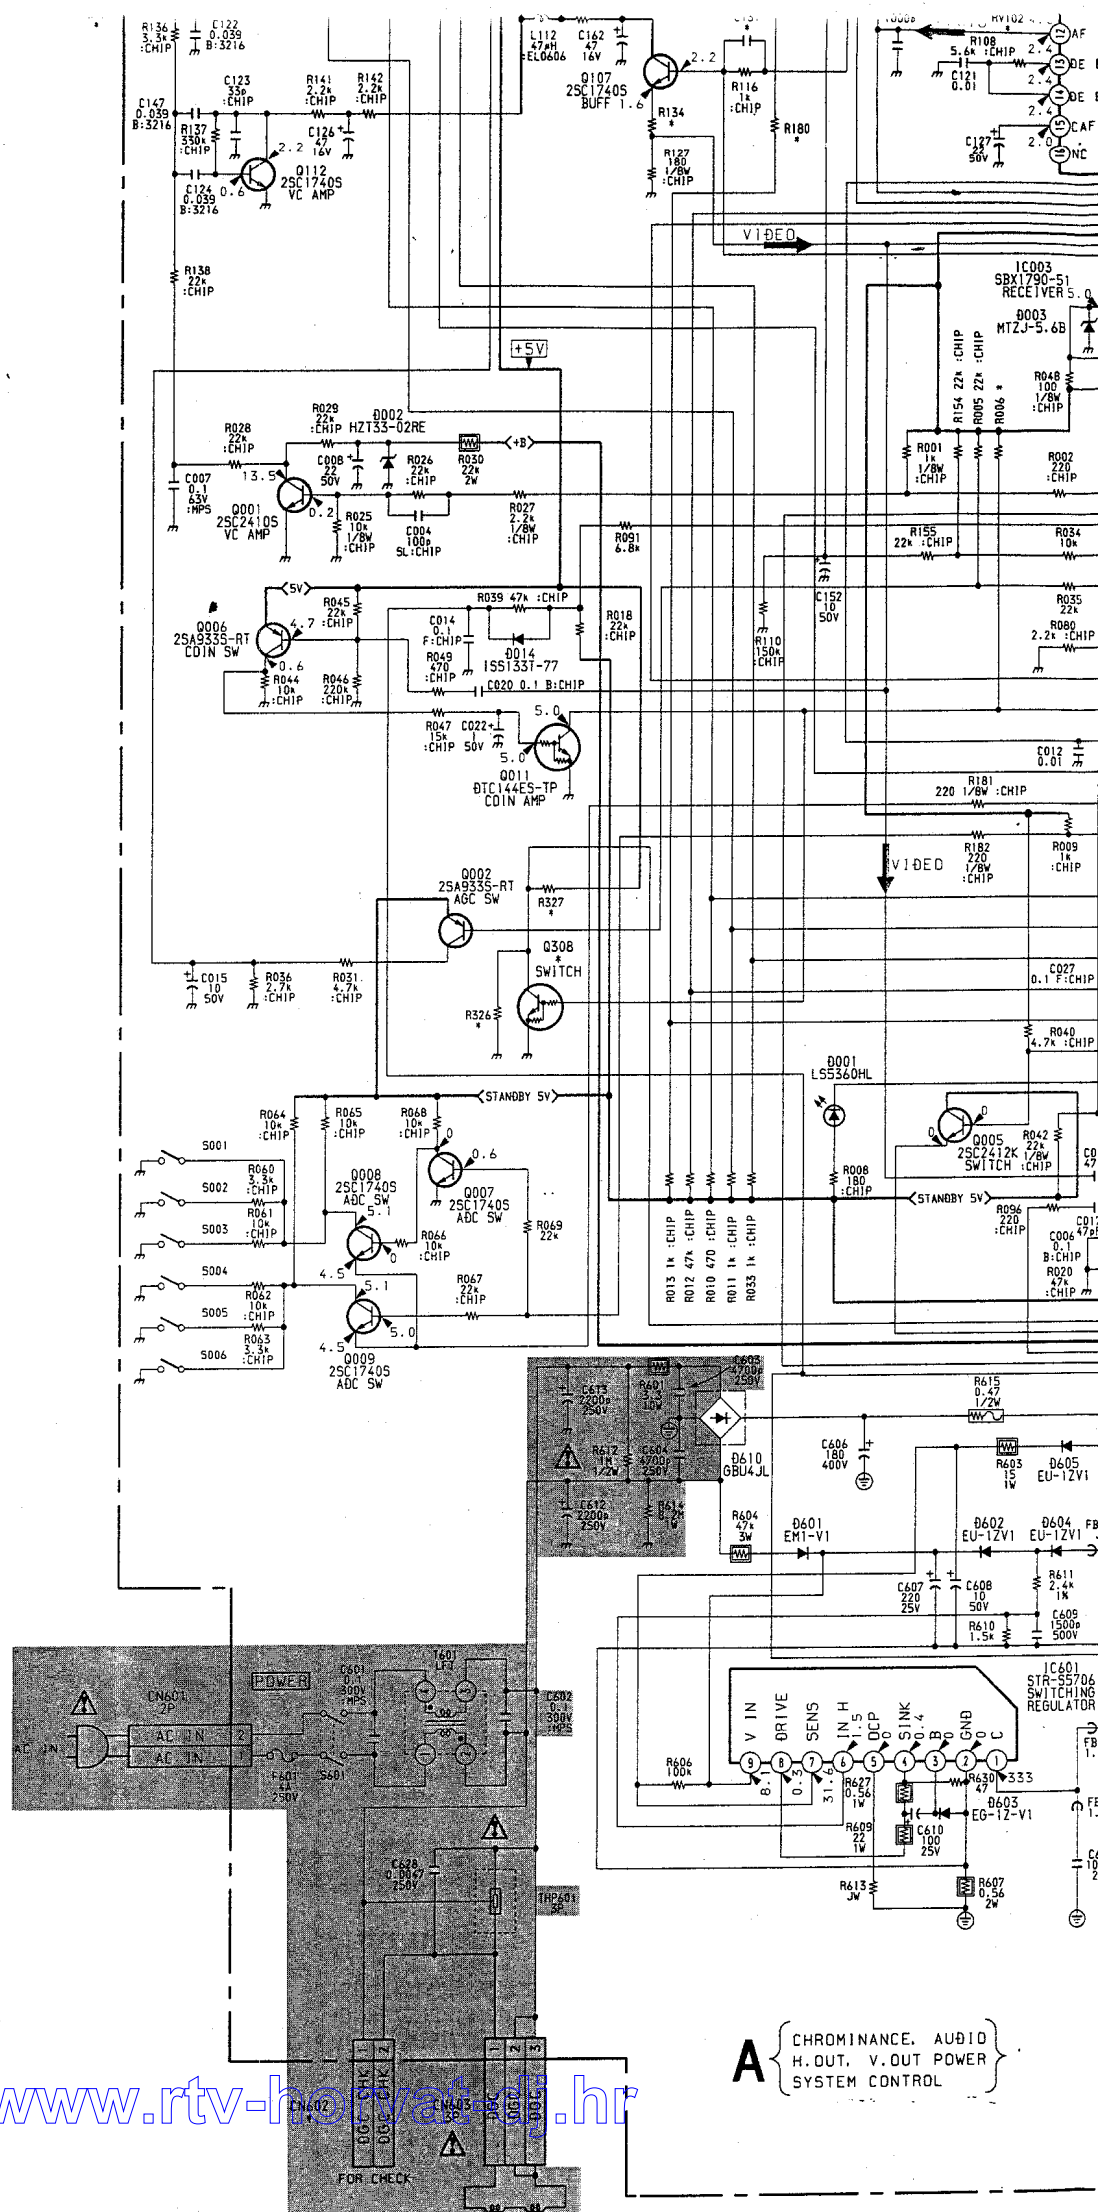

www.rtv-horvat-dj.hr

A { CHROMINANCE, AUDIO
H. OUT, V. OUT POWER
SYSTEM CONTROL }

A

B

C

D

E

F


G


H

I

J

K

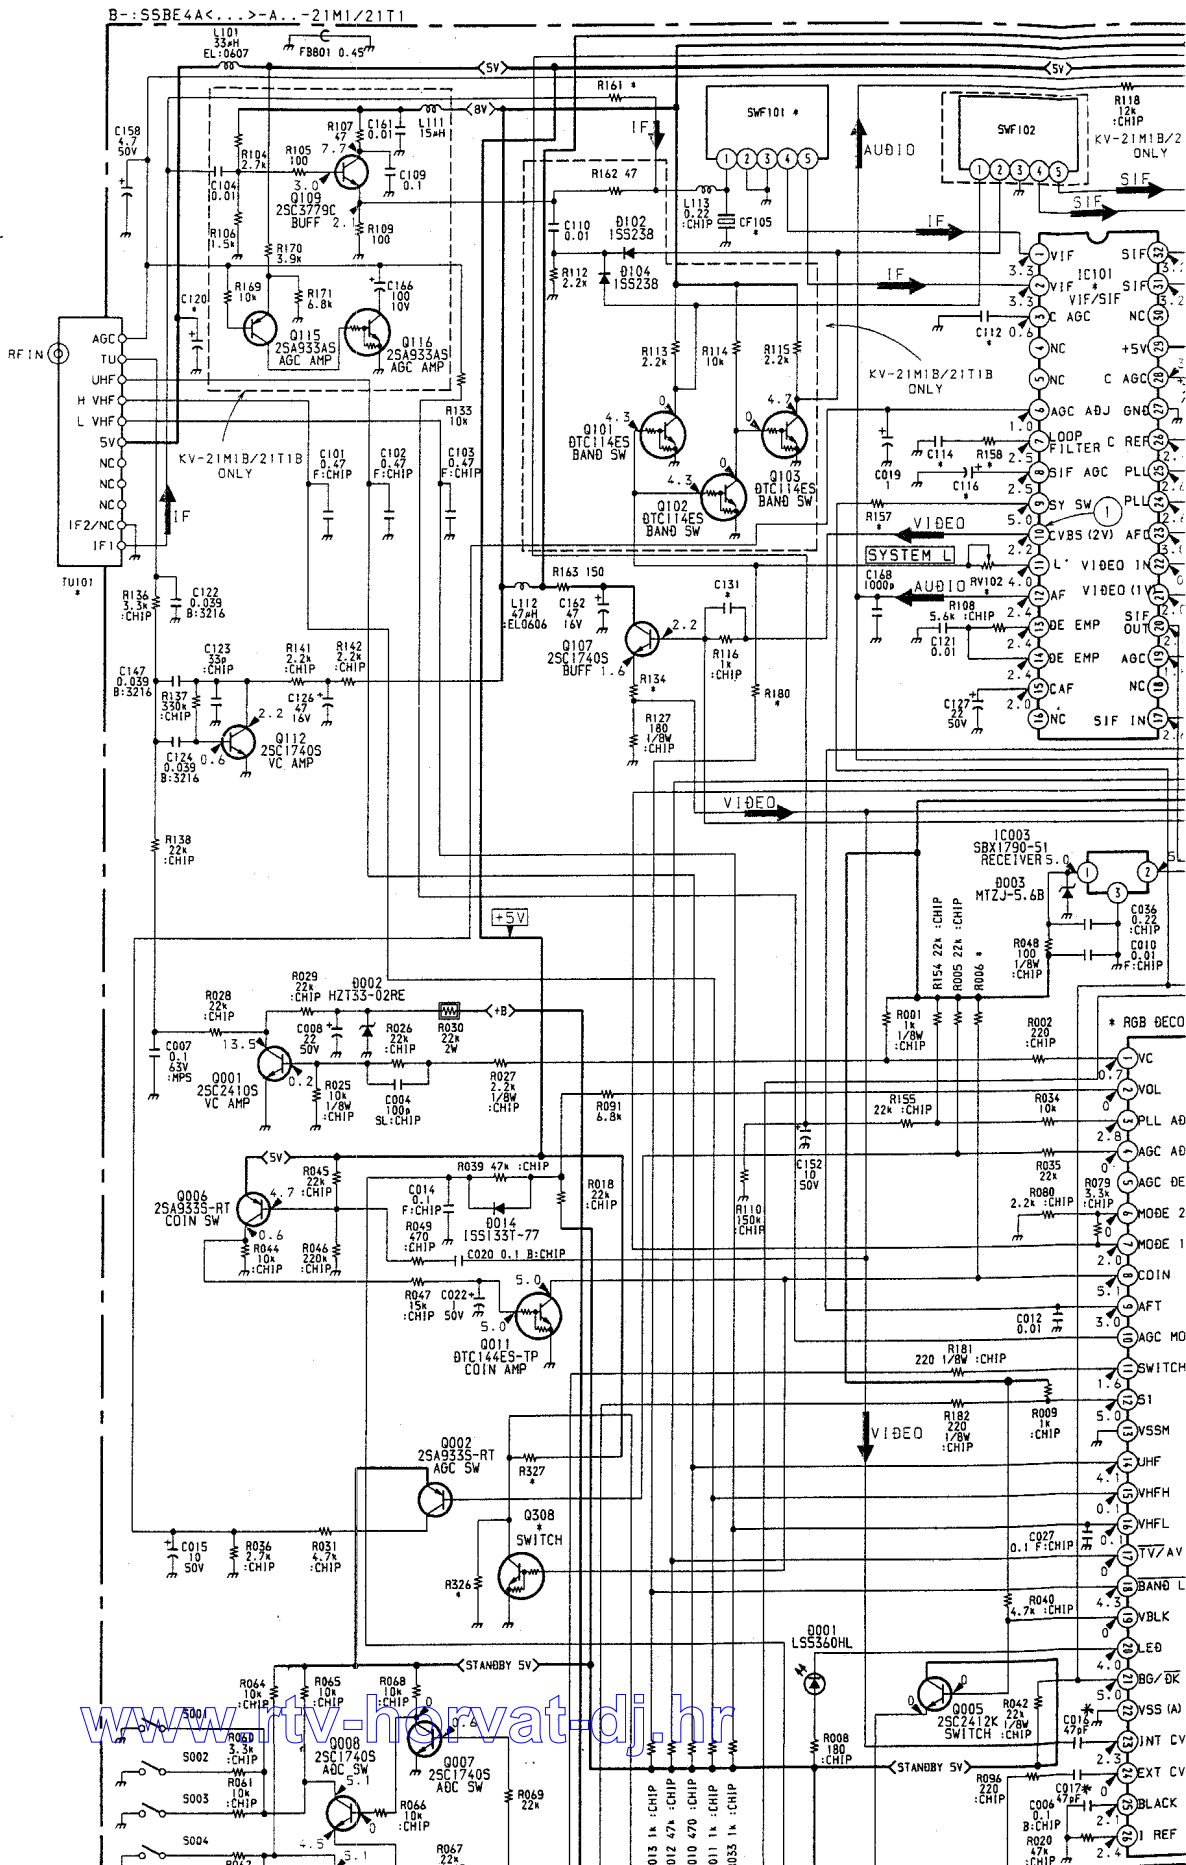

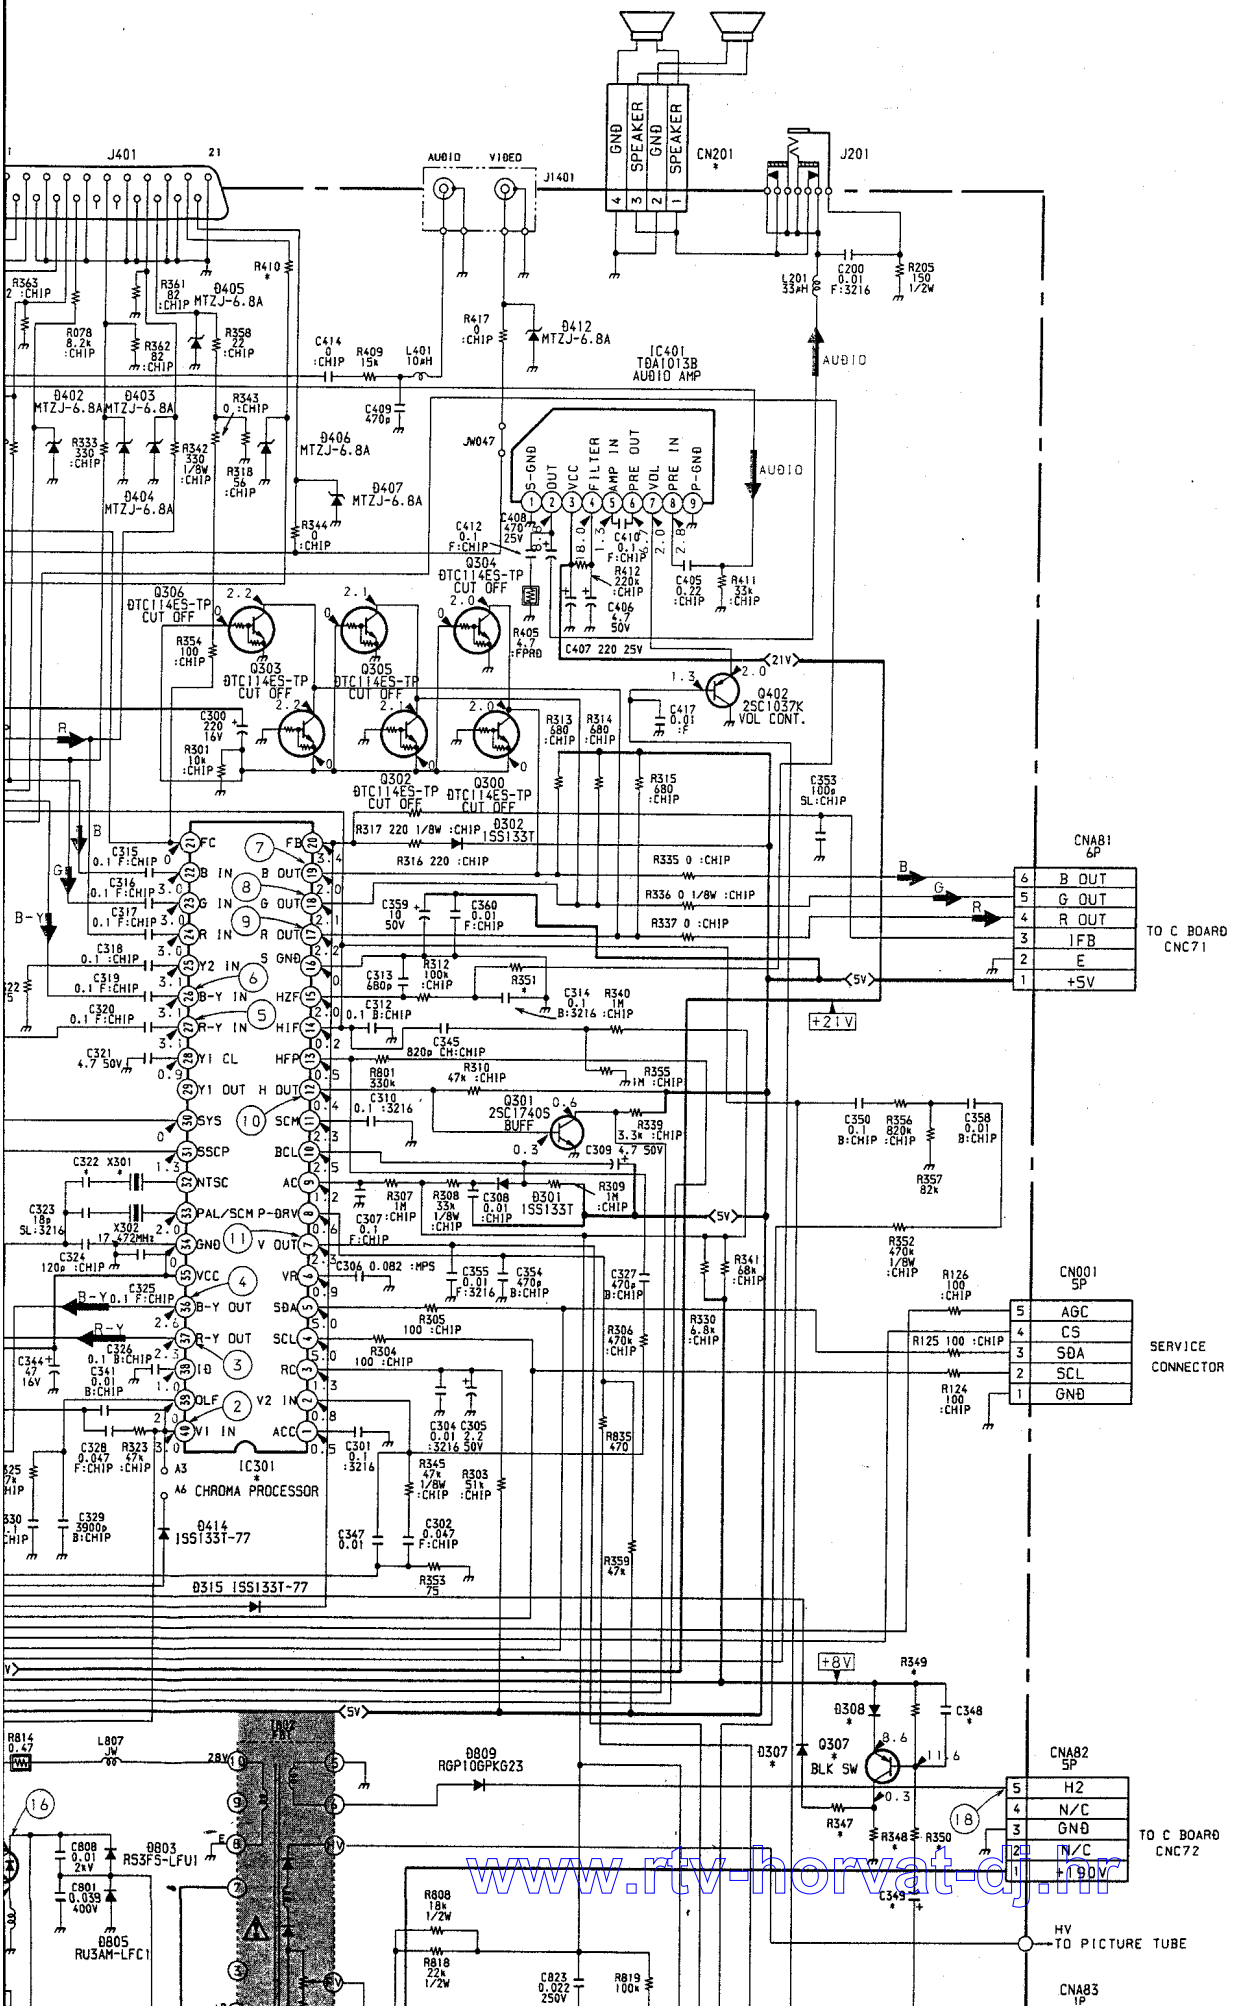


1 2 3 4 5 6 7

A
B
C
D
E
F
G
H
I


B-:SSBE4A<...>-C...-21M1/21T1

C (R. G. B OUT)


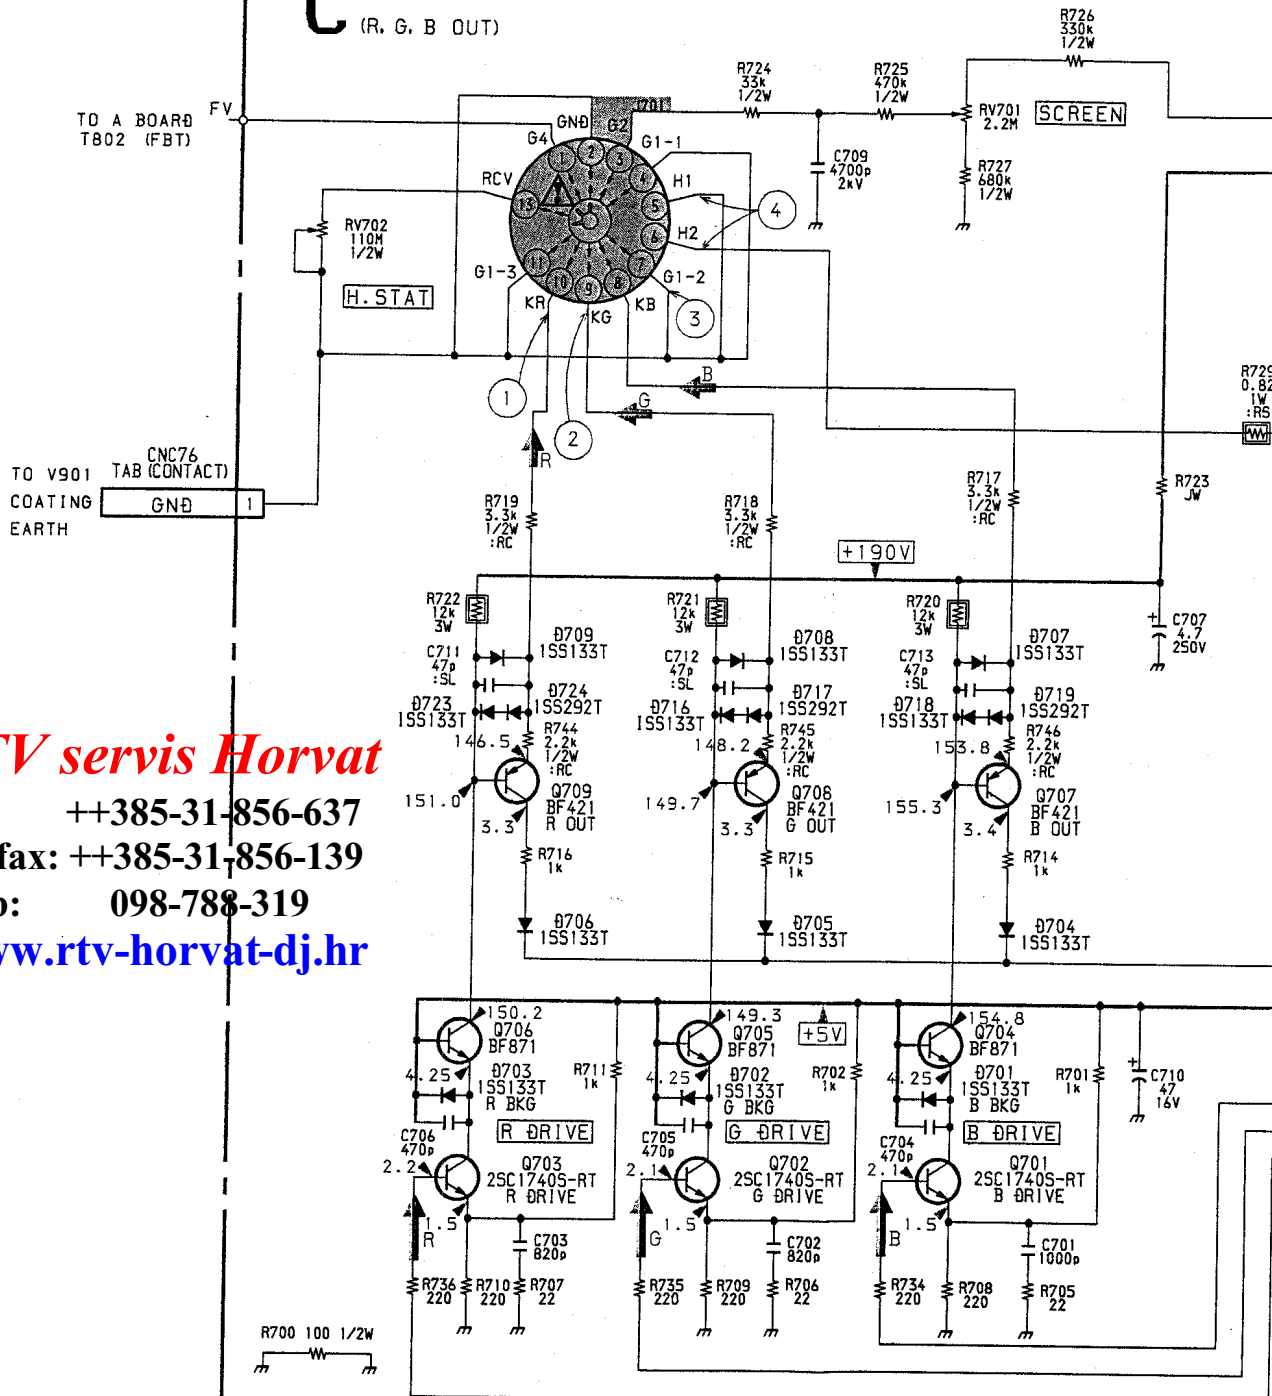


RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr

www.rtv-horvat-dj.hr

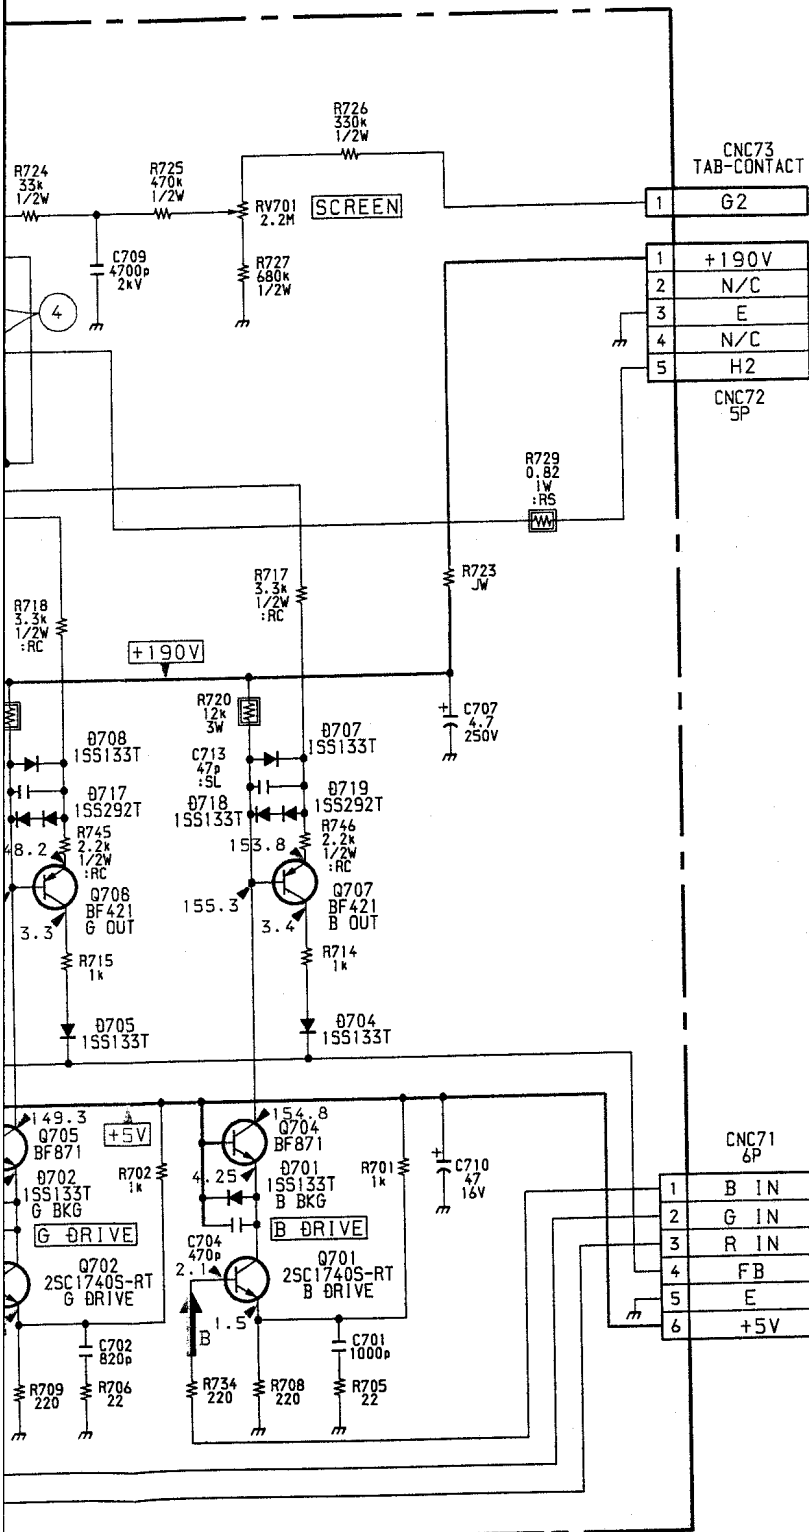

TO A BOARD
CNAB2

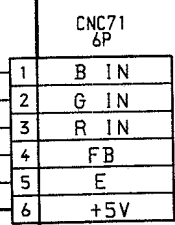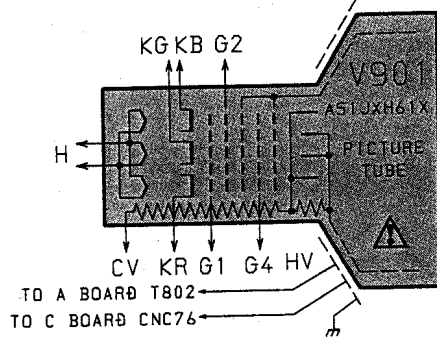

TO A BOARD
CNAB1

WAVEFORMS C BOARD

