 
 
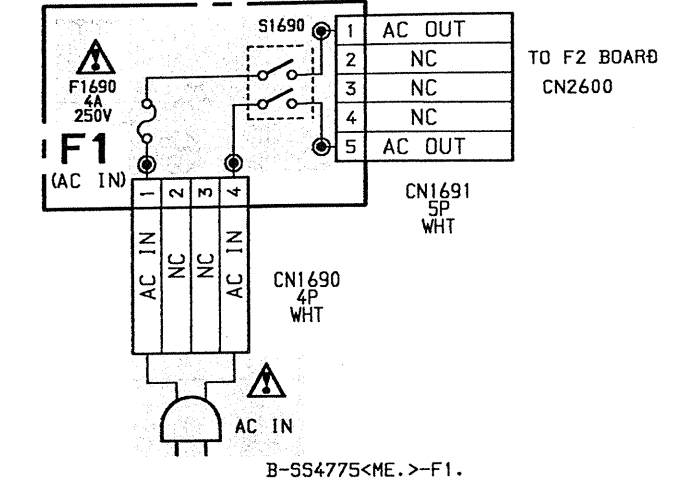 






B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

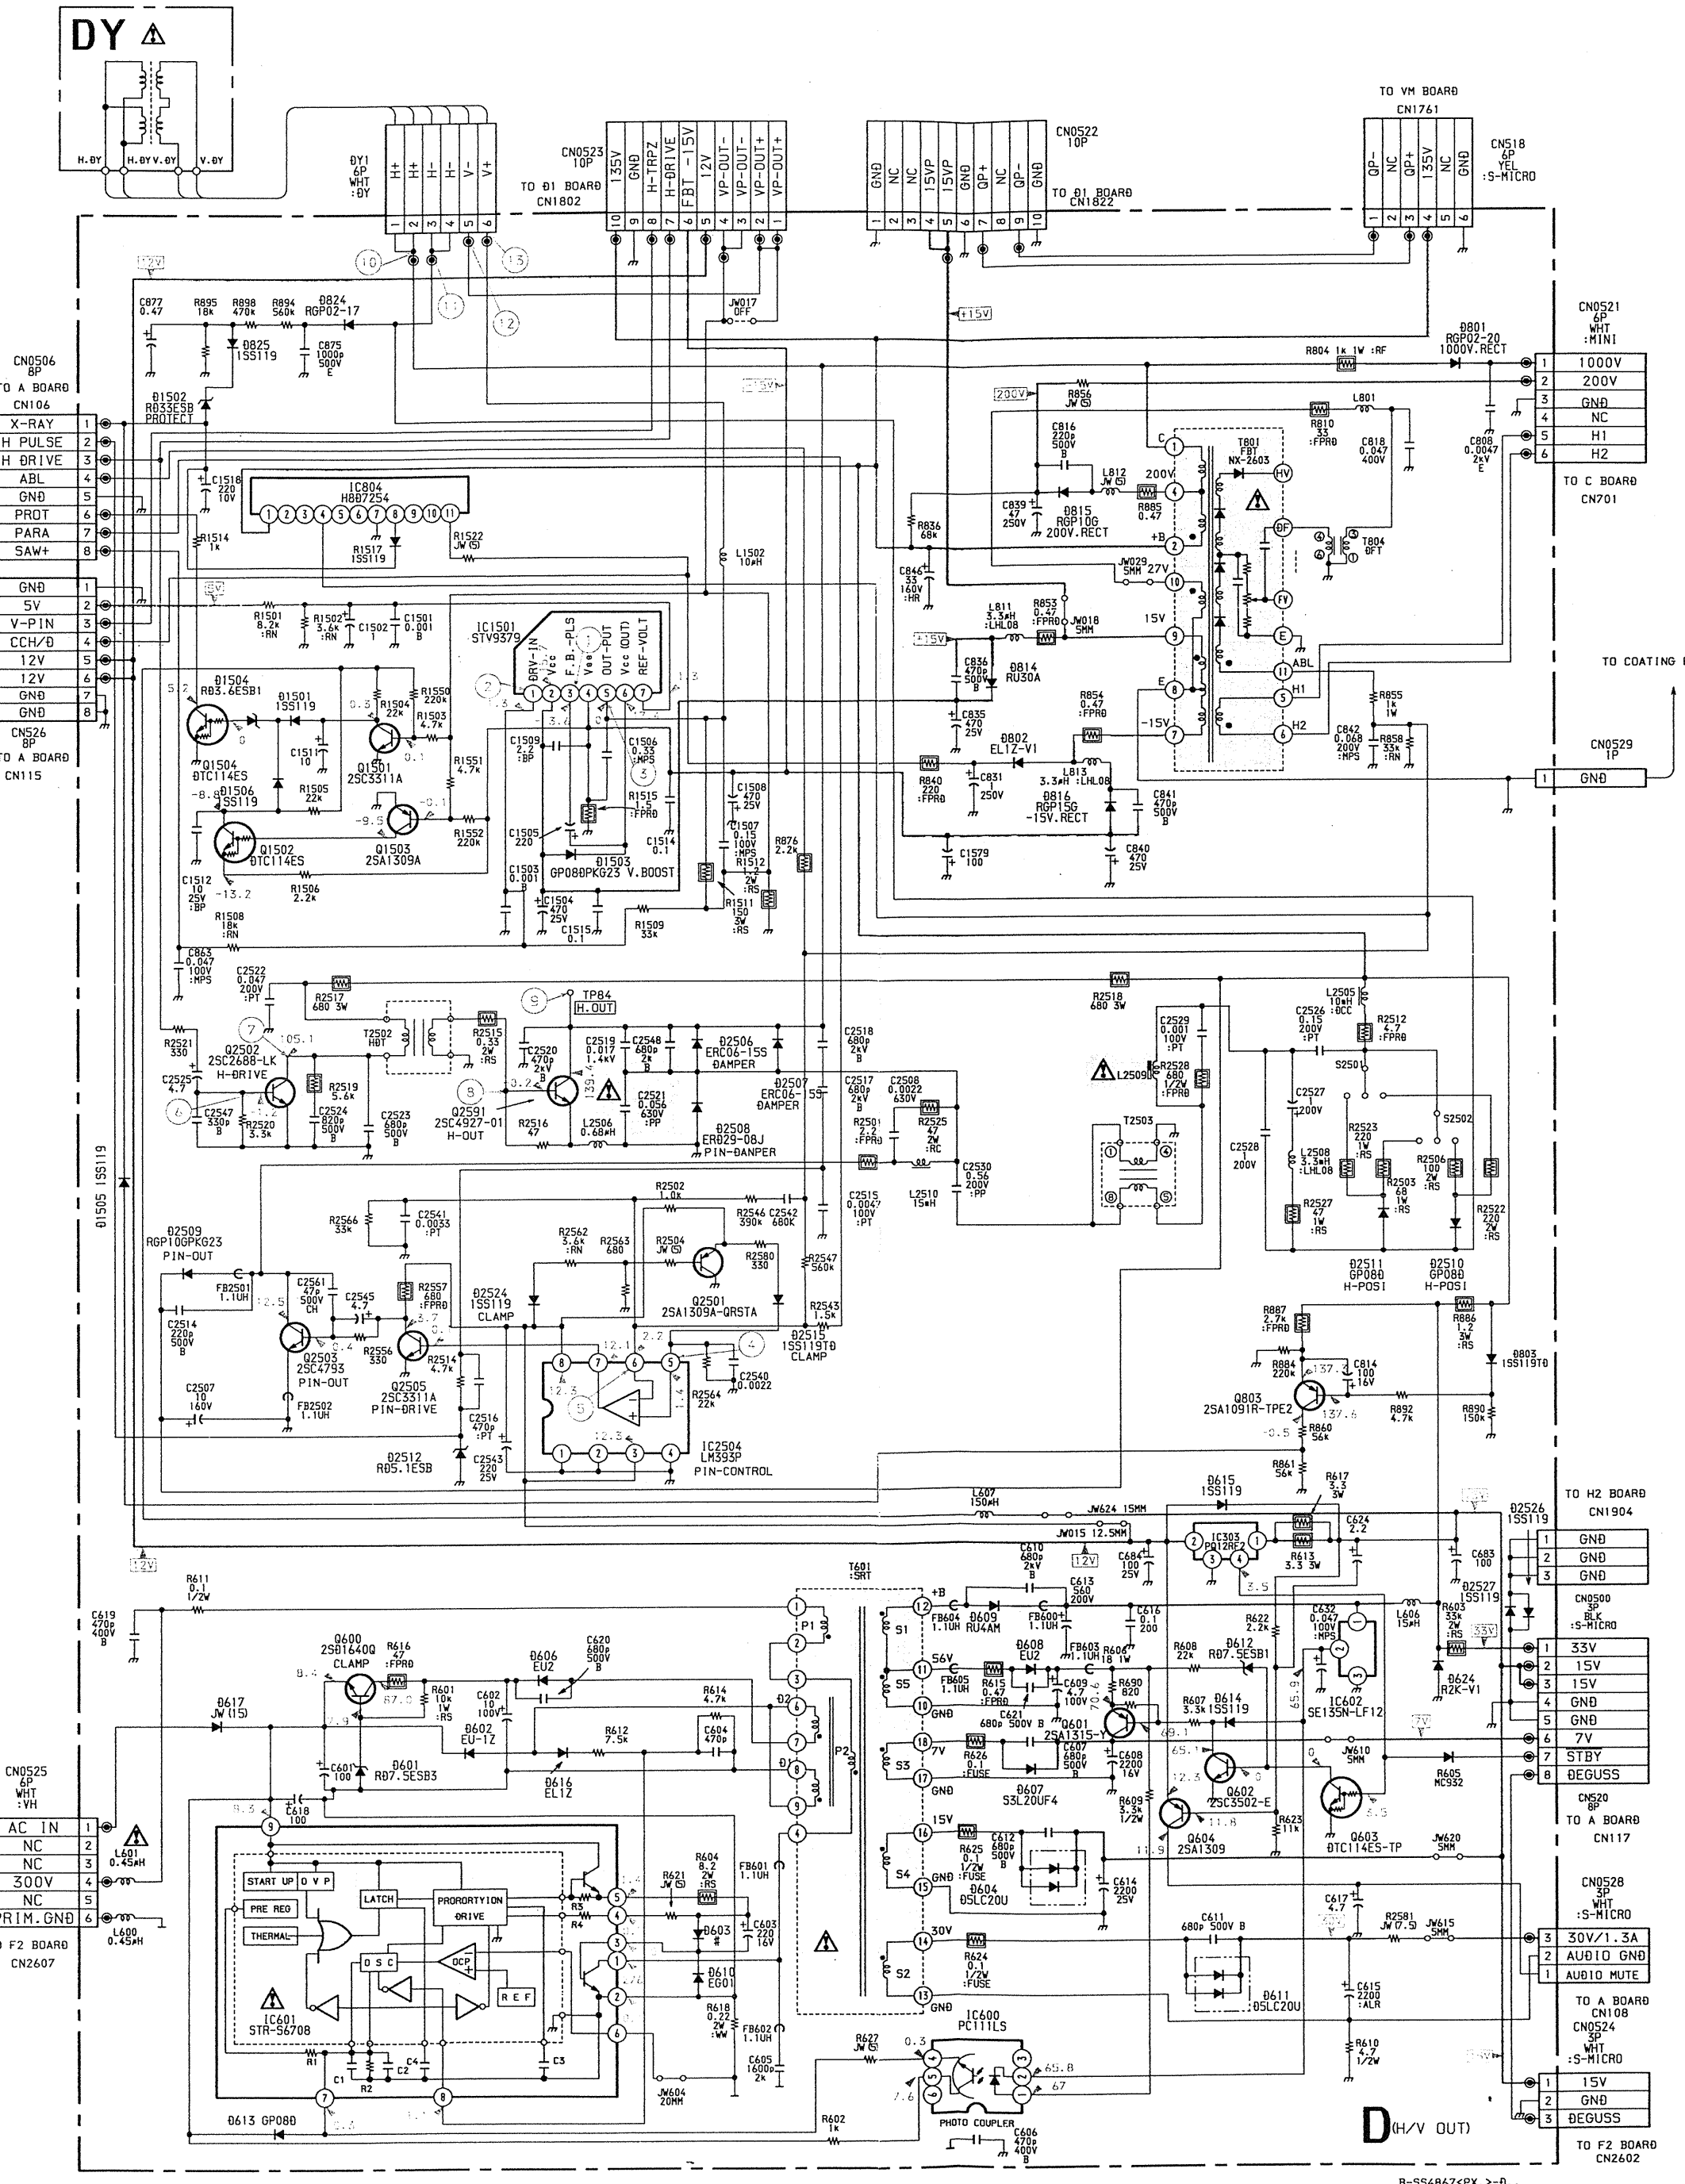

RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr

    • D BOARD WAVEFORMS

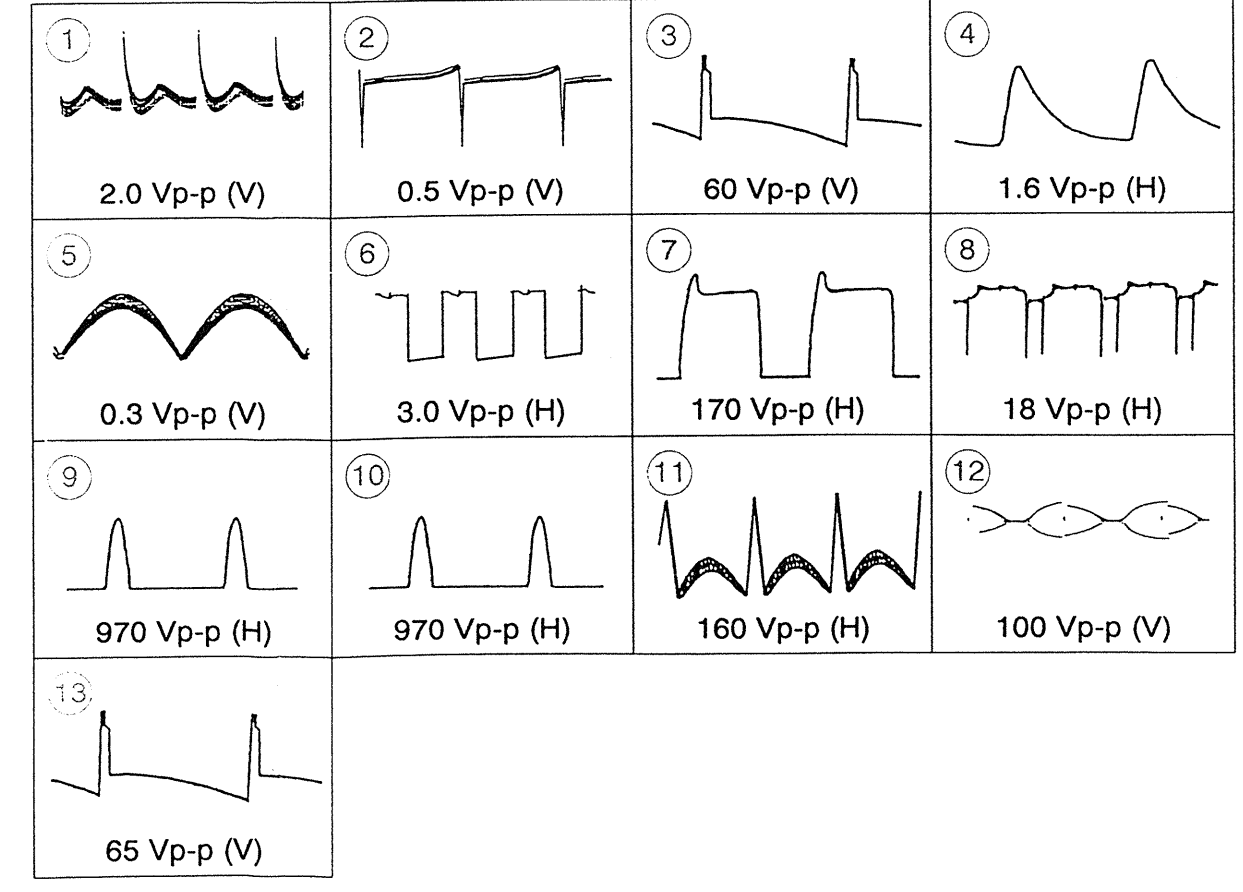

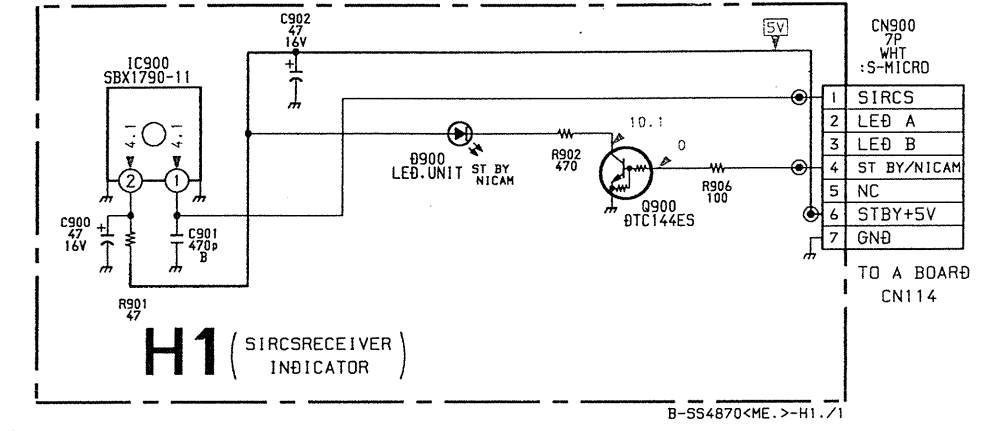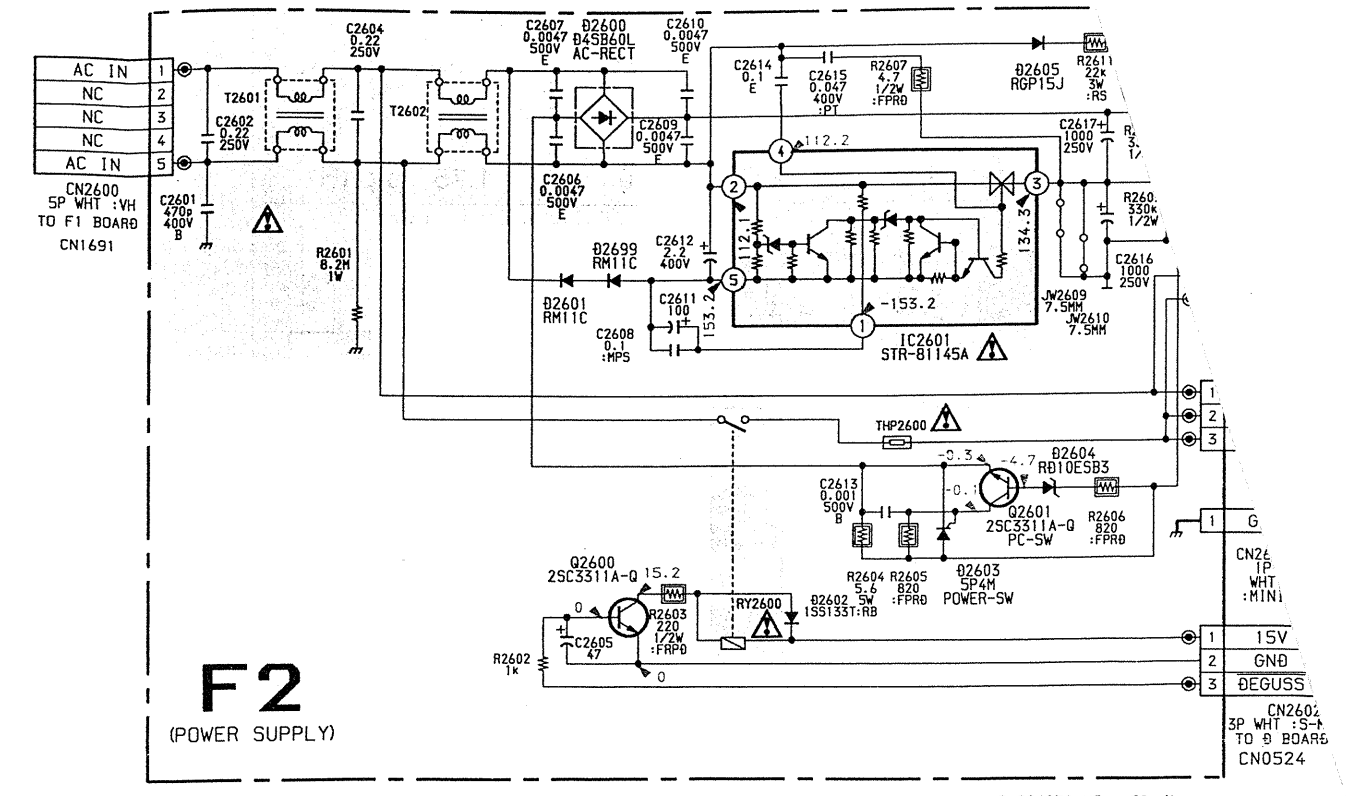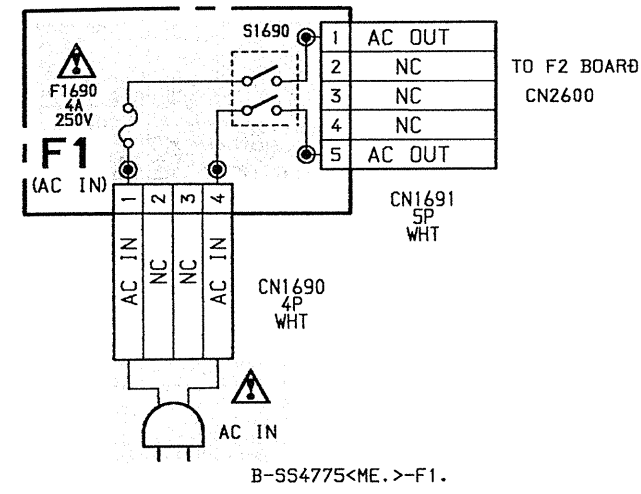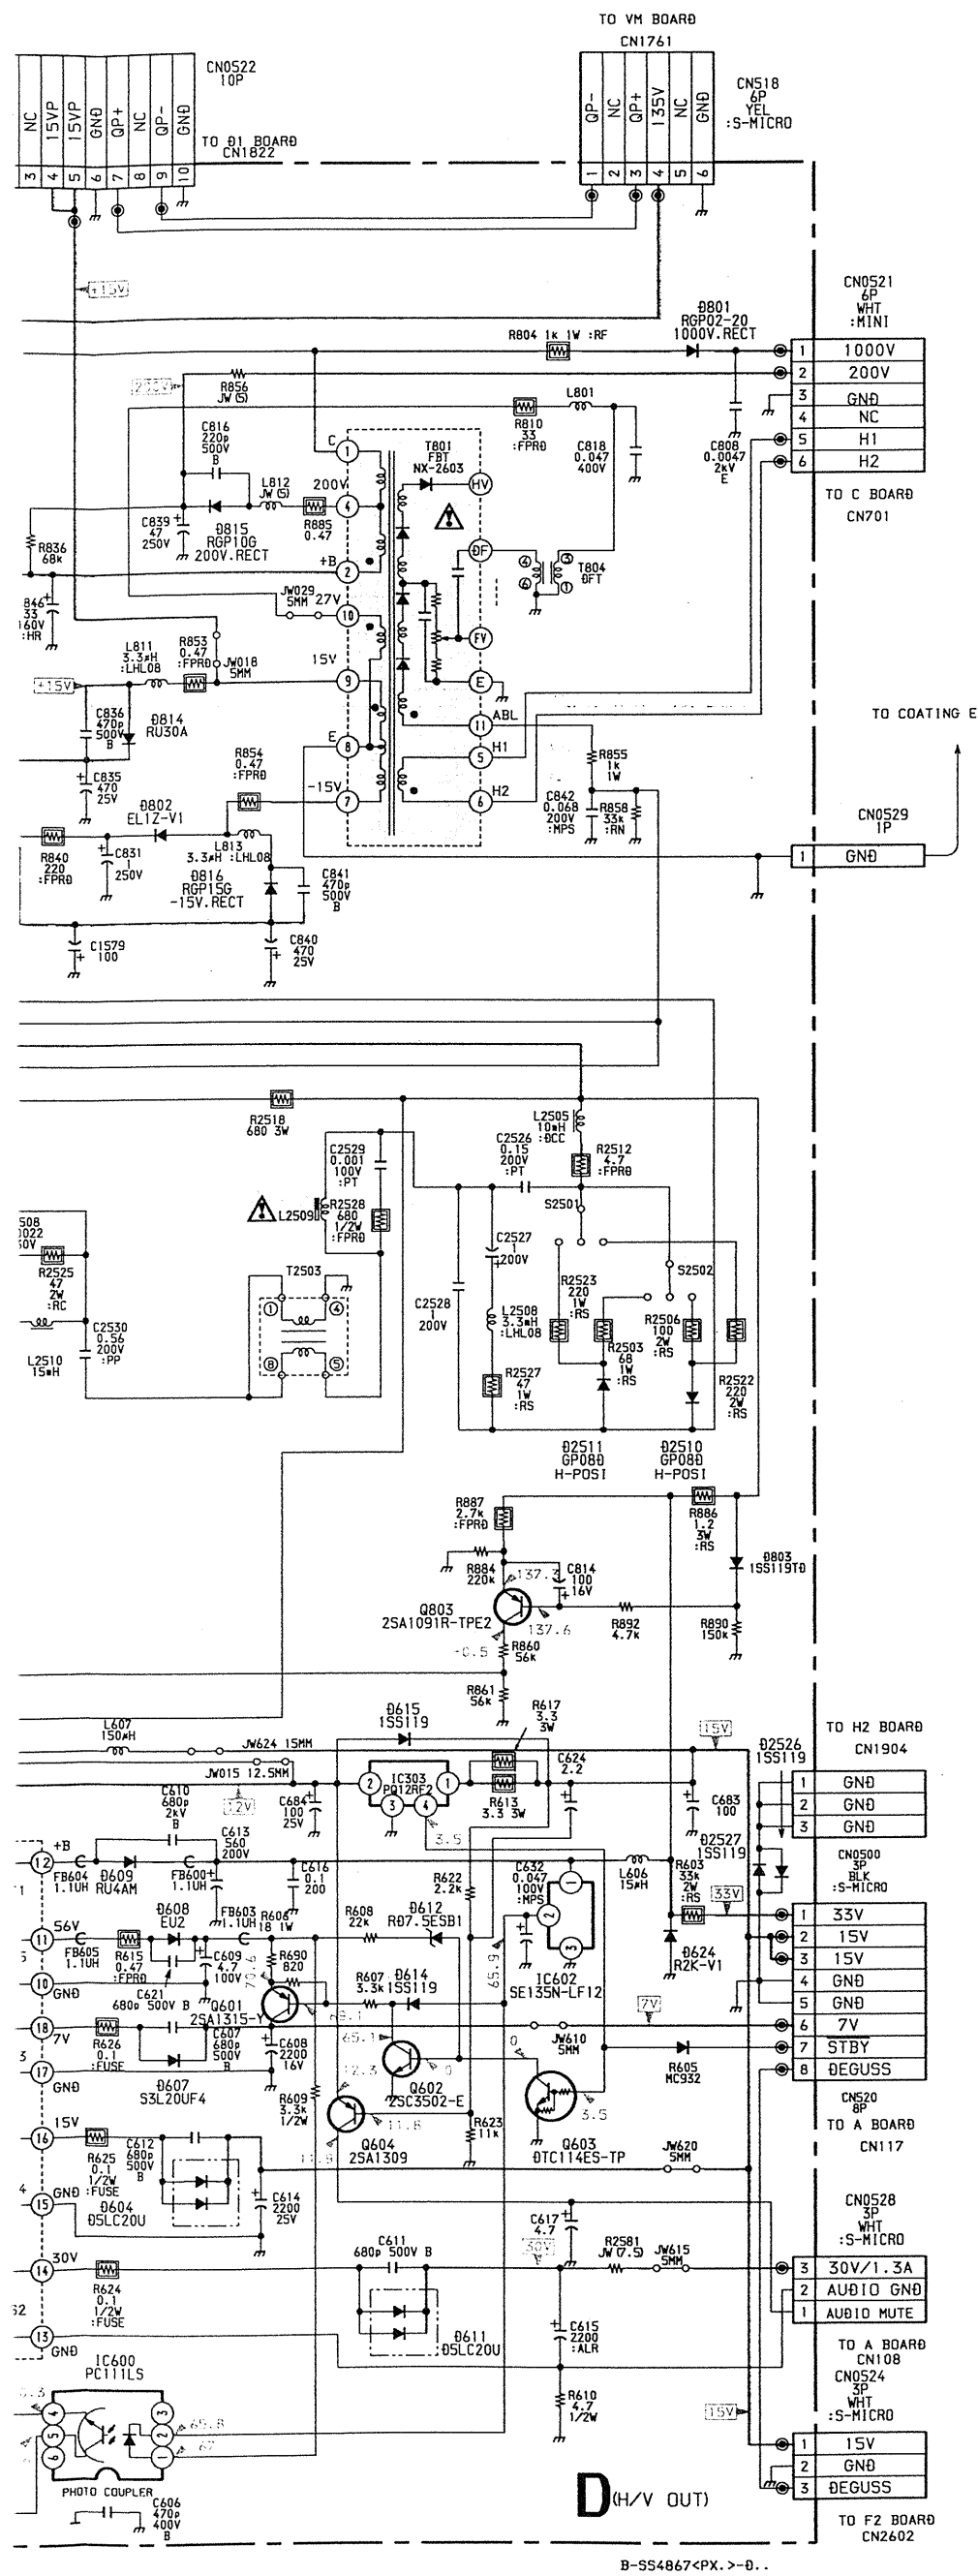

• D BOARD WAVEFORMS



 
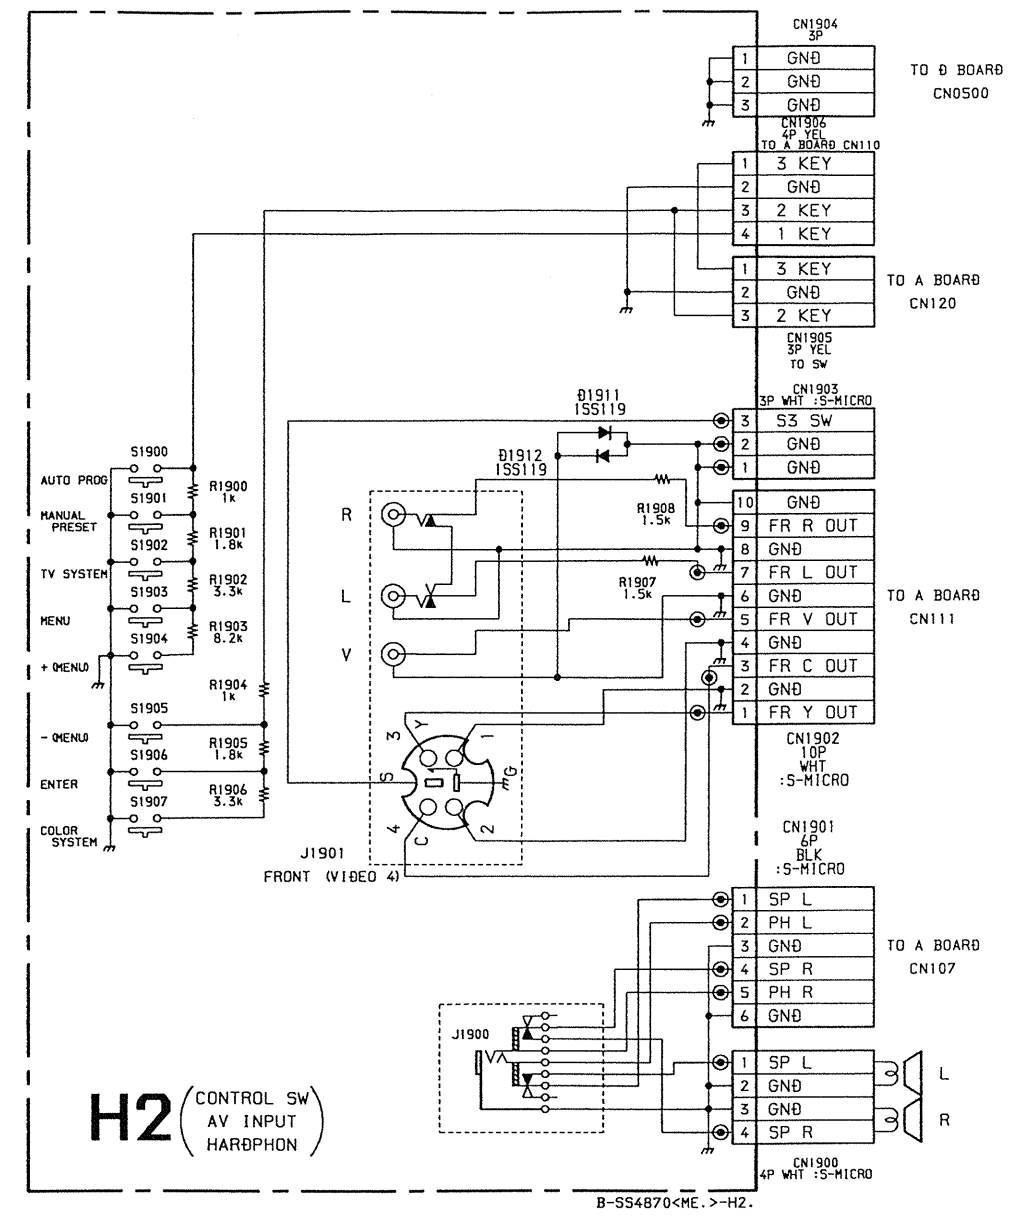 


Diagram of A Board

 
WAVEFORMS

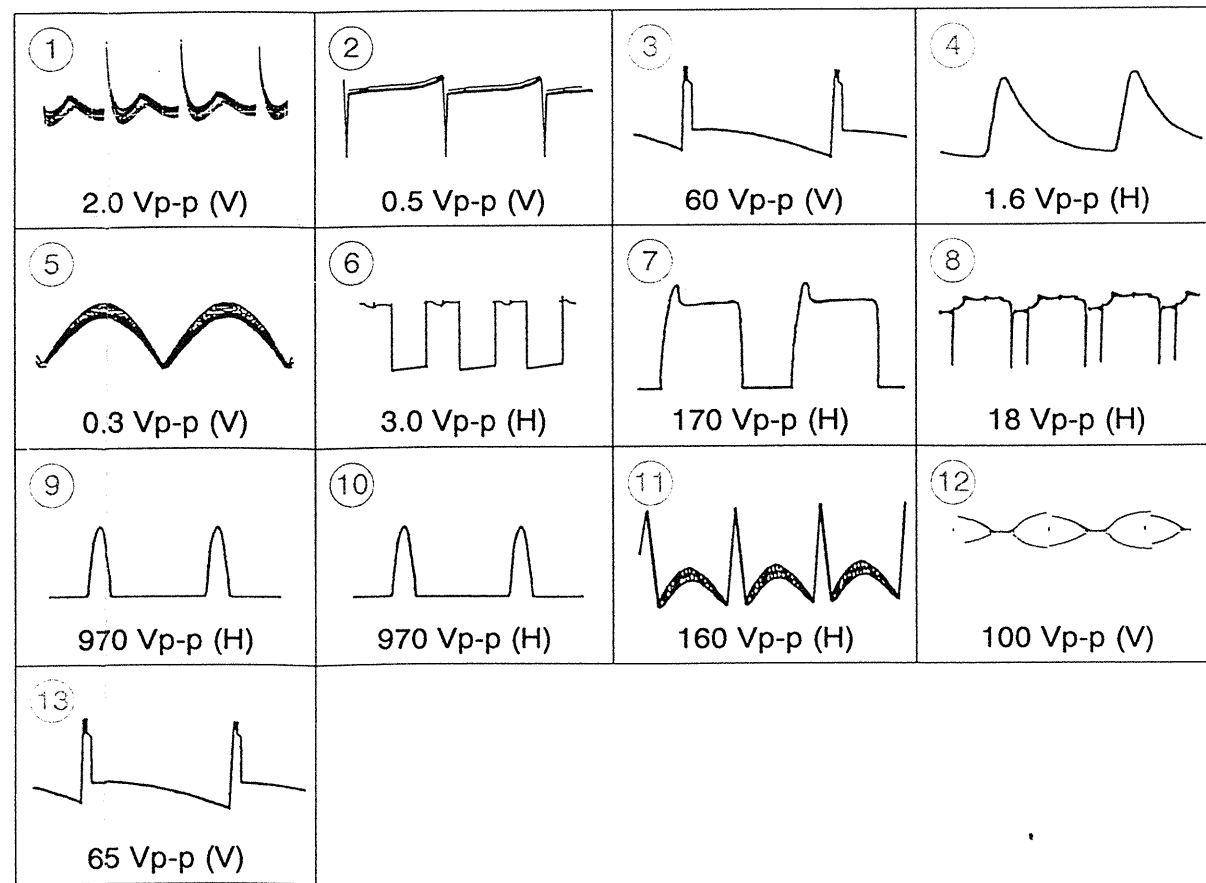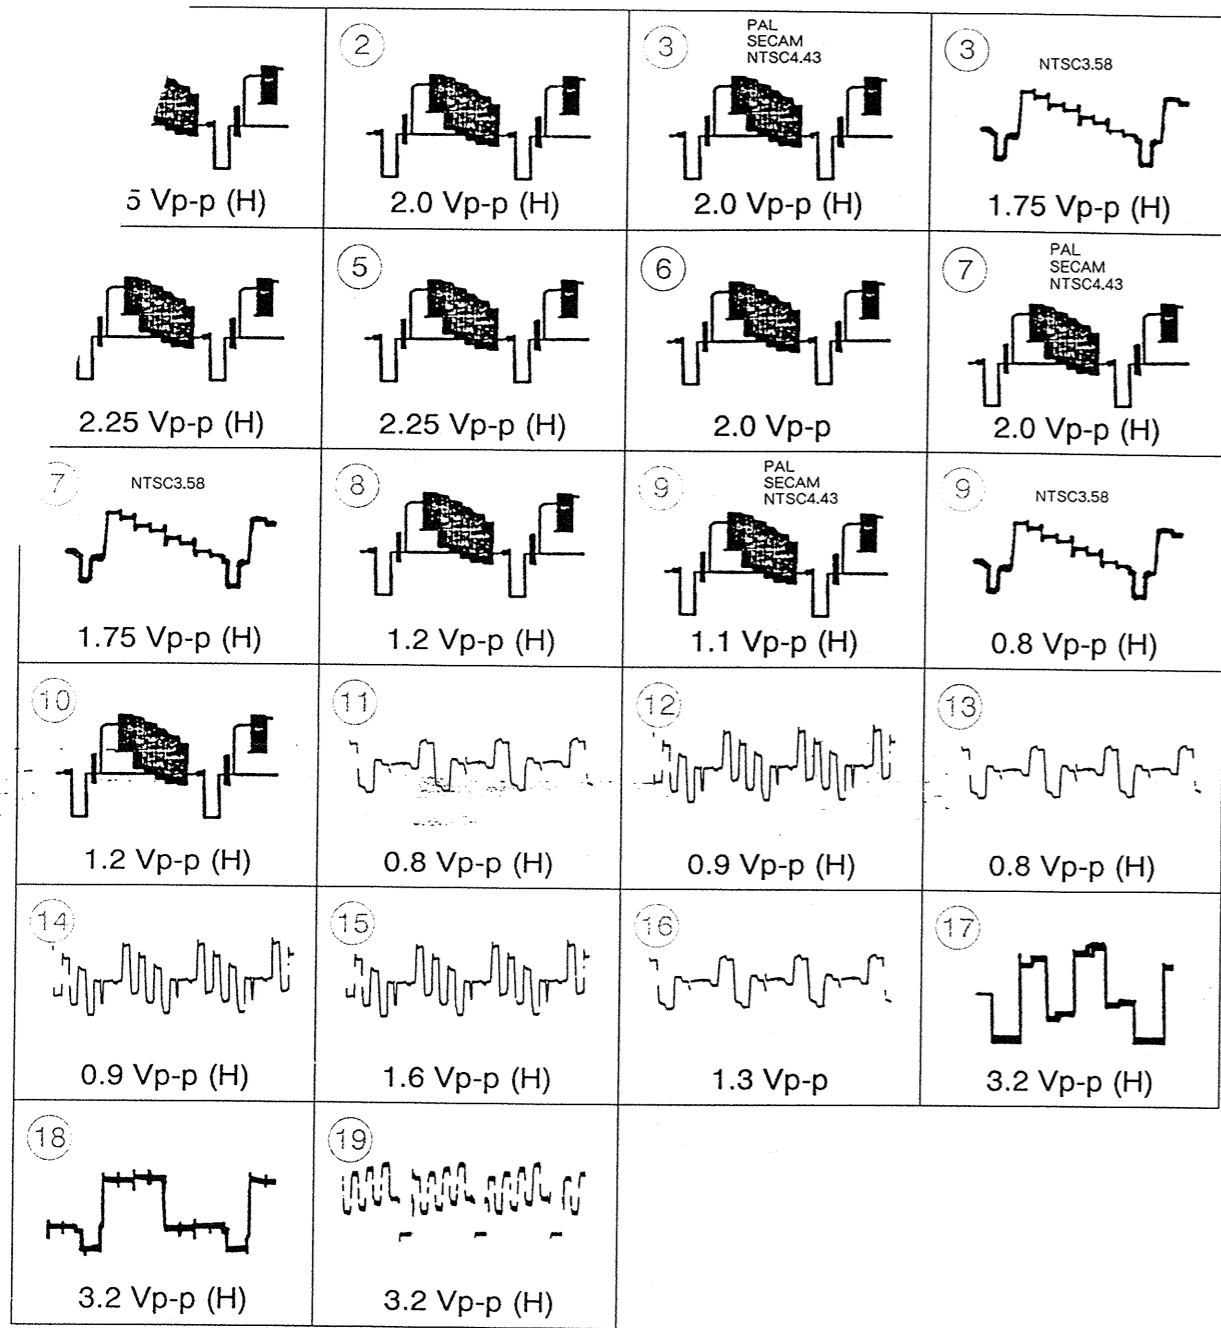


A Board IC201 CXA1545AS

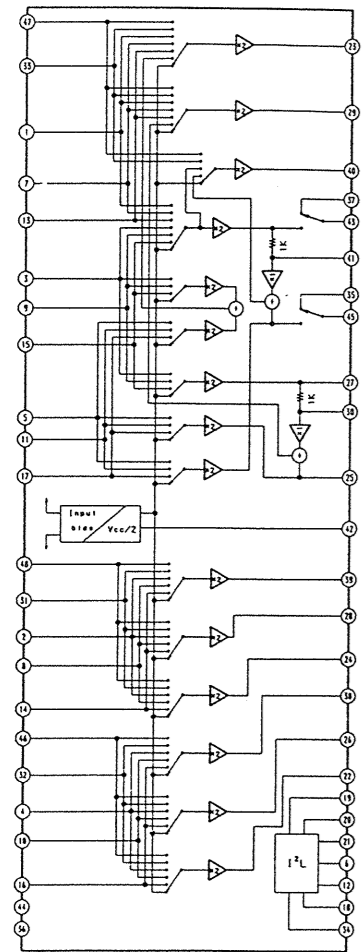 


A Board IC301 TDA9145

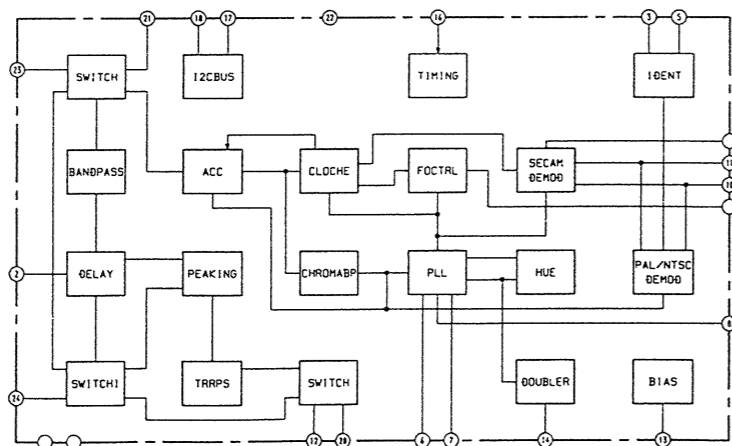 


Schematic diagrams

 


Schematic diagram

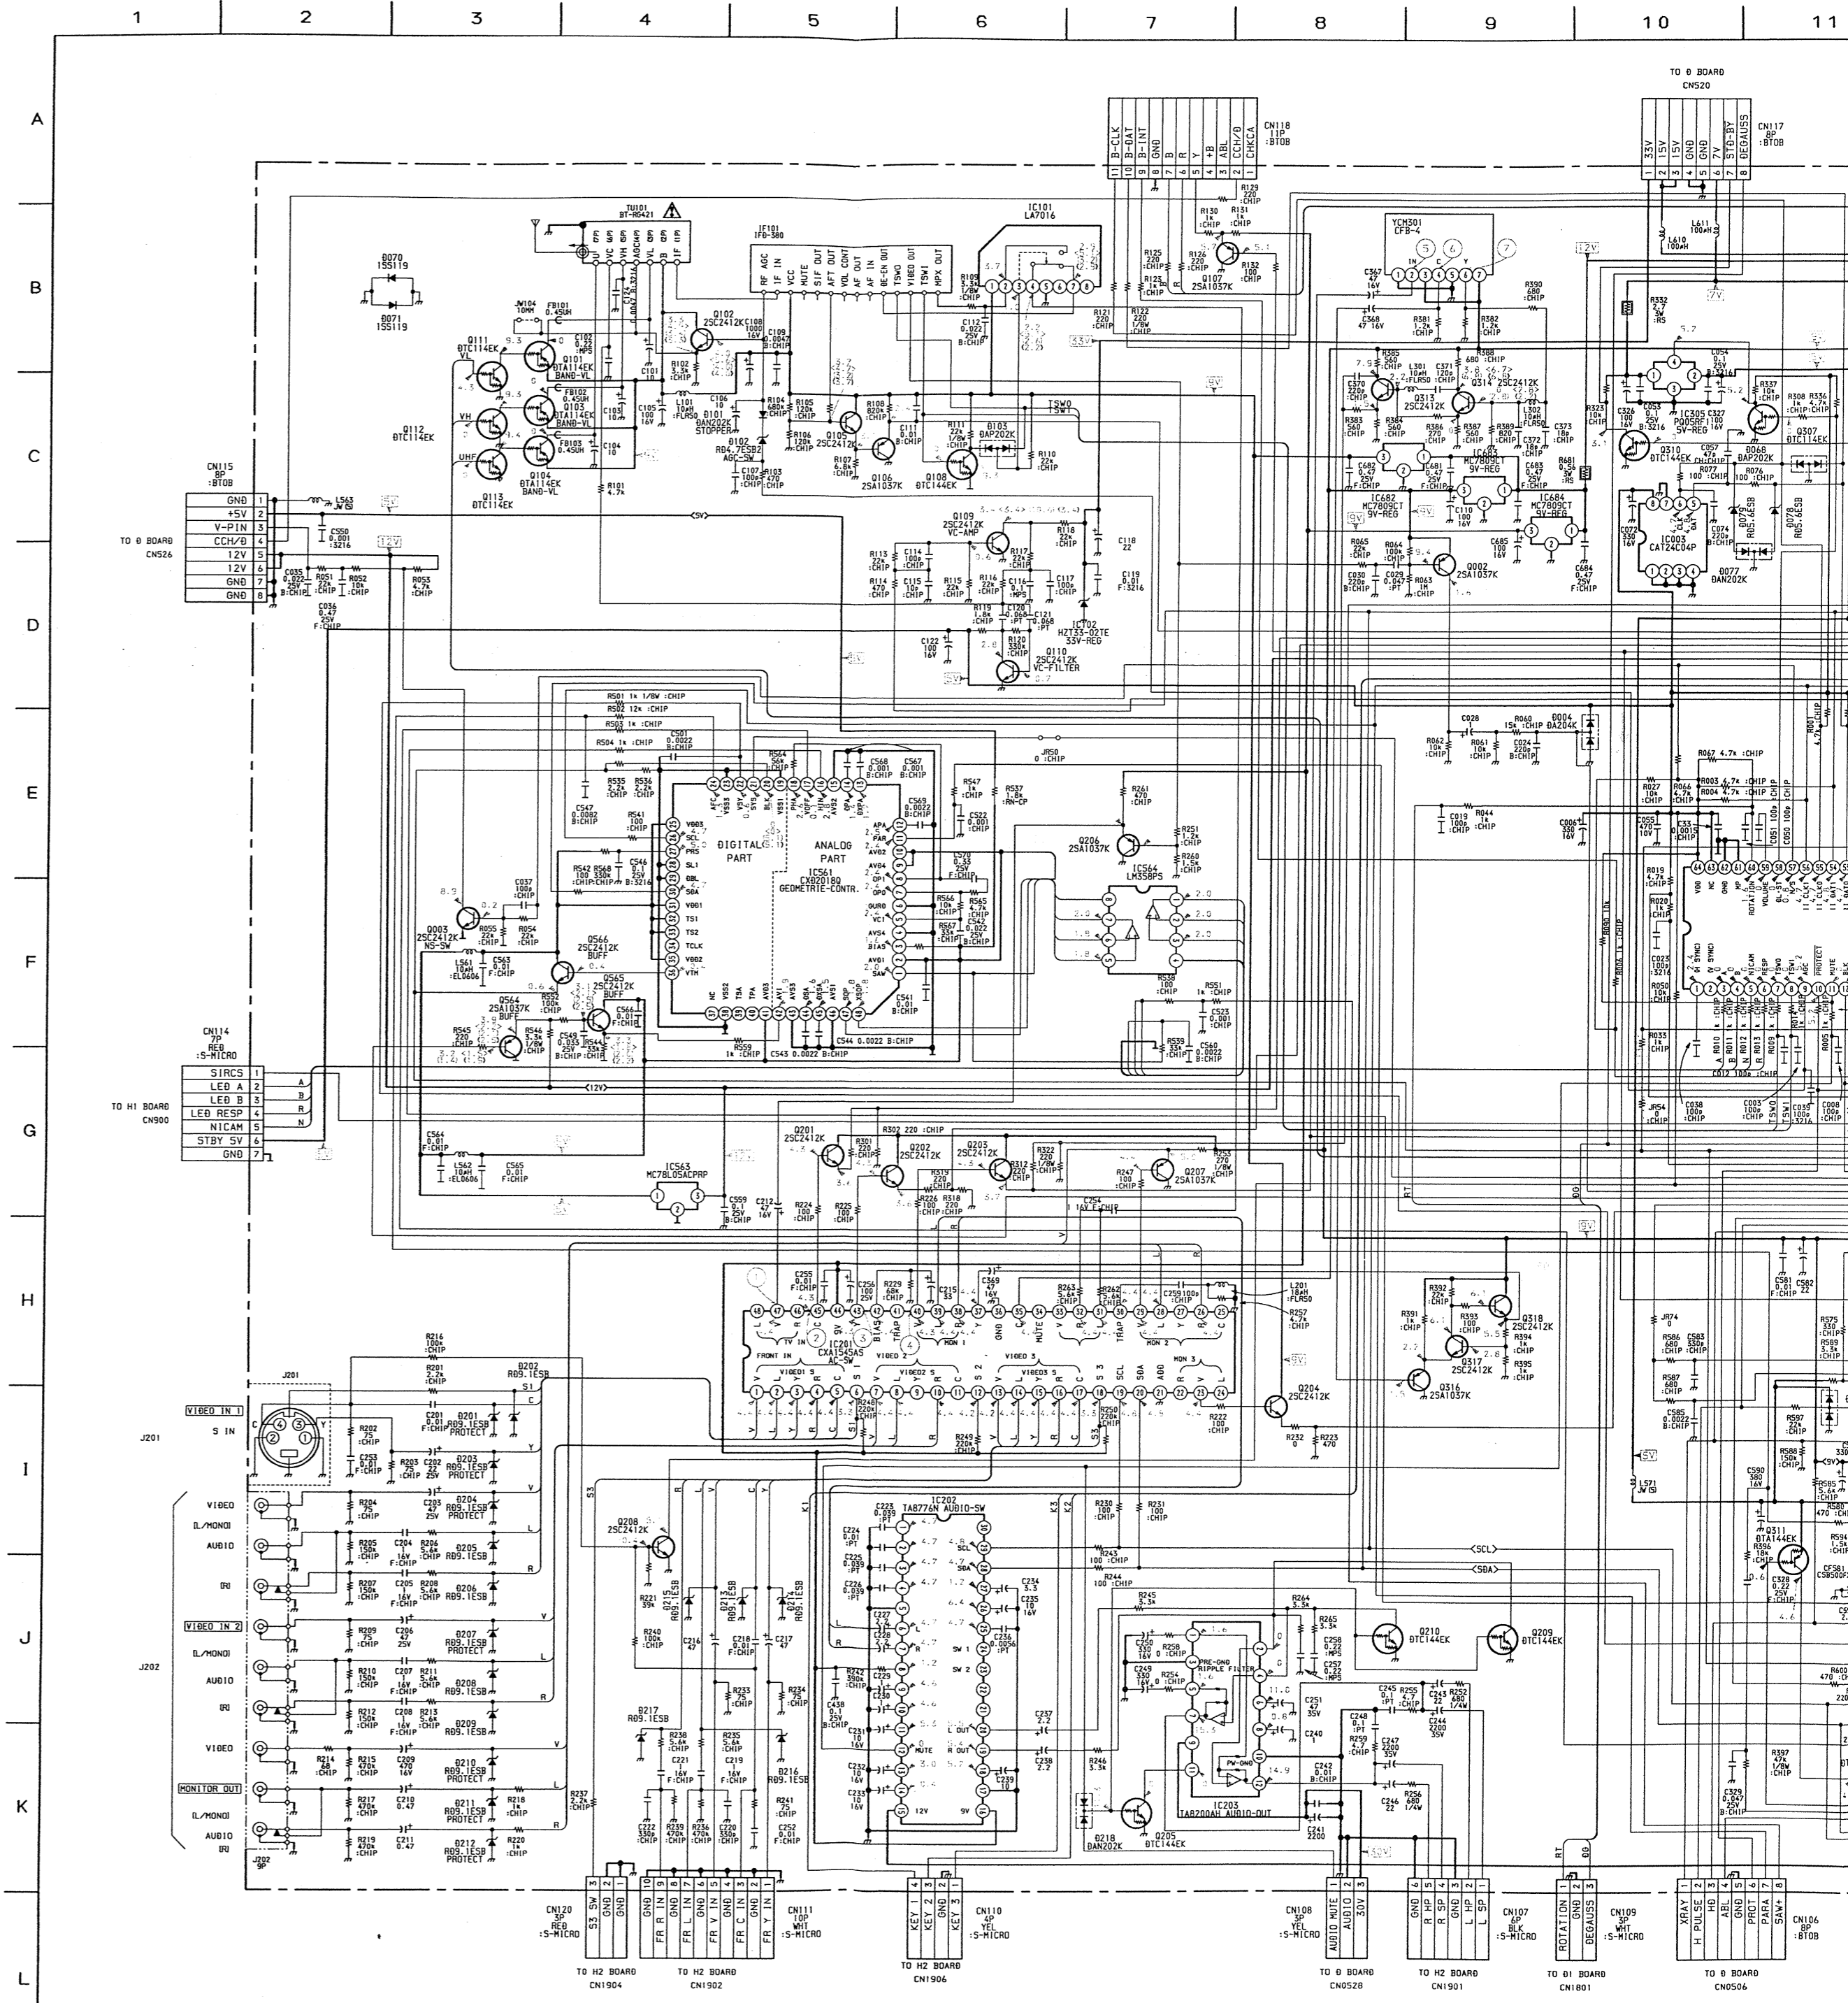 

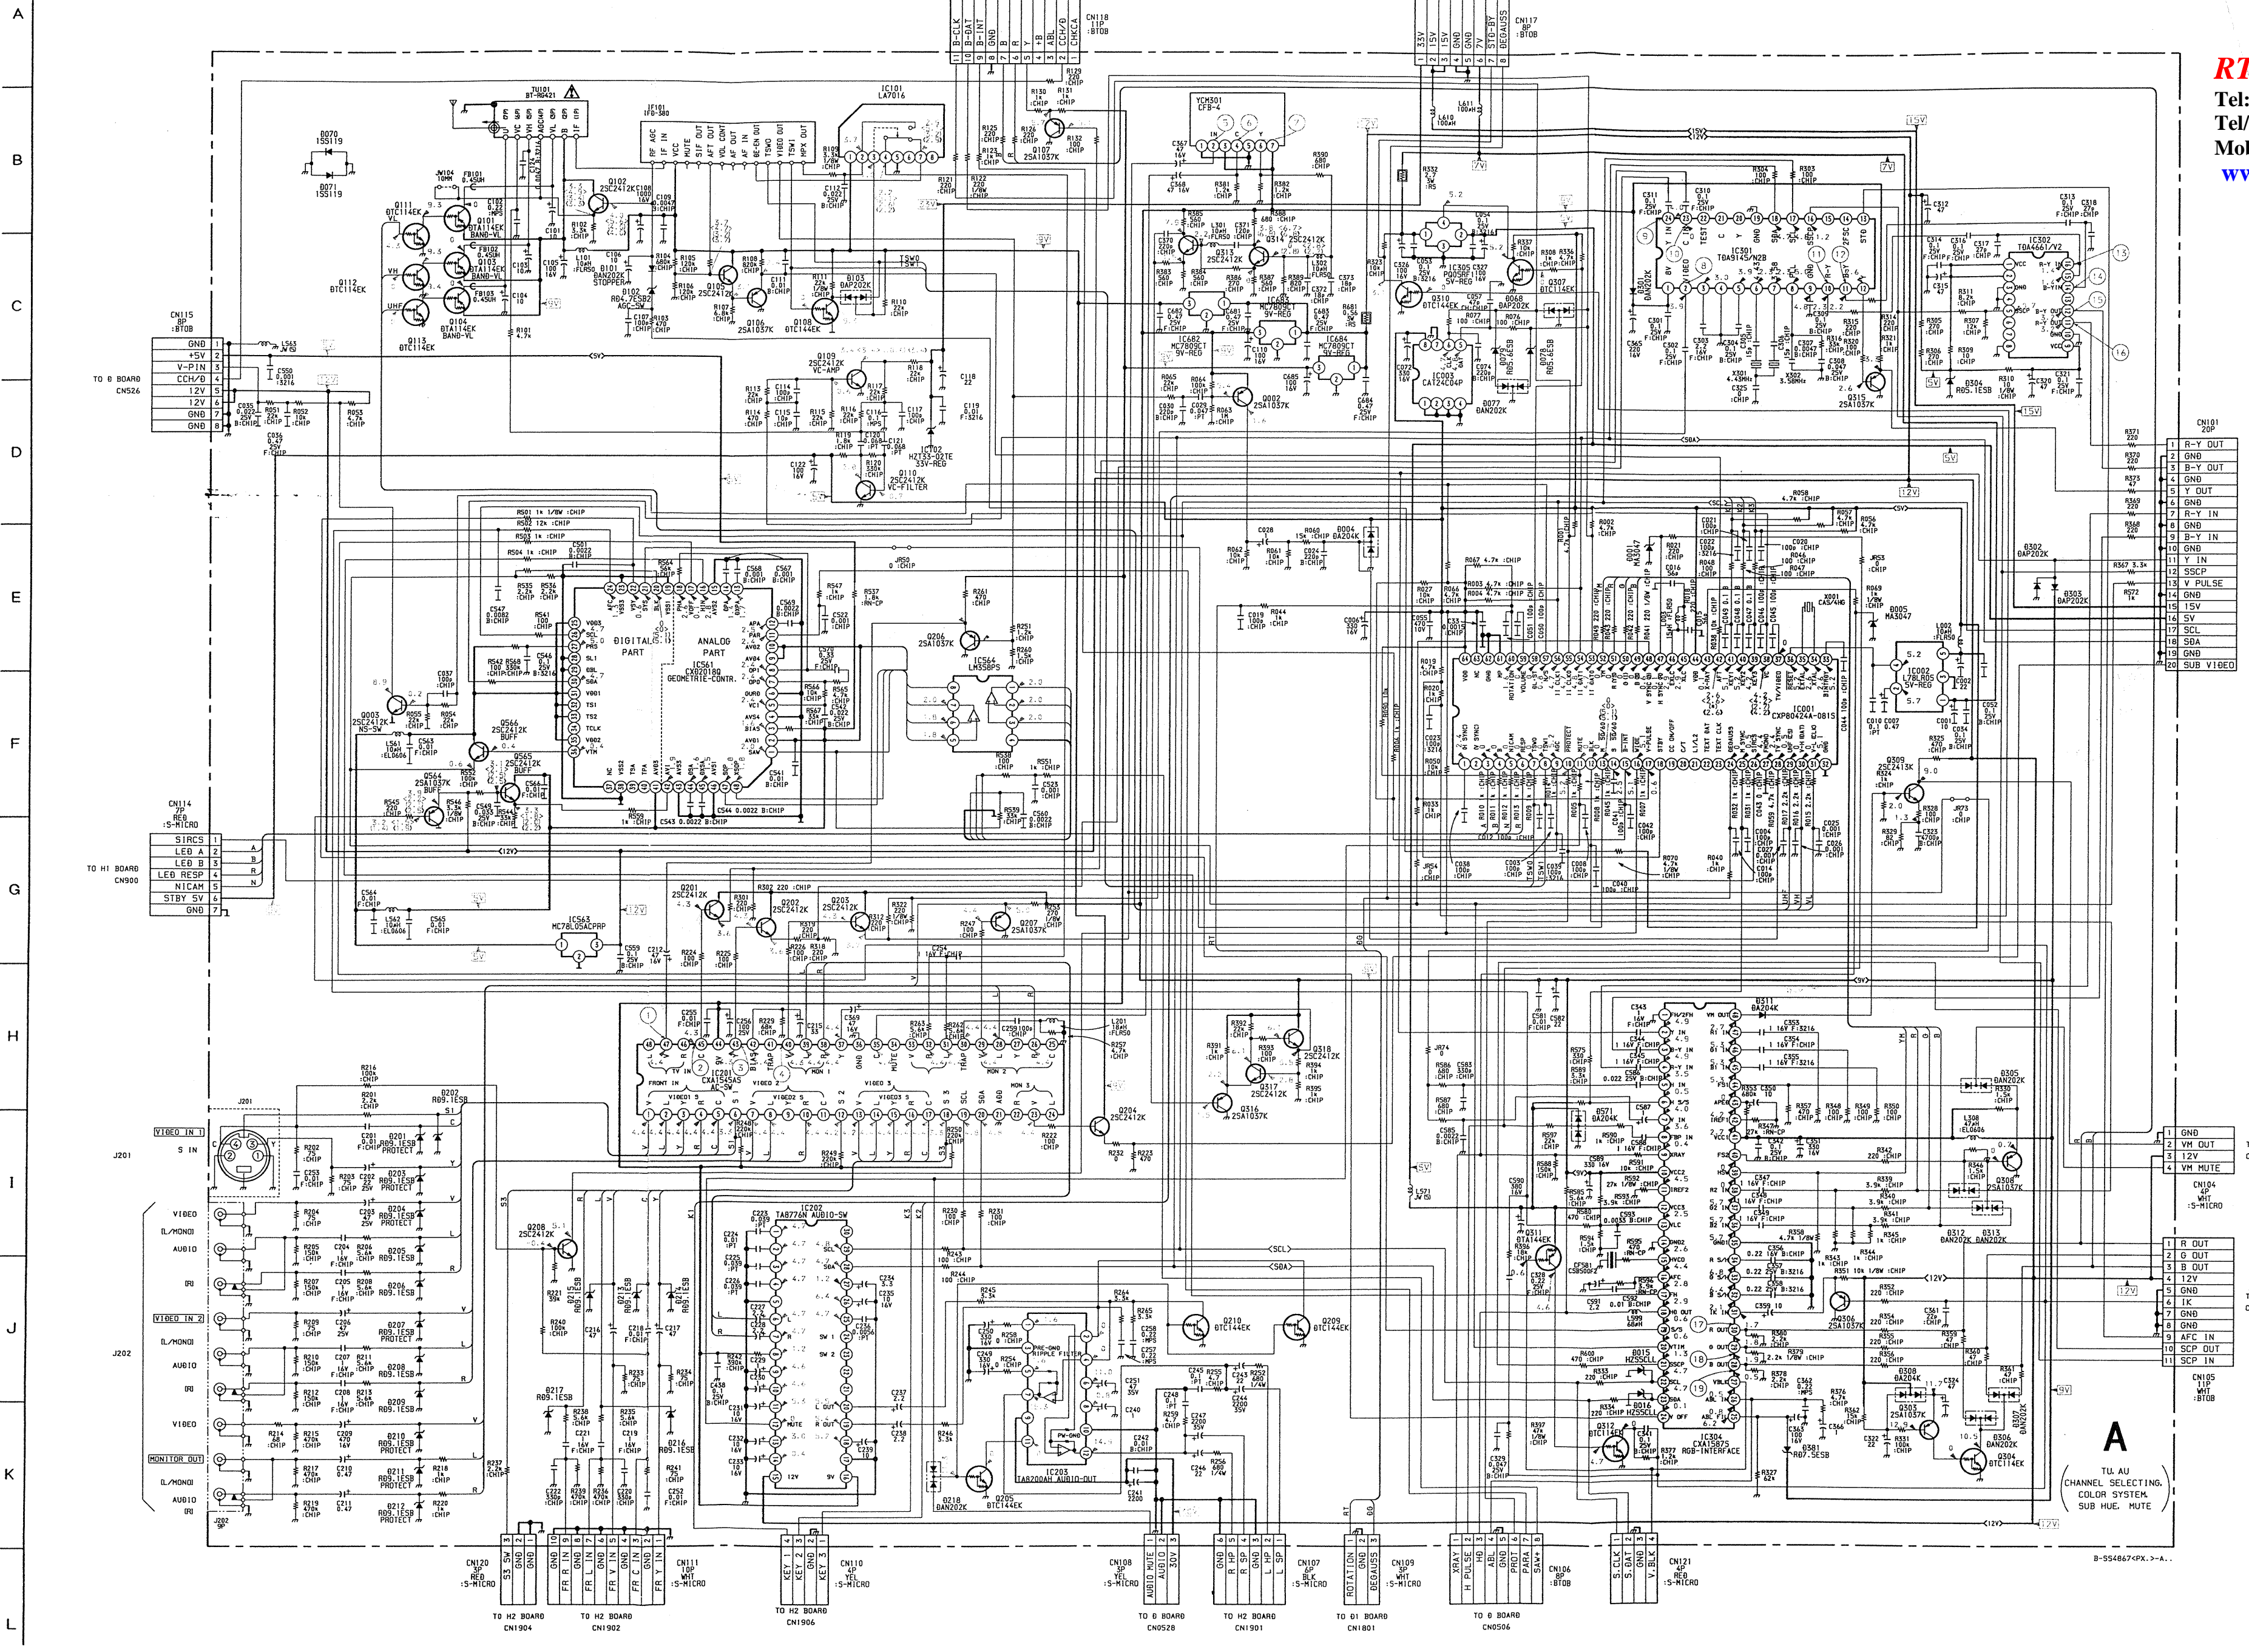 


RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
 www.rtv-horvat-dj.hr

 
• P BOARD WAVEFORMS

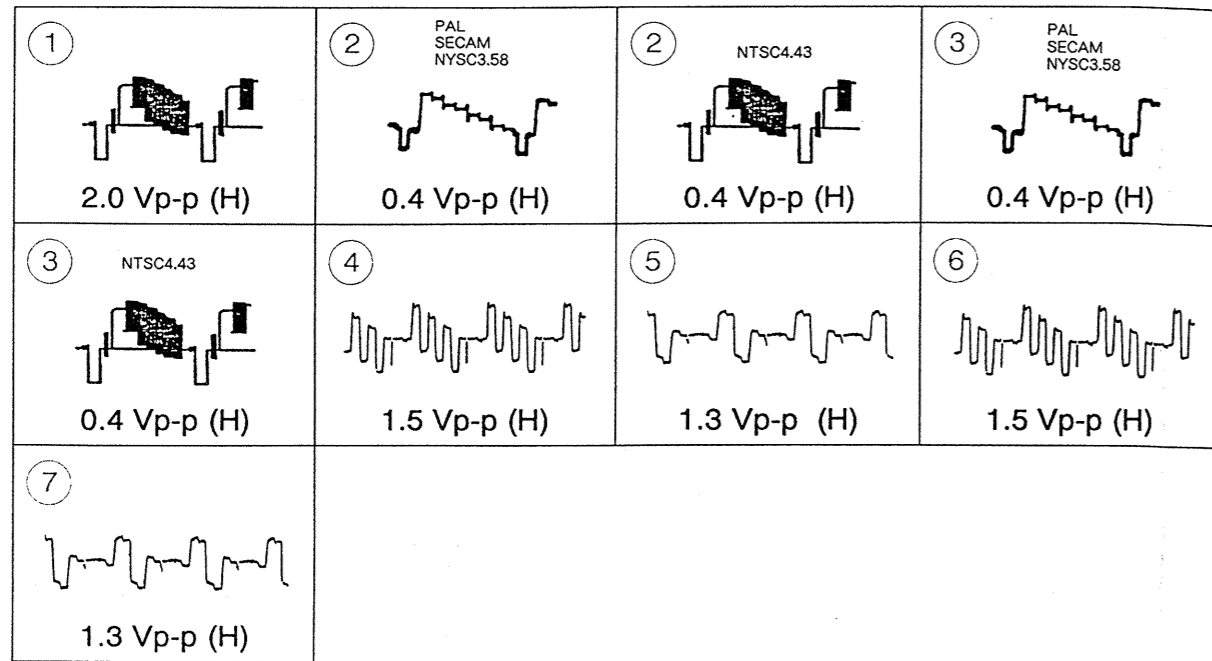



P Board IC1401 TDA9160

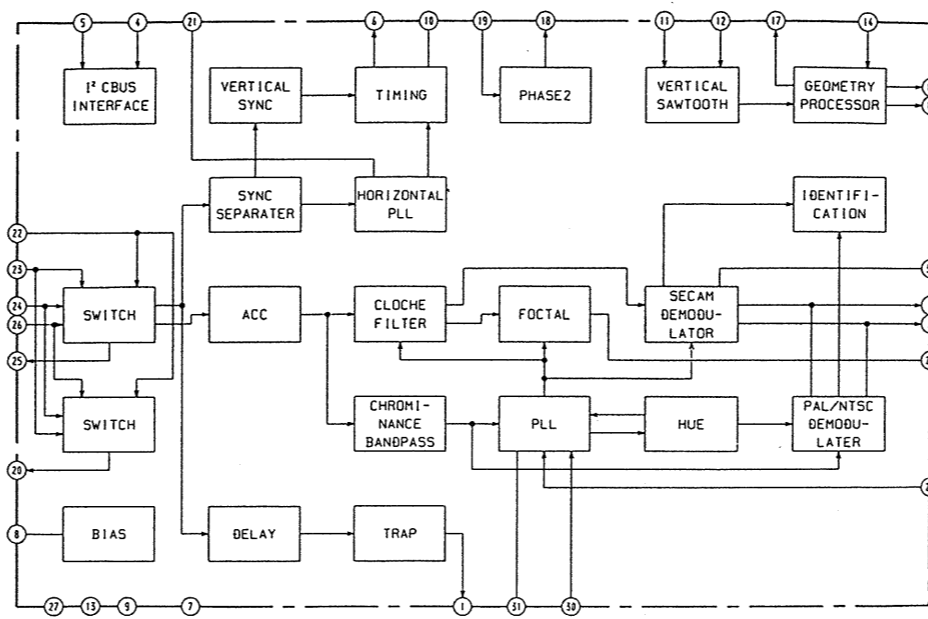 

P Board IC1406 TDA8443A

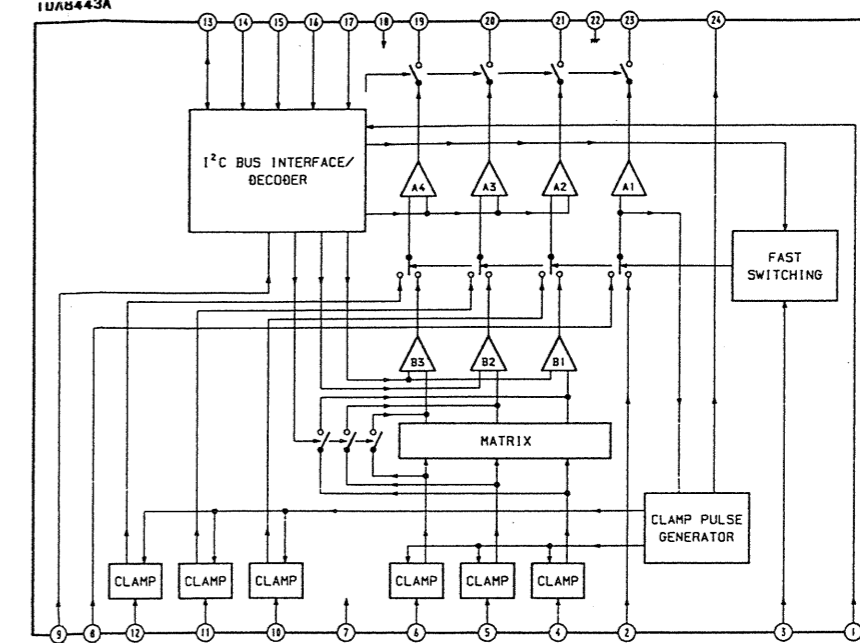 


  RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr


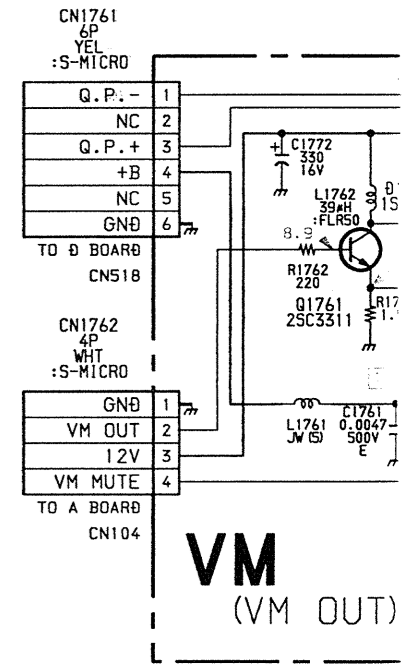
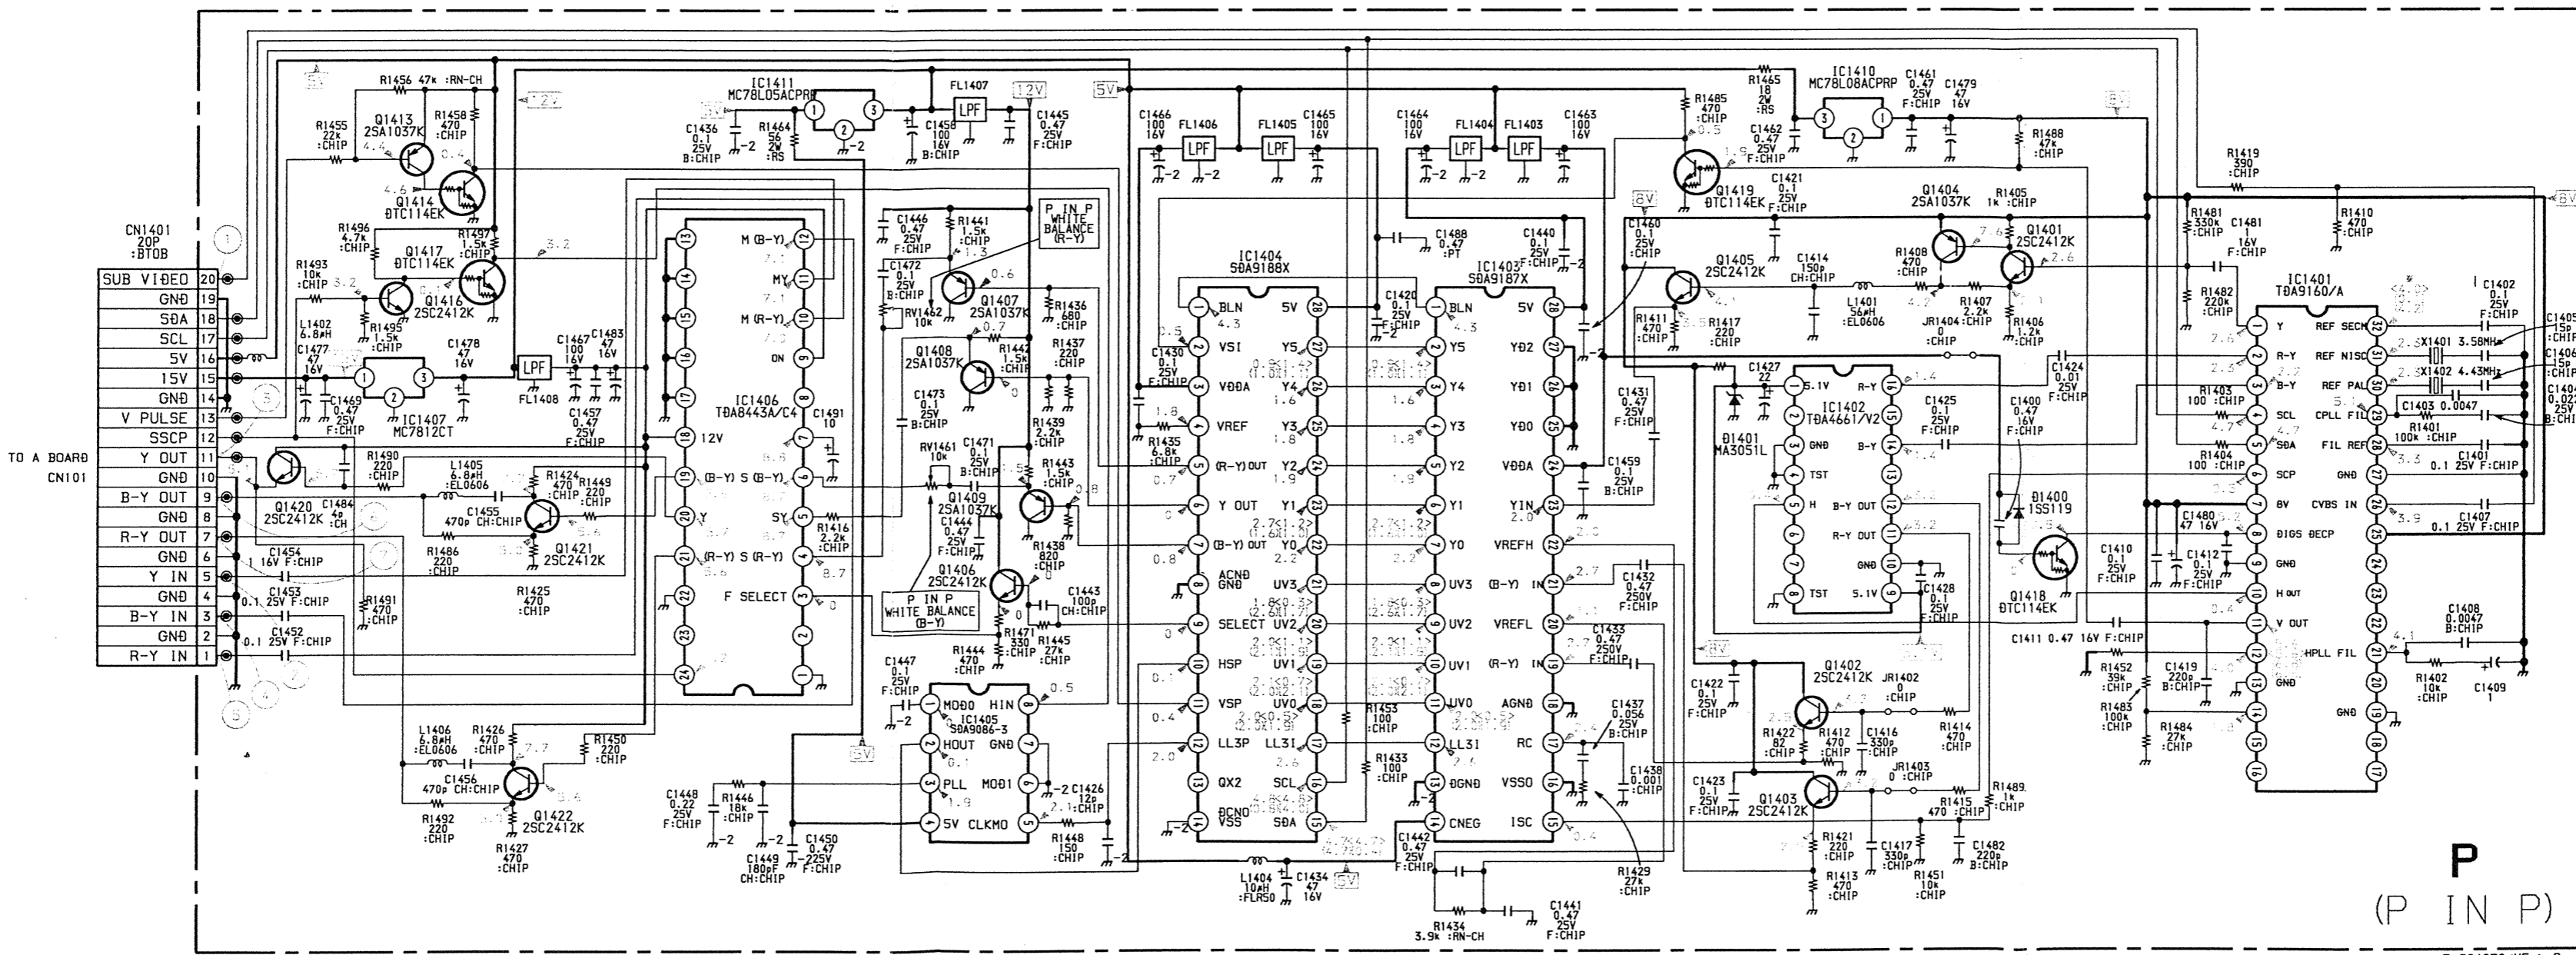


P
(P IN P)

 
P Board IC1401 TDA9160

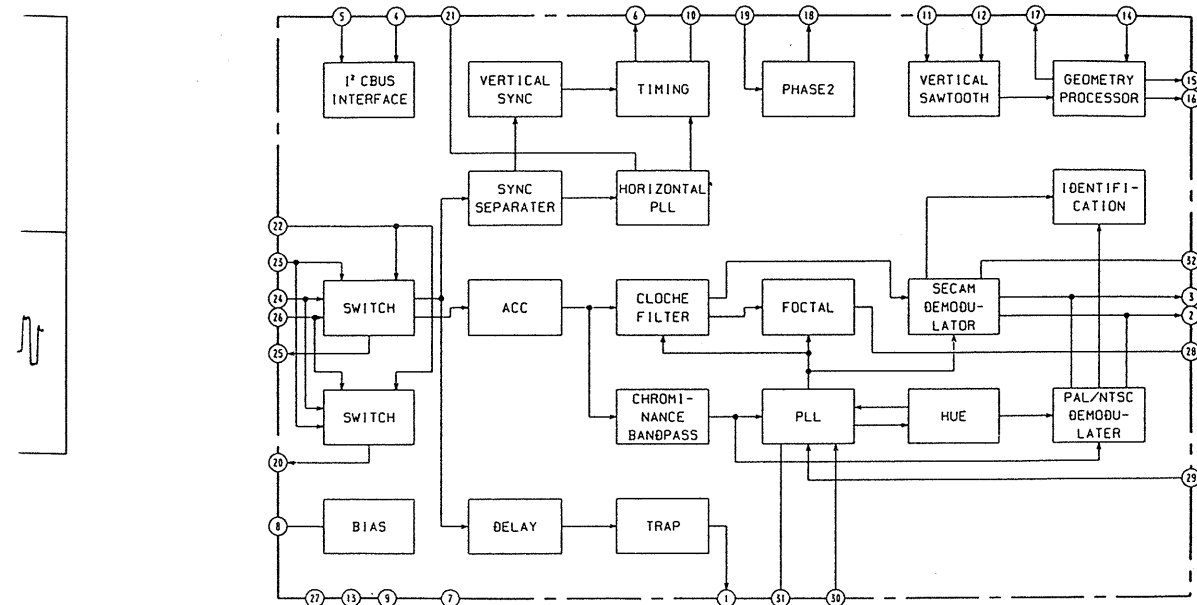

P Board IC1406 TDA8443A

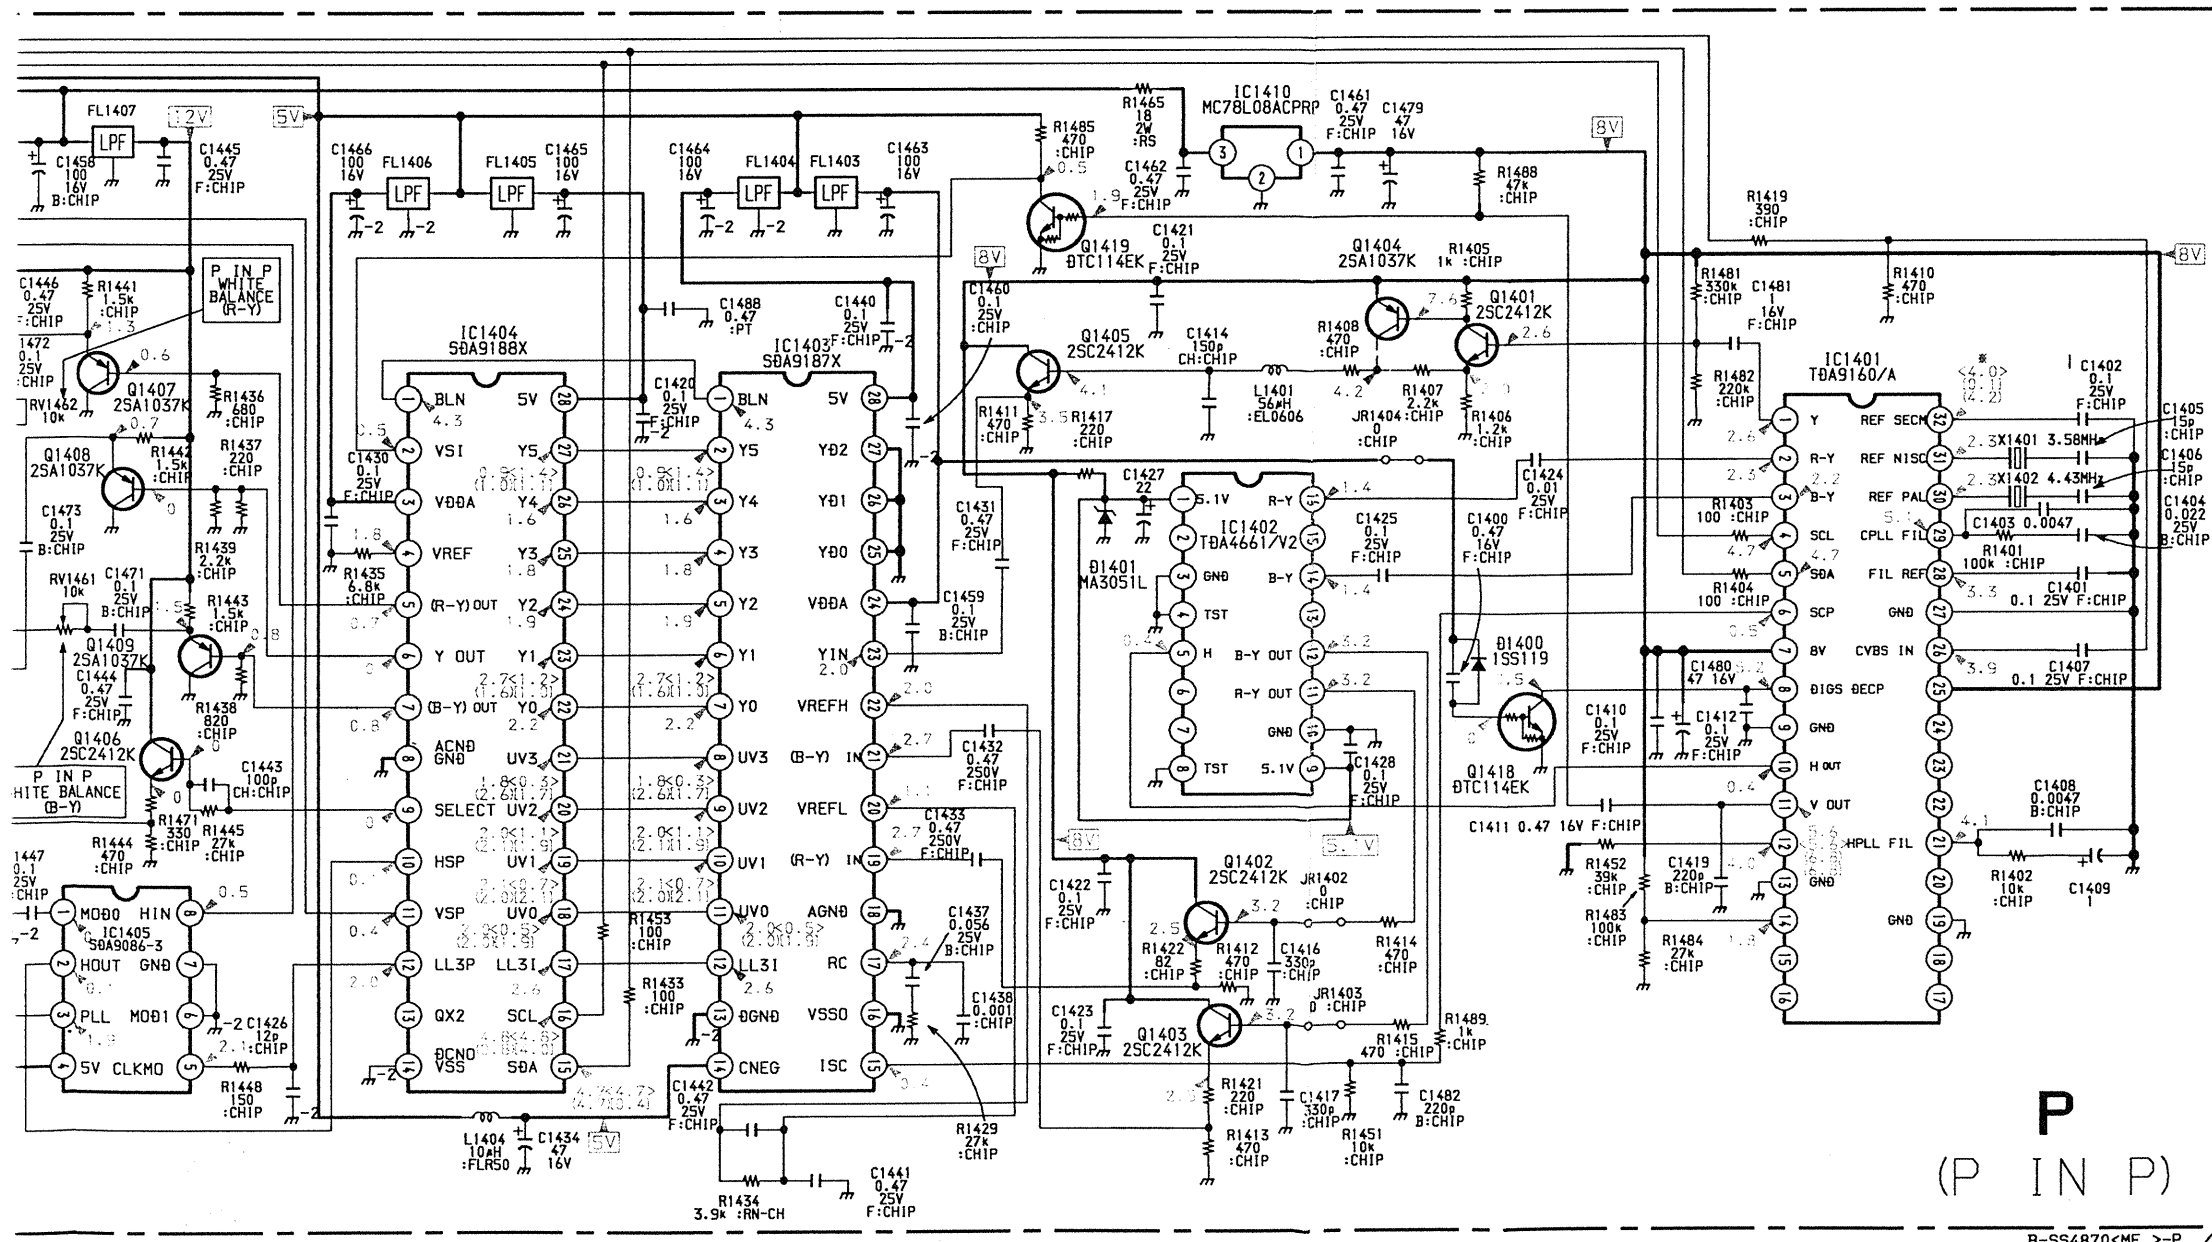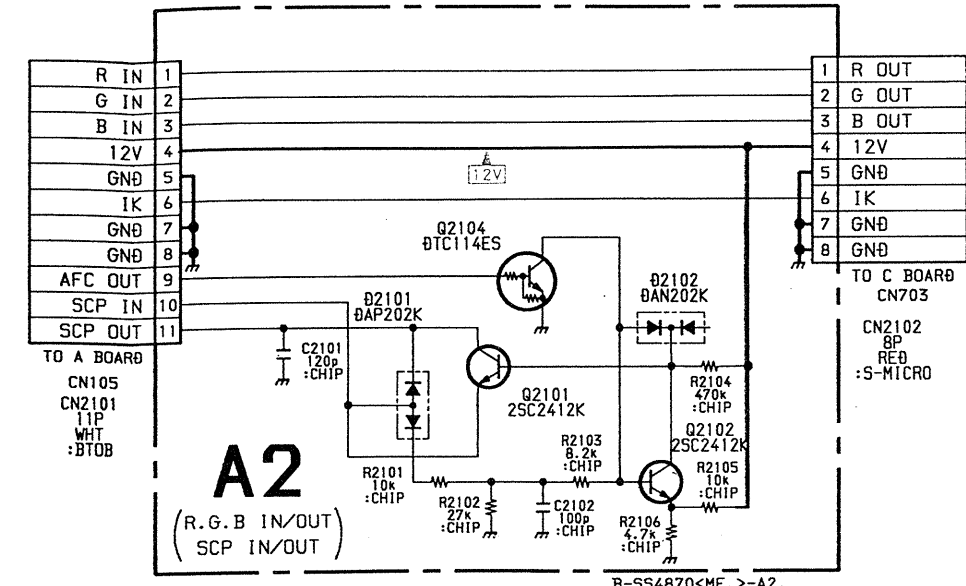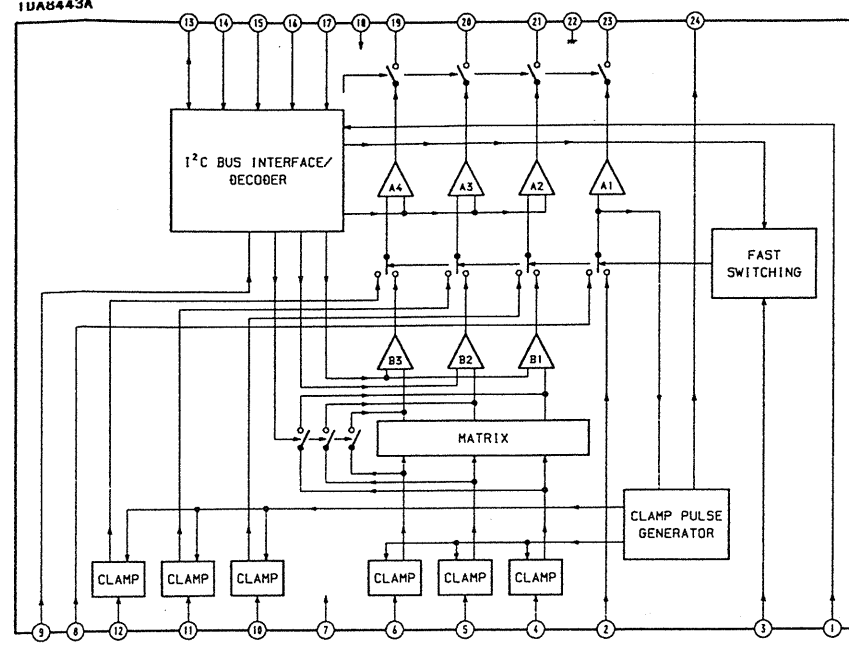   

P
(P IN P)

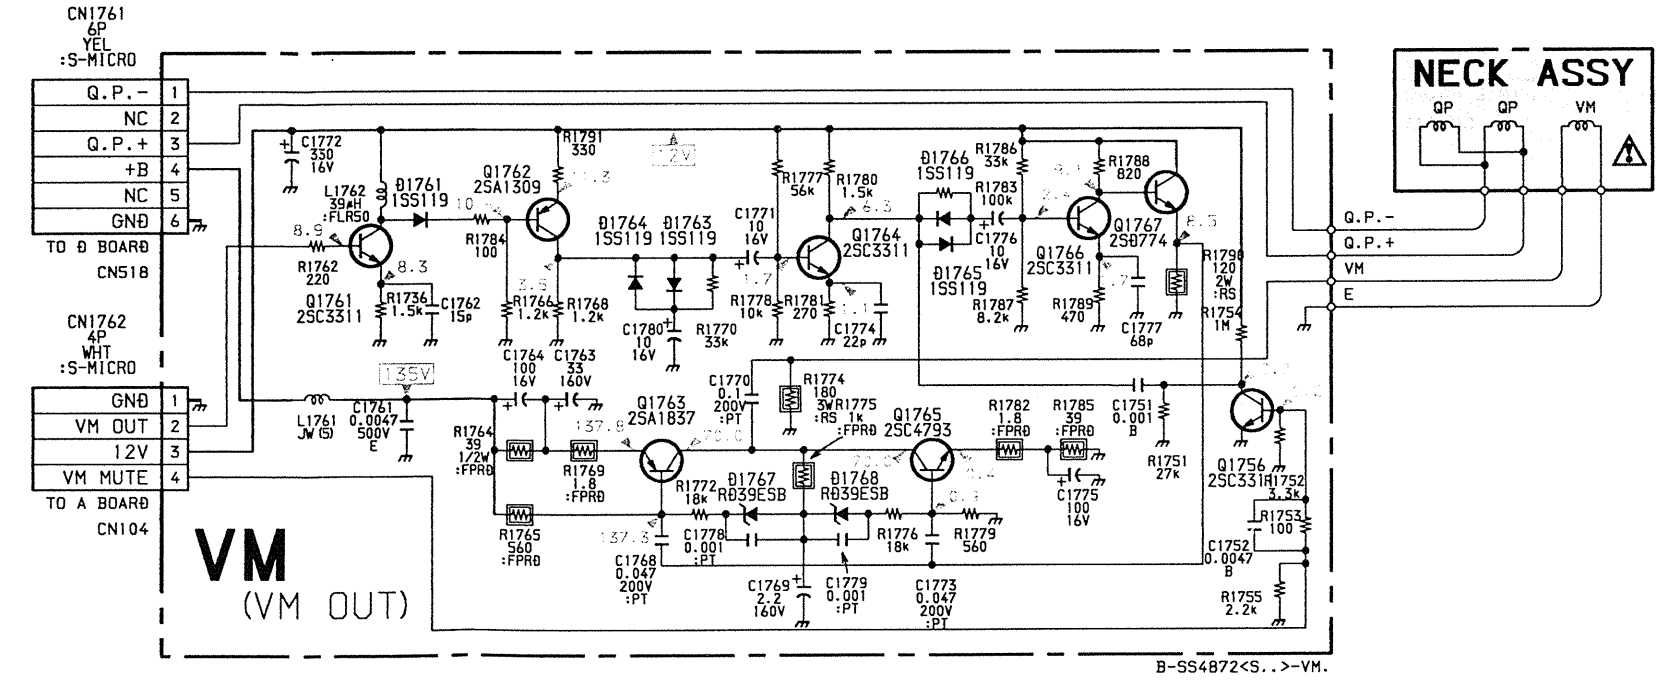 

VM
(VM OUT)

RTV servis Horvat

 
Tel: ++385-31-856-637

Tel/fax: ++385-31-856-139




Mob: 098-788-319



www.rtv-horvat-dj.hr

• D1 BOARD WAVEFORMS


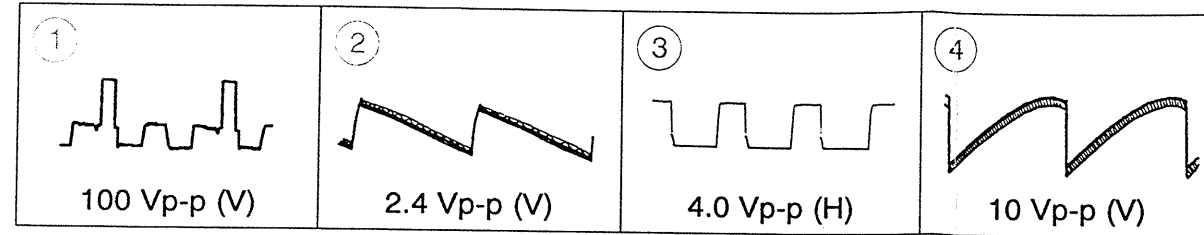


• C BOARD WAVEFORMS

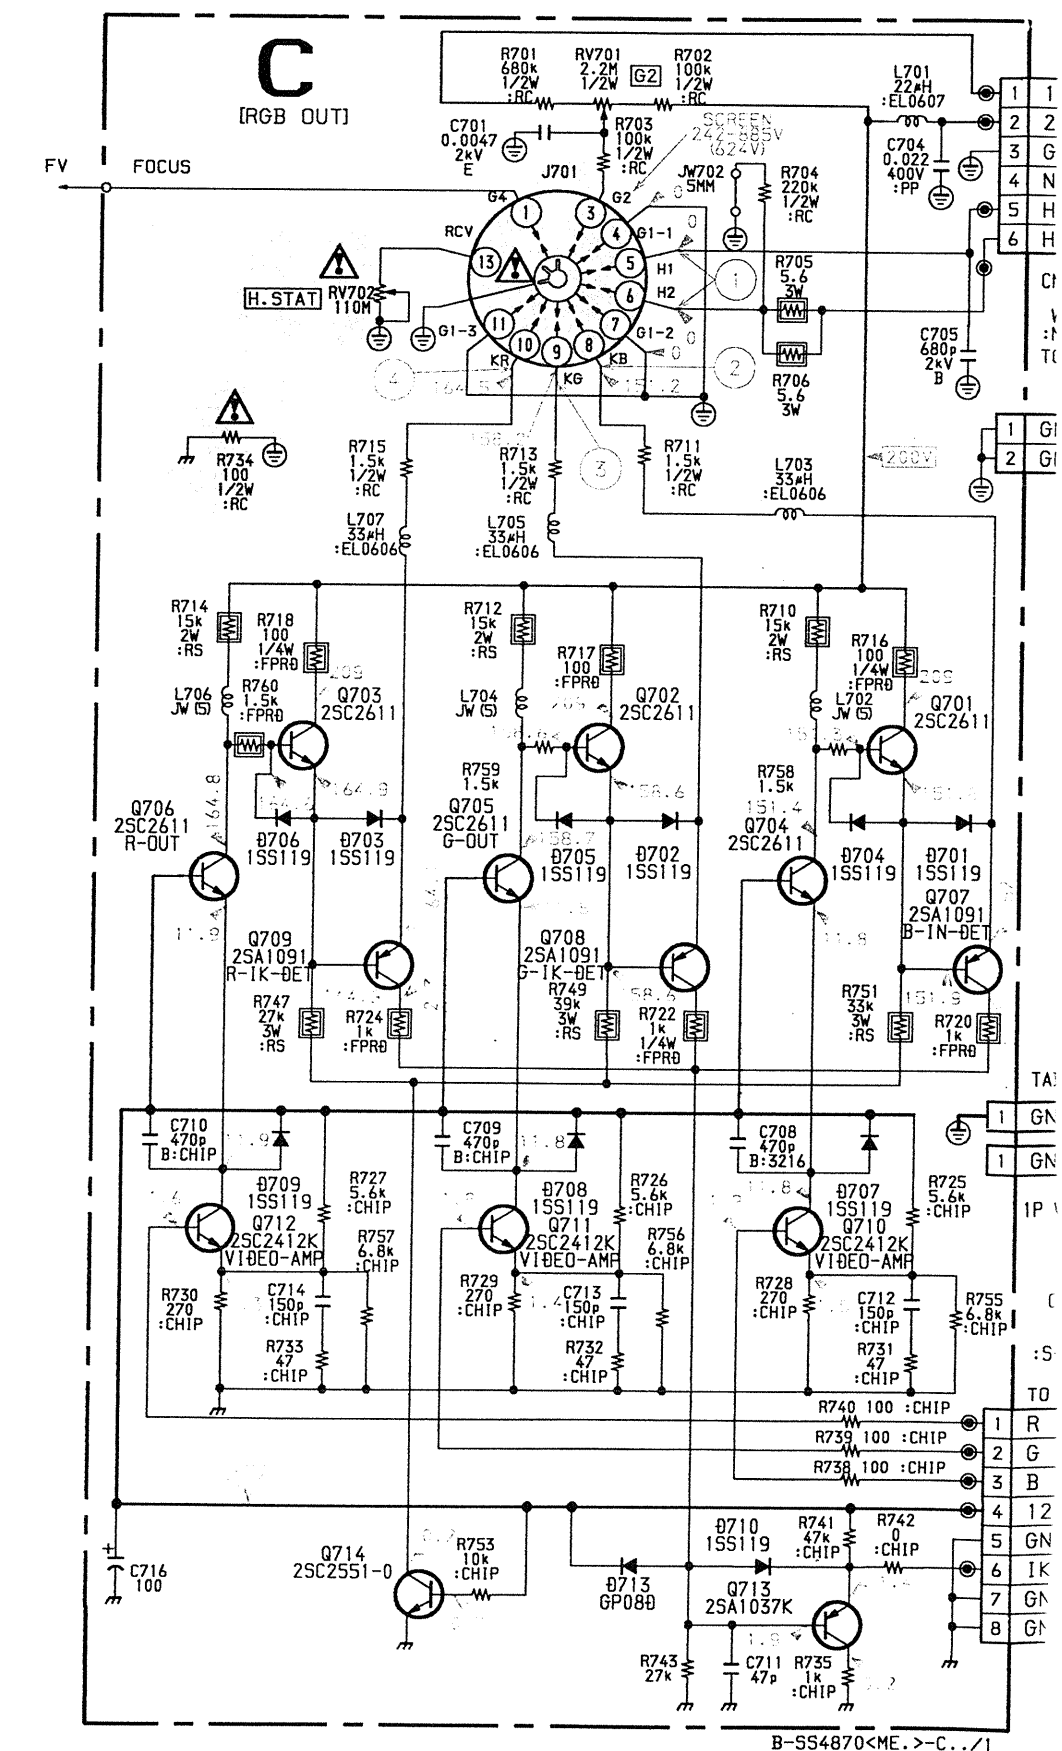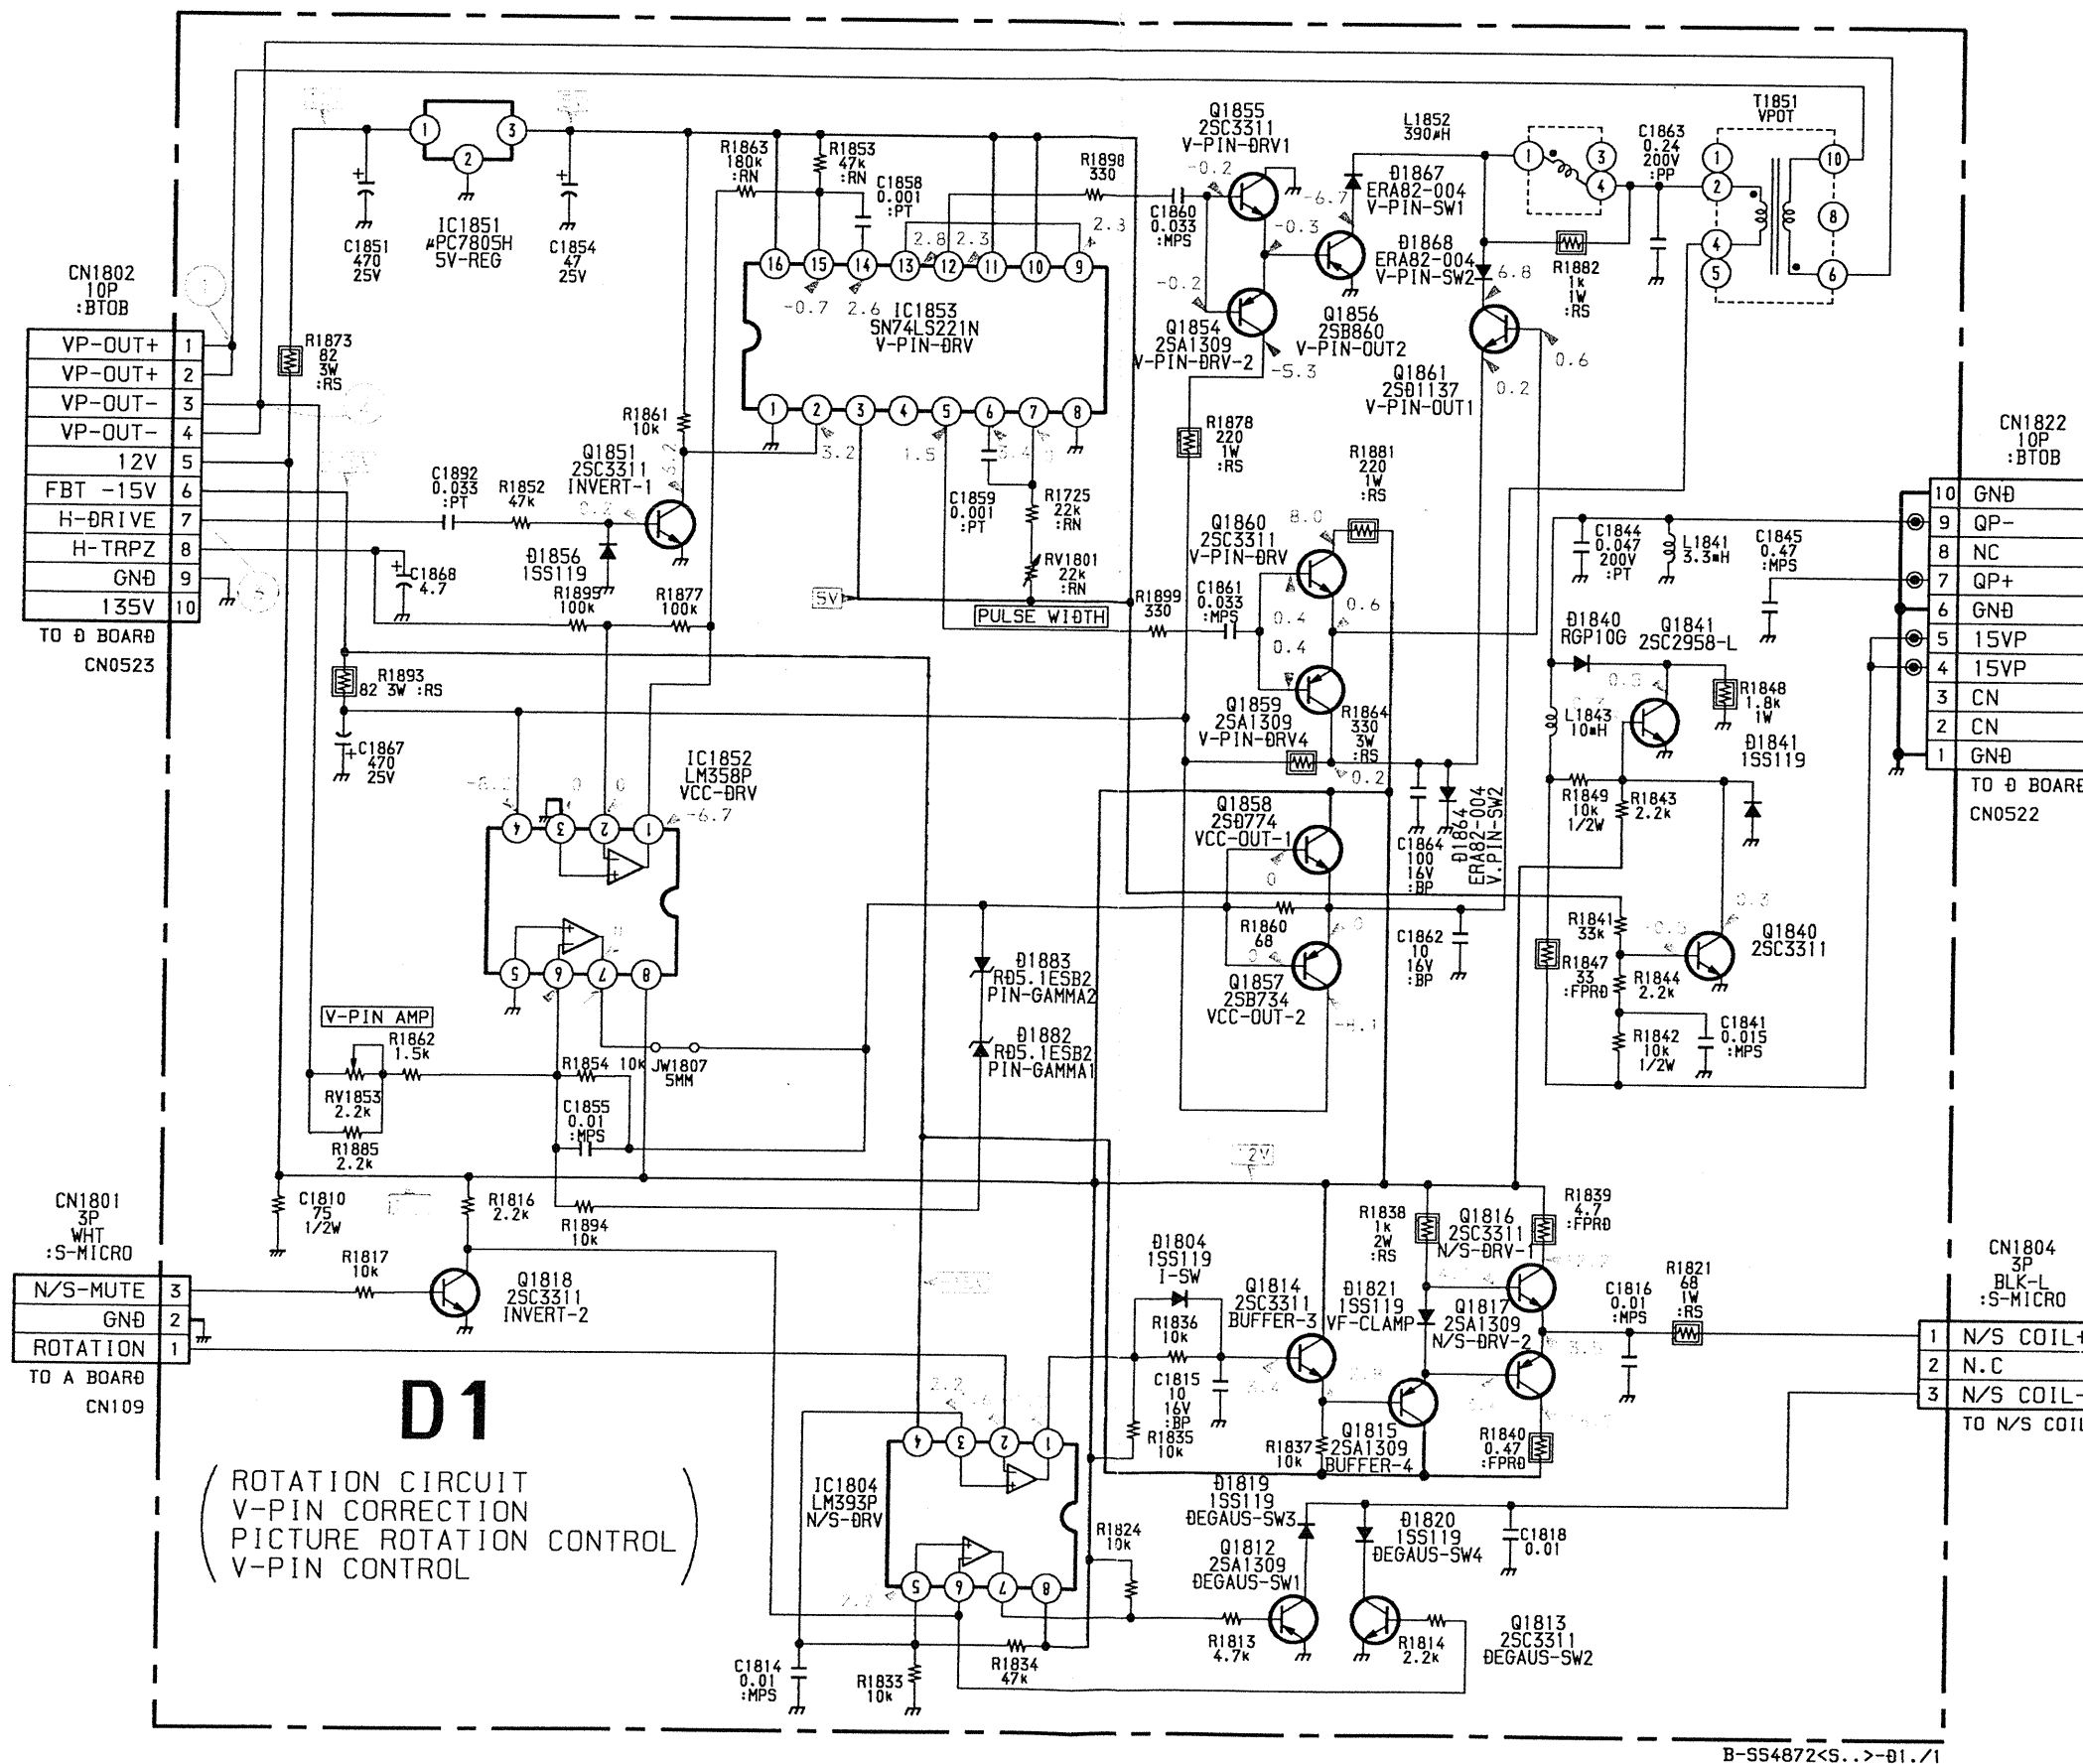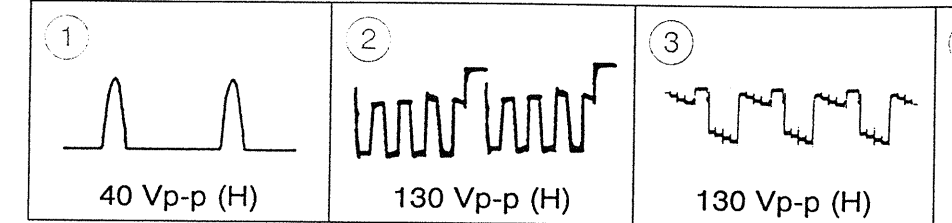   

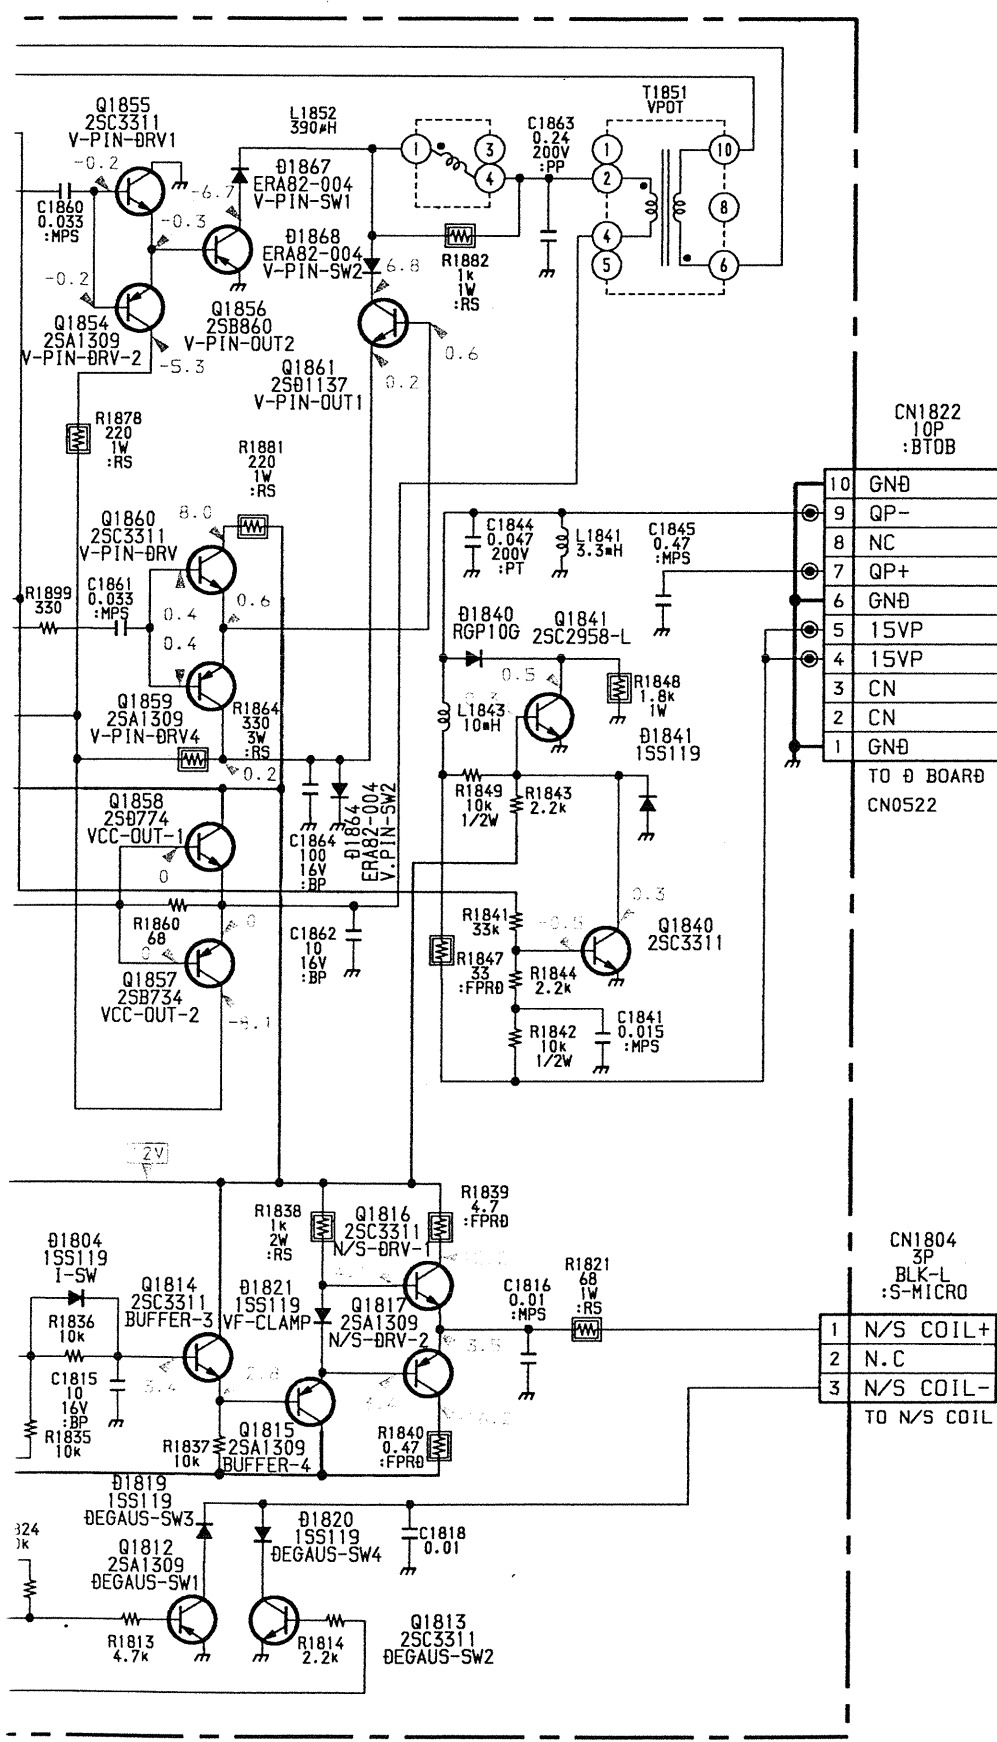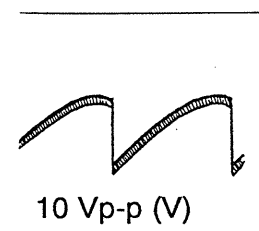  

• C BOARD WAVEFORMS

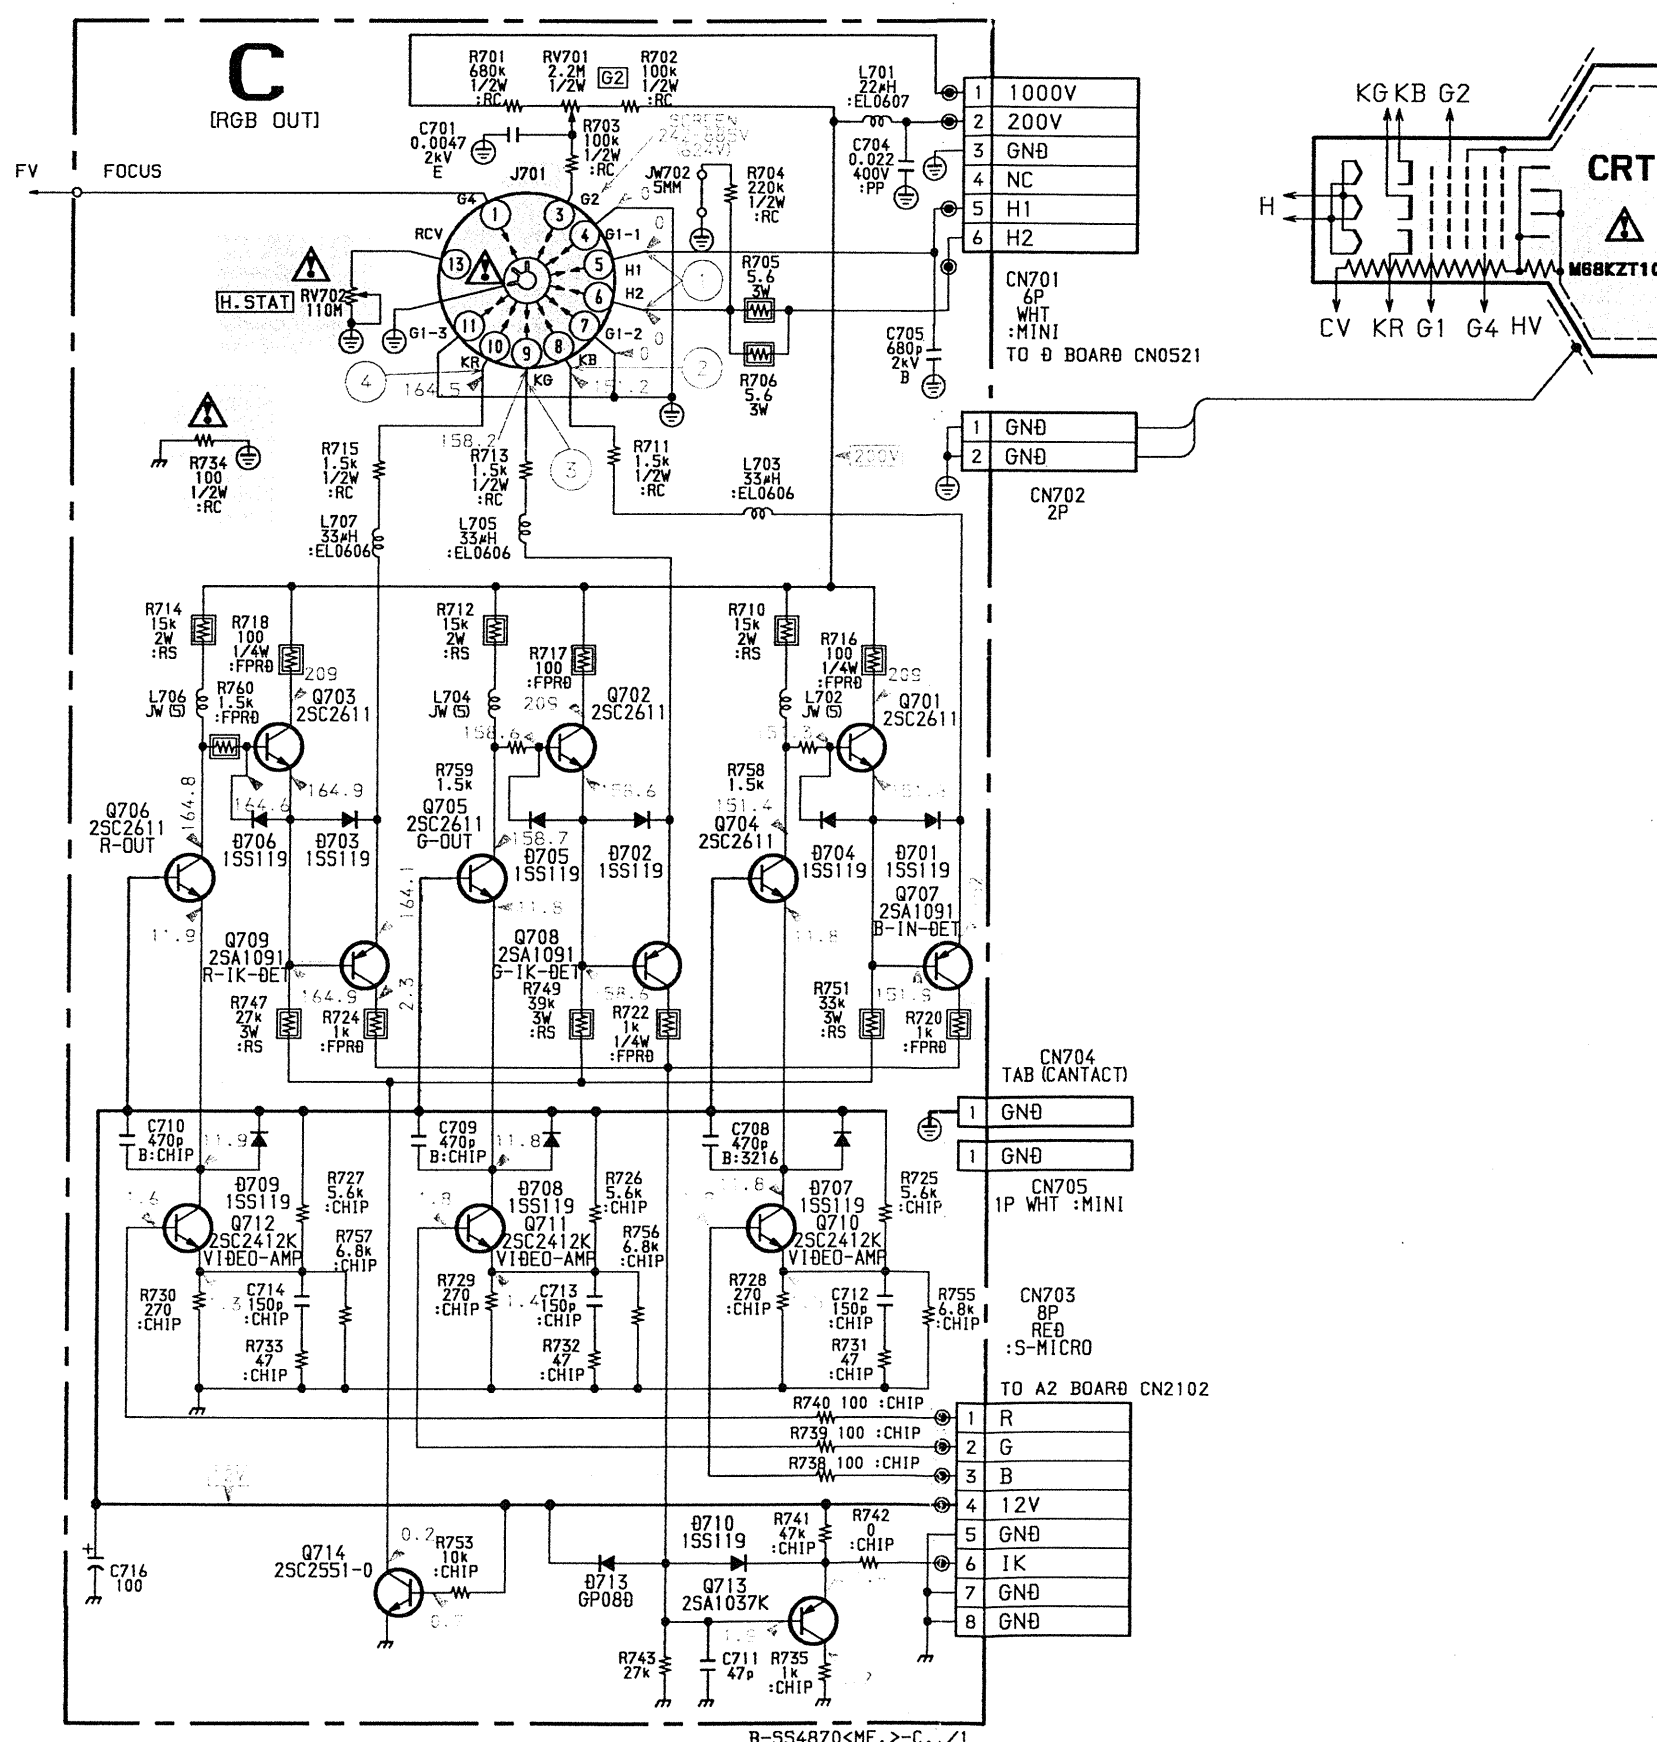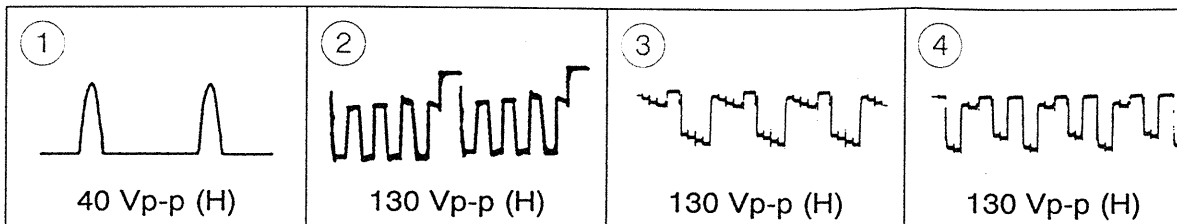  

E
F
G
H
I
J
K
L
M
N
O
P