

SONY®

SERVICE MANUAL

FE-2 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
KD-32DX40AS	RM-933	AUS	SCC-U78A-A				

CORRECTION - 1

SUBJECT : CORRECTION OF FBT ASSY PART NUMBER IN ELECTRICAL PARTS LIST

SECTION 7. ELECTRICAL PARTS LISTSee page 56

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
---------	---------	-------------	--------	---------	---------	-------------	--------

< Original Parts >

***A-1300-274-A A Board, Complete**

T511	Δ 8-598-834-40	FBT ASSY, NX-4521//Z	
------	-----------------------	----------------------	--

< Revised Parts >

***A-1300-274-A A Board, Complete**

T511	Δ 1-453-308-41	TRANSFORMER ASSY, FLYBACK (NX-4521//Z2B4)	
------	-----------------------	-------------------------------------------	--