

**Model:** CCD-TR416, CCD-TR516, CCD-TR67, CCD-TR716, CCD-TR917, CCD-TR87, CCD-TR940, CCD-TRV15, CCD-TRV16, CCD-TRV215, CCD-TRV25, CCD-TRV36, CCD-TRV43, CCD-TRV46, CCD-TRV615, CCD-TRV65, CCD-TRV66, CCD-TRV715, CCD-TRV75, CCD-TRV815, CCD-TRV85, CCD-TRV93, CCD-TRV95, CCD-TRV99, DCR-TR7000, DCR-TRV103, DCR-TRV110, DCR-TRV315

**No. 500R2**

**Subject:** Record (Start/Stop) button is available as a replacement part. Follow the procedure listed below.

**Date:** September 5, 2001

**Symptom:**  
**(1170)**

S/S button falls off the cabinet (L) assy.

**Solution:** Button is now available for all listed models. Order part 396056601. See the following steps for button installation:

1. The Cabinet (L) Assy does not need to be removed in order to replace the S/S button.
2. Set the S/S button to the standby mode.
3. Insert the compression coil spring (3-979-642-01) onto the S/S button's shaft.
4. When reassembling the S/S button, align the S/S button's claws with the corresponding hole of the standby knob.

