

Replacing the interface board

The interface board is an option for the printer TSP2000 series. When replacing the interface board, please use the following procedure.

Interface Board	Applicable printer
IFTBD2000D RS-232C	TSP2000 Series
IFTBD2000C Parallel	

Replacement

1. Make sure that the power cord is unplugged.
2. Remove the 2 screws.
3. Remove the interface board unit in the direction of the arrow.
4. Position the interface board in the PCB guide as shown in the illustration so that the components on the interface board face upwards. Slide the interface board in until it is firmly seated.

Note:

Insert the interface board so that it connects with the connector.

5. Secure the interface board using the two screws provided with the interface board package.

Note:

Check that the DIP switch settings on the printer are set as specified in “Appendix B: Dip Switch Setting” in the User’s Manual when installing the interface board.

