

**ADDENDUM 1**  
**to**  
**DIGITAL CLOCK DISTRIBUTOR**  
**500 SERIES**  
**CARD INFORMATION**

**1. GENERAL**

**1.001** This is an addendum to Issue 2 of Telecom Solutions' Digital Clock Distributor 500 Series Card Information section (part number 097-44018-04) which is part of the TL1 User's Guide (997-44018-15). Place this addendum in front of Issue 2 of 097-44018-04.

**1.002** Whenever this addendum is reissued, the reason for reissue will be given in this paragraph.

**2. CHANGES**

**2.001** Remove the sheet containing pages 1 and 2 from the Card Information section, and replace with pages 1 and 2 of this Addendum.



## DIGITAL CLOCK DISTRIBUTOR

### 500 SERIES

### CARD INFORMATION

CONTENTS	PAGE
1. GENERAL .....	1
2. MIS CARD SWITCHES .....	1
3. FACTORY SETTINGS .....	1
4. COMMAND DIFFERENCES .....	1
 Figures	
1. MIS Card Switch .....	2
 Tables	
A. Factory Settings .....	3
B. Command Differences .....	5

#### 1. GENERAL

**1.01** This practice provides card information on the Telecom Solutions' MIS card (090-44018-15) straps and factory settings. Also included are the differences between the commands used with the latest MIS cards and previous MIS cards. For information on any card not mentioned in this practice, refer to the manual that came with the shelf where the card is installed.

**1.02** This practice has been reissued to modify the definition of section 5 of switch SW1 on the MIS card. The changed area is marked by a change bar.

#### 2. MIS CARD SWITCHES


**2.01** The switches and straps for the Maintenance Interface, System (MIS) card are shown in Figure 1.

#### 3. FACTORY SETTINGS

**3.01** The factory settings are listed in Table A.

#### 4. COMMAND DIFFERENCES

**4.01** Table B lists the commands used with MIS card 090-44018-15 compared to the commands used with MIS card 090-44018-14. The correlation between the two sets of commands is not exactly one-for-one because some parameters were not settable in earlier versions, the function of two commands was combined into one, etc.

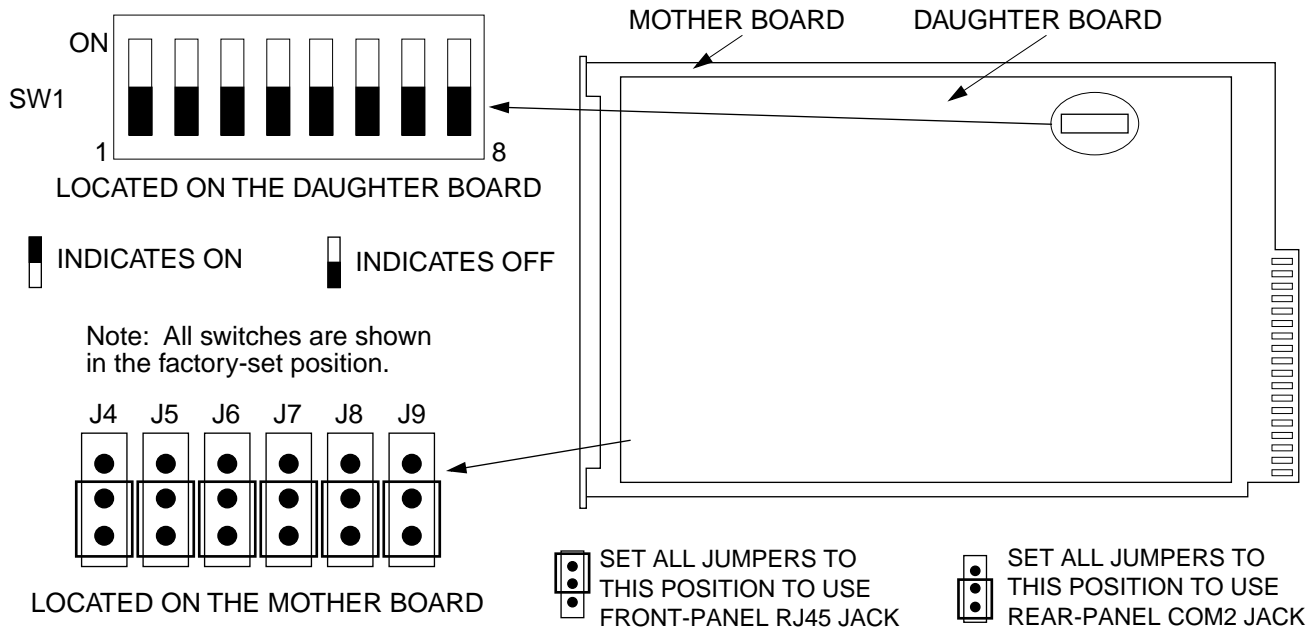

SW1 Section	Position	Description	Factory Setting
1	On	1200 baud	—
	Off	9600 baud	X
2 and 3	2=on, 3=any	Odd parity	—
	2=off, 3=on	Even parity	—
	2=off, 3=off	No parity	X
4	On	Password protection enabled	—
	Off	Password protection disabled	X
5	On	Causes an automatic download of the card configuration database from the MIS card to any other card whose database does not match the MIS database for that slot, such as: after a shelf power cycle, replacement of a card with the same card type, or replacement of the MIS card	—
	Off	Disables automatic database download	X
6	On	Factory set. Do not change.	X
7	On	Installed in an Expansion or Remote Shelf	—
	Off	Installed in a Master Shelf	X
8	Off	Normal operation (do not change)	X

Note: Section 1(baud rate) affects COM 2 and the front panel RJ45 jack only. Both of these ports (COM 2 or front panel RJ45 jack) cannot be active at the same time. The active port is selected by jumpers.

Figure 1. MIS Card Switch