# TechInfo Sheet

## Audio Visual

email: av.technical@mail.panasonic.co.uk

fax: 01344 853689

Product Group: Audio Model: SE-CH570

Date: 22/10/98 Revision No: 01 Document No: 01

**Subject: Fan Motor Failure** 

**SUBJECT**: Fan Motor Failure

**SYMPTOM:** Power supply turns off during operation. 'F61' is displayed on the FL.

(Occurs at a level of sound volume where the fan rotates).


**CAUSE**: The motor fan dislocated either by a fall during transportation or by

vibration, fails to rotate. Upon failure f the fan, the protector circuit turns off power supply and, at the same time, indicates 'F61' on the FL.

**REMEDY**: The motor fan fixing ribs are changed in shape so that the fan will not

be dislocated easily.

#### **SERVICE REMEDY:**

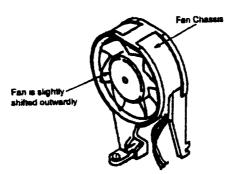

- When the fan is found dislocated, insert it. If the inserted fan works property, it can be used as it is.
  (No dislocation unless the set is dropped by mistake.)
- The fan motor of which the fan come easily out after re-insertion should be replaced with new one.

#### **ACTION ON PRODUCTION:**

From August 1996 production onward.

### **PART REQUIRED:**

REM0057 Fan Motor Ref. No. 29

Panasonic CS U.K.

Document No: 01 Model: SE-CH570