

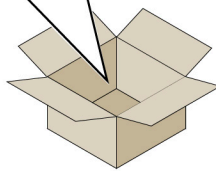


See User Manual
 参見 用户手册
 ユーザ・マニュアルを参照

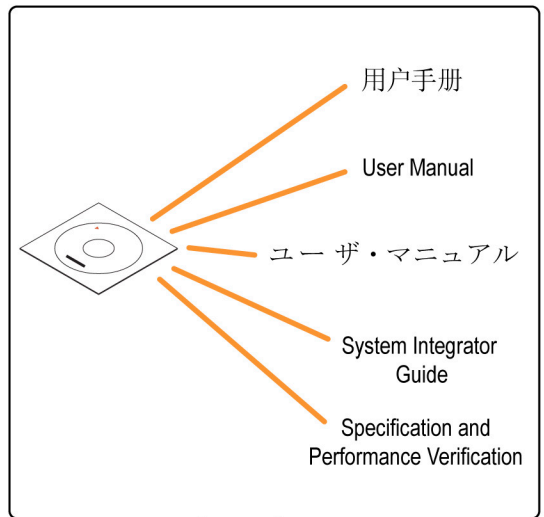

WVR4000 and WVR5000 Waveform Rasterizers Quick Start Guide

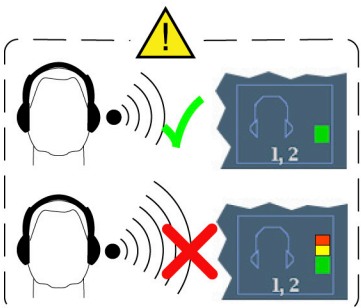


1



See User Manual

参见用户手册

ユーザ・マニュアルを参照

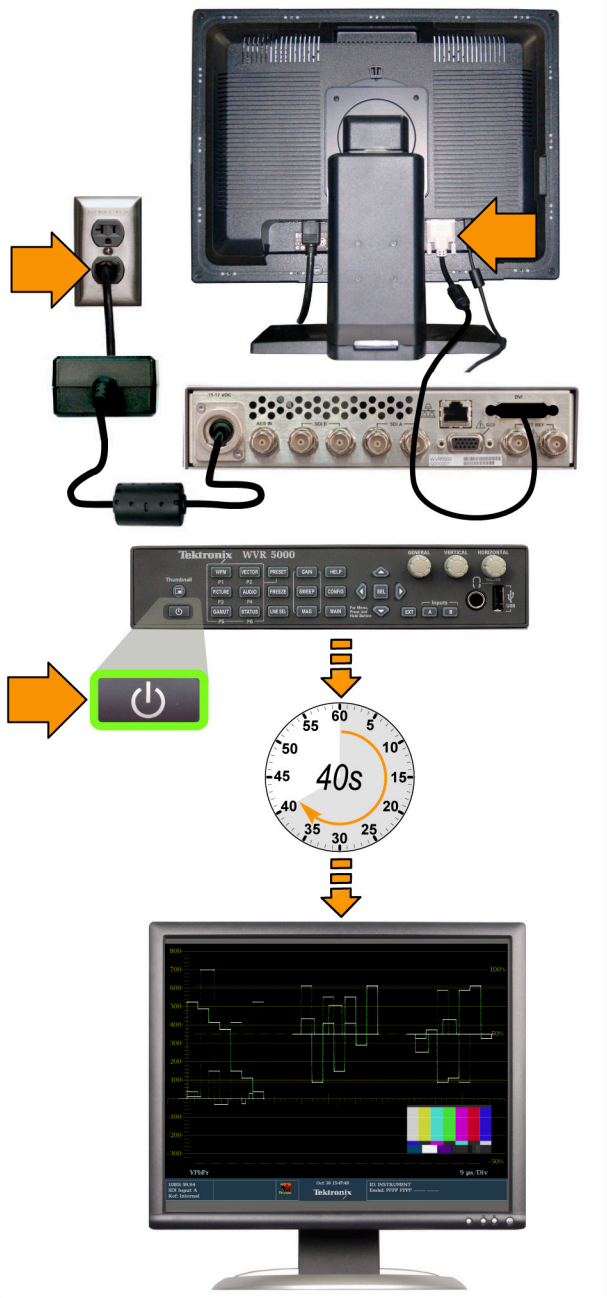

2

Tektronix TG700



SDI A

75 Ω

SDI A

A



Tektronix TG700




SDI B

75 Ω


SDI B

B



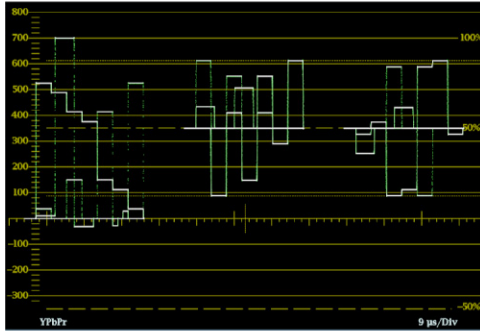

WFM

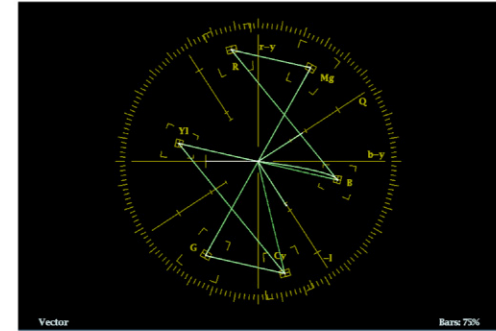



VECTOR



PICTURE



AUDIO

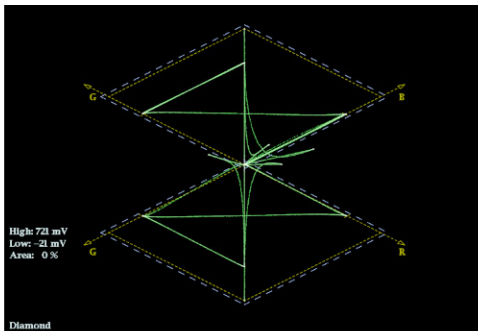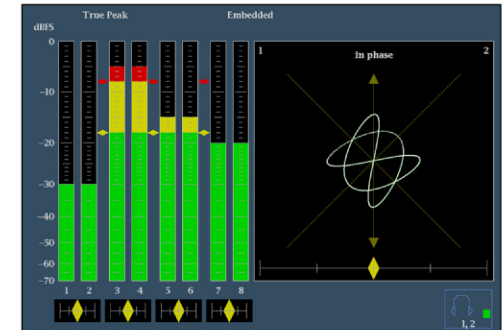

GAMUT

STATUS

Video Session

Input: SDI A Data Collect: Running
Signal: Run Time: 0:4, 00:07:41
Format: Auto 1080i 59.94 - HD SDI 422

IS2M Payload: No

SAV Place Err: No Y Stack Bits: _____
Field Length Err: No C Stack Bits: _____
Line Length Err: No
Line Number Err: No

Auxiliary Data: Y and C Present

Statistics	Status	Err Secs	Err Fields	% Err Fields
RGB Gamut Error	No	457	27384	99.9854 %
Chapal Gamut Error	No	4	7	0.0256 %
Luma Gamut Error	No	457	27384	99.9854 %
Y Chan CRC Error	No	7	20	0.0361 %
C Chan CRC Error	No	7	20	0.0361 %
Y Anc Checksum Error	No	0	0	0.0000 %
C Anc Checksum Error	No	5	13	0.0234 %

Changed since reset: Yes
Press "Select" to reset. Any "arrow key" stops/start.

