MANUAL

Serial Number 629

OSCILLOSCOPE SYSTEM

Tektronix, Inc.


070-417


S.W. Millikan Way P. O. Box 500 Beaverton, Oregon Phone MI 4-0161 Cables: Tektronix

Tektronix International A.G.

Terrassenweg 1A ● Zug, Switzerland ● PH. 042-49192 ● Cable: Tekintag, Zug Switzerland ● Telex 53.574

264

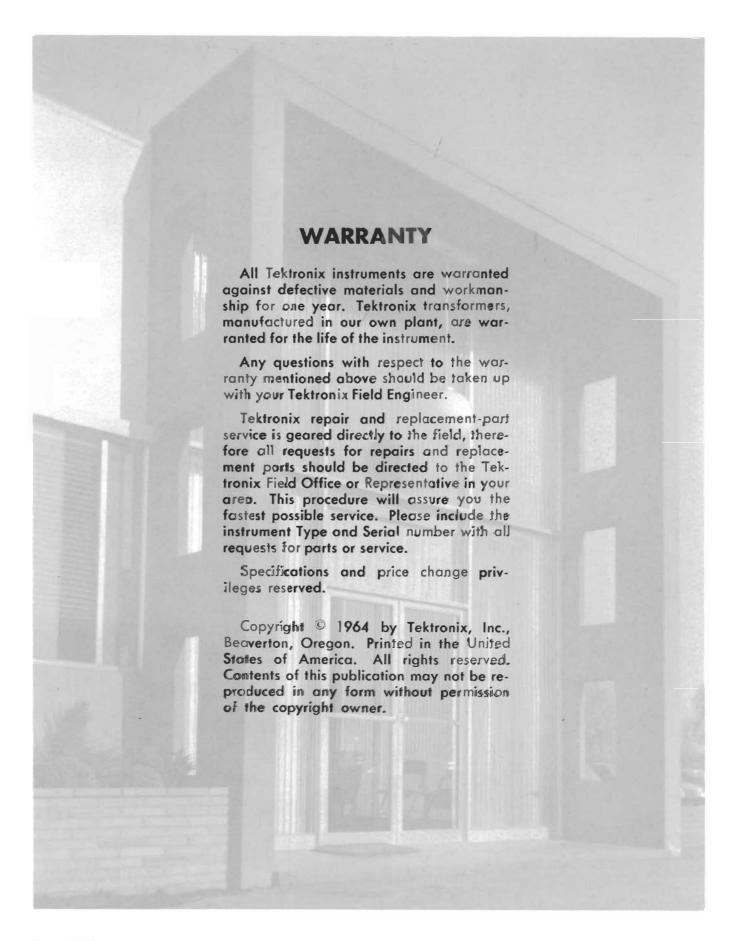

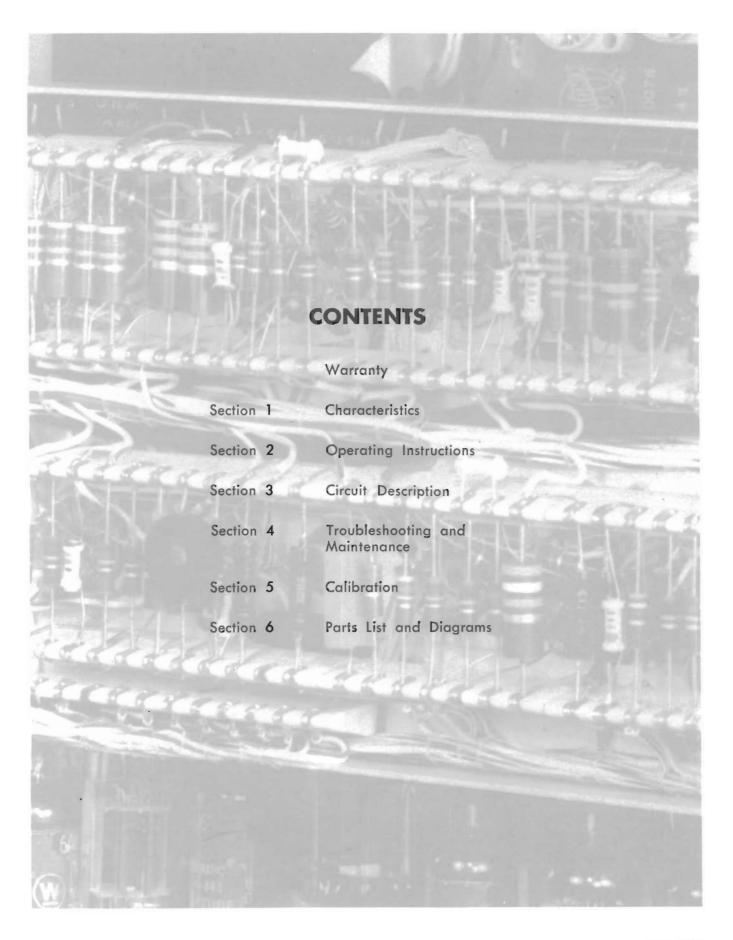



Type 561S Oscilloscope System.

SECTION 1 **CHARACTERISTICS**

General Information

The Type 561S Oscilloscope system consists of a plug-in dual-trace amplifier (Type 3A1S), a plug-in delaying sweep time-base unit (Type 3BIS) and the indicator unit (Type 561S). The indicator and plug-in units are not interchangeable with units that are not suffixed with the letter 'S'. One exception is that any Tektronix 2- or 3-Series (nonsampling) plug-in unit can be operated in the right-hand opening of the Type 561S.

Type 561S

Type T5033. Deflection factor: vertical Crt 11.1 to 12.3 volts/cm and horizontal 19.4 to 21.4 volts/cm.

Acceleratina **Potential**

3.5 kv.

Amplitude Calibrator Square-wave output from 0.2 mvolts to 100 volts peak-to-peak at line frequency. Voltage accuracy is ±3%. Risetime

is about $5 \,\mu \text{sec.}$

Line Voltage Requirements 105-125/210-250 volts rms with a line fre-

quency of 50-400 cps.

Power Requirement

210-240 watts.

Ambient Temper- 20° F to 120° F (-7° C to 49° C).

ature Range*

Mechanical Features

Construction: Aluminum-alloy chassis with a three-piece cabinet.

Dimensions: $14\frac{1}{2}$ in high by 10 in. wide by 211/8 in. deep. Net Weight: 28 lbs.

Type 3A1S

Sensitivity 10 mv/div to 10 v/div in 10 fixed steps (1, 2, 5 sequence). Accuracy is 3% when

the VARIABLE control is set to CALIB.

Dc to 25 mc with a corresponding rise-Bandwidth time of about 14 nsec, (3 db down, ± 1 db,

at 25 mc).

Ac or dc. Ac coupling limits the low-fre-Input Coupling

quency response to about 2 cps (0.2 cps

with a $10 \times$ passive probe).

Input Imped-

1 megohm ($\pm 1\%$) paralleled by about 47 pf.

ance

Operating Modes

Channel 1 or 2 only, alternate or chopped dual-trace operation and algebraic addition or subtraction. The chopping frequency in the chopped mode of operation

is about 100 kc.

Between-Channel About 47 db. Isolation

Input Connectors Female UHF.

Dynamic Deflec- ±3 cm with respect to crt center.

tion Range

Mechanical

Dimensions: $6\frac{1}{2}$ in. high by $4\frac{1}{4}$ in. wide

Features by $14\frac{1}{2}$ in. deep. Net Weight: 5 lbs.

Type 3B1S

Sweep Rates 0.5 µsec/div to 1 sec/div in twenty fixed steps (1, 2, 5 sequence). Accuracy is 3%

when the VARIABLE (Time/Div) control is

set to CALIB.

A 10X sweep magnifier increases the Sweep sweep rate ten times at any setting of the Magnification

TIME/DIV switch. Accuracy is 5%.

Sweep delay can be varied (uncalibrated) Sweep Delay

from 0.5 usec to 10 sec. Time litter is less

than 1 part in 20,000.

Internal or external (both time-base cir-Trigger Source

cuits).

Trigger Cou-Automatic, ac or dc in the Normal or pling Delaying Sweep Triggering mode. Ac and

dc in the Delayed Sweep Triggering mode.

Trigger Slope + or -.

Trigger Signal Requirements Internal: Displayed amplitude must be at

least 4 mm at 1 kc.

External: Two ranges available; ± 0.5 to ± 15 volts and ± 5 to ± 150 volts. Frequency: Dc to 5 megacycles with reduced sensitivity at higher frequencies.

Mechanical Features

Dimmensions: $6\frac{1}{2}$ in. high by $4\frac{1}{4}$ in. wide

by $14\frac{1}{2}$ in deep. Net Weight: 51/4 lbs.

Tektronix Part No.
161-010
103-013
378-525
020-007
070-417

^{*}The Type 561S is equipped with a thermal cutout which disconnects instrument power if the temperature exceeds safe operating limits. At sea level and with the line voltage within the nominal range, the cutout will actuate if the internal temperature of the instrument exceeds about 160° F or if the ambient temperature exceeds about 122° F.

NOTES

\

SECTION 2 OPERATING INSTRUCTIONS

FUNCTION OF FRONT-PANEL CONTROLS AND CONNECTORS

Type 561S

FOCUS Provides adjustment for a well-defined

display.

INTENSITY Controls brightness of the display.

ALIGNMENT Aligns the trace with the horizontal grati-

cule markings.

ASTIGMATISM Used in conjunction with the FOCUS con-

trol in obtaining a well-defined display.

CALIBRATOR Rotary 19-position switch that selects the calibrator voltage at the CAL OUT con-

nector.

UHF female connector for making connec-CAL OUT

tion to the calibrator.

SCALE ILLUM Controls graticule illumination.

POWER ON Toggle switch for turning the instrument

on and off.

CRT CATHODE Switch should be in the down position SELECTOR when the vertical plug-in unit is operated

in the dual-trace chopped mode. Switch should be in the up position during normal operation or when an external blanking signal is applied to the EXT CRT CATH-

ODE binding post.

EXT CRT Binding post that is ac coupled to the crt

CATHODE cathode.

GND Binding post ground connection.

Type 3A1S

Functions of the input connectors, VOLTS/DIV, VARIABLE, AC-DC-GND, POSITION, and DC BAL controls are the same

for both channels.

(Rear Panel)

INPUTS Female UHF connectors for applying the

signal to be displayed.

POSITION Controls vertical position of the display.

VOLTS/DIV Sets vertical deflection factor. (VARIABLE

control must be set to CALIB for the deflection factors to be as indicated by the

VOLTS/DIV switch.)

VARIABLE Varies the deflection factor at any given setting of the VOLTS/DIV switch by a

ratio of about 2.5:1.

UNCAL Lamp that lights to warn when the VARI-

ABLE control is not set to CALIB.

DC BAL Screwdriver adjustment that sets the amplifier for no trace shift when the VARI-

ABLE control is turned (with no signal

applied).

CALIB

MODE

Screwdriver adjustment that matches the basic deflection factor of the plua-in unit to the vertical deflection factor of the in-

dicator-unit crt.

CH 1: Allows only Channel 1 to display

a signal.

CH 2: Allows only Channel 2 to display a

signal.

ALTER: Allows both channels to display a signal; alternating after each sweep.

CHOP: Allows both channels to display a signal alternately during each sweep.

ADDED: Allows both channels to operate simultaneously. The resultant display is the algebraic sum or difference of the

two channels.

INV (CH 1) NORM

Inverts the Channel 1 display in the INV position. Provides algebraic subtraction of two signals when the MODE switch is set

to ADDED.

AC-DC-GND (Input Coupling Switch)

AC: Blocks the dc component of an applied signal from the input stage of the

instrument.

DC: Directly couples the applied signal to the input stage of the instrument.

GND: Grounds the input of the instrument (without grounding the input signal).

TRIGGER CH 1 ONLY PULL

A pull switch that internally couples only the Channel 1 signal to the triggering circuit. The signal is free from any be-

tween-channel switching transients.

Type 3B1S

MODE

NORM: Selects a normal sweep at a rate set by the TIME/DIV switch and triggering controlled by the NORMAL SWEEP TRIG-GERING controls.

INTEN: Intensifies a portion of the delaying sweep display. Width of the intensified portion is determined by the setting of the DELAY TIME RANGE and the position on the display is controlled by the DELAY TIME control.

DLY'D SWP: Expands the intensified portion across the full crt width. The sweep rate of this display is set by the DELAYED SWEEP knob.

TRIG INTEN: Intensifies a portion of the delaying sweep display. The delayed sweep must be triggered for the intensified portion to appear. The position of the intensified portion depends on the setting of the Delayed Sweep Triggering LEVEL control and the DELAY TIME control.

Operating Instructions — Type 561S

TRIG DLY'D SWP: Expands the intensified portion of the display (set in the TRIG INTEN position) across the full width of the crt. The sweep rate of this display is set by the DELAYED SWEEP switch.

POSITION

Moves the display horizontally. The POSI-TION control also serves as the 10 imesMAG switch; pull out to increase the sweep rate by $10\times$.

TIME/DIV AND DELAY TIME RANGE

Two switches in one. The large black knob has a white dot on its edge. When the white dot is set between the two black stripes on the plastic ring, the switches are locked together and the knobs set the sweep rate for both the normal and delayed sweeps. When the black knob is pulled out, it unlocks and may be turned to set the sweep rate of the delayed sweep and the delay time range. The TIME/DIV switch of the normal sweep (clear plastic ring) remains in position and the DELAYED SWEEP knob can be set independently.

VARIABLE

Red knob mounted concentrically with the TIME/DIV and DELAY TIME RANGE switch. Provides a continuously variable sweep rate from 0.5 $\mu {\rm sec}$ to 2.5 ${\rm sec/div}$ (uncalibrated). When the MODE switch is in the NORM position, the VARIABLE TIME/DIV control varies the time per division of the normal sweep. In all other positions of the MODE switch the control varies the time per division of the delayed sweep. When the VARIABLE TIME/DIV control is turned fully clockwise it clicks into the CALIB position. When the control is not in the CALIB position, the neon UNCAL lamp lights.

DELAY TIME

Sets the point on the display where the delayed sweep starts (this is the beginning of the intensified portion when the MODE switch is in one of the INTEN positions).

VERNIER

A fine adjustment for the DELAY TIME control.

SWEEP CAL

A screwdriver adjustment to compensate for the slight variations between indicator units.

EXT TRIG

Jacks for applying an external trigger signal to the desired sweep circuit. The corresponding SOURCE switch must be set to EXT to trigger externally.

SOURCE

Selects either an internal or external triggering signal for the corresponding sweep circuit.

COUPLING

Selects either ac or dc coupling of the triggering signal. The AC position blocks any dc component of the triggering signal. The COUPLING switch of the Normal or Delaying Sweep Triggering block has an AUTO position which automatically free

runs the sweep in the absence of a triggering signal. A suitable trigger signal, however, will override the auto circuity and stable triggering will result when the LEVEL control is set properly.

SLOPE

Determines whether the sweep starts on the rising (+) or falling (-) portion of the triggering signal.

LEVEL

Determines the amplitude point on the triggering signal where sweep triggering occurs. The + direction allows the sweep to trigger at some higher positive point on the triggering signal and the - direction triggers the sweep at some higher negative point on the triggering signal. When the LEVEL control is pulled, a trigger attenuator is switched in to allow greater triggering range for external trigaerina.

Preliminary Operation

The following steps demonstrate the basic operation of the Type 561S Oscilloscope system.

- 1. Insert the Type 3AIS into the left-hand plug-in compartment and the Type 3BIS into the right-hand plug-in compartment of the Type 561S. Apply power and allow sufficient time for warmup.
- 2. Set the system controls as follows:

Type 561\$

CALIBRATOR	1 VOLTS*
FOCUS	Midrange
INTENSITY	Counterclockwise
astigmatis m	Midrange
SCALE ILLUM	Clockwise
CRT CATHODE SELECTOR	CHOPPED BLANKING

Type 3A1S

POSITION (both)	Midrange
VOLTS/DIV (both)	.5 VOLTS
VARIABLE (both)	CALIB
MODE	CHOP
INV (CH 1) NORM	NORM
AC-DC-GND	DC
Trigger ch 1 Only	Pull out

Type 3B1S

MODE	NORM
POSITION	Midrange and pushed in
TIME/DIV AND DE- LAY TIME RANGE	10 mSEC

^{*}To use the P6006 Probes with the Type 3A1S, set the Type 561S CALIBRATOR switch to 10 VOLTS.

VARIABLE TIME/DIV

DELAY TIME

VERNIER

SOURCE (both)

COUPLING (both)

SLOPE (both)

LEVEL (both)

CALIB

Midrange

Midrange

AC

+

UNT

AC

UNT

AC

SLOPE (both)

H

LEVEL (both)

O and pushed in

- Connect the jumper leads between the Type 3A1S input connectors and the Type 561S CAL OUT connector.
- 4. Slowly turn the Type 561S INTENSITY control clockwise to set the displayed traces at the desired viewing level. (The POSITION controls of the vertical unit may require adjustment to get both traces into the viewing area of the graticule.)
- Adjust the Type 3A1S POSITION controls slightly to associate the two displays with their respective channels. Set the ASTIGMATISM and FOCUS controls for a well-defined display.
- 6. Set the VOLTS/DIV switch of Channel 2 to 1; the Channel 2 display should cover 1 graticule division and the Channel 1 display should cover 2 divisions. If not, the CALIB control needs adjustment; see "CALIB Adjustment" in this section. Return the Channel 2 VOLTS/DIV switch to .5
- Turn one of the Type 3A1S VARIABLE controls. Notice that the verical deflection of one of the displays decreases a ratio of approximately 2.5:1. Return the VARI-ABLE control to CALIB.
- Set the Type 3B1S TIME/DIV AND DELAY TIME RANGE switch to 20 mSEC. Twice as many cycles of the calibrator waveform are now displayed on the crt. Return the TIME/DIV AND DELAY TIME RANGE to 10 mSEC.
- Set the Type 3B1\$ MODE switch to INTEN (non-triggered).
- Pull out the DELAYED SWEEP knob and set for a delay time range of 1 msec.
- 11. Adjust the INTENSITY control so that the intensified portion of the display is easily visible (the intensified portion of the display should be about 1 division long and be near the middle of the display).
- 12. Set the delay time of the Type 3B1S so that one of the rising portions of the calibrator waveform is intensified.
- 13. Set the Type 3B1S MODE switch to DLY'D SWP (non-triggered). The display should now be an expanded version (10×) of the intensified portion of the waveform observed in the previous step.
- 14. Vary the DELAY TIME control setting and notice that virtually any part of the display in step 12 can be observed in magnified form.

NOTE

The sweep rate of the delayed sweep is determined by the setting of the DELAYED SWEEP knob. Therefore, the displayed sweep rate of step 14 is 1 msec/div. Since the sweep rate of the intensified display was 10 msec/div, the delayed sweep display is magnified 10 times (e.g. 10 msec divided by 1 msec).

- 15. Set the Type 3B1S MODE switch to TRIG INTEN.
- 16. Vary the Delayed Sweep Triggering LEVEL control setting. Notice that the intensifed portion of the display appears and disappears as the control is turned. Set the control so the intensified portion is stable.
- 17. Vary the DELAY TIME control setting and notice that the intensified portion of the display jumps from one point on the waveform to the next rather than moving smoothly. This is because, after the delay period ends, the delayed sweep must be triggered before it will start.

Connections

It is often possible to make signal connections to the Type 3A1S with short unshielded test leads. This is particularly true for high-level, low-frequency signals. When such leads are used, make a ground connection between the Type 3A1S or oscilloscope chassis ground and the chassis of the equipment under test. Position the leads away from any stray electric or magnetic field to avoid erroneous displays.

In many low-level applications, unshielded leads are unsatisfactory for making signal connections because of stray signal pickup. To prevent unwanted signal pickup, use shielded (coaxial) cables or the attenuator probes. Be sure the cable ground conductors are connected to the chassis of both the oscilloscope and the signal source with short leads.

Loading

As nearly as possible, simulate actual operating conditions in the equipment under test. For example, the equipment should work into a load impedance equal to that which it will see in actual use.

Consider the effect of loading on the equipment under test caused by the input circuit of the Type 3A1S. The input circuit can be represented by a resistance of 1 megohm ($\pm 1\%$) shunted by a capacitance of about 47 pf. A few feet of shielded cable increases the capacitance considerably.

Use of Probes

The attenuator probes supplied with the Type 561S reduce both capacitive and resistive circuit loading to a minimum and, at the same time, reduces plug-in sensitivity. The attenuation introduced by the probe permits measurements of higher signal voltages than the Type 3A1S can accommodate alone. When making amplitude measurements with the probes, be sure to multiply the observed amplitude by the probe attenuation.

Operating Instructions - Type 561S

To assure the accuracy of pulse or high-frequency measurements, check the probe compensation. Compensation instructions are given in the probe manual.

CALIB Adjustment

If the Type 3A1S is moved from one Type 561S Oscilloscope to another, adjust the gain as follows to compensate for differences in crt sensitivities:

- Set the Channel 1 AC-DC-GND switch to DC and the MODE switch to CH 1.
- Set the Channel 1 and 2 VOLTS/DIV switches to 0.2 and the VARIABLE VOLTS/DIV controls fully clockwise (CALIB). Be sure the neon lamps (UNCAL) are not lit.
- Set the time-base triggering contols for automatic triggering.
- Connect a jumper from the oscilloscope calibrator to the Channel 1 input connector and apply a 100-mvolt signal.
- Set the CALIB control for exactly 5 major divisions of deflection.
- 6. Turn the MODE switch to CH 2 and apply the 100-mvolt signal to the Channel 2 input connector. There should be 5 divisions of deflection. If the deflection is not 5 divisions, refer to the CH 2 GAIN procedure in Section 5.

DC BAL Adjustment

If the dc balance of a channel is not properly adjusted, the position of a no-signal trace will shift on the crt as the VARIABLE VOLTS/DIV control of that channel is turned. The dc balance should be checked occasionally during normal use. To properly set the dc balance proceed as follows:

- 1. Allow about 20 minutes warmup.
- 2. Set both AC-DC-GND switches to GND.
- Turn the MODE switch to CH 1 and position a freerunning (or AUTO coupling) sweep to the center of the graticule.
- Set the Channel 1 DC BAL control so there is no trace shift when the VARIABLE VOLTS/DIV control is turned.
- 5. Repeat the preceding steps for Channel 2.

Voltage Measurements

To measure the potential difference between two points on a signal (such as peak-to-peak ac volts), measure the vertical distance in graticule divisions, between the two points. Then multiply by the setting of the VOLTS/DIV switch and the attenuation factor, if any, of the probe. Be sure the VARIABLE VOLTS/DIV control is in the CALIB position.

To measure the dc level at a given point on a waveform, proceed as follows:

- Set the VOLTS/DIV switch so the expected voltage (at the input connector) is no more than six times the setting. Be sure the VARIABLE VOLTS/DIV control is in the CALIB position.
- Set the time-base triggering controls for automatic triggering.
- 3. Set the AC-DC-GND switch to GND and use the POSI-TION control to align the trace with one of the horizontal graticule lines. This line will be used as a ground (or zero) reference. The position of the reference line should be chosen for the polarity and amplitude of the signal to be measured. Do not move the POSITION control once the reference line has been established.
- 4. Set the AC-DC-GND switch to DC.
- 5. Apply the signal to the input connector and set the time-base triggering controls for a stable display.
- Measure the vertical distance, in graticule divisions, from the ground (zero) reference line to the point you wish to measure on the waveform.
- Multiply this distance by the setting of the VOLTS/DIV switch and any probe attenuation factor. This is the instantaneous dc level of the point measured.

You can reestablish the zero reference line at any time by setting the AC-DC-GND switch to GND. It is not necessary to disconnect the signal probe from the Type 3A1S. To establish a reference other than zero, set the AC-DC-GND switch to DC and touch the signal probe to the desired reference voltage; then use the POSITION control to align the trace with a reference graticule line.

Voltage Comparison Measurements

In some applications you may want to establish a set of vertical sensitivity values other than those selected by the VOLTS/DIV switch. This is convenient when you compare signals that are exact multiples of a given reference. To establish a set of sensitivity values based on some specific reference, proceed as follows:

- Apply the reference signal to either input connector. Set the VOLTS/DIV and VARIABLE VOLTS/DIV controls to adjust the amplitude of the display for an exact number of graticule divisions. Do not move the VARIABLE VOLTS/DIV control after this setting.
- Divide the amplitude of the reference signal (in volts) by the product of the deflection established in step 1 (in graticule divisions) and the setting of the VOLTS/DIV switch. The result is the sensitivity Conversion Factor

Conversion Factor = Amplitude of Ref. Signal (in volts)

Amount of Deflection (in graticule divisions) × VOLTS/DIV Switch Setting

 To calculate the true sensitivity at any setting of the VOLTS/DIV switch, multiply the switch setting by the sensitivity Conversion Factor: True Sensitivity = VOLTS/DIV Switch Setting X Conversion Factor

This new set of sensitivity values applies to this channel only, and only as long as the VARIABLE VOLTS/DIV control is not moved.

Phase-Difference Measurements

A phase comparison between two sine waves of the same frequency can be made by using the dual-trace feature of the Type 3A1S. To make this comparison, proceed as follows:

- Apply one signal to each of the input connectors, and set the MODE switch to CHOP or ALTER. Pull out TRIG-GER CH 1 ONLY switch and internally trigger the Type 3B1S.
- Use the POSITION controls to center both signals vertically on the graticule.
- Set the time-base sweep rate so one cycle of one waveform covers exactly 9 graticule divisions horizontally. Thus, each division represents 40° of one cycle at this sweep rate.
- 4. Measure the horizontal distance, in graticule divisions, between the leading waveform and the lagging waveform at the horizontal center graticule line. Multiply this distance by 40° per division to obtain the phase difference between the two signals.

For more precise measurements, increase the horizontal sweep rate with the 10× magnifier of the Type 3BIS. In step 3, each division on the graticule represents 40°. If the sweep rate is increased 10 times, then each division represents 4°.

Triggering

The choice of triggering depends on the type and portion of the signal you want to see. For example, if the display starts on the leading edge of the signal and you want to start on the trailing edge, push the SLOPE switch to the opposite position.

The COUPLING switch AUTO position is useful from 15 cps to 10 mc. It also has the advantage of displaying a trace when the signal is removed, or when the amplifier input is grounded. This makes it easy to check a reference graticule line, since the trigger controls need not be touched.

The COUPLING switch AC position is the same as the AUTO position except the display does not free-run. Both the AUTO and AC positions reject any dc component present in the signal from the vertical amplifier plug-in unit. Adjusting the POSITION control on the vertical amplifier plug-in unit does not affect triggering in the AUTO or AC positions.

In the COUPLING switch DC position, the sweep will trigger in the range from dc to 10 mc. This position should be used with signals that change slowly, such as a slow-

rising sawtooth. The Normal Sweep LEVEL control is used to trigger the sweep at any voltage point on these slow-rising signals.

External triggering should be used when signals are checked at several points within a device, such as in point to point troubleshooting. With external triggering, the trigger controls do not have to be adjusted for each point check.

Triggered Delayed Sweep

This type of display has the advantage of practically eliminating jitter in the display during delayed-sweep operation. Each sweep is triggered by the expanded portion of the waveform and not by the waveform at the beginning of the normal sweep. For example, if you want to examine a small pulse, $5\,\mu \rm sec$ from the start of a pulse train from a computer circuit, use the TIME/DIV and the DELAYED SWEEP switches and the MODE switch TRIG DLY'D SWP position to expand the display to show only the small pulse. Then adjust the Delayed Sweep LEVEL control for a steady display. The sweep will then be triggered by the expanded portion and not by the start of the pulse train.

The SLOPE, COUPLING, and SOURCE switches work the same as their counterparts in normal-sweep operation. The proper position for these switches depends on the type of waveform being examined. A full description of the delayed sweep and trigger circuits will be found in Section 4.

Sweep Magnification

The display can be expanded to 10 times its normal length by pulling out the $10\times$ MAG switch (POSITION control). Each part of the expanded display can be examined by turning the POSITION control throughout its range.

The sweep magnifier extends the range of the TIME/DIV switch 10 times. For example, with the TIME/DIV switch set at .5 µSEC and the 10× MAG switch pulled out, the actual time per division is 0.05 µsec (VARIABLE control in the CALIB position). The magnifier works the same for either normal or delayed sweep.

Sweep Calibration

Sweep calibration should be checked and adjusted, if necessary, whenever the Type 3BIS is used with another Type 561S since the deflection-plate sensitivity may not be the same. The accuracy of this check depends on whether the frequency of the power line supplying the instrument is exactly 60 cps, since this frequency is used as the reference frequency in the following procedure.

Check and adjust sweep calibration as follows:

- 1. Set the MODE switch to INORM.
- Set the TIME/DIV switch to 5 mSEC (be sure the 10 × MAG switch (POSITION control) is pushed in.)

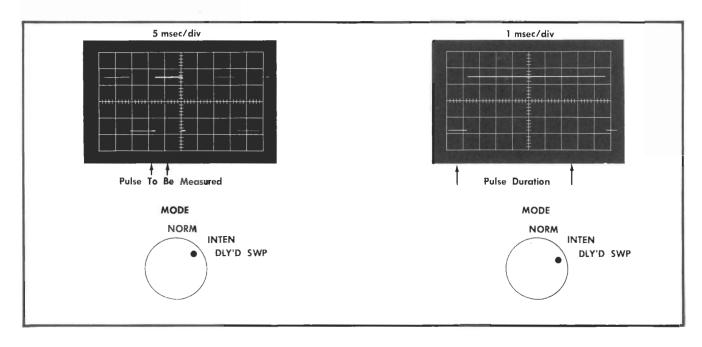


Fig. 2-1. Pulse width measurement.

- Connect a cable from the oscilloscope calibrator to the vertical amplifier plug-in unit and adjust the normalsweep triggering controls for a steady display.
- There should be exactly 3 cycles of the calibrator signal across the 10 divisions of the graticule; if not, adjust the front-panel SWEEP CAL control.

Time Measurements

Since the Type 3B1S sweeps are calibrated, any horizontal distance on the crt represents a definite time interval. Thus, the time interval between points on a display can be accurately measured (within 3%).

For example, assume you have a normal-sweep crt dis-

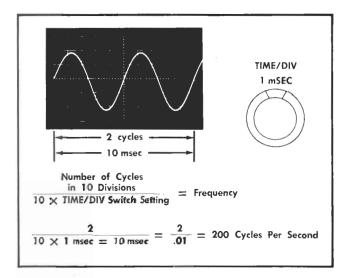


Fig. 2-2. Frequency measurement.

play similar to Fig. 2-1, and you wish to measure the width of the pulse appearing in the 4th division:

- Make sure the VARIABLE control is set to CALIB, and pull out the DELAYED SWEEP knob and turn it two clicks to the right.
- Set the MODE switch to INTEN, and adjust the Type 561S INTENSITY for an intensified zone on the display.
- Turn the DELAY TIME control until the desired pulse is intensified.
- 4. Turn the MODE switch to DLY'D SWP and measure the horizontal distance from the 50% point on the rise of the pulse to the 50% point on the fall of the pulse. Multiply this distance by the setting of the DELAYED SWEEP switch (setting of white dot on large black knob).

Frequency Measurements

Time measurements may also be used for frequency measurements. Since frequency and time are reciprocal functions, the frequency of any signal is the reciprocal of the period (time) for one cycle. For example, if the time for one cycle is $0.2~\mu sec$, the frequency is 5 megacycles.

With any sweep rate, the number of cycles displayed across 10 graticule divisions depends on the frequency of the waveform (see Fig. 2-2). To determine the frequency, proceed as follows:

- Set the TIME/DIV switch to display several cycles of the waveform (be sure the VARIABLE TIME/DIV control is in the CALIB position).
- Count the number of cycles across 10 graticule divisions.
- Divide this number by 10 times the TIME/DIV switch setting. This is the frequency of the waveform.

SECTION 3

CIRCUIT DESCRIPTION

TYPE 561S

Introduction

The Tektronix Type 561S Oscilloscope contains a low-voltage power supply circuit, a cathode-ray tube circuit, and a calibrator.

The low-voltage power supply circuit provides the regulated and unregulated power used by the instrument and the plug-in units.

The crt circuit contains the necessary controls and input facilities to present a sharp trace of desired intensity for displaying a signal. Two negative high-voltage power supplies provide the voltages for the crt cathode, focus element, and control grid.

Amplitude-calibrated square waves are produced by the calibrator.

Low-Voltage Power Supply

Power for the Type 561S Oscilloscope and the plug-in units is supplied through power transformer T601. The two primary windings of T601 are connected in parallel for 117-volt operation, or in series for 234-volt operation, as shown on the schematic diagram.

The low-voltage power supply provides regulated outputs of -100, -12.2, +125, and +300 volts, and an unregulated output of +420 volts. Each circuit is series-regulated and employs silicon diodes for rectifiers. A series regulator circuit uses a vacuum tube (or transistor, in the case of the -12.2-volt supply) in series with the load. This tube controls the current through the load to maintain a constant voltage drop across the load. For example, if the load increases (resistance of load decreases) the series tube allows more current to flow; if the load decreases it allows less current to flow.

—100-Volt Supply. Reference voltage for the —100-volt supply is established by gas diode V609. The constant voltage drop across V609 establishes a fixed potential of about —85 volts at the grid of V634B. Voltage at the grid of V634A is established by divider R616, R617, and R618. The difference in voltage between the two grids of V634 determines the place current of V634A. Plate current of V634A determines the base voltage of transistor Q624 which im turn determines the grid voltage of series tube V627. The series tube controls the current through the load to hold the load voltage constant. R616 (—100 v adjustment) determines the percentage of the total divider voltage applied to the grid of V634A and thus controls the output voltage. When this control is properly adjusted, the output is exactly —100 volts.

Should the output voltage tend to change because of a change in input voltage or a change in load current, the potential at the grid of V634A will change a proportional amount. Any change at the grid of V634A is amplified by

V634A and Q624 and applied to the grid of V627. The resulting grid change at V627 will cause the load current to change in the direction needed to bring the output back to -100 volts. C616 improves the response of the regulator to sudden changes in output voltage.

+125-Volt Supply. The —100-volt supply serves as a reference for the +125-volt supply. With the lower end of R651 fixed at —100 volts, any change in the +125-volt output produces a proportional change at the grid of V654. This change is amplified and supplied to the grid of series regulator tube V667A. The change at the grid of V667A changes the load current in the manner needed to bring the output voltage back to a nominal +125 volts. C650 improves the response of the regulator to sudden changes in output voltage.

A small sample of the unregulated-bus ripple appears at the screen of V654 through R657. The ripple at the screen (which acts as an injector grid) produces a ripple at the grid of V667A which is opposite in polarity to the ripple at the plate of V667A. This tends to cancel ripple at the output. This same circuit also improves the regulation of the circuit in the presence of line-voltage variations.

+300-Volt Supply. The +300-volt supply functions in the same manner as the +125-volt supply. To supply the voltage for the +300-volt regulator, rectified voltage from transformer terminals 21 and 22 is added to the voltage supplying the +125-volt regulator.

The +300-volt supply provides an unregulated output of +420 volts for the crt circuit.

- 12.2-Volt Supply. Operation of the -12.2-volt regulating circuit is essentially the same as that of the other regulating circuits, except that transistors are used instead of vacuum tubes. The base of Q734 is fixed near -12 volts by voltage divider R731-R732 between -100 volts and ground. Any variation of the -12.2-volt output at the emitter of Q734 is amplified by Q734 and Q744 to change the emitter-collector current of Q757 which is in series with the supply load. F720 protects the transistors in case of an overload on the -12.2-volt supply.

The collector of Q757 is connected to pin 5 of the interconnecting socket. This provides a return separate from the chassis and prevents large chassis currents.

Crt Circuit

The crt circuit contains the cathode-ray tube and two high-voltage supplies (one for the crt cathode and focus element, the other for the control grid). The circuit also contains the necessary controls and signal input facilities.

Cathode-Ray Tube. A Tektronix T5033 glass envelope cathode-ray tube is used in the Type 561S. The accelerating potential is approximately 3500 volts, developed by about —3300 volts at the cathode and an average deflec-

tion-plate voltage of about +200 volts. With this accelerating potential, the nominal vertical and horizontal deflection factors are 12.0 and 20.4 volts/cm respectively.

Deflection blanking of the crt is employed in the Type 561S. The crt contains a special set of deflection plates (pins 6 and 7) for this purpose. Both plates are connected to +125 volts; however, pin 6 is also driven by the right-hand plug-in unit.

During sweep time, or if no plug-in unit is installed, both plates rest at +125 volts and permit the beam to pass on to the crt face. During sweep retrace, however, pin 6 is driven considerably away from +125 volts. This scatters the beam and prevents it from reaching the crt face.

High-Voltage Supplies. Energy for both high-voltage supplies is furnished by **T801**. V800, the primary of T801, and the circuit capacitance (shown by the dotted capacitor symbol on the schematic) form a Hartley oscillator which operates at about 45 kc.

One secondary winding of T801 provides voltage for the crt cathode and focus element. This voltage, rectified by V822, is about —3300 volts at the cathode, and between about —2000 and —3000 volts at the focusing element, depending on the setting of the FOCUS control. (The 6.3-volt crt heater is also elevated to the cathode potential.)

The autput of the other secondary winding of T801 is rectified by V832 for the control grid. The grid voltage ranges from —3100 to —3400 volts, depending on the setting of the INTENSITY control. The reference to ground for this supply is determined by the voltage at the junction of diodes D838 and D839. The voltage at this junction, plus the setting of the INTENSITY control, determines the crt bias and therefore the intensity of the display.

Regulation of the high-voltage supplies is accomplished through feedback from the arm of R841. If, due to loading or a change in input voltage, the output of the high-voltage supply changes, a proportionate change occurs at the arm of R841. This change is amplified by V814 and is coupled to the screen grid of V800. A change at the screen of V800 will increase or decrease the amplitude of ascillations im V800. Thus the output voltage of T801 changes in the direction needed to return it to the desired level. HIGH VOLTAGE control R841 controls the output woltage by setting the bias on V814B.

Deflection Signals. Signals for the deflection plates are equal in amplitude but apposite in palarity (push-pull) and appear at pins 17 and 21 of the interconnecting socket.

Intensifying Signals. Two signals may be used to modulate the intensity of the crt display. First, intensifying signals from a two-sweep (delaying-sweep) time-base plug-in unit are applied to the grid supply through terminal 14 of the right-hand interconnecting socket. When the overall display intensity is reduced with the INTENSITY control, positive intensifying pulse from a two-sweep time-base unit will brighten any desired portion of the display. Diodes D838 and D839 provide a low-impedance return for the grid supply which reduces intensity modulation caused by normal supply ripple.

Other external intensifying signals can be fed to the crt continued from the EXT CRT CATHODE binding post. Depend-

ing on the setting of the INTENSITY control, a negative pulse of 5 volts or more will turn the crt beam on.

Crt Controls

INTENSITY control R835 has a range of about 300 volts to control the crt bias and permit changing the intensity of the display.

FOCUS control R844 adjusts the focus of the crt by varying the voltage at the focusing anode from about -2000 to -3000 volts.

ASTIGMATISM control R864 has a 300-volt adjustment range.

GEOMETRY control R865 adjusts the geometry by varying the voltage of the crt isolation shield from +180 to +246 volts

Calibrator

The calibrator for the Type 561S Oscilloscope produces a line-frequency amplitude-calibrated square wave.

The 6.3-volt (approximately 18 volts peak-to-peak) ac heater voltage for V884 is applied through C876 to the cathode of V884A, driving that tube into and out of cutoff at the line-frequency rate. The signal at the plate of V884A is then coupled to the grid of V884B to turn that tube on and off. Regenerative feedback from the plate of V884B to the grid of V884A speeds up the switching action of V884A.

The voltage present at the cathode of V884B during the time that V884B is conducting can be set to exactly 100 volts with CAL AMPL adjustment R871. The voltage divider in the cathode circuit of V884B contains precision resistors to provide an output accuracy of 3% or better at the various settings of the CALIBRATOR control.

TYPE 3A1S

The Type 3A1S Dual-Trace Amplifier contains two indentical input channels, a common output amplifier, a switching circuit, and a trigger amplifier. The output of either or both imput channel amplifiers may be fed to the output amplifier, depending on the condition of the switching circuit. Thus, the switching circuit makes it possible to display one signal as a single trace on the crt, two signals simultaneously in a dual-trace display, or the algebraic sum or difference of two signals as a single trace. Fig, 3-1 is a block diagram of the Type 3A1S.

Input Channel Amplifiers

Each input channel consists of an attenuation network, an imput cathode-follower, and a three-stage amplifier with switched outputs. Input cathode followers V113 and V123 (Channel 1) and V213 and V223 (Channel 2) isolate the attenuator input circuitry from emitter followers Q133 and Q134 (Channel 1) and Q233 and Q243 (Channel 2). Q134 and Q144 (Channel 1), and Q234 and Q244 (Channel 2) provide low-impedance drive to the next stage. The output of these stages is fed to the diode gates in the switching circuits which select the signals to be fed to the common

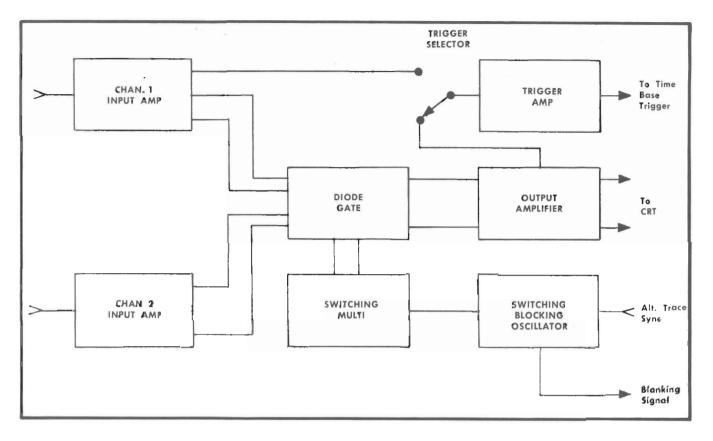


Fig. 3-1. Type 3A15 block diagram.

output amplifier. The gain of the last stages in the input amplifiers is variable, with two calibration adjustments: R149 (Channel 1) and R249 (Channel 2) set the gain of the stage with the VOLTS/DIV switches in the .01 position, R147 (Channel 1) and R247 (Channel 2) set the gain of the stage in the remaining positions of the VOLTS/DIV switches. The VARIABLE VOLTS/DIV control increases cathode degeneration when moved from the CALIB position.

The imput attenuators are resistive dividers with capacitive compensation. The attenuators maintain an input impedance of I megahm paralleled by 47 pf. With the VOLTS/DIV switch in the .01 and .02 positions, the input is fed directly to cathode-follower stages VII3 and V213. The 10 MV GAIN controls adjust the amplifier sensitivity with the VOLTS/DIV swittchnes in the .01 positilion and the 20 MV GAIN controlls adjust the sensitivity in the remaining positions. In the VOLTS/DIV swittch positions, which provide an input defileschiam flactor greater tilham 20 mv/div (.05 to 10 on VOLTS/ DIV swithdri), the attenuation sections are stacked. In the .05 VOLTS/ID/IV switch prosition, the 2.5× attenuator increases the basic 20 nov/div deflection factor to 50 mv/div. The $5\times$ attenuation is used to increase the deflection factor to 100 mv/div in the .1 VOLTS/DIV switch position. These three positions (1imes, 2.5imes, and 5imes) are preceded by the imes10 or X1100 attenuators in the higher deflection-factor positilons of the VOLTS/DIV switch.

The DC BAL controls in the grid circuit of V123 and V223 adjust the potential at both emitters of each input amplifier flor no cumment through R139 and R149 (Channel 1), and R239 and R249 (Channel 2) under no-signal conditions.

Otherwise, the position of a no-signal trace would shift on the crt as the VARIABLE VOLTS/DIV control or channel gain adjustments were turned.

In the INV position, the INV (CH 1) NORM switch (SW155) inverts the Channel 1 output to the diode gates.

The Channel 1 input amplifier contains a three-stage trigger amplifier. The first stage is an emitter-coupled paraphase amplifier (Q164 and Q174) with double-ended input and single-ended output. The dc level of the output is set by CHAN 1 TRIG DC LEVEL control R171. The output of this stage is fed to emitter-follower Q173. Q173 drives the third stage, Q184, which is collector-coupled to the trigger-amplifier section of the output amplifier.

Switching Circuits

The switching circuit consists of two diode gates, a switching multivibrator, and a switching blocking oscillator, all of which drive the multivibrator. In the following discussion, assume that the MODE switch is in the CH 1 position.

Each diode gate consists of two series diodes and two shunting diodes. When signals are to pass through the gate to the output amplifier, the series diodes are forward biased, and the shunt diodes are back biased, allowing the signal to drive the bases of Q304 and Q314. Voltage to hold the series diodes (D155 and D158 in Channel 1) in conduction is supplied through the emitter-base junctions of Q304 and Q314. Collector current for Q134 and Q144 flows through the series diodes. Shunt diodes D156 and D157 are back

biased and thus cut off by MODE switch SW289, holding Q285 in the "off" state. Q275 is "off", and the junction of D156 and D157 is at —1.18 volts. The dc level in the signal output lines from the Channel 1 input amplifier is —1.65 volts, and thus the shunt diodes are back biased.

In the Channel 2 diode gate, D256 and D257 are held at about —4.7 volts by Q285, which is "off". This holds the Channel 2 output lines at about —4.3 volts. Since the outputs of the diode gates are about —2 volts, D255 and D258 are back biased. With D225 and D258 cut off, the signal is not transmitted to the output amplifier. In addition, D256 and D257, when conducting, from a low-impedance path for any signals coming to the diode gate from the Channel 2 input amplifier.


When the MODE switch is in the CH 2 position, the conditions of the diode gate are reversed. In the Channel 2 diode gate, D256 and D257 are back-biased and the signal from the Channel 2 input amplifier passes through D255 and D258 to the output amplifier.

When the MODE switch is in either the ALTER or CHOP positions, Q275 and Q285 operate as a common Eccles-Jordan bistable multivibrator. Positive pulses from the switching blocking oscillator pass through D278 or D288 to the collector of the "off" state transistor. This pulse is transmitted by either C277 or C287 to the base of the "on" transistor, turning it "off". The collector of the "off" transistor moves toward the —12.2-volt supply, turning the other transistor "on" because of the coupling through either C277 or C287. Resistive dividers R277-R286 and R287-R276 set the levels at the transistor bases. The levels are designed so switching action can occur when pulses are received from the blocking oscillator.


Operation of the diode gates in ALTER and CHOP is the same as described in the CH 1 and CH 2 positions of the MODE switch. However, the multivibrator is free to switch states when it receives a trigger signal, and thus operate the diode gates and transmit a signal to the output amplifier from Channel 1 and Channel 2 alternately. Also, in the ALTER and CHOP positions of the MODE switch, R292 is bypassed and the —12.2-volt supply is connected directly to the multivibrator circuit. In the other positions of the MODE switch, the multivibrator draws current through R292 and is not able to switch the diode gates. In the CH 1 position, additional current is supplied through R289; in the CH 2 position, current is supplied through R279.

When the MODE switch is in the ADDED position, current is supplied to the output amplifier through R293 and R294, holding the series diodes in both diode gates in conduction. Since the multivibrator transistors are both near cutoff, the diode-gate shunt diodes are back biased and thus inoperative.


In the CHOP and ALTER positions of the MODE switch, Q260 (the switching blocking oscillator) is energized, supplying pulses to the switching multivibrator. Fig. 3-2 shows the blocking oscillator waveforms with the MODE switch in the CHOP position. In the ALTER mode, the emitter of Q260 is connected to the —12.2-volt supply through R260. The collector is also connected to the —12.2-volt supply through the emitter winding of blocking oscillator transformer T263. When a positive pulse is fed from the time-base plug-in unit

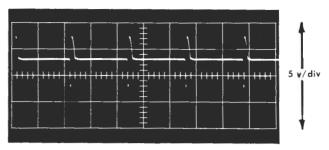

(a) Signal at base of Q260

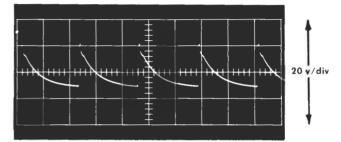

(b) Signal at collector of Q260

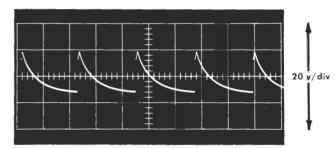

(c) Output to pin 24 of Interconnecting Plug

Fig. 3-2. Signals in blocking oscillator circuit. Oscilloscope, ac coupled. Sweep rate, 2 μsec/div.

through terminal 3 of the interconnecting plug, the emitter voltage rises. The transistor conducts, drawing current through the collector winding of blocking oscillator transformer T263, driving Q260 further into conduction. A normal blocking-oscillator cycle occurs, with the backswing cutting the transistor off. The emitter circuit is damped so the transistor is not turned on again until another sync pulse is received.

In the CHOP position of the MODE switch, the emitter of Q260 is connected to ground through R262. Normal blocking oscillator action occurs; however, when a cycle is completed, the base is forward biased since it is connected to the —12.2 volt supply. The blocking oscillator is thus automatically triggered and free-runs at a 150-kc rate.

Pulses from the collector circuit of Q260 are fed to the switching multivibrator through C266. Only the positive pulses, which occur at the beginning of the blocking oscillator cycle, will switch the multivibrator. The collector pulse is also fed to pin 24 of the interconnecting plug for use as a blanking pulse in the Type 561S.

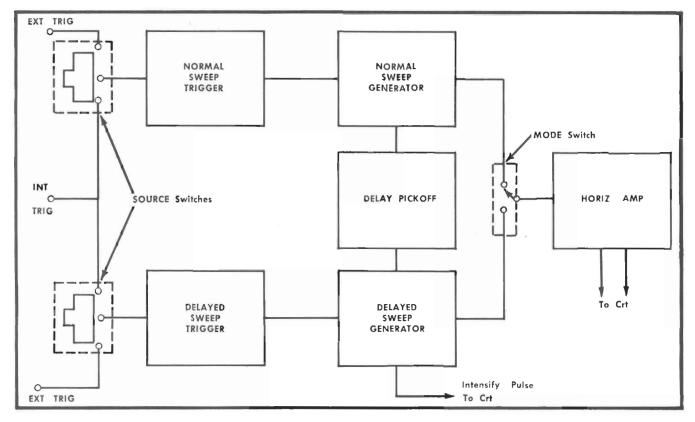


Fig. 3-3. Type 3B1S block diagram.

Output Amplifier

The output of the diode gates passes to the bases of Q304 and Q314. These transistors are connected as a common-emitter push-pull amplifier. R302 and R314 are connected from the collector to the base of the transistors to provide feedback stabilization. The push-pull output signal of this stage passes to the bases of the next amplifier stage Q323 and Q333.

The Q323-Q333 stage is also feedback stabilized with R324 and R334. The following push-pull stage consists of V334A and V334B. Variable high-frequency peaking of this stage is accomplished with L326, L341, L336, L351, C339, and C337. OUTPUT DC LEVEL adjustment R328 sets the operating point of the remaining stages so that the output voltage at the deflection plates of the crt is 150 volts.

The last stage of the Output Amplifier is a hybrid cascoded push-pull amplifier. The output of this amplifier drives the deflection plates of the crt. CALIB adjustment R373 matches the gain of the instrument to the deflection factor of the crt. Gain of the stage is maximum with the CALIB adjustment set for minimum resistance (minimum emitter degeneration).

TYPE 3B1S

The Type 3B1S is a conventional time-base plug-in unit with delayed sweep. Fig. 3-3 shows the relationship of the major circuits. The schematic diagrams at the rear of this manual fold out for easy reference when studying this circuit description.

The Normal Sweep Trigger circuit receives a signal from either the Vertical Amplifier plug-in unit or an external source. The Normal Sweep Trigger circuit converts the signal to a trigger for the Normal Sweep Generator. The trigger pulse switches a tunnel diode in the Normal Sweep Generator and starts the sweep ramp. When the ramp voltage reaches a preset point (normal sweep length), the ramp ends and the crt beam (now blanked) reverts to its starting point. A holdoff period delays the start of the next sweep. When this period ends, the next trigger pulse starts another sweep.

The sweep ramp from the Normal Sweep Generator passes to the MODE switch. If this switch is set to NORM, INTEN, or TRIG INTEN, the normal sweep passes to the Horizontal Amplifier. In the DLY'D SWP or TRIG DLY'D SWP positions, the normal sweep is not connected to the Horizontal Amplifier.

The Horizontal Amplifier converts the sweep ramp to a push-pull output and applies it to the horizontal deflection plates of the crt.

The Delayed Sweep Trigger circuit operates only when the MODE switch is in the TRIG INTEN or TRIG DLY'D SWP position. This circuit is identical to the Norm Sweep Trigger circuit and uses a signal from either the Vertical Amplifier or an external source.

The trigger formed by the Delayed Sweep Trigger circuit passes to the Delayed Sweep Generator and starts the delayed sweep ramp. The ramp ends when it reaches a preset point (delayed sweep length). During the ramp run-up, a positive pulse is coupled to the crt grid to intensify the display.

When the MODE switch is set to either DLY'D SWP position, the delayed sweep ramp drives the Horizontal Amplifier.

Thus, in 3 positions (NORM, INTEN, and TRIG INTEN) of the MODE switch, the Normal Sweep Generator furnishes the sweep, and in 2 positions (DLY'D SWP and TRIG DLY'D SWP) the Delayed Sweep Generator furnishes the sweep.

The two INTEN positions of the MODE switch intensify an area of the display that represents both the delayed sweep length and its position on the normal sweep.

Normal Sweep Trigger

The trigger signal (internal or external) enters the circuit through the SOURCE switch and passes to the COUPLING switch. The COUPLING switch passes the signal through C5 in the AUTO or AC positions and bypasses C5 in the DC position. R9 and R10 attenuate the signal and present a high impedance to the signal source to prevent loading.

When the SOURCE switch is in the EXT position and the EXT TRIG ATTEN (LEVEL control) switch is pulled out, R7 is paralleled across R10 and the network becomes a 10:1 attenuator. C7 and C9 are frequency compensating capacitors. Neon bulb B10 provides overload protection against high signal voltages. V13 is a long-tailed cathode follower that couples the signal through D15 to the SLOPE switch. The SLOPE switch directs the signal to either Q24 or Q34, depending on its setting. Q24 and Q34 is a comparator with the signal applied to one base and a dc voltage (set by the LEVEL control through Q23) on the other base. When the signal equals the level voltage, tunnel diode D35 switches. The pulse from D35 is amplified by Q44 and applied to T101.

This transformer couples the pulse to the Normal Sweep Generator.

Normal Sweep Generator

Generating the Sweep Ramp. A trigger pulse coupled through T101 causes tunnel diode D105 to switch. This puts a positive pulse on the base of Q114 and this transistor turns on. As Q114 conducts its collector drops, carrying with it the plates of V152. As V152 cuts off, Timing Capacitor C160 starts to charge toward -100 volts through Timing Resistor R160. As the grid of V161A starts to drop, it allows the plate voltage to rise. The resulting positive voltage swing is coupled through D162 and D161B to the top of C160. This increases the charging voltage with each increment of charge on C160, effectively straightening the capacitor charge curve. The positive swing at the top of C160 also tends to keep the lower side from dropping. This keeps the voltage across R160 essentially constant, providing a constant-current charging source for C160. The result is an extremely linear sawtooth ramp at the cathode of V161B, which is then applied to the Horizontal Amplifier.

Ending the Sweep Ramp. The sweep ramp ends when the voltage applied to the base of Q134 from R168 (NORMAL SWEEP LENGTH control) reaches +15 volts.

Fig. 3-4 shows the waveform on the base of Q143 with the condition of the associated diodes. Fig. 3-5 shows the condition of D105 (tunnel diode) during a sweep cycle.

The sweep ramp voltage from R168 starts at about -30 volts and rises in a positive direction. D171 remains back-biased and the ramp voltage cannot reach the base of Q143 until the sweep ramp voltage reaches +1 volt, D171 is forward-biased and the ramp voltage is applied to the base of Q143. The voltage on the emitter of Q143 follows the base voltage. When the emitter rises to ground, D134 is back-biased and no longer supplies current to Q143. The reduced current through Q143 also reduces current through D105. When the emitter of Q143 reaches +15 volts, D143 is forward-biased and Q143 turns off, which forces D105 to point D on the diagram of Fig. 3-5.

When D105 switches, the negative charge turns Q114 off, and its collector goes positive. Disconnect diodes V152 turn on and discharge Timing Capacitor C160, and the sweep ramp ends.

Sweep Holdoff Period

A holdoff period is necessary between each sweep to allow time for the crt beam to retrace to its starting point. This holdoff period is developed by the charge and discharge of Holdoff Capacitor C170. The circuit works as follows:

During sweep run-up, the sweep voltage couples across D170 and charges C170. When the sweep ends, C170 discharges on an RC curve. When the capacitor charge drops to about —3 volts, D172 becomes forward-biased and this voltage is applied to the base of Q143. Current through Q143 increases and the current through D105 moves to point A on the tunnel diode diagram (Fig. 3-5).

Automatic Sweep

If the COUPLING switch is set to AUTO, a third source of current supplies Q143 through Q134 and D132. This added current switches D105 (at the end of the holdoff period) and the sweep free-runs. To trigger in the AUTO position, tunnel diode D115 is switched by trigger pulses from T101. When D115 switches (to its high state), Q124 turns on and Q134 turns off. This removes Q134 as a current source for Q143 and the circuit is set for normal triggered operation.

If a trigger pulse does not switch D105 within about 5 msec, the circuit will reset itself and free-run the sweep. When Q124 turns on, the voltage across C122 starts to drop toward —12 volts. Before it reaches —12 volts, D122 becomes forward-biased and reduces current through D115. D115 switches to its low state, Q124 turns off, C122 charges through R125 and R122 until the emitter of Q134 is +0.3 volts. Q134 then turns on, and the sweep free-runs. Because of the reset feature of the AUTO circuit, the sweep will not trigger at a repetition rate slower than about 15 cps.

Crt Unblanking

The electron beam in the crt is unblanked by a negative pulse coupled from the plate of V194A through pin 13 of

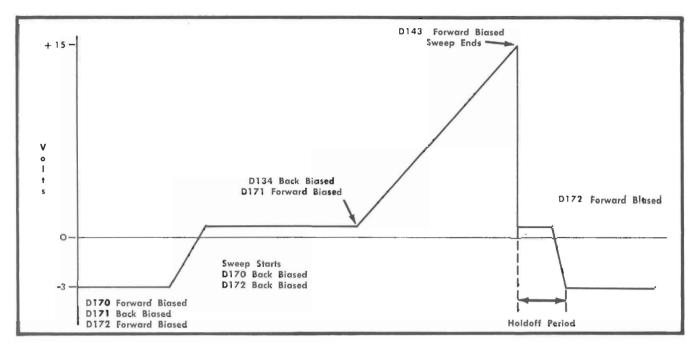


Fig. 3-4. Waveform at base of Q143 during sweep and condition of associated diodes.

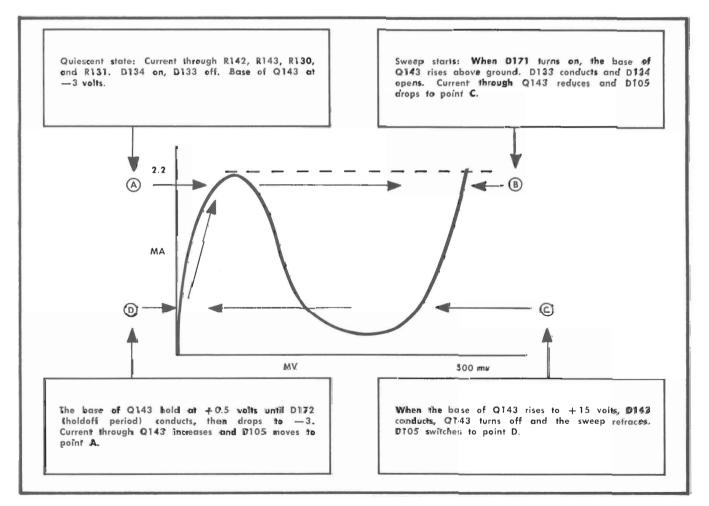


Fig. 3-5. Condition of tunnel diode D105 during sweep and hold off periods.

the interconnecting plug to the blanking plates in the crt. The unblanked period coincides with the time that tunnel diode D105 is in its high state (sweep period). When D105 switches to its high state, Q114 turns on and a negative pulse from the collector of Q114 is applied to the base of Q183. This transistor is connected as an emitter follower and the negative pulse passes from the emitter to the MODE switch. From the MODE switch, the negative pulse passes to the base of Q194 (when normal sweep is used) where it is amplified and coupled to the grid of V194A. A clamp circuit (D195 and R195) prevents the plate of V194A from dropping below +125 volts.

The direct coupling from the collector of Q194 to D105 (through R103 and C103) ends the normal sweep ramp when the MODE switch is in either DLY'D position. When delayed sweep is used, the unblanking signal comes from the Delayed Sweep Generator circuit. When the positive pulse on the grid of V194A ends, its trailing edge is coupled back through C103 and R103 to switch D105 and end the sweep.

Delayed Sweep Trigger

This circuit is almost identical to the Normal Sweep Trigger circuit and the detailed description is the same. The only difference is the supply voltage for the comparator (Q74 and Q84). The +125-volt supply is connected through the MODE switch and is only present in the TRIG positions. In all other positions of the MODE switch the Delayed Sweep Trigger circuit is inoperative.

Delayed Sweep Generator

The Delayed Sweep ramp circuit operates the same as in the Normal Sweep Generator. The major difference between the two sweep generators is the method of starting the sweep. With the MODE switch in the INTEN or DLY'D SWP position, current for Q234 and tunnel diode D205 comes from three sources in the sweep-gating network. The tunnel diode is set at the ready point and is switched by a pulse through R203 from the Delay Pickoff circuit.

When the MODE switch is in the TRIG INTEN or TRIG DLY'D SWP position, R229 in the Sweep Gating network is removed. The remaining current through Q243 plus the pulse from the Delay Pickoff circuit raises the tunnel diode to the ready point. A trigger pulse coupled through T201 is needed to switch the tunnel diode and start the delayed sweep. In this condition the delayed sweep is triggered.

The negative pulse (during sweep) at the collector of Q214 passes directly to the base of Q283. This emitter follower sends the pulse in three directions: (1) to Q294 to intensify the display (2) to the Delay Pickoff circuit to reset D445 and (3) to the MODE switch for unblanking the crt.

Delay Pickoff Circuit

This circuit sets the start point for the delayed sweep. V414 is a comparator with the normal-sweep ramp voltage applied to one grid, and a positive dc voltage from the

DELAY TIME control applied to the other. At the start of a normal sweep, V414B is conducting and V414A is cut off. V194B is the current source for the comparator. When the normal sweep voltage applied to the grid of V414A rises to equal the delay-time voltage, the comparator switches and V414A turns on while V414B cuts off. At this point, tunnel diode D415 switches to its lower state and puts a sharp pulse on the base of Q424. The pulse is inverted in polarity by the transistor and coupled from the collector through C424 and D425 to the cathode of tunnel diode D445. This tunnel diode switches and its cathode drops to —0.5 volts. This voltage change passes through R451 to the base of Q453.

The junction of R453 and R455 in the collector circuit of Q453 quiescently sits at -15 volts. This forward-biases D455 and holds D205 in the Delayed Sweep Generator circuit at -12 volts. When the -0.5-volt signal is applied to the base of Q453, the junction of R453 and R455 rises to -10 volts.

This change back-biases D455, and tunnel diode D205 can be switched (switches immediately in free-run or by the next trigger pulse in a triggered mode). This condition will remain as long as tunnel diode D445 is in its high state. At the end of a delayed sweep, a positive pulse is coupled through C445 and R445 to reset tunnel diode D445. This pulse comes from Q283 in the Delayed Sweep Generator circuit and is formed from the trailing edge (positive-going) of the unblanking pulse.

With the MODE switch in either DLY'D SWP position, —100 volts is connected to R441. This voltage back-biases D444 and prevents the Normal Sweep Generator pulse from resetting D445. In this condition, the delayed sweep will always run-up to the length set by R268 (DELAYED SWEEP LENGTH control).

Horizontal Amplifier

The sweep voltage enters the circuit through the MODE switch. When this switch is in NORM or either INTEN position, the normal-sweep ramp voltage drives the Horizontal Amplifier. In the two DLY'D SWP positions, the delayed-sweep ramp voltage drives the amplifier.

The sweep voltage is attenuated by R310 and R312 (SWEEP CAL control) and applied to the emitter of Q314. The POSITION control is also connected to this emitter. Since the amplifier is completely dc-coupled, a voltage change by the POSITION control passes through the circuits to the output.

Q314 is a grounded base amplifier and the sweep voltage appears in the collector circuit (no change in polarity). The sweep voltage then drives the base of Q323 (emitter follower) and passes from its emitter to the base of Q354. (Q333 balances any changes in Q323 due to temperature drift.)

The positive-going ramp voltage drives Q354, which in turn, drives V383A (grounded-grid amplifier). The output circuit is a paraphase amplifier with single-ended input and push-pull output.

As the sweep voltage rises, the current through Q354 and V383A increases. This causes the voltage at the plate

of V383A to decrease. The emitter of Q354 follows the base and rises from about -12 to -5 volts. The voltage drop across R364, connected between the emitters of Q354 and Q364, increases as the sweep voltage increases. The positive-going increase at the emitter of Q364 decreases current through Q364 and V383B and the plate of this tube rises toward +300 volts. The result is a push-pull output from the plates of V383A and V383B.

The gain of the paraphase amplifier depends on the size of common-emitter resistor R364. When this resistor is made smaller, the gain increases and the amplifier output swing becomes greater. This is the basis of the $10\times$ magnifier. The $10\times$ MAG switch connects R354 and R355 (MAG GAIN control) across R364 and increases the amplifier gain 10 times (calibrated by the MAG GAIN adjustment).

C364, C354, and C355 across R364 compensate for distributed capacitance at the output tube plates that affects the sweep VOLTAGE at fast-ramp rates.

The push-pull output voltage from the plates of V383A

and V383B pass directly to the crt horizontal deflection plates.

Timing Switches

The Normal and Delayed Sweep Timing Switches contain the resistors and capacitors that set the sweep rate and holdoff period. Both Timing Switches are the same except for VARIABLE TIME/CM control R160Y. In the NORM position of the MODE switch, the control (R160Y) is connected to Normal Sweep Timing Resistor R160. In all other positions of the MODE switch, the control is connected to Delayed Sweep Timing Resistor R260.

The VARIABLE TIME/CM control (R160Y) extends the sweep time by reducing the voltage supplied to the Timing Resistors. When this control is fully clockwise, SW160Z switches a short across it and —100 volts is applied to the Timing Resistors. Any other position of the control reduces the —100 volts and thus reduces the sweep rate. SW160Z also removes the voltage from R160W and the NE-2 (B160W) so the lamp is off in the calibrated position.

SECTION 4

TROUBLESHOOTING AND MAINTENANCE

PREVENTIVE MAINTENANCE

Side-Panel Removal

The side panels of the Type 561S are held in place with coin-slotted fasteners. Turn each fastener counterclockwise about two turns to free the panels.

Cleaning the Interior

Internal cleaning should precede calibration since the cleaning process could alter the setting of certain calibration controls.

One way to clean the interior is by vacuum and/or low-pressure compressed air (high-velocity air could damage certain components). Hardened dirt may be removed with a soft paint brush, cotton-tipped swab, or cloth dampened with a mild water and detergent solution. Pay special attention to high-voltage circuits where dust can cause corona or arcing.

Visual Inspection

Inspect the instrument occasionally for defects such as poor connections, broken or damaged ceramic terminal strips, improperly seated tubes or transistors, and heat-damaged components. A heat-damaged component usually indicates an unseen trouble in the circuit and should be corrected before replacing the damaged part. Otherwise, the damage might be repeated.

Tube and Transistor Checks

Preventive maintenance checks on the tubes or transistors in the instrument are not recommended. A complete operational check of the instrument is the most satisfactory method of checking the performance of the tubes and transistors. Substandard tubes and transistors will nearly always be detected during calibration of the instrument.

Recalibration

To insure accurate measurements, check the calibration of the instrument after each 500 hours of operation or every six months if used intermittently. Complete calibration instructions appear in Section 5 of this manual.

The calibration procedure can also be helpful in localizing certain troubles in the instrument. In some cases, minor troubles, not apparent during normal use, may be revealed and/or corrected by calibration.

Cleaning the Exterior

Loose dust may be removed with a cloth and a dry paint brush. Water and mild detergents such as Kelite or Spray White may be used, but not abrasive cleansers. The faceplate of the crt may be cleaned with a soft, lintfree cloth dampened with denatured alcohol.

CORRECTIVE MAINTENANCE

Component Replacement

Certain parts in the instrument are easier to replace by following a definite procedure. The procedures for removing these parts are outlined in the following paragraphs.

Many electrical components are mounted in a particular way to reduce or control stray capacitance and inductance. When selecting replacement parts, remember that the physical nature of a component can affect its performance at high frequencies. After repair, check calibration of the instrument.

Standard Parts

Many of the components in the instrument are standard electronic parts that can be purchased locally. However, all parts in the instrument can be obtained through your Tektronix Field Engineer or Field Office. Before purchasing or ordering any parts, check with the parts list in Section 6 to determine the value, tolerance, and rating required.

Special Parts

Some of the parts in the instrument are manufactured or selected by Tektronix to satisfy specific requirements, or are manufactured for Tektronix to our specifications. These and most mechanical parts should be ordered through your Tektronix Field Engineer or Field Office. See "Parts Ordering Information" and "Special Notes and Symbols" on the first page of Section 6.

Soldering

Special silver-bearing solder is used to establish a bond to the ceramic terminal strips in Tektronix instruments. This bond can be broken by repeated soldering (especially if ordinary tin-lead solder is used) or by excessive heating. Solder containing about 3% silver is recommended. A small supply of this solder is provided on a spool mounted inside the Type 561S. Additional silver-bearing solder can usually be purchased locally; however, it may be purchased through your Tektronix Field Engineer or Field Office — specify part number 251-514.

The following is recommended when soldering to ceramic terminal strips:

- Use a wedge-shaped soldering-iron tip about \(\frac{1}{\ell} \) inch wide. This allows heat to be applied directly to the solder in the terminal strip, thereby reducing the amount of heat required.
- 2. Maintain a clean, properly tinned tip.

Troubleshooting and Maintenance --- Type 561S

- Use a hot iron for a short time. A 50- to 75-watt iron having good heat transfer and storage properties is adequate.
- 4. Avoid putting pressure on the strip. Excess pressure may crack or chip the strip.

Ceramic Terminal Strips

Fig. 4-1 shows an assembled ceramic terminal strip. Replacement strips with studs attached are supplied under a single part number and the spacers are supplied under another part number. The old spacers may be reused if they are not damaged.

Usually a strip can be pried out of the chassis or pulled out with a pair of pliers. If desired, you may use a hammer and punch to drive out the studs from the opposite side of the chassis.

When the damaged strip has been removed, place the new or used but undamaged spacers in the chassis holes. Then, carefully force the studs of the new strip into the spacers until they are completely seated. If necessary, use a soft-faced mallet and tap lightly directly over the stud area of the strip.

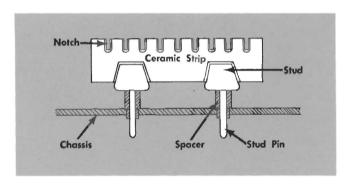


Fig. 4-1. Ceramic strip assembly.

Switch Replacement

Individual wafers are normally not replaced in the switch assemblies. Replacement switches may be ordered from Tektronix either wired or unwired. See the parts list for the part numbers.

When soldering to a switch assembly, do not let the solder flow around and beyond the terminal rivet since this may destroy the spring tension of the contact.

Tubes and Transistors

Tubes and transistors should not be replaced unless they are actually defective. When a trouble is suspected, check the circuit conditions to insure that the replacement tube or transistor will not immediately be damaged. In some cases, these checks will show if the tube or transistor is faulty.

When circuit conditions are known to be safe, install the good tube or transistor and check for proper operation. If the original tube or transistor is thus proved acceptable,

return it to its original socket to avoid unnecessary recalibration.

Cathode-Ray Tube

The following procedure outlines the removal and replacement of the crt:

WARNING

Use care when handling a crt. Avoid striking it on any object that might cause it to crack and implode. Flying glass from an imploding crt can cause serious injury. Wear safety glasses or a plastic face mask.

- 1. Remove power from the instrument.
- 2. Remove the graticule cover and the graticule.
- 3. Remove the left-hand side panel of the Type 561S.
- 4. Loosen the crt socket clamp with a screwdriver.
- Disconnect the crt socket and the four deflection plate leads.
- 6. Remove the crt through the front of the instrument. Be careful not to bend the crt deflection plates pins. Replace the crt by reversing the preceding steps. After replacing the crt, the trace should be paralleled with the horizontal graticule lines using the ALIGNMENT control. The SWEEP CAL and CALIB adjustments of the Type 3B1S and Type 3A1S should be checked and adjusted as required.

Troubleshooting Aids

This manual and the instrument contain many features intended to simplify maintenance. A block diagram which provides an overall picture of instrument operation is included in the back of this manual.

The schematic diagrams in the back of this manual give the circuit reference number for each electrical component as well as important operating voltages, signals, and conditions for their measurement. The range of circuit reference numbers associated with a particular diagram is given on each diagram.

Most of the wire in the instrument is color coded to aid in circuit tracing. All regulated low-voltage power supply leads are coded as follows:

- The basic wire color indicates voltage polarity; tan for negative, white for positive.
- 2. The stripe colors indicate supply voltage according to the standard EIA color code. Read the stripes in order of decreasing width. For example, the —100-volt supply leads are tan wire (negative) bearing strips of brown (one), black (zero), and brown (one zero). The +125volt supply is coded as +120 to avoid four digits.

The instrument contains a number of stable metal-film resistors identified by their gray background color and color coding. If a resistor has three significant figures and a multiplier, it will be EIA color coded. If it has four significant figures and a multiplier, the value will be printed on the resistor. For example, a 333 k resistor will be color coded,

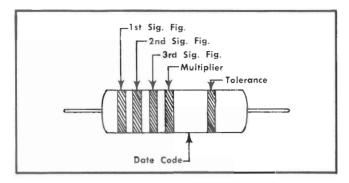


Fig. 4-2. Standard EIA color code for metal-film resistors.

but a 333.5 k resistor will have its value printed on the resistor body. The color coding sequence is shown in Fig. 4-2 and Table 4-1.

TABLE 4-1 Color Code Sequence

Color	1st Sig. Fig.	2nd Sig. Fig.	3rd Sig. Fig.	Multiplier	(±) % Tolerance
Black	0	0	0	1	_
Brown	1	1	1	10	1
Red	2	2	2	100	2
Orange	3	3	3	1,000	_
Yellow	4	4	4	10,000	_
Green	5	5	5	100,000	0.50
Blue	6	6	6	1,000,000	0.25
Violet	7	7	7	10,000,000	0.10
Gray	8	8	8	100,000,000	0.05
White	9	9	9	1,000,000,000	_
Gold				0.1	5
Silver			-	0.01	-
No Color					10

Switch wafers shown on the circuit diagrams are coded to indicate the physical positions of the wafers on a rotary switch. The number portion of the code refers to the wafer position as counted from the front or driven end of the switch shaft. Letters F and R indicate the front or rear of the wafer.

SYSTEM TROUBLESHOOTING

This part of the manual isolates a trouble occurring within the instrument to one of the plug-in units or to the Type 561S.

If you have more than two plug-in units (one or more spares), one way to isolate a trouble is to replace each plug-in unit, one at a time, with one known to be in proper operating condition. If replacement of the two plug-in units does not produce proper operation, then the trouble is probably in the Type 561S.

If a trouble occurs, first make sure it is not due to an improper control setting. (For example, improper settings of the SOURCE or COUPLING switches on the Type 3B1S can

produce apparent triggering troubles; an improperly set VARIABLE control can cause an apparent decrease in sensitivity.) Then check the front-panel calibration adjustments. (An improper SWEEP CAL adjustment on the Type 3B1S can cause apparent timing problems; and an improper DC BAL setting can cause the trace to be positioned completely off the crt when the POSITION control is set at midrange.)

When it has been determined that a trouble definitely exists, and that trouble has been isolated to a circuit within a unit, perform a complete visual check of that circuit. Many troubles, such as loose wires, faulty switches, and improperly seated tubes can be found easily by visual inspection. Check also for heat-damaged parts. Find and eliminate the cause of overheating before replacing a heat-damaged part.

For more convenient access to the plug-in units during troubleshooting, a plug-in extension is recommended (Tektronix part number 013-034).

Normally, a trouble in the oscilloscope system will be discovered through an erroneous display (or no display at all) on the crt. For this reason, the following troubleshooting information is divided according to the symptoms presented to the operator.

No Trace or Spot

If you are unable to obtain a trace, pull out both plug-in units and adjust the INTENSITY control. A spot should appear on the crt. If not, the trouble is in the Type 561S. If a spot appears when both plug-in units are pulled out, reinsert each one separately and adjust its POSITION control. If the spot or trace cannot be returned to the approximate center of the crt when one of the plug-ins is inserted, the trouble is in that plug-in unit.

Insufficient Deflection

If the horizontal or vertical deflection cannot be set to the proper value with the CALIB or SWEEP CAL adjustment on the plug-in unit front panel, first check the power supply voltages at pins 10, 15, 16 and 23 of the plug-in connectors, and the high voltage (—3300 volts at the high-voltage test point. If the voltages are all within the tolerances shown on the schematic diagrams, the trouble is in one of the plug-in uints. If there is insufficient vertical deflection, the trouble is in the Type 3A1S; if there is improper horizontal deflection, the trouble is in the Type 3B1S.

If the power supply voltages are not as specified on the schematic diagrams, remove both plug-in units and check the voltages again. If they still are not as specified, the trouble is in the Type 561S. If the power-supply voltages are correct with both plug-in units removed but incorrect when inserted, check the resistances at the plug-in connectors of the plug-in units. If the resistance measurements of either of the plug-in units do not agree with the schematic diagram for that plug-in unit, the trouble is in that plug-in unit. If all resistances are as specified, the trouble is in the power supply circuit of the Type 561S.

Improper Sweep Timing

If improper sweep timing is encountered (and cannot be eliminated by adjustment of the front-panel SWEEP CAL

adjustment on the Type 3B1S), first check the power-supply voltages at the plug-in connectors and the high voltage (—3300 volts) at the high-voltage test point. If the voltages are as specified on the schematic diagram, the trouble is in the Type 3B1S. If one or more of these voltages are not as specified, proceed as described in the preceding paragraph.

Improper Triggering

If external triggering is satisfactory but internal triggering is not, the trouble is probably in the Trigger Pickoff circuit of the Type 3A1S. If satisfactory triggering is not obtained from either triggering source, the trouble is probably in the Type 3B1S.

Waveform Distortion

If there is an excessive amount of waveform distortion, but no other indications of malfunction (such as improper sweep timing or insufficient deflection), the trouble is in the plug-in unit which is amplifying the distorted waveform.

TYPE 561S TROUBLESHOOTING

The first step in troubleshooting the Type 561S is to determine whether the trouble is in the low-voltage power supply or the crt circuit. Two plug-in units which have been checked for proper resistance between the plug-in connectors and ground should be inserted. If any or all of the voltages are improper, the trouble is in the low-voltage power supply or the power source. To check these, refr to "Troubleshooting the Power Supply". If all of the voltages are proper, the trouble is in the Crt Circuit (refer to "Troubleshooting the Crt Circuit").

Troubleshooting the Power Supply

If there is no power anywhere in the Type 561S (power-supply outputs, graticule lights tube filaments) check the primary circuit of T601. Check especially the fuse, the thermal-cutout switch, the POWER ON switch, and the power source. If all of these are satisfactory, check the primary of T601 for continuity. If the graticule lights or any of the tube filaments are lighted, the primary circuit of T601 is operating properly.

If one or more of the supplies fail to regulate, check the line voltage; it should be between 105 and 125 volts rms for an instrument wired for 117-volt operation, or between 210 and 250 volts rms for an instrument wired for 234-volt operation. If not, then the power source should be brought within these limits for the instrument to perform properly.

If the line voltage is within the specified limits, and one of the power-supply output voltages is not correct, check that particular regulator circuit. If none of the voltages are correct, the trouble is probably in the —100-volt supply, since this voltage serves as a reference for the other three regulated circuits.

To check a regulator circuit, first replace the tubes as described previously. If this does not eliminate the trouble, check the rest of the circuit by voltage and resistance measurements. One cause of insufficient voltage might be an open or shorted rectifier diode.

If there is excessive ripple on any of the supplies, replace the filter capacitor or capacitors (C640A, C642A, C644, or C720).

Troubleshooting the Crt Circuit

To locate a trouble within the Crt Circuit, first remove the high-voltage shield and see if the filament of the high-voltage rectifier, V822, is glowing. If it is, measure the voltage at the plate of V822; it should be about —3400 volts with respect to ground.

If the voltage at the plate of V822 is about —3400 volts, measure the potentials in the high-voltage divider and at the other points in the circuit for which typical voltages are given on the schematic diagram. If all of these voltages are correct, then the crt itself is probably faulty and should be checked.

If the filament of V822 is glowing but the voltage at its plate is significantly less than —3400, turn off the power and measure the resistance from the plate of V822 to ground; it should be about 20 megohms. If it is, then the trouble is in V822 or in the secondary of T801. If the resistance between the plate of V822 and ground is significantly less than 20 megohms, locate the trouble by performing resistance checks throughout the rest of the circuit.

If the filament of V822 is not glowing, measure the voltage at the grid of V800. It should be at least -50 volts with respect to ground. If it is, the high-voltage oscillator is operating and the trouble lies in V822 or in the secondary of T801. If the voltage at the grid of V800 is significantly less than -50 volts, then the oscillator is not operating properly. However, make circuit checks before replacing V800 to prevent possible damage to the replacement tube. First, measure the voltage at the plate of V800; it should be about +400 volts. If it is not, then the trouble lies in the plate circuit. If the voltage at the plate of V800 is about +400 volts, check the resistance of the primary and secondary of T801. The resistance of the primary should be about 40 ohms, and the resistance of the secondary (between the filament of V822 and ground) should be about 170 ohms. Check C807 and C822 to make sure that they are not shorted. Also check the resistance between the plate of V822 and ground; it should be about 20 megohms. If all of these resistances are correct, then replace V800 and V814. If tube replacement does not eliminate the trouble, check the rest of the circuit by voltage and resistance measurements.

TYPE 3B1S TROUBLESHOOTING

Use the following information to troubleshoot the Type 3B1S. While troubleshooting, compare the information from this section with information from other parts of the manual, particularly the circuit description and calibration sections.

Be sure the front-panel controls are set properly. Operate the front-panel controls to see the effect they have on the trouble symptom. The normal or abnormal operation of a control may help to establish the source of the trouble.

Once the trouble symptoms are established, look for the obvious causes. Check to see that there is power, feel for irregularities in control operation, listen for unusual sounds, and visually check the entire plug-in unit. The type of symptom should show the checks to make.

In general, troubleshooting consists of circuit isolation (Table 4-2) and circuit troubleshooting (Table 4-3). The general procedure helps isolate the defective circuit. However, if the circuit isolation procedure does not locate the faulty circuit, other checks will be required. When the faulty circuit has been found, a detailed check within the circuit will usually lead to the cause of the trouble symptom.

Circuit Isolation

The following table lists possible trouble symptoms and the individual circuits that may be the cause. When the trouble has been pinned down to a particular circuit, use the portion of Table 4-3 that applies to that circuit.

TABLE 4-2 CIRCUIT ISOLATION

Trouble Symptom	Circuit to Check
1. No sweep in any position of front-panel controls.	Horizontal Amplifier Normal Sweep Generator
2. No sweep in either DLY'D SWP position of MODE switch.	Delayed Sweep Generator Delay Pickoff
3. No intensified area on display in either INTEN position of MODE switch.	Delayed Sweep Generator
4. Sweep too short in both normal and delayed sweep.	Horizontal Amplifier
5. Sweep is short only in delayed sweep.	Delayed Sweep Generator
6. Sweep nonlinear in nor- mal and delayed sweep.	Horizontal Amplifier
7. Sweep timing incorrect in all positions of TIME/DIV switch.	Normal Sweep Generator
8. Sweep timing incorrect only in some positions of TIME/DIV switch.	Normal Sweep Generator
9. No sweep in AC or DC position of the normal sweep trigger COUPLING switch.	Normal Sweep Trigger
10. No delayed sweep in either TRIG position of MODE switch.	Delayed Sweep Trigger

NOTE

Because the normal and delayed sweep are similar, trouble can often be isolated to one or the other by operating each one independently. The delayed sweep can be operated without the normal sweep by intermittently shorting across R243 in the Delayed Sweep Generator circuit.

TABLE 4-3
CIRCUIT TROUBLESHOOTING

CIRCUI	CIRCUIT TROUBLESHOOTING		
Norme	al Sweep Generator		
Trouble Symptom	Check		
1. No sweep	1. Crt may not be unblanked. Check V194, Q183, and Q194. 2. If B164 is turned on, check V161. 3. Miller circuit check: Turn the TIME/DIV switch to 1 SEC. Short the collector terminal of Q114 to -12 volts; the voltage at the base of Q143 should start to rise (remove short when voltage reaches +15 volts). If not, check V161 and D171. 4. Sweep gating check: Remove Q114 and connect dc voltmeter across R144 (in collector circuit of Q143). Set COUPLING switch to AUTO; voltmeter should read between +5 and +6 volts. If not, check Q143. Turn LEVEL control to midrange, voltage should drop to +4 volts. If not, check D105. Set COUPLING switch to DC and LEVEL		
2. Sweep appears in AUTO coupling only.	control fully clockwise. Connect test oscilloscope probe to the junction of R144-D105. Intermittently short across R143; switching action of D105 should be seen. Check D102.		
3. Sweep will not trigger in AUTO coupling.	Check D119 and D115.		
Но	rizontal Amplifier		
1. No sweep	1. Measure voltage at the collector of Q314, vary POSITION control, voltage should change from —5 to —13 volts. 2. Voltage at the base of Q354 should change from —5 to —13 when POSITION control is turned. Voltage on the cathode of V383 should vary between +2 and +7 as POSITION control is turned. 3. Connect test oscilloscope to the plates of V383. Waveform shown		
2. Sweep will not cover width of crt.	on schematic should be seen. Check Q354, Q364, and V383.		
cover with or cit.			
Normal Trigger Circuit			
1. Display cannot be triggered.	 Use test oscilloscope to check for triggering signal on both sides of D15. 		

Trouble Symptom	Check
	2. Voltage at the emitter of Q23 should vary from -10 to $+14$ volts as LEVEL control is turned throughout its range.
	3. Voltage at the junction of R29-D24-D34 should vary from —9 to +3 volts as LEVEL control is turned throughout its range.
	4. Move the SLOPE switch to the opposite polarity and repeat measurement of previous step. These two measurements check Q24 and Q34.
	5. Check for —12.5 volts at the emitter of Q44. This checks Q44.
	6. Connect test oscilloscope to the emitter of Q44. Should be 0.5 volt square wawve as shown on schematic. This checks D35.
Triggers only on large signals.	V13 weak. D35 open.
3. Triggering unstable.	Check power supply regulation.
Delo	yed Sweep Trigger
1. Delayed Sweep cannot be triggered.	 Use test oscilloscope to check for triggering signal on both sides of D65.
	2. Voltage at the emitter of Q73 should vary from -10 to $+14$ as the Delayed Sweep LEVEL control is turned throughout its range.
	3. Voltage at the junction of R79-D74-D84 should vary from —9 to +3 volts as the Delayed Sweep LEVEL control is turned throughout its range. (Be sure MODE switch is in TRIG DLY'D SWP position.)
	4. Check for about —12.5 volts at the emitter of Q94. This checks Q94. Connect the test oscilloscope probe to the emitter of Q94. Should be a 0.5 volt square wave as shown on schematic. This checks D85.
Triggers only on large signals.	V63 possibly weak. D85 open.
Delay	ed Sweep Generator
1. No Delayed	1. If B264 is turned on, check V261.
Sweep.	2. Miller circuit check: Turn DELAYED SWEEP switch to 1 SEC. Short the collector terminal of Q214 to —12 volts. Voltage on the base of Q243 should start to rise (remove short when voltage reaches +15 volts). If not, check V161 and D171. 3. Short collector of Q214 to —12 volts.
	4. Sweep gating check. Connect test

Trouble Symptom	Check
	of R244-D205. Intermittently short the emitter of Q243 to ground, switching of D205 should be seen. If not, Q243 may be open, or D205 defective.
2. No Delayed Sweep in TRIG DLY'D SWP posi- tion of MODE switch.	Check D202 and D201.
3. Delayed Sweep free-runs, will not trigger.	D243 or D233 may be shorted.
4. Delayed Sweep non-linear at all sweep rates.	Check V261 for nonlinear amplification.
5. Delayed Sweep non-linear at only one sweep rate.	Check applicable timing capacitor for leakage.
6. No holdoff pe- riod on sweep waveform.	D270 possibly open.
7. Trace not intensified in INTEN position of MODE switch.	Q294 defective.
	Delay Pickoff
ī. No Delayed Sweep.	1. Voltage at the junction of R453-R455 should be between —12 and —15 volts and should change as the trigger LEVEL control is turned. If it does, check D455. If it does not, check Q453. 2. Adjust controls for a normal display. Connect test oscilloscope probe to the junction of D445-D444, waveform should be the switching pulse
	of D445. 3. Check for waveform at collector of Q424.
	4. Connect test oscilloscope to the plate of V414A. Vary DELAY control, amplitude of waveform should change from 0.5 volts peak-to-peak to 2 volts, peak-to-peak.

TYPE 3A1S TROUBLESHOOTING

Use the following information to troubleshoot the Type 3A1S.

If trouble occurs in the Type 3A1S, try to isolate it by quick operational and visual checks. First check the settings of all controls. Then operate the controls to see their effect, if any, on the trouble. The normal or abnormal operation of each control may help establish the trouble symptoms.

After the trouble symptoms are established, look first for simple causes. Check that the pilot light of the oscilloscope is on, feel for any irregularities in the operation of the controls, listen for any unusual sound, see if tube filaments are lit, and visually check the entire plug-in unit. The type of symptom will generally indicate the checks to make.

In general, a troubleshooting procedure consists of two parts: circuit isolation (Table 4-4) and circuit troubleshooting. First, isolate the circuit, then troubleshoot in the circuit to find the cause of the trouble. Voltages are shown at many test points on the schematics. When necessary, the conditions under which the voltages were obtained also appear on the schematics.

NOTE

Because the output amplifier should be balanced, a bad tube or transistor will usually shift the trace off the crt. If the vertical signal is low or absent, but the trace is normal, the trouble will be a component that is common to both transistors or tubes in an amplifier pair.

TABLE 4-4 CIRCUIT ISOLATION

Trouble Symptom	Probable Cause	Check
1. No spot or trace on either channel regardless of MODE switch setting.	Output amplifier not balanced. Bad tube or transistor in output amplifier.	Connect a short across the vertical deflection pins on the crt. If a trace appears, the vertical amplifier is unbalanced. Check for voltage difference across each pair of amplifiers starting from the first output amplifier stage.
2. No vertical signal on crt from either channel.	Defective component in one of the balanced output amplifiers.	Signal trace through each stage of the output amplifier.
3. Vertical signal only on one channel. POSITION control of defective channel does not operate but trace is normal.	Shorted multivibrator transistor. Shorted or open diode in diode gates.	Check Q275 and Q285. Check diodes in diode gate of defective channel (D155 and D158, D255 and D258).
4. Unit will not operate in alternate. (ALTER mode)	Blocking oscillator Q260 not operating. Diodes D278 or D288 open or shorted. Multivibrator not operating.	Check for sync pulse at the emitter and collector of Q260. Check diodes. Check multivibrator transistors Q275 and Q285, and diodes D278 and D288.
5. Unit will not operate in the CHOP mode.	Blocking oscillator not operating.	Check blocking oscillator Q260 for trigger waveform to multivibrator (Q275 and Q285).
6. Sweep will not trigger in either position of TRIGGER CH 1 ONLY switch.	Multivibrator not operating. Trig- ger cathode follower not operat- ing.	Check multivibrator transistors Q275 and Q285, and diodes D278 and D288. Check V383.
7. Sweep will not trigger when TRIG- GER CH 1 ONLY switch is pulled out.	Channel 1 trigger amplifier. CHAN 1 TRIG DC LEVEL R171 not correctly set.	Check Q164, Q174, Q173 and Q183. Check calibration procedure for correct setting of R171.
8. Dc reference-level shift. Trace shifts when AC-DC-GND switch is changed from DC to GND.	DC BAL R119 and R219 not adjusted correctly. Input cathode-follower tubes gassy.	Refer to calibration procedure for adjustment of DC BAL controls. Check V123 and V223.

SECTION 5 CALIBRATION

Introduction

The Type 561S Oscilloscope system should be calibrated after each 500 hours of operation or every six months if used intermittently.

This procedure contains complete calibration instructions for the Indicator Unit (Type 561S), the Vertical Unit (Type 3A1S), and the Time-Base Unit (Type 3B1S). Any of the units may be calibrated separately without calibrating the whole system. However, if either of the plug-in units are to be calibrated separately, the Type 561S must be properly calibrated. When calibrating the Type 561S, it is only necessary that the plug-in units produce a display.

TYPE 561S CALIBRATION

Equipment Required

The following items, or their equivalent, are required for a complete calibration of the Type 561S.

- 1. A Tektronix Type 3A1S Dual-Trace Amplifier plug-in unit.
- 2. A Tektronix Type 2- or 3-Series time-base plug-in unit such as the Type 3B1S.
- Variable autotransformer for supplying the line voltage to the Type 561S. The autotransformer must be capable of supplying at least 350 volt-amperes.
- DC voltmeter with the following minimum specifications: Sensitivity 5,000 Ω/volt Accuracy 1% or better up to 300 volts and at least 3% at 4 kv.
- Ac voltmeter (rms) with a range of at least 125 volts (250 volts if the Type 561S is wired for 234-volt operation).

Preliminary Instructions

To set up the Type 561S for calibration, insert the Type 3A1S into the left-hand opening and the Type 3B1S into the right-hand opening. Connect the autotransformer to a suitable power source and connect the Type 561S to the output of the autotransformer. Set the output voltage of the autotransformer to the nominal operating voltage of the Type 561S (117 volts or 234 volts). Turn on the Type 561S and allow the system to warm up for about 10 minutes before proceeding.

Power Supply

With the dc voltmeter, measure the voltage at pin 23 of either interconnecting plug and set the -100 VOLTS adjustment for exactly 100 volts on the meter.

Connect the voltmeter to pin 10 of either interconnecting plug and set the +300 VOLTS adjustment for exactly 300 volts on the meter.

Connect the voltmeter to pin 15 of either interconnecting plug and set the ± 125 VOLTS adjustment for exactly 125 volts on the meter.

Connect the voltmeter to pin 16 of either interconnecting plug and set the -12.2 VOLTS adjustment for exactly 12.2 volts on the meter.

Measure the voltage at the HV TEST POINT (see Fig. 5-1) and set the HIGH VOLTAGE adjustment for exactly 3300 volts on the meter.

Power Supply Ripple Check

Set the system front-pannel controls as follows:

Type 5615

INTENSITY	Midrange
FOCUS	Midrange

Type 3A15

CH 1 AC-DC-GND	AC
CH 1 POSITION	Midrange
CH 1 VOLTS/DIV	.T.
CH 1 VARIABLE	CALIB
MODE	CH 1

Type 3B15

TIME/DIV	10 mSEC
MODE (if applicable)	NORM
POSITION	Midrange
Triggering Controls	Set for an AUTO of

free-running sweep.

Connect a patch cord between the CH 1 input connector of the Type 3A1S and pin 10 (+300-volt supply) of either interconnecting plug. The peak-to-peak ripple voltage of this supply should not exceed 80 mvolts (0.8 graticule division of vertical deflection).

Connect the patch cord to pin 23 of either interconnecting plug and set the CH 1 VOLTS/DIV switch of the Type 3AIS to .01. The ripple voltage of this supply (—100 v) should not exceed 5 mvolts, peak-to-peak (0.5 graticule division of vertical deflection).

Connect the patch cord to pin 15 of either interconnecting plug and observe the amount of ripple voltage. The ripple voltage of this supply (+125 v) should not exceed 10 mvolts, peak-to-peak (1.0 graticule division of vertical deflection).

Connect the patch cord to pin 16 of either interconnecting plug and observe the amount of ripple voltage. The ripple voltage of this supply (—12.2 v) should not exceed 3 mvolts, peak-to-peak (0.3 graticule division of vertical deflection).

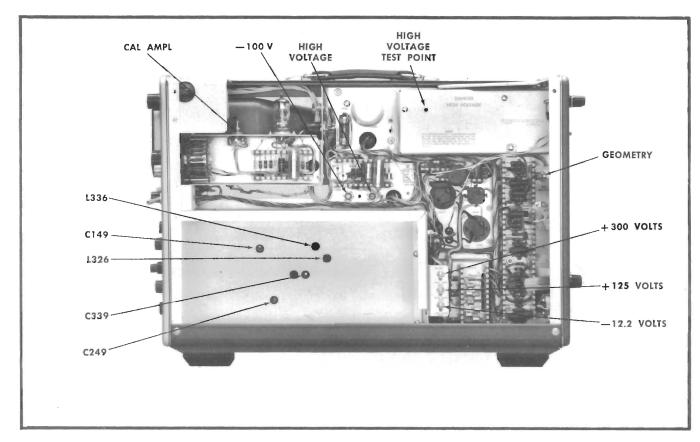


Fig. 5-1. HV test point location.

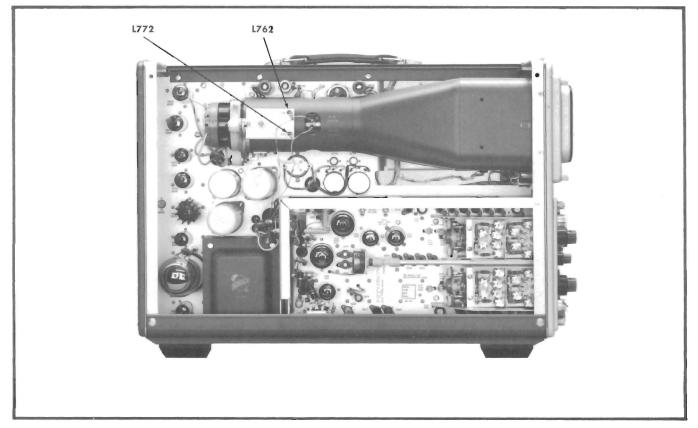


Fig. 5-2. L722 and L762 location.

in)

Calibrator

Set the Type 561S CALIBRATOR switch to OFF and set the CAL AMPL (Fig. 5-1) adjustment so the voltage monitored at pin 7 of V884 is exactly 100 volts. Calibration of individual CALIBRATOR switch settings is not necessary.

Cathode-Ray Tube

Remove the graticule cover and graticule from the Type 561S. With a straight-edge, check to see if the crt is flush with the front panel of the instrument. If not, loosen the crt clamp screw and move the tube by a slight pull or push on the tube socket. Then, retighten the crt clamp screw.

Set the Type 3B1S coupling switch to AUTO. With no signal applied to the Type 3A1S, set its VOLTS/DIV switch to 10 and position the trace to the graticule horizontal centerline using the Type 3A1S POSITION control. Adjust the Type 561S FOCUS, INTENSITY, and ASTIGMATISM controls for the narrowest and best defined trace. Adjust the ALIGNMENT control so that the trace is exactly parallel with the horizontal graticule lines.

Cathode-Ray Tube Geometry

The GEOMETRY control is set to achieve minimum curvature of the vertical lines displayed at the two sides of the graticule.

From the time-mark generator apply time markers of 100 μ sec and 1 msec to the CH 1 input of the Type 3A1S. Set the CH 1 VOLTS/DIV switch to 1 and adjust the Type 3B1S for a stable display. Set the Type 3A1S CH 1 VOLTS/DIV switch to .05 and position the baseline downward and off the crt and display only the vertical lines of the time markers. Adjust the GEOMETRY control (Fig. 5-1) for minimum curvature of the vertical lines at the left and right ends of the graticule.

TYPE 3B1S CALIBRATION

Equipment Required

The following items of equipment, or their equivalent, are required for a complete calibration of the Type 3B1S.

- 1. A calibrated Tektronix Type 561S Oscilloscope.
- 2. Tektronix Type 3A1S, Dual-Trace Amplifier plug-in unit.
- 3. Time-mark generator with crystal-controlled markers at 1 μ sec, 10 μ sec, 50 μ sec, 100 μ sec, 1msec, 5 msec, 10 msec, 100 msec, and 1 sec. The generator must also have an accurate 10-mc sine-wave output. Tektronix Type 180A Time-Mark Generator recommended.
- 4. A Tektronix 560-Series Plug-In Extension Part No. 013-034.
- 5. A coaxial cable about 3 feet long with UHF plug connectors on each end, such as Tektronix 42" 50 Ω cable, Part No. 012-001.

- Dc voltmeter, 20,000 ohms per volt (or better), 3% accuracy.
- Insulated screwdriver for adjusting variable capacitors, such as Jaco 1½" shank No. 125, Tektronix Part No. 003-000.
- A 6" clip lead with a small insulated alligator clip on each end.
- Two 18" banana-tip patch cords, such as Tektronix PC18R, Part No. 012-031.

Preliminary Instructions

Install the Type 3A1S into the left-hand compartment of the oscilloscope. Install the Type 3B1S into the right-hand compartment with the Tektronix 560-Series plug-in extension. Set the Type 3B1S front-panel controls as follows:

POSITION	Midrange
MODE	NORM
$10 \times MAG$	off (pushed
TIME/DIV	5 mSEC
DELAYED SWEEP	5 mSEC
VARIABLE TIME/DIV	CALIB
NORMAL SWEEP COUPLING	AUTO
DELAY TIME and VERNIER	Midrange

Turn on the power and allow a 10-minute warmup before starting calibration.

Procedure

Check + 15-Volt Supply

a. Measure the voltage across Zener diode D398 (see Fig. 5-3) with the dc voltmeter; the voltage should be ± 15 volts, $\pm 10\%$.

2. Adjust Normal Sweep Gating Threshold

- a. Set the Normal Sweep COUPLING switch to AC.
- b. Connect the short clip lead (with insulated alligator clips) across R143 (see Fig. 5-3).
- Adjust R130, the NORMAL SWP GATING THRESH-OLD control (see Fig. 5-4), to just produce a freerunning sweep.
- d. Remove the jumper from R143, the trace should disappear.

3. Adjust Delayed Sweep Gating Threshold

 Set the Normal Sweep COUPLING switch to AUTO. The trace should appear.

- b. Set the MODE switch to TRIG DLY'D SWP.
- c. Connect the short clip lead across R243 (see Fig. 5-3).
- d. Adjust R230, the DELAYED SWP GATING THRESH-OLD control (see Fig. 5-4), to just produce a freerunning sweep.
- Remove the jumper from R243. The trace should disappear.

4. Adjust Sweep Calibration

- a. Set the MODE switch to NORM, the Normal Sweep SOURCE switch to INT, the COUPLING switch to AUTO, the SLOPE switch to +, and the TIME/DIV switch to 1 mSEC.
- b. Set the Delayed Sweep SOURCE switch to INT, the COUPLING switch to AC, the SLOPE switch to +, and the DELAY SWEEP knob to 1 mSEC.
- c. Connect the time-mark generator to the Type 3A1S vertical amplifier, and set the generator for 1 msec time marks.
- d. Adjust the SWEEP CAL control, (front-panel screwdriver adjustment) for exactly 1 time marker per major graticule division.
- Set the MODE switch to TRIG DLY'D SWP and check the timing accuracy. Readjust the SWEEP CAL control to reduce any timing error by 50 percent.
- f. Set the MODE switch to NORM and see if the Normal Sweep now has a timing error equal and opposite to the Delayed Sweep timing error. The SWEEP CAL control is adjusted properly when any basic timing errors of the two sweep generators are equal and opposite.

NOTE

Timing adjustments should always be made with the trace beginning at the left edge of the graticule. Make visual measurements between the 2nd and 9th major graticule divisions.

5. Adjust Normal Sweep Length

a. Use the same setup as in step 4, and adjust NOR-MAL SWEEP LENGTH R168 (see Fig. 5-4), for 10.5 major graticule divisions of horizontal deflection.

6. Adjust Delayed Sweep Length

- a. Use the same setup as in step 4.
- b. Set the MODE switch to TRIG DLY'D SWP, the TIME/DIV switch to 2 mSEC, the DELAYED SWEEP knob to 1 mSEC, and adjust the Delayed Sweep LEVEL control for a stable display.
- Adjust DELAYED SWEEP LENGTH R268 (see Fig. 5-4), for 10.5 major graticule divisions of horizontal deflection.

7. Adjust MAG GAIN

 a. Set the MODE switch to NORM, and the TIME/ DIV switch to 1 mSEC.

- b. Set the time-mark generator for 1-msec and 100usec time marks.
- Adjust the Normal Sweep LEVEL control for a stable display.
- d. Pull the 10× MAG switch out and adjust MAG GAIN R335 (see Fig. 5-4) for one large time mark every 10 major graticule divisions and 1 small time mark every 1 major graticule division.
- e. Check linearity over the entire magnified sweep by moving the POSITION control throughout its range.

8. Adjust Sweep Magnifier Registration

- a. Use the same setup as in step 7.
- b. Pull the 10× MAG switch out and position the display so the first full large time mark falls on the graticule centerline.
- c. Push the 10× MAG switch in and adjust SWP MAG REGIS R368 (see Fig. 5-4) so the first time mark again falls on the graticule centerline.
- d. Repeat this adjustment until there is no shift in the start of the display when the 10× MAG switch is pulled out.

9. Adjust Delay Stop

- a. Push the 10× MAG switch in. Set the MODE switch to INTEN and turn the DELAY TIME and VERNIER controls fully clockwise.
- b. Adjust the oscilloscope intensity so the intensified part of the display is clearly visible.
- c. Adjust DELAY STOP R435 (see Fig. 5-4), so the intensified part of the display starts at the 2nd 100 μsec marker to the right of the 11th 1 msec marker.
- d. Turn the DELAY TIME and VERNIER controls fully counterclockwise; the intensified part of the display should start between the first 2 major graticule divisions.

10. Check Normal and Delayed Sweep Rates

a. Set the front-panel controls as follows:

MODE	NORM
TRIGGERING (Normal Sweep)	+ AC INT
TRIGGERING (Delayed Sweep)	+ AC INT
TIME/DIV	50 μ SEC
DELAYED SWEEP	50 μSEC

- b. Set the time-mark generator for 50-µsec time marks.
- Adjust the Normal Sweep LEVEL control for a stable display.
- d. Check for 1 time mark at each major graticule division between the 2nd and 9th division lines.
- e. Set the MODE switch to TRIG DLY'D SWP and adjust the Delayed Sweep LEVEL control for a stable display.

- f. Check for 1 time mark at each major graticule division between the 2nd and 9th division lines.
- g. Repeat step (f) at each of the settings shown in Table 5-1. Notice that the TIME/DIV and DELAYED SWEEP switches are set to the same position for each check.

TABLE 5-1

TIME/DIV and DELAYED SWEEP Switches	Time Marks	Time Marks/Div
50 μSEC	50 μsec	1
.1 mSEC	100 μ sec	1
.2 mSEC	100 μ sec	2
.5 mSEC	500 μsec	1
1 mSEC	1 msec	1
2 mSEC	1 msec	2
5 mSEC	5 msec	1
10 mSEC	10 msec	1
20 mSEC	10 msec	2
50 mSEC	50 msec	1
.1 SEC	100 msec	1
.2 SEC	100 msec	2
.5 SEC	500 msec	1
1 SEC	1 sec	1

NOTE

The timing error for all sweep rates must be within 3% (1.2 minor graticule divisions). Timing checks are made over 8 major graticule divisions between the 2nd and the 9th division lines.

11. Check the VARIABLE TIME/DIV Control

- a. Set the MODE switch to NORM, the TIME/DIV switch to 1 mSEC, the DELAYED SWEEP switch to .2 mSEC, and the time-mark generator for 10-msec time marks.
- b. Obtain a triggered display of a time marker at the left and right edges of the graticule.
- c. Turn the VARIABLE TIME/DIV control fully counterclockwise. The markers should now be not more than 4 divisions apart with a ratio of at least 2.5 to 1.

12. Adjust Fast Normal Sweep Rates

- Remove the plug-in extension, and install the Type 3B1S directly into the oscilloscope.
- b. Set the VARIABLE TIME/DIV control to CALIB.
- c. Perform the adjustments as shown in Table 5-2.

13. Adjust Fast Delayed Sweep Rates

a. Set the MODE switch to TRIG DLY'D SWP. Use Table 5-2 and substitute DELAYED SWEEP switch settings for the TIME/DIV settings.

TABLE 5-2

TIME/DIV Switch	Time Marks	Adjustment	Time Marks/Div
10 μSEC	10 μsec	C160D	1
20 μSEC	10 μsec	check	2
5 μSEC	5 μsec	check	1
1 μSEC	1 μsec	C160B	1
2 μSEC	1 μsec	check	2
.5 μSEC	1 μsec	check	1 per 2 div
15 μSEC	10 mega- cycles	Pull out 10 X MAG switch	1 cycle per 2 div

- b. At 10 μ SEC, adjust C260D, and at 1 μ SEC, adjust C260B (Fig. 5-4).
- c. Check the 10-megacycle display as shown in Table 5-2 for the Normal Sweep.

TYPE 3A1S CALIBRATION

Equipment Required

- 1. Tektronix Type 561S Oscilloscope.
- 2. Tektronix time-base plug-in unit such as the Type 3B1S.
- 3. Dc voltmeter, 5000 ohms/volt, 2% accuracy.
- 4. Square-wave generator with a frequency output of about 1 kc Risetime of about 20 nsec or less, and at least 0.25-volt output amplitude such as the Tektronix Type 105 Square-Wave Generator.
- 5. Fast-rise square-wave generator with a frequency output of about 400 kc. Risetime of about 3.5 nsec or less, (into 50 ohms) and at least 0.1-volt output amplitude such as the Tektronix Type 107 Square-Wave Generator.
- UHF 50-ohm termmination such as Tektronix Part No. 011-045
- UHF 50-ohm 5×T attenuator such as Tektronix Part No. 011-032.
- 8. Tektronix input time-constant standardizer, Part No. 011-030.
- UHF 50-ohm coaxial cable such as Tektronix Part No. 012-001.
- Nonmetal alignment tool, such as Tektronix Part No. 003-301.
- 11. Nonmetal alignment tool, such as Tektronix Part No. 003-307 and 003-310.
- 12. Tektronix 560-Series plug-in extension, Part No. 013-034.

Preliminary Instructions

Install the Type 3A1S in the left-hand opening of the oscilloscope, and the Type 3B1S with the plug-in extension in the right-hand opening. Remove both side covers of the oscilloscope. Turn the oscilloscope power on and allow at least 10 minutes for warmup. Set the Type 3B1S for a 1 msec/div free-running or AUTO sweep. Set the controls for both channels of the Type 3A1S as follows:

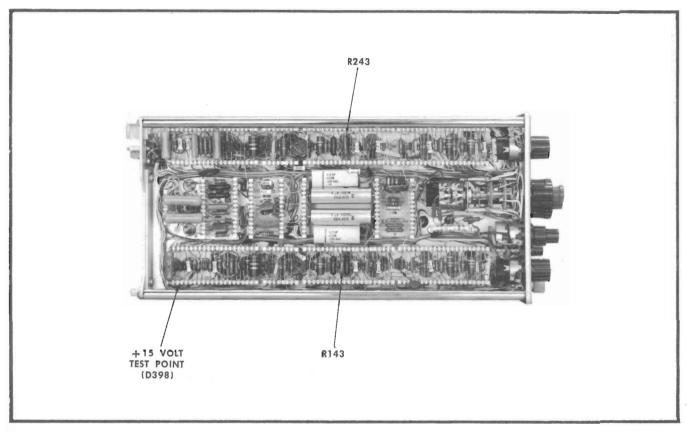


Fig. 5-3. Type 3B1S, left side view.

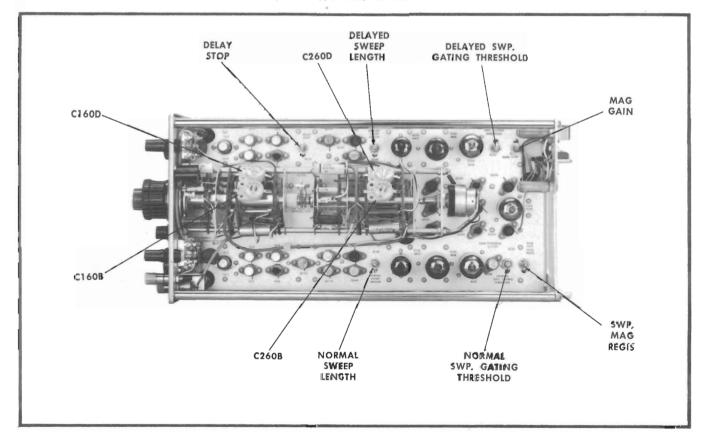


Fig. 5-4. Type 3B1S, right side view.

POSITION Midrange **VOLTS/DIV** .01 VARIABLE VOLTS/DIV CALIB AC-DC-GND GND MODE ALTER INV (CH 1) NORM NORM CALIB Midrange DC BAL Midrange

Procedure

1. Adjust Output Dc Level

- a. Push in the TRIGGER CH 1 ONLY switch.
- b. Position the trace to the graticule horizontal center-
- Measure the dc voltage from each of the crt vertical deflection plates to ground.
- d. Adjust OUTPUT DC LEVEL R328 (Fig. 5-5) so the average of the two voltages is +150 volts; for example, one plate at +140 and the other at +160 volts.

2. Adjust Channel 1 and 2 Dc Balance

- Position the Channel 1 trace to the graticule horizontal centerline.
- b. Adjust DC BAL R119 (Channel 1 front-panel adjustment) so the trace does not move as the Channel 1 VARIABLE VOLTS/DIV control is turned throughout its range.
- c. Repeat this adjustment for DC BAL R219 in Channel 2 as the Channel 2 VARIABLE VOLTS/DIV control is turned.

3. Adjust Channel 1 Trigger Dc Level

- a. Turn the MODE switch to CH 1.
- b. Pull out the TRIGGER CH I ONLY switch.
- Connect the dc voltmeter to R389 at switch SW390 (see Fig. 5-5).
- d. Adjust CHAN 1 TRIG DC LEVEL R171 (Fig. 5-5) for zero volts on the meter.
- e. Push in the TRIGGER CH 1 ONLY switch.

4. Adjust Channel 1 Gain and Calibration

- a. Set the Channel 1 AC-DC-GND switch to DC.
- Set the VOLTS/DIV switch to .01 and the VARIABLE VOLTS/DIV control to CALIB.
- c. Connect a 50-mv signal from the calibrator output to the Channel 1 input.
- d. Adjust 10 MV GAIN R149 for five major divisions of vertical deflection.
- e. Set the VOLTS/DIV switch to .02 and the oscilloscope calibrator output for 100 mv.

f. Adjust 20 MV GAIN R147 (Fig. 5-5) for five major divisions of vertical deflection.

5. Adjust Channel 2 Gain

- a. Connect another cable from the oscilloscope calibrator output to the Channel 2 input connector.
- b. Set the Channel 2 AC-DC-GND switch to DC.
- c. Set both VOLTS/DIV switches to .01.
- d. Set the calibrator output for 50 mv.
- e. Set the MODE switch to ADDED and the INV (CH 1) NORMAL switch to INV.
- f. Adjust 10 MV GAIN R249 (Fig. 5-5) for cancellation of the display shown by a single line of trace.
- g. Set the calibrator output for 100 mv and both VOLTS/DIV switches to .02.
- h. Adjust 20 MV GAIN R247 (Fig. 5-5) to cancel the display.

6. Check Both VARIABLE VOLTS/DIV Controls

- a. Set both VOLTS/DIV switches to .01 and both VARIABLE VOLTS/DIV controls to CALIB.
- b. Set the INV (CH 1) NORM switch to NORM.
- Connect a 50-mv signal from the oscilloscope calibrator to the input of both channels.
- d. Set the MODE switch to CH 1; there should be 5 major divisions of vertical deflection.
- e. Turn the Channel 1 VARIABLE VOLTS/DIV control fully counterclockwise; there should be 2 (or less) major divisions of vertical deflection.
- f. Check to see that the UNCAL neon is lighted.
- g. Return the Channel 1 VARIABLE VOLTS/DIV control to CALIB; the UNCAL neon should extenguish.
- h. Turn the MODE switch to CH 2 and repeat this check for the Channel 2 VARIABLE VOLTS/DIV control.

7. Check Alternate Mode Operation

- Set the MODE switch to ALTER and position the two traces about 2 major divisions apart.
- b. Set the Type 3B1S for a sweep rate of 0.1 sec/div and check to see that the trace alternates between Channel 1 and 2.

8. Check Chopped Mode Operation

a. Set the Type 3B1S for a sweep rate of 5 µsec/div and the Type 3A1S MODE switch to CHOP. The chopped trace on the crt should show about 1 sample for each major horizontal graticule division.

9. Check For Gassy Input Amplifier

a. Set the VOLTS/DIV switch to .02 and the AC-DC-GND switch first to GND then to AC. The trace should not shift vertically more than 1 minor graticule division.

10. Adjust Channel 1 and 2 Input Capacitance

- a. Connect the square-wave generator through the 5XT attenuator and the capacitance standardizer to the Channel 1 input connector.
- b. Set the generator for a 1-kc output signal.
- c. Set the Channel 1 VOLTS/DIV switch to .01.
- d. Set the generator output signal amplitude for 4 major graticule divisions of deflection and adjust C111 for an optimum flat-topped waveform.
- e. Set the VOLTS/DIV switch to .02 and adjust C112 for an optimum flat-topped waveform (see attenuator shields in the instrument for capacitor locations).
- f. Remove the signal from Channel 1 and connect it to Channel 2.
- g. Set the Channel 2 VOLTS/DIV switch to .01 and adjust C211 for an optimum flat-topped waveform.
- h. Set the Channel 2 VOLTS/DIV switch to .02 and adjust C212 for an optium flat-topped waveform.

11. Adjust Channel 1 and 2 VOLTS/DIV

- a. With the same test setup as in step 10, adjust the square-wave generator for a 1-kc output signal with 4 major graticule divisions of amplitude.
- b. Perform the adjustments indicated in Table 5-3 for Channel 1 and then connect the square-wave generator to the Channel 2 input connector and perform the same adjustments for Channel 2.

TABLE 5-3

VOLTS/DIV Switch Setting	Adjust for Optimum Square Corner		Adjust for Optimum Flat Top	
	Channel 1	Channel 2	Channel 1	Channel 2
.05	C103C	C203C	C103B	C203B
.1	C105C	C205C	C105B	C205B
.2	C107C	C207C	C107B	C207B
2	C109C	C209C	C109B	C209B

12. Adjust High-Frequency Compensation

- a. Set the Channel 1 VOLTS/DIV switch to .01 and the VARIABLE to CALIB.
- b. Set the Type 3AIS MODE switch to CH 1.
- c. Set the INV (CH 1) NORM switch to NORM.
- d. Set the CH 1 AC-DC-GND switch to DC.
- e. Set the Type 3B1S TIME/DIV switch to .5 µSEC.
- f. Apply the output of the fast-rise square-wave generator to the Channel 1 input connector through a 5×T attenuator, a 50-ohm coaxial cable and a 50-ohm termination. (Connect the termination directly to the input of the Type 3A1S; then connect the coaxial cable between the termination and attenuator.)
- g. Adjust the Type 3B1S triggering controls for a stable display of the generator signal.

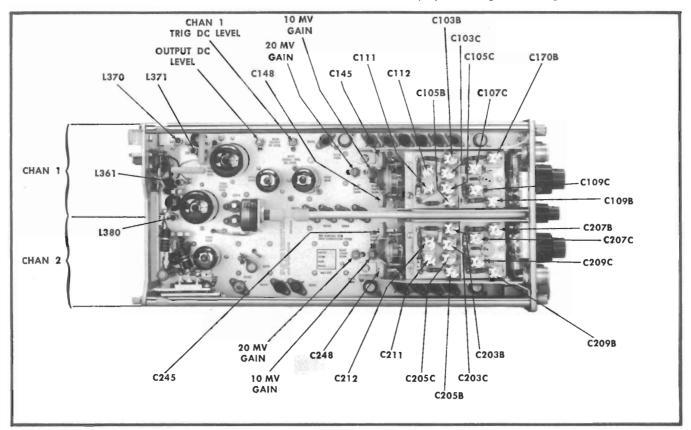


Fig. 5-5. Type 3A1S, left side view.

- Adjust the output amplitude of the generator for about 4 divisions of deflection.
- i. Adjust C339 (see Fig. 5-1) for the flattest top on the square wave.
- j. Pull the Type 3BIS $10 \times$ MAG switch to on and set the POSITION control to display the rising edge of the waveform.
- k. Adjust L326 and L336 (Fig. 5-1) for maximum peaking on the rising edge of the waveform. (It is important that L326 and L336 be adjusted just to the point where maximum peaking occurs; if they are adjusted too far in one direction, a dip will appear near the leading corner on the top of the waveform.)
- Adjust C145 and C149 (Fig. 5-1 and 5-5) for the squarest corner.
- m. Adjust L361, L371, L370, and L380 (Fig. 5-5) for the flattest area immediately following the leading corner on the top of the waveform. (L370 and L380 affect the area of the waveform closest to the leading corner while L361 and L371 affect the waveform at a slightly later point.
- Set the Type 3A1S Channel 1 VOLTS/DIV switch to .02.
- Adjust the output amplitude of the square-wave generator for 4 divisions of deflection.

- p. Adjust C148 (Fig. 5-5) for the squarest corner on the waveform.
- q. Repeat the preceding steps, making minor adjustments, to obtain a square and flat corner on the displayed waveform. Maximum aberrations are 1 mm.
- r. Set the Type 3A1S MODE switch to CH 2.
- s. Remove the signal from the Channel 1 input and apply it to the Channel 2 input as described in step (f).
- t. Set the Channel 2 VOLTS/DIV switch to .01 and adjust the output of the generator for 4 divisions of deflection.
- u. Adjust C245 and C249 (Figs. 5-1 and 5-5) for a square leading corner on the waveform.
- Set the Channel 2 VOLTS/DIV switch to .02 and adjust the output of the generator for 4 divisions of deflection.
- w. Adjust C248 (Fig. 5-5) for a square leading corner on the waveform.
- x. Set the Type 3A1S MODE switch to CH 1.
- y, Apply the signal to the Channel 1 input as described in step (f).
- z. Readjust as necessary for the best compromise in response between the two channels.

SECTION 6 PARTS LIST and DIAGRAMS

Values are fixed unless marked Variable.

Ckt. No.	Tektronix Part No.	Descri	otion	S/N Range
		Buli	bs	
B601 B602	150-001 150-001	Incandescent, GE #44 Incandescent, GE #44	Graticule Light Graticule Light	
B603 B856	150-018 150-025	Incandescent, GE #12 Neon, NE-2E	Pilot Light	
B857	150-025	Neon, NE-2E		

Capacitors

Tolerance $\pm 20\%$ unless otherwise indicated.

Tolerance of all electrolytic capacitors as follows (with exceptions):

5 V 50 V	= -10%, + 250	10/		
	= -10%, + 100	•		
351 V 450 V	= -10%, + 50	%		
C611	285-510	0.01 μ f	MT	400 v
C616	285-510	0.01 μf	MT	400 v
C640A,B	*290-228 *290-227	340 μ f x 10 μ f	EMC	250 v 250 v
C642A,B C644A,B	*290-228	340 μf × 10 μf 340 μf × 10 μf	EMC EMC	250 v 250 v
C044/1,b	270-220	540 μι X 10 μι	LIVIC	250 V
C650	285-510	0.01 μf	MT	400 v
C667	290-002	8 μf	EMT	450 v
C670	285-511	0.01 μ f	PTM	600 v
C720	290-166	$2 \times 2000 \mu f$	EMC	25 v
C732	290-201	100 μf	EMT	15 v
C737	002.007	0.0 (C	25 v
C757	283-026 290-015	0.2 μf 100 μf	Cer EMT	25 v 25 v
C801	283-006	0.02 μf	Cer	600 v
C803	283-000	0.001 μf	Cer	500 v
C807	285-502	0.001 μ f	MT	1000 v
			`	
C822	283-071	0.006 8 μf	Cer	5000 v
C830 C832	283-071 283-071	0.0068 μf 0.0068 μf	Cer Cer	5000 v 5000 v
C837	283-036	0.0006 μ1 0.0025 μf	Cer	6000 v
C841	285-519	0.047 μf	MT	400 v
		, ,		
C842	283-071	0.0068 μf	Cer	5000 v
C853	283-036	$0.0025 \mu f$	Cer	6000 v
C876	290-025	$6.25~\mu\mathrm{f}$	EMT	300 v
C878	281-523	100 pf	Cer	350 v
C884 C897	281-524 283-000	150 pf 0.001 μf	Cer Cer	500 v 500 v
C07/	200-000	0.001 μ1	Cei	500 ₹

Diodes

Ckt. No.	Tektronix Part No.	Description	S/N Range
D640A,B,C,D D642A,B,C,D D644A,B,C,D D627 D663	*152-047 *152-047 *152-047 *152-107 *152-107	Silicon Replaceable by 1N2862 Silicon Replaceable by 1N2862 Silicon Replaceable by 1N2862 Silicon Replaceable by 1N647 Silicon Replaceable by 1N647	
D664 D720 D721 D838 D839	*152-107 152-035 152-035 *152-047 *152-047	Silicon Replaceable by 1N647 Silicon 1N1563A Silicon 1N1563A Silicon Replaceable by 1N2862 Silicon Replaceable by 1N2862	
		Fuses	
F601 F720	159-005 159-023	3 Amps 3AG Slo-Blo 117 v operation 2 Amps 3AG Slo-Blo	
		Inductors	
L760 L770 L860	*108-088 *108-088 *108-285	3.2 μ h 3.2 μ h Beam Rotator	
		Transistors	
Q624 Q734 Q744 Q757	*151-087 151-040 151-042 151-046	Replaceable by 2N1131 2N1302 2N1378 2N1529	
		Resistors	
Resistors are fix	ed, composition, =	±10% unless otherwise indicated.	
R601 R602 R609 R610 R611	311-055 308-142 302-106 302-104 302-102	50 Ω Var WW SCALE ILLUM 30 Ω 3 w WW 5% 10 meg 1/2 w 100 k 1/2 w 1 k 1/2 w	
R612 R616 R617 R618 R619	302-272 311-015 308-186 308-226 302-224	2.7 k	

Ckt. No.	Tektronix Part No.		Description	1			S/N Range
R624 R625 R626 R627 R628	302-473 302-222 302-184 302-102 308-176	47 k 2.2 k 180 k 1 k 4 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w 20 w		WW	5%	
R632 R633 R635 R640 R642	302-102 302-473 301-302 304-100 304-100	1 k 47 k 3 k 10 Ω 10 Ω	1/ ₂ w 1/ ₂ w 1/ ₂ w 1 w 1 w			5%	
R644 R650 R651 R652 R653	304-100 309-101 309-162 302-102 302-225	10 Ω 330 k 250 k 1 k 2.2 meg	1 w 1/2 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec Prec	1% 1%	
R654 R655 R656 R657 R658	302-474 302-685 311-068 302-684 302-273	470 k 6.8 meg 500 k 680 k 27 k	1/ ₂ w 1/ ₂ w .2 w 1/ ₂ w 1/ ₂ w	Var		+125 VOLTS	
R659 R663 R664 R666 R667	302-333 302-102 302-102 308-176 308-176	33 k 1 k 1 k 4 k 4 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 20 w 20 w		ww ww	5% 5%	
R670 R671 R672 R673 R675	309-156 309-053 302-102 302-105 302-825	1.024 meg 333 k 1 k 1 meg 8.2 meg	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w		Prec Prec	1% 1%	
R676 R677 R678 R679 R729	311-068 304-224 302-394 302-333 302-823	500 k 220 k 390 k 33 k 82 k	.2 w 1 w 1/ ₂ w 1/ ₂ w 1/ ₂ w	Var		+300 VOLTS	
R730 R731 R732 R733 R734	311-068 309-104 310-115 301-394 302-334	500 k 2.05 k 15 k 390 k 330 k	.2 w 1/ ₂ w 1 w 1/ ₂ w 1/ ₂ w	Var	Prec Prec	-12.2 VOLTS 1 % 1 % 5 % 5 %	
R735 R737 R744 R754 R759	302-272 302-151 308-231 302-471 302-104	2.7 k 150 Ω 220 Ω 470 Ω 100 k	1/2 w 1/2 w 3 w 1/2 w 1/2 w		WW	5%	

			•		
Ckt. No.	Tektronix Part No.		Description	1	S/N Range
R770 R801 R802 R803 R806	302-564 306-681 302-562 306-273 302-104	560 k 680 Ω 5.6 k 27 k 100 k	1/2 w 2 w 1/2 w 2 w 1/2 w		
R807 R813 R815 R816 R831	302-472 302-101 302-474 302-102 302-104	4.7 k 100 Ω 470 k 1 k 100 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w		·
R832 R833 R834 R835A R835B	302-106 311-314 302-105 306-515 306-515	10 meg 2 meg 1 meg 5.6 meg 5.6 meg	1/ ₂ w 1/ ₂ w 2 w 2 w	Var	INTENSITY
R835C R835D R835E R836 R837	306-515 306-685 306-685 302-223 302-471	5.6 meg 6.8 meg 6.8 meg 22 k 470 Ω	2 w 2 w 2 w 1/ ₂ w		
R838 R839 R840 R841 R842A	301-242 302-104 301-125 311-042 306-335	2.4 k 100 k 1.2 meg 2 meg 3.3 meg	1/2 w 1/2 w 1/2 w 1/2 w	Var	5% 5% HIGH VOLTAGE
R842B R842C R842D R844 R846	306-335 306-275 306-275 311-313 302-225	3.3 meg 2.7 meg 2.7 meg 5 meg 2.2 meg	2 w 2 w 2 w	Var	FOCUS
R849 R851 R852 R853 R854	302-223 302-104 302-273 302-471 302-105	22 k 100 k 27 k 470 Ω 1 meg	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w		
R860 R861 R862 R863 R864	311-317 302-680 302-823 302-823 311-206	2 x 1 k 68 Ω 82 k 82 k 250 k	1/2 w 1/2 w 1/2 w	Var Var	ALIGNMENT ASTIGMATISM
R865 R870 R871 R872 R873	311-026 301-392 311-315 301-154 302-103	100 k 39 k 20 k 150 k 10 k	½ w ½ w ½ w	Var Var	GEOMETRY 5% CAL AMPL 5%

		1.00101013	com a)	
Ckt. No.	Tektronix Part No.	Descrip	tion	S/N Range
R876 R877 R878 R879 R883	301-153 301-183 301-564 301-114 305-223	15 k		5% 5% 5% 5% 5%
R885 R886 R887 R888 R889	309-121 309-119 309-117 309-116 309-113	9.5 k	Prec Prec Prec Prec Prec	1% 1% 1% 1% 1%
R890 R891 R892 R893 R896	309-073 309-112 309-067 309-066 309-045	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	Prec Prec Prec Prec Prec	1 % 1 % 1 % 1 % 1 %
R897 R898 R899	309-112 309-112 *308-090	100 Ω $\frac{1}{2}$ w $\frac{1}{2}$ w $\frac{1}{4}$ Ω 1 w	Prec Prec WW	1 % 1 %
		Switcl	nes	
	Unwired Wired			
SW601 SW870 SW854 TK601	260-014 260-253 *262-497 260-449 260-157	Toggle Rotary Slide Thermal Cutout 160°		POWER ON CALIBRATOR CRT CATHODE SELECTOR
		Transfo	rmers	
T601 T801	*120-280 *120-275	L. V. Power H. V. Power		
		Electron	Tubes	
V609 V627 V634 V654 V667	154-291 154-307 154-187 154-022 154-020	0G3 7233 6DJ8 6AU6 6AS7		
V674 V800 V814 V822 V832	154-022 154-167 154-046 154-051 154-051	6AU6 6CZ5 12BH7 5642 5642		
V859 V884	*154-430 154-278	T5031-31 CRT Standard P 6BL8	hosphor	

Parts List—Type 3A1S

Values are fixed unless marked Variable.

Ckt. No.	Tektronix Part No.	Description	S/N Range
		Bulbs	
B113	150-027	Neon, NE-23	UNCAL
B150	150-027	Neon, NE-23	
B213	150-027	Neon, NE-23	UNCAL
B250	150-027	Neon, NE-23	

Capacitors

Tolerance $\pm 20\%$ unless otherwise indicated.

Tolerance of all electrolytic capacitors as follows (with exceptions):

$$3 \text{ V} - 50 \text{ V} = -10\%, + 250\%$$

 $51 \text{ V} - 350 \text{ V} = -10\%, + 100\%$
 $351 \text{ V} - 450 \text{ V} = -10\%, + 50\%$

C101 C103A C103B C103C C103D	*285-609 281-501 281-081 281-081 281-541	0.1 μf 4.7 pf 1.8 - 13 pf 1.8 - 13 pf 6.8 pf	MT Cer Air Air Cer	Var Var	600 v 500 v	10% ±1 pf
C105A C105B C105C C105E C107A	281-501 281-081 281-079 281-503 281-509	4.7 pf 1.8 - 13 pf 1.7 - 9.1 pf 8 pf 15 pf	Cer Air Air Cer Cer	Var Var	500 v 500 v 500 v	±1 pf ±0.5 pf 10%
C107B C107C C107E C109A C109B	281-081 281-079 281-513 281-509 281-081	1.8 - 13 pf 1.7 - 9.1 pf 27 pf 15 pf 1.8 - 13 pf	Air Air Cer Cer Air	Var Var	500 v 500 v	10%
C109C C109E C110 C111 C112	281-079 283-541 281-509 281-081 281-079	1.7-9.1 pf 500 pf 15 pf 1.8-13 pf 1.7-9.1 pf	Air Mica Cer Air Air	Var Var Var	500 v 500 v	10% 10%
C113 C114 C115 C123 C125	283-068 281-500 283-057 283-003 283-003	0.01 μf 2.2 pf 0.1 μf 0.01 μf 0.01 μf	Cer Cer Cer Cer Cer		500 v 500 v 200 v 150 v	±0.5 pf
C134 C144 C145 C148 C149	281-504 281-504 281-013 281-013 281-022	10 pf 10 pf 8-50 pf 8-50 pf 8-50 pf	Cer Cer Cer Cer Cer	Var Var Var	500 v 500 v	10% 10%

Capacitors (Cont'd)

Ckt. No.	Tektronix Part No.		Descriptio	n			S/N Range
C185 C187 C201 C203A	281-543 281-528 *285-609 281-501	270 pf 82 pf 0.1 μf 4.7 pf	Cer Cer MT Cer		500 v 500 v 600 v 500 v	10% 10% ±1 pf	
C203B C203C C203D C205A C205B	281-081 281-081 281-541 281-501 281-081	1.8-13 pf 1.8-13 pf 6.8 pf 4.7 pf 1.8-13 pf	Air Air Mica Cer Air	Var Var	500 v 500 v	10% ±1 pf	
C205C C205E C207A C207B C207C	281-079 281-503 281-509 281-081 281-079	1.7-9.1 pf 8 pf 15 pf 1.8-13 pf 1.7-9.1 pf	Air Cer Cer Air Air	Var Var Var	500 v 500 v	±0.5 pf 10%	
C207E C209A C209B C209C C209E	281-513 281-509 281-081 281-079 283-541	27 pf 15 pf 1.8-13 pf 1.7-9.1 pf 500 pf	Cer Cer Air Air Mica	Var Var	500 v 500 v	10%	
C210 C211 C212 C213 C214	281-509 281-081 281-079 283-068 281-500	15 pf 1.8-13 pf 1.7-9.1 pf 0.01 μf 2.2 pf	Cer Air Air Cer Cer	Var Var	500 v 500 v 500 v	±0.5 pf	
C215 C223 C225 C234 C244	283-057 283-003 283-003 281-504 281-504	0.1 pf 0.01 μ f 0.01 μ f 10 pf 10 pf	Cer Cer Cer Cer		200 v 150 v 150 v 500 v 500 v	10% 10%	
C245 C248 C249 C260 C261	281-013 281-013 281-022 283-067 281-523	8-50 pf 8-50 pf 8-50 pf 0.001 µf 100 pf	Cer Cer Cer Cer	Var Var Var	200 v 350 v	10%	
C263 C266 C268 C277 C287	283-003 281-513 283-003 281-523 281-523	0.01 μf 27 pf 0.01 μf 100 pf 100 pf	Cer Cer Cer Cer		150 v 500 v 150 v 350 v 350 v		
C291 C304 C307 C309 C314	283-003 281-513 283-003 281-508 281-513	0.01 μ f 27 pf 0.01 μ f 12 pf 27 pf	Cer Cer Cer Cer		150 v 500 v 150 v 500 v 500 v		

Parts List—Ty	pe 3A1S						
			Capacitors (C	ont'd)			
Ckt. No.	Tektro nix Part No.		Descriptio	n			S/N Range
C319 C327 C337 C339 C340	281-508 283-000 281-557 281-036 283-003	12 pf 0.001 μ f 1.8 pf 3-12 pf 0.01 μ f	Cer Cer Cer Cer	Var	500 v 500 v 500 v	\pm 0.6 pf	
C358 C360 C370 C373 C374	283-003 283-006 283-001 281-526 281-504	0.01 μf 0.02 μf 0.005 μf 1.5 pf 10 pf	Cer Cer Cer Cer Cer		150 v 600 v 500 v 500 v 500 v	±0.5 pf 10%	
C378 C381 C385 C387 C391	283-026 281-526 283-003 281-528 283-003	0.2 μf 1.5 pf 0.01 μf 82 pf 0.01 μf	Cer Cer Cer Cer Cer		25 v 500 v 150 v 500 v 150 v	±0.5 pf	
C394 C395 C396 C397 C398 C399	283-003 283-026 290-134 283-003 283-003 283-006	0.01 μ f 0.2 μ f 22 μ f 0.01 μ f 0.01 μ f 0.01 μ f	Cer Cer EMT Cer Cer Cer		150 v 25 v 15 v 150 v 150 v 600 v		
			Diodes				
D130 D131 D132 D140 D155	152-008 152-008 152-008 152-008 152-071	Germanium Germanium Germanium Germanium Germanium	ED-2007				
D156 D157 D158 D230 D231	152-07i 152-07i 152-07i 152-008 152-008	Germanium Germanium Germanium Germanium Germanium	ED-2007 ED-2007 ED-2007				
D232 D240 D255 D256 D257	152-008 152-008 152-071 152-071 152-071	Germanium Germanium Germanium Germanium Germanium	ED-2007 ED-2007 ED-2007				
D258 D278 D288 D364 D374	152-071 *152-075 *152-075 152-141 152-141	Germanium Germanium Germanium Silicon Silicon	ED-2007 Tek Spec Tek Spec 1N3605 1N3605				

Zener

Zener

1N3024B

1N3807B

15 v

56 v

152-024

152-057

D378

D397

Inductors

Ckt. No.	Tektronix Part No.	Description		S/N Ro
LR103 LR105	*108-283 *108-286 *108-283	.13 μh (on a 43 Ω resistor) .17 μh (on a 46 Ω resistor)		
LR107 LR203 LR205	*108-283 *108-283 *108-286	.13 μh (on a 43 Ω resistor) .13 μh (on a 43 Ω resistor) .17 μh (on a 36 Ω resistor)		
LR207	*108-283	.13 μ h (on a 43 Ω resistor)		
L326 L336 L341	*114-072 *114-072 *108-105	4-7.5 μ h 4-7.5 μ h 1.8 μ h	Var Var	
L351	*108-105	1.8 <i>μ</i> h		
L361 L37 1	*114-053 *114-053	3.3-6 μ h 3.3-6 μ h	Var Var	
L370 L378	*114-078 *108-200	1.9-4 µh 40 µh	Var	
L380	*114-078	1.9-4 μh	Var	
L388 L396	*108-046 *108-016	5 μh		
1370	100-010	29 μh		

Transistors

Q133	151-089	2N962
Q134	151-089	2N962
Q143	151-089	2N962
Q144	151-089	2N962
Q164	151-076	2N2048
Q173	151-089	2N962
Q174	151-076	2N2048
Q184	*151-103	Replaceable by 2N2219
Q233	151-089	2N962
Q234	151-089	2N962
Q243	151-089	2N962
Q244	151-089	2N962
Q260	151-091	2N1226
Q275	151-076	2N2048
Q285	151-076	2N2048
Q304	151-089	2N962
Q314	151-089	2N962
Q323	151-089	2N962
Q333	151-089	2N962
Q364	*151-127	Selected from 2N2369
Q374	*151-127	Selected from 2N2369

s

Ckt. No.	Tektronix Part No.		Description			S/N Range
Resistors are fixe	ed, composition, =	±10% unless othe	erwise indicated.			
R101 R103C R103E R105C R105E	302-100 322-643 3 22 -644 32 2 -620 322-614	10 Ω 600 k 666.6 k 800 k 250 k	1/ ₂ W 1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W		Prec Prec Prec Prec	1% 1% 1% 1%
R107C R107E R109A R109C R109E	322-621 322-608 315-101 322-624 322-605	900 k 11 k 100 Ω 990 k 10.1 k	1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W		Prec Prec Prec Prec	1% 1% 5% 1%
R109D R109F R110 R111 R113	315-510 316-150 315-470 322-481 315-105	$\begin{array}{c} 51~\Omega \\ 15~\Omega \\ 47~\Omega \\ 1~\mathrm{meg} \\ 1~\mathrm{meg} \end{array}$	1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W		Prec	5% 5% 1% 5%
R114 R115 R116 -R119 R120	316-101 302-221 301-562 311-321 316-335	100 Ω 220 Ω 5.6 k 2x500 k 3.3 meg	1/ ₄ w 1/ ₂ w 1/ ₂ w	Var		5% CH 1 DC BAL
R121 R123 R124 R125 R126	316-274 316-182 316-101 316-101 301-562	270 k 1.8 k 100 Ω 100 Ω 5.6 k	1/ ₄ W 1/ ₄ W 1/ ₄ W 1/ ₄ W			5%
R133 R134 R135 R138 R139†	301-431 315-271 309-117 315-391 *311-319	430 Ω 270 Ω 2.1 k 390 Ω 375 Ω	1/ ₂ w 1/ ₄ w 1/ ₂ w 1/ ₄ w	Var	Prec	5% 5% 1% 5% CH 1 VARIABLE
R140 R142 R143 R144 R145	315-471 309-028 301-431 315-271 309-117	470 Ω 1.48 k 430 Ω 270 Ω 2.1 k	1/4 w 1/2 w 1/2 w 1/4 w 1/4 w		Prec Prec	5% 1% 5% 5% 1%
R146 R147 R148 R149 R150	315-470 311-258 315-151 311-258 316-104	47 Ω 100 Ω 150 Ω 100 Ω 100 k	1/ ₄ w 1/ ₄ w	Var Var		5% 20 MV GAIN 5% 10 MV GAIN
R151 R152 R153 R154 R164	302-683 301-163 311-114 302-683 315-622	68 k 16 k 2 × 250 k 68 k 6.2 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₄ w	Var		5% CH 1 POSITION 5%

†Furnished as a unit with SW150.

Ckt. No.	Tektronix Part No.		Description			S/N Range
R167 R170 R171 R172 R173	315-151 315-471 311-159 316-333 301-152	150 Ω 470 Ω 2 0 k 33 k 1.5 k	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₂ w	Var		5% 5% TRIG DC LEVEL 5%
R174 R175 R176 R184 R185	315-622 315-513 316-332 301-332 315-151	6.2 k 51 k 3.3 k 3.3 k 150 Ω	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₂ w 1/ ₄ w			5% 5% 5% 5%
R187 R188 R2 01 R2 03C R203E	316-473 316-105 302-100 322-643 322-644	47 k 1 meg 10 Ω 600 k 666.6 k	1/4 W 1/4 W 1/2 W 1/4 W		Prec Prec	1 % 1 %
R205C R205E R207C R207E R209A	322-620 322-614 322-621 322-608 315-101	800 k 250 k 900 k 111 k 100 Ω	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₄ w		Prec Prec Prec Prec	1% 1% 1% 1% 5%
R209C R209E R209D R209F R210	322-624 322-605 315-510 316-150 315-470	990 k 10.1 k 51 Ω 15 Ω 47 Ω	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₄ w		Prec Prec	1 % 1 % 5 %
R211 R213 R214 R215 R216	322-481 315-105 316-101 302-221 301-562	1 meg 1 meg 100 Ω 220 Ω 5.6 k	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₂ w 1/ ₂ w		Prec	1% 5% 5%
R219 R220 R221 R223 R224	311-321 316-335 316-274 316-182 316-101	$2 \times 500 \text{ k}$ 3.3 meg 270 k 1.8 k 100 Ω	1/4 W 1/4 W 1/4 W 1/4 W	Var		CH 2 DC BAL
R225 R226 R233 R234 R235	316-101 301-562 301-431 315-271 309-117	100 Ω 5.6 k 430 Ω 270 Ω 2.1 k	1/4 w 1/2 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec	5% 5% 5% 1%
R238 R239† R242 R243 R244 †Furnished as o	315-391 *311-319 309-028 301-431 315-271 a unit with SW250.	390 Ω 375 Ω 1.48 Ω 430 Ω 270 Ω	1/ ₄ w 1/ ₂ w 1/ ₂ w 1/ ₄ w	Var	Prec	5% CH 2 VARIABLE 1% 5% 5%

Ckt. No.	Tektronix Part No.		Description	n		S/N Range
R245 R246 R247 R248 R249 R250	309-117 315-470 311-258 315-151 311-258 316-104	2.1 k 47 Ω 100 Ω 150 Ω 100 Ω 100 k	1/ ₂ W 1/ ₄ W 1/ ₄ W	Var Var	Prec	1% 5% 20 MV GAIN 5% 10 MV GAIN
R251 R252 R253 R254 R260	302-683 301-163 311-114 302-683 316-222	68 k 16 k 2× 250 k 68 k 2.2 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₄ w	Var		5% CH 2 POSITION
R262 R263 R265 R266 R268	302-153 302-470 301-223 301-183 316-101	15 k 47 Ω 22 k 18 k 100 Ω	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₄ w			5% 5%
R271 R273 R275 R276 R277	302-103 315-102 315-302 309-121 318-099	10 k 1 k 3 k 9.5 k 3 k	1/ ₂ w 1/ ₄ w 1/ ₄ w 1/ ₂ w 1/ ₈ w		Prec Prec	5% 5% 1% 1%
R278 R279 R285 R286 R287	309-407 302-561 315-302 309-121 318-099	400 Ω 560 Ω 3 k 9.5 k 3 k	1/ ₂ w 1/ ₂ w 1/ ₄ w 1/ ₂ w 1/ ₈ w		Prec Prec Prec	1% 5% 1% 1%
R288 R289 R291 R292 R293	309-407 302-561 302-100 315-152 321-211	400 Ω 560 Ω 10 Ω 1.5 k 1.54 k	1/ ₂ w 1/ ₂ w 1/ ₂ w 1/ ₄ w 1/ ₄ w 1/ ₈ w		Prec Prec	1 % 5 % 1 %
R294 R302 R304 R305 R307	321-211 321-161 315-201 315-621 302-270	1.54 k 464 Ω 200 Ω 620 Ω 27 Ω	1/8 W 1/8 W 1/4 W 1/4 W 1/2 W		Prec Prec	1 % 1 % 5 % 5 %
R308 R309 R312 R314 R315	315-131 321-117 321-161 315-201 315-621	130 Ω 162 Ω 464 Ω 200 Ω 620 Ω	1/ ₄ W 1/ ₈ W 1/ ₈ W 1/ ₄ W 1/ ₄ W		Prec Prec	5% 1% 1% 5% 5%
R319 R321 R323 R324 R325	321-117 315-301 315-361 321-153 315-470	162 Ω 300 Ω 360 Ω 343 Ω 47 Ω	1/ ₈ W 1/ ₄ W 1/ ₄ W 1/ ₈ W 1/ ₄ W		Prec Prec	1% 5% 5% 1% 5%

Ckt. No.	Tektronix Part No.		Description	1		S/N Range
R326 R327 R328 R329 R330	322-200 316-331 311-323 303-103 315-822	1.18 k 330 Ω 1.5 k 10 k 8.2 k	1/ ₄ w 1/ ₄ w 1 w 1/ ₄ w	Var	Prec	1% OUTPUT DC LEVEL 5% 5%
R333 R334 R335 R336 R337	315-361 321-153 315-470 322-200 315-821	260 $Ω$ 383 $Ω$ 47 $Ω$ 1.18 k 820 $Ω$	1/4 w 1/8 w 1/4 w 1/4 w 1/4 w		Prec Prec	5% 1% 5% 1% 5%
R339 R340 R341 R347 R351	303-103 301-471 315-470 301-622 315-470	10 k 470 Ω 47 Ω 6.2 k 47 Ω	1 w 1/2 w 1/4 w 1/2 w 1/4 w			5% 5% 5% 5% 5%
R356 R357 R358 R359 R360	321-375 301-622 321-286 306-221 308-055	78.7 k 6.2 k 9.31 k 220 Ω 1.5 k	1/8 w 1/2 w 1/8 w 2 w 10 w		Prec Prec WW	1% 5% 1% 5%
R361 R362 R363 R364 R365	*310-612 323-094 323-107 315-822 315-470	800 Ω 93.1 Ω 127 Ω 8.2 k 47 Ω	4 w 1/2 w 1/2 w 1/4 w 1/4 w		Prec Prec Prec	1% 1% 1% 5% 5%
R366 R367 R368 R369 R370	315-104 315-470 302-272 316-470 316-470	100 k 47 Ω 2. 7 k 47 Ω 47 Ω	1/4 w 1/4 w 1/2 w 1/4 w 1/4 w			5% 5%
R371 R372 R373 R374 R375	*310-612 323-094 311-308 315-822 315-470	800 Ω 93.1 Ω 50 Ω 8.2 k 47 Ω	4 w ½ w ½ w ¼ w	Var	Prec Prec	1% 1% CALIB 5% 5%
R376 R377 R378 R379 R381	315-104 315-470 308-232 316-470 323-440	100 k 47 Ω 320 Ω 47 Ω 374 k	1/4 w 1/4 w 5 w 1/4 w 1/2 w		WW Prec	5% 5% 5%
R382 R384 R385 R387 R388	321-422 316-101 316-471 302-473 316-221	243 k 100 Ω 470 Ω 47 k 220 Ω	1/8 W 1/4 W 1/4 W 1/2 W 1/4 W		Prec	1%

Ckt. No.	Tektronix Part No.		Description			S/N Range
R389 R390 R391 R392 R394	306-123 316-101 316-471 302-473 302-121	12 k 100 Ω 470 Ω 47 k 120 Ω	2 w 1/4 w 1/4 w 1/2 w 1/2 w			
R395 R397 R398 R399	308-230 302-034 316-270 307-034	2.7 k 8.2 Ω 27 Ω 8.2 Ω	3 w 1/ ₂ w 1/ ₄ w 1/ ₂ w	WW	5%	

Switches

Unwired	Wired		
SW101 260-448 SW110 260-607 SW150† *311-319 SW155†† 260-422 SW201 260-448	*262-650	Slide Rotary Rotary Slide	CH 1 AC - DC Gnd CH 1 VOLTS/DIV CH 1 CALIB CH 1 INV/NORM CH 1 AC - DC Gnd
SW210 260-607 SW250††† *311-319 SW290†† 260-442 SW390 260-447		Rotary Rotary Slide	CH 2 VOLTS/DIV CH 2 CALIB MODE CH 1 TRIGGER

Transformer

T263	*120-281	Toroid 7T Bifilar
		F2- street Tubes
		Electron Tubes
V113	154-306	7586
V123	154-306	7586
V213	154-306	7586
V223	154-306	7586
V334	154-187	6D18
V353	154-187	6D18
V364	154-361	8233
V374	154-361	8233

6DJ8

154-187

V383

[†] Furnished as a unit with R139.

^{††} SW155 and SW290 are furnished as a unit.

^{†††} Furnished as a unit with R239.

Values are fixed unless marked Variable.

Ckt. No.	Tektronix Part No.	Description	S/N Range
		Bulbs	
B10 B60 B 160 W B 164 B264	150-027 150-027 150-027 150-027 150-027	Neon, NE-23 Neon, NE-23 Neon, NE-23 Neon, NE-23 Neon, NE-23	UNCALIBRATED

Capacitors

Tolerance $\pm 20\%$ unless otherwise indicated.

Tolerance of all e 3V 50V = - 51V 350V = - 351V 450V = -	10%, +250% 10%, +100%	tors as follows (with	exceptions):			
C5 C7 C9 C11 C13	283-002 281-560 281-578 283-000 283-003	0.01 μf 198 pf 18 pf 0.001 μf 0.01 μf	Cer Cer Cer Cer Cer		500 v 500 v 500 v 500 v 150 v	10% 5%
C16 C18 C37 C39 C55	283-003 283-003 283-026 281-524 283-002	0.01 μf 0.01 μf 0.2 μf 150 pf 0.01 μf	Cer Cer Cer Cer Cer		150 v 150 v 25 v 500 v 500 v	
C57 C59 C61 C63 C66	281-560 281-578 283-000 283-003 283-003	198 pf 18 pf 0.001 μf 0.01 μf 0.01 μf	Cer Cer Cer Cer Cer		500 v 500 v 500 v 150 v 150 v	10% 5%
C68 C87 C89 C103 C104	283-003 283-026 281-524 281-523 283-026	0.01 μ f 0.2 μ f 150 pf 100 pf 0.2 μ f	Cer Cer Cer Cer Cer		150 v 25 v 500 v 350 v 25 v	
C106 C109 C113 C122 C144	283-026 281-525 281-518 290-167 281-524	0.2 μ f 470 pf 47 pf 10 μ f 150 pf	Cer Cer Cer EMT Cer		25 v 500 v 500 v 15 v 500 v	
C152 C160A C160B C160C C160D	281-546 281-505 281-010 283-534 281-010	330 pf 12 pf 4.5 - 25 pf 82 pf 4.5 - 25 pf	Cer Cer Cer Cer Cer	Var Var	500 v 500 v	10% 10% 5%

Capacitors (Cont'd)

Ckt. No.	Tektronix Part No.		Description			S/N Range
C160E C160F C160G C160H C162	*295-067 283-003	0.001 μf 0.01 μf 0.1 μf 1 μf 0.01 μf	Cer		150 v	timing series†
C167 C170A C170B C170C C170D	281-524 281-523 285-501 285-569 285-572	150 pf 100 pf 0.001 μf 0.01 μf 0.1 μf	Cer Cer MT PTM PTM		500 v 350 v 600 v 200 v 200 v	
C170E C170F C188 C195 C197	285-576 281-518 281-573 283-004 283-003	$1~\mu { m f}$ 47 pf 11 pf 0.02 $\mu { m f}$ 0.01 $\mu { m f}$	PTM Cer Cer Cer Cer		100 v 500 v 150 v 150 v	10% 10%
C206 C209 C213 C244 C252	283-026 281-525 281-518 281-524 281-546	0.2 $ ho$ f 470 pf 47 pf 150 pf 330 pf	Cer Cer Cer Cer		25 v 500 v 500 v 500 v 500 v	10%
C260 A C260 B C260 C C260 D	281-505 281-010 283-534 281-010	12 pf 4.5 - 25 pf 82 pf 4.5 - 25 pf	Cer Cer Mica Cer	Var Var	500 v 500 v	10% 5%
C260E C260F C260G C260H C262	*295-067 283-003	0.001 μ f 0.01 μ f 0.1 μ f 1 μ f 0.01 μ f	Cer		150 v	timing series†
C267 C270A C270B C270C C270D	281-524 281-523 285-501 285-569 285-572	150 pf 100 pf 0.001 μ f 0.01 μ f 0.1 μ f	Cer Cer MT PTM PTM		500 v 350 v 600 v 200 v 200 v	
C270E C270F C303 C336 C354	285-576 281-518 283-026 283-026 281-536	1 μf 47 pf $^{0.2}$ μf $^{0.2}$ μf $^{0.001}$ μf	PTM Cer Cer Cer Cer		100 v 500 v 25 v 25 v 500 v	10%
C356 C358 C364 C394 C396	283-526 281-536 283-519 283-026 283-006	0.001 μf 0.001 μf 360 pf 0.2 μf 0.02 μf	Mica Cer Mica Cer Cer		500 v 500 v 500 v 25 v 600 v	1% 10% 5%

[†] Furnished as a unit with C160E,F,G,H, and C260E,F,G,H.

Capacitors (Cont'd)

Ckt. No.	Tektronix Part No.		Description		S/N Range
C397 C399 C412 C414 C417	283-006 283-057 283-004 283-000 283-000	0.02 μf 0.1 μf 0.02 μf 0.001 μf 0.001 μf	Cer Cer Cer Cer	600 v 200 v 15 0 v 500 v 500 v	
C423 C424 C427 C435 C441 C445	283-003 281-546 283-012 283-057 281-523 281-523	0.01 μ f 330 pf 0.1 μ f 0.1 μ f 100 pf 100 pf	Cer Cer Cer Cer Cer	150 v 500 v 1 100 v 200 v 350 v 350 v	0%
			Diodes		
D14 D15 D16 D24 D34	152-141 *152-061 152-141 152-141 152-141	Silicon 1N360 Silicon Tek Sp Silicon 1N360 Silicon 1N360 Silicon 1N360	pec 5 5		
D35 D64 D65 D66 D74	152-081 152-141 *152-061 152-141 152-141	Tunnel TD-2 Silicon 1N360: Silicon Tek Sp Silicon 1N360: Silicon 1N360:	pec 5		
D84 D85 D101 D102 D105	152-141 152-081 *152-075 *152-075 152-093	Silicon 1N360 Tunnel TD-2 Germanium Germanium Tunnel TD-3	5 2.2 MA Tek Spec Tek Spec 4.7 MA		
D113 D115 D119 D122 D132	*152-075 152-081 *152-075 152-008 152-095	Germanium Tunnel TD-2 Germanium Germanium Silicon 1N625	Tek Spec 2.2 MA Tek Spec		
D133 D134 D143 D162 D170	152-095 152-095 152-095 152-091 *152-061	Silicon 1N625 Silicon 1N625 Silicon 1N625 Zener 1N982 Silicon			
D171 D172 D189 D195 D198	*152-061 *152-061 *152-075 *152-061 *152-075	Silicon Silicon Germanium Silicon Germanium	Tek Spec Tek Spec Tek Spec Tek Spec Tek Spec		

Diodes (Cont'd)

Ckt. No.	Tektronix Part No.	Description	S/N Range
D201 D202 D205 D213 D233	*152-075 *152-075 152-093 *152-075 152-095	Germanium Tek Spec Germanium Tek Spec Tunnel TD-3 4.7 MA Germanium Tek Spec Silicon 1N625	
D234	152-095	Silicon 1N625	
D243	152-095	Silicon 1N625	
D262	152-091	Zener 1N982 75 v	
D270	*152-061	Silicon Tek Spec	
D271	*152-061	Silicon Tek Spec	
D272 D292 D398 D415 D425	*152-061 *152-075 152-031 152-081 *152-075	Silicon Tek Spec Germanium Tek Spec Zener 1N718A 15 v Tunnel TD-2 2.2 MA Germanium Tek Spec	
D444	*152-075	Germanium Tek Spec	
D445	152-081	Tunnel TD-2 2.2 MA	
D455	152-092	Silicon HD 5004	
		Inductors	
L35	*108-146	$5~\mu h$	
L85	*108-146	$5~\mu h$	
L303	108-249	$12~\mu h$	
		Transistors	
Q23	151-063	2N2207	
Q24	151-063	2N2207	
Q34	151-063	2N2207	
Q44	*151-108	Replaceable by 2N2501	
Q73	151-063	2N2207	
Q74	151-063	2N2207	
Q84	151-063	2N2207	
Q94	*151-108	Replaceable by 2N2501	
Q124	*151-062	Selected from TI N101	
Q134	151-041	2N1303	
Q114	*151-062	Selected from TI N101	
Q143	*151-087	Replaceable by 2N1131	
Q183	151-076	2N2048	
Q194	151-076	2N2048	
Q214	*151-062	Selected from TI N101	

6-18

Transistors (Cont'd)

Ckt. No.	Tektronix Part No.	Description	S/N Range
Q243	*151-087	Replaceable by 2N1131	
Q283	151-076	2N2048	
Q294	*151-108	Replaceable by 2N2501	
Q314	151-076	2N2048	
Q323	*151-108	Replaceable by 2N2501	
Q333	*151-108	Replaceable by 2N2501	
Q354	*151-103	Replaceable by 2N2219	
Q364	*151-103	Replaceable by 2N2219	
Q424	*151-062	Selected from TI N101	
Q453	151-076	2N2048	

Resistors

Resistors are fixed, composition, $\pm 10\%$ unless otherwise indicated.

R7 R9 R10 R11 R12	315-753 301-914 301-275 315-224 316-101	75 k 910 k 2.7 meg 220 k 100 Ω	1/ ₄ w 1/ ₂ w 1/ ₂ w 1/ ₄ w 1/ ₄ w			5% 5% 5% 5%
R13 R14 R16 R17 R18	316-102 303-243 301-623 315-124 316-470	1 k 24 k 62 k 120 k 47 Ω	1/ ₄ w 1 w 1/ ₂ w 1/ ₄ w 1/ ₄ w			5% 5% 5%
R19 R20 R21 R23† R29	316-824 315-562 301-393 311-311 303-363	820 k 5.6 k 39 k 200 k 36 k	1/ ₄ w 1/ ₄ w 1/ ₂ w	Var		5% 5% LEVEL 5%
R35 R37 R39 R44 R57	309-345 316-101 315-270 302-563 315-753	225 Ω 100 Ω 27 Ω 56 k 75 k	1/ ₂ w 1/ ₄ w 1/ ₄ w 1/ ₂ w 1/ ₄ w		Prec	1% 5% 5%
R59 R60 R61 R62 R63	301-914 301-275 315-224 316-101 316-102	910 k 2.7 meg 220 k 100 Ω 1 k	1/ ₂ w 1/ ₂ w 1/ ₄ w 1/ ₄ w 1/ ₄ w			5% 5% 5%
R64 R66	303-243	24 k	1 w			5%

[†] Furnished as a unit with SW 6.

B 1 1	/
Resistors	(Conf d)

Ckt. No.	Tektronix Part No.		Description	, 1			S/N Range
R70 R71 R73† R79 R85	315-562 301-393 311-311 303-363 309-345	5.6 k 39 k 200 k 36 k 225 Ω	1/ ₄ w 1/ ₂ w 1 w 1/ ₂ w	Var	Prec	5% 5% LEVEL 5% 1%	
R87 R89 R94 R102 R103	316-101 315-330 302-563 315-102 316-102	100 Ω 33 Ω 56 k 1 k 1 k	1/ ₄ w 1/ ₄ w 1/ ₂ w 1/ ₄ w 1/ ₄ w			5% 5%	
R104 R106 R109 R110 R112	316-101 316-470 315-331 315-823 302-683	100 Ω 47 Ω 330 Ω 82 k 68 k	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w			5% 5%	
R113 R116 R117 R118 R119	316-332 309-409 309-158 309-090 315-681	3.3 k 2.4 k 1.19 k 50 k 680 Ω	1/4 w 1/2 w 1/2 w 1/2 w 1/4 w		Prec Prec Prec	1% 1% 1% 5%	
R122 R123 R124 R125 R130	316-391 315-823 315-331 301-753 311-110	390 Ω 82 k 330 Ω 75 k 100 k	1/4 w 1/4 w 1/4 w 1/4 w 1/2 w	Var	NORMAL	5% 5% 5% SWP GATING	THRESHOLD
R131 R142 R143 R144 R152	309-354 309-354 309-036 316-102 316-221	45 k 45 k 18 k 1 k 220 Ω	1/2 w 1/2 w 1/2 w 1/4 w 1/4 w		Prec Prec Prec	1% 1% 1%	
R160A R160B R160C R160D R160E	309-380 309-380 309-140 309-141 309-141	250 k 250 k 500 k 750 k 750 k	1/2 w 1/2 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec Prec Prec Prec Prec	1% 1% 1% 1%	
R160F R160G R160H R160W R160X	309-017 309-399 309-399 302-104 301-103	1.5 meg 7.5 meg 7.5 meg 100 k 10 k	1/2 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec Prec Prec	1% 1% 1%	
R160Y†† R161 R162 R164 R165	311-108 316-101 306-683 315-224 316-101	20 k 100 Ω 68 k 220 k 100 Ω	1/4 w 2 w 1/4 w 1/4 w	Var		VARIABLE	

[†] Furnished as a unit with SW56.

^{††} Furnished as a unit with SW160Y.

Ckt. No.	Tektronix Part No.		Description	ı	\$/	N Range
R167 R168 R169 R170 R172	301-682 311-310 303-183 316-184 316-104	6.8 k 5 k 18 k 180 k 100 k	1/ ₂ w 1 w 1/ ₄ w 1/ ₄ w	Var.	5% NORMAL SWEEP 5%	LENGTH
R184 R183 R186 R187 R188	316-182 316-332 316-332 315-124 315-752	1.8 k 3.3 k 3.3 k 120 k 7.5 k	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w		5% 5%	
R190 R192 R194 R195 R196	316-152 316-470 308-213 316-102 302-274	1.5 k 47 Ω 25 k 1 k 270 k	1/4 w 1/4 w 7 w 1/4 w 1/2 w		WW 5%	
R197 R198 R202 R203 R206	316-121 315-162 315-102 316-102 316-470	120 Ω 1.6 k 1 k 1 k 47 Ω	1/4 w 1/4 w 1/4 w 1/4 w 1/4 w		5% 5%	
R209 R210 R212 R213 R229	315-331 315-823 302-683 316-332 301-753	330 Ω 82 k 68 k 3.3 k 75 k	1/4 w 1/4 w 1/2 w 1/4 w 1/2 w		5% 5% 5%	
R230 R231 R242 R243 R244	311-110 309-354 309-354 309-036 316-102	100 k 45 k 45 k 18 k 1 k	1/2 w 1/2 w 1/2 w 1/4 w	Var	DELAYED SWP GATING TH Prec 1% Prec 1% Prec 1%	IRESHOLD
R252 R260A R260B R260C R260D	316-221 309-380 309-380 309-140 309-141	220 Ω 250 k 250 k 500 k 750 k	1/4 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec 1% Prec 1% Prec 1% Prec 1%	
R260E R260F R260G R260H R261	309-141 309-017 309-399 309-399 316-101	$750~\mathrm{k}$ 1.5 meg $7.5~\mathrm{meg}$ $7.5~\mathrm{meg}$ $100~\Omega$	1/2 w 1/2 w 1/2 w 1/2 w 1/4 w		Prec 1% Prec 1% Prec 1% Prec 1%	
R262 R264 R265 R267 R268	306-683 315-224 316-101 303-682 311-310	68 k 220 k 100 Ω 6.8 k 5 k	2 w 1/4 w 1/4 w 1 w	Var	5% 5% DELAYED SWP LEI	NGTH

Ckt. No.	Tektronix Part No.		Description	n		S/N Range
R269 R270 R272 R283 R284	303-183 316-184 316-104 316-332 316-182	18 k 180 k 100 k 3.3 k 1.8 k	1 w 1/4 w 1/4 w 1/4 w 1/4 w			5%
R286 R287 R288 R292 R294	301-623 315-752 301-473 301-104 316-332	62 k 7.5 k 47 k 100 k 3.3 k	1/ ₂ w 1/ ₄ w 1/ ₂ w 1/ ₂ w 1/ ₄ w			5% 5% 5% 5%
R310 R312 R313	309-418 311-326 316-334	18.7 k 10 k 330 k	1/ ₂ w	Var	Prec	1% SWEEP CAL
R314 R316 A ,B	309-343 311-455	107 k 500 k × 200 k	1/ ₂ w	Var	Prec	1 % POSITION
R317 R318 R319 R323 R330	309-041 309-201 309-108 302-423 302-423	60 k 2.85 k 80 k 47 k 47 k	1/2 w 1/2 w 1/2 w 1/2 w 1/2 w		Prec Prec Prec	1 % 1 % 1 %
R335 R336 R352 R354 R355	309-100 309-388 315-330 321-097 311-169	10 k 6 k 33 Ω 100 Ω 100 Ω	1/ ₂ w 1/ ₂ w 1/ ₄ w 1/ ₈ w	Var	Prec Prec Prec	1% 1% 5% 1% MAG GAIN
R356 R357 R358 R362 R364	315-330 308-054 315-471 315-330 309-347	33 Ω 10 k 470 Ω 33 Ω 1.22 k	1/4 w 5 w 1/2 w 1/4 w 1/2 w	Yui	WW Prec	5% 5% 5% 5% 1%
R367 R368 R381 R382 R384	308-053 311-310 316-101 308-178 316-101	8 k 5 k 100 Ω 15 k 100 Ω	5 w 1/4 w 8 w 1/4 w	Var	ww	5% SWP MAG REGIS 5%
R385 R391 R392 R394 R396	308-178 301-151 301-151 301-910 308-003	15 k 150 Ω 150 Ω 91 Ω 2 k	8 w 1/2 w 1/2 w 1/2 w 1/2 w 5 w		ww	5% 5% 5% 5% 5%
R398 R411 R412 R413 R414	316-334 316-101 316-101 316-103 309-118	330 k 100 Ω 100 Ω 10 k 4.23 k	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₂ w		Prec	1%

Ckt. No.	Tektronix Part No .		Description	1		S/N Range
R415 R417 R419 R423 R424	309-100 316-220 302-423 316-101 316-222	10 k 22 Ω 47 k 100 Ω 2.2 k	1/ ₂ w 1/ ₄ w 1/ ₂ w 1/ ₄ w 1/ ₄ w		Prec	1%
R425 R426 R427 R42 8 R429	316-472 309-043 309-231 316-101 309-270	4.7 k 82 k 16.69 k 100 Ω 3.92 k	1/4 w 1/2 w 1/2 w 1/4 w 1/4 w		Prec Prec Prec	1% 1%
R431 R432† R433 R434† R435	315-335 311-338 315-104 311-338 311-310	3.3 meg 50 k 100 k 50 k 5 k	1/ ₄ w	Var Var Var		5% VERNIER 5% DELAY TIME DELAY STOP
R437 R439 R4 41 R442 R443	309-159 305-393 302-823 315-912 315-104	5 k 39 k 82 k 9.1 k 100 k	1/ ₂ w 2 w 1/ ₂ w 1/ ₄ w 1/ ₄ w		Prec	1% 5% 5% 5%
R445 R449 R451 R453 R455	315-681 315-912 315-561 315-332 301-333	680 Ω 9.1 k 560 Ω 3.3 k 33 k	1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₄ w 1/ ₂ w			5% 5% 5% 5% 5%

Switches

	Unwired W	Vired		
SW3	260-447		Slide	SOURCE
SW5	260-450		Slide	COUPLING
SW6††	311-311			PULL EXT TR
SW19	260-447		Slide	SLOPE
SW53	260-447		Slide	SOURCE
SW55	260-449		Slide	COUPLING
SW56†††	311-311			PULL EXT TR
SW69	260-447		Slide	SLOPE
SW81	260-608 *262	2-651	Rotary	MODE
SW160)	260-455 *262	2 400	Rotary	TIME/CM (No
SW260)		2-4/7	Koldiy	TIME/CM (De
SW367†††	ff311-455			PULL 5X MAG

SLOPE SOURCE COUPLING PULL EXT TRIG ATTEN SLOPE MODE

EXT TRIG ATTEN

TIME/CM (Normal Sweep)
TIME/CM (Delayed Sweep)
PULL 5X MAG

TR432 and R434 furnished as a unit.


##Furnished as a unit with R23.


†††Furnished as a unit with R73.


††††Concentric with R316. Furnished as a unit.


Transformers


Ckt. No.	Tektronix Part No.	Description	S/N Range
T101	*120-278	Toroid, 3-8 turn winding	
T201	*120-277	Toroid, 2-8 turn winding	
		Electron Tubes	
V13	154-378	7895	
V63	154-378	7895	
V152	154-016	6AL5	
V161	154-278	6BL8	
V194	154-187	6DJ8	
V261	154-278	6BL8	
V252	154-016	6AL5	
V383	154-187	6DJ8	
V414	154-187	6DJ8	
V439	154-370	ZZ-1000	

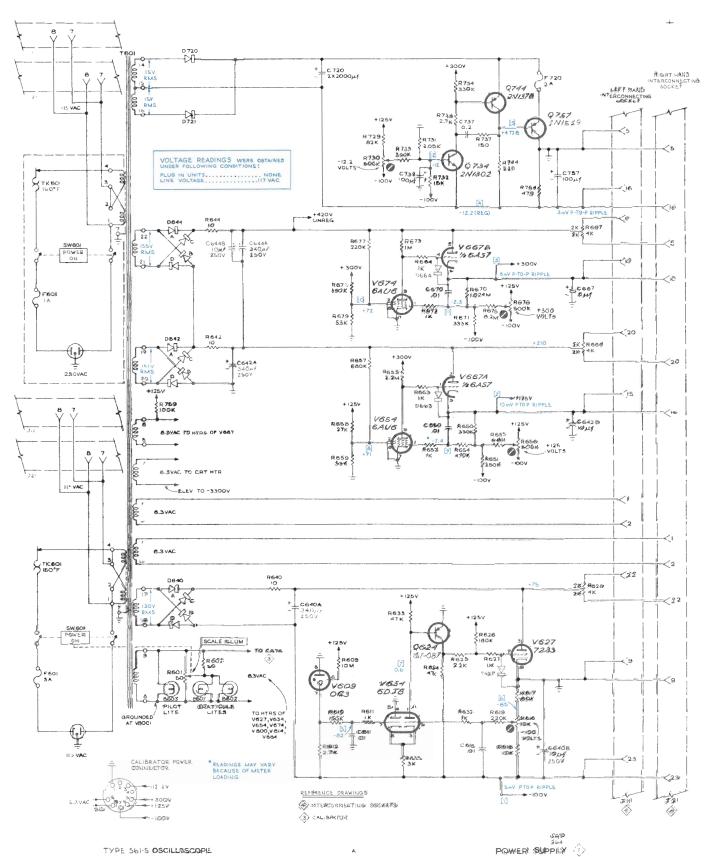


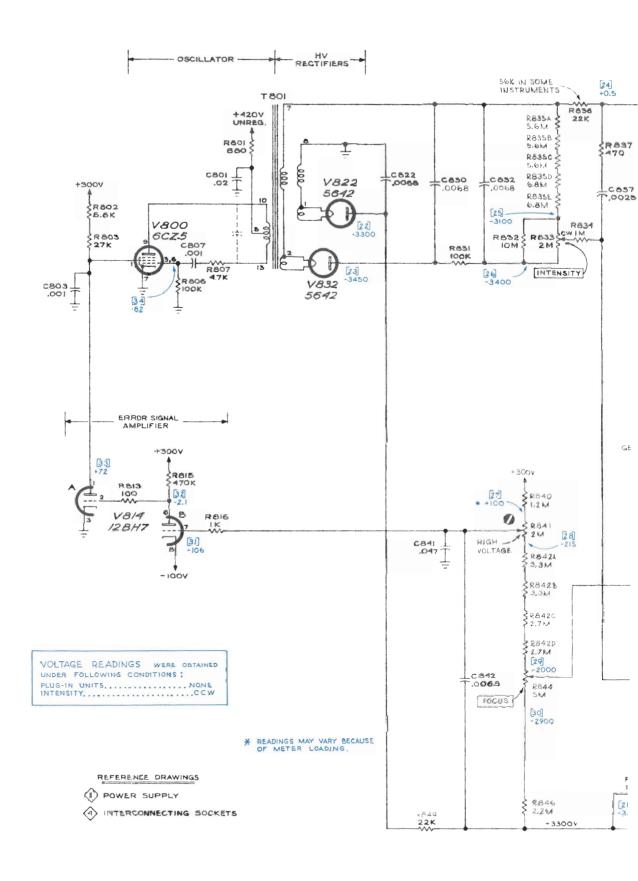

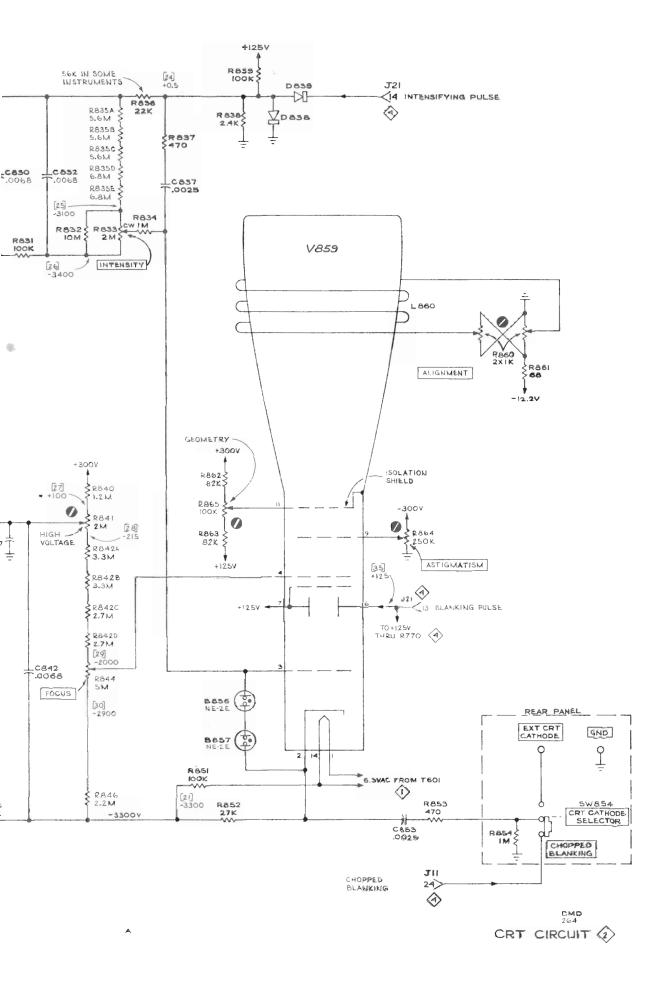

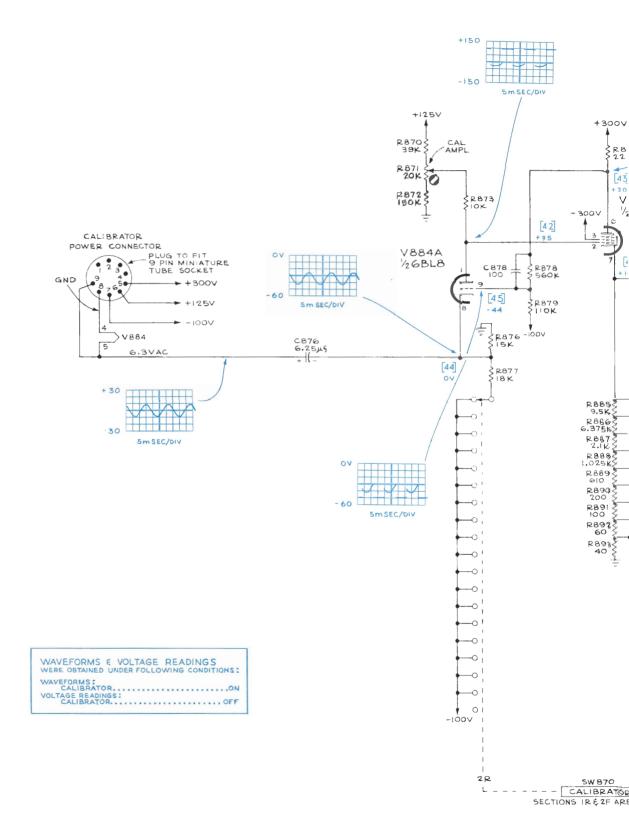

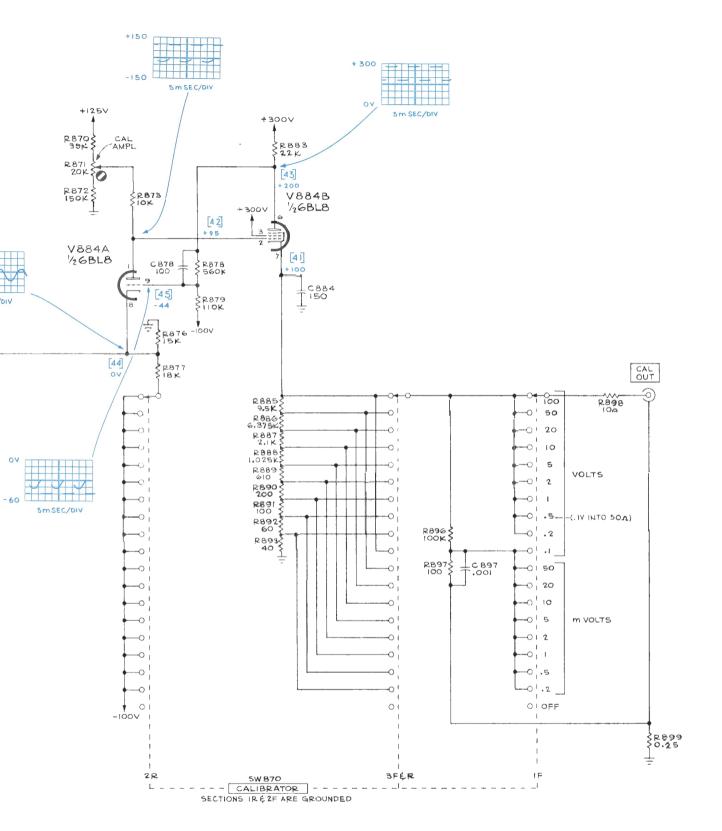


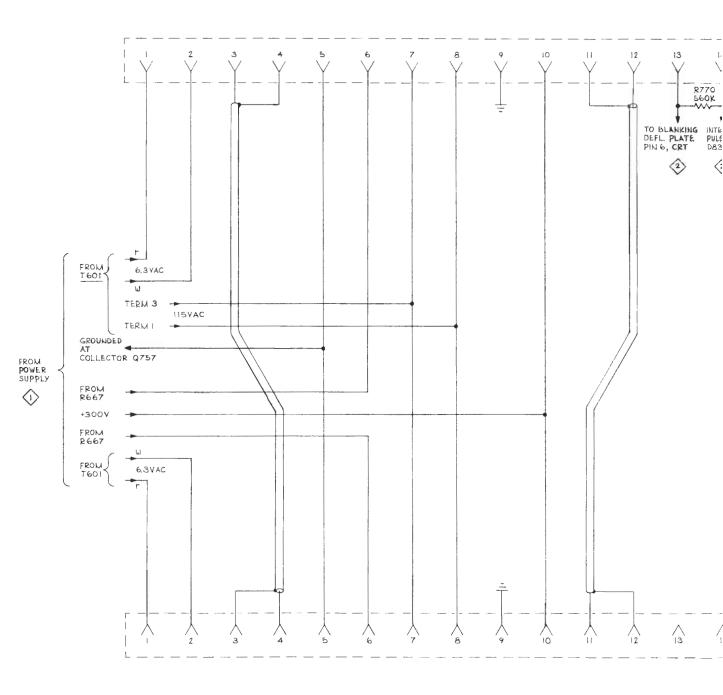



REFERENCE DRAV


POWER SUP

2 CRT CIRCU

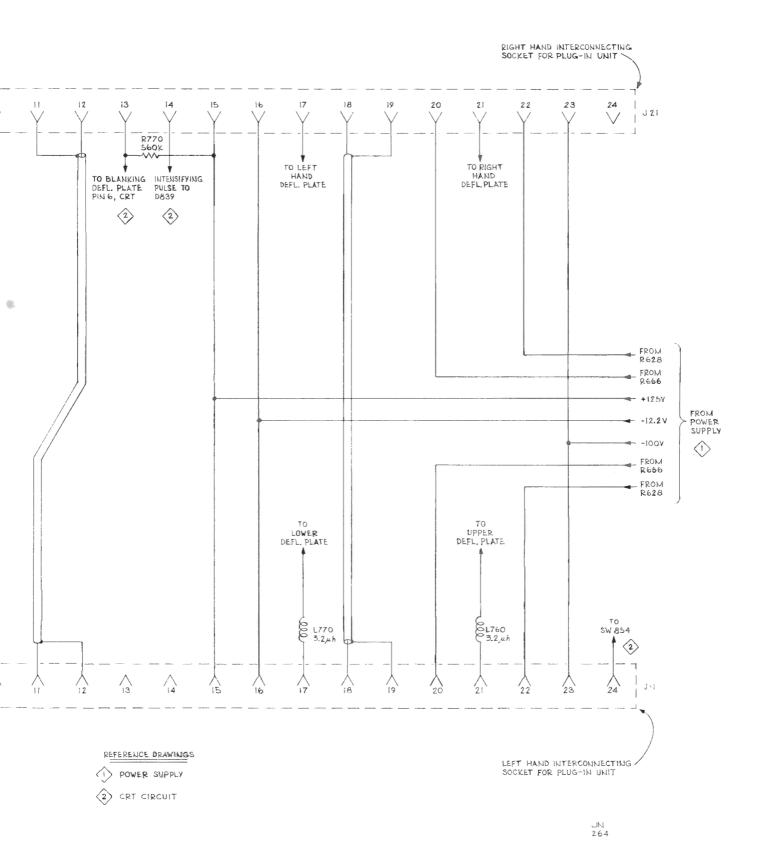

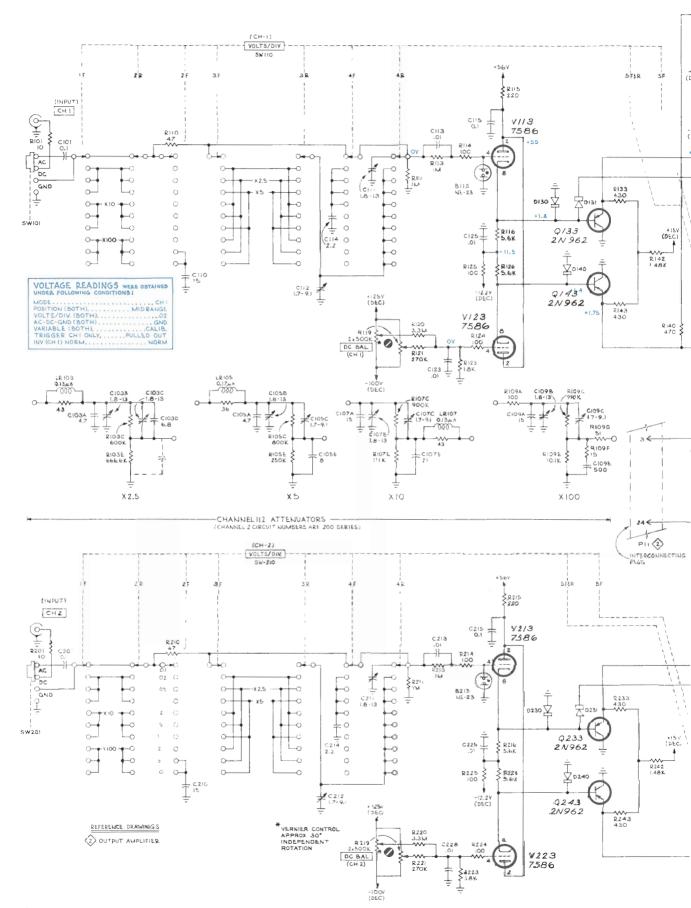


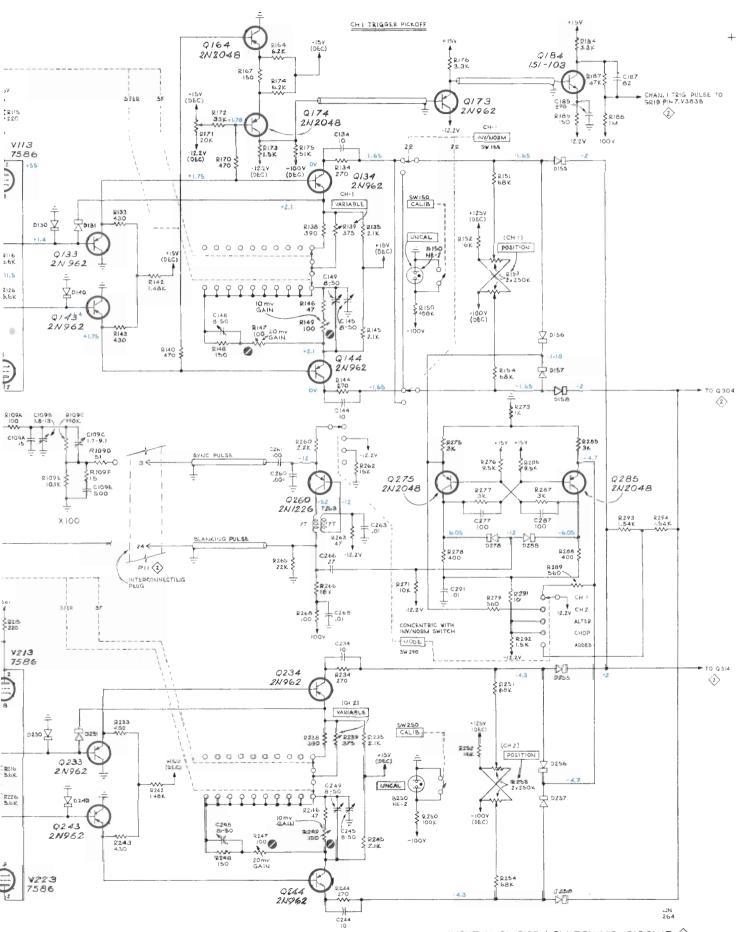


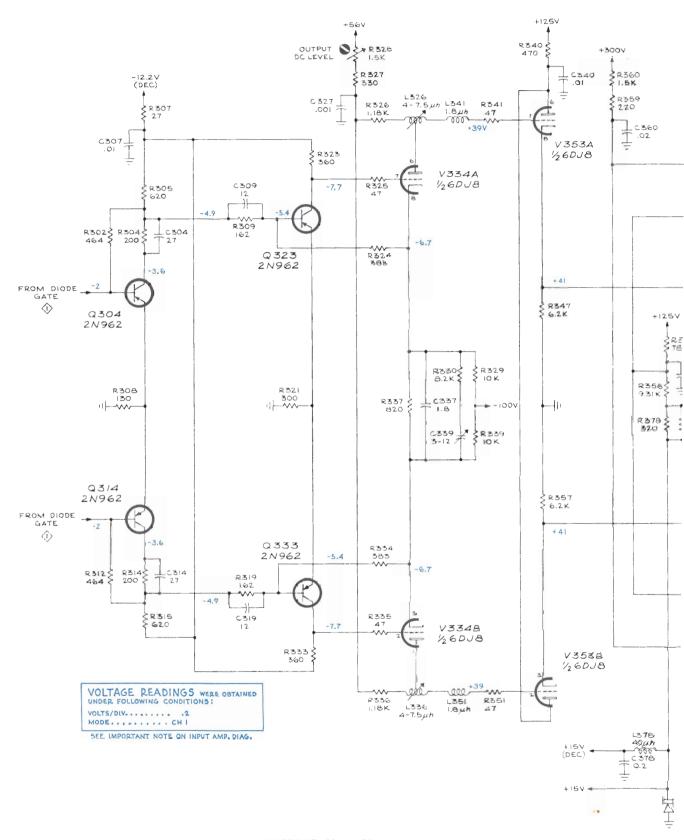



REFERENCE DRAWINGS

INPUT AMPLIFIER & SWITCHING CIRCUIT

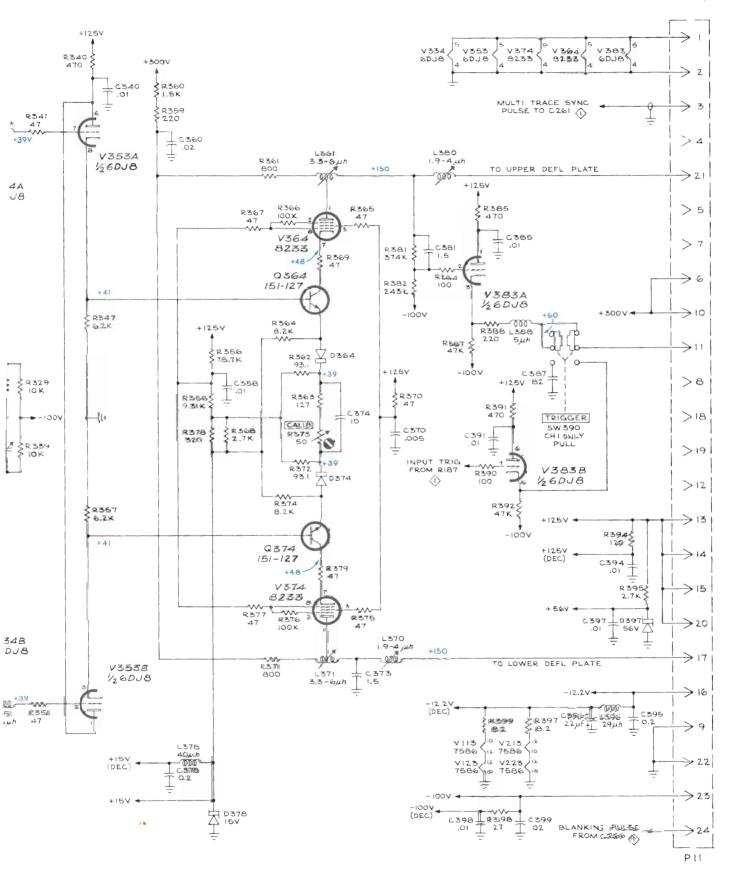

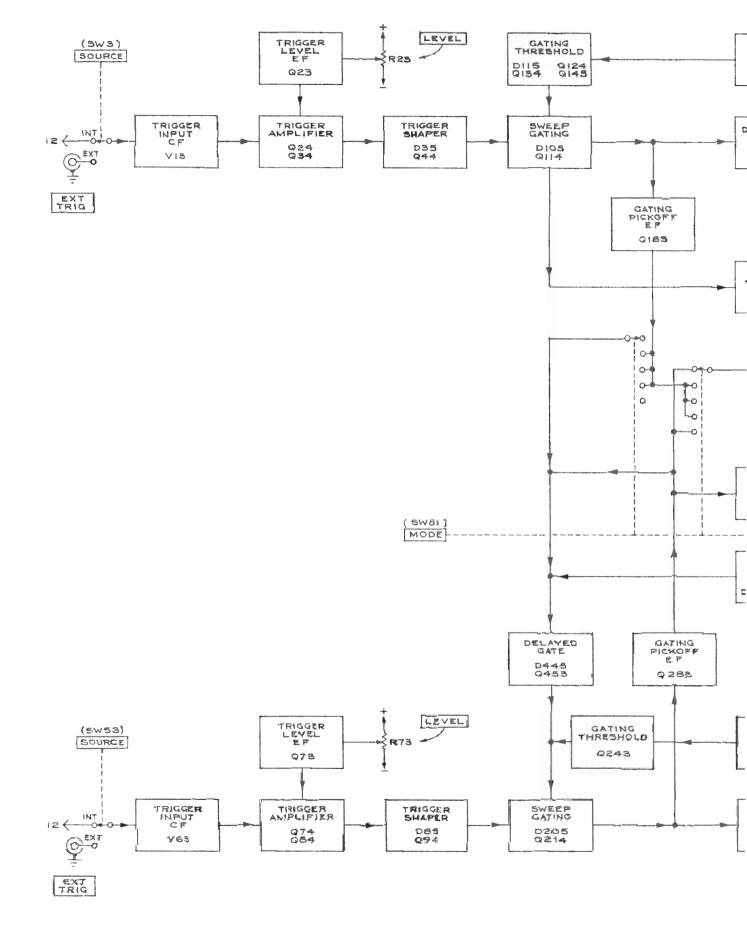


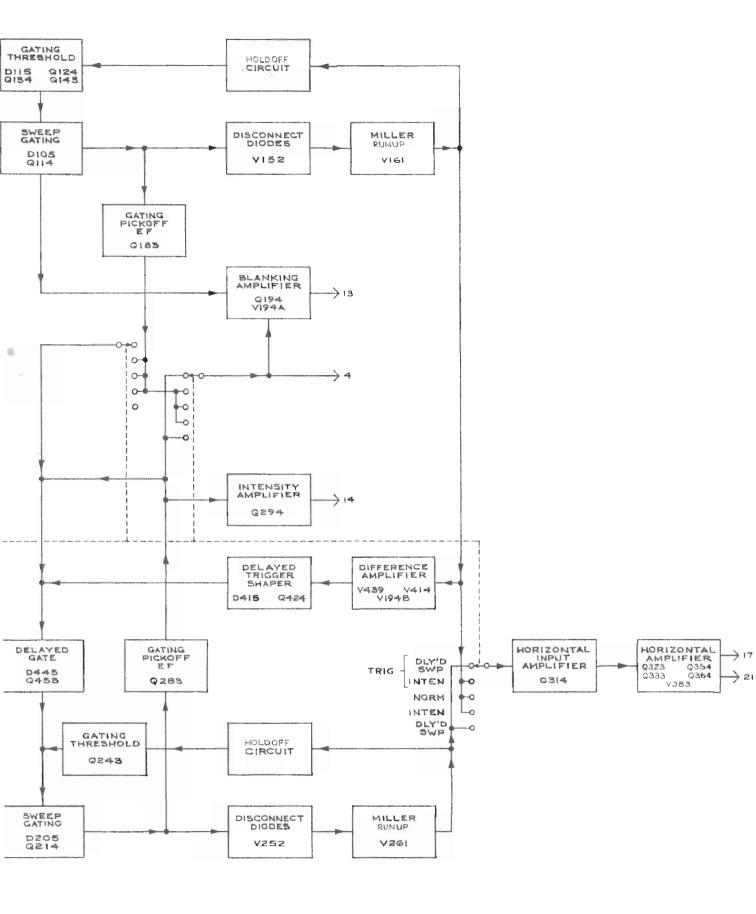


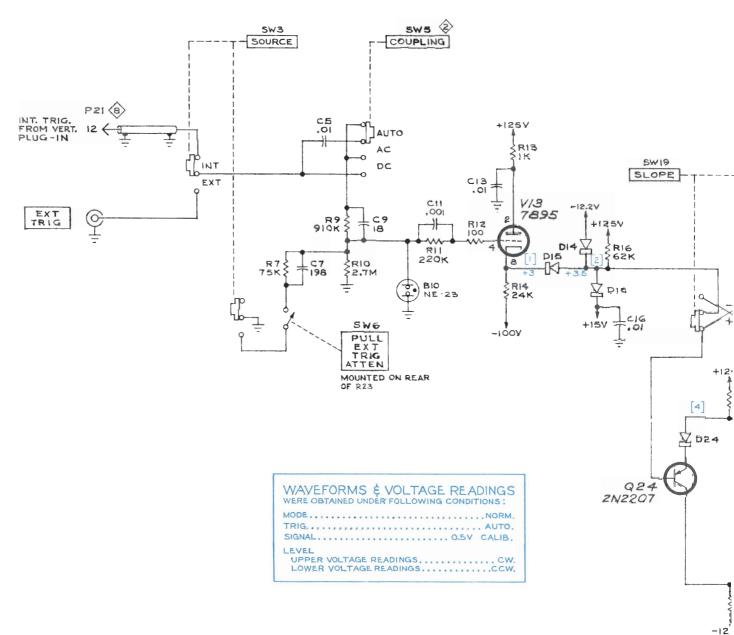



REFERENCE DRAWINGS


- NORMAL SWEEP GENERATOR
- A HORIZONTAL AMPLIFIER

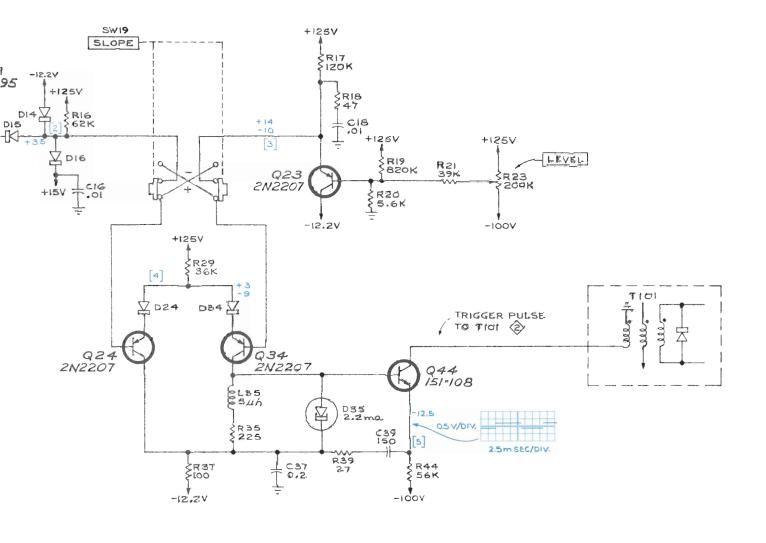

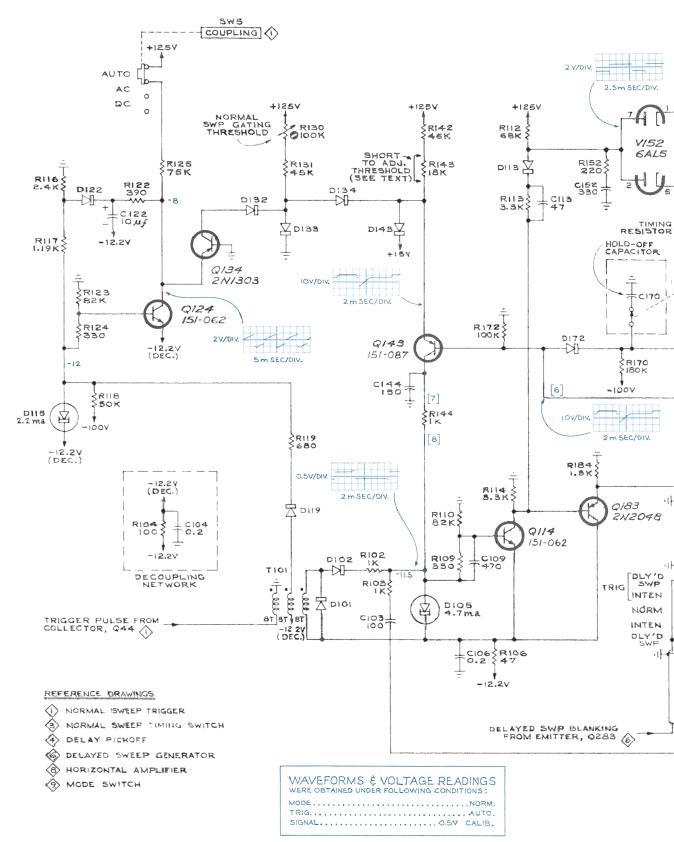


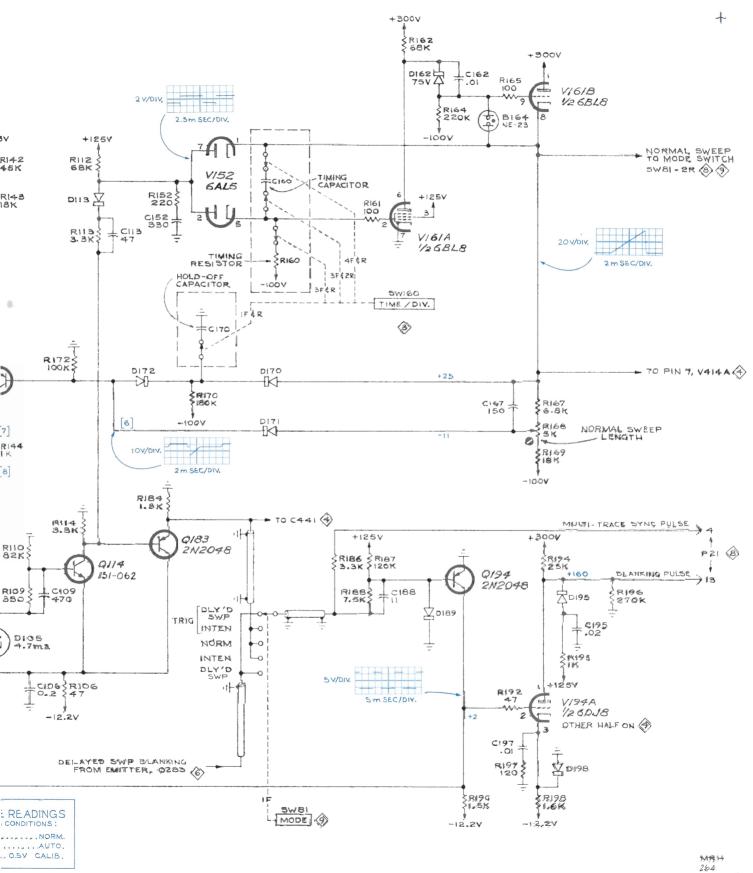

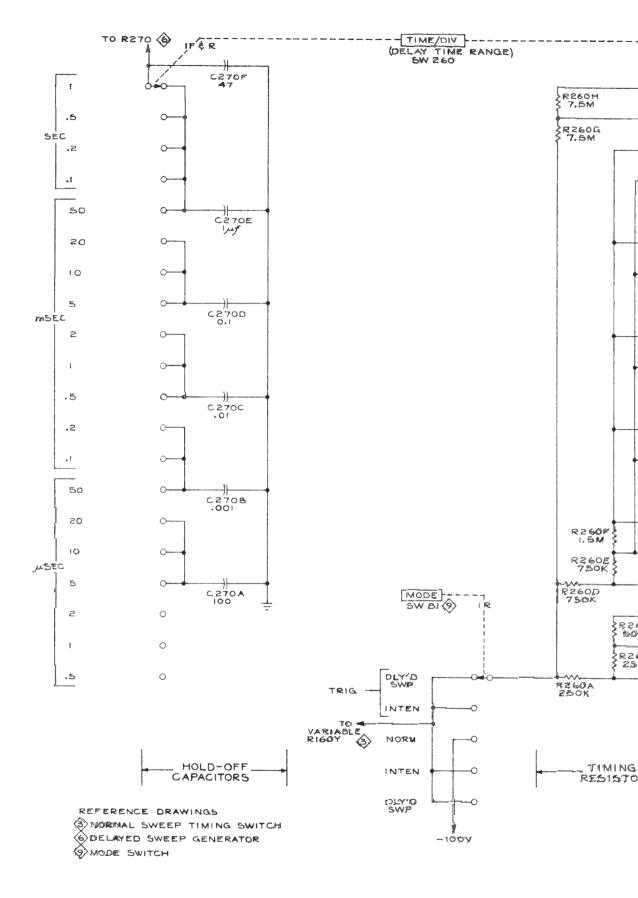


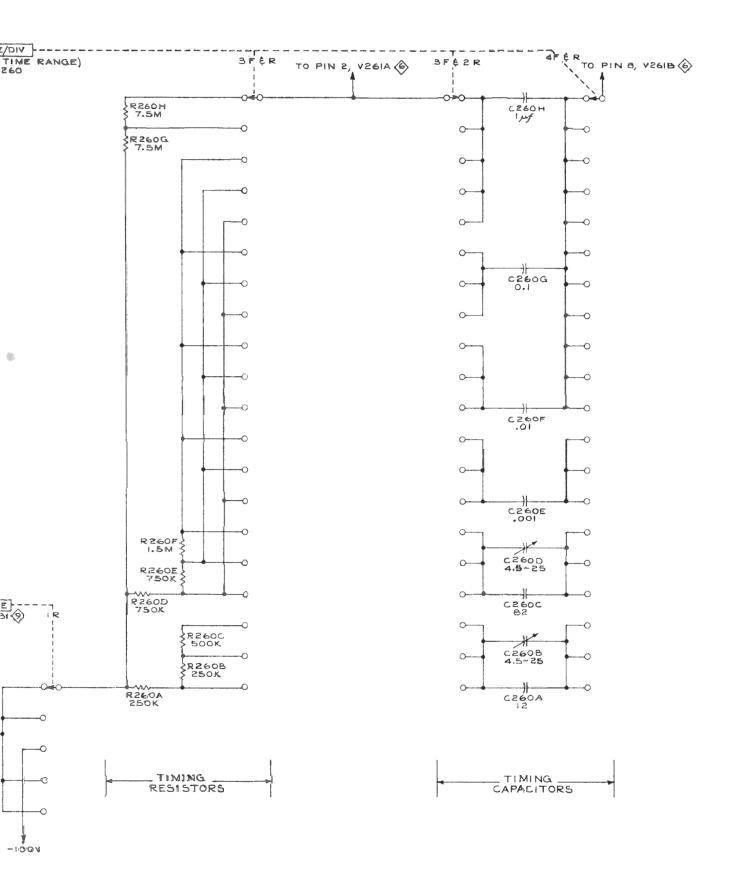



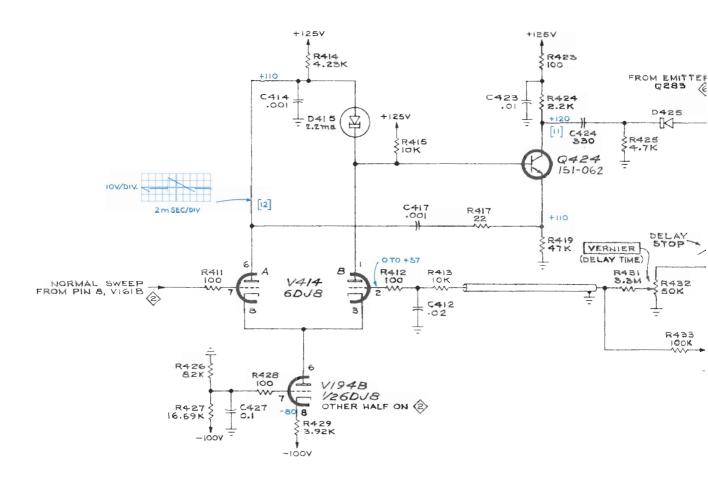

WAVEFO WERE OBTA MODE.... TRIG.... SIGNAL...

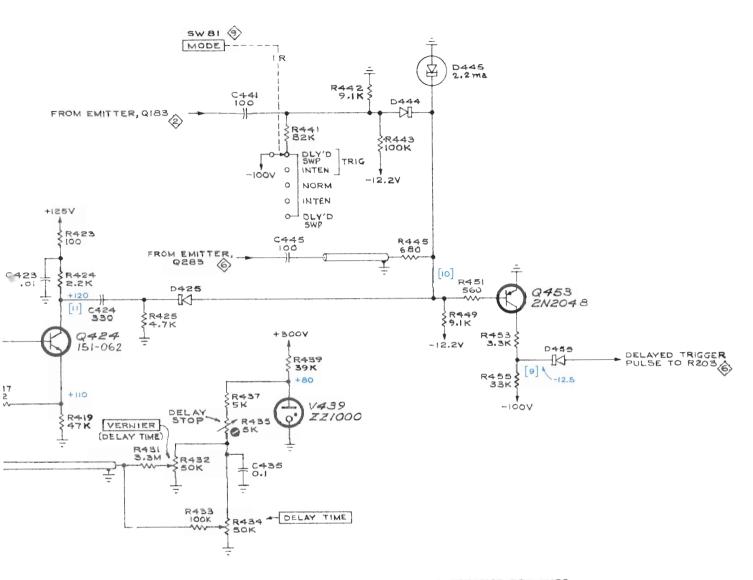

REFERENCE DRAWINGS

A NORMAL SWEEP GENERATOR

6 DELAYED SWEEP GENERATOR

MODE SWITCH

WAVEFORMS & VOLTAGE READINGS WERE OBTAINED UNDER FOLLOWING CONDITIONS:


MODE. , TRIG. DEL'D TRIG. AUTO.
SIGNAL , 0.5V CALIB.

MRH

264

DELAY PICKOFF

CIRCUIT NUMBERS

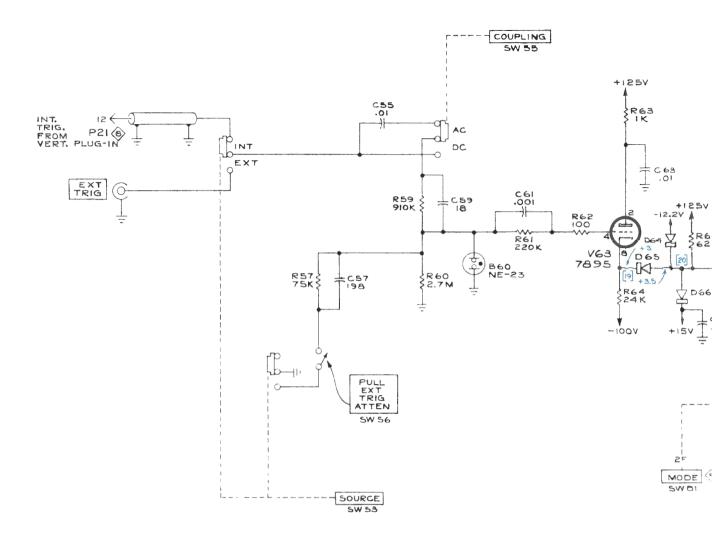

REFERENCE DRAWINGS


© DELAYED SWEEP GENERATOR


B HORIZONTAL AMPLIFIER


MODE SWITCH


WAVEFORMS & VO	
MODETRIGSIGNAL	
LEVEL UPPER VOLTAGE READ LOWER VOLTAGE READ	




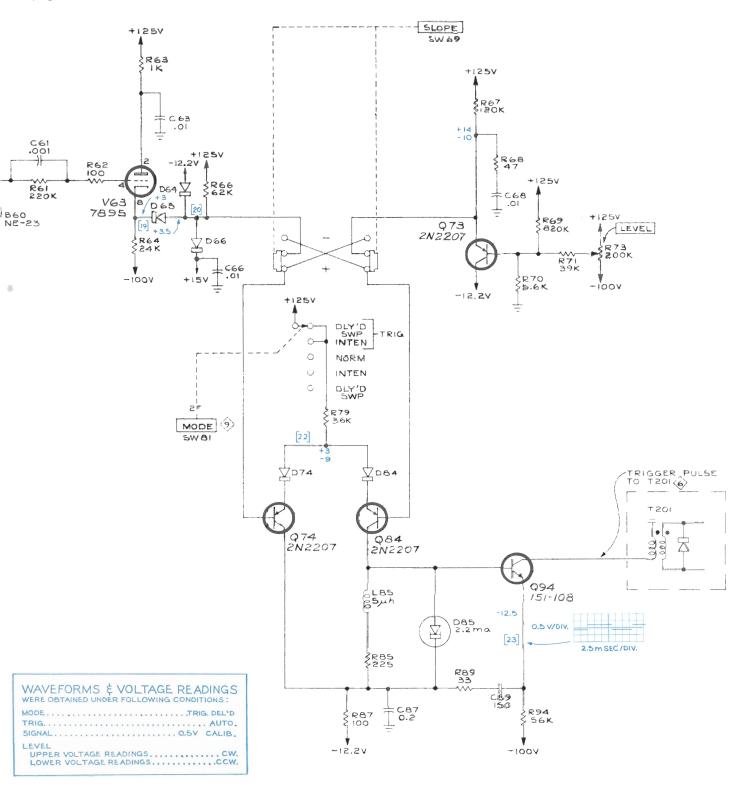

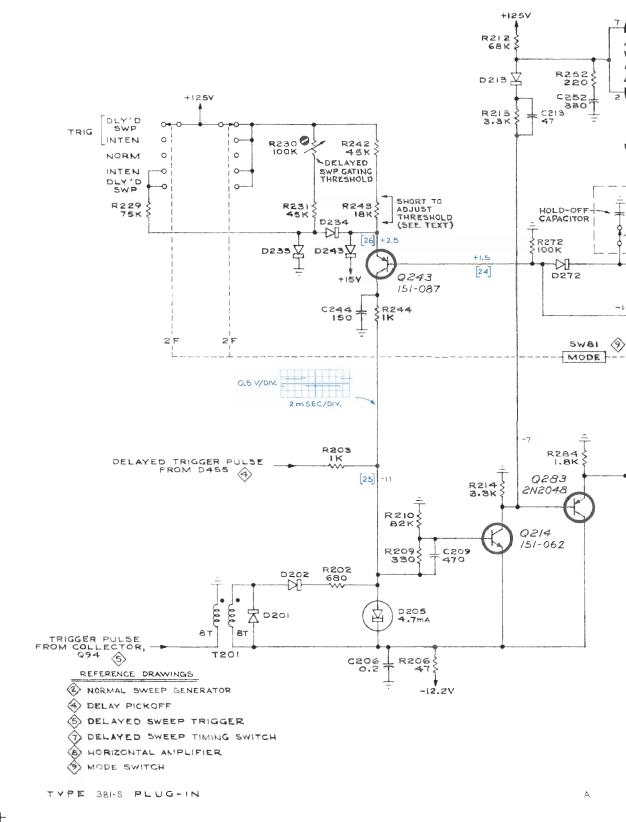

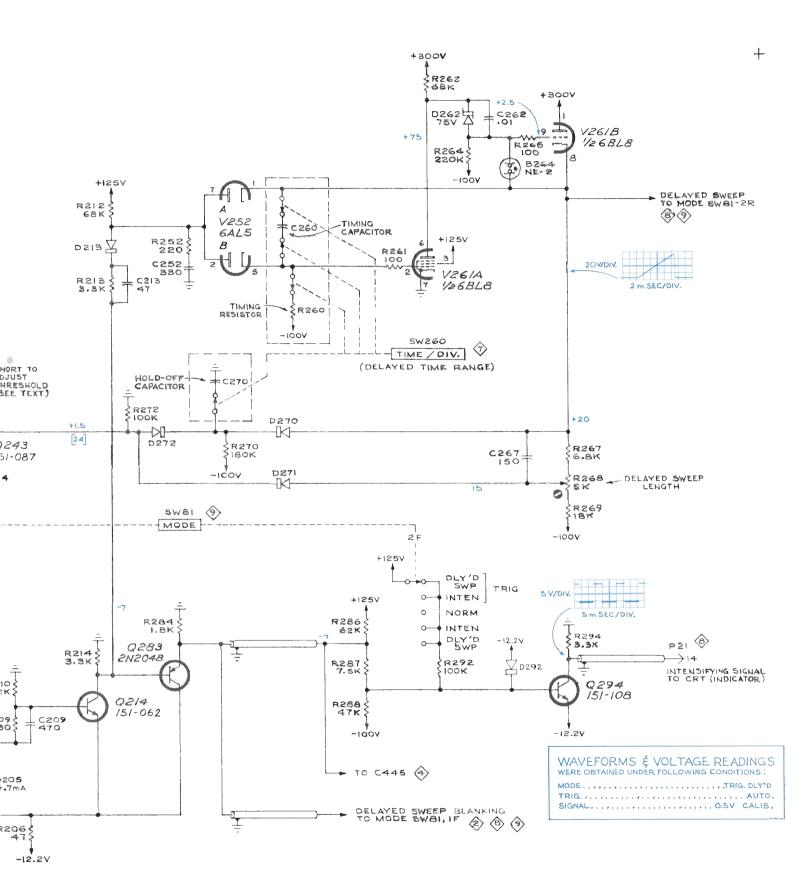

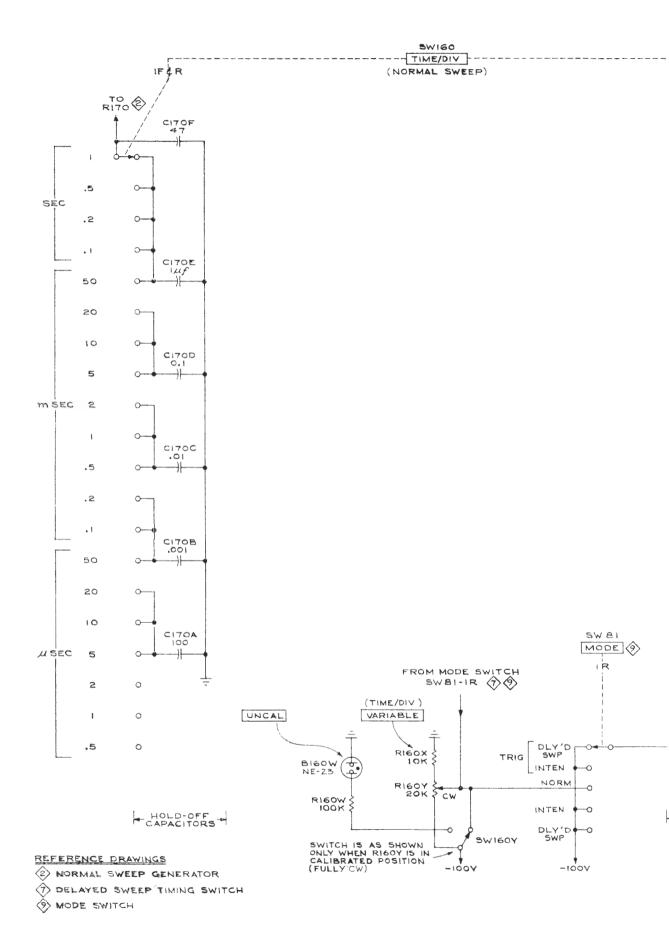

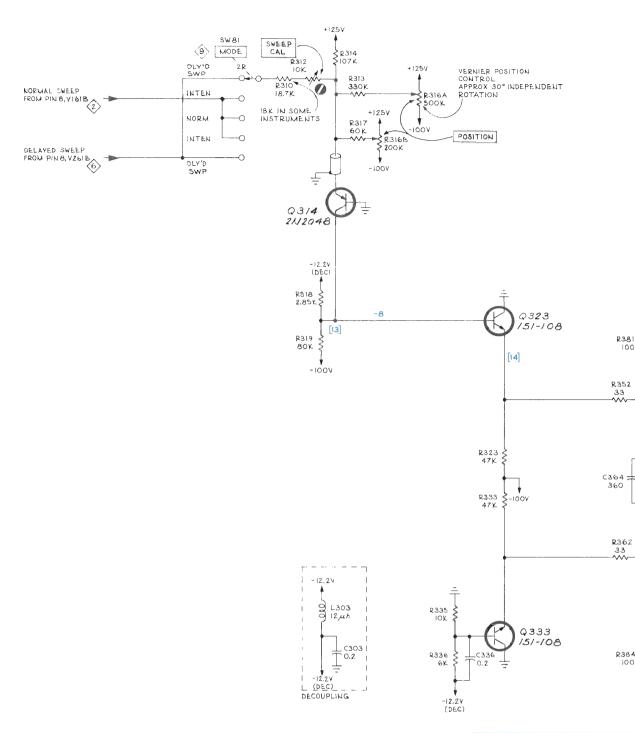



REFERENCE DRAWINGS:


- NORMAL SWEEP TRIGGER
- (2) NORMAL SWEEP GENERATOR
- 5 DELAYED SWEEP TRIGGER
- 6 DELAYED SWEEP GENERATOR
- 9 MODE SWITCH

WAVEFORMS & VOLTAGE WERE OBTAINED UNDER FOLLOWING
MODE. TRIG. SIGNAL.
POSITION UPPER VOLTAGE READINGS LOWER VOLTAGE READINGS

TYPE 3BI-S PLUG-IN

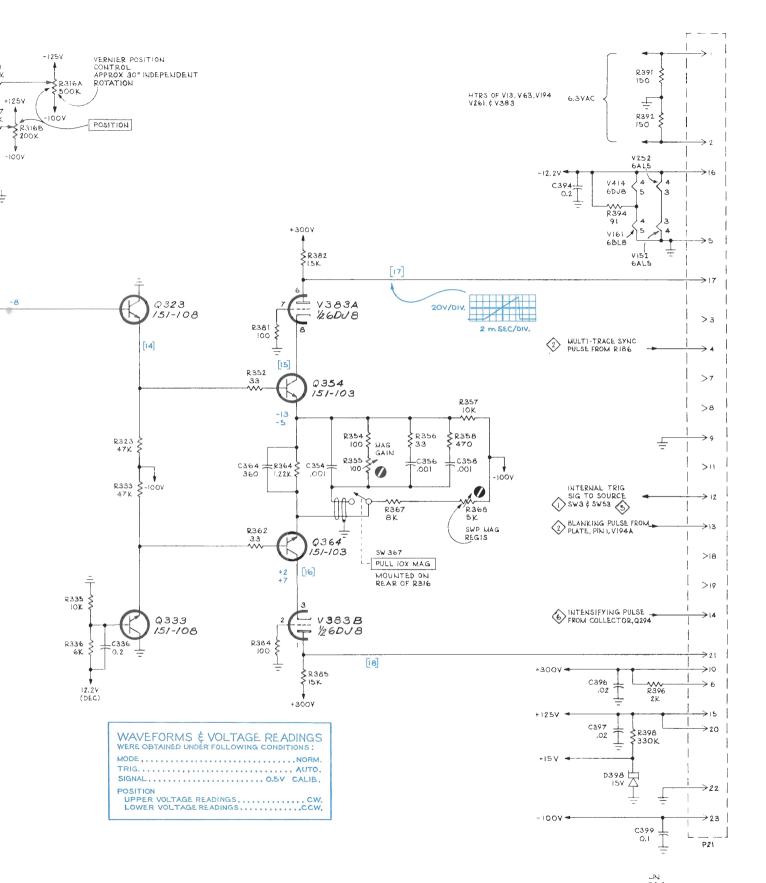

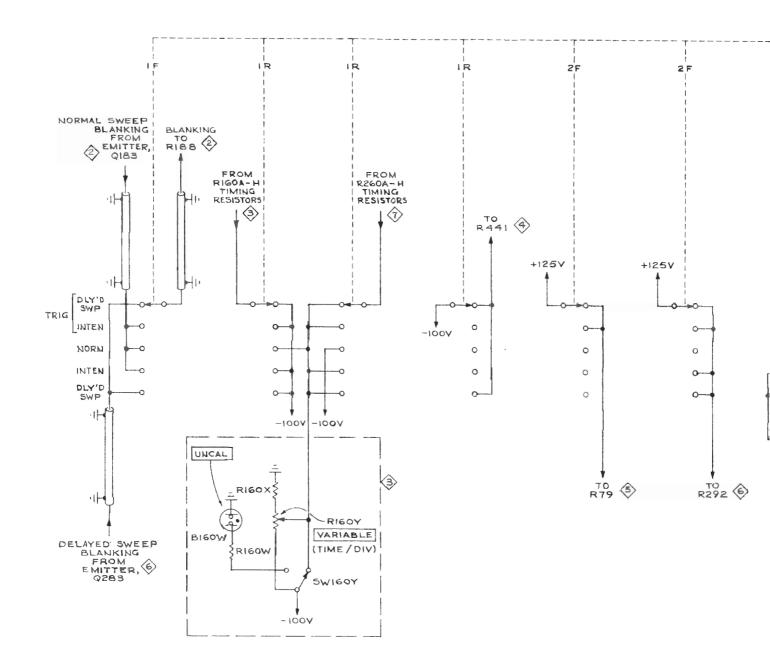

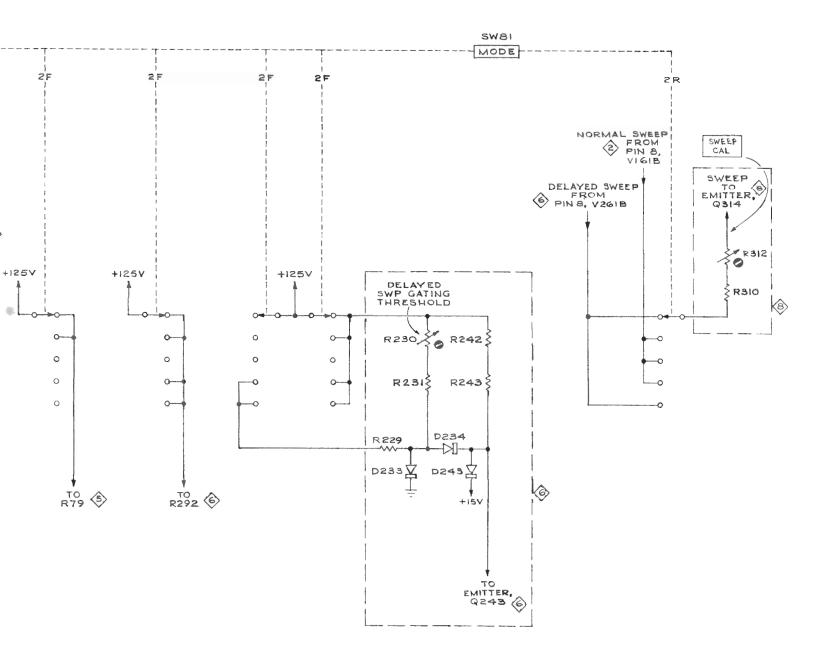

REFERENCE DRAWINGS

- 2 NORMAL SWEEP GENERATOR
- 3 NORMAL SWEEP TIMING SWITCH
- 4 DELAY PICKOFF
- 5 DELAYED SWEEP TRIGGER
- 6 DELAYED SWEEP GENERATOR
- DELAYED SWEEP TIMING SWITCH
- A HORIZONTAL AMPLIFIER

MANUAL CHANGE INFORMATION

At Tektronix, we continually strive to keep up with latest electronic developments by adding circuit and component improvements to our instruments as soon as they are developed and tested.

Sometimes, due to printing and shipping requirements, we can't get these changes immediately into printed manuals. Hence, your manual may contain new change information on following pages. If it does not, your manual is correct as printed.

TYPE 3B1S - TENT. S/N 460

PARTS LIST CORRECTION

CHANGE TO:

R439 305-363 36k 2w 5%

TYPE 561S - TENT. S/N 420 TYPE 3A1S - TENT. S/N 345 TYPE 3B1S - TENT. S/N 353

Change 561S CAL OUT and 3A1S inputs from UHF to BNC connectors.

Change 3B1S EXT TRIG from binding posts to BNC connectors.

ACCESSORIES

CHANGE TO:

2 - P6006 Probe packages 020-013

ADD:

2 - Adapter, BNC to binding post 103-033

PARTS LIST CORRECTION

CHANGE TO:

C103B	281-103	1.8 - 13 pf	Air	Var	
C103C	281-103	1.8 - 13 pf	Air	Var	
C105B	281-103	1.8 - 13 pf	Air	Var	
C105C	281-101	1.5 - 9.1 pf	Air	Var	
C107B	281-103	1.8 - 13 pf	Air	Var	
C107C	281-101	1.5 - 9.1 pf	Air	Var	
C109B	281-103	1.8 - 13 pf	Air	Var	
C109C	281-101	1.5 - 9.1 pf	Air	Var	
C111	281-103	1.8 - 13 pf	Air	Var	
C112	281-101	1.5 - 9.1 pf	Air	Var	
C 203B	281-103	1.8 - 13 pf	Air	Var	
C 203C	281-103	1.8 - 13 pf	Air	Var	
C 205B	281-103	1.8 - 13 pf	Air	Var	
C 205C	281-101	1.5 - 9.1 pf	Air	Var	
C 207B	281-103	1.8 - 13 pf	Air	Var	
C207C	281-101	1.5 - 9.1 pf	Air	Var	
C 209B	281-103	1.8 - 13 pf	Air	Var	
C209C	281-101	1.5 - 9.1 pf	Air	Var	
C 211	281-103	1.8 - 13 pf	Air	Var	
C 212	281-101	1.5 - 9.1 pf	Air	Var	
SW110	260-607	*262-665	Rotary	CH 1	VOLTS/DIV
SW210	260-607	*262-665	Rotary	CH 2	VOLTS/DIV