
## **Operating Information**

The TPP0500 & TPP1000 10X Passive Probes are high impedance probes with 10X attenuation that are designed for use with Tektronix DPO/MSO4000B & DPO/MSO5000 series ground-referenced oscilloscopes.

Connect the probe as shown in the illustrations below.

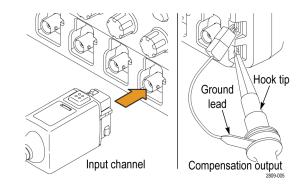

## TPP0500 & TPP1000 500 MHz and 1 GHz 10X Passive Probes

## Instructions



## **Compensating the Probe**

You should compensate the probe after you attach it to an oscilloscope for the first time, or after you have changed the probe tip cartridge.

- **1.** Connect the probe to an oscilloscope channel.
- 2. On MSO/DPO5000 instruments:
  - **a.** Connect the probe to the probe compensation output terminals on the oscilloscope front panel.
  - **b.** Select Vertical > Probe Cal....

**c.** Select the channel number tab of the channel that you connected the probe to.

d. In the Calibration section, click Calibrate Probe.

On MSO/DPO4000B instruments:

**a.** Press the Channel Menu front panel button for the channel that you connected the probe to.

- b. Push the More button until Probe Setup is selected.
- **c.** Push the Calibrate Probe button and follow the on-screen instructions.

If the probe compensation fails, verify that the signal and ground connections are secure at the Probe Comp connections on the oscilloscope. Also check that the ground connection is secure at the probe head, the rigid or pogo tip is secured tightly in the probe head, and the hook tip is securely connected to the tip.

## **Standard Accessories**

Item

The standard accessories included are shown below.

WARNING. To avoid electric shock when using the probe or accessories, keep fingers behind the finger guard of probe body and accessories.

## Description

Probe tips The rigid tip (gray tip) is pre-installed on the probe. The pogo tip (white tip) is spring-loaded for compliant testing of circuit boards. Reorder part numbers: 206-0610-xx (rigid tip)

# 206-0611-xx (pogo tip)

Unscrew this sleeve to replace the probe tips. (See procedure on next page). Reorder Tektronix part number 342-1194-xx

#### Hook tip

Press the hook tip onto the probe tip and then clamp the hook onto the circuit. Rating: 300 V CAT II


Reorder Tektronix part number 013-0362-xx

#### Micro hook tip

Use this tip to access test points in tight spaces. Press the hook tip onto the probe tip and then extend the pincers around the circuit.

Reorder Tektronix part number 013-0363-xx


## Universal IC cap

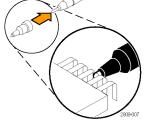

Use this cap to prevent shorting the probe tip between IC pins.

Press the cap on the probe tip until it snaps on, and then spin the cap to expose the probe tip toward the IC lead.

Reorder Tektronix part number 013-0366-xx

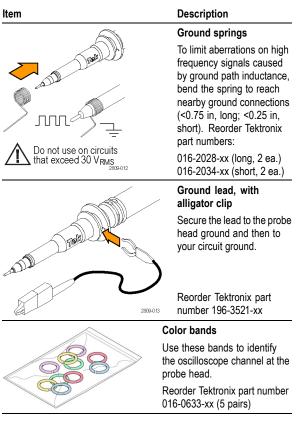

## **Optional Accessories**

The accessories shown below are available for the probes and are rated  $\leq$ 30 V unless indicated otherwise.


| Accessory                               |           | Part<br>number |
|---|-----------|----------------|
| MicroCKT Test Tip                       |           | 206-0569-xx    |
| BNC to Tip Adapter,<br>Unterminated     |           | 013-0367-xx    |
| Circuit Board Test<br>Point/PCB Adapter |           | 016-2016-xx    |
| Chassis-Mount<br>Probe Test Jack        |           | 131-4210-xx    |
| 6" Clip-on<br>Ground Lead               |           | 196-3198-xx    |
| 12" Alligator<br>Ground Lead            |           | 196-3512-xx    |
| Wire, spool,<br>32 AWG                  | - Julie - | 020-3045-xx    |

## Tektronix



#### Interchanging the Probe Tip

WARNING. To reduce the risk of shock, disconnect the probe before changing the probe tips.

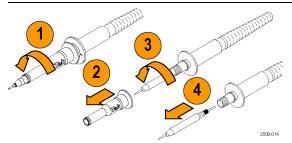


For optimal performance, do a probe compensation after the tip has been replaced.


#### **Specifications**

#### Table 1: Electrical and mechanical specifications

| Characteristic              | TPP0500                         | TPP1000                      |
|-----------------------------|---------------------------------|------------------------------|
| Bandwidth (–3 dB)           | 500 MHz                         | 1 GHz                        |
| System rise time (typical)  | <700 ps                         | <450 ps                      |
| System input capacitance    | Rigid tip: 3.9<br>Pogo pin tip: | pF ±0.3 pF<br>5.1 pF ±0.5 pF |
| System attenuation accuracy | 10:1 ±2.2%                      |                              |
| Probe series resistance @DC | 9.75 MΩ ±0.5                    | 5%                           |
| System input resistance @DC | 10 MΩ ±2%                       |                              |
| Propagation delay           | ~5.67 ns                        |                              |
| Maximum input voltage       | 300 V <sub>RMS</sub> CAT        | Г II                         |
| Cable length                | 1.3 m ±3 cm                     |                              |
|                             |                                 |                              |

#### **Performance Graphs**

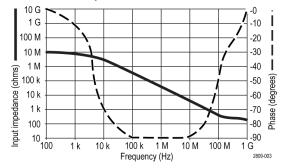

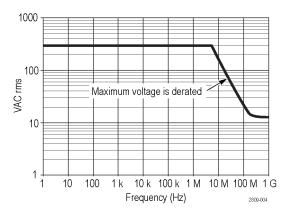

#### **Table 2: Environmental specifications**

| Characteristics           | Description   |  |
|---------------------------|---|--|
| Temperature               |   |  |
| Operating<br>Nonoperating | –15 °C to +65 °C (+5 °F to +149 °F)<br>–62 °C to +85 °C (–80 °F to +185 °F)                                 |  |
| Humidity                  |   |  |
| Operating                 | 5% to 95% relative humidity (%RH) up to<br>+30 °C, 5% to 75% RH above +30 °C up<br>to +65 °C. Noncondensing |  |
| Nonoperating              | 5% to 45% RH above +65 °C up to +85 °C. Noncondensing   |  |
| Altitude                  |   |  |
| Operating<br>Nonoperating | 3.0 km (9,842 ft) maximum<br>12.2 km (40,000 ft) maximum  |  |

#### Table 3: Certifications and compliances

#### **Characteristics Description**

| EC<br>Declaration<br>of<br>Conformity          | Compliance was demonstrated to the following<br>specification as listed in the Official Journal of<br>the European Communities: |
|--|---|
|  | Low Voltage Directive 2006/95/EC:<br>EN61010-031/A1: 2008   |
| Measurement<br>Category<br>Product<br>Examples | CAT III: Distribution-level mains, fixed installation   |
|  | CAT II: Local-level mains, appliances, portable equipment   |

CAT I: Circuits not directly connected to mains.

#### **Characteristics Description**

|                                   | •   |
|-----------------------------------|---|
| Pollution<br>Degree 2             | Do not operate in environments where cond-<br>uctive pollutants may be present (as defined in<br>IEC 61010-1). Rated for indoor use only.   |
| Additional<br>Safety<br>Standards | UL61010-031;2010<br>CAN/CSA C22.2 No. 61010-031:07/A1:2010<br>IEC61010-031; IEC 61010-031/A1:2008   |
| X                                 | <b>Equipment Recycling.</b> This product complies<br>with the European Union's requirements<br>according to Directive 2002/96/EC on waste<br>electrical and electronic equipment (WEEE).<br>For more information about recycling options,<br>about the Support Carrier section of the |

check the Support/Service section of the Tektronix Web site (www.tektronix.com).

#### Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified. Using the probe or accessories in a manner not specified could result in a shock or fire hazard.

#### To Avoid Fire or Personal Injury

Ground-Referenced Oscilloscope Use. Do not float the reference lead of this probe when using with ground referenced oscilloscopes (for example, DPO, MSO, and TDS series oscilloscopes). The reference lead must be connected to earth potential (0 V).

Connect and Disconnect Properly. Connect the probe output to the measurement instrument before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement instrument.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect probes or test leads while they are connected to a voltage source.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Avoid Electric Shock. When using probe accessories, never exceed the lowest rating of the probe or its accessory, whichever is less, including the measurement category and voltage rating.

Avoid Electric Overload. To avoid injury or fire hazard, do not apply potential to any input, including the reference inputs, that varies from ground by more than the maximum rating for that input.

#### Avoid Exposed Circuitry and Do not Operate Without

**Covers.** Do not touch exposed connections and components when power is present.

Inspect The Probe And Accessories. Before each use, inspect probe and accessories for damage (cuts, tears, defects in the probe body, accessories, cable jacket, etc.). Do not use if damaged.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

#### Safety Terms and Symbols Terms in This Manual.

These terms may appear in this manual:

WARNING. Warning statements identify conditions or practices that could result in injury or loss of life.

**CAUTION.** Caution statements identify conditions or practices that could result in damage to this product or other property.

Symbols on the Product. These symbols may appear on the product:

CAUTION Refer to Manual

#### **Contacting Tektronix**

|           | •  |
|-----------|--|
| Web site: | www.tektronix.com  |
| Phone:    | 1-800-833-9200   |
| Address:  | Tektronix, Inc.<br>Department or name (if known)<br>14200 SW Karl Braun Drive<br>P.O. Box 500<br>Beaverton, OR 97077 USA |
| Email:    | techsupport@tektronix.com  |
|           |  |

#### Warranty Information

For warranty information, go to www.tektronix.com/warranty.