

Tektronix
Digital Phosphor Oscilloscopes
Printable Help



077-0062-07

Tektronix
Digital Phosphor Oscilloscopes
Printable Help

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

TekScope, TekConnect, Wave Inspector, and TekLink are registered trademarks of Tektronix, Inc.

FastFrame, OpenChoice, iCapture, MyScope, MultiView Zoom, SignalVu, TekExpress, TriMode, TekSecure, TekProbe, TekVPI, TekVISA, MagniVu, DPX, and PinPoint are trademarks of Tektronix, Inc.

Microsoft, Windows, and Windows XP are registered trademarks of Microsoft Corporation.

MATLAB is a registered trademark of The Mathworks, Inc.

Mathcad is a registered trademark of MathSoft Engineering & Education, Inc.

Online Help
076-0020-11
(April 7, 2011)

077-0062-07 is the printable PDF file of the Online Help.

Contacting Tektronix

Tektronix, Inc.
14150 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.

Table of Contents

About Tektronix Oscilloscopes

Introduction	1
Product Description	1
Product Software	6
Options and Accessories	
Recommended Accessories.....	6
Options.....	11
Documentation and Technical Support	
Documentation	16
Support Information	16
Feedback.....	18
Analysis and Connectivity Support.....	18
About Tekscope.....	21
Working with Your Tektronix Oscilloscope	
Windows Environment	
Windows Interface Guidelines.....	22
Connecting to a Network.....	23
Tek LXI	24
Printing a Hard Copy	26
Using Other PC Applications.....	27
Using a Second Monitor	27
Connecting to Other Instruments.....	28
Oscilloscope Interface	
Using the Instrument Interface	28
Menu Bar Mode.....	29
Toolbar Mode.....	30
Customize the Toolbar.....	32
User Interface Map	33
Using Online Help	34
Navigating the Online Help.....	34
Basic Operations	
ESD Precautions	35
Changing Control Settings.....	35
Moving and Docking Control Windows.....	38
Controlling from within the Graticule Area.....	39
Accessing Shortcut Menus by Right-Clicking.....	40
Creating Your Own Control Windows.....	41
Initializing the Instrument.....	41

Choosing and Connecting Probes	42
Waveform Operations	
Triggering, Timebase, and Horizontal Delay	42
Looking at Waveform Details	43
Using Fast Acquisition and DPO.....	45
Using Logic Waveforms	47
Using Waveform Math	48
Using Spectral Analysis	48
Characterizing a Signal.....	49
Application-Specific Measurements	49

Controls and Connectors

Front Panel Controls and Connectors	
Front Panel Overview	51
Touch Screen	53
Wave Inspector Controls	54
Vertical Controls	55
Horizontal Controls.....	56
Trigger Controls.....	56
Run Controls	59
General Purpose Controls.....	60
MultiView Zoom Controls.....	60
Rear and Side Panel Connectors	61

Cursor Setups

Cursor Setup Control Window (YT Display Format)	65
Cursor Type Control Window	67
Cursor Sources (YT Display)	68
Cursor Style	69
Cursor Position Control Window	71
Horizontal Bar Cursors	72
Vertical Bar Cursors	73
Waveform Cursors	74
Screen Cursors	75
Cursor Track Mode.....	76
Cursor Measurements	76
Cursor Setup Control Window (XY Display Format)	79

Digital Setups

Digital Setup Control Window	81
Setting Up Digital Signal Inputs	82
Digital Channel Threshold and Position	83

Digital Channel Threshold	83
Digital Channel Position	84
Turn On or Off the Digital Channels D15-D8 and D7-D0	85
Display Size of Logic Channels.....	86
Global Threshold for Digital Channels.....	87
Digital Channels D15-D8 and D7-D0 Tabs.....	88

Bus Setups

Bus Setup Control Window (Config Tab).....	89
Bus Selection List	90
Display or Clear a Bus	92
Label a Bus	92
Bus Position	94
I2C Serial Bus Setup	94
SPI Serial Bus Setup	96
USB Serial Bus Setup.....	97
RS-232 Serial Bus Setup.....	98
MIPI DSI-1 Serial Bus Setup	100
MIPI CSI-2 Serial Bus Setup.....	101
Serial Bus Channel Type.....	103
Serial Bus Channel Input	104
USB Serial Bus Speed	105
USB Bus Signal Type	106
Serial Bus Input.....	107
USB Bus Threshold High or Low	108
Serial Bus Channel Threshold.....	109
SPI Bus Channel Polarity.....	110
RS-232 Bus Channel Polarity	111
RS-232 Bus Data Bits.....	112
RS-232 Bus Parity	113
RS-232 Bus Bit Rate	114
SPI Bus Word Size	115
SPI Bus Bit Order	116
Parallel Bus Setup	116
Clocked Parallel Bus Setup.....	117
Add Sources to a Parallel Bus.....	118
Bus Channels Thresholds Setup	120
Change the Bit Order of a Channel in a Parallel Bus	121
Remove a Channel From a Parallel Bus	122
Bus Clock Source Channel Selection.....	123
Bus Clock Channel Polarity	124
Bus Setup Control Window (Display Tab).....	124

Bus Display Components	127
Bus Decode Method	127
View Bus Packet	129
Bus Symbol Table	129
Symbol File Format	130
Opening a Bus Symbol Table File	132

MagniVu Setup

Using MagniVu	135
---------------------	-----

Display Setups

Display Control Window (Appearance Tab).....	139
Display Control Window (Screen Text Tab).....	140
Text Properties Control Window	142
Display Control Window (Objects Tab).....	143
Display Control Window (Colors Tab).....	144
Display Persistence	145
Display Format	146
Waveform Intensity.....	149
Waveform Interpolation.....	149
Graticule Style	151
Color Palettes	152
Remote Operation	154
Remote Desktop Connection	154
Display Remote	154

Horizontal and Acquisition Setups

Horizontal/Acquisition Control Window (Horizontal Tab)	155
Set Record Length Limit.....	156
Horizontal Digital Control Window	157
Horizontal Position/Scale Control Window	158
Horizontal Position/Scale Control Window: Delay Mode On.....	159
Horizontal/Acquisition Control Window (Acquisition Tab).....	159
Autoset.....	161
Autoset Preferences	163
Autoset Undo Control Window	163
Fast Acquisitions	164
Run/Stop Control Window	165
Roll Mode	166
Sampling Modes	167
Resolution Control Window.....	171
Acquisition Mode Control Window	171

FastFrame Control Windows	173
Zoom Control Setup Window	175

Mask Testing Setups

Mask Setup	
Mask Testing Control Window (Masks Tab)	177
Mask Type Controls	177
Mask Types and Standards	179
Mask Display Controls	181
Mask Configuration Controls	
Mask Configuration Control Window - Display	181
Mask Configuration Control Window - Autoset	182
Mask Configuration Control Window - Autofit	183
Mask Alignment Controls	185
Mask Edit Control Window	186
Tolerance Setup	
Mask Testing Control Window (Source/Tolerance Tab)	187
Mask Margin Controls	188
Fail Setup	
Mask Testing Control Window (Pass/Fail Setup Tab)	189
Mask Test Fail Notification	190
Mask Test Completion Notification	192
Mask Test Controls	192
Selecting the Sound Source	194
Mask Polarity Controls	195
Mask Test Repeat Controls	196
Fail Results Setup	
Mask Testing Control Window (Pass/Fail Results Tab)	196
Mask Test Summary	197
Mask Hits Per Segment	199
Mask Test Start or Reset Controls	200
User Mask Setup	
User Mask Control Window	200
User Mask Edit Control Window	202
Recall User Mask	203
Limit Test	
Limit Test Control Window (Setup Tab)	204
Save Template	205
Limit Test Control Window (Failure Notification Tab)	207

Math Setups

Math Setup Control Window	209
---------------------------------	-----

Math Averaging Control Window	210
Math Variables Control Window.....	210
Basic Spectral Setups	
Spectral Setup Control Window (Basic)	211
Advanced Spectral Setups	
Spectral Setup Control Window (Advanced)	212
Spectral Controls: Frequency	213
Spectral Controls: Gating	215
Using Spectral Analysis	
Spectral Analysis Overview	216
Spectral Analysis Features.....	216
FFT Process	218
The FFT Display	218
FFT Windows	219
FFT Window Characteristics	220
Time Domain Gating	221
Aliasing	222
Eliminating Aliasing.....	222
Math Equation Editor	
Math Equation Editor Control Window	223
Math Equation Editor (Time Tab).....	225
Math Equation Editor (Spectral Tab).....	228
Math Equation Editor (Var Tab).....	230
Math Equation Editor (Meas Tab)	230
Math Equation Editor (Filter Tab)	231

Measurement Setups

Measurement Snapshot Control Window	233
Measurement Setup Control Window (Amplitude Tab).....	234
Measurement Readouts	235
Amplitude Measurements	236
Measurement Setup Control Window (Time Tab)	239
Time Measurements	240
Measurement Setup Control Window: (Communications Tab)	242
Communications Measurements	244
Measurement Setup Control Window (More Tab).....	247
Miscellaneous Measurements	249
Measurement Statistics Control Window	250
Reference Levels Setup Control Window.....	252
Gating Control Window	253
Measurement Setup Control Window (Histogram Tab).....	255
Histogram Control Window	256

Analyzing Waveforms

Mark Control Window	263
Search - Select Control Window	264
Search - Configure Control Window	268
Search - Copy Settings	268
Search - Advanced DDR Control Settings	269
Search - Results: Mark Table Control Window	273
Search - Results: Counts Control Window	274
Search - View Control Window	274
Search - Mode Control Window	275
Search and Mark Controls	276
Protocol Decode Event Table	279
Save Event Table	280

MyScope Setups

MyScope Setup Control Window	283
Using MyScope Control Windows	284
Save MyScope File As Dialog Box	286
Open or Edit MyScope Dialog Box	287

Trigger Setups

Trigger Setup Control Window (A Event Tab)	289
Event Trigger Type	290
Trigger Mode Control Window	293
Trigger Holdoff Control Window	294
Set to 50%	295
A Event Triggers	
Bus Trigger Control Window for Parallel	296
Bus Trigger Control Window for I2C Serial	297
Bus Trigger Control Window for SPI Serial	299
Bus Trigger Control Window for RS-232 Serial	300
Bus Trigger Control Window for USB Serial	302
CAN Bus Trigger Control Window	307
Comm Trigger Control Window	308
Edge Trigger Control Window	310
Glitch Trigger Control Window	311
I2C Bus Trigger Control Window	312
Logic Pattern Trigger Control Window (MSO/DPO5000 and MSO70000/C Series)	314
Logic Pattern Trigger Control Window	315
RS-232 Trigger Control Window	316
Runt Trigger Control Window	317
Serial Pattern Control Window	319

Setup and Hold Trigger Control Window	320
SPI Bus Trigger Control Window	322
Logic State Trigger Control Window (MSO/DPO5000 and MSO70000/C Series)	324
Logic State Trigger Control Window	325
Timeout Trigger Control Window	325
Transition Time Trigger Control Window	327
Video Trigger Control Window	329
Width Trigger Control Window	331
Window Trigger Control Window	332
Sequence Triggering	
Sequential Triggering (Horizontal Delay Off)	334
A Only Trigger	
Trigger on A Only (Horizontal Delay On)	335
Trigger on A Only (Horizontal Delay Off)	336
Trigger After Time	
Trigger After Time (Horizontal Delay On)	338
Trigger After Time (Horizontal Delay Off)	339
Trigger After Events	
Trigger on nth Event (Horizontal Delay On)	341
Trigger on nth Event (Horizontal Delay Off)	342
Trigger on nth Event (B-Event Scan)	344
Trigger on nth Event (B-Event Scan and Horizontal Delay On)	345
B Event Trigger	
Trigger Setup Control Window (B Event Tab)	347
Mode & Holdoff	
Trigger Setup Control Window (Mode Tab)	348
Trigger Position Correction	349
MultiScope Triggering	
MultiScope Trigger Setup Control Window	350

Vertical Setups

Vertical Setup Control Window	355
Input Setup	355
Zoom Control Window	357
Waveform Display Control Window	359
Position/Offset Control Window	359
Waveform Label Control Window	361
Vertical Offset Control Window	361
Termination Controls	363
Coupling Controls	366
Deskew/Attenuation Control Window	367
Bandwidth Control Window	368

Enhanced Bandwidth	368
Vertical Setup Control Window: Aux Tab	371
Probe Setup Control Window	372
Probe Setup Control Window: Setup Type	374
Probe Setup Control Window: D15-D0 Tab	375
Probe Setup Control Window: Probe Calibration	376
Probe Setup Control Window: Probe Tip Selection	378
Probe Setup Control Window: Probe Deskew	379
Probe Setup Control Window: Probe Attenuation	380
Probe Controls Window	381
Probe Properties	382
Probe Setup Control Window: Probe Status	384

Copying and Printing

Copy Setup	
Copy Setup: Images	387
Copy Setup: Waveforms	388
Copy Setup: Measurements	390
Copying Procedures	
Copying the Screen for Use in Other Applications	392
Copying Measurements for Use in Other Applications	392
Printing	
Page Setup Dialog Box	393
Print Preview Dialog Box	395
Print Dialog Box	395
Printing the Screen to a Printer	395

File Menu

Reference Waveform Setups	
Reference Waveform Controls	397
Recall Dialog Box: Waveform	398
Instrument Setups	
Recall Dialog Box: Instrument Setups	399
Delete Setups and Reference Waveforms	401
Print Setups	
Print Setups	402
Saving	
Save As Dialog Box: Histogram	402
Save As Dialog Box: Instrument Setup	403
Save As Dialog Box: Measurement	405
Save As Dialog Box: Screen Capture	407
Save As Dialog Box: User Mask	410

Save As Dialog Box: Waveform	411
Save As Dialog Box: Digitals	413
Save As Dialog Box: Timestamp	414

Utilities

Tek Secure Erase.....	417
Set Time and Date	417
GPIB Configuration Control Window.....	418
LAN Server Status Control Window	420
External Signals Control Window	420
Touch Screen	423
Instrument Calibration Control Window	423
Instrument Diagnostics Control Window	424
E-mail on Event Control Window	426
Multipurpose Knobs.....	429
User Preferences Control Window	
User Preferences: Prompt Before Action	430
User Preferences: Keypad Defaults.....	430
User Preferences: Readouts	431
User Preferences: Measurement Annotation	433
User Preferences: Units	434
User Preferences: Front Panel Buttons.....	435
Option Installation	
Option Installation	436
Install the Floating License	438
Install the Fixed License	440
Return the Floating License for the Installed Option(s)	441

How to ?

Calibrating and Using Probes	
Signal Path Compensation	445
Calibrating Active Probes.....	445
Calibrating Passive Probes.....	446
Low Frequency Probe Compensation	447
Deskew.....	448
Acquiring Analog Signals	
Setting Up Analog Channels	448
Setting Acquisition Modes.....	449
Using Fast Acquisitions.....	450
Viewing the Analog Characteristics of a Digital Signal	453
Acquiring Digital Signals	
Setting Up Digital Channels	453

Displaying Waveforms as a Bus	
Setting Up a Bus	454
Setting Up a Parallel Bus	454
Setting Up an SPI Serial Bus	455
Setting Up an I2C Serial Bus	456
Setting Up an RS-232 Serial Bus	456
Setting Up a USB Serial Bus	457
Setting Up an MIPI DSI-1 Serial Bus	457
Setting Up an MIPI CSI-2 Serial Bus	458
Configuring the Bus Display	459
Analyzing Buses	
Tracking Down I2C Serial Bus Anomalies	459
Troubleshooting Circuits Using a Parallel Bus	461
Troubleshooting an SPI Serial Bus	464
Creating and Using MyScope Control Windows	
Creating MyScope Control Windows	467
Editing MyScope Control Windows	467
Taking Measurements	
Setting Cursor Sources	469
Taking Cursor Measurements	470
Taking Automatic Measurements	471
Taking Automatic Measurements Procedure	473
Localizing a Measurement	474
Saving Measurements	475
Creating and Using Math Waveforms	
Using Math Waveforms	475
Creating Math Waveforms using Predefined Expressions	479
Creating Math Waveforms with the Equation Editor	480
Creating a Math Waveform	481
Using Mask and Limit Testing	
Setting Up Mask Testing	482
Creating a New User Mask	485
Creating a User Mask from a Defined Mask	487
Editing a User Defined Mask	487
Saving a User Mask to Disk	488
Recalling a User Mask from Disk	489
Creating a User Mask with Mask Testing	489
Using Mask Testing	490
Using E-mail on Event	
Sending E-mail on Events	490
Creating Spectral Waveforms	
Creating a Spectral Waveform	491

Defining a Spectral Math Waveform	492
Using a Predefined Spectral Math Waveform	496
Using Reference Waveforms	
Creating Reference Waveforms	497
Saving Reference Waveforms using Auto-Increment File Name	498
Recalling Reference Waveforms	499
Using Waveforms	
Saving a Waveform	499
Copying Waveform Data	500
Saving a Screen Capture	502
Using Horizontal Delay	
Setting the Horizontal Delay	502
Comparing Data Using Horizontal Delay	503
Using Roll Mode	
Setting Up Roll Mode	503
Using Roll Mode	504
Triggering	
Checking Trigger Status	504
Triggering from the Front Panel	506
Triggering from the Trigger Setup Window	508
Triggering on a Sequence	510
Trigger on A Event Only	511
Triggering on an Event after a Specified Delay	511
Triggering on a B Event	512
Triggering on a Glitch	513
Triggering on a Runt Pulse	513
Triggering on a Pulse Width	515
Triggering on Pulse Timeout	516
Triggering on a Pattern	517
Triggering on a Logic State	519
Triggering on Transition Time	520
Triggering on Setup/Hold Time Violations	521
Triggering on Window Threshold Violations	524
Triggering on a Video Signal	525
Triggering on a Communication Signal	526
Triggering on a Bus	527
Using Histograms	
Setting up a Histogram	528
Taking Automated Measurements on Histogram Data	528
Starting and Resetting Histogram Counting	529
Using Display Modes	
Displaying Waveforms	529

Using the XY Display Format.....	530
Using MultiView Zoom with Waveforms.....	531
Choosing a Color Palette	
Choosing Color Palettes.....	532
Display Palette	532
Saving and Restoring Instrument Setups	
Saving Instrument Setups.....	534
Recalling Instrument Setups.....	534
Deleting Instrument Setups.....	535
Using the Programmer Online Guide	
GPIB Programmer Online Help.....	536
Using Application Software	
Oscilloscope Applications Software.....	536
Adding Software Applications to the Instrument	536
Setting up a Dual Display	
Setting up a Dual Display.....	536
Connecting to a Network	
Enabling a Network Connection	538
Exiting or Minimizing the Oscilloscope Application	
Exiting the Instrument Application.....	538
Minimizing the Instrument Application.....	538
Shutting Down the Instrument	539
Adjusting Display Contrast	
Adjusting Display Contrast.....	539

Oscilloscope Reference

Functional Model.....	541
Process Overview.....	542
Waveform Acquisition	
Signal Connection	543
Probes and Signal Connection.....	543
Input Conditioning.....	544
Bandwidth Enhancement	545
Coupling	546
Scaling and Positioning	547
Vertical Acquisition Window Considerations	547
Horizontal Acquisition Window Considerations	550
Horizontal Acquisition Window Interrelated Parameters	550
Independent versus Shared Window.....	551
Incompatible Acquisition Features	552
Autoset Considerations.....	553
Acquisition Hardware	553

Sampling Process	555
Sampling Modes	556
Waveform Record.....	556
Interleaving	558
Interpolation	558
Trigger Function	
Triggering Concepts.....	558
Trigger Sources	560
Trigger Types.....	561
Trigger Modes.....	564
Trigger Holdoff	565
Trigger Coupling.....	566
Trigger Slope and Level.....	566
Horizontal Trigger Position.....	567
Delayed Trigger System	568
Advanced Triggering	568
Bus Trigger	569
Communication Trigger.....	569
Communication Triggering	570
Glitch Trigger	571
Pattern Trigger	571
Runt Trigger.....	572
Setup and Hold Trigger	572
State Trigger.....	574
Timeout Trigger.....	575
Transition Time Trigger.....	575
Video Trigger.....	575
Width Trigger	576
Window Trigger.....	576
Sequential Triggering	577
Triggering with Horizontal Delay Off.....	577
Triggering with Horizontal Delay On	578
Triggering and Horizontal Delay Summary	580
Waveform Display	
Display Overview.....	580
Display Elements	581
Customizable Display Elements	583
Acquisition Preview	586
Waveform Display	586
Operations on the Time Base	588
Horizontal Position and the Horizontal Reference Point	589
Using the MultiZoom Feature	590

Waveform Measurement	
Automatic Measurements	590
Cursor Types	592
Histograms.....	594
Creating Math Waveforms	594
Math Waveforms.....	595
Math Waveform Differentiation.....	597
Math Waveform Sources.....	599
Math Waveform Expression Syntax	600
Offset, Position, Scale, and Math Waveforms	601
Waveform Integration	601
Defining Spectral Math Waveforms	602
Using the Spectral Math Controls.....	603
Using the Time Controls	604
Using the Gating Controls	606
Using the Frequency Domain Controls.....	607
Using the Magnitude Controls	609
Using the Phase Controls	610
Using Spectral Analyzer Windows	615
Flatop2 Window.....	618
Gaussian Window.....	619
Hamming Window.....	620
Hanning, Kaiser-Bessel, and Blackman-Harris Windows.....	620
Rectangular Window	622
Tek-Exponential Window.....	623
Recognizing Aliasing.....	624
Mask Testing	
Mask Key Points.....	625
Serial Mask Testing with Mask Testing	626
Levels Used in Taking Eye Measurements	628
Output	
Saving and Recalling Setups	629
Saving and Recalling Waveforms.....	630
Saving and Copying Waveform Data.....	631
Miscellaneous	

Index

Introduction

This Tektronix oscilloscope provides the performance, simplicity, and connectivity needed for the ever-changing electronics, computer, and communications industries. The easy-to-use interface includes a large display and a touch-screen interface on a Microsoft Windows platform.

Choose the methods of controlling oscilloscope operations that are most convenient for you:

- Customary front-panel controls
- Menus and toolbar buttons
- Touch screen

What do you want to do next?

- [Read the product description. \(see page 1\)](#)
- [Learn about using the online help. \(see page 34\)](#)
- [Learn about working with your oscilloscope. \(see page 816\)](#)

Product Description

This online help supports the following series of Tektronix Digital Phosphor oscilloscopes:

- DPO7000C and DSA7000C Series
- MSO7000C Series
- DPO7000C Series
- MSO5000 and DPO5000 Series
- MSO70000 Series
- DPO70000/B and DSA70000/B Series
- DPO7000 Series

NOTE. *The features and options that are documented in this online help are available for several instrument models. Your instrument may not have every feature discussed.*

Key Features

Tektronix oscilloscopes are high-performance solutions for verification, debugging, and characterization of sophisticated electronic designs. These oscilloscopes feature exceptional signal acquisition performance, operational simplicity, and open connectivity to the design environment. Classic analog-style controls, a

large display with an optional touch-sensitive screen, and graphical menus provide intuitive control. Open access to the Windows operating system enables unprecedented customization and extensibility.

Key features include:

- Bandwidth:
 - DPO71254C, DSA71254C, MSO71254C, DPO71604C, DSA71604C, MSO71604C, DPO72004C, DSA72004C, and MSO72004C: 12.5, 16, and 20 GHz models with up to 100 GS/s real-time sampling rate on two channels
 - DPO70404C, DSA70404C, MSO70404C, DPO70604C, DSA70604C, MSO70604C, DPO70804C, DSA70804C, and MSO70804C: 4, 6, and 8 GHz models with up to 25 GS/s real-time sampling rate on four channels
 - DPO7054C, DPO7104C, DPO7254C, and DPO7354C: 500 MHz, 1 GHz, 2 GHz, 3 GHz models with up to 10 GS/s real-time sampling rate on two channels
 - DPO5034, MSO5034, DPO5054, MSO5054, DPO5104, MSO5104, DPO5204, and MSO5204: 350 MHz, 500 MHz, 1 GHz, and 2 GHz models with up to 10 GS/s real-time sampling rate on two channels
 - DPO70000, and DSA70000 Series: 4, 6, 8, 12.5, 16 and 20 GHz models with up to 50 GS/s real-time sampling on all four channels. MSO70000, DPO70000B, and DSA70000B 4, 6, and 8 GHz models with up to 50 GS/s real-time sampling on all four channels
 - DPO7000 Series: 500 MHz, 1 GHz, 2.5 GHz, and 3.5 GHz models with up to 10 GS/s real-time sampling rate on all four channels
- Record length: up to 500,000,000 samples, depending on the model and options
- Fast acquisition up to 250,000 acquisitions per second, depending on the model of instrument
- [Enhanced Bandwidth \(see page 545\)](#) controls available for some models
- Up to 1% DC vertical gain accuracy
- Four input channels (each with 8-bit resolution)
- Auxiliary trigger input and output
- Sample, envelope, peak-detect, high-resolution, average, fast acquisition, and waveform database acquisition modes
- Full programmability, with an extensive GPIB command set and a message-based interface
- Extensive suite of advanced triggers including edge, logic, pulse, video, communication (optional), sequence, low-speed serial, and serial pattern
- Extensive suite of advanced triggers including edge, bus, logic, pulse, video, communication (optional), sequence, low-speed serial, and serial pattern
- Powerful built-in measurement capability, including histograms, automatic measurements, eye pattern, and measurement statistics
- Basic math as well as advanced equation editor and spectral analysis

- A large 12.1 inch (307.3 mm), 1024 x 768 resolution, XGA color display that supports color grading of waveform data to show sample density
- Customizable [MyScope control windows \(see page 283\)](#)
- An intuitive graphical user interface (GUI) with online help
- Internal disk storage
- Wide array of probing solutions, options, and upgrades
- GPIB Controller available on some models
- Comprehensive suite of right-click menus

MSO70000/C Series Mixed Signal Oscilloscopes also offer:

- 16 digital channels plus 1 clock/qualifier channel
- High resolution timing as precise as 80 ps
- Parallel bus decoding, triggering and analysis
- Serial bus decoding, triggering and analysis for SPI and I²C buses
- An analog view of any digital channel through the iCapture feature
- Enhanced Logic Pattern and Logic State triggering includes digital channels
- Differential (P6780) and single-ended (P6717A) logic probes
- Easy connection to your device-under-test through the convenient design of the P6780 and the P6717 Logic probes
- iCapture allows analyzing the analog characteristics of the digital channels

MSO/DPO5000 Series instruments offer:

- MagniVu 60.6 ps resolution

Signal Processing Features

- **Waveform Math.** [Set up math waveforms \(see page 209\)](#) using the basic arithmetic functions, including FFT, or create more advanced math waveforms using the math expression editor. Waveform expressions can contain measurement results and other math waveforms.
- **Spectral Analysis.** Display spectral magnitude and phase waveforms based on your time-domain acquisitions. Control the instrument using the traditional [spectrum analyzer controls \(see page 602\)](#), such as span, center frequency, and resolution bandwidth.
- **Mask Testing.** Use [Mask Testing \(see page 626\)](#) for signal violation detection and pass/fail testing. Test signals against a user defined mask, or with the [Mask Testing Option \(see page 757\)](#), you can test against industry standard masks.

Display Features

- **Color LCD Display.** [Identify and differentiate waveforms \(see page 144\)](#) easily with color coding. Waveforms, readouts, and inputs are color matched to increase productivity and reduce operating errors.
- **Digital Phosphor.** The Digital Phosphor Oscilloscope can provide visual clues as to the relative rate of occurrence of waveform features or anomalies by combining many separate acquisitions of a waveform into a single intensity-graded or color-graded display.
- **Fit to Screen.** The Digital Phosphor technology performs the compression required to represent all record points on the screen, even at the maximum record length settings.
- **MultiView Zoom.** To take advantage of the full resolution of the instrument, you can [zoom in on a waveform \(see page 590\)](#) to see fine details. Both vertical and horizontal zoom are available. You can also zoom in on multiple areas of a single waveform simultaneously and on multiple waveforms at the same time.

Measurement Features

- **Cursors.** Use [Cursors \(see page 76\)](#) to take simple voltage, time, and frequency measurements.
- **Automatic Measurements.** Choose from a large palette of amplitude, time, histogram, and communication measurements. You can [customize the measurements \(see page 590\)](#) by changing reference levels or by adding measurement gating. Statistics (mean, maximum, minimum, standard deviation and population) are available for each measurement value.

Trigger Features

- **Simple and Advanced Trigger Types.** Choose a simple edge trigger or [advanced trigger types \(see page 289\)](#) to help you capture a specific signal fault or event.
- **Dual Triggers.** Use the A (main) trigger system alone or add the B trigger to capture more complex events. You can use the [A and B triggers together \(see page 754\)](#) to set up a delay-by-time or delay-by-events trigger condition.

Convenience Features

- **Autoset.** Use [Autoset \(see page 553\)](#) to quickly set up the vertical, horizontal, and trigger controls for a usable display.
- **MyScope.** Use [MyScope \(see page 283\)](#) to create your own control windows for easy access to the controls you use most often.
- **Touch Screen Interface.** You can operate all instrument functions (except the power switch) from the [touch screen interface \(see page 53\)](#). You can also install a mouse and keyboard.
- **Toolbar or Menu Bar.** You can choose a [toolbar operating mode \(see page 30\)](#) that is optimized for use with the touch screen, or a PC-style [menu-bar operating mode \(see page 29\)](#) that is optimized for use with a mouse.

- **Open Desktop.** The instrument is built on a Microsoft Windows software platform; the instrument application program starts automatically when you apply power to the instrument. You can minimize the instrument application and take full advantage of the built-in PC to run other applications. Moving waveform images and data into other applications is as simple as a copy/paste operation.
- **Dedicated Front Panel Controls.** The front panel contains [knobs and buttons \(see page 35\)](#) to provide immediate access to the most common instrument controls. Separate [vertical controls \(see page 55\)](#) are provided for each channel. The same functions are also available through the screen interface.
- **Data Storage and I/O.** The instrument has a removable hard disk drive and a DVD/CD-RW drive that can be used for storage and retrieval of data. The instrument has GPIB, USB, Centronics (available on some models), RS-232, XGA out, extended desktop support, and Ethernet ports for input and output to other devices.
- **Online Help.** The instrument has a [complete online help system \(see page 34\)](#) that covers all its features. The help system is context sensitive; help for the displayed control window is automatically shown if you click the help button. Graphical aids in the help windows assist you in getting to the information you need. You can also access the help topics through a table of contents, index, or full text search.

Product Software

The instrument includes the following software:

- **System Software.** The product software runs on a specially configured version of Microsoft Windows which is pre-installed and enables you to install other compatible applications. Do not attempt to substitute any version of Windows that is not specifically provided by Tektronix for use with your instrument.
- **Product Software.** This pre-installed software is the instrument application and runs on Microsoft Windows. It provides the graphical user interface (GUI) and all other instrument control functions. You can minimize or even exit/restart the instrument application as your needs dictate. However, it is recommended that you exit the instrument application only when installing new software.
- **Support Software.** The product software DVD, included with the instrument, contains additional software and files that may be useful to you.
- **Readme file.** This text file contains release notes and updates that are not included in other product documentation.
- **GPIB Programmer Online Help.** Available as online help or a PDF file. It contains the information you need to program the instrument through its GPIB interface.
- **Specifications Performance Verification Procedures.** The product DVD contains instrument specifications and instructions to perform a manual performance verification.

See the instructions on the product software DVD for information about installing the support software.

NOTE. *New versions of software for your instrument are available at our Web site. To find new versions, visit www.tektronix.com/support.*

Firmware Upgrade

Tektronix may offer firmware upgrade kits for this instrument. Contact your local Tektronix distributor or sales office for more information.

Recommended Accessories

The following accessories are recommended for your instrument.

MSO5000 and DPO5000:

- GPIB-to-USB adapter, order TEK-USB-488
- TekVPI-to-TekProbe BNC adapter, order TPA-BNC
- Hard transit case, HCTEK54
- Rackmount kit, order RMD5000

- Deskew pulse generator, 067-1686-XX
- Mini keyboard, 119-7083-XX
- Service manual as a PDF, 077-0076-XX
- Programmer manual as a PDF, 077-0010-XX
- Specifications and Performance Verification manual as a PDF, 077-0063-XX

DPO7000/C

- Oscilloscope cart, order K420
- Power deskew fixture, order 067-1478-XX
- Mini keyboard (USB), order 119-7083-XX
- Rackmount kit, order 016-1965-XX
- Service manual as a PDF file, 077-0076-XX

DPO/DSA70000, DPO/DSA70000B, DPO/DSA70000C, and MSO70000/C:

- Deskew fixture, order 067-1586-XX
- Oscilloscope cart, K4000 with brackets: order 407-5187-XX and 407-5188-XX
- Rack mount, order 016-1981-XX
- Transit case, order 016-1977-XX
- Service manual as a PDF file, 077-0076-XX

The following probes and components are recommended for your instrument:

MSO5000 and DPO5000:

- TekProbe

TekProbe component	Description
ADA400A	100X, 10X, 1X, and 0.1X, high gain differential amplifier
P5100A	2.5 kV, 100X, 250 MHz high voltage passive probe
P6015A	40 kVpk, 1000X, 75 MHz high voltage single-ended passive probe
TCPA300, TCPA400	Current measurement systems amplifier (requires TPA-BNC)

- TekVPI

TekVPI component	Description
TAP1500	1.5 GHz active single-ended voltage probe
TAP1500X2	Bundle of two 1.5 GHz TAP1500 active probes
TAP2500	2.5 GHz active single-ended voltage probe
TCP0030	DC to 120 MHz, 30 A AC/DC current probe
TCP0150	DC to 20 MHz, 150 A AC/DC current probe

TekVPI component	Description
TDP0500	500 MHz active differential voltage probe
TDP1000	1 GHz active differential voltage probe
TPP500, TPP1000	10X Passive Probes are compact with 10X attenuation, designed for use with Tektronix MSO/DPO4000B and MSO/DPO5000 Series instruments. The bandwidth (–3 dB) for TPP500 is 500 MHz. The bandwidth (–3 dB) for TPP1000 is 1 GHz.

DPO7000/C

■ BNC

BNC component	Description
CT1, CT2, CT6	Current probes, AC high-speed
P6021, P6022	Current probes, AC

■ TekProbe

TekProbe component	Description
ADA400A	Differential preamplifier
P5050	10X passive probe, 500 MHz
P5100	High-voltage probe
P5200	High-voltage differential probe
P5205	High-voltage differential probe
P5210	High-voltage differential probe
P6015A	High-voltage probe
P6101B	1X passive probe, 15 MHz
P6139B	Passive probe
P6158	20X low-capacitance probe, 3 GHz
P6243	Active probe, 1 GHz
P6245	Active probe, 1.5 GHz
P6246	Differential probe, 400 MHz
P6247	Differential probe, 1 GHz
P6248	Differential probe, 1.5 GHz
P6701B	Converter, optical-to-electrical (multi-mode)
P6703B	Converter, optical-electrical (single-mode)
TCP202	Current probe
TCP300, TCP400 Series	Current measurement system (Requires TCPA300/TCPA400 amplifiers)

■ TekVPI

TekVPI component	Description
TAP1500	Active probe, 1.5 GHz
TAP2500	Active probe, 2.5 GHz
TCP0030	AC/DC current probe
TPA-BNC	Adapter, TekProbe-to-TekVPI
TCP0150	DC to 20 MHz, 150 A AC/DC current probe
TDP0500	500 MHz active differential voltage probe
TDP1000	1 GHz active differential voltage probe

DPO/DSA70000, DPO/DSA70000B, DPO/DSA70000C, and MSO70000/C:

- BNC

BNC component	Description
CT1, CT2, CT6	Current probes, AC high-speed
P6021, P6022	Current probes, AC

- Logic (MSO70000/C Series)

Logic component	Description
P6717A	16 data and 1 clock channel logic probe with accessories
P6780	16 data and 1 clock channel differential logic probe with accessories that you solder in

- TekConnect

TekConnect component	Description
P7260	Low-capacitance active voltage probe, 6 GHz
P7313, P7313SMA	Differential probe, 12.5 GHz
P7350, P7350SMA	Differential probe, 5 GHz
P7360	Differential probe, 6 GHz
P7380, P7380SMA	Differential probe, 8 GHz
P7504	TriMode probe, 4 GHz
P7506	TriMode probe, 6 GHz
P7508	TriMode probe, 8 GHz
P7513A	TriMode probe, 13 GHz
P7516	TriMode probe, 15 GHz
P7520	TriMode probe, 20 GHz
TCA-BNC	Adapter, TekConnect-to-BNC
TCA-N	Adapter, TekConnect-to-N
TCA-SMA	Adapter, TekConnect-to-SMA
TCA-1MEG	High-impedance buffer amplifier (Includes P6139A passive probe)
TCA-75	Adapter, 4 GHz: 75 Ω to 50 Ω 75 Ω BNC input
TCA-292MM	TekConnect to 2.92 mm connectors

- TekProbe

TekProbe component	Description
ADA400A	Differential preamplifier
P5050	10X passive probe, 500 MHz
P5100	High-voltage probe
	High-voltage differential probe
P5200	
P5205	High-voltage differential probe
P5210	High-voltage differential probe
P6015A	High-voltage probe
P6101B	1X passive probe, 15 MHz
P6139A	Passive probe
P6158	20X low-capacitance probe, 3 GHz
P6243	Active probe, 1 GHz
P6245	Active probe, 1.5 GHz
P6246	Differential probe, 400 MHz
P6247	Differential probe, 1 GHz
P6248	Differential probe, 1.5 GHz
P6701B	Converter, optical-to-electrical (multimode)

TekProbe component	Description
P6703B	Converter, optical-electrical (single-mode)
TCP202	Current probe
TCP300, TCP400 Series	Current measurement system (Requires TCPA300/TCPA400 amplifiers)

Options

The following options are available for your instrument.

DPO5000, MSO5000:

■ Software:

- Opt. DDRA - DDR Memory Bus Analysis; Available, only on 1 GHz and 2 GHz models (requires DJA)
- Opt. DJA - Jitter And Eye Analysis Tools - Advanced (DPOJET)
- Opt. ET3 - Ethernet Compliance Testing
- Opt. LT - Waveform Limit Testing
- Opt. MTM - Mask Testing for Serial Communication Standards (up to 1.5 Gb/s)
- Opt. PS1 - Power Solution Bundle: DPOPWR, P5205, TCP0030, TPA-BNC, 067-1686-XX (Deskew Fixture)
- Opt. PWR - Power Measurement and Analysis
- Opt. SR-COMP - Computer Serial Triggering and Analysis (RS-232/422/485/UART)
- Opt. SR-EMBD - Embedded Serial Triggering and Analysis (I2C, SPI)
- Opt. SR-USB - USB Serial Triggering and Analysis (LS, FS, HS)
- Opt. USB - USB 2.0 Compliance Testing
- Opt. VNM - CAN/LIN Protocol Analysis Software
- Opt. MSOE - 16-channel MSO ¹

¹ Available for DPO5000 Series. Enabling/disabling this key does not change the model number

■ Record Length:

- Opt. 2RL - 25 MSamples/ch, 50M maximum for 1 GHz and 2 GHz
- Opt. 5RL - 50 MSamples/ch, 125M maximum for 1 GHz and 2 GHz
- Opt. 10RL - 125 MSamples/ch, 250M maximum for 1 GHz and 2 GHz

DPO7000/C

- Hardware:
 - Opt. 2SR (available only on DPO7104/C instruments) - Double maximum real time sample rate
- Record Length:
 - Opt. RL02 - Upgrade from 12.5 to 25 MSamples/ch
 - Opt. RL05 - Upgrade from 12.5 to 50 MSamples/ch
 - Opt. RL010 - Upgrade from 12.5 to 125 MSamples/ch
 - Opt. RL25 - Upgrade from 25 to 50 MSamples/ch
 - Opt. RL210 - Upgrade from 25 to 125 MSamples/ch
 - Opt. RL510 - Upgrade from 50 to 125 MSamples/ch
 - Opt. 2RL - 125 MSamples max, 25 MSamples/ch
 - Opt. 5RL - 250 MSamples max, 50 MSamples/ch
 - Opt. 10RL - 500 MSamples max, 125 MSamples/ch
- Service:
 - Opt CA1 - Provides single calibration event for the designated interval
 - Opt. R3 - Repair service 3 years, including warranty
 - Opt. R5 - Repair service 5 years, including warranty

- Software:
 - Opt. DDRA - DDR Memory Bus Analysis
 - Opt. ET3 - Ethernet Compliance Test
 - Opt. D-PHY - MIPI® D-PHY Characterization and Compliance Testing
 - Opt. LSA - Low Speed Serial Analysis (CAN/LIN trigger)
 - Opt. LT - Waveform Limit Testing
 - Opt. MTH and Opt. MTM - Serial Communications Mask Testing
 - Opt. PTM - Protocol Triggering for NRZ Serial Pattern Trigger
 - Opt. PWR - DPOPWR Power Measurement and Analysis
 - Opt. PTH, Opt. PTU and Opt. STU - Protocol Triggering and Decoding Analysis
 - Opt. SVE - SignalVu™ Essentials for Vector Signal Analysis
 - Opt. SVP - Advanced Signal Analysis
 - Opt. SVM - General Purpose Modulation Analysis
 - Opt. TEKEXP - USB3.0 Compliance Test
 - Opt. USB - Universal Serial Bus USB2.0 Compliance Test
 - Opt. UWB - Ultra-Wideband Spectral Analysis
 - Opt. UWBE Ultra-Wideband Spectral Analysis Essentials

DPO/DSA70000/B/C, and MSO70000/C:

- Calibration:
 - Opt. C3 - Calibration service 3 years
 - Opt. C5 - Calibration service 5 years
 - Opt. D1 - Calibration data report
 - Opt. D3 - Calibration data report 3 years (with Opt C3)
 - Opt. D5 - Calibration data report 5 years (with Opt C5)

- Hardware:

- Opt. 1R - Rackmount kit

- Record Length:

DPO70000/B/C and MSO70000/C Series:

- Opt. 2XL - 20 MSamples/ch
 - Opt. 5XL - 50 MSamples/ch
 - Opt. 10XL - 125 MSamples/ch

DPO70000B/C, DSA70000B/C, and MSO70000/C Series for 12.5 GHz or faster models:

- Opt. 20XL - 250 MSamples/ch

DSA70000/B Series:

- Opt. 5XL - 50 MSamples/ch
- Opt. 10XL - 125 MSamples/ch

■ Service:

- Opt. CA1 - Provides single calibration event for the designated interval
- Opt. IF - Upgrade installation service
- Opt. R3 - Repair service 3 years (including warranty)
- Opt. R5 - Repair service 5 years (including warranty)

■ Software:

DPO70000/B/C, DSA70000/B/C, and MSO70000/C Series:

- Opt. DVI - DVI Compliance Test
- Opt. ET3 - Ethernet Compliance Test
- Opt. FBD - FB-DIMM Compliance Module for RT-Eye Serial Data Compliance and Analysis
- Opt. HEAC - HDMI Ethernet and Audio (Return) Channel Compliance Test
- Opt. HT3 - HDMI Compliance Test
- Opt. HT3DS - HDMI Direct Synthesis for HDMI 1.4 Compliance Test
- Opt. IBA - InfiniBand Compliance Module for RT-Eye Serial Data Compliance and Analysis
- Opt. JA3 - TDSJIT3 Advanced Jitter Analysis
- Opt. JE3 - TDSJIT3 Essentials Jitter Analysis
- Opt. MTH - Mask Testing for Serial Standards, 4.25 GB/s
- Opt. PCE - PCI Express Compliance Module for RT-Eye Serial Data Compliance and Analysis
- Opt. PWR - DPOPWR Power Measurements and Analysis
- Opt. RTE - RT-Eye Serial Data Compliance and Analysis for Serial standards testing
- Opt. SST - Serial ATA and SAS Software Module for RT-Eye Serial Data Compliance and Analysis
- Opt. TDSUSBF - USB 2.0 Text fixture (requires Opt USB)
- Opt. USB - Universal Serial Bus USB 2.0 Compliance Test

DPO70000B/C, DSA70000B/C, and MSO70000/C Series:

- Opt. DDRA - DDR Memory Bus Analysis
- Opt. DSPT - DisplayPort Transmitter Compliance Test (for 8 GHz or faster models)
- Opt. FBU - FBDIMM Compliance Module for RT-Eye Serial Data Compliance and Analysis
- Opt. LT - Waveform Limit Test
- Opt. SLA - Advanced Serial Data Link Analysis (includes Equalization)
- Opt. SLE - Essentials Serial Data Link Analysis
- Opt. SVE - SignalVu Essentials for Vector Signal Analysis
- Opt. SVM - General Purpose Modulation Analysis (requires option SVE)
- Opt. SVP - Advanced Signal Analysis (requires option SVE)
- Opt. TEKEXP - TekExpress Automated Compliance Test
- Opt. USB3 - Universal Serial Bus USB 3.0 Compliance and Analysis
- Opt. USB-TX - Universal Serial Bus USB 3.0 Transmitter Normative and Informative Tests for TekExpress Automated Compliance Test
- Opt. UWB - Ultra Wideband Analysis
- Opt. UWBE - Essentials Ultra Wideband Analysis
- Opt. XGBT- 10GBASE-T Compliance Test

DPO70000B/C and MSO70000/C Series:

- Opt. ASM - Advanced Event Search and Mark
- Opt. DJA - Advanced Jitter and Eye Analysis
- Opt. PTH - Serial Protocol Triggering and Decode Analysis, up to 3.125 Gb/s
- Opt. PTU - Serial Protocol Triggering and Decode Analysis, up to 5 Gb/s

MSO70000/C Series:

- Opt. DSAH - MSO Digital Signal Analysis Bundle (for models below 12.5 GHz)
- Opt. DSAU - MSO Digital Signal Analysis Bundle (for 12.5 GHz or faster models)

DSA70000B Series:

- Opt. STU - Serial Pattern Triggering Analysis, up to 5 Gb/s

DPO70000C and MSO70000C Series:

- Opt. SR-EMBD - Embedded Serial Triggering and Analysis (I2C, SPI)
- Opt. SR-COMP - Computer Serial Triggering and Analysis (RS-232/422/485/UART)
- Opt. SR-USB - USB Serial Triggering and Analysis (LS, FS, HS)
- Opt. SR-DPHY - MIPI-D-PHY (DSI1/CSI2) Serial Analysis

Documentation

In addition to the instrument online help, the following documents are available:

- **Digital Phosphor Oscilloscopes Quick Start User Manual (071-2617-XX)**. The Quick Start User Manual has information about installing and operating your instrument. The Quick Start User Manual is available in several languages, in addition to English.
- **Digital Phosphor Oscilloscopes Programmer Online Guide**. The Programmer Guide is provided as online help and as a printable PDF file. See the product software DVD for installation information.
- **Digital Phosphor Oscilloscopes Specifications and Performance Verification Technical Reference Manual (077-0063-XX)**. This is a PDF only manual that includes both the specifications and the performance verification procedure.
- **Digital Phosphor Oscilloscopes Service Manual (077-0076-XX)**. A service manual is available as a PDF file; it includes procedures to service the instrument to the module level.

Optional Applications

- **Optional Applications Software for Tektronix Windows-Based Instruments (020-2700-XX)**. This DVD contains free time trials of optional application software that you can install on your instrument. These applications provide application-specific measurement solutions, such as power, jitter, optical storage, disk drive, and others.

Other Documentation

Your instrument includes PDF files of relevant information on the product software DVD, Tektronix part number 020-3026-XX.

For quick access to PDF files of the user manual, probe manuals, programmer guide, primers and applications, specifications and performance verification manual, service and installation manuals, and a printable version of the online help, click the Documentation icon on your instrument desktop.

What do you want to do next?

- [Find out about using online help. \(see page 34\)](#)
- [Learn how to access Tektronix Support. \(see page 16\)](#)
- [Provide feedback on this Tektronix product. \(see page 18\)](#)

Support Information

Tektronix offers the following services in support of our products:

- **Technical Support.** For application-related questions about a Tektronix product, [contact us by telephone or e-mail](#)).
- **Service Support.** For service-related questions about a Tektronix product, [contact us by telephone or e-mail](#)).

Tektronix also offers extended warranty and calibration programs as options on many products. Contact your local Tektronix distributor or sales office.

- **Write to Tektronix:**

Tektronix, Inc.

Department or name (if known)

14200 SW Karl Braun Drive

P.O. Box 500

Beaverton, OR 97077 USA

What do you want to do next?

- [Find out what other documents are available. \(see page 16\)](#)
- [Find out about using online help. \(see page 34\)](#)
- [Provide feedback on this Tektronix product. \(see page 18\)](#)

Feedback

Tektronix values your feedback on our products. To help us serve you better, please send any suggestions, ideas, or other comments you may have regarding your instrument.

- Direct your feedback to us via e-mail at www.tektronix.com/home/mytek/survey.

Include the following information in the subject field: "NEW and IMPROVED Scope Customer Feedback."

Please be as specific as possible.

Recommended Information to Include

- Instrument hardware, for example, display, chassis, and so on
- Application software version
- Probes

Optional Information

Your name, company, mailing address, phone number, and FAX number.

What do you want to do next?

- [Find out what other documents are available. \(see page 16\)](#)
- [Find out about using online help. \(see page 34\)](#)
- [Learn how to access Tektronix Support. \(see page 16\)](#)
- [Return to the beginning of the introduction. \(see page 1\)](#)

Analysis and Connectivity Support

This instrument includes tools you can install to support data export for use with data-analysis tools.

You can use the analysis and connectivity tools included with your instrument to do the following:

- Gather instrument data (waveforms and measurements) and port it to familiar, off-the-shelf, analysis tools, such as Microsoft Excel
- Interface with a popular software development environments, such as Lab Windows and LabVIEW

Click the following tools to find out how they can help you connect to your instrument and analyze the data that it collects:

- [VXI Plug-and-Play Instrument Driver \(see page 19\)](#)
- [TekVISA \(see page 19\)](#)

- [TekVISA ActiveX Control \(TVC\) \(see page 20\)](#)
- [TekVISA Excel Toolbar \(see page 20\)](#)
- [VXI 11.2 LAN Server \(see page 20\)](#)
- [Report Generator \(see page 20\)](#)
- [IVI Drivers \(see page 20\)](#)
- [Tek LXI \(see page 21\)](#)

For more information, see the *Getting Started with OpenChoice Solutions Manual*.

VXI Plug-and-Play Instrument Driver

The VXIplug&play instrument driver is a collection of software components, organized according to the standard VXIplug&play model established by the VXIplug&play Systems Alliance. Use this VXIplug&play instrument driver to simplify programming tasks when using the following software development environments:

- LabWindows/CVI
- LabVIEW
- MATLAB
- Visual C++ 6.0
- Visual Basic 6.0
- HP-VEE

TekVISA

TekVISA is a library of industry-standard compliant software components, organized according to the standard VISA model established by the VXIplug&play Systems Alliance. Use TekVISA in software to write interoperable instrument drivers to handle communicating between software applications and your oscilloscope. TekVISA offers the following features and benefits:

- Provides end users with a consistent methodology for using instrument drivers from a variety of vendors
- Provides programmers with language interface libraries for use with multiple application development environments, such as Microsoft C /C++, Microsoft Visual Basic, LabVIEW graphics software using the G language, and MATLAB analysis software.
- Provides a configuration utility for setting up additional VISA resources
- Allows software installation and connectivity on any number of PCs

TekVISA ActiveX Control (TVC)

The TekVISA Control (TVC) uses Microsoft Windows ActiveX control technology to simplify access from Microsoft Office and Visual BASIC applications to TekVISA and the underlying instrument.

This is accomplished by providing support for key TekVISA features within an ActiveX control object that is compatible with Excel's Visual BASIC for Applications, Visual BASIC 6.0, and other popular programming environments for Microsoft Windows.

TekVISA Excel Toolbar

The TekVISA Excel Toolbar allows direct, fast transfer of instrument measurements or captured waveforms to an Excel 97 and/or Excel 2000 worksheets. Transfer is via a toolbar that is integrated into Excel, implemented using the TekVISA ActiveX Control (TVC) and the Visual BASIC for Applications macro editor built into Excel.

Source code for the toolbar is accessible through Excel's built-in VBA editor for use as a learning tool for using the TekVISA ActiveX Control, or to cut-and-paste selected components to new VB applications.

VXI 11.2 LAN Server

The VXI 11.2 LAN Server provides software connectivity between your instrument and remote PCs over an Ethernet LAN. This tool is a client-side component built-in with TekVISA on each remote PC, you must install another copy of TekVISA to make use of its client-side component.

The VXI-11 standard specifies a protocol for communication with devices over a network via a network instrument server. This protocol uses the ONC/RPC (Open Network Computing/Remote Procedure Call) standard that, in turn, is based on TCP/IP.

Report Generator

Report Generator, a Microsoft Windows application, lets you create custom reports for displaying your oscilloscope data.

Report Generator enables you to generate and print reports directly from the oscilloscope, enhancing your application capabilities by simplifying the process of creating and maintaining reports.

IVI Drivers

IVI drivers conform to specifications produced by the IVI Foundation.

Unlike VXI-plugin&play drivers, IVI drivers provide a standard interface to different classes of instruments, including oscilloscopes and spectrum analyzers.

IVI drivers have the ability to simulate instruments, automatically check ranges, and multithread safety features.

Tek LXI


Tek LXI conforms to the LAN eXtensions for Instrumentation (LXI) standard. The LXI standard defines the communications protocols that allow communication with the instrument over a local area network (LAN).

About TekScope

From the Help menu, select About TekScope.

Overview

Provides the details of the instrument such as the model name, identification number, serial number, and version of the software that is installed. The options name and the key details of the applications that are installed in the instrument are also listed.

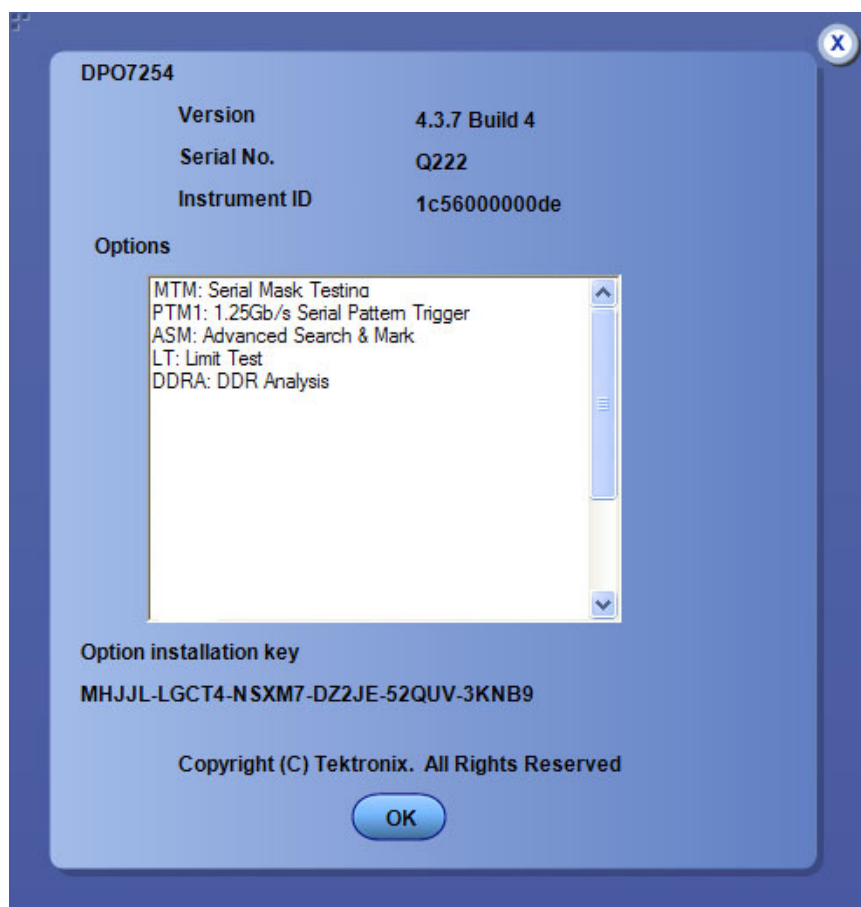

Windows Interface Guidelines

Because the instrument uses the Microsoft Windows interface, you have open access to the Windows operating system. You can access the Windows desktop to load and run other Windows-based applications such as Microsoft Excel, WordPad, and Paint.

Although you have access to the Windows interface, you should avoid making operating system changes that may cause problems or annoyances while trying to use the instrument. Here are some guidelines:

- The instrument has been tested with the version of Microsoft Windows provided and is not intended to operate with any other versions.
- If the instrument powers on in Windows Safe Mode, the touch screen is inoperative. You may need to use a mouse or keyboard to restore normal operation.
- To keep the start-up time to a minimum, keep the network support to a minimum.
- Be careful when making changes in the Control Panel. Avoid making changes to any controls with which you are unfamiliar.
- Do not change the LCD color quality (Highest 32 bit) and screen resolution settings (1024 by 768 pixels) or the video port may not work properly.
- Avoid using antivirus software on the instrument. If you must install it, disable it after use for best instrument performance.
- Some third-party applications may not work properly with the instrument. If your instrument stops working after you install third-party software, try reloading the instrument software from the product software DVD.
- If you do not have an external monitor attached to the instrument, avoid changing the taskbar properties to "Always on top" and "Auto hide." The Windows taskbar may obscure buttons or readouts on the screen. However, if you do have an external monitor attached and the instrument is set to dual monitor mode, you can drag the taskbar from the instrument display to the external monitor display and use these settings.
- Disable the Windows screen saver to prevent it from turning on while you are taking measurements or viewing the display. If the screen saver comes on while taking measurements, touch the screen (if the touch screen is installed and enabled), move the mouse, or press any key on the attached keyboard.
- Do not delete or change any system fonts. Changing or removing fonts may affect the quality of the display.
- Avoid changing the system Display Properties, such as the Background, Appearance, Effects, or Settings. Making such changes can affect the usability of the instrument and the touch screen.
- Avoid making changes to the contents of the Windows folder or to the contents of the TekScope folder.
- Avoid making changes to the BIOS settings. Changing the BIOS settings can affect the overall operation of the instrument.
- Avoid changing the Windows power management system.

If you think that your Windows interface may cause problems with the instrument, contact your local [Tektronix support center \(see page 16\)](#) for assistance.

Connecting to a Network

The instrument is built on a PC-based platform that runs Microsoft Windows as its operating system. Like any other Windows computer, you can connect the instrument to a network to enable printing, file sharing, Internet access, and other communications functions.

Use the Windows Remote Desktop feature to remotely access the instrument. On some older instruments with older software version, use the following procedure:

Installation. You must install Virtual Network Computing (VNC) or pcAnywhere on your instrument and on the remote PC.

Configuration. To make a network connection, perform the following steps to [enable network access \(see page 23\)](#).

To Use. To enable remote operation from the instrument, open the Display menu and select Display Remote. When Display Remote is enabled, display updates, control window accessing, and menu items may run slow.

TIP. Consult your network administrator for further assistance.

Enabling a Network Connection


Use the following steps to enable network access to the instrument. You must begin this procedure with the instrument powered off.

TIP. You may want to print these instructions before you proceed.


1. Attach a keyboard and mouse to the instrument.
2. Power on the instrument.
3. Use the Windows Network Connection Wizard to define the instrument as a network client and configure it for your network. You can find the network setup program in the Windows Start menu if you select Settings > Control Panel, and then double-click Network Connections.
4. Consult with your network administrator for specific instructions for these settings.

Tek LXI

Tek LXI conforms to the LAN eXtensions for Instrumentation (LXI) standard. The LXI standard defines the communications protocols that allow communication with the instrument over a local area network (LAN). After the TekScope application is running, the LXI application starts. The LXI system tray icon appears when LXI is running.

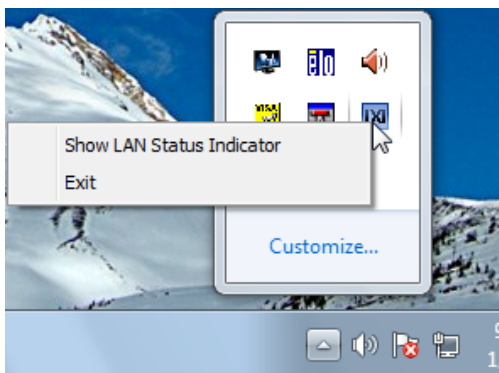


Right click on the icon and select Show LAN Status Indicator. LAN status is indicated in red or green with an appropriate message.

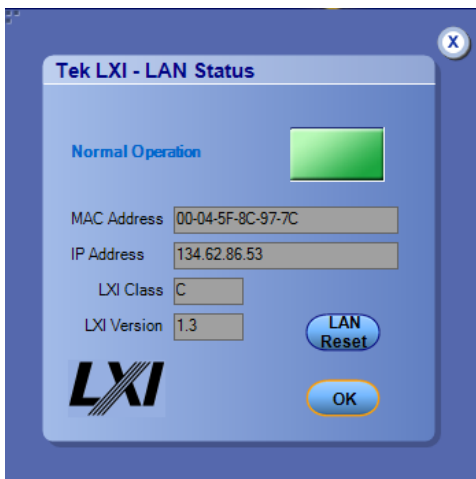


NOTE. Pushing the LAN Reset button does a LAN configuration initialization: enables DHCP, enables Auto-IP, enables ICMP ping responder, sets the Web password to default (No password), and updates the LXI XML identification. Refer to the LXI specification for more information.

Enter the IP Address in the Address Bar of your Web browser and click return. The browser finds and displays the instrument home page. Instrument information, instrument network information, and

instrument LXI information is displayed on the home page. Click on the SUPPORT Help link to see help on the Welcome Web page.

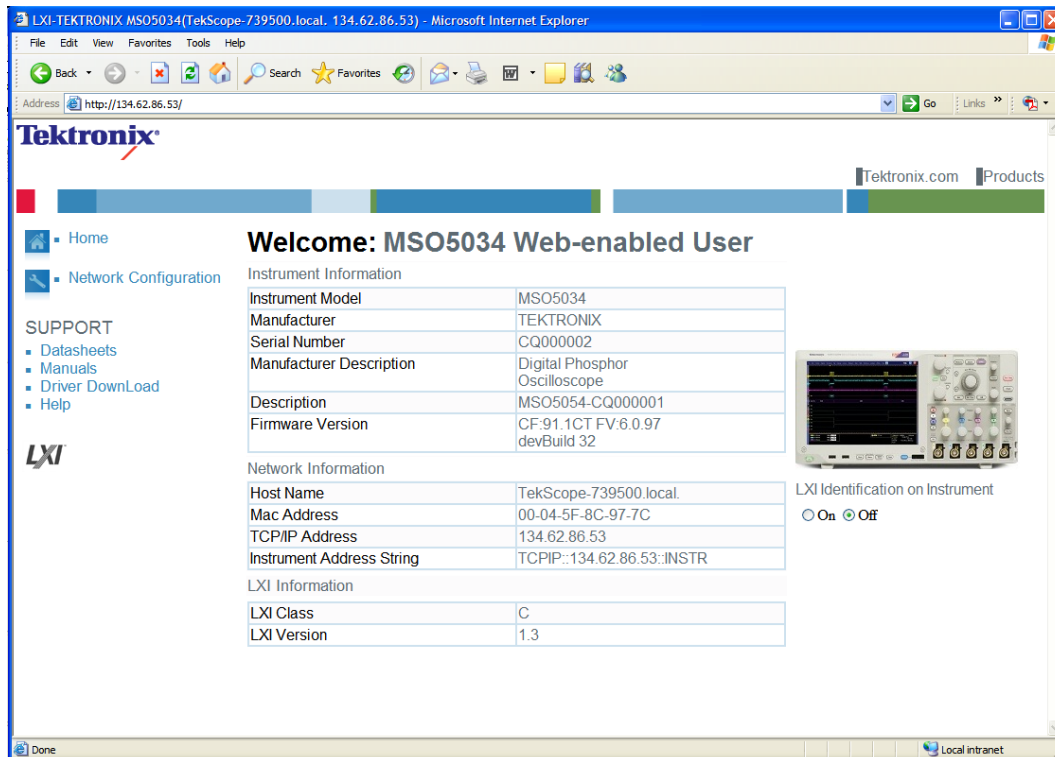

To display network configuration information, click on Network Configuration. The Web page displays the network configuration, and allows you to submit changes to some of the instrument configuration. Click on the Help SUPPORT link to see help on the configuration information.

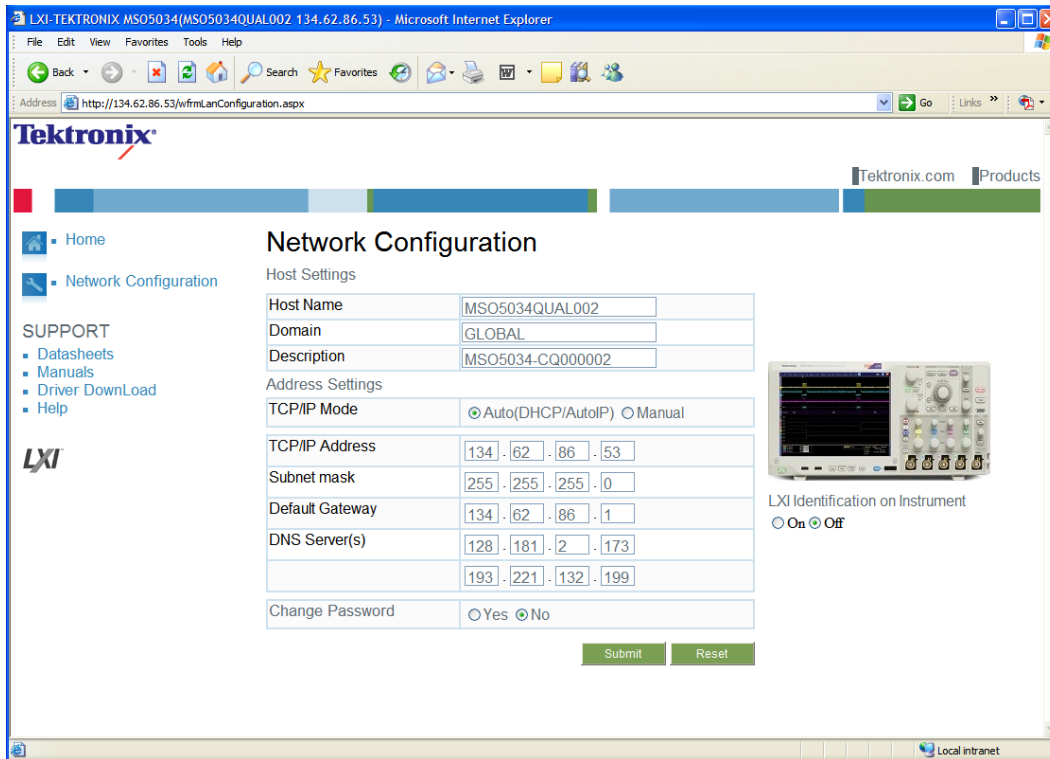

Click on Datasheets, Manuals, or Driver Download to go to the Tektronix Oscilloscopes Web page to access the information.

Printing a Hard Copy

To make hard copies, use a printer attached to one of the rear-panel ports or connect to a network printer, if your instrument is on a network.

You can print the full screen or just the graticule area.

The instrument uses Windows print drivers, so the process to install printers is the same as it is on any other PC.

The Page Setup dialog box contains some useful options to optimize your printing:

- Choose a print palette that is independent from the display palette. For example, you can print gray-scale images to a black and white laser printer while you choose to view the display in color. The color and gray scale palettes both render the intensity-graded waveform information generated by the DPO display.
- Choose the Ink Saver feature to print a hard copy with a white background. This function saves printer ink while it preserves the color coding of the waveforms and readouts. Ink Saver also works with the monochrome print palettes.

Using Other PC Applications

Transferring images and data from the oscilloscope to other PC applications is as simple as a copy/paste operation. With a word processing, spreadsheet, or analysis application running on the built-in PC, you can easily transfer the following items using the familiar Windows clipboard system:

- Copy a full screen or graticule-only image, and paste it into your document in either .bmp, .png, .pcx, .tif, or .jpg format.
- Copy a waveform, and paste the waveform data into a spreadsheet in a comma-delimited (.csv) format.
- Copy a waveform, and paste the waveform data into an analysis program in Mathcad (.dat) format.
- Copy the displayed values of all measurements, and paste them into a document in text (.txt) format.
- Copy the displayed values of all measurements, and paste them into a spreadsheet in a comma-delimited (.csv) format.

Using a Second Monitor

To optimize your access to the PC that is built into the oscilloscope, connect a keyboard, mouse, and monitor to the instrument, and then configure Windows for dual-display mode.

In this configuration, the oscilloscope retains full dynamic oscilloscope performance while Windows and other applications such as publishing, analysis, or Web browsing tools reside on the external monitor. You can copy/paste bitmap and waveform data from the oscilloscope to the locally running application or view Web-based reference information while using the oscilloscope for design work.

Dockable Windows

You can drag up to five dockable half-screen control windows from the TekScope application onto the display of a second monitor. For example, this feature allows you to have the Horizontal/Acquisition, the Horizontal Zoom, and the Display Setup Control Windows (half screen) open on the second monitor at the same time.

In addition to the five dockable windows on the second monitor, you can have one dockable window open on the main display. If you open a seventh dockable window, the window that has not been used for the longest amount of time will automatically close.

To drag a half-screen control window, click and drag on the left edge of the window.

Connecting to Other Instruments


- Use the rear-panel vertical signal output (Signal Out) to connect to a buffered version of the signal that is attached to the Channel 3 input (DPO7000 models only). The typical output amplitude is 50 mV/div $\pm 20\%$ into a 1 M Ω load, or 25 mV/div $\pm 20\%$ into a 50 Ω load.
- Use the rear-panel auxiliary output (Aux Out) to obtain a TTL-compatible, negative polarity pulse when the oscilloscope triggers, or when certain other events occur, such as a mask test failure or completion.
- Use the rear-panel external reference input (Ext Ref) to synchronize the oscilloscope time base to an external 9.8 MHz to 10.2 MHz reference frequency source. The reference input voltage range is 200 mVp-p to 7 Vp-p.


Using the Instrument Interface

You can use the familiar knobs and buttons on the oscilloscope front panel to perform most vertical, horizontal, and triggering functions. It allows you to make quick adjustments to your displayed signals with the dedicated vertical controls for each channel.

The screen interface gives you access to the complete functionality of the instrument. This user interface is built on the Windows operating system and has a similar look and feel. It is also fully compatible with a wide range of PC hardware and software accessories, such as networked instrumentation and printers.

The toolbar at the top of the screen is optimized for touch screen operation. Touching (or clicking) a button on the toolbar opens a [control window \(see page 29\)](#) that you can use to select the instrument settings. With a mouse, you may prefer to use the PC-style menu bar to open control windows or directly select many instrument settings.

Click the  button, in the upper-right corner of the screen, to switch between [Menu Bar Mode \(see page 29\)](#) and [Toolbar Mode \(see page 30\)](#).

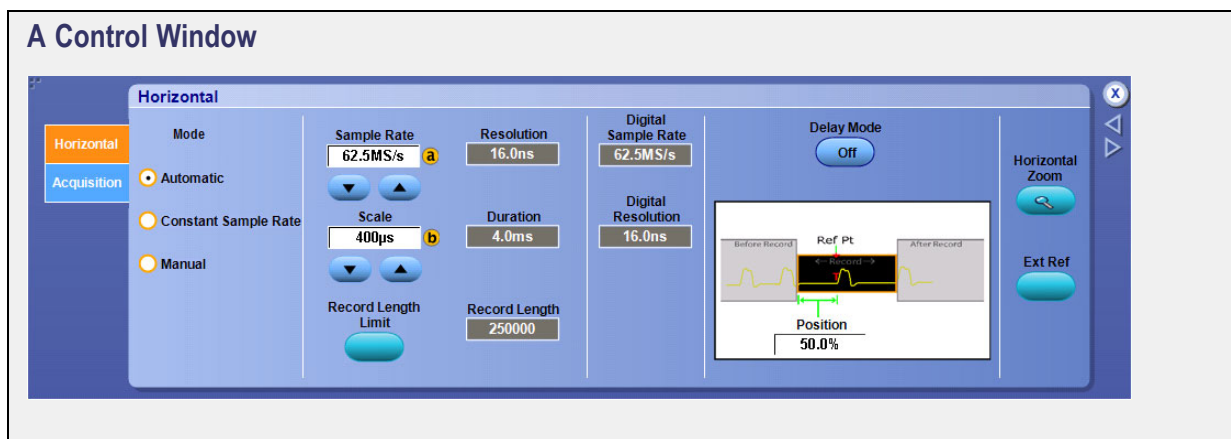

Menu Bar Mode

The menu bar menus provide access to commands that control all of the instrument features and functions.



When you select a feature setup command, the instrument displays the associated control window on the lower half of the screen. Each control window provides access to the individual instrument controls.

The display graticule is redrawn to fit in the upper half of the screen.

What do you want to do next?

- [Display help on the File menu. \(see page 665\)](#)
- [Display help on the Edit menu. \(see page 659\)](#)
- [Display help on the Vertical menu. \(see page 787\)](#)
- [Display help on the Digital menu. \(see page 653\)](#)
- [Display help on the Horizontal/Acquisition \(Horiz /Acq\) menu. \(see page 675\)](#)
- [Display help on the Trigger \(Trig\) menu. \(see page 780\)](#)
- [Display help on the Display menu. \(see page 656\)](#)
- [Display help on the Cursors menu. \(see page 644\)](#)
- [Display help on the Measurement \(Measure\) menu. \(see page 716\)](#)
- [Display help on the Math menu. \(see page 711\)](#)
- [Display help on the Mask menu. \(see page 702\)](#)
- [Display help on the Analyze menu. \(see page 787\)](#)
- [Display help on the Utilities menu. \(see page 787\)](#)

- [Display help on the Help menu. \(see page 34\)](#)

Toolbar Mode

The toolbar buttons give you instant access to most instrument features without having to navigate through several menus.



Click a toolbar button to display an associated control window on the lower half of the screen. Each control window provides access to the individual instrument controls. The display graticule is redrawn to fit in the upper half of the screen.

Not all features of the instrument are accessible from the toolbar. To access some of the less common controls, you can change to [Menu Bar Mode \(see page 29\)](#). To do this, click the Menu button (with the arrow) in the upper-right corner of the screen.

You can also customize the toolbar to add menus you use more frequently. Click the Menu button (with the arrow) to see the list of menus you can add and to access the Customize Toolbar dialog box.




What do you want to do next?

- [Display help on the Vertical Setup control window. \(see page 355\)](#)
- [Display help on the Digital Setup control menu. \(see page 81\)](#)

- [Display help on the Horizontal/Acquisition Setup control window. \(see page 155\)](#)
- [Display help on the Trigger Setup control window. \(see page 289\)](#)
- [Display help on the Display Setup control window. \(see page 139\)](#)
- [Display help on the Cursors Setup control window. \(see page 67\)](#)
- [Display help on the Measurement Setup control window. \(see page 234\)](#)
- [Display help on the Math Setup control window. \(see page 209\)](#)
- [Display help on the Mask Setup control window. \(see page 177\)](#)
- [Display help on the Save As dialog box. \(see page 403\)](#)
- [Display help on the Recall dialog box. \(see page 398\)](#)
- [Learn to Customize the Toolbar. \(see page 32\)](#)

Customize the Toolbar

The Customize option of toolbar mode gives you access to add or remove menu buttons, configure the order of the menu buttons, and set the toolbar back to its default configuration. You can customize the toolbar to view the menu buttons that you use more frequently.

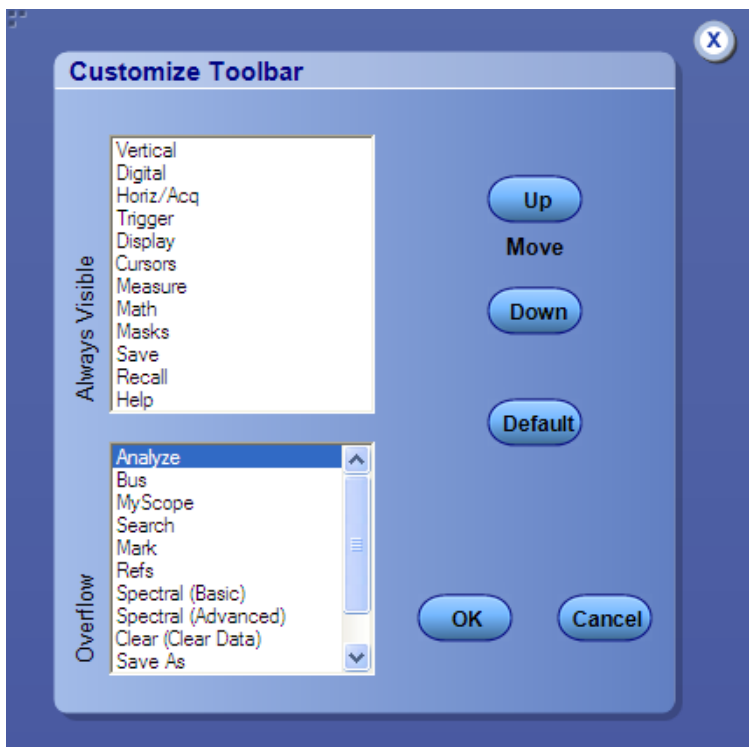


To access some of the less common controls, click the [Menu Bar Mode \(see page 29\)](#). To do this, click the Menu button (with the arrow) in the upper-right corner of the screen and select Customize to display the Customize Toolbar dialog box.

Use the Up and Down buttons to move buttons within or between the Always Visible and Overflow panes.

Click the Default button to restore the default configuration on the toolbar.

User Interface Map

See the next figure for a description of the elements of the user interface. These elements provide complete control of the instrument.

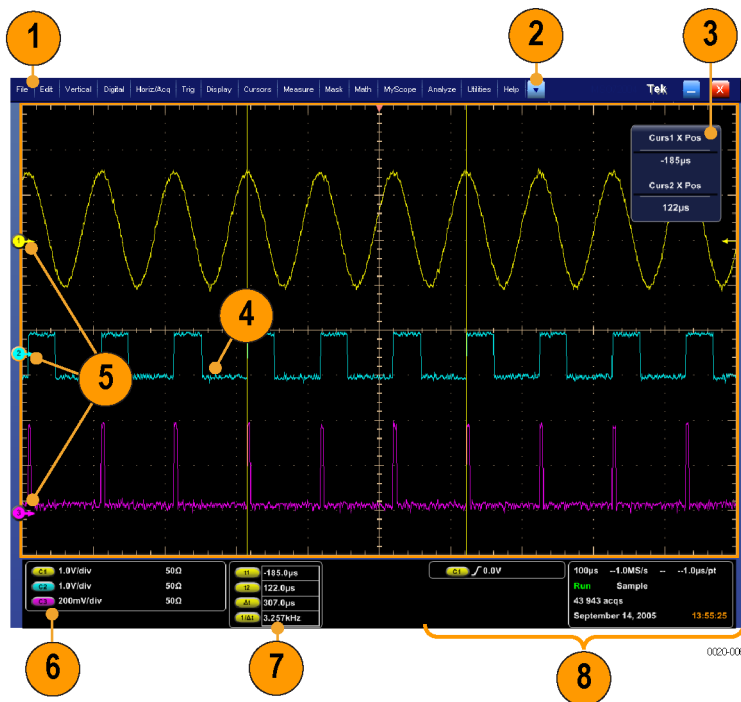

1. **Menu bar:** Access to data I/O, printing, online help, and instrument functions.
2. **Buttons or Menu bar:** Click to toggle between toolbar and menu bar modes.
3. **Multipurpose knob readouts:** Adjust and display parameters controlled by the multipurpose knobs.
4. **Display:** Waveforms from live, reference, math, and digital channels display here, along with buses and cursors.
5. **Waveform handle:** Click and drag to change the waveform vertical position.
6. **Controls status:** Quick reference to vertical selections, scale, and parameters.
7. **Readouts:** Display of cursor and measurement readouts in this area. You can select measurements from the menu bar or toolbar. If a control window is displayed, some combinations of readouts move to the graticule area.
8. **Status:** Display of acquisition status, mode, and number of acquisitions; trigger status; date; time; quick reference to horizontal parameters.

Using Online Help

The online help is designed to assist you with all the features of the instrument.

Context-Sensitive Help

Use the instrument online help to quickly get information about a function or assistance in performing a task:

- In Toolbar mode, click Help to display online help for the active window.
- From the menu bar, click Help to display a list of help options.
- If you are using the touch screen, you can touch the Help button in either mode.
- The keyboard F1 function key displays help for the active window in either mode.

Microsoft Windows Help

Help is also available as part of Windows. For information about Windows features, refer to the Windows online help by clicking Start in the Windows toolbar, and then selecting Help and Support.

What do you want to do next?

- [Learn how to navigate the online help. \(see page 34\)](#)
- [Find out what other documents are available. \(see page 16\)](#)
- [Learn how to contact Tektronix Support. \(see page 16\)](#)
- [Provide feedback on this Tektronix product. \(see page 18\)](#)
- [Provide information about Tekscope \(see page 21\)](#)

Navigating the Online Help

To open the online help select Help, and then select Contents and Index. From the online help finder, select one of the following tabs:

- **Contents Tab.** Click any entry to display information on the subject.
- **Index Tab.** Double-click an entry to display information on the subject. Or, enter a keyword you are looking for (the list scrolls to that topic). Click Display to open the topic.
- **Search Tab.** Type in the keyword you are looking for; then click List Topics. Every topic that contains the keyword will be displayed. Select a topic, and then click Display to open the topic.
- **Favorites Tab.** To save the current topic to the Favorites list, click the Favorites tab; then right-click and select Add. Double-click to return to a topic at any time.


What do you want to do next?

- [Find out what other documents are available. \(see page 16\)](#)

ESD Precautions

To avoid damage to the instrument, observe the following ESD (electrostatic discharge) precautions:

- Before you apply power, connect the instrument to an electrically-neutral reference point, such as earth ground. To do this, plug the three-pronged power cord into an outlet grounded to earth ground.
- If you are working with static sensitive components, ground yourself. Static electricity that builds up on your body can damage static-sensitive components. Wear a wrist strap to safely send static charges on your body to earth ground.

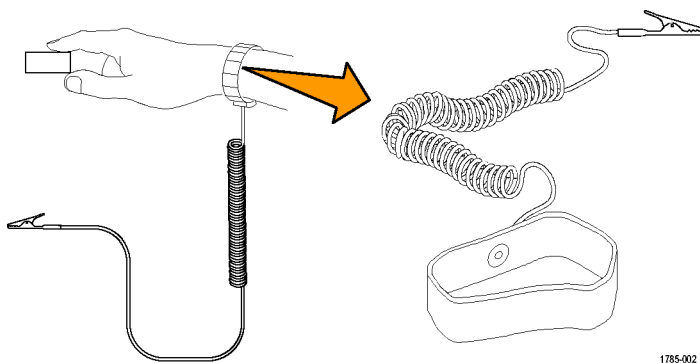

Grounding the oscilloscope is necessary to ensure safety and to take accurate measurements. The oscilloscope must share the same ground as any circuits that you plan to test.

Changing Control Settings

As you configure the instrument, you may need to set a numerical parameter such as a reference level or delay time.


There are several different ways to set these parameters in a control window:

- Touch or click the parameter to select it. Once selected, one of the [multipurpose knobs \(see page 36\)](#) is assigned to the parameter.
- To adjust a setting, turn a front panel upper knob (a) or lower knob (b) as indicated by the [knob graphic indicator \(see page 37\)](#) next to the control window parameter.
- Push the front panel Fine button to use the knob to make small changes, for example to add another decimal place for greater accuracy.


This online help usually refers to using the multipurpose knobs to change control settings, although the following methods are generally available:

- Some parameters with discrete values have [increment/decrement buttons \(see page 37\)](#). Touch or click them to change to the next available value.
- Some parameters supply a [pop-up keypad \(see page 38\)](#) or keyboard that you can use to enter a new value.
- If you have an external keyboard attached, you can also use it to type in a new value.
- You can also adjust parameter values using the mouse wheel. Press the mouse wheel to access fine mode. Press it again to return to normal mode.



The Multipurpose Knobs



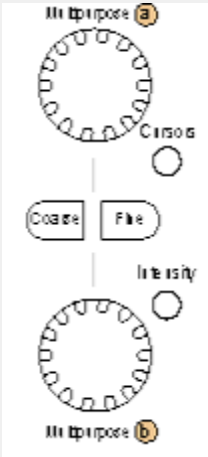



The multipurpose knobs on MSO/DPO5000 Series instruments are as follows:

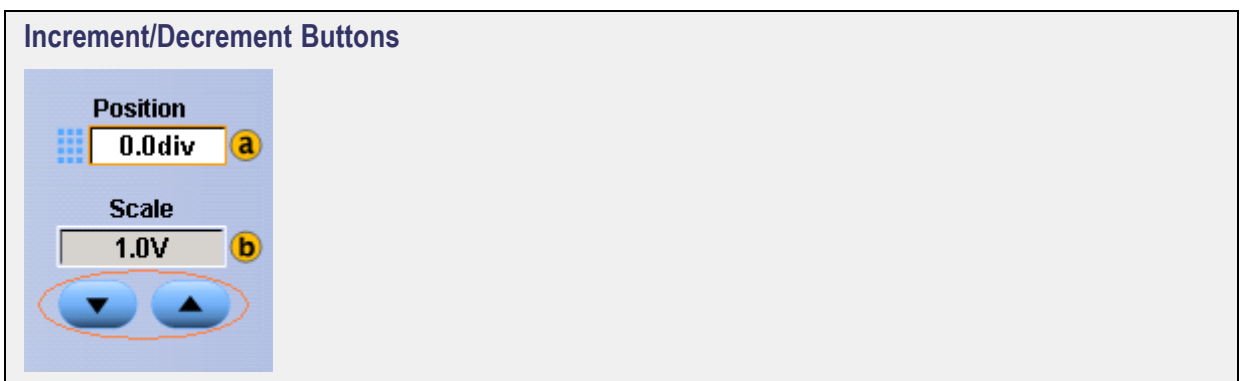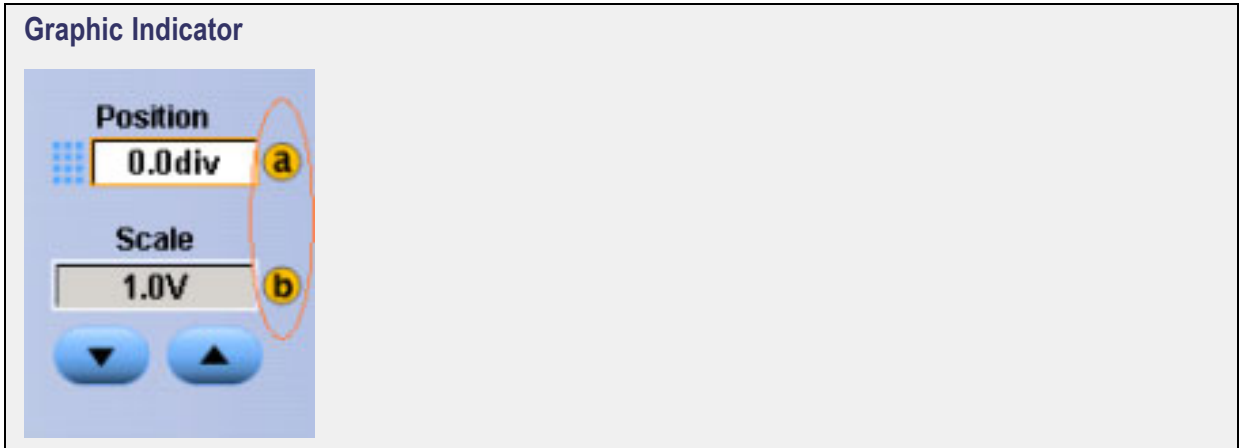

The diagram shows a circular knob with a ring of small buttons around its perimeter. Below the knob are two buttons labeled 'Coarse' and 'Fine'. To the right of the knob is a small circular knob labeled 'Intensity'. The text 'Cursor' is positioned between the main knob and the 'Intensity' knob. The main knob is labeled 'Multipurpose (a)' at the top and 'Multipurpose (b)' at the bottom.



 Pop-up Keypad

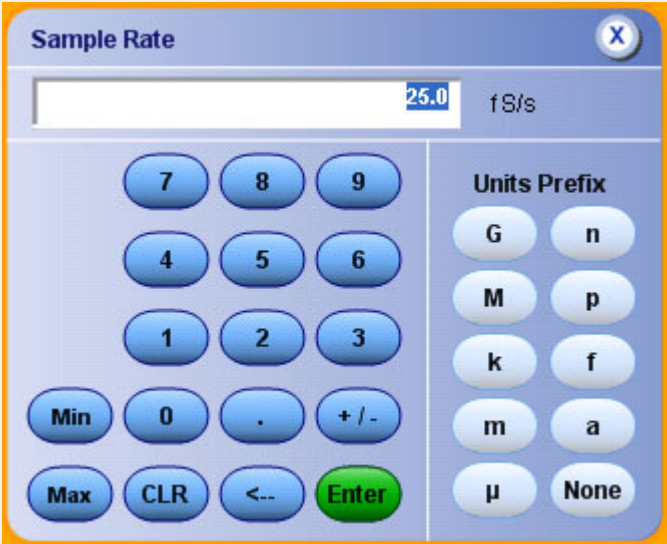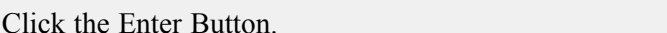
- Click in a data entry box.
 
- Click on the keypad icon.
 
- Use the pop-up keypad to enter data.
 
- Click the Enter Button.
 

Moving and Docking Control Windows

Control windows that open on the lower half of the screen can be moved to any location. To do this, move the cursor to the upper left-most corner of the window until the hand appears. Left-click the mouse button to grab the [handle](#) (see page 39). Hold the button and drag with the mouse to another position on the screen.

You can move freely to any position on the screen or to a second monitor (if you have set up a dual display) by dragging the window. All controls on the window can be accessed and function as usual.

NOTE. *The window cannot be resized.*

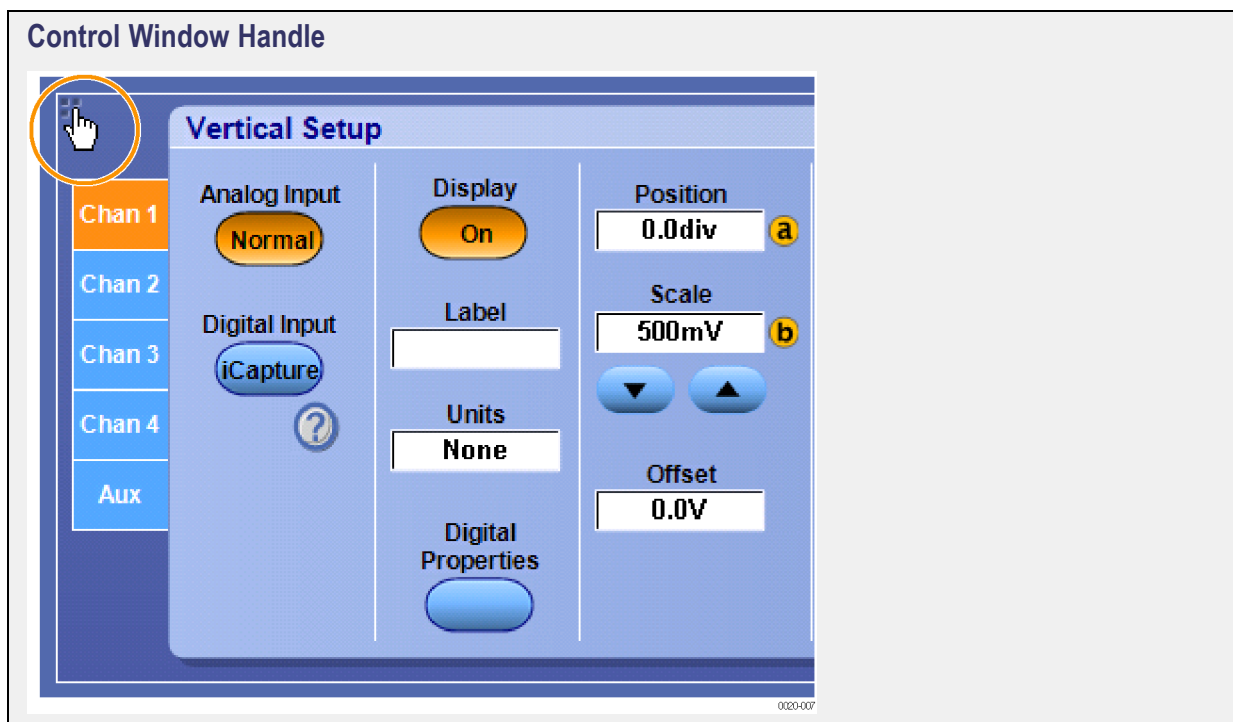


Controlling from within the Graticule Area

Use the mouse or your finger in the graticule area to click and drag (or touch and drag) the following:

- An on-screen cursor to another position on the waveform.
- A [waveform handle](#) (see page 40) to change the vertical position of a waveform.
- A [waveform label](#) (see page 40) or other screen text that you have entered to reposition it.
- The [horizontal reference marker](#) (see page 40) to set the horizontal position.
- The [trigger level marker](#) (see page 40) to set the trigger level.

You can also click and drag (or touch and drag) across part of a waveform to select it and investigate it further. Once the selection is made, choose one of the following actions:

- Create a Zoom waveform that covers just the selected area
- Create a histogram to analyze the selected area
- Turn on measurement gates that take measurements only in the selected area
- Cancel the selection

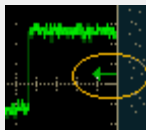Waveform Handle**Waveform Label****Horizontal Reference Marker****Trigger Level Marker**

Accessing Shortcut Menus by Right-Clicking

You can right-click to gain quick access to most common commands.

Right-click on a graticule, an object, or a readout to access their shortcut menus. The menus are dynamic; their contents will vary, depending on the area or the object you right click.

You can right-click on any of the following to open a dynamic shortcut menu:

- Waveform handle
- Cursors
- Labels
- Histogram display
- Masks
- Templates

- Trigger level marker
- Readouts (the menu varies with the type of readout)
- Graticule
- Control window
- Entry boxes
- Regions (Menu bar, Toolbar, Multipurpose Knobs)

Creating Your Own Control Windows

For quick access to the controls that you use most often, you can create your own [MyScope control window \(see page 283\)](#). Choose from a list of controls to include, and make each control window unique to your needs.

MyScope allows you to have up to eight tabs in a control window, increasing the flexibility and ease of use for your unique MyScope control windows. You can create and save any number of controls windows for future use.

Initializing the Instrument

After you complete a task, you may want to initialize the instrument settings before using the instrument with your next task. This may be especially important if you share the instrument with others; previous settings may make it difficult for you to perform the required task.

To quickly restore the instrument to its default settings, push the front-panel Default Setup button.

If data security is important to you, use the TekSecure Erase feature to overwrite all internal waveform and setup memory with null values.

Choosing and Connecting Probes



CAUTION. To avoid damage to the instrument, observe [ESD \(electrostatic discharge\) precautions \(see page 35\)](#).

Choose from a wide variety of passive, active, and specialty probes to use with your instrument. The instrument automatically configures the input impedance when you attach a probe that is compatible with the TekProbe or TekVPI interface.

Remember the following when connecting a probe:

- For most passive probes, adjust the low-frequency compensation after you connect them to a channel input.
- To compensate for gain (and offset) error in many probes, connect the probe tip to the probe compensation connectors; then execute the built-in calibration procedure to optimize system accuracy.
- To compensate for propagation delay differences between voltage probes using the probe deskew feature, attach up to two probe tips at a time to the probe compensation terminals; then execute the deskew procedure to time align the display for each channel. The deskew adjustment range is ± 75 ns.

Triggering, Timebase, and Horizontal Delay

The architecture of an analog oscilloscope requires its time bases and triggering to be linked. The main trigger triggers the main time base, and then you can use a delayed trigger to trigger a delayed time base. Many digital oscilloscopes have also been designed using this traditional, but complex, paradigm.

This instrument uses a simpler paradigm that cleanly separates the concepts of triggering and time bases. You can still do everything that you could with an analog oscilloscope and more. Now these features are easier to set up and use.

The trigger event can be simple or complex. Examples of a simple trigger are the rising edge of the Channel 1 signal or a glitch narrower than 10 ns on Channel 2. You can set up a complex trigger where the trigger system is armed by a condition on one channel and then is triggered by a condition on another channel. In either case, simple or complex, there is just one trigger event.

The time base can be either delayed or not delayed. If it is not delayed, acquisition occurs surrounding the trigger event depending on the amount of [pretrigger \(see page 43\)](#) and [posttrigger \(see page 338\)](#) data that you have selected. If you turn on horizontal delay, you can delay the acquisition to a point well beyond the trigger event (similar in effect to a delayed time base). By alternately turning horizontal delay on and off, you can make quick, detailed comparisons between two segments of a signal that are separated from each other by a fixed amount of time. In any case, the time base is always triggered by one trigger event.

Pretrigger Data

The data points of the waveform acquired and displayed before the trigger event. You can set the amount of pretrigger data with the Horizontal Position control.

Looking at Waveform Details

Use the instrument Zoom function to magnify an acquisition vertically, horizontally, or in both dimensions to let you see the fine detail in your signals. The MultiView Zoom function affects only the display, not the actual waveform that is being acquired.

Zoom Set Up

The fastest way to set up a MultiView Zoom display is to click (or touch) and drag across the segment of the waveform that you want to see in greater detail. Then, when you touch or click the [on-screen Zoom menu item \(see page 44\)](#), that waveform appears in the Zoom (lower) graticule, while the entire waveform appears in the Acquisition (upper) graticule. Markers in the main graticule give you position context for what you are seeing in the Zoom graticule.

Another way to set up the MultiView Zoom function is to push the front-panel [MultiZoom button \(see page 44\)](#). Then you can set parameters in a control window to focus your Zoom waveform on the signal segment of interest.

To see more waveform detail you can also use horizontal delay (as described in the [previous topic \(see page 45\)](#)) to focus the acquisition on a segment of a waveform separated from the trigger event by a significant interval of time. This technique lets you increase the horizontal resolution (sample faster) on a segment of a signal, even when you cannot trigger on that particular segment.


Zoom Function

The Zoom function also allows you to zoom on multiple areas of a waveform or on multiple waveforms simultaneously. You can lock the zoomed areas and scroll through them together or unlock the zoomed areas and scroll through them independently.

The On-Screen MultiView Zoom Menu Item

Zoom 1 On
Zoom 2 On
Zoom 3 On
Zoom 4 On
Histogram Vertical
Histogram Horizontal
Measurement Gating ▶
Zoom Off
Histogram Off
Measurement Gating Off
Cancel

The Front-Panel MultiView Zoom Button



Triggering, Timebase, and Horizontal Delay

The architecture of an analog oscilloscope requires its time bases and triggering to be linked. The main trigger triggers the main time base, and then you can use a delayed trigger to trigger a delayed time base. Many digital oscilloscopes have also been designed using this traditional, but complex, paradigm.

This instrument uses a simpler paradigm that cleanly separates the concepts of triggering and time bases. You can still do everything that you could with an analog oscilloscope and more. Now these features are easier to set up and use.

The trigger event can be simple or complex. Examples of a simple trigger are the rising edge of the Channel 1 signal or a glitch narrower than 10 ns on Channel 2. You can set up a complex trigger where the trigger system is armed by a condition on one channel and then is triggered by a condition on another channel. In either case, simple or complex, there is just one trigger event.

The time base can be either delayed or not delayed. If it is not delayed, acquisition occurs surrounding the trigger event depending on the amount of [pretrigger \(see page 43\)](#) and [posttrigger \(see page 338\)](#) data that you have selected. If you turn on horizontal delay, you can delay the acquisition to a point well beyond the trigger event (similar in effect to a delayed time base). By alternately turning horizontal delay on and off, you can make quick, detailed comparisons between two segments of a signal that are separated from each other by a fixed amount of time. In any case, the time base is always triggered by one trigger event.

Using Fast Acquisition and DPO





When you turn on [FastAcq \(see page 46\)](#), you can acquire up to 250,000 waveforms per second. In fast acquisition mode, the [dead time \(see page 46\)](#) between acquisitions can be very short, approaching that of the finest analog oscilloscopes. Reduced dead time means that your chances of capturing an infrequent event are greatly improved. More time is spent acquiring and displaying your signal. And with the digital phosphor (DPO) technology, you can easily differentiate between the normal shape of your signal and that infrequent anomaly that you want to capture.

As a comparison, high quality [analog real-time oscilloscopes \(see page 46\)](#) can sweep at high repetition rates with little dead time between sweeps, which makes it possible to capture an infrequent event. Typical [digital oscilloscopes \(DSOs\) \(see page 46\)](#) have relatively long dead times between acquisitions; infrequent events are much more difficult to capture. With fast acquisition and digital phosphor technology, the oscilloscope acquires at a high repetition rate and then overlays the acquired information into a three-dimensional database that is updated on the display 30 times per second.

The digital phosphor oscilloscope shows you not only the displayed waveform, but also the sample density. You can choose to see sample density represented in a color palette or as shades of gray or shades of green. The DPO display in monochrome green bears a strong resemblance to the CRT of a high-quality analog oscilloscope. When you increase waveform brightness with the front-panel Intensity knob, areas of lower sample density appear more clearly.

DPO provides display benefits, whether fast acquisition is on or off. When it is on, DPO helps you identify an infrequent anomaly in a repetitive signal, especially when either the spectral or temporal color palettes are used. The repetitive signal appears in one color and the anomalies appear in another. When

fast acquisition is off, DPO improves the waveform display quality when long records are compressed for display with the 1000 horizontal pixels in the graticule. The compression algorithm works with the intensity-graded display to show brighter pixels where many points have been compressed and dimmer pixels where fewer points have been compressed.

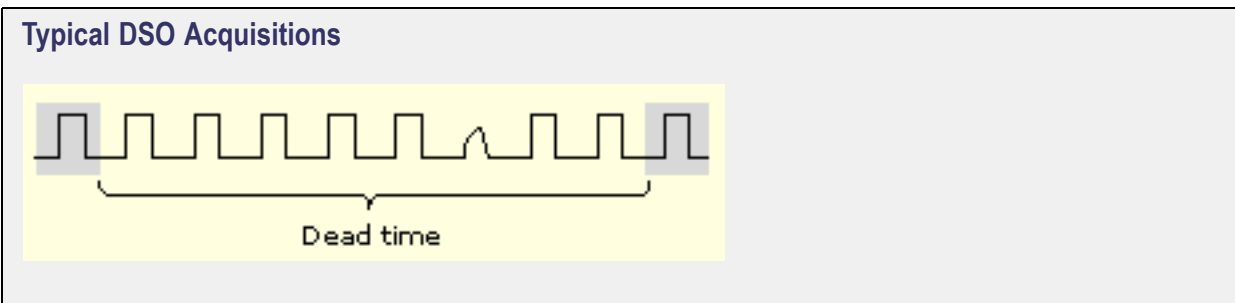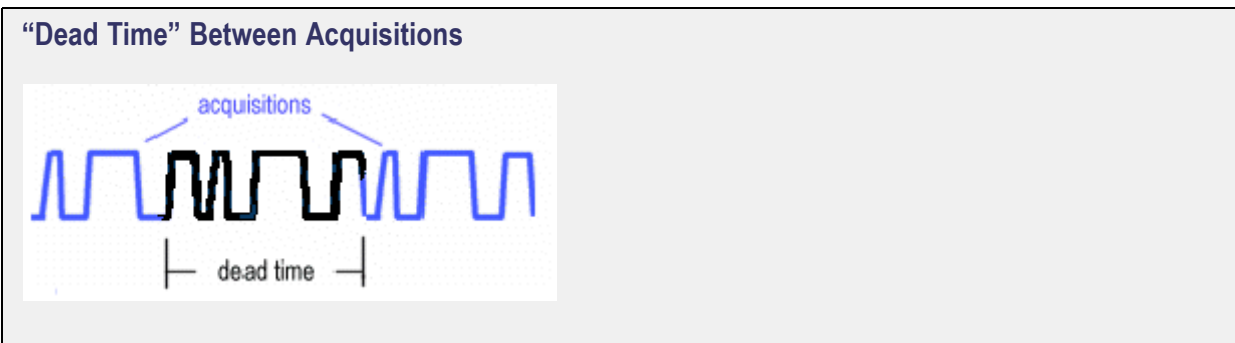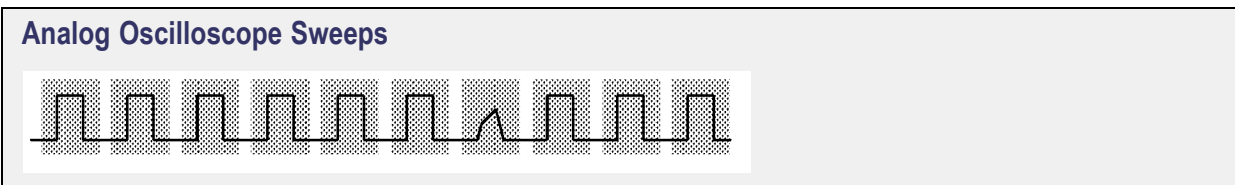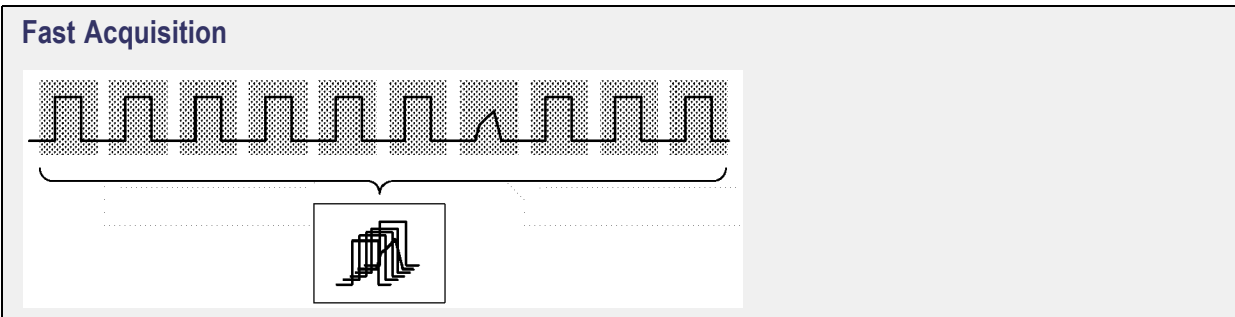

Using Logic Waveforms

NOTE. *This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.*

The instrument can display logic waveforms of analog or digital signals in bus views with bus decoding. You can use digital, analog, and math waveforms to define up to 16 buses (serial or parallel) in the Bus Setup window.

You can use a logic probe to connect the D15-D0 channels to signals in your system under test. If you need more than 16 digital channels in a bus, you can designate Ch1-Ch4 and Math1-Math4 to be logic waveforms in the Bus Setup window.

The instrument acquires and displays data from digital signals as follows:

- Stores a high or low state of the logic waveform for each sample. You can set the voltage threshold level on individual channels.
- Depicts data as a waveform, a busform, or both.
- Decodes data as numeric or symbolic values.
- Displays a logic high level as green and a logic low level as blue.
- Color codes the channel labels and on-screen indicators for the D15-D8 and the D7-D0 channels that follow the color code used on the logic probes.
- Adds custom labels for easier channel-to-signal identification.
- Uses iCapture to display the analog view of up to four signals connected to the logic probe. If you want to see the analog characteristics of signals connected to the logic probe, you can assign up to four of the D15-D0 channels to the Ch1-Ch4 function with iCapture.

NOTE. *iCapture is available on MSO70000/C Series instruments.*

What do you want to do next?

- [Learn about iCapture. \(see page 649\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Using Waveform Math

Waveform math in the instrument can be as simple as basic arithmetic or as powerful as building a complicated math expression.

Equation Editor

You can build a complicated math waveform expression using multiple waveform sources, constants, variables, operators, and functions. The waveform sources can be any channel, reference, or math waveform.

You can enter constants with a keypad. Live results from the measurement system can be used as variables, and there is a full assortment of arithmetic operators and math functions to use. As you enter the waveform expression, you will see it appear as an equation in the control window.

You can define up to four separate math waveforms.

Using Spectral Analysis

When you are displaying an FFT (spectral) math waveform, you can use either of these two ways to operate the instrument:

- Use the conventional time-domain instrument controls, such as vertical and horizontal position and scale.
- Use the spectrum analyzer controls, such as center frequency, span, resolution bandwidth, and reference level.

When you use the Basic Spectrum Analyzer controls, the instrument automatically sets its time domain parameters, including record length and sample rate, as necessary to give you the view of the spectral waveform that you want to see. You can switch back to using the conventional time-domain controls at any time.

Spectral waveforms can be simple magnitude or phase waveforms calculated from the data acquired on a single channel. Or you can combine spectral operations with other math operations to do complex analysis of your signals.

Characterizing a Signal

Signal characterization begins with taking measurements. To gain even more insight into your measurements, you can add measurement statistics to calculate the average measurement value, the standard deviation, and the maximum range of the measurement value.

Another way to characterize a signal is to compile a histogram from the acquired waveform. You can set up either a vertical histogram to analyze amplitude values or a horizontal histogram to analyze timing. For example, the vertical histogram is useful for characterizing noise and the horizontal histogram is useful for characterizing jitter.

While the histogram is being compiled from the acquired waveform, you can take continuous measurements on the histogram data to determine its mean value and other useful statistics.

Application-Specific Measurements

You can load optional measurement extensions as needed to enhance the capabilities of the instrument for specific applications. These applications build on the precision signal acquisition performance of the instrument to address your specific design requirements.

Here are some examples of the application packages:

- **Jitter and Timing Analysis.** Use the JA3 Advanced or JE3 Essentials software to characterize the timing performance of semiconductor systems. Analyze clock jitter, setup and hold times, and many other timing measurements on a cycle-by-cycle basis over long, single-shot acquisitions. Measurement statistics are presented as numerical statistics, or graphically in a histogram, cycle trend, time trend, or spectral plot.
- **Disk Drive Measurements.** Use the TDSDDM2 software to measure disk drive signals according to IDEMA standards.
- **Ethernet Compliance Testing.** Use the ET3 software to perform 10/100/1000 Base T Ethernet compliance testing.
- **USB Signals.** Use the USB2 or USB3 software to characterize USB 2.0 or USB 3.0 universal serial bus signals, including mask testing and parametric testing.
- **Mask and Measurement Compliance.** Use the CP2 software for mask and measurements compliance testing for ITU-T G.703 and ANSI T1.102 communications standards.
- **Power Measurements.** Use the PWR software to quickly measure and analyze power dissipation in power supply switching devices and magnetic components.
- **DDR Memory Bus Analysis.** Automatically identify DDR1, LP-DDR1, DDR2, DDR3, and GDDR3 Reads and Writes and make JEDEC conformance measurements with pass/fail results on all edges in every Read and Write burst.
- **MIPI® D-PHY Characterization and Compliance Testing.** Verify to the D-PHY specification, rapidly characterize and discover sources of jitter and signal integrity concerns.

- **Ultra-Wideband Spectral Analysis and Ultra-Wideband Spectral Analysis Essentials UWBE.** Ultra-Wideband microwave, optical, and electrical signals require more real-time bandwidth than is possible with spectrum analyzer based solutions. Spectral Analysis and Digital Down Conversion of RF data is fast and easy and the down-converted frequency span of interest may be exported for further analysis in tools such as RSAVu and MATLAB.
- **SignalVu™ Vector Signal Analysis.** Easily validate wideband designs and characterize wideband spectral events.
- **CAN and LIN Timing and Protocol Decode Software.** When you need to ensure seamless and reliable operation of a CAN or LIN network, this option enables CAN bus triggering and provides the solution to measure oscillator tolerance, propagation delay, and simultaneously decode CAN and LIN messages, with the protocol leveraging the trigger capabilities.


Additional packages may be available. Contact your Tektronix representative for more information.

Front Panel Overview


The instrument features the following front-panel controls and connectors.

1. DVD/CD-RW drive
2. Front-panel controls
3. USB port
4. [Ground terminal \(see page 53\)](#)
5. Recovered data output
6. Recovered clock output
7. [Probe compensation output \(see page 52\)](#)
8. [PROBE CALIBRATION output \(see page 52\)](#)
9. [Channel 1 - 4 inputs \(see page 52\)](#)
10. [Auxiliary trigger input \(see page 52\)](#)


For all DPO7000/C, MSO/DSA/DPO70000/B/C models:

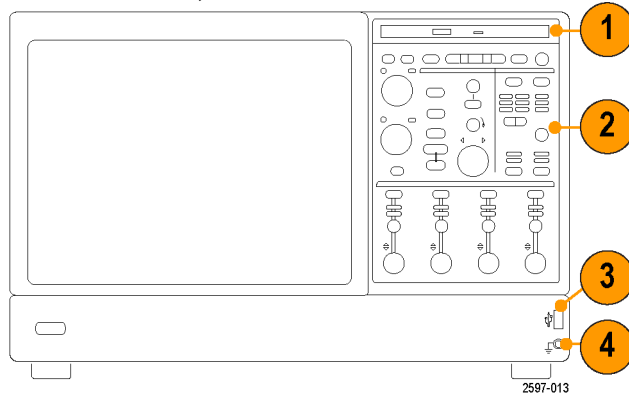


Only for MSO5000 and DPO5000 models:

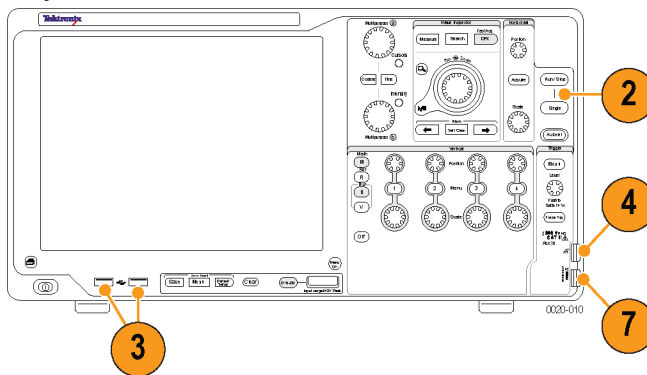

For DPO7000/C Series models:

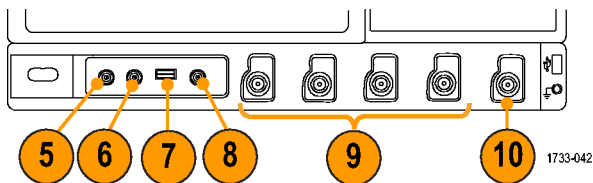


For ≥ 4 GHz models:

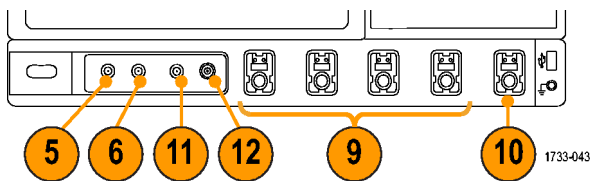

11. Fast Edge output used for [probe compensation \(see page 52\)](#)
12. DC Probe Cal output


For MSO70000/C, DPO70000C, and DSA70000C models:

13. [Logic probe input \(see page 52\)](#)
[On / Standby switch \(see page 53\)](#)

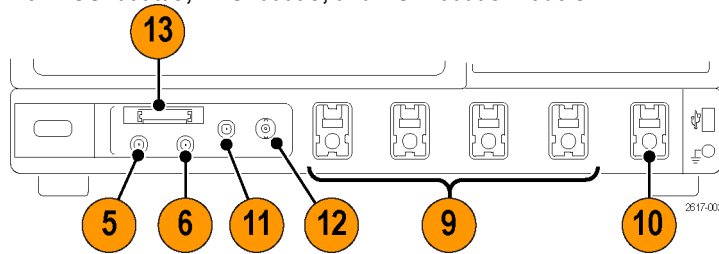

For MSO5000 and DPO5000 models:

14. Clear button
 15. Save/Recall buttons
 16. Digital Channel setup menu
 17. Menu Off button
 18. Print screen image button

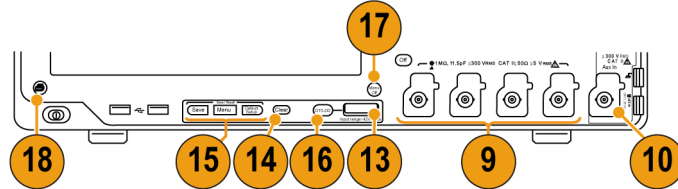

Probe Compensation Output

Use the Probe Compensation output to compensate or deskew passive probes or active voltage probes. On some models, this is the Fast Edge output.

Probe Calibration Output

Use the Probe Calibration output to calibrate or deskew passive or active voltage probes.

Channel 1–4 Inputs

You can connect up to four probes to the inputs of the instrument. Each vertical input channel has its own vertical control settings. Each probe input channel has its own TekProbe/TekVPI interface.

D15–D0 Inputs


You can connect one logic probe to the logic port on the front of the instrument. Each digital channel has its own control settings.

Auxiliary Trigger Input

The trigger level range for the Auxiliary Input is adjustable from +8 V to –8 V. The maximum input voltage is ± 20 V.

On/Standby Switch

Use this button to power on the instrument or to set the instrument to standby.

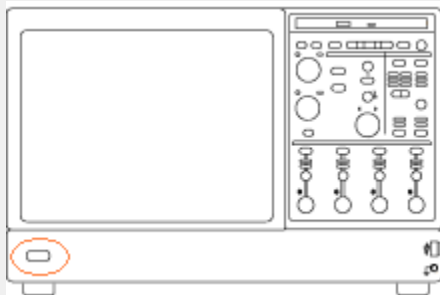

Before shutting down, it is recommended that you first exit the instrument application and any other active Windows applications to avoid error messages on shutdown or the next power up.

TIP. To exit the instrument application and shut down in one step, select Shutdown in the File menu.

Ground Terminal

Use this terminal to connect the instrument to the same ground as the unit under test.

Touch Screen

You can use touch to control the instrument in addition to the front-panel controls, toolbar buttons, and menu options. Generally, touch can be used anywhere that click is mentioned in this online help.



To disable the touch screen, push the front-panel Touch Screen button. When the touch screen is off, the button is lighted. You can still access the on-screen menus with a mouse or keyboard.

To adjust the touch screen operation to your personal preferences, run the touch screen program from the shortcut on the Windows desktop or select Touch Screen > Calibrate from the Utilities menu.

NOTE. If the instrument is powered on in Windows Safe Mode, the touch screen is inoperative. You may need to use a mouse or keyboard to restore normal operation.

Wave Inspector Controls


NOTE. *Wave Inspector Controls are available only on MSO/DPO5000 Series instruments.*

The Wave Inspector controls (zoom/pan, play/pause, mark, and search) help you to efficiently work with long record length waveforms.



Use Measure to perform automated measurements, Search to search through an acquisition for user-defined events/criteria, or DPX/FastAcq to start or stop fast acquisitions.




Push  to turn on MultiView Zoom and add a magnified graticule to the display.

Zooming a waveform: Enable or disable the zoom mode by pushing the zoom button. Rotate the inner knob on the Pan-Zoom control clockwise to zoom in on a selected part of the waveform. Rotate the knob counterclockwise to zoom back out.

Use the Pan knob to scroll through a zoomed waveform.

Panning a waveform: Rotate the pan (outer) knob of the pan-zoom controls to pan the waveform. Turn the knob clockwise to pan forward. Turn it counterclockwise to pan backwards. The further you turn the knob, the faster the zoom window pans.



Use the play-pause knob  to automatically pan through a waveform record.

Playing and Pausing a Waveform: Enable the play-pause mode by pushing the play-pause button. Adjust the play speed by turning the pan (outer) knob further. The further you turn it, the faster it goes.

Use to search and mark waveforms, to establish or delete a waveform mark, or to jump to the previous or next waveform mark.

Vertical Controls

Use the Vertical controls to adjust the vertical display parameters of live data channels connected to the vertical inputs. Each input channel has identical controls.



Use the dedicated channel (Ch <1–4>) buttons to turn channel displays on and off. The channel button is lighted when the selected channel is on.

Use the dedicated push-to-toggle Position/Offset and Scale knobs to adjust the vertical position and scale of the waveform.

 
NOTE. The Offset button is available only on DPO7000/C and DPO70000/B/C Series instruments.

For channel waveforms (waveforms connected to the vertical inputs), the scale setting controls the vertical size of the [acquisition window](#) (see page 55) as well as the display scale. The range and resolution of the scale value depends on the attached probes and on any other external factors you have specified.

For reference or math waveforms, the scale setting controls the display only. Scaling these waveforms has no effect on the acquisition hardware.

Use the front panel controls to display the math (M), reference (R), bus (B), or vertical (V) setup menus.

NOTE. The M, R, B, V buttons are available only on MSO/DPO5000 Series instruments.

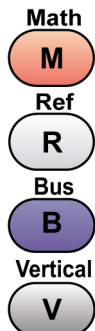

Acquisition Window

This window defines what data is removed from the input signal to form a waveform record.

The vertical scale and offset set the vertical size and the vertical center of this window independently for each channel. The horizontal scale and position set the horizontal size and positions for all channels in parallel.

Horizontal Controls

Use the Horizontal controls to adjust the horizontal parameters of waveforms. The horizontal controls globally affect all displayed waveforms.



Use the dedicated Position knob to adjust the horizontal position of all waveforms. Use this knob to adjust the trigger point so that you can select the amount of pretrigger data or posttrigger data. In Delay Mode, this knob can be used to set the delay time.

Use the dedicated Scale knob to adjust the horizontal scale (time base) of all channel waveforms.

Use the Resolution knob to change the number of acquired points (record length, in the Automatic and Constant Sample Rate horizontal modes). The actual resolution cannot be set directly but is derived and displayed on the horizontal readouts.

 
NOTE. The Resolution knob is not available on MSO/DPO5000 Series instruments.

Push the Delay button to turn on horizontal delay, and then use the Position knob to set the delay time. Delay is useful when you want to acquire waveform details that are separated from the trigger event by a significant interval of time.

NOTE. The Delay button is not available on MSO/DPO5000 Series instruments.

Trigger Controls

Use the Trigger controls to set basic trigger parameters.

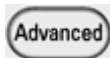


By default, the instrument uses the Edge trigger. To return to the Edge trigger from any other A (main) event trigger, push the Edge button. Pushing this button does not open the Edge Trigger control window unless another A event trigger is already displayed.

NOTE. The Edge button is not available on MSO/DPO5000 Series instruments.

To select other trigger types, push the Advanced button. In the Trigger control window, click the Select button to choose one of the other trigger types.

 Select the [trigger source \(see page 57\)](#) for the Edge trigger by pushing the left or right arrow buttons until the desired Source is lighted. These buttons are only valid for the A event Edge trigger.

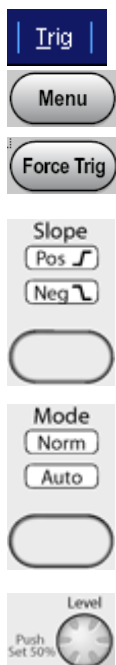

Select Trig in the menu bar to open the Trigger control window. Use the Coupling drop-down menu to select [trigger coupling \(see page 57\)](#) for an A event or B event Edge trigger.

To open the Trigger control window, push the Menu button (Available only on MSO/DPO5000 Series instruments only).

Push the Force Trig button for the running trigger (Available only on MSO/DPO5000 Series instruments only).

Push the button in the Slope column to toggle between positive, negative, or both [trigger slopes \(see page 58\)](#) for the Edge trigger. The selected trigger slope(s) are lighted. These buttons are only valid for the A event Edge trigger.

NOTE. The trigger slope selection button is not available on MSO/DPO5000 Series instruments.

Push the button in the Mode column to toggle between [Normal \(see page 58\)](#) (Norm) and [Auto \(see page 58\)](#) (Automatic) modes; the selected trigger mode is lighted.

NOTE. The trigger mode selection button is not available on MSO/DPO5000 Series instruments.

Push the Level knob to set the trigger level to 50%. To set a different [trigger level \(see page 58\)](#), rotate the Level knob. The trigger level appears on the screen. The trigger level knob affects Edge, Width, Glitch, Timeout, Serial, Video and some Communications trigger types.

Trigger Source

The trigger source determines the source of the trigger signal. The input channels are the most commonly used trigger sources and are available for all trigger types.

Trigger Coupling

The trigger coupling determines what part of the signal is passed to the trigger circuitry. All trigger types except edge triggering use DC coupling only. Edge triggering can use all available coupling choices.

DC. This coupling passes all input signals to the trigger circuitry.

AC. This coupling passes the input signals above 60 Hz to the trigger circuitry.

HF Reject. This coupling attenuates signals above 50 kHz before passing the signal to the trigger circuitry.

LF Rej. This coupling attenuates signals below 80 kHz before passing the signal to the trigger circuitry.

Noise Rej. This coupling provides stable triggering by increasing the trigger hysteresis. Increased hysteresis reduces the trigger sensitivity to noise but may require greater signal amplitude.

Trigger Slope

The trigger slope determines whether the instrument finds the trigger point on the rising edge, falling edge, or both edges of the signal.

Normal Trigger Mode

Normal trigger mode causes the instrument to wait for a valid trigger event before displaying waveform data. Normal trigger mode is most useful during single-shot acquisitions.

Trigger Level

The trigger level determines the voltage level where the trigger point occurs.

Adjust the trigger level with the front-panel Level knob.

Click in the Level entry box in a Trigger control window and use the multipurpose knob to adjust the level.

Auto Trigger Mode

Auto trigger mode causes the instrument to trigger if a valid trigger event does not occur within a set amount of time.

Auto trigger mode is useful when probing DC signal levels such as power supplies or logic levels that are stuck high or low. It is also useful when looking for activities on signal nodes such as oscillations when you first set up the instrument. The length of time it waits for a trigger event depends on the time base setting.

Run Controls

Use the Run controls to start, stop, and to monitor the status of acquisitions.



Push the Run/Stop button to start and stop acquisitions.

Push the Run/Stop button once to stop the acquisition.

Push the Run/Stop button a second time to begin acquisitions again.

Push the Single button to exit Run mode and start a single sequence of acquisitions.

Push Clear to remove any acquired data.

In Sample, Peak Detect, or High Res mode, the instrument acquires a waveform record with the first trigger event and then stops.

In Envelope, Average, or WfmDB mode, the instrument makes the specified number of acquisitions to complete the averaging or enveloping task, and then stops.

The Acquisition Status readouts, and lights on some instruments, indicate the state of the acquisition.



Arm indicates the instrument is filling the pretrigger portion of the waveform record.

Ready indicates the instrument can accept a valid trigger event and is waiting for the trigger event to occur.

 
Trig'd or Triggered indicate that instrument has recognized a valid trigger and is filling the posttrigger portion of the waveform.

When Arm, Ready, and Trig'd are not on, the acquisitions have stopped.

When Ready and Trig'd are both on, the instrument has recognized a valid trigger and is waiting for a delayed trigger. When the instrument recognizes a delayed trigger, it will fill in the posttrigger portion of the waveform.

General Purpose Controls

Use the following front-panel controls to perform general-purpose tasks such as to Autoset the instrument, to send items to the printer, or to enable cursors.

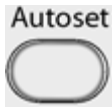

Push the Autoset button to automatically set up the instrument to obtain and display a stable waveform of usable size. For information on the Autoset default settings click [Autoset \(see page 163\)](#).



Push the Default Setup button to reset the instrument to the factory default settings.



Push the Menu Off button to turn off a displayed menu.


NOTE. Menu Off is available only on MSO/DPO5000 Series instruments.



Push the Print button to make a hard copy of the screen. The printed image is sent directly to the selected (internal or attached) printer. To change the print settings, click the File menu Print command, and change the settings in the Print dialog box.



Push the Cursors button to enable cursors on the screen. The [Cursor Type control window \(see page 67\)](#) opens so that you can specify the cursor parameters.

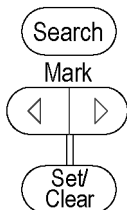

Push the Search and Mark buttons to find and place a mark on a waveform at a point of interest, or to edit marks. You can return to a mark and analyze the waveform at a later time.



Push the FastAcq DPX button to turn Fast Acquisition On or Off. The FastAcq button is lighted when Fast Acquisition is turned on.



Use the Intensity knob to adjust the brightness of the waveform. High intensity settings show less frequently acquired points more clearly.

MultiView Zoom Controls

Push the front panel MultiView Zoom button to do the following:



Open a magnified window or windows in the upper half of the screen.


Open the [Zoom control window](#) (see page 357) to set the position and factor of the selected waveform in the Zoom window, select the Zoom Area and Source, and lock and scroll the zoomed areas.

Assign the multipurpose knobs to the horizontal or vertical position and scale controls in the Zoom graticule.

NOTE. The MultiView Zoom button is lighted when the Zoom mode is on.

Rear and Side Panel Connectors

The instrument features the following rear and/or side panel connectors:

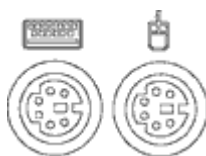

Use the PS-2 connectors to connect a PS-2 keyboard or a mouse to the instrument.



Use the USB connectors to connect a USB mouse, a keyboard, or other USB devices to the instrument.

NOTE. Plug USB devices directly into the USB connectors on the instrument to improve reliability rather than connecting the devices serially. If the USB mouse locks up, disconnect and reconnect the USB connector to restore normal operation. If the instrument front panel and/or touch screen do not respond, press the On/Standby switch for 5 seconds to cycle power.




Use the Primary Video port to connect a monitor for extended desktop operation. For example, use the front panel to display the contents of the instrument, and use an additional monitor for Windows operation.

NOTE. The Primary Video port is available on all instruments except MSO70000/C, DPO70000C, and DSA70000C Series instruments.




Use the COM 1 serial port to connect to other devices through the serial port.

NOTE. The COM1 port is available on all instruments except MSO/DPO5000 Series instruments.

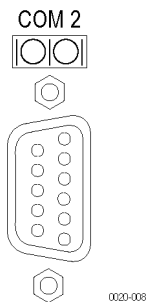


Use the COM 2 serial port to connect to other devices through the serial port.

 
NOTE. The COM2 port is available on all instruments except MSO/DPO5000 Series instruments.

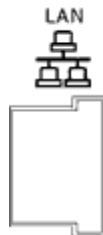

Use the RJ-45 connector to connect the instrument to a network.

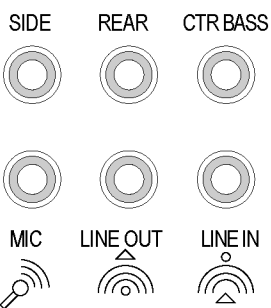

Use the Audio ports for stereo microphone input and stereo line output.

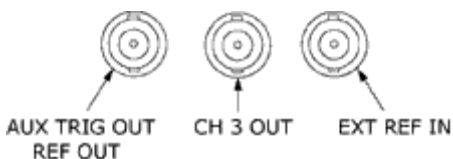


For <4 GHz instruments:

Use the AUX TRIG OUT / REF OUT connector to obtain a TTL-compatible, negative polarity pulse when the instrument triggers.

Use the CH 3 OUT connector to connect to a buffered version of the signal that is attached to the Channel 3 input. The amplitude is 50 mV/div $\pm 20\%$ into a 1 M Ω load, or 25 mV/div $\pm 20\%$ into a 50 Ω load.

Use the EXT REF IN connector to synchronize the instrument time base to an external 9.8 – 10.2 MHz reference frequency source. The reference input voltage range is 200 mVp-p to 7 Vp-p.




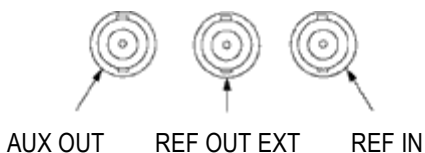


For ≥ 4 GHz instruments:

Use the AUX OUT connector to obtain a TTL-compatible, negative polarity pulse when the instrument triggers or when certain other events occur, such as a mask test failure or completion.

Use the REF OUT connector to obtain a copy of the internal reference.

Use the EXT REF IN connector to synchronize the instrument time base to an external 9.8 – 10.2 MHz reference frequency source. The reference input voltage range is 200 mVp-p to 7 Vp-p.

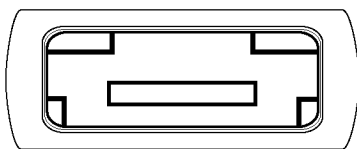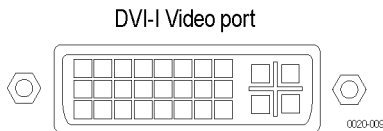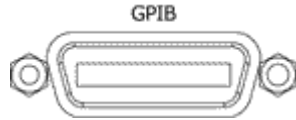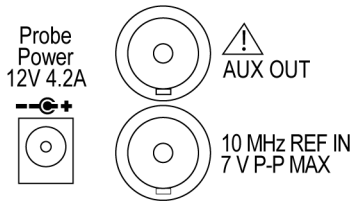

For MSO/DPO5000 instruments:

Use the Probe Power to input the probe power.

Use the REF IN to input the external reference.

Use the AUX OUT connector to obtain a TTL-compatible, negative polarity pulse when the instrument triggers or when certain other events occur, such as a mask test failure or completion. You may also set the AUX OUT connector to obtain a copy of the internal reference.

Use the GPIB connector to connect the instrument to a GPIB controller for GPIB operation.

NOTE. The GPIB connector is available on all instruments except MSO/DPO5000 Series instruments.

Use the TekLink connector to trigger multiple instruments with a single trigger event.

NOTE. The TekLink function is available only on DPO70000B/C, DSA70000/C, MSO70000/C Series instruments.

Use the Secondary Video port to send the instrument display to a projector or to a larger monitor.

NOTE. This port is available only on DPO7000, DPO70000, DPO70000B, DSA70000, and DSA70000B Series instruments.

Use the DVI-I Video port to send the instrument display to a projector or to a flat-panel LCD monitor.

NOTE. This port is available only on DPO7000C, DPO70000C, DSA70000C, and MSO70000/C Series instruments.

Use the eSATA port as an external interface for SATA support devices.

NOTE. This port is available only on DPO7000C, DPO70000C, DSA70000C, and MSO70000/C Series instruments.

Cursor Setup Control Window (YT Display Format)

From the Cursor menu, select Cursor Setup.


Overview

Use the Cursor Setup controls to configure cursor parameters. The available controls vary depending on the [Display Format \(see page 146\)](#) and the rest of the cursor window settings.

NOTE. *Cursor measurements on digital channels require that at least one analog channel be displayed. Alternatively, to take a measurement of a digital channel, you can first send the waveform acquired on the digital channel to an analog channel using iCapture.*

This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.

For information on the controls, click the buttons.

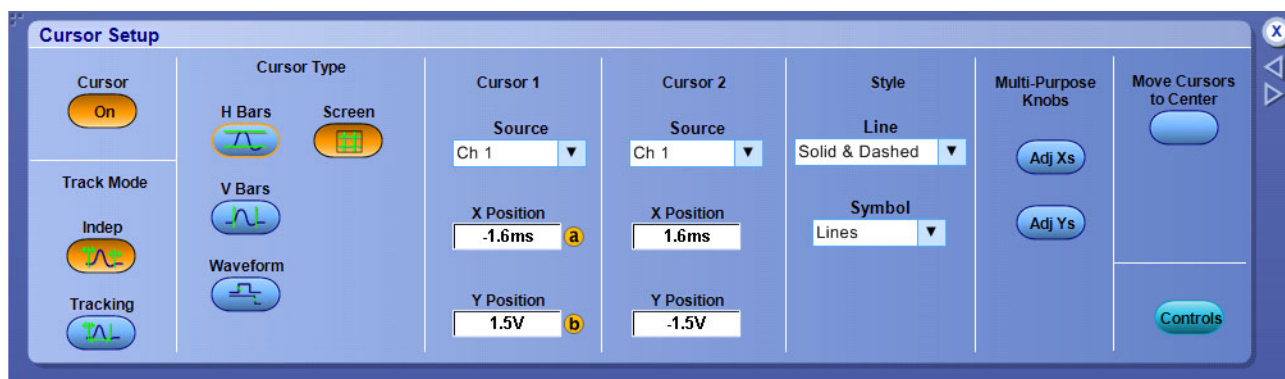

To Use

1. Click the Cursor button to turn cursors on and off.
2. To select the cursor Track Mode, click either the Indep (independent) or Tracking button.
3. Select a cursor type by clicking one of the Cursor Type buttons.
4. Select the waveform you want to measure from the Source drop-down lists. Cursor 1 and Cursor 2 each have their own source.

TIP. *If are using H Bar or V Bar Cursors and want the cursor source to be the same for both cursors, set the source for Cursor 1. Cursor 2 will have the same value as Cursor 1, unless you change it.*

5. Click in the Position entry boxes to map the cursors to the multipurpose knobs, and then use the knobs to move the cursors.
6. Select a Line style from the drop-down list. Line styles are available for all cursor types.
7. Select a Symbol style from the drop-down list. Symbol styles are only available on Waveform and Screen cursors.

NOTE. *If you are using XY or XYZ display format, you can also select the type of readout from the XY Readout Type drop-down list. Only Waveform and Screen cursors are available in the XY or XYZ display format.*

TIP. *The Cursors menu Cursors On command can also be used to toggle the cursors on and off. The cursors are on when a check mark appears next to this command.*

Behavior

When cursors are turned on, the front panel Cursors button illuminates.

Track Mode

- Indep (Independent) moves the cursors independent of each other.
- Tracking moves Cursor 1 and Cursor 2 in tandem. However, moving Cursor 2 does not move Cursor 1.

Style

Applies only to Waveform and Screen cursors. The Line & X symbol style displays only an X when used with waveform cursors in XY display mode such that the vertical line is not drawn, only the X.

If you change the display format to XY when H Bar cursors are enabled, the cursor type will change to Screen. In normal acquisition mode, changing the display format to XY when V Bar cursors are enabled, changes the cursor type to Waveform.

TIP. *To turn the cursors off, push the front-panel Cursors button.*

What do you want to do next?

- [Go to a step-by-step procedure for taking cursor measurements. \(see page 470\)](#)
- [Learn about the cursor types. \(see page 72\)](#)

- [Learn about Cursor Readouts in XY display format. \(see page 69\)](#)

Cursor Type Control Window

From the Cursor menu, select Cursor Controls, or press the front panel Cursors button.

Overview

Use the Cursor Type control window to select the source for each cursor and the type of cursors used for waveform measurements.

For information on the controls, click the buttons.



To Use

1. Click the Source drop-down list to select the source for the cursor.
2. Click one of the Cursor Type buttons to select a cursor type.

TIP. Select a cursor type directly from the Cursors menu Cursor Type submenu.

Behavior

If you are using H-Bar or V-Bar Cursors, and want to measure the same waveform with both cursors, select the waveform for Cursor 1. Cursor 2 will have the same value as Cursor 1, unless you change it.

Click Setup to open the Cursor control window where you can specify other cursor parameters.

What do you want to do next?


- [Learn about the Cursor Position controls. \(see page 71\)](#)
- [Learn about the Cursor Setup controls. \(see page 65\)](#)

Cursor Sources (YT Display)

From the Cursor menu, select Cursor Setup.

Overview

Use these controls to define the source for both Cursor 1 and Cursor 2 for any cursor type.

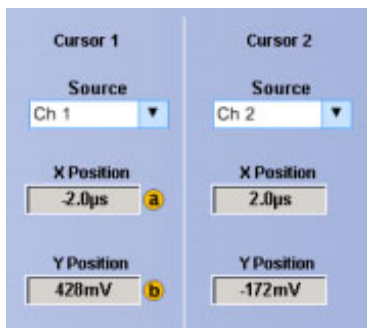

To Use

1. Click the Source drop-down list to select the measurement source for the cursor.
2. Click in an X Position entry box and use a multipurpose knob to adjust the position of the cursor.

Behavior

If the cursor type is V Bars or H Bars, setting the Cursor 1 source sets the Cursor 2 source to the same value. To have different sources for Cursor 1 and Cursor 2, set the Cursor 1 source first, and then set the Cursor 2 source.

NOTE. Only Screen Cursors have both an X and Y Position controls.

The Multipurpose Knobs Adj buttons appear only with Screen cursors. Click the Adj buttons to assign the multipurpose knobs to the X-axis and the Y-axis controls.

What do you want to do next?

- [Learn about cursor types. \(see page 67\)](#)
- [Learn about cursor styles. \(see page 69\)](#)
- [Learn about Cursor Readouts in XY display format. \(see page 69\)](#)

Cursor Style

From the Cursor menu, select Cursor Setup.

Overview

Use these controls to change the appearance of the cursors.

To Use

1. Select a Line style from the drop-down list: Solid, Dashed, or Solid and Dashed.
2. Select a Symbol style from the drop-down list: Lines, Line & X, or X.

NOTE. *Symbol styles are only available for [Waveform \(see page 74\)](#) and [Screen \(see page 75\)](#) cursors.*

If you are in XY display format, you can also select the XY Cursor Readout from the drop-down list.

Behavior

Cursor positions are displayed according to line style, symbol style, cursor type, and waveform display format. See the following table. The Line & X symbol style displays only the X when used with waveform cursors in XY display mode. (The vertical line is not drawn.)

Symbol style	Cursor type	Display format	Cursor position
Lines	Waveform and Screen	YT	Intersection of horizontal and vertical lines. Default style for Screen cursors.
Line & X	Waveform and Screen	YT	Horizontal position is shown by a vertical line, the Y-axis is shown by an X. Default style for Waveform cursors in YT mode.
X	Waveform and Screen	XY	Single X indicates the horizontal and vertical position. Default style for Waveform Cursors in XY mode.

Cursor readouts are displayed based on the selection in the XY cursor Readout drop-down list. This list is only available for Waveform and Screen cursors when you are using XY display format.

XY cursor readout	Cursor type	Display format	Cursor position
Rectangular	Waveform and Screen	XY	Shown as rectangular coordinate positions. There are nine readouts for Waveform cursors and six for Screen cursors.
Polar	Waveform and Screen	XY	Shown as polar coordinate positions. There are nine readouts for Waveform cursors and six for Screen cursors.
Product	Waveform and Screen	XY	Shown as rectangular coordinates and the X vertical value is multiplied by the Y vertical value. There are six readouts for Waveform cursors and three for Screen cursors.
Ratio	Waveform and Screen	XY	Shown as rectangular coordinates and the Y vertical value is divided by X vertical value.

Cursor Position Control Window

From the Cursor menu, select Cursor Position.

Overview

Use the Cursor Position control window to position the cursors with the multipurpose knobs.



To Use

1. Click the Source drop-down list to select the measurement source for the cursor.
2. Click in one of the cursor Position entry boxes, and use a multipurpose knob to enter the cursor position.

Behavior

The cursor units depend on the cursor type. The cursor position readouts appear on the display graticule. When using the IRE graticule style, amplitude cursor readouts are shown in IRE units.

Cursor position does not change if the cursor source changes or if the waveform is repositioned.

TIP. Use the pop-up keypad or your external keyboard to specify exact numerical cursor coordinates.

What do you want to do next?

- [Learn about the Cursor Setup controls. \(see page 65\)](#)
- [Learn about the cursor types. \(see page 72\)](#)

Horizontal Bar Cursors

From the Cursor menu, select Cursor Controls, or press the front panel Cursors button.

To Use

1. To use the horizontal bar cursors, click H Bars in one of the cursor control windows, or from the Cursors menu, highlight Cursor Type, and then select H-bars from the submenu.
2. Use the multipurpose knobs to move the cursors.
3. Use the cursor Source drop-down list boxes to select the waveform you want to measure.

Behavior

Horizontal bar cursors measure vertical parameters (amplitude). Typically the vertical parameters are in volts, but depend on the Vertical Units selected for the measurement window.

The cursor readouts appear near the bottom of the graticule when a control window is open. When the control windows are closed, the readouts appear at the bottom of the screen. Each cursor has its own readout with respect to the zero-reference. The Δ (delta) value shows the difference between the cursor values.

What do you want to do next?

- [Learn more about the Cursor controls. \(see page 73\)](#)
- [Go to a step-by-step procedure for taking cursor measurements. \(see page 470\)](#)

Vertical Bar Cursors

From the Cursor menu, select Cursor Controls, or press the front panel Cursors button.

To Use

1. To use the vertical bar cursors, click V Bars in one of the cursor control windows or highlight Cursor Type from the Cursors menu, and then select V-bars from the submenu.
2. Use the multipurpose knobs to move the cursors.
3. Use the cursor Source drop-down list boxes to select the waveform you want to measure.

Behavior

Vertical bar cursors measure horizontal parameters. Typically horizontal parameters are in time or frequency.

The cursor readouts appear near the bottom of the graticule when a control window is open. When the control windows are closed, the readouts appear at the bottom of the screen.

For time domain waveforms, each cursor has its own readout relative to the trigger point. The Δ (delta) value shows the time difference between the cursor values, or the frequency associated with the period between the cursors ($\text{Hz} = 1/\text{time}$).

For frequency domain signals, each cursor has its own readout relative to 0 Hz. The Δ value shows the difference in the frequencies between the cursors.

You can also use vertical bar cursors with measurement gating. Measurement gating enables you to limit automatic measurements to within the boundaries of the vertical bar cursors rather than use the entire display width.

What do you want to do next?

- [Learn more about the Cursor controls. \(see page 74\)](#)
- [Go to a step-by-step procedure for taking cursor measurements. \(see page 470\)](#)
- [Learn more about measurement gating. \(see page 253\)](#)

Waveform Cursors

From the Cursor menu, select Cursor Controls, or press the front panel Cursors button.

To Use

1. To use the waveform cursors, click Waveform in one of the cursor control windows or from the Cursors menu, highlight Cursor Type, and then select Waveform from the submenu.
2. Use the multipurpose knobs to move the cursors.
3. Use the cursor Source drop-down list boxes to select the waveform you want to measure.

Behavior

Waveform cursors can measure parameters on the same waveform or on different waveforms. The cursors measure vertical parameters (typically volts) and horizontal parameters (typically time or frequency) simultaneously. An X identifies the cursor location at the point where the cursors intersect the waveform.

The cursor readouts appear near the bottom of the graticule when a control window is open. When the control windows are closed, the readouts appear at the bottom of the screen.

One Δ (delta) value shows the voltage difference between the two cursors while the other Δ value shows the time (or frequency) difference between the cursor values.

What do you want to do next?

- [Learn more about the Cursor controls. \(see page 75\)](#)
- [Go to a step-by-step procedure for taking cursor measurements \(see page 470\)](#)

Screen Cursors

From the Cursor menu, select Cursor Controls, or press the front panel Cursors button.

To Use

1. To use the screen cursors, click Screen in one of the cursor control windows or from the Cursors menu highlight Cursor Type, and then select Screen from the submenu.
2. Use the multipurpose knobs to move the cursors.
3. Use the cursor Source drop-down list boxes to select the waveform you want to measure.

Behavior

Use screen cursors to indicate an arbitrary X and Y position in the waveform display area represented by the intersection of a vertical and horizontal cursor line. Screen cursors measure both vertical parameters (typically volts) and horizontal parameters (typically time or frequency).

Readouts display measurement parameters for both cursors. Vertical readouts display voltage values for each cursor with respect to the zero reference point and with respect to each other. Horizontal readouts display time or frequency values for each cursor with respect to the trigger point and with respect to each other.

The cursor readouts appear near the bottom of the graticule when a control window is open. When the control windows are closed, the readouts appear at the bottom of the screen.

What do you want to do next?


- [Learn more about the Cursor controls. \(see page 76\)](#)
- [Go to a step-by-step procedure for taking cursor measurements. \(see page 470\)](#)

Cursor Track Mode

From the Cursor Setup control window, click the Indep or Tracking button. From the Cursor menu highlight Cursor Mode; then select Indep or Tracking in the submenu.

Overview

Use this control to define the tracking relationship between cursors.

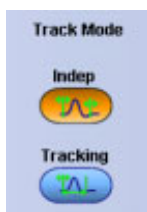

To Use

To select a cursor tracking mode, click either the Indep or Track button.

Behavior

- Click Indep (Independent) to move one cursor at a time using the multipurpose knobs.
- Click Tracking to move Cursor 1 and Cursor 2 in tandem so that Cursor 2 will always remain a fixed distance (time or voltage) from the Cursor 1. However, moving Cursor 2 does not move Cursor 1.

Cursor Measurements

Because cursor measurements give immediate feedback on the amplitude or time values they measure, they are usually quick to take and are more accurate than graticule measurements. Also, since you can position cursors wherever you want them on the waveform, they are easier to localize to a waveform segment or feature than automatic measurements.

Cursors can measure channel, reference, and math waveforms. You must set the source of each cursor explicitly in the Cursor Control window.

Any cursor type can be used for YT display format. XY display format can only use Screen or Waveform cursors.

To use cursors, simply move the cursors on screen and read the results in the cursor readouts. The following key points will help you use the cursors effectively.

NOTE. *Cursor measurements on digital channels require that at least one analog channel be displayed. Alternatively, to take a measurement of a digital channel, you can first send the waveform acquired on the digital channel to an analog channel using iCapture.*

This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.

Cursor Types Overview

There are two [cursors types \(see page 592\)](#) available for the displays, Cursor 1 and Cursor 2. You can move cursors with the multipurpose knobs or the cursor position controls in the Cursor Control window, or click and drag them to a new location.

Cursors are Limited by the Display

You cannot move a cursor off the graticule unless you are in Zoom mode. Also, if you resize waveforms, the cursors do not track. That is, a cursor stays at its screen position, ignoring changes to horizontal and vertical scale and position and vertical offset (Waveform and Screen cursors will track a waveform vertically).

Cursors Ignore the Selected Waveform


Each cursor measures its source, defined in the Cursor Control window. Selecting a waveform for scaling on screen (by pushing the Ch 3 front-panel button, for example) does not change the source that each cursor measures.

After you have selected the source from the Cursor Control window, you can operate the cursor from the front-panel knobs and buttons.

NOTE. *If a cursor readout does not seem correct, check the source of each cursor in the Cursor Setup dialog box. Each cursor readout relates to the amplitude and time base settings of its source.*

Vertical Cursors Measure from the Trigger Point

Remember that each vertical cursor measures the time from the trigger point to itself. This relationship is shown in the next figure.

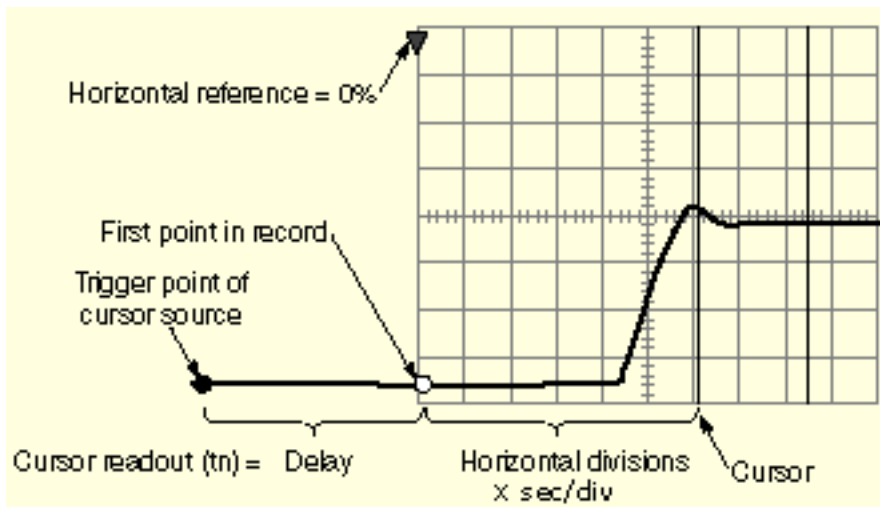

A vertical cursor readout includes and varies directly with the Delay time, which varies directly with the horizontal position set for the time base. To see the amount of time to the first point, set horizontal delay to 0.0 and set the horizontal reference point to 0%. Now the horizontal position readout shows the time following the first point, and adding this value to the cursor readout yields the cursor position on screen relative to first point. (You can find the horizontal readout both in the control window and in the readout at the bottom of the screen.)

The following relationships hold:

Time from First Point = Horiz Position (when Horiz Delay and Ref Position are zero)

T1 readout = Time to First Point + Additional Time to Cursor

Cursor Units Depend on Sources

A cursor that measures amplitude or time will read out in the units of its source as indicated in the table below. Mixed sources require delta cursor readouts to use the units of the Cursor 1 source.

Cursors	Standard units ¹	Readout names
Horizontal	volts, watts, IRE	V1, V2, ΔV
Vertical	seconds, bits, Hertz	T1, T2, ΔT, ΔF
Waveform, Screen	volts, watts, seconds, bits, Hertz	V1, V2, ΔV, T1, T2, ΔT

¹ If the V1 and V2 units do not match, the ΔV readout defaults to the units used by the V1 readout.

Changing Cursor Positions

Change cursor positions by using the position controls in the Cursor Position window, dragging the cursor into position using the touch screen or mouse, or by turning the front-panel multipurpose knobs.

NOTE. To make small changes with the multipurpose knobs, push the Fine button before turning the knobs. When a Fine button is lighted, its multipurpose knob makes smaller adjustments.

What do you want to do next?

- [Learn about cursor types. \(see page 592\)](#)
- [Go to a step-by-step procedure for taking automatic measurements. \(see page 471\)](#)


Cursor Setup Control Window (XY Display Format)

From the Cursors menu, select Cursor Setup.

Overview

Use these controls to set the cursor parameters when you are using [XY display format \(see page 146\)](#). The available controls vary depending on the rest of the cursor window settings.

For information on the controls, click the buttons.

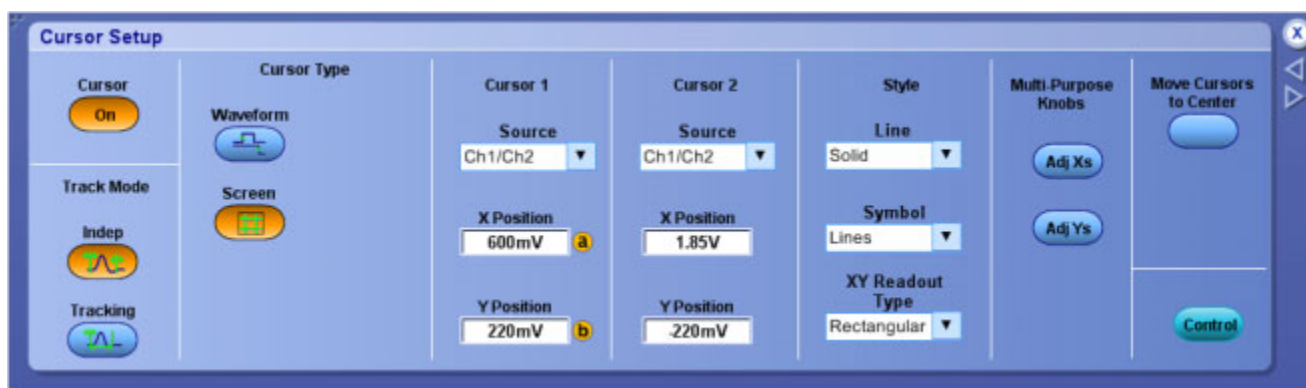

To Use

1. Use the same [Cursor Control Window \(YT format\) \(see page 65\)](#) guidelines to setup up the cursor controls.
2. Select the readout format from the XY Readout drop-down list.

Behavior

When you are using XY display format, only Waveform and Screen cursors are available. If you change the display format to XY when H Bar cursors are enabled, the cursor type will change to Screen. In normal acquisition mode, changing the display format to XY when V Bar cursors are enabled, changes the cursor type to Waveform. In FastAcq acquisition mode, changing the display format to XY when V Bar cursors are enabled, changes the cursor type to Screen.

If you change the display format from XY to YT when Screen cursors are enabled, the cursor type is changed to H Bars.

XY

These cursor Readouts only appear when you are using XY display format. Rectangular XY readouts are the default.

Rectangular

Shows the cursor readouts as rectangular coordinate positions. Waveform cursors display nine rectangular readouts (ΔX , ΔY , Δt , $X1$, $X2$, $Y1$, $Y2$, $t1$, and $t2$). Screen cursors display six readouts (ΔX , ΔY , $X1$, $X2$, $Y1$, and $Y2$).

Polar

Shows the cursor position as polar coordinate positions. Waveform cursors display nine polar readouts (Δr , $\Delta \theta$, Δt , $r1$, $r2$, $\theta1$, $\theta2$, $t1$, and $t2$). Screen cursors display six polar readouts (Δr , $\Delta \theta$, $r1$, $r2$, $\theta1$, and $\theta2$).

Product

Shows the cursor position as rectangular coordinates and the X vertical value is multiplied by the Y vertical value. Waveform cursors display seven product readouts ($\Delta X \times \Delta Y$, $X1 \times Y1$, $X2 \times Y1$, $X2 \times Y2$, Δt , $t1$, and $t2$). Screen cursors display three product readouts ($\Delta X \times \Delta Y$, $X1 \times Y1$, and $X2 \times Y2$).

Ratio

Shows the cursor position as rectangular coordinates and the Y vertical value is divided by the X vertical value. Waveform cursors display six ratio readouts ($\Delta Y \div \Delta X$, $Y1 \div X1$, $Y2 \div Y1$, Δt , $t1$, and $t2$). Screen cursors display three ratio readouts ($\Delta Y \div \Delta X$, $Y1 \div X1$, and $Y2 \div Y1$).

Digital Setup Control Window


From the Digital menu, select Digital Setup.

NOTE. The Digital Setup is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.

Overview

Use the Digital Setup control windows to set parameters for the D15-D0 digital channels. Use the D15-D8 tab to set up the upper eight bits and the D7-D0 tab to set up the lower eight bits.

For information on the controls, click the buttons.

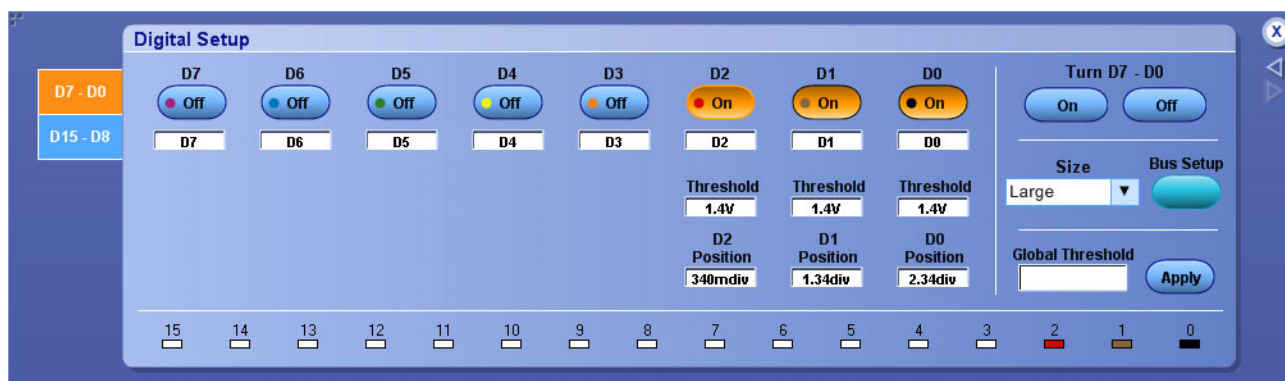

To Use

- Click the digital channels buttons to turn the waveforms on and off.
- Set the voltage level thresholds for individual channels or set the same threshold level for all channels.
- Adjust the vertical position of each channel.
- Set the vertical height of the channel in the display.

TIP. Click the *Bus Setup* button to quickly access the *Bus Setup* control window.

What do you want to do next?

- [Learn how to connect a logic probe to signals in your system under test. \(see page 82\)](#)
- [Learn how to turn on or turn off the digital channels. \(see page 85\)](#)
- [Learn how to set up the digital channels. \(see page 88\)](#)

- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn how to set up a bus. \(see page 454\)](#)
- [Learn how to set up digital waveforms. \(see page 453\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn how to track down serial bus anomalies. \(see page 459\)](#)
- [Learn how to troubleshoot circuits using a parallel bus. \(see page 461\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)


Setting Up Digital Signal Inputs

Use the Digital setup menu to set up the digital channels to acquire signals.

NOTE. *Digital Setup is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

To Use

1. Connect the logic probe to the instrument.
2. Connect the probe to the input signal sources.

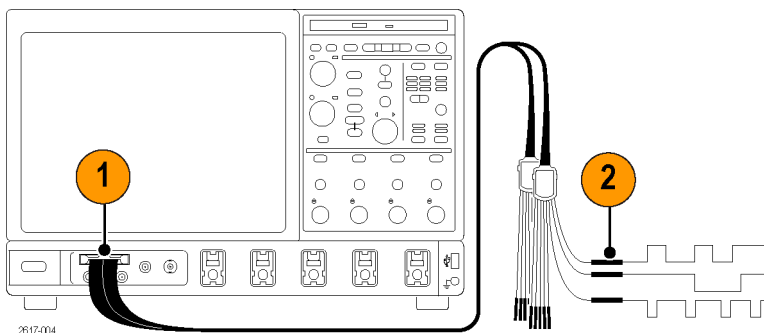

CAUTION. *To prevent damage to the instrument always wear an antistatic wrist strap when making connections to the instrument and observe the maximum input voltage ratings for input connectors.*

3. Set up digital channels and buses using the Digital Setup and Bus Setup control windows through the Digital menu. The Bus Setup window is also accessible through the Vertical menu.

What do you want to do next?

- [Learn about setting up the digital channels. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)

Digital Channel Threshold and Position

NOTE. *The Digital Channel Threshold and Position option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

From the Digital menu, select Digital Setup.

Overview

Use these controls to define the voltage threshold level of digital channels and their vertical position in the display.

To Use

1. Use the Channel Selectors to select a channel.
2. Use the Threshold and Position controls to set the voltage threshold level and the vertical position of the selected channel.

Digital Channel Threshold

NOTE. *The Digital Channel Threshold option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

From the Digital menu, select Digital Setup and use the Threshold entry box to set the voltage threshold level of the digital channel.

NOTE. *The instrument displays the Threshold entry box when you turn on the digital channel.*

To Use

- Click in the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.



Behavior

The voltage threshold level determines when a voltage level on a digital channel is considered to be a logic high and a logic low.

Digital Channel Position

NOTE. *The Digital Channel Position option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

From the Digital menu, select Digital Setup and use the Position entry box to move the digital channel vertically in the display.

NOTE. *The instrument displays the Position entry box when you turn on the digital channel.*

To Use

- Double-click in the Position entry box, and use the keypad or the multipurpose knobs to adjust the position of the digital channel.



What do you want to do next?

- [Learn about setting up digital signals. \(see page 88\)](#)
- [Learn more about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)


Turn On or Off the Digital Channels D15-D8 and D7-D0

NOTE. The Turn On or Off the Digital Channels D15-D8 and D7-D0 option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.

From the Digital Setup menu, select the D15-D8 or D7-D0 tab.

To Use

- Click Turn D7–D0 or Turn D15-D8 On button to turn on the digital channels D0 to D7 or D8 to D15 respectively.
- Click the Threshold entry box and use the keypad to enter a value for the voltage level or use the multipurpose knobs to select a voltage level.
- Click the Position entry box and move the channel using the multipurpose knob.

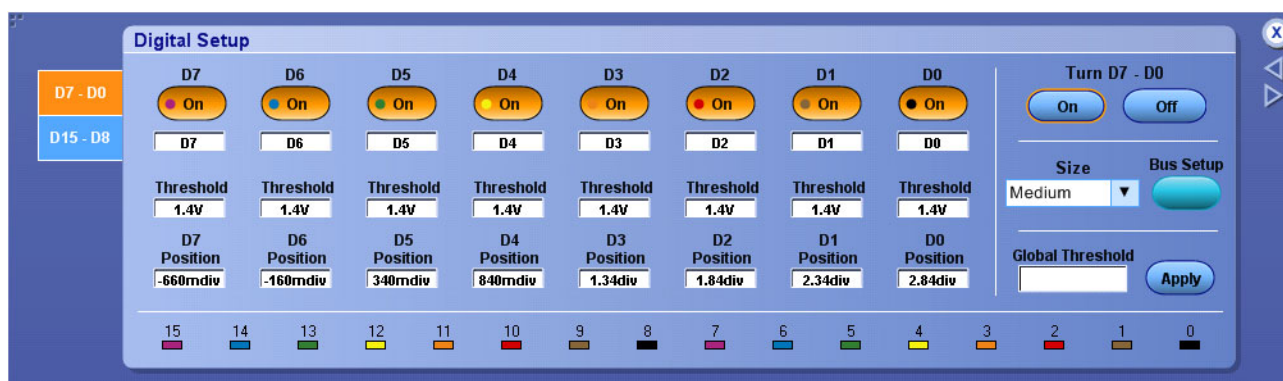

Behavior

As you turn on the digital channels, the corresponding channel indicator along the bottom of the menu changes to match the color on the digital channel button.

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn more about digital setups. \(see page 81\)](#)

Display Size of Logic Channels

NOTE. The *Display Size of Logic Channels* option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.

From the Digital menu, select Digital Setup and use the Size selection box to define the height of the digital channel in the display.

To Use

- Click Size and select from the drop-down list: Large, Medium, Small, and Extra Small.



Behavior

- Large displays the channel as a division.
- Medium displays the channel as half a division.
- Small displays the channel as a quarter of a division.
- Extra Small displays the channel as a fifth of a division.

What do you want to do next?

- [Learn about setting up digital signals. \(see page 88\)](#)
- [Learn more about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)

Global Threshold for Digital Channels

NOTE. *The Global Threshold for Digital Channels option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

From the Digital menu, select Digital Setup and use the Global Threshold entry box to define the same voltage threshold level for all digital channels.

To Use

- Click the Global Threshold entry box and enter a value for the voltage threshold level with the keypad.
- Click the Apply button.



Behavior

The instrument sets the thresholds for all digital channels to the same voltage level.

What do you want to do next?

- [Learn how to set the threshold for Ch1-Ch4 \(live\) and Math1-Math4 channels to use as logic waveforms. \(see page 652\)](#)
- [Learn more about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)


Digital Channels D15-D8 and D7-D0 Tabs

NOTE. The Digital Channels D15-D8 and D7-D0 Tabs option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.

From the Digital Setup menu, select the D15-D8 or the D7-D0 tab to set up digital channels.

To Use

- Click a digital channel to turn on or turn off the display of the channel.
- Click the Threshold entry box and use the keypad to enter a value for the voltage level or use the multipurpose knobs to select a voltage level.
- Click the Position entry box and move the channel using the multipurpose knob.
- Select the size of the waveform in the display.

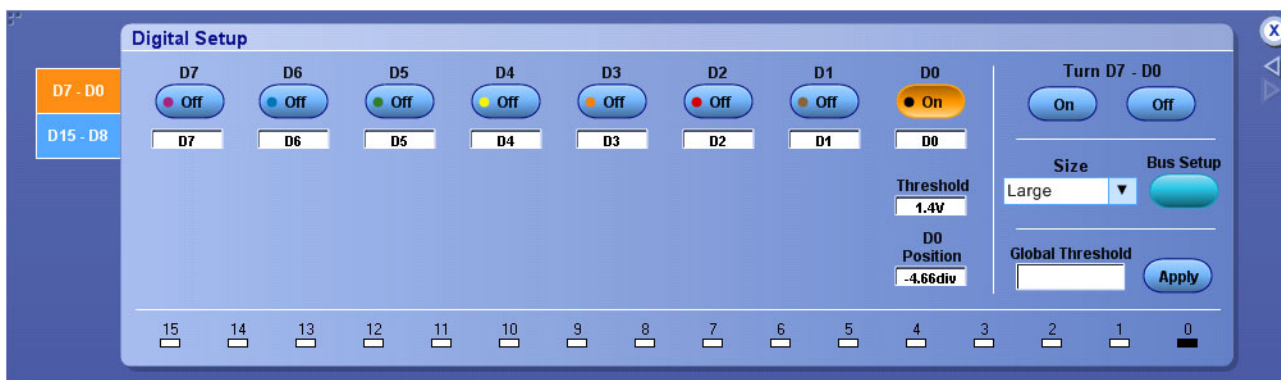

Behavior

As you turn on digital channels, the corresponding channel indicator along the bottom of the menu changes to match the color on the digital channel button.

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn more about digital setups. \(see page 81\)](#)
- [Learn how to turn on or turn off the digital channels. \(see page 85\)](#)

Bus Setup Control Window (Config Tab)

NOTE. The Bus Setup Control Window (Config Tab) option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Digital menu (or the Vertical menu), select Bus Setup.


The instrument supports serial data standards: SPI, I²C, USB, RS232, and MIPI. When you select a serial bus, the instrument assigns specific bus signals (called components) to default digital channels, sets the threshold to an appropriate voltage level.

Overview

Use the Bus Setup Control windows to define up to 16 buses from which to acquire, decode, and display data. You can set up serial buses for the SPI, I²C, USB, RS232, and MIPI serial data standards. You can also set up clocked or unlocked parallel buses.

NOTE. The instrument displays I²C as the I²C (Inter-IC Bus) serial bus selection.

For information on the controls, click the buttons.

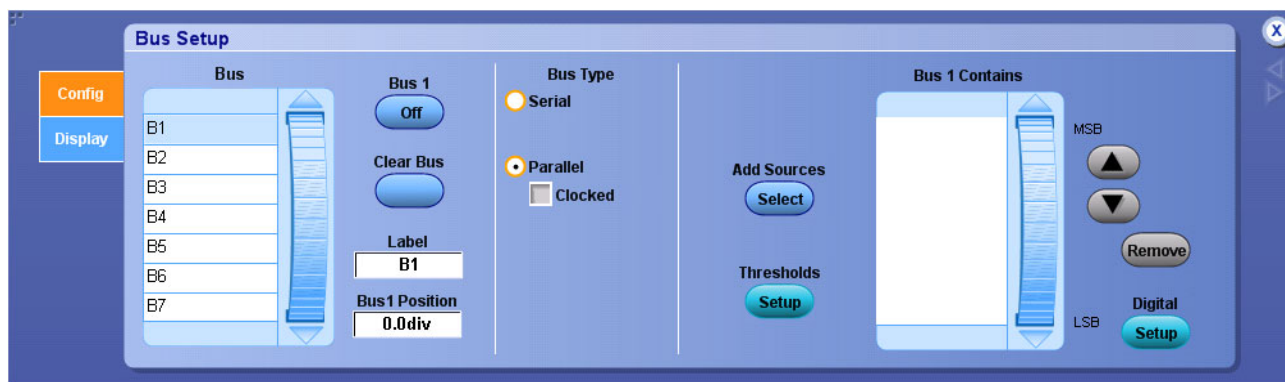

To Use

- Click and turn the scroll wheel until the desired Bus number <B1-B16> or name is visible
- Click on a Bus number or name
- Click the corresponding Bus number Off/On button
- To name the bus, click the Label entry box and enter a name with the keyboard

- To change the vertical position of the bus on the display, click the Bus Position entry box and use the keypad or the multipurpose knob to move the bus
- Click a Bus Type: Serial or Parallel
- For Parallel buses, click the Add Sources button and build your bus with any combination of D15-D0, Ch1-Ch4, and M1-M4 channels
- For Serial buses, select one of the available options from the drop-down list; the instrument provides additional parameters to set up for each standard

Behavior

Click the Clear Bus button to clear all the channels from the selected bus and remove the bus from the display.

TIP. Click the Digital Setup button to quickly access the Digital Setup control window for the parallel bus type.

What do you want to do next?

- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up digital waveforms. \(see page 453\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to set up a bus. \(see page 454\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn how to track down serial bus anomalies. \(see page 459\)](#)
- [Learn how to troubleshoot circuits using a parallel bus. \(see page 461\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)


Bus Selection List

NOTE. The Bus Selection List option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select a bus to set up from the list of Bus selections <B1-B16>.

To Use

- Click and turn (drag) the scroll wheel or click the up/down arrows until the desired Bus number or name is visible.
- Click the Bus number <B1–B16> or name to be set up.

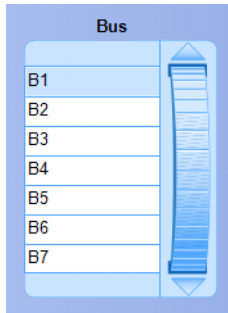

Behavior

Click the Bus button to display the bus (On) or to remove it from the display (Off).

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Display or Clear a Bus

NOTE. The *Display or Clear a Bus* option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select the Bus number <B1-B16> or name that you want to display or clear from the display.

To Use

- Select the bus number or name from the list.
- Click the Bus button to select On and display the bus.
- To clear and remove a bus, click the Clear Bus button.



Behavior

A parallel bus must be defined before it can be displayed.

When you click the Clear Bus button, the instrument removes the bus with the channels used to build the bus, and the Bus button changes to Off.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Label a Bus

NOTE. The *Label a Bus* option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Bus Setup window, select a Bus number <B1-B16> to label from the Bus list.

To Use

Double-click the Label entry box and enter a name up to 7 characters long with the keyboard.



Here is an example of a setup for an SPI bus with a label.

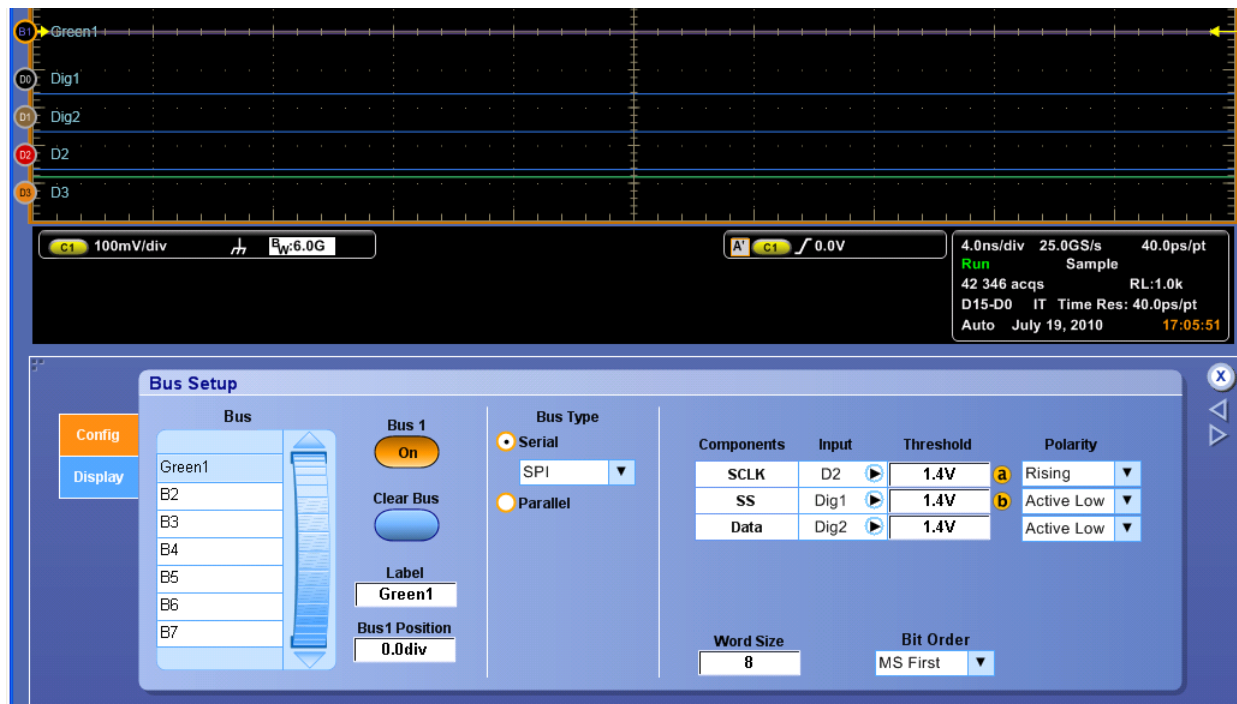

Behavior

The bus label appears in the list of bus setups in the Config and Display tabs. The instrument also displays the label adjacent to the bus number on the screen for easy identification.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

 
Bus Position

NOTE. The Bus Position option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select the Bus number <B1-B16> or name to position on the display from the Bus list.

To Use

To change the vertical position of the bus on the display, click the Bus Position entry box and use the keypad or the multipurpose knob to enter a new position.

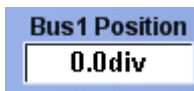

Behavior

The instrument moves the bus on the screen to the new position.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


I2C Serial Bus Setup

NOTE. The I2C Serial Bus Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select Serial from the Bus Type list and then select the I2C Serial bus type.

NOTE. The Components for the I²C bus standard are set by the instrument.

For information on the controls, click the buttons.

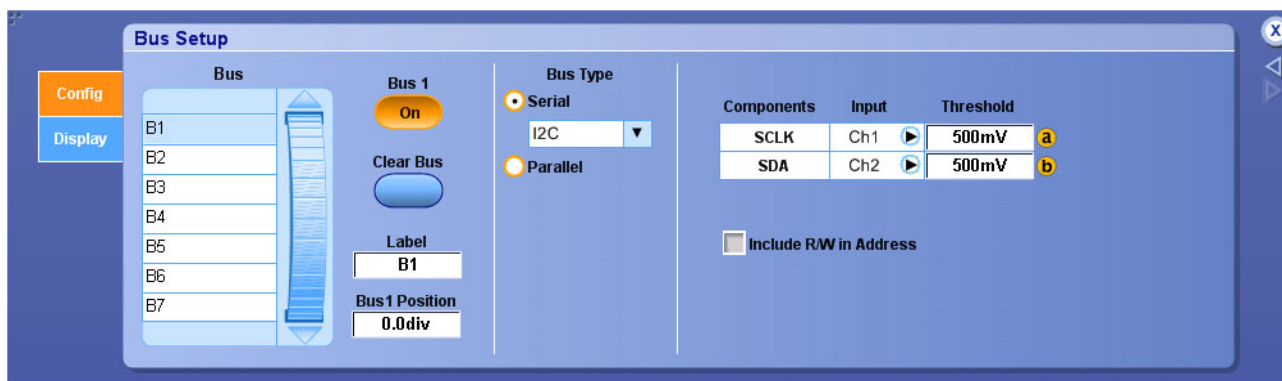

To Use

- To change the input for a component, click the Input arrow and select a channel from the cascading list.
- To change the voltage threshold level, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.

Behavior

The instrument changes the components and voltage threshold levels, and uses those to decode the selected I2C bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)
- [Learn how to track down serial bus anomalies. \(see page 459\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)


SPI Serial Bus Setup

NOTE. The SPI Serial Bus Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select a bus from the Bus list and then select the SPI Serial bus type.

NOTE. The Components for the SPI bus standard are set by the instrument.

For information on the controls, click the buttons.

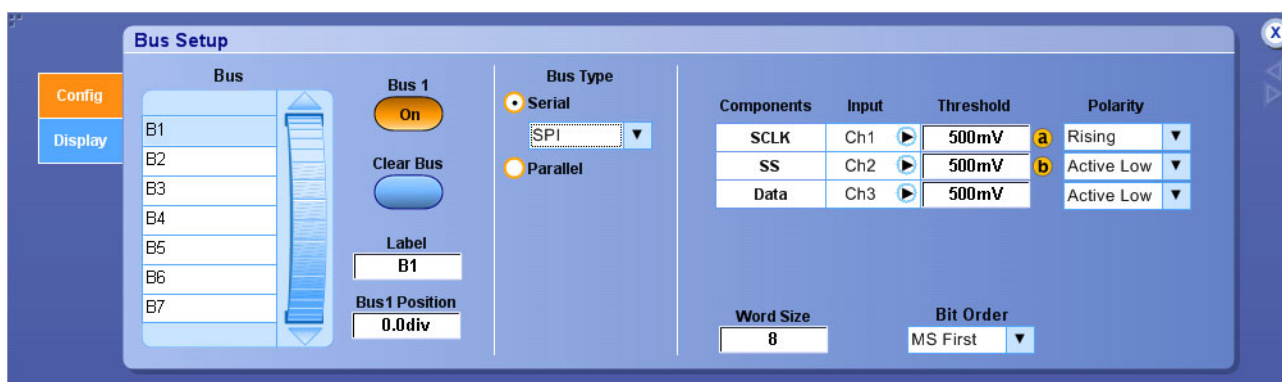

To Use

- To change the input for a component, click the Input and select a channel from the cascading lists.
- To change the voltage threshold level, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.
- To set the polarity, click the Polarity entry box and select from the drop-down list. The selections vary by component.
- To set the word size, click the Word Size entry box and use the keypad to enter a value.
- To set the bit order, click the Bit Order entry box and select from the drop-down list.

Behavior

The instrument changes the components, voltage threshold levels, polarity, word size, and bit order, and uses those to decode the selected SPI bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)

- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)


USB Serial Bus Setup

NOTE. The USB Serial Bus Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window in the Config tab, select a bus from the Bus list and then select the USB Serial bus type.

NOTE. The Components for the USB bus standard are set by the instrument.

For information on the controls, click the buttons.

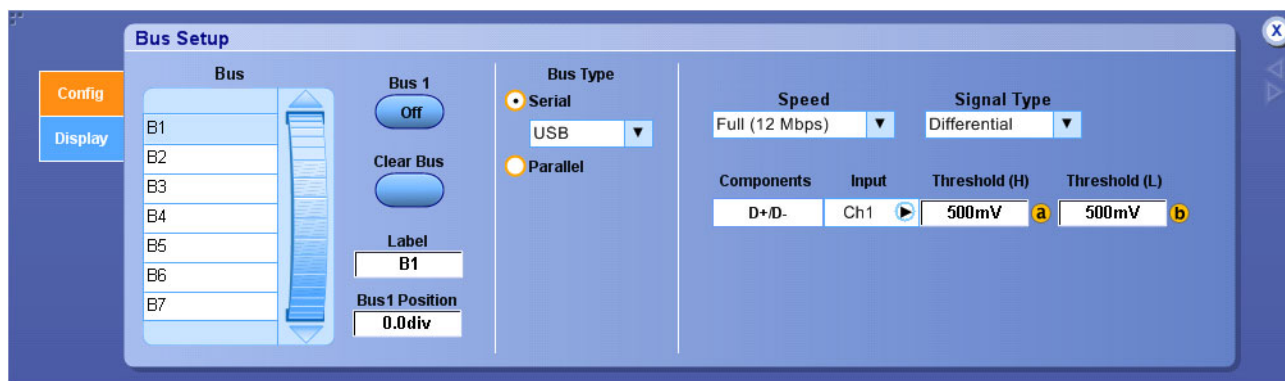

To Use

- To change the input for a component, click the Input and select a channel from the cascading lists.
- To change the voltage threshold level, click the Threshold (H) or Threshold (L) entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.
- To set the speed, click the Speed entry box and select from the drop-down list.
- To set the signal type, click the Signal Type entry box and select from the drop-down list.

Behavior

The instrument changes the components, voltage threshold levels, speed, and signal type, and uses those to decode the selected USB bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)


RS-232 Serial Bus Setup

NOTE. *The RS-232 Serial Bus Setup option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window in the Config tab, select a bus from the Bus list and then select the RS-232 Serial bus type.

NOTE. *The Components for the RS-232 bus standard are set by the instrument.*

For information on the controls, click the buttons.

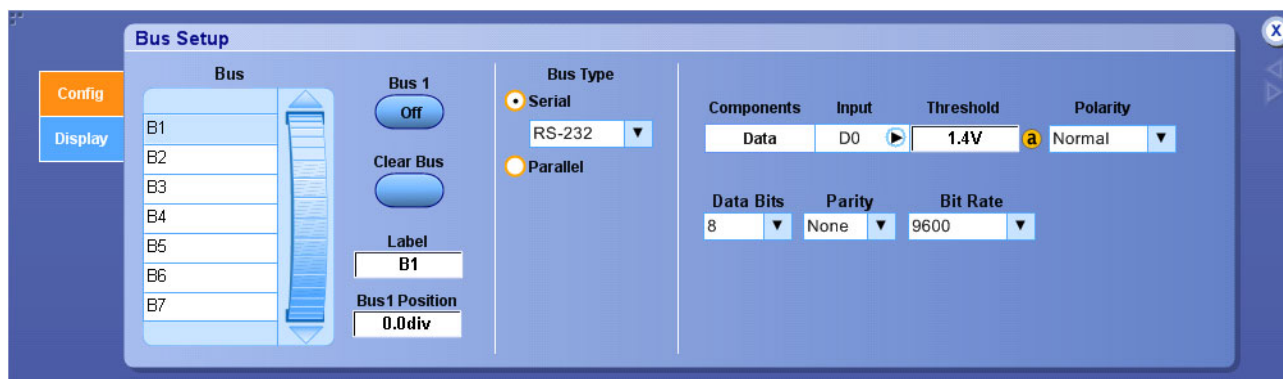

To Use

- To change the input for a component, click the Input and select a channel from the cascading lists.
- To change the voltage threshold level, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.
- To set the polarity, click the Polarity entry box and select from the drop-down list.
- To set the data bits, click the Data Bits entry box and select from the drop-down list.
- To set the parity, click the Parity entry box and select from the drop-down list.
- To set the bit rate, click the Bit Rate entry box and select from the drop-down list.

Behavior

The instrument changes the components, voltage threshold levels, polarity, data bits, parity, and bit rate, and uses those to decode the selected RS-232 bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)

- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn to view the bus packets. \(see page 129\)](#)


MIPI DSI-1 Serial Bus Setup

NOTE. *MIPI DSI-1 Serial Bus Setup is only available on MSO70000/C models.*

From the Bus Setup window in the Config tab, select a bus from the Bus list and then select the MIPI DSI-1 Serial bus type.

NOTE. *The Components for the MIPI DSI-1 bus standard are set by the instrument.*

For information on the controls, click the buttons.

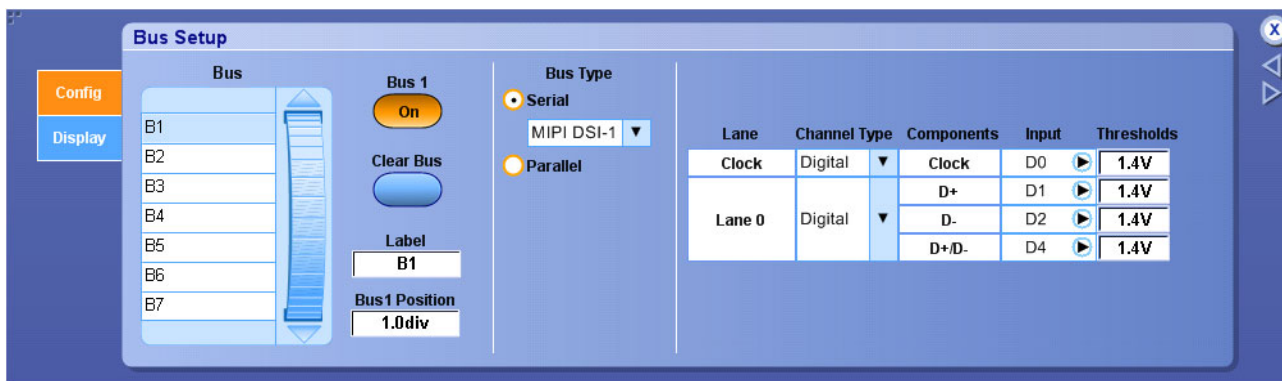

To Use

- To set the channel type, click the Channel Type entry box and select from the drop-down list.
- To change the input for a component, click the Input and select a channel from the cascading lists.
- To change the voltage threshold level, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.

Behavior

The instrument changes the components, voltage threshold levels, polarity, data bits, parity, and bit rate, and uses those to decode the selected MIPI DSI-1 bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn to view the bus packets. \(see page 129\)](#)


MIPI CSI-2 Serial Bus Setup

NOTE. *MIPI CSI-2 Serial Bus Setup is only available on MSO70000/C models.*

From the Bus Setup window in the Config tab, select a bus from the Bus list and then select the MIPI CSI-2 Serial bus type.

NOTE. *The Components for the MIPI CSI-2 bus standard are set by the instrument.*

For information on the controls, click the buttons.

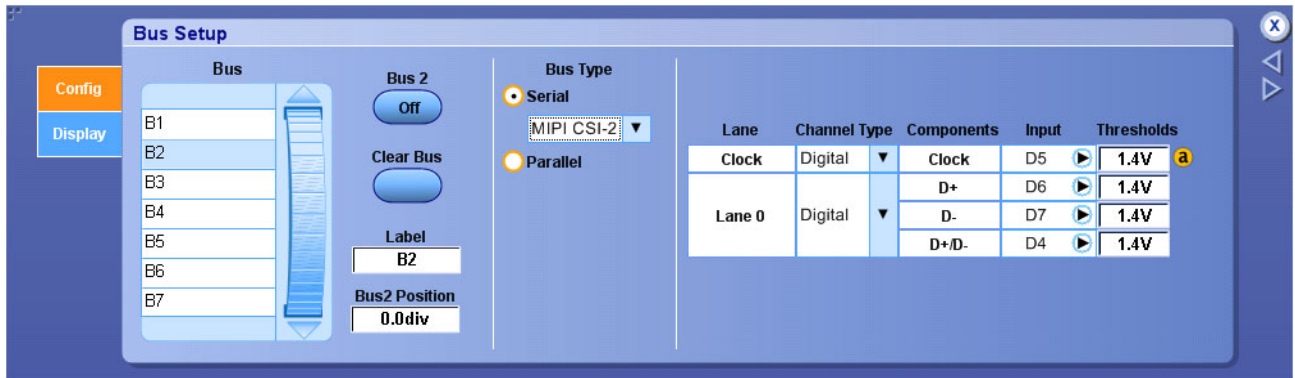

To Use

- To set the channel type, click the Channel Type entry box and select from the drop-down list.
- To change the input for a component, click the Input and select a channel from the cascading lists.
- To change the voltage threshold level, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.

Behavior

The instrument changes the components, voltage threshold levels, polarity, data bits, parity, and bit rate, and uses those to decode the selected MIPI CSI-2 bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up an I2C serial bus. \(see page 456\)](#)
- [Learn how to set up an SPI serial bus. \(see page 455\)](#)
- [Learn how to set up a USB serial bus. \(see page 457\)](#)
- [Learn how to set up an RS-232 serial bus. \(see page 456\)](#)
- [Learn how to set up a MIPI DSI1 Serial Bus \(see page 457\)](#)
- [Learn how to set up a MIPI CSI2 Serial Bus \(see page 458\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn to view the bus packets. \(see page 129\)](#)


Serial Bus Channel Type

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select Serial from the Bus Type list and then select one of the bus types.

To Use

To change the channel type for the displayed components of the bus, click the Channel Type and select from the cascading list.

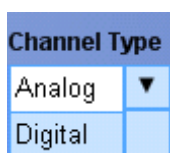

Behavior

The instrument acquires data from the channel you select for each component. The channel type supported are analog or digital input. The analog input consists of two analog signals (D+ and D-). The digital input consists of three digital signals (D+, D-, and D+/D- [differential probing between D+ and D-]).

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Serial Bus Channel Input

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select Serial from the Bus Type list and then select one of the bus types.

To Use

To change the input for the displayed components of the bus, click the Input and select from the cascading list.

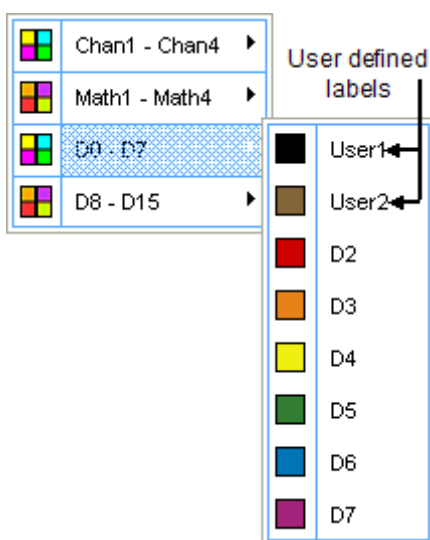

NOTE. *You have the option to add user-defined label for the bus sources.*

Behavior

The instrument acquires data from the channel you select for each component.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


USB Serial Bus Speed

NOTE. *The USB Serial Bus Setup option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select Serial from the Bus Type list and then select the USB Serial bus type.

To Use

To change the speed for the displayed component of the bus, click Speed and select from the cascading list.

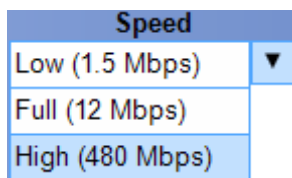

Behavior

The instrument acquires data from the channel you select for each component.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


USB Bus Signal Type

NOTE. *The USB Serial Bus Setup option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select Serial from the Bus Type list and then select the USB Serial bus type.

To Use

To change the signal type for the displayed components of the bus, click Signal Type and select from the cascading list.

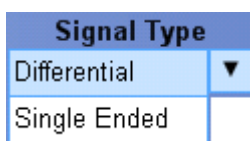

Behavior

The instrument acquires data from the channel you select for each component.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Serial Bus Input

NOTE. *Serial Bus Input is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select Serial from the Bus Type list and then select from the cascading list.

To Use

To change the input for the displayed components of the bus, click the Input and select from the cascading list.

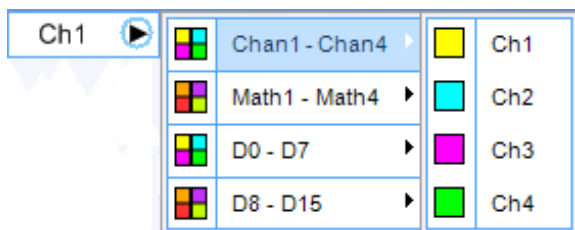



USB Bus Threshold High or Low

NOTE. *The USB Serial Bus Setup option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select Serial from the Bus Type list and then select USB Serial bus type.

To Use

To change the voltage high or low threshold level of the component Input, click  or  entry box respectively and use the keypad to enter a value or use the multipurpose knobs to select a voltage level. Setting the low threshold is only available when the signal type is differential.

Behavior

The instrument acquires data from the channel you select for each component.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

 
Serial Bus Channel Threshold

NOTE. *The Serial Bus Channel Threshold option is available only on MSO/DPO5000 and MSO70000/C Series instruments.*

From the Bus Setup window, select Serial from the Bus Type list and then select from the cascading list.

To Use

To change the voltage threshold level of the component Input, click the Threshold entry box and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.

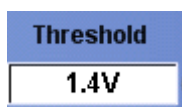

Behavior

The instrument can use different voltage thresholds levels for each component.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

SPI Bus Channel Polarity

NOTE. *The SPI Bus Channel Polarity option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*

From the Bus Setup window, select the Select tab and the SPI Serial bus type.

To Use

- Scroll through the Bus list and select the SPI bus to configure.
- Click the Polarity box and select the polarity from the drop-down list.

Behavior

For the SCLK component:

- Rising causes the instrument to acquire data on the rising edge of the signal.
- Falling causes the instrument to acquire data on the falling edge of the signal.

For the SS component:

- Active Low causes the instrument to decode the bus when the Slave Select signal is at a low level.
- Active High causes the instrument to decode the bus when the Slave Select signal is at a high level.

For the Data component:

- Active Low causes the instrument to decode signals at a low level.
- Active High causes the instrument to decode signals at a high level.

What do you want to do next?

 
- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

RS-232 Bus Channel Polarity

NOTE. *The RS-232 Bus Channel Polarity option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select the Select tab and the RS-232 Serial bus type.

To Use

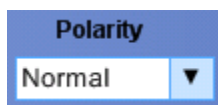

- Scroll through the Bus list and select the RS-232 bus to configure.
- Click the Polarity box and select the polarity from the drop-down list.

Behavior

For the Data component:

- Normal causes the instrument to decode signals at a high level as a binary 1.
- Inverted causes the instrument to decode signals at a high level as a binary 0.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

RS-232 Bus Data Bits

NOTE. *The RS-232 Bus Data Bits option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select the Select tab and the RS-232 Serial bus type.

To Use



- Scroll through the Bus list and select the RS-232 bus to configure.
- Click the Data Bits box and select the data bits from the drop-down list.

Behavior

You have the option to set the number of data bits in a frame for RS-232 bus to:

- 7.
- 8, the default.
- 9.

What do you want to do next?

 
- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

RS-232 Bus Parity

NOTE. *The RS-232 Bus Parity option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select the Select tab and the RS-232 Serial bus type.

To Use

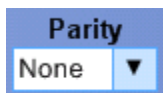

- Scroll through the Bus list and select the RS-232 bus to configure.
- Click the Parity box and select the parity from the drop-down list.

Behavior

Set the bus parity selection to:

- None, the default.
- Odd.
- Even.

NOTE. *There is no parity selection when the number of data bits is 9.*

What do you want to do next?

 
- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

RS-232 Bus Bit Rate

NOTE. *The RS-232 Bus Bit Rate option is available only on DPO5000 and MSO5000 Series instruments.*

From the Bus Setup window, select the Select tab and the RS-232 Serial bus type.

To Use

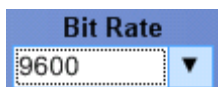


- Scroll through the Bus list and select the RS-232 bus to configure.
- Click the Bit Rate box and select the bit rate from the drop-down list.

Behavior

Set the bus bit rate to:

 - 50, 300, 1200, 2400, 9600, 19200, 38400, 115200, 921600, or 10000000. The default value is 9600.
- Custom. To change the bit rate, click the Bit Rate entry box and use the keypad to enter a value.

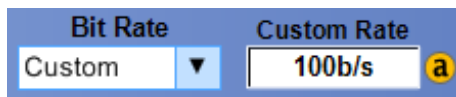

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

 
SPI Bus Word Size

NOTE. *The SPI Bus Word Size option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*

From the Bus Setup window, select the Select tab and the SPI Serial bus type.

To Use

- Scroll through the Bus list and select the SPI bus to configure.
- Click the Word Size box and enter a size using the key pad. You can also edit the value with the keyboard or multipurpose knob.

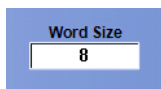

Behavior

The instrument changes the word size and uses that to decode the selected SPI bus.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

SPI Bus Bit Order

NOTE. The SPI Bus Bit Order option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select the Select tab and the SPI Serial bus type.

To Use

- Scroll through the Bus list and select the SPI bus to configure.
- Click the Bit Order box and select the direction from the drop-down list: MS First or LS First.



Behavior

- MS First causes the instrument to decode the data sequence from the MSB to the LSB.
- LS First causes the instrument to decode the data sequence from the LSB to the MSB.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Parallel Bus Setup

NOTE. The Parallel Bus Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Bus Setup window, select a bus from the Bus list, select the Parallel bus type, and then click the Add Sources button.

Overview

When you acquire data from a Parallel bus, you can set up the bus to be clocked or unclocked.

To Use

For information on the controls, click the buttons.

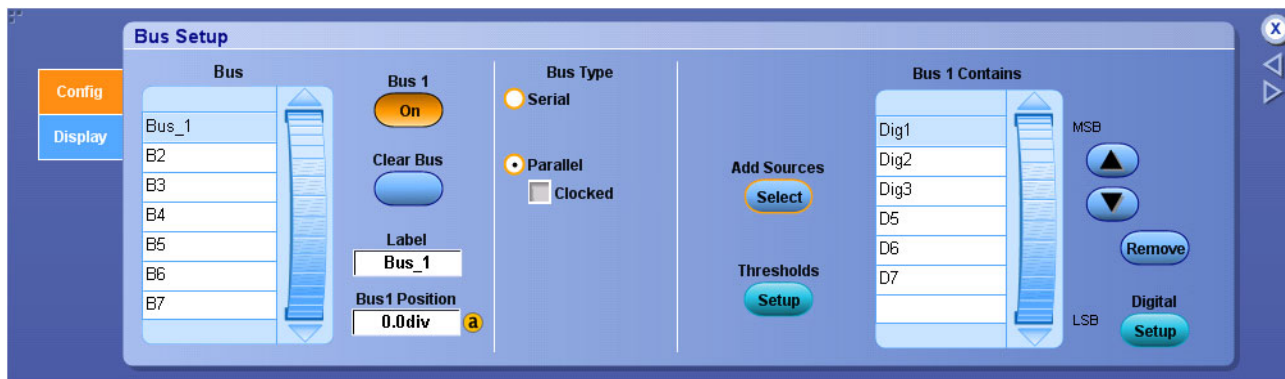

Behavior

If the bus is not clocked, the instrument acquires all data from the parallel bus at the sample rate of the instrument.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up a parallel bus. \(see page 454\)](#)
- [Learn how to troubleshoot circuits using a parallel bus. \(see page 461\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)

Clocked Parallel Bus Setup


NOTE. The Clocked Parallel Bus Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, select a bus from the Bus list and then select the Parallel bus type.

Overview

The instrument can trigger parallel bus data only when the Clock Source is Channel 4.

For information on the controls, click the buttons.

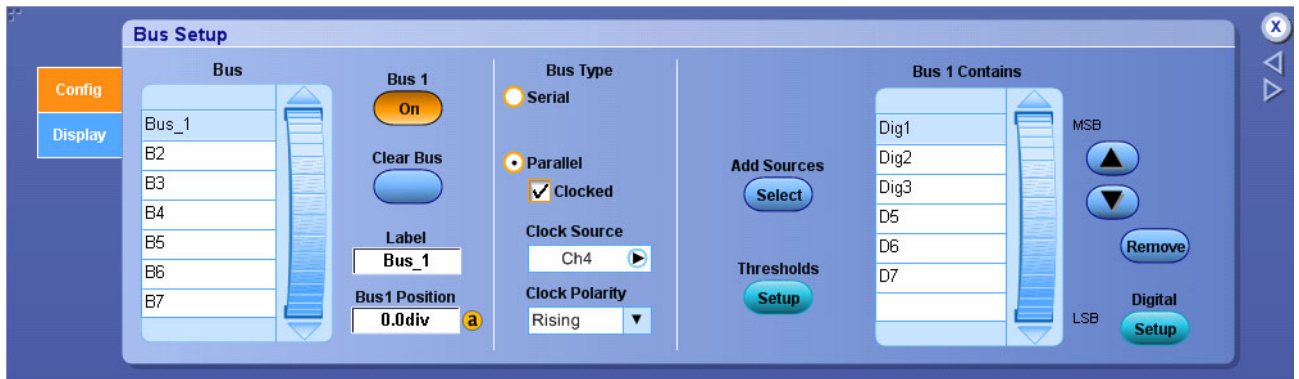

To Use

- To change the Clock Source, select a channel from the cascading list.
- To change the Clock Polarity, select from Rising, Falling, or Either.

Behavior

- Rising causes the instrument to decode data on the rising edge of the signal.
- Falling causes the instrument to decode data on the falling edge of the signal.
- Either causes the instrument to decode data on the rising and the falling edges of the signal.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up a parallel bus. \(see page 454\)](#)
- [Learn how to troubleshoot circuits using a parallel bus. \(see page 461\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)


Add Sources to a Parallel Bus

NOTE. The Add Sources to a Parallel Bus option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Bus Setup window, click the Add Sources Select button.

To Use

- Click the button for each channel to add to the bus.
- Click the OK button.

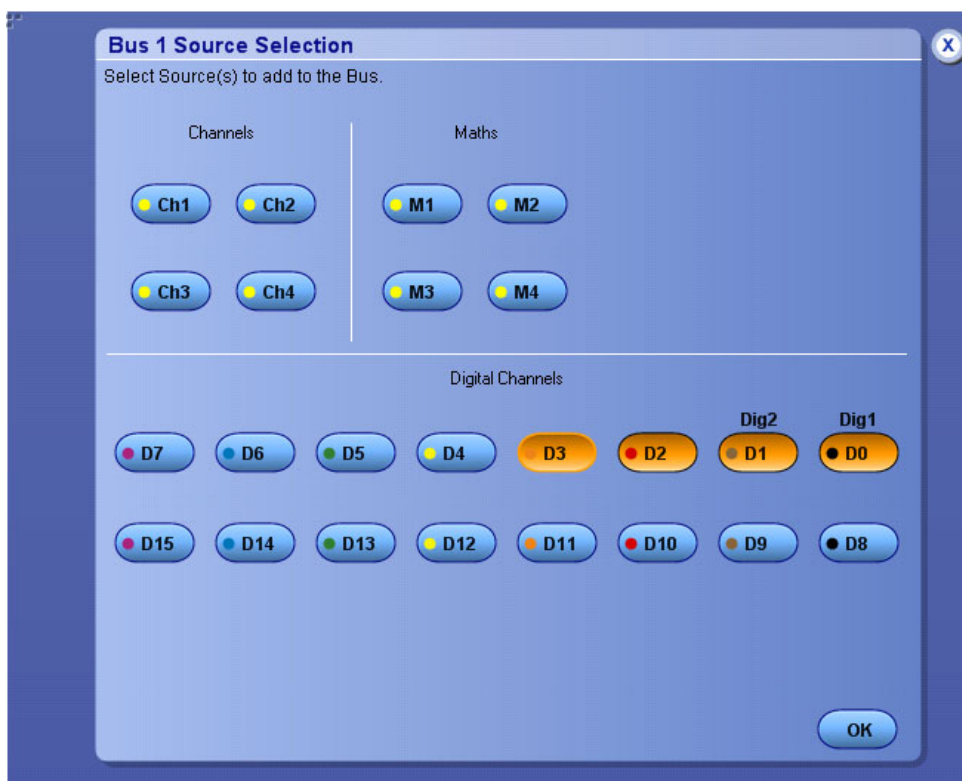

NOTE. You have the option to add user-defined labels for the analog, reference, bus, and digital sources.

Behavior

The instrument adds the channels to the parallel bus starting with the Most Significant Bit (MSB). As you select each subsequent channel, the instrument adds the channel to the bus as the next lower bit. The last channel you select is the Least Significant Bit (LSB).

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Bus Channels Thresholds Setup

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select a bus number from the Bus list.

To Use

- Click the Thresholds Setup button.
- Double-click the Threshold entry box for the desired channel, and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.

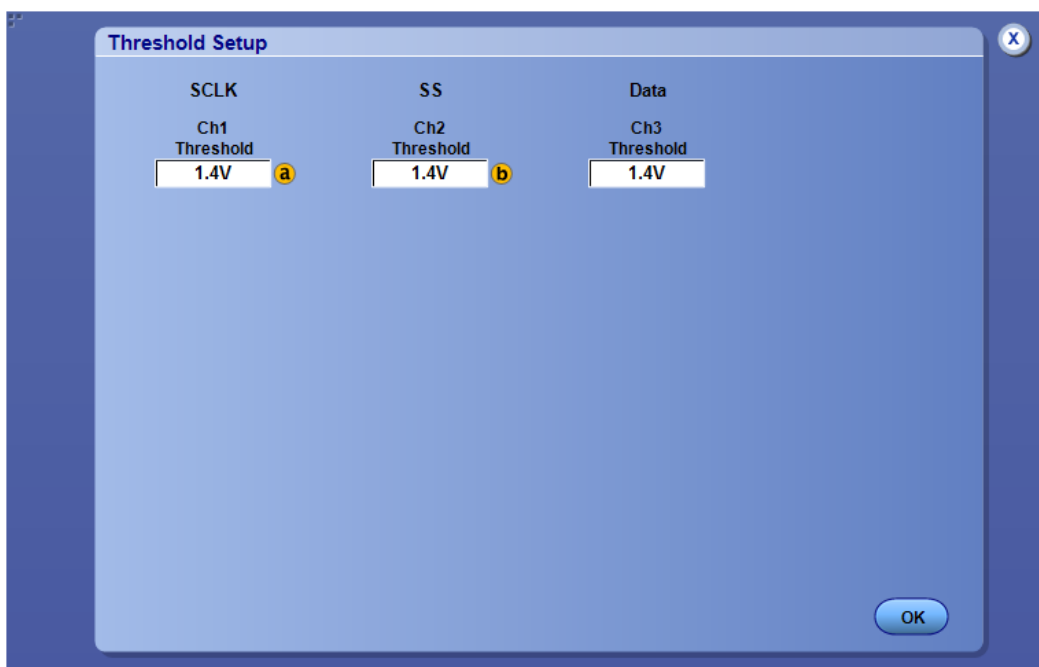

TIP. *To quickly set the thresholds for all channels to the same voltage level, use the [Global Threshold \(see page 87\)](#) entry box to set the value, and click the Apply button.*

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Change the Bit Order of a Channel in a Parallel Bus

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select a channel to move to a different bit order position within a parallel bus.

To Use

- Select a parallel bus from the Bus list.
- Click the channel for which you want to change the bit order in the Bus Contains list.
- Click the Up or Down arrows to change the bit order of the selected channel.

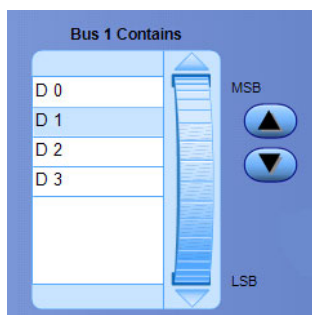

Behavior

- Moves the selected channel towards the MSB (most significant bit) position in the bit order when you click the arrow that points up.
- Moves the selected channel towards the LSB (least significant bit) position in the bit order when you click the arrow that points down.

TIP. *To quickly remove any channel from the parallel bus, double-click the channel in the Bus List control.*

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

 
Remove a Channel From a Parallel Bus

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select a channel to remove from a parallel bus.

To Use

- Select a parallel bus from the Bus list.
- Click the channel you want to remove from the Bus Contains list.
- Click the Remove button.

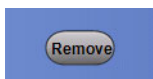

Behavior

The instrument removes the channel from the bus and shifts the bit order accordingly.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Bus Clock Source Channel Selection

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select a bus, select the Parallel bus type, and click Clocked.

To Use

- Connect a probe between the instrument and the clock signal in your system under test.
- Click the Clock Source selection box and select the appropriate channel from the cascading list.

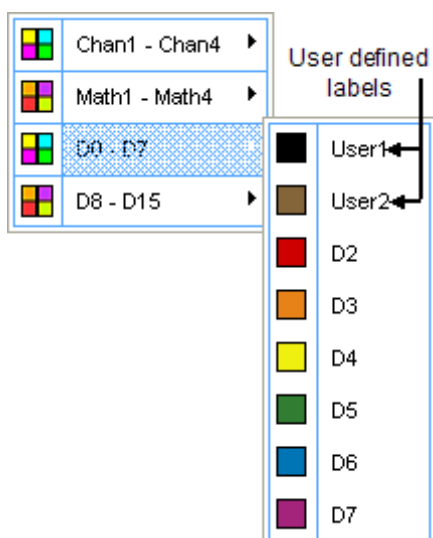

NOTE. *You have the option to add user-defined labels for the analog, reference, bus, and digital sources.*

Behavior

The instrument acquires data from the parallel bus only when the signal used as the Clock Source changes logic levels.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Bus Clock Channel Polarity

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select a bus, select the Parallel bus type, and click Clocked.

To Use

- Connect a probe between the instrument and the clock signal in your system under test.
- Click the Clock Polarity selection box and select from Rising, Falling, or Either.



Behavior

- Rising causes the instrument to acquire data on the rising edge of the signal.
- Falling causes the instrument to acquire data on the falling edge of the signal.
- Either causes the instrument to acquire data on the rising and the falling edges of the signal.

What do you want to do next?

- [Learn more about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)


Bus Setup Control Window (Display Tab)

From the Bus Setup window, select the Display tab.

Overview

Use the Bus Setup Display window to define how the instrument displays data acquired from the selected bus.


To Use

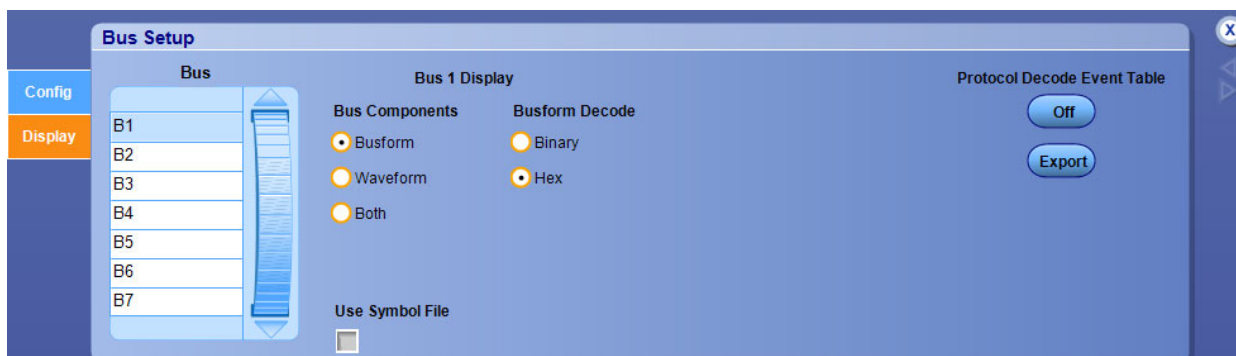


Behavior

The instrument displays data from the bus based on the selected Bus Components, Busform Decode option, and the symbol file.

For the RS232 serial bus, you can also display the decode packet view of the bus.

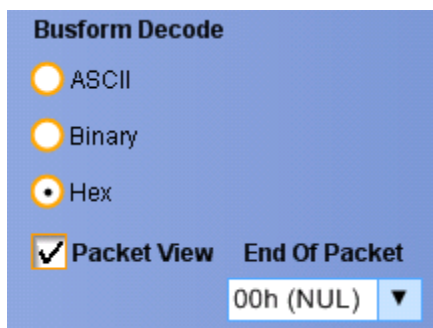

For the USB serial bus, you can also display the decode of the bus in mixed method.

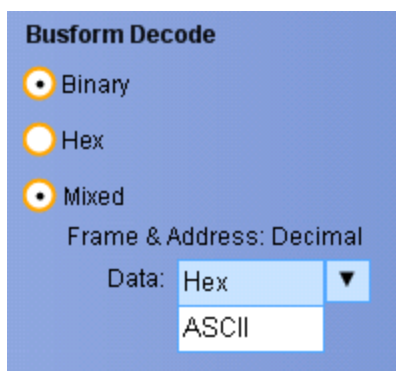

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn how to set up digital waveforms. \(see page 453\)](#)
- [Learn how to view analog characteristics of a digital waveform. \(see page 453\)](#)
- [Learn how to set up a bus. \(see page 454\)](#)
- [Learn how to trigger on a bus. \(see page 527\)](#)
- [Learn how to track down serial bus anomalies. \(see page 459\)](#)
- [Learn how to troubleshoot circuits using a parallel bus. \(see page 461\)](#)
- [Learn how to troubleshoot a serial bus. \(see page 464\)](#)

Bus Display Components

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select the Display tab.

To Use

- Scroll through the Bus list and select the bus to configure.
- Click a component to depict the data from logic waveforms as a waveform, as a busform, or as both.



Behavior

- Waveform causes the instrument to display only the digital traces of the channels in the bus.
- Busform causes the instrument to display only the decoded busform.
- Both causes the instrument to display waveforms and a busform.

What do you want to do next?

- [Learn more about bus configuration. \(see page 124\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Bus Decode Method

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select the Display tab.

To Use

- Scroll through the Bus list and select the bus to configure.
- Click the Busform Decode method to interpret and display the data from a bus as numeric.

Behavior

The instrument displays the busform based on the selected decode method.

- Hex causes the instrument to decode and display the bus as a hexadecimal value.

NOTE. *Hex decode is available for parallel and all the supported serial bus types.*

- Binary causes the instrument to decode and display the bus as a binary value.

NOTE. *Binary decode is available for parallel and all the supported serial bus types.*

- ASCII causes the instrument to decode and display the bus as an ASCII value.

NOTE. *ASCII decode is available for RS-232 serial bus type only.*

- Mixed causes the instrument to decode and display the bus frame and address in decimal. You have the option to display the data either as a hexadecimal or an ASCII value. Mixed displays the data type as symbols, and it displays the virtual channel and word count in decimal. All other fields are displayed in hexadecimal.

Mixed decoding methods like symbol for DT (Data Type MIPI element), decimal for VC (Virtual Channel MIPI element) and WC (Word Count MIPI element), and hexadecimal for all other fields are available for MIPI DSI-1 serial bus type.

NOTE. *Mixed decode is available for USB and MIPI serial bus types.*

What do you want to do next?

- [Learn more about bus configuration. \(see page 124\)](#)
- [Learn about the symbol file format. \(see page 130\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn to view the bus packets. \(see page 129\)](#)


View Bus Packet

NOTE. *Serial Bus Channel Type is only available on MSO70000/C models, MSO5000 models, and on DPO5000 models with option MSOE.*

From the Bus Setup window, select Serial from the Bus Type list and then select the RS-232 in the Config tab.

To Use

- Select the Packet View check box in the Display tab. The bus display shows decoded packet level information on the bus and displays the value in hexadecimal, binary, or ASCII in the bus waveform.
- Select one of the available options in the End of Packet list.

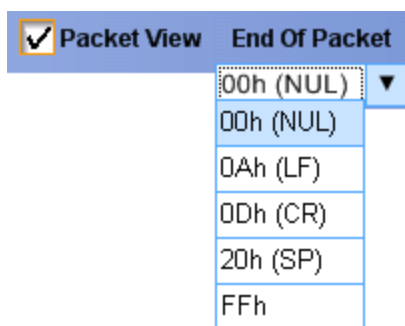

RS-232 decoding displays a stream of bytes. You can organize the stream into packets with an end-of-packet character.

Bus Symbol Table

NOTE. *Symbol tables are only available when a parallel bus is selected on MSO models and on DPO5000 models with option MSOE.*

Symbol files are files of alphanumeric symbol names and associated data values, and are used to map a group value to a text string. The instrument displays the symbol in place of the numeric value. For example, a symbol file could map an address group value to a specific bus cycle. This decoding makes it easier to recognize and locate specific numeric values on the bus.

[Symbol files must follow a specific format \(see page 130\)](#) to be compatible with the file reader of the instrument.

From the Bus Setup window, select the Configure tab.

To Use

- Scroll through the Bus list <B1-B16> and select the bus to configure.
- Click the Use Symbol File check box.
- [Click the Browse button to locate the file \(see page 132\).](#)



NOTE. The instrument looks for decode symbol table files in the C:\TekScope\BusDecodeTables directory.

Behavior

The instrument searches for the numeric value in the symbol table file and displays the corresponding symbol. For example, you might define a numeric value to display as RESET. If the instrument does not find a symbol assigned to a numeric value, the numeric value displays.

What do you want to do next?

- [Learn about the symbol file format. \(see page 130\)](#)
- [Learn how to find and open a symbol table file. \(see page 132\)](#)
- [See an example of parallel bus values displayed as symbols. \(see page 461\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn more about bus configuration. \(see page 124\)](#)

Symbol File Format

NOTE. Symbol tables are only available when a parallel bus is selected on MSO models and on DPO5000 models with option MSOE.

The requires a specific format to be compatible with the instrument reader. The instrument uses a format called TSF, which is the TLA Symbol Format used with Tektronix logic analyzers.

The file extension is .tsf. You can use any text editor to create a .

The file contains a TSF header line and lines to define the symbol names and values. White space (blank spaces or tabs) separates fields on a line. The first few lines of a file are typically comment lines to describe the file.

All lines in a that begin with a number sign (#) character are treated as comments, unless the very next character is a plus sign (+). The plus sign signifies a reader directive. The number sign character can also initiate a comment on the end of a symbol definition. All text between the number sign and the end of the line is treated as a comment and ignored.

A TSF header identifies the file format version to the reader in the instrument. The header also specifies that the file contains pattern symbols and the number system radices used to specify symbol values.


The next graphic show an example of a TSF header in a . The first few lines are comments that describe the file and are not required as part of the file header.

After the comment lines (if any), the file must contain the TSF header line that starts with the #+ characters and the Version number. The Version number contains three fields. The first two fields are the file format major and minor version numbers. The instrument only reads TSF files where the major and minor version number of the file is less than or equal to that of the instrument reader. The third field denotes minor format changes, which do not impact the file reader.

In the header, the Version number is followed by the word PATTERN.

Next in the header are two radix fields: Display and File. The Display Radix field sets the default radix that will be used to display the numeric symbol value. This field must be HEX, OCT, DEC, or BIN.

The File Radix field specifies the radix used by the symbol values in the file. The File Radix field must be HEX, OCT, DEC, or BIN.

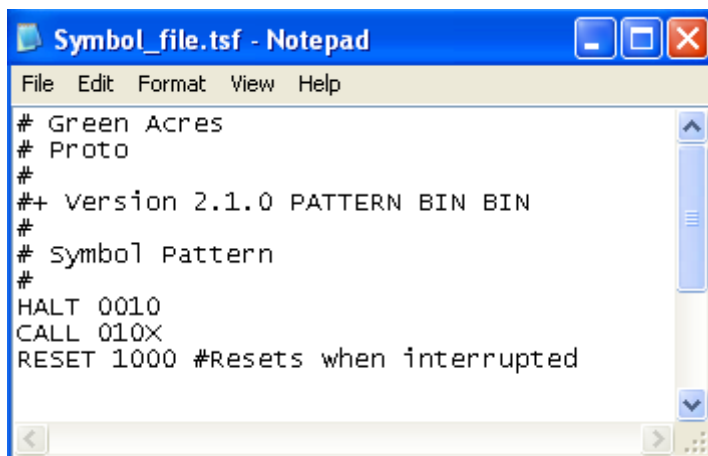

```

Symbol_file.tsf - Notepad
File Edit Format View Help
# Green Acres
# Proto
#
#+ Version 2.1.0 PATTERN BIN BIN
#
# symbol Pattern
#
HALT 0010
CALL 010X
RESET 1000 #Resets when interrupted

```

You can create symbol names from ASCII with up to 220 characters. The numeric values must reflect the base specified by the File Radix field. An X represents a “don't care” value. The number of bits represented by each character depends on the radix. For a HEX value, each character represents 4 bits. For an OCT value, each character represents 3 bits. For a BIN value, each character represents 1 bit.

NOTE. *The order of the symbols in the file is important. The instrument scans the list of pattern symbols starting from the top of the file and displays the first symbol that matches the bits with numeric values (not Xs).*

To Use

- Create a TSF file with symbols and numeric values.
- Copy the file to the C:\TekScope\BusDecodeTables directory on the instrument.
- From the Bus Setup window, select the Config tab and select a bus to decode.
- In the Display tab, select the Use Symbol File check box.
- Click the Browse button to locate the file.



Behavior

The instrument searches for the numeric value in the symbol table file and displays the corresponding symbol. If the instrument does not find the numeric value, there is no symbol and the numeric value displays.

What do you want to do next?

- [See an example of parallel bus values displayed as symbols. \(see page 461\)](#)
- [Learn how to find and open a symbol table file. \(see page 132\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn more about bus configuration. \(see page 124\)](#)


Opening a Bus Symbol Table File

NOTE. *Symbol tables are only available when a parallel bus is selected on MSO models and on DPO5000 models with option MSOE.*

From the Bus Setup window, select the Display tab, and then select the Use Symbol File check box.

To Use

1. Click the Browse button to locate the file.
2. Navigate to the file location or select a symbol table file from the dialog box.
3. Click Open.

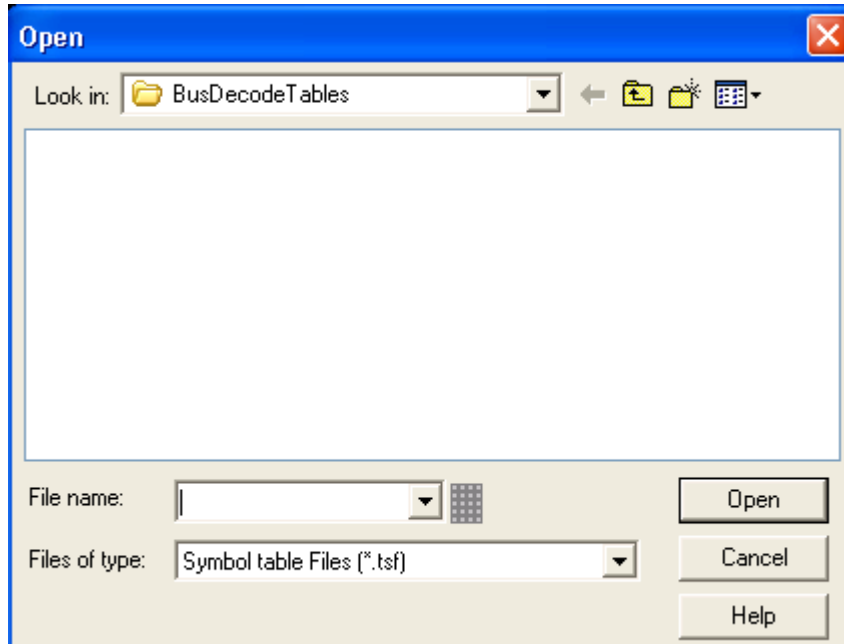

Behavior

This dialog box opens to the default directory `C:\TekScope\BusDecodeTables`. If you saved the file in another directory, you need to copy the file to the `C:\TekScope\BusDecodeTables` directory, where the instrument expects to find it. When you open a symbol table file, the instrument uses the values to decode and display bus values to be easier to recognize.

NOTE. *The only available file is in TSF format.*

What do you want to do next?

- [Learn about bus symbol tables. \(see page 129\)](#)
- [Learn about the format. \(see page 130\)](#)
- [See an example of parallel bus values displayed as symbols. \(see page 461\)](#)

Using MagniVu

NOTE. *The MagniVu feature is available on DPO5000 and MSO5000 Series instruments.*

Select MagniVu in one of the following ways:

- Digital menu.
- Horiz/Acq menu.
- Horiz/Acq > Horizontal/Acquisition Setup and click Acquisition tab.

Overview

Turn on or turn off MagniVu.

To Use

Select MagniVu to increase the resolution.


Behavior

MagniVu gives you higher resolution to accurately determine edge placement. This helps you make precise timing measurements on digital edges. You can see up to 32 times more detail than with normal digital channel sampling. The MagniVu record is acquired in parallel to the main digital acquisition and is available at any time, running or stopped. MagniVu provides an ultra high resolution view of your data sampled at a maximum resolution of 60.6 ps for 10,000 points centered around the trigger.

With MagniVu option disabled:



With MagniVu option enabled (the Sample Rate and Resolution values set):

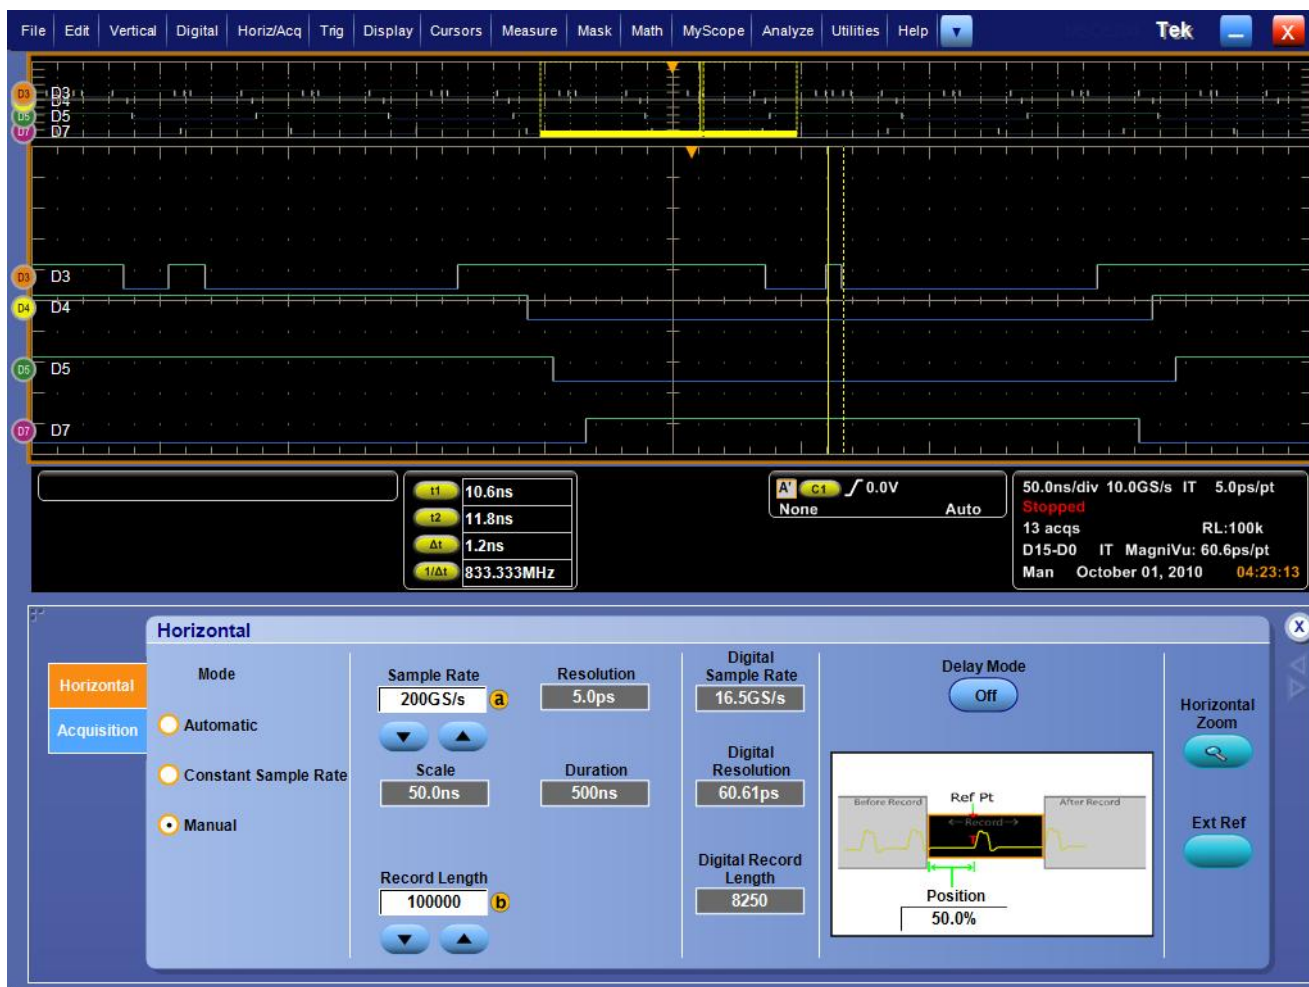

NOTE. The MagniVu record must always contain the trigger. If the trigger point is moved prior to the display region using Horizontal Delay, then the MagniVu record will not be available. In most of these cases, you can find the digital record by looking for the digital signal in the upper overview and panning accordingly.

NOTE. You should turn on MagniVu when light gray shading is displayed to indicate the uncertainty of the edge position. If the shading is not displayed, you do not need to use MagniVu.


Display Control Window (Appearance Tab)

From the Display menu, select Display Setup.


Overview

Use the Display General tab controls to change the display style, persistence, intensity, format, and interpolation.

For information on the controls, click the buttons.

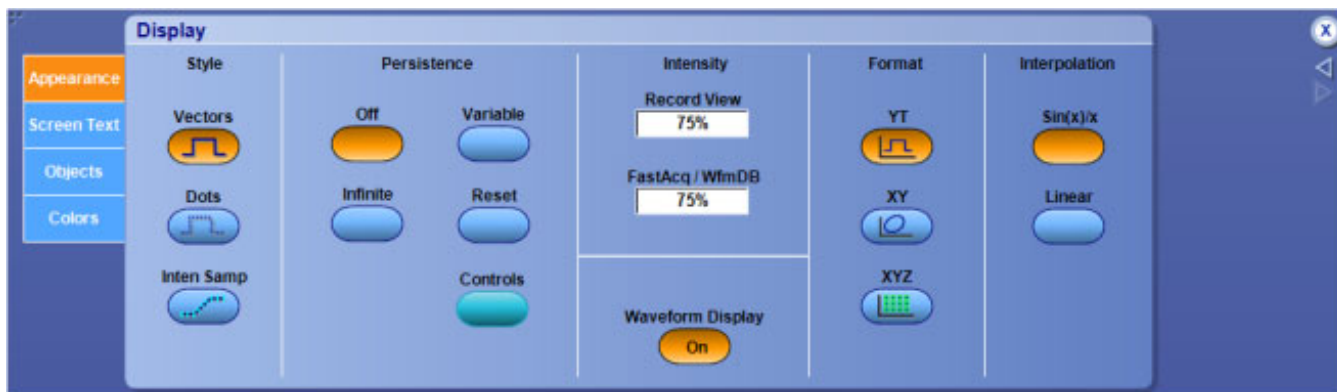

NOTE. The following screen appears on MSO/DPO5000 Series instruments.

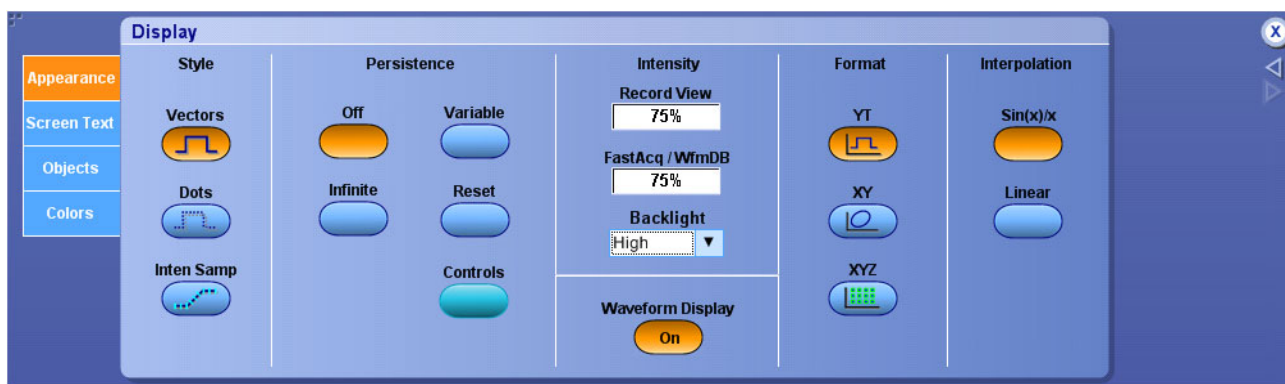

What do you want to do next?

- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)


- [Learn about changing the display colors. \(see page 144\)](#)

Display Control Window (Screen Text Tab)

From the Display menu, select Screen Text, or open the Screen Text tab in the Display control window.

Overview

Use the controls on the Screen Text tab to define text captions that you can add to the instrument display.

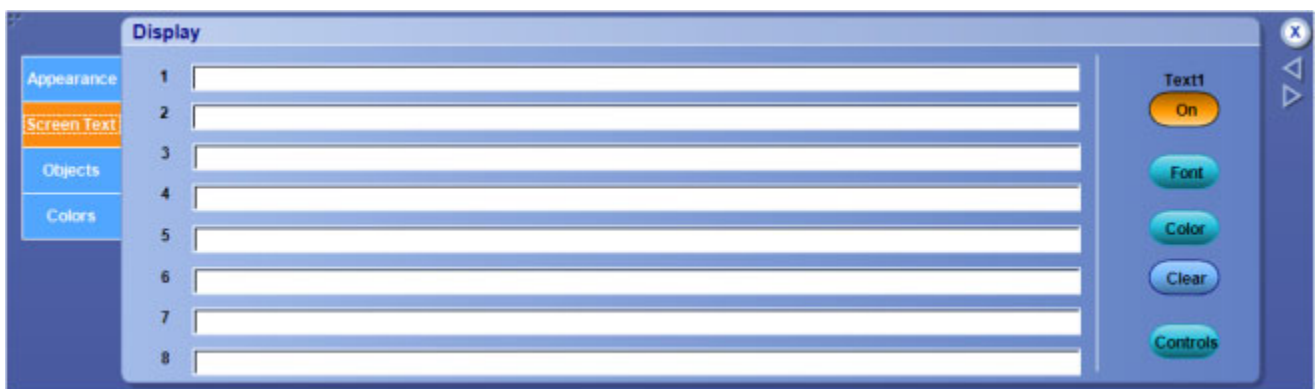

To Use

You can create up to eight lines of text to provide notes for screen shots, printouts, or for other instrument users.

- Click in a text field, 1 through 8.
- Click the Text <1–8> button to turn the message text On or Off on the display.
- Click the Font button to open the Font dialog box and change the font properties of the text.
- Click the Color button to open the Color dialog box and change the color properties of the text.
- Click the Clear button to delete the message text. (Text button must be On)
- Click Controls button to open the [Text Properties control window \(see page 142\)](#), where you can define the positioning of the message on the display.

Behavior

Click on one of the numbered lines and use the pop-up keyboard to enter up to 64 alphanumeric characters of text per line.

Click Clear to clear the entire text of the selected line. The screen text that you enter is not related to any waveform labels that you may have created. The waveform labels help you identify waveforms on the screen, while the screen text is intended to provide information or notes for screen shots or printouts.

TIP. *Position the text on the screen by clicking and dragging the text to the desired location on the graticule.*

What do you want to do next?

 
- [Learn about defining screen text properties. \(see page 142\)](#)
- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

Text Properties Control Window

From the Display menu, select Display Setup; then open the Screen Text tab and click the Controls button.

Overview

Use the Text Properties control window to position text to specific locations on the graticule.

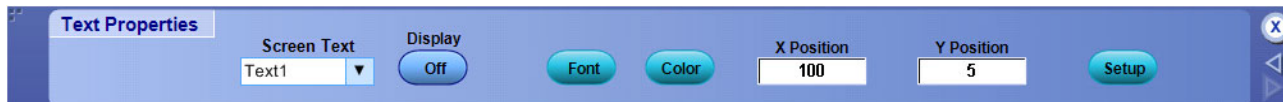

To Use

Select the line of text from the Screen Text drop-down list; then use the X Pos and Y Pos controls to define the location of the text on the graticule.

Behavior

The text from the drop-down list is the text you defined under the Screen Text tab of the Display control window.

The units for the position controls are in pixels. The minimum values are 1 for both X and Y positions. The maximum X value is 450; the maximum Y value is 390. The origin of the X position is the left vertical graticule boundary, while the origin of the Y position is the upper horizontal graticule boundary.

Setup opens the Display control window with the Screen Text tab selected. Click Setup to enter new lines of text.

TIP. You can also position the text on the screen by clicking and dragging it to the desired location.

What do you want to do next?

- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)

Display Control Window (Objects Tab)

From the Display menu, select Objects, or open the Objects tab in the Display control window.

Overview

Use the Objects tab controls to change the appearance of objects on the oscilloscope display.

For information on the controls, click the buttons.




To Use

- Click the Date/Time button to show the current date and time on the graticule.
- Click the [Trigger T \(see page 144\)](#) button to turn this display marker on and off.

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)

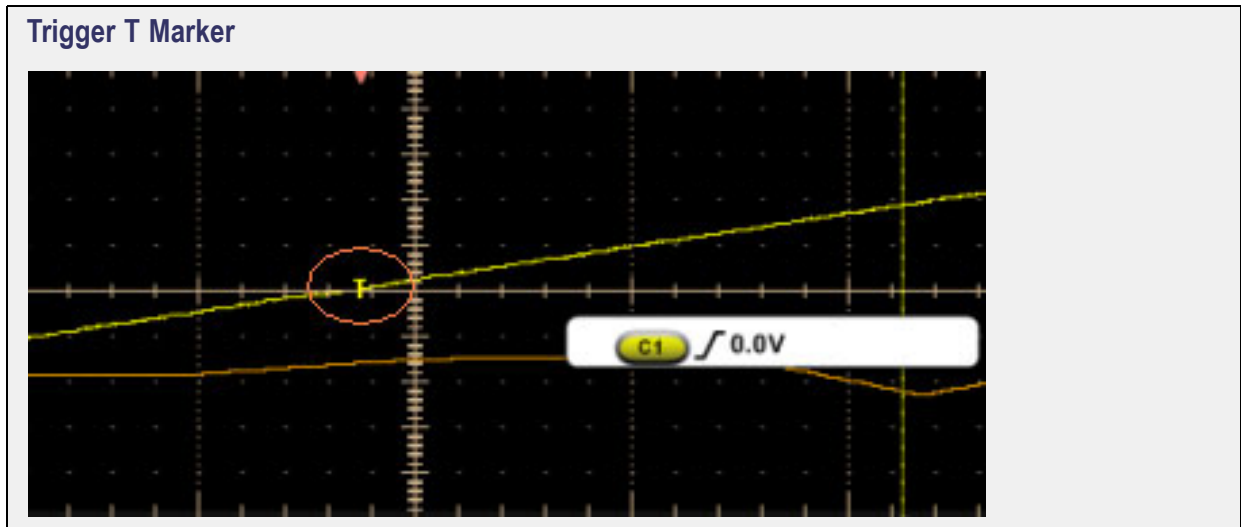

Display Control Window (Colors Tab)


From the Display menu, select Colors, or open the Colors tab in the Display control window.

Overview

Use the controls on the Colors tab to change waveform color palettes. You can define colors for the live, math, and reference waveforms.

If you are using Waveform Database acquisition mode, select the FastAcq/WfmDB Palette. For all other acquisition modes, use the Record View Palette.

For information on the controls, click the buttons.

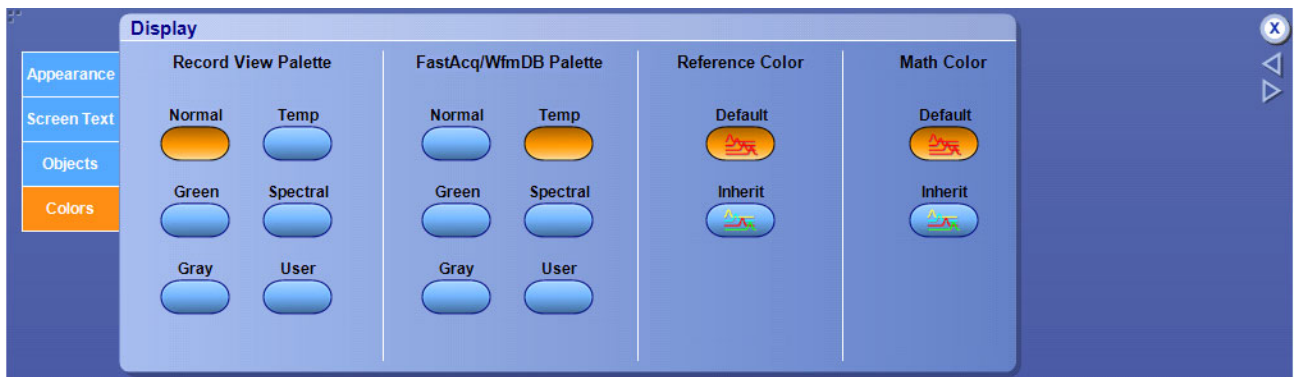

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

- [Learn about using text with screen displays. \(see page 140\)](#)


Display Persistence

From the Display menu, select Display Setup; then open the Appearance tab.

To Use

Click one of the buttons to select the display persistence.

- Click Infinite (persistence) to continuously accumulate record points on the waveform until you change one of the acquisition display settings.
- Click Variable; then click in the Time entry box and use the multipurpose knobs to set the persistence time.
- Click Reset to clear the persistence.
- Click the Controls to activate the Persistence Control window.

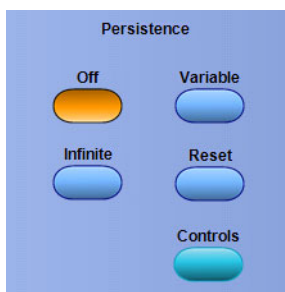

Behavior

- Use infinite persistence for displaying record points that may occur outside the normal acquisition envelope.
- Use Variable to accumulate record points on the waveform for a specified time interval. Each record point decays independently according to the time interval.
- If you click Off, the waveform record points appear for the current acquisition only.

TIP. Use the Display menu Display Persistence submenu or right-click in the graticule and select Display Persistence from the shortcut menu to directly access the persistence options.

What do you want to do next?

- [Learn about changing the display colors. \(see page 144\)](#)


- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

Display Format

From the Display menu, select Display Setup; then open the Appearance tab.

To Use

Click one of the buttons to select the display format.

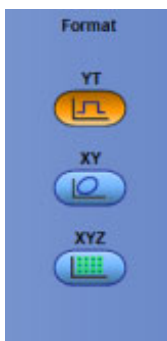

Behavior

YT format is the conventional oscilloscope format:

- Amplitude appears on the vertical axis as the signal varies over time on the horizontal axis.
- When you set the vertical position to center the display in YT format, the XY display is at center screen, and each division of display in YT mode produces a division of display in XY mode.

XY format plots the amplitude of one waveform against the amplitude of another waveform on a point-by-point basis:

NOTE. *Fast Acquisition in XY or XYZ display modes is available on all instruments except MSO/DPO5000 Series instruments.*

- This format is useful for showing the relationship between two signals, such as current and voltage waveforms that combine to form an I-V characteristic.
- When using this format, waveforms appear according to their [channel pairings \(see page 148\)](#). XY format is a dot-only display, although it can have persistence.
- The Vector style selection has no affect when you using XY format.

- When using this format, the horizontal scale continues to control the time base and the horizontal position continues to control the portion of the waveform that is shown.
- [Vectors and Intensified Samples \(see page 653\)](#) selections are not available when using the XY Display Format.

XYZ format compares the voltage levels of the X and Y channel waveform records point-by-point, as in XY format. The displayed waveform intensity is modulated by the Z channel waveform record. Refer to the table below for channel assignments.

NOTE. *Fast Acquisition in XY or XYZ display modes is available on all instruments except MSO/DPO5000 Series instruments.*

X-Axis input	Y-Axis input	Z-Axis input
Ch 1	Ch 2	Ch 3

A -5.0 division signal, including position and offset, on the Z channel produces a blank screen; a +5.0 division signal produces full intensity.

NOTE. *Selecting YT or XY only affects the display. The Horizontal, Vertical, and Position knobs (and menus) control the same parameters except in the Fast Acquisition XY format where the horizontal scale setting is not used.*

TIP. *Use the Display menu Display Format submenu to directly access the format types.*

What do you want to do next?

- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

XY Format Pairs

When you use the XY display format, channel and reference waveforms are assigned to the axis indicated in the following table.

XY Pair	X Axis	Y Axis
Ch 1 and Ch 2	Ch 1	Ch 2
Ch 3 and Ch 4	Ch 3	Ch 4
Ref 1 and Ref 2	Ref 1	Ref 2
Ref 3 and Ref 4	Ref 3	Ref 4

If you only display one source when you enter the XY format, the instrument automatically turns on the other source waveform to complete the XY pair.

NOTE. *You cannot display math waveforms in XY format. You cannot display logic waveforms in XY or XYZ format.*

Waveform Intensity

 
From the Display menu, select Display Setup; then open the Appearance tab.

To Use

- Click in the Record View entry box and use a multipurpose knob to adjust the intensity of live waveforms, except when using Fast Acquisition or Waveform Database acquisition mode.




- Click in the FastAcq/WfmDB entry box and use a multipurpose knob to adjust the intensity of live waveforms when using Fast Acquisition or Waveform Database acquisition mode.

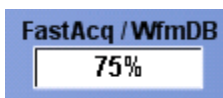

NOTE. Backlight control option is available only on MSO/DPO5000 and DPO7000/C Series instruments.

- Click in the Backlight list box and use the multipurpose knob to adjust the intensity of the backlight to the required option.

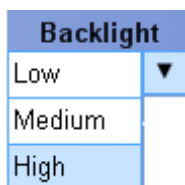

What do you want to do next?


- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)

Waveform Interpolation

From the Display menu, select Display Setup; then open the General tab.

To Use

Click one of the buttons to select the interpolation that best displays the waveforms. Interpolation globally affects all displayed waveforms.

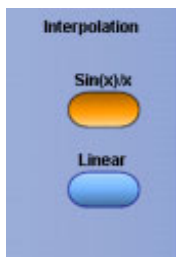

Behavior

The instrument interpolates waveforms in Zoom mode when there is less than one sample for each pixel column. These functions are performed on the acquired data as compared to the displayed data.

- Click Sin(x)/x to compute record points along a curve between the actual acquired samples. This form of interpolation is useful when acquiring rounded waveforms such as sine waves. It is good for general-purpose uses but may introduce overshoot or undershoot in signals with fast rise times. This interpolation is also useful for looking at high-frequency signals, especially where the frequency components are just below the [Nyquist frequency \(see page 150\)](#).
- Click Linear to compute record points between actual acquired samples using a straight-line fit. This interpolation is useful for measuring waveforms with fast rise times, such as pulse trains.

TIP. Use the Display menu Waveform Interpolation submenu to directly access the interpolation options. You may want to set the display style so that the real samples are intensified and interpolated samples are dimmed.

What do you want to do next?

- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)

Nyquist frequency

The highest frequency that any digital oscilloscope can measure without errors is one-half of the sample rate or frequency. This frequency is called the Nyquist frequency.


The FFT waveform displays the input signal frequency components from DC (0 Hz) to the Nyquist frequency.

Graticule Style

From the Display menu, select Objects, or open the Objects tab in the Display control window.

To Use

Click one of the buttons to select the graticule (display grid) style.

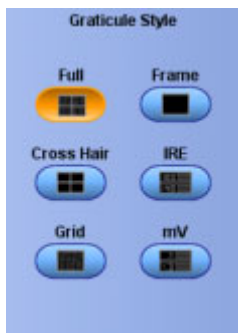

Behavior

- Full provides a grid, cross hairs, and frame on the instrument display. Use Full to make quick estimates of waveform parameters.
- Cross Hair shows cross hairs and a frame on the instrument display. This style is useful for making quick estimates of waveforms while leaving more room on the display for automatic readouts and other data.
- Grid shows a frame and a grid on the instrument display. This style is useful for making quick, full-screen measurements with cursors and automatic readouts when cross hairs are not needed.
- Frame shows only a frame on the instrument display. This style is useful with automatic readouts and other screen text when other display features are not needed.
- Use IRE if you are working with NTSC video signals. The instrument sets the graticule to accommodate the vertical position and scale of the signal.
- Use mV if you are working with video signals other than NTSC. The instrument sets the graticule to accommodate the vertical position and scale of the signal.

TIP. Use the Display menu Graticule Style submenu to directly access the graticule style options.

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)

- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)


Color Palettes

From the Display menu, select Colors, or open the Colors tab in the Display control window.

To Use

Click the buttons to define the color for displayed waveforms.

- Use the buttons under FastAcq/WfmDB Palette to define the color for live waveforms when using Waveform Database acquisition mode.
- For some models, click the Edit button to activate the [Display Palette \(see page 532\)](#), where you can customize a waveform color.

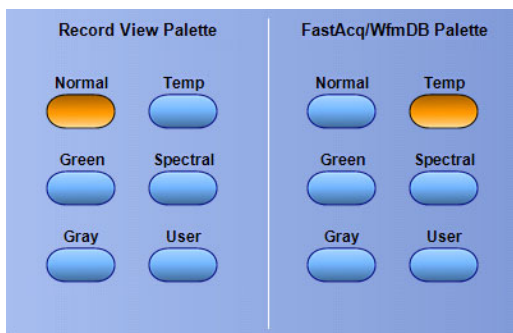

TIP. Use the Display menu Record View Palette or the WfmDB Palette submenu to directly access the color palettes.

Behavior

- Click Normal to define hues and lightness levels for best overall viewing. The color of each channel waveform matches the color of the corresponding front-panel vertical SCALE knob.
- Click Spectral (Spectral Grading) to define areas of the waveform with the highest sample density appear in blue shades while the areas of lowest sample density appear in red shades.
- Click Temp (Temperature Grading) to define areas of the waveform with the highest sample density appear in warmer colors (red shades) while the areas of lowest sample density appear in cooler colors (blue shades).

- Click Gray (Monochrome Gray) to define waveforms in shades of gray. Areas of the waveform with the highest sample density appear in lighter gray shades while the areas of lowest sample density appear in darker gray shades.
- Click Green (Monochrome Green) to define waveforms in shades of green. Areas of the waveform with the highest sample density appear in lighter green shades while the areas of lowest sample density appear in darker green shades.
- Click User to display a color that you have previously defined with the User Palette.

TIP. *The Green palette simulates the display of an analog oscilloscope.*

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)

Remote Operation

Remote Desktop Connection

NOTE. Remote Desktop Connection option is available MSO/DSA/DPO70000C and DPO7000C Series oscilloscopes.

You can find the network setup program in the Windows Start menu. Either select All Programs > Accessories > Remote Desktop Connection, or select Programs > Accessories > Communications > Remote Desktop Connection.

Display Remote

NOTE. Display Remote.

Use Remote Desktop Connection option on MSO/DSA/DPO70000C and DPO7000C Series oscilloscopes. [Remote Desktop Connection for MSO70000 Oscilloscopes \(see page 154\)](#) Display Remote was used with older instruments (DPO7000, DPO/DSA70000, and DPO/DSA70000B Series Oscilloscopes).

From the Display menu, select Display Remote.

The instrument is compatible for remote operation using pcAnywhere and VNC (Virtual Network Computing) software. Use the Display Remote menu to toggle the remote display on and off.

To Use

1. Set up the remote PC software on both the instrument and PC.
2. To enable the remote capability, select Display Remote from the Display menu.

Behavior

Enable the Display Remote option to display waveforms and view them remotely.

You can display waveforms and view them remotely when you enable the Display Remote option.

NOTE. When Display Remote is enabled, display updates, control window access, and menu items operation are slow.

Horizontal/Acquisition Control Window (Horizontal Tab)


From the Horiz/Acq menu, select Horizontal/Acquisition Setup; then open the Horizontal tab.

Overview


The Horizontal control window manages the horizontal parameters of waveforms. The controls in the Horizontal tab are common to all channels.

Use the Horizontal tab to set up the horizontal mode and to adjust the horizontal scale. Normally, the horizontal axis displays time information. However, in some cases, the horizontal axis can represent frequency rather than time.

For information on the controls, click the buttons.

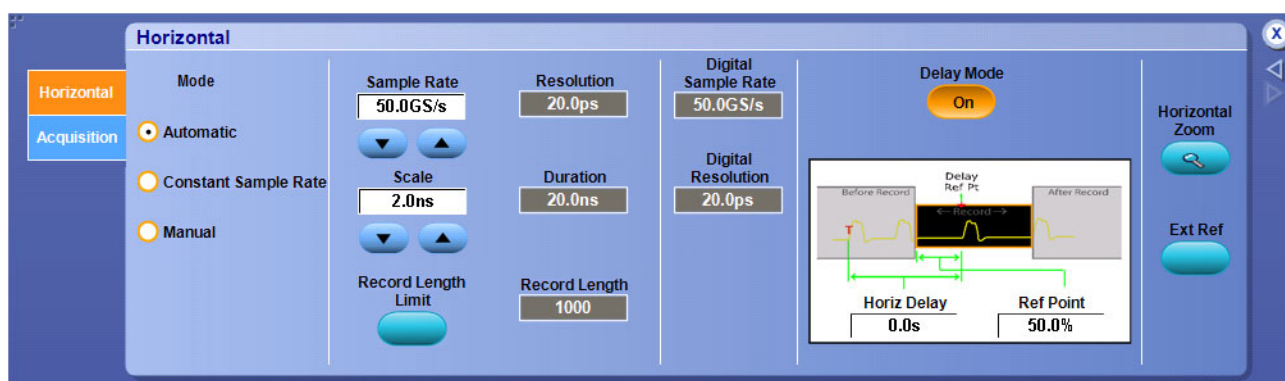

The following screen appears on MSO/DPO5000 Series instruments:

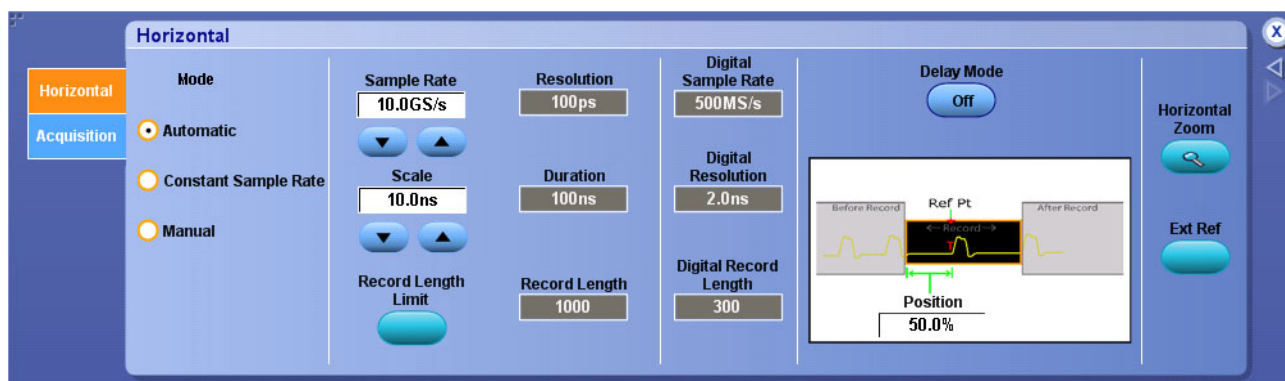

What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 745\)](#)


- [Learn about the Acquisition Setup controls \(see page 159\)](#)

Set Record Length Limit

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then click Record Length Limit.

To Use

- Use the Record Length Limit entry box to set the maximum record length.
- Use the Max button to set the record length limit to its maximum value.
- Use the Min button to set the record length limit to its maximum value.

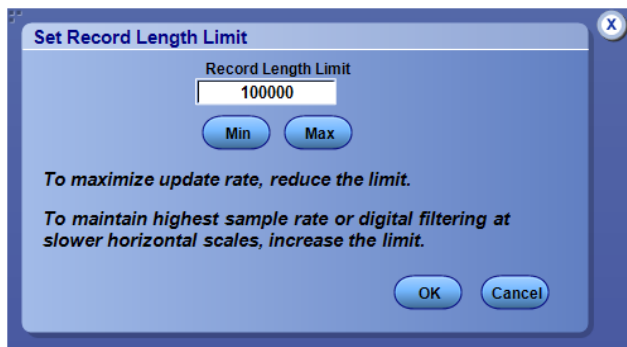

To increase the update rate, lower the record length limit. To enable higher sample rates or digital filtering at slower horizontal scales, increase the record length limit.

What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 745\)](#)
- [Learn about the Acquisition Setup controls. \(see page 159\)](#)

Horizontal Digital Control Window


NOTE. The Horizontal Digital control window is only available when a parallel bus is selected on MSO models and on DPO5000 models with option MSOE.

From the Horiz /Acq menu, you can view the Digital Sample Rate and Digital Resolution of logic waveforms. The values track the sample rate and resolution of the analog system.


To Use

- Use the Sample Rate and Scale entry boxes to set the Digital Sample Rate and the Digital Resolution.

The following screen is captured on MSO70000/C Series instruments:

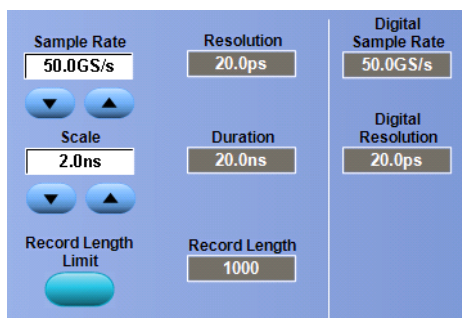

The following screen is captured on MSO/DPO5000 Series instruments:

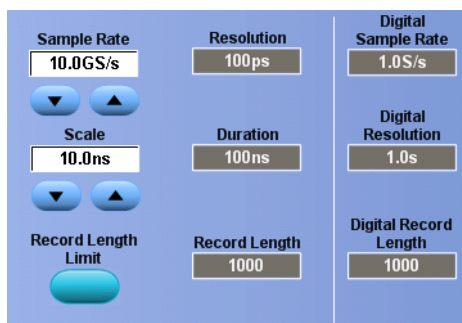

What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 745\)](#)
- [Learn about the Acquisition Setup controls. \(see page 159\)](#)

Horizontal Position/Scale Control Window

From the Horiz /Acq menu, select Position/Scale.

Overview

Use the Horizontal control window to set the horizontal position and scale of displayed waveforms.

For information on the controls, click the buttons.



To Use

- Click the Delay Mode button to toggle the [horizontal delay on \(see page 159\)](#).

Behavior

You can use this control window to turn on horizontal delay so the acquisition window can be focused on events that occur at a fixed delay after the trigger point.

NOTE. *The dedicated Horizontal controls on the front panel also perform the same functions.*

What do you want to do next?

- [Learn more about the Horizontal Position controls. \(see page 676\)](#)
- [Learn more about the Horizontal Scale controls. \(see page 677\)](#)
- [Learn more about the Horizontal Delay Mode. \(see page 676\)](#)
- [Learn more about the Horizontal controls. \(see page 171\)](#)

 
Horizontal Position/Scale Control Window: Delay Mode On

From the Horiz /Acq menu, select Position/Scale.

Overview

Use the Horizontal control window to set the horizontal delay and the horizontal scale of the displayed waveforms when the horizontal delay is on.

For information on the controls, click the buttons.

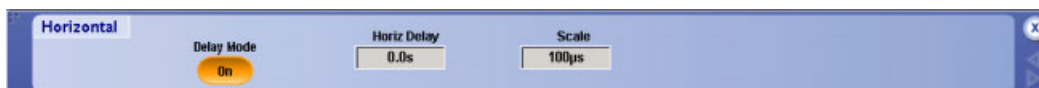

To Use

- Click the Delay Mode button to toggle the horizontal delay on or off.

Behavior

You can use this control window to turn on horizontal delay so the acquisition window can be focused on events that occur at a fixed delay after the trigger point.

NOTE. *The dedicated Horizontal controls on the front panel also perform the same functions.*

What do you want to do next?

- [Learn more about the Horizontal Delay Mode. \(see page 678\)](#)
- [Learn more about the Horizontal Scale controls. \(see page 679\)](#)
- [Learn more about the Horizontal controls. \(see page 171\)](#)

Horizontal/Acquisition Control Window (Acquisition Tab)


From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the Acquisition tab.

Overview


Use the Acquisition tab to set the acquisition parameters for all live waveforms. The Acquisition controls are common to all channels. This means that you cannot acquire in Sample mode on channel 1 while channel 2 acquires in Envelope mode.

To Use

For information on the controls, click the buttons.

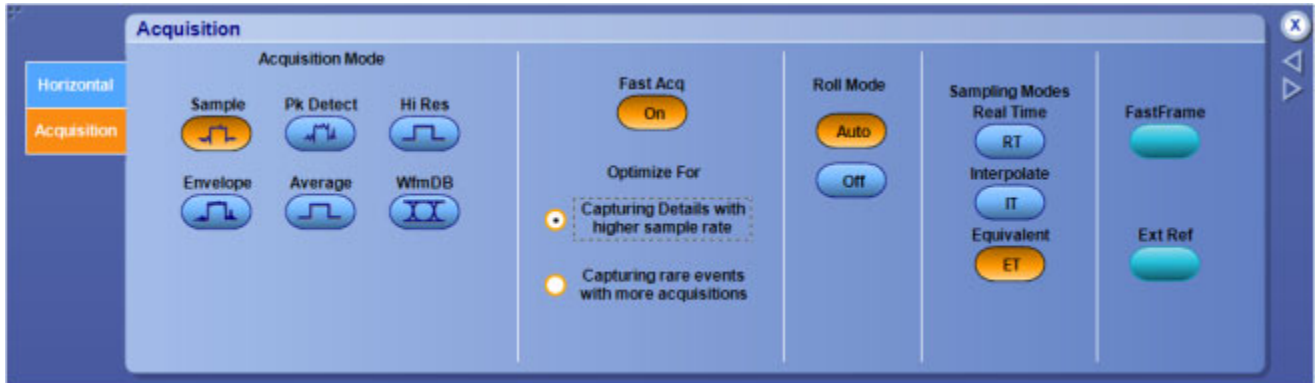

The following screen appears on MSO/DPO5000 Series instruments:

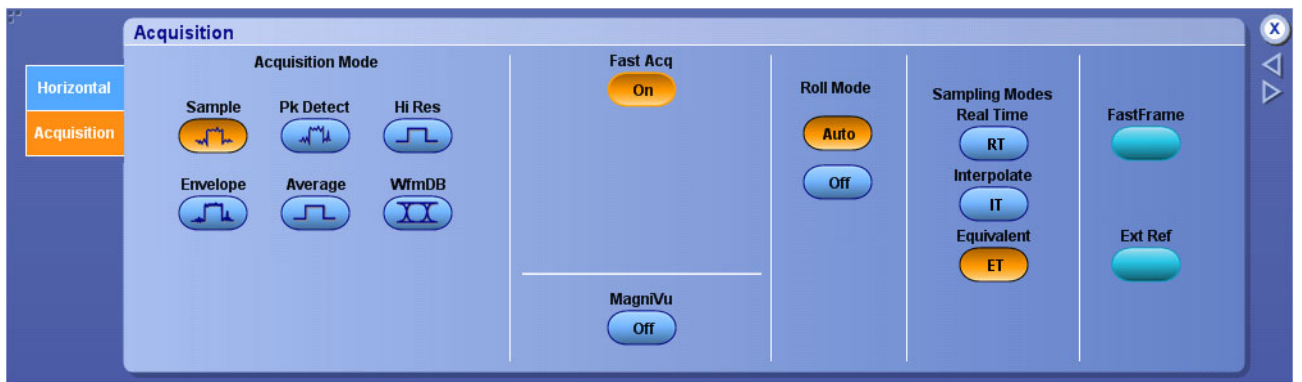

Behavior

Acquisition is the process of sampling the analog input signal, digitizing the signal to convert it into digital data, and then assembling the signal information into a waveform record. The instrument creates a digital representation of the input signal by sampling the voltage level of the signal at regular time intervals. The sampled and digitized points are stored in memory along with the corresponding timing information. The instrument uses the digital representation of the signal for display, measurements, or for further processing.

Use the controls on this tab to define the sampling method, the acquisition mode, turn Fast Acquisitions on or off, and activate an external reference.

On MSO/DPO5000 Series instruments, you can turn on or turn off MagniVu.

What do you want to do next?

 
- [Learn about Acquisition modes. \(see page 680\)](#)
- [Learn about MagniVu. \(see page 135\)](#)

Autoset

From the Horiz/Acq menu, select Autoset or push the front panel Autoset button.

Overview

Use Autoset to automatically set up the front-panel controls based on the characteristics of the input signal. This is much faster and easier than manually setting up the controls.

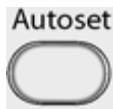

Autoset may change the vertical position to place the waveform appropriately on screen. The instrument always sets vertical offset to 0 V.

To Use

If you use Autoset when one or more channels are displayed, the instrument selects the lowest numbered channel for horizontal scaling and triggering. The instrument individually scales all displayed vertical channels. If you use Autoset with no vertical channels displayed, the instrument turns on and scales channel 1.

The [Autoset Undo \(see page 163\)](#) button opens in a control window after the instrument completes the operation. Click this button to undo only the parameters adjusted by the last Autoset.

NOTE. *The Autoset Undo control window remains on the screen until you open another control window. After Autoset Undo closes, you can still undo the last Autoset by selecting the Undo Last Autoset command from the Edit menu or the Horiz/Acq menu. Although the last Autoset is immediately undone, the Autoset Undo control window does not open again.*

- Select User Preferences from the Utilities menu to display the [Prompt Before Action \(see page 430\)](#) window.
- Click Autoset to toggle between Off and On. Off immediately performs an Autoset when the Autoset button is pushed. On displays a prompt when the Autoset button is pushed.
- Click Close to save your selection.

The following table lists the Autoset default settings.

Control	Changed by Autoset to
Selected Channel	Last channel selected
Acquisition Mode	Sample
Run/Stop	Run
Deskew, Channel/Probe	Unchanged
Display Style	Vectors
Display Intensity–Record View	If less than 50%, set to 75%
Display Format	YT
Horizontal Position	Centered within the graticule window
Graticule Setting	Unchanged
Horizontal Scale	As determined by the signal frequency, or 100 μ s/div
Record Length and Sample Rate	When a new time per division is calculated, the sample rate changes to maintain the current record length. If the sample rate cannot be changed because of hardware limitations, the sample rate is set to maximum while the record length is reduced to maintain the time per division.
Trigger Position	Delay Off
Trigger A >B Sequence	A Only
Main Trigger Type	Edge
Trigger Source	Numerically lowest displayed channel (the selected channel)
Trigger Level	50% of selected channel amplitude
Trigger Slope	Positive
Trigger Coupling	DC
Trigger Holdoff	Minimum setting
Vertical Scale	As determined by the signal level
Vertical Position	As determined by the number of active channels
Vertical Coupling	DC unless AC was previously set. AC remains unchanged.
Vertical Bandwidth	Full
Vertical Offset	0 volts
Zoom	Off

Autoset Preferences

From the Utilities menu, select User Preferences and the Prompts tab.

Overview

You can set the instrument to display a prompt asking you to confirm the requested action before applying the Autoset function.

To Use

Select User Preferences from the Utilities menu to display the [Prompt Before Action \(see page 430\)](#) window.


- Click Autoset to toggle between Off and On. Off immediately performs an Autoset when the Autoset button is pushed. On displays a prompt when the Autoset button is pushed.
- Click Close to save your selection.

Autoset Undo Control Window

Press Autoset on the instrument front panel to undo the last autoset operation.

Overview

The Autoset Undo window opens automatically following an autoset. Use this control to undo the last autoset operation.

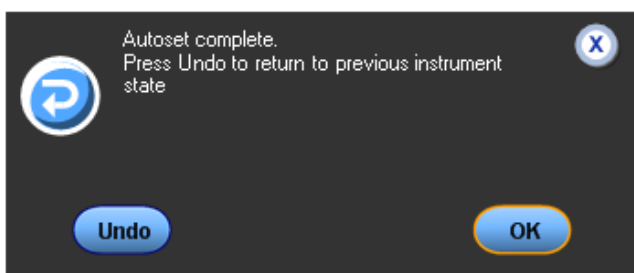

To Use

- Click Undo. Only the parameters set by the last autoset are undone. The settings you have changed since the last autoset (that are not controlled by Autoset) remain unchanged.
- Click OK to close the window and proceed without an Undo.

Behavior

The Autoset Undo window remains open until you click Undo or OK. After the Autoset Undo window closes, you can still undo the last autoset by selecting Undo Last Autoset from the Edit or Horiz/Acq menus; the last autoset is immediately undone but the Autoset Undo control window does not open again.

To suppress the AutoSet Undo window following an autoset, do the following:

1. From the Utilities menu, select User Preferences.
2. Open the Prompts tab.
3. Under Prompt user before performing requested action, toggle the Autoset Undo button to Off.

What do you want to do next?


- [Learn about Autoset. \(see page 163\)](#)

Fast Acquisitions

From the Horiz /Acq menu, select Fast Acquisitions, or press the front panel Fast/Acq button.

Overview

Use these controls to turn the Fast Acquisition feature on or off and to optimize waveform detail.

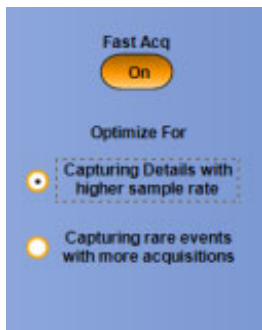

To Use

1. Click the Fast Acq button to turn Fast Acquisitions On or Off. You will also find this control in the Acquisitions tab of the [Horizontal/Acquisition control window \(see page 159\)](#),
2. Click the option boxes to optimize acquisitions for your measurement: Capturing Details with Higher Sample Rate enhances waveforms detail, Capturing Rare Events with More acquisitions provides the fastest update rate.

NOTE. The options *Capturing Details with higher sample rate* and *Capturing rare events with more acquisitions* are not available on MSO/DPO5000 Series instruments.

Behavior

Fast Acquisitions mode keeps the [dead time \(see page 165\)](#) between acquisitions very short. This improves the chances of acquiring infrequent events. When Fast Acquisitions are turned on, the front-panel FastAcq button is lighted.


If Fast Acquisitions mode is on and you attempt to activate a feature that conflicts with this mode, Fast Acquisitions mode will be inhibited. When the conflicting feature is turned off, in most cases, Fast Acquisitions will resume.

What do you want to do next?

- [Learn about Roll mode. \(see page 166\)](#)

Dead Time

Dead time is the time that the instrument requires to process an acquisition.

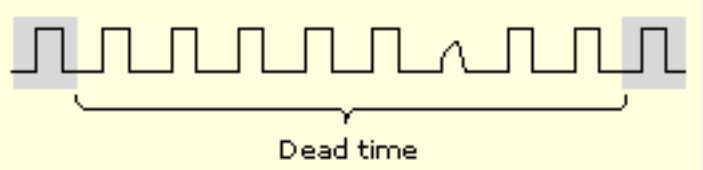

The instrument cannot acquire any new data until the previous data has been processed. If dead time is long, the instrument can miss acquiring infrequent events.

Run/Stop Control Window

From the Horiz /Acq menu, select Run/Stop.

Overview

Use the Run/Stop control window to start and stop waveform acquisition.



To Use

- Click Run/Stop to toggle waveform acquisition. (You can also press the front panel Run/Stop button.)
- Click Single Sequence to complete a single acquisition sequence.
- Click Force Trigger to immediately start acquiring waveform data without a valid trigger event.

Behavior

These controls operate identically to the front-panel controls.

- Click Run/Stop once to stop waveform acquisition. The Status readout at the top of the graticule changes from Running to Stopped and shows the number of acquisitions. Click Run/Stop again to resume waveform acquisition.
- Click Single Sequence to provide a single sequence of acquisitions each time you click the button. When Single Sequence is enabled, the front-panel single sequence (Single) button is lighted.
- In Sample, Peak Detect, or Hi Res acquisition modes, the instrument acquires waveform records with the first valid trigger event and then stops. In Average or Envelope acquisition modes, the instrument makes the specified number of acquisitions to complete the averaging or enveloping task.
- In Waveform Database mode, the instrument acquires and displays a waveform that is the accumulation of several acquisitions. In addition to time and amplitude, the waveform displays a count of the number of times a specific sample point has been acquired.
- When you click Single Sequence (or press the Single button) in Equivalent Time mode, the instrument continues to recognize trigger events and acquires samples until the waveform record is filled.
- Click Force Trigger once to acquire a waveform record without a trigger event. Forcing a trigger is useful when the input signal does not contain a valid trigger. The instrument recognizes and acts upon the forced trigger even when you click the button before the end of the pretrigger holdoff. The button has no effect when acquisitions are stopped.

What do you want to do next?

- [Go to the Horizontal/Acquisition control window. \(see page 155\)](#)
- [Return to the Acquisition Setup control window. \(see page 159\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Roll Mode

From the Horiz /Acq menu, select Roll Mode Auto, or click Roll Mode in the Acquisition tab of the [Horizontal/Acquisition control window \(see page 159\)](#).

Overview

Use these controls to turn Roll Mode on or off.



Roll mode lets you see acquired data without waiting for the acquisition of a complete waveform record. It gives you immediate feedback. For slow time base settings, Roll mode provides a rolling display similar to a strip-chart recorder.

To Use

- The resolution appears near the lower-right corner of the graticule and is controlled by the Resolution knob.
- Use Untriggered Roll Mode to continuously observe a slow process. Apply math and measurement operations after you stop the acquisition.
- When Roll mode is on, the Acquisition Status Indicator Readout displays Roll.

Behavior

When using Roll mode, you do not have to wait for slow acquisitions to fill the display. When Roll mode is enabled, the instrument displays newly acquired data points at the right edge of the display while moving the older waveform data points to the left.

Using single sequence with roll mode causes the acquisition to automatically stop after a complete waveform record is acquired. Roll mode is useful when observing a slow process where you always want to see the most recent view of that process. Roll mode with single sequence is useful to save data for later viewing. For example, at 20 seconds per division and 30 K record length, there are 12,000 seconds of acquired data points.

The maximum record length where Roll mode is allowed is 10 M.

What do you want to do next?

- [Learn how Roll mode interacts with other instrument settings. \(see page 689\)](#)
- [Learn about Equivalent Time mode. \(see page 167\)](#)

Sampling Modes

From the Horiz /Acq menu, select Sampling Modes, or select a sampling Mode in the Acquisition tab of the [Horizontal/Acquisition control window \(see page 159\)](#).

Overview

To enable a sampling mode, click one of the Sampling Modes button.



To Use


- In Real Time, the instrument acquires all the points in a waveform record after one trigger event.
- In Interpolated time, the instrument interpolates between the samples it acquires when it cannot acquire all the real samples it needs to fill up its waveform record. The instrument can interpolate either as part of an acquisition or as part of the zoom/display behavior.
- In Equivalent time, sampling begins when the time base setting (horizontal scale) is too fast to let the instrument get enough samples with which to create a waveform record using real-time sampling.

NOTE. *In real-time sampling, the instrument digitizes all of the points it acquires after one trigger event. Always use real-time or interpolated sampling to capture single-shot or transient events.*

Behavior

Equivalent Time mode lets you accurately acquire repetitive waveforms at sample rates much higher than the base analog-to-digital converter sample rate. Equivalent time sampling is generally not useful for acquiring time-varying, random, or single-shot events.

The instrument takes a few samples with each trigger event and eventually obtains enough samples to construct a waveform record. The instrument takes samples independent of the trigger position and displays them based on the time difference between the sample and the trigger. You should only use Equivalent Time mode on repetitive signals.

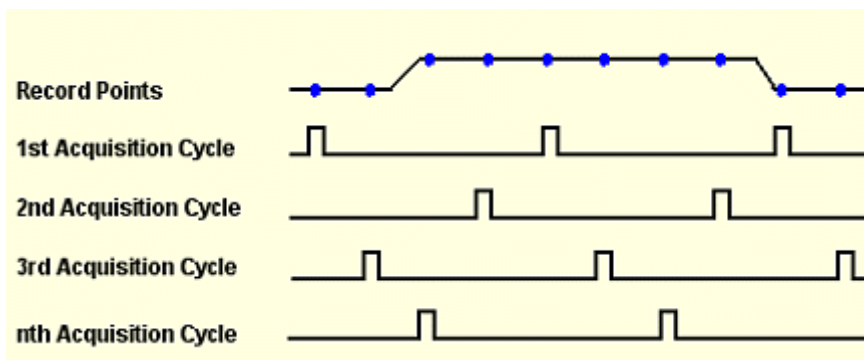

The sampling speeds and the number of channels you choose affect the mode the instrument uses to sample waveforms. The instrument always uses real-time sampling at slower time base settings; faster time settings force the instrument to switch from real-time sampling to equivalent-time sampling.

The following tables show the time base setting(s) at which the switch from real-time sampling (RT) to equivalent-time sampling (ET) occurs for your instrument.

Sampling mode selection DPO7254, and DPO7104 with Option 10X

Channels on	1	2	3 or 4
Time base ≥ 100 ps/pt	RT	RT	RT
50 ps/pt	RT	RT	ET
25 ps/pt	RT	ET	ET
≤ 25 ps/pt	ET	ET	ET

Sampling Mode Selection DPO7104, and DPO7054 With Option 10X

Channels on	1	2	3 or 4
Time base ≥ 200 ps/pt	RT	RT	RT
100 ps/pt	RT	RT	ET
50 ps/pt	RT	ET	ET
≤ 50 ps/pt	ET	ET	ET

Sampling Mode Selection DPO7054

Channels on	1	2	3 or 4
Time base ≥ 400 ps/pt	RT	RT	RT
200 ps/pt	RT	RT	ET
100 ps/pt	RT	ET	ET
≤ 100 ps/pt	ET	ET	ET

Sampling Mode Selection DPO70000/B/C, DSA70000/B/C, and MSO70000/C

Channels on	1	2	3 or 4
Time base ≥ 40 ps/pt	RT	RT	RT
≤ 20 ps/pt	ET/IT	ET/IT	ET/IT

The type of equivalent-time sampling the instrument uses is called random equivalent-time sampling. Although it takes the samples sequentially in time, it takes them randomly with respect to the trigger.

Random sampling occurs because the instrument sample clock runs asynchronously with respect to the input signal and the signal trigger. The instrument takes samples independently of the trigger position and displays them based on the time difference between the sample and the trigger.

What do you want to do next?

- [Go to the Horizontal Setup control window. \(see page 155\)](#)
- [Return to the Acquisition Setup control window. \(see page 159\)](#)

Resolution Control Window

From the Horiz /Acq menu, select Resolution.

Overview

Use the Resolution control window to select the number of samples per division for all acquired waveforms.



To Use

Click in the Record Length control box and use the multipurpose knob or keypad to change the setting.

Behavior

The Duration, Sample Rate, and Resolution controls are readouts only. Their settings are impacted by other controls.

- Duration specifies the time across the 10-division screen.
- Sample Rate specifies the number of samples per second that will be acquired for each waveform. The faster the sample rate, the more accurately the instrument can represent fine details in a fast signal.
- Resolution is similar to the acquisition interval. It can be thought of as the time between sample points. In most cases, the acquisition interval is the same as the resolution.
- Record Length specifies the total number of samples in the waveform acquisition. The maximum record length depends on the amount of memory in the instrument. Because the instrument can only store a finite number of waveform data points, there is a trade-off between the waveform details and the record length. You can acquire either a detailed picture of a waveform for a shorter period of time or a less detailed picture for a longer period of time.

What do you want to do next?

 
- [Learn about the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the Acquisition Setup control window. \(see page 159\)](#)

Acquisition Mode Control Window

From the Horiz /Acq menu, highlight Acquisition Mode; then select Mode.

Overview

The acquisition mode determines how the waveform data points are produced from the sampled data.

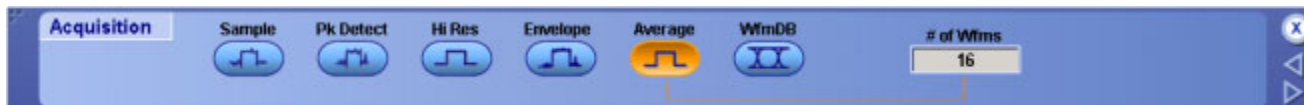

To Use

Select the acquisition mode by clicking the appropriate button.

- If you use Average or Envelope mode, select the number of waveforms for that mode using the multipurpose knob.
- If you use Waveform Database mode, select the number of samples using the multipurpose knob.

Behavior

A single waveform data point can be made up of several sequentially acquired data points. The waveform data points can also be created from a composite of sampled data taken from multiple acquisitions.

- Sample mode acquisition creates a record point by saving one or more samples during each [acquisition interval \(see page 173\)](#). Sample mode is the default acquisition mode. The instrument does no post processing of the acquired samples in this mode.
- Pk Detect (Peak Detect) acquisition alternates between saving the highest sample in one acquisition interval and the lowest sample in the next acquisition interval. Peak Detect mode only works with real-time, noninterpolated sampling.
- Hi Res (High Resolution) acquisition averages all samples taken during an acquisition interval to create a record point. This average results in a higher-resolution, lower-bandwidth waveform. This mode only works with real-time, noninterpolated sampling.
- Envelope acquisition acquires and displays a waveform record that shows the extremes in variations over several acquisitions. The instrument saves the highest and lowest values in two adjacent intervals similar to the Peak Detect mode. Unlike Peak Detect mode, the peaks are gathered over many trigger events.
- Average acquisition acquires and displays a waveform record that is the average result of several acquisitions. This mode reduces random noise. Use the multipurpose knob to specify the number of waveforms that you want to average.

After each trigger event, the instrument acquires data and then compares the minimum and maximum values from the current acquisition with those stored from the previous acquisition. The final display shows the most extreme values for all the acquisitions for each point in the waveform record.

- WfmDB (Waveform Database) acquisition acquires and displays a waveform that is the accumulation of several acquisitions. In addition to time and amplitude, the waveform displays a count of the number of times a specific sample point has been acquired. The value at each point on the waveform is a counter that reflects the hit intensity. The instrument acquires data after each trigger event using

Sample mode. It then determines the location of each sample point and accumulates it with shared data from previous acquisitions. This is the only mode that can be used when doing mask testing with an optical standard. Fast Acq is inhibited in Waveform Database mode.

What do you want to do next?

- [Learn about the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the Acquisition Setup control window. \(see page 159\)](#)

Acquisition Interval

The acquisition interval is the time between sample points. For mathematical purposes, it is the time covered by the waveform record divided by the record length.


FastFrame Control Windows

From the Horiz /Acq menu, select FastFrame Setup.

Overview

Use the FastFrame control windows to capture and view a series of triggered acquisitions without wasting acquisition memory on the [dead time \(see page 165\)](#) between the trigger events.

For information on the controls, click the buttons.

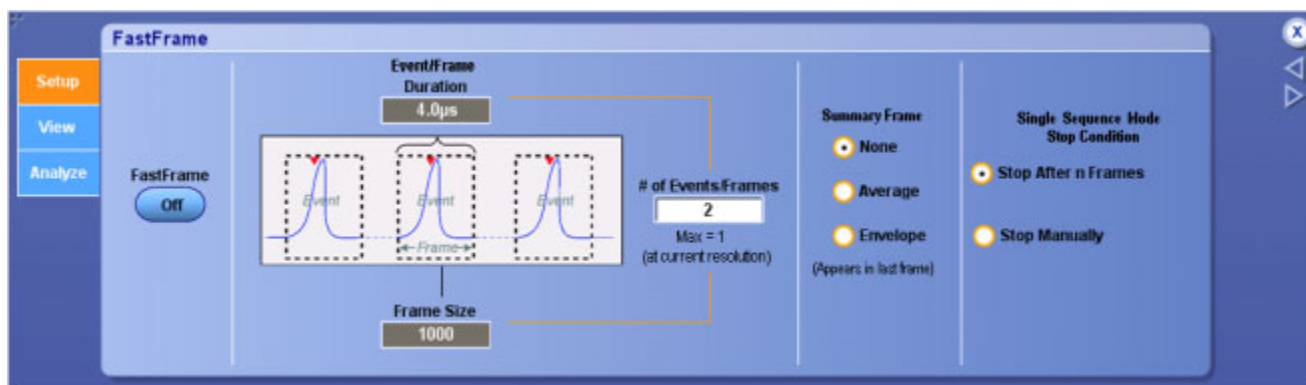

Behavior

FastFrame mode combines multiple acquisitions into one large data record. By carefully defining the trigger conditions, you can use FastFrame to capture only [multiple events \(see page 174\)](#) of the waveform that you are interested in. Each captured event is stored sequentially in its own [frame \(see page 724\)](#). The frames are in the order they were captured.

FastFrame mode lets you jump to and view the desired frame. Time Stamps can display the absolute trigger time for a specific frame and the relative time between triggers of two specified frames. FastFrame lets you compare different waveforms. Math is performed on each frame.

FastFrame provides the following features:


- Measure time between triggered acquisitions using [time stamps \(see page 175\)](#) in Sample, Peak Detect, and Hi Res mode.
- Save and recall FastFrame waveforms.
- Display waveforms in YT mode.
- Apply math functions to FastFrame waveforms.
- Confine automatic measurements only to the displayed frame.
- Overlay multiple frames for easy comparison.

FastFrame is not compatible with the following features or modes:

- Equivalent Time
- Histograms
- Fast Acquisitions
- Average
- Envelope

What do you want to do next?

- [Learn about the frame setup controls. \(see page 759\)](#)
- [Learn more about the Selected Frame controls. \(see page 726\)](#)
- [Learn about the reference frame and time stamps. \(see page 723\)](#)
- [Learn how to set up the instrument for FastFrame operation. \(see page 759\)](#)
- [Learn some tips for using FastFrame. \(see page 786\)](#)

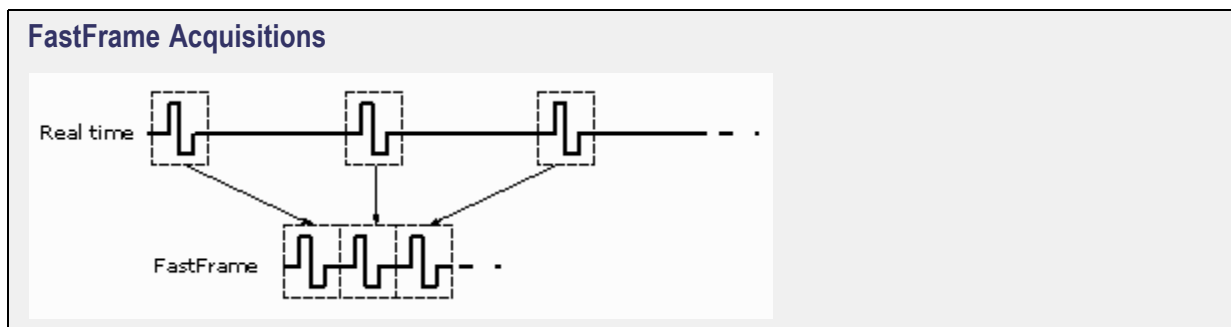

Time Stamps


Time stamps are a convenient way of measuring the time between triggers when using FastFrame.

Zoom Control Setup Window

From the Vertical or Horiz/Acq menu, select Zoom Setup.

Overview

Use these control windows to define the overall settings of the Zoom controls.

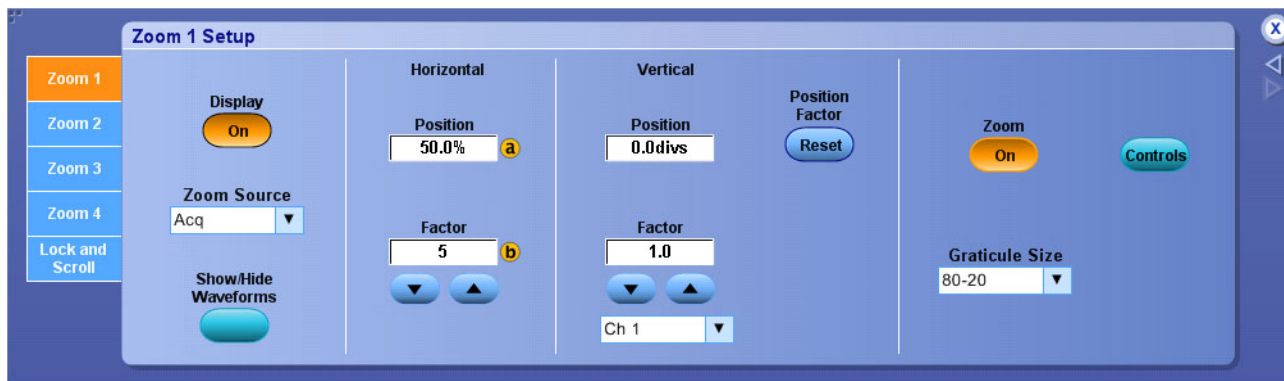

To Use

- Click the Zoom <1–4> tabs to set up each zoom area. The controls under each tab apply only to that zoom area. Click the Display On to turn on the display of that area. (MultiView Zoom must also be turned on to display any of the zoom areas.)
- Click in the Zoom Source entry box, and then use the drop-down list to select a source for the zoomed area.
- Click the Show/Hide Waveforms button to open the Show/Hide Waveforms dialog box; here you can identify waveforms you do not want to display in the selected zoom area.
- Click the Zoom button On to turn on Zoom. You can also toggle Zoom on and off with the MultiView Zoom button on the front panel.
- Click the Ch <1–4> entry box, and then use the drop-down list to select which waveform, (Ch <1–4>, Math <1–4>, or Ref <1–4>), the Vertical Position and Factor controls adjust.
- Click in the Position and Factor entry boxes, and then use the controls to change the position and factor (or scale) in the Zoom area. They can be adjusted with the multipurpose knobs. To reset the Position and Factor controls, click Reset.

- Click the Graticule Size down arrow and select the size of the Acquisition and Zoom windows from the drop-down list. Select 80-20 to allocate 80% of the available display for the zoomed graticule and 20% for the acquisition window. Select 50-50 to allocate half of the available display for the zoomed graticule and half of the available display for the acquisition window. Select Full to use the entire display for the zoomed graticule.
- Click the Lock and Scroll tab to scroll the zoomed area(s). To scroll a single zoomed area, select the zoom area (1–4), and then click an Auto Scroll button. You can also set the scroll speed. To scroll multiple zoomed areas simultaneously, click Lock, and then click the zoomed areas (1–4) you want to scroll through. This locks the zoomed areas in their relative horizontal positions.

TIP. Use the Vertical or Horiz/Acq menu Zoom Graticule Size submenu to directly access the Graticule Split options.

Behavior

Use the Zoom Setup control window to magnify (zoom in on) a waveform without changing the main acquisition parameters. Use Zoom when you want to temporarily look at details of a waveform.

If the zoom areas are unlocked, the Horizontal Position and Factor controls affect only the selected zoom area. The Horizontal Position and Factor will affect all zoom areas that are locked together, such that a change to one zoom area will change the horizontal position and factor of all the locked zoom areas.

On the Vertical Zoom tab, the Scale and Factor controls only affect the selected waveform.

What do you want to do next?

- [Return to the Vertical Setup control window overview. \(see page 355\)](#)
- [Return to the Horizontal Setup control window. \(see page 155\)](#)

Mask Testing Control Window (Masks Tab)


From the Mask menu, select Mask Setup.

Overview

Use these controls to set up a mask test. You can set the type of mask, polarity, display, and alignment.

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.*

For information on the controls, click the buttons.

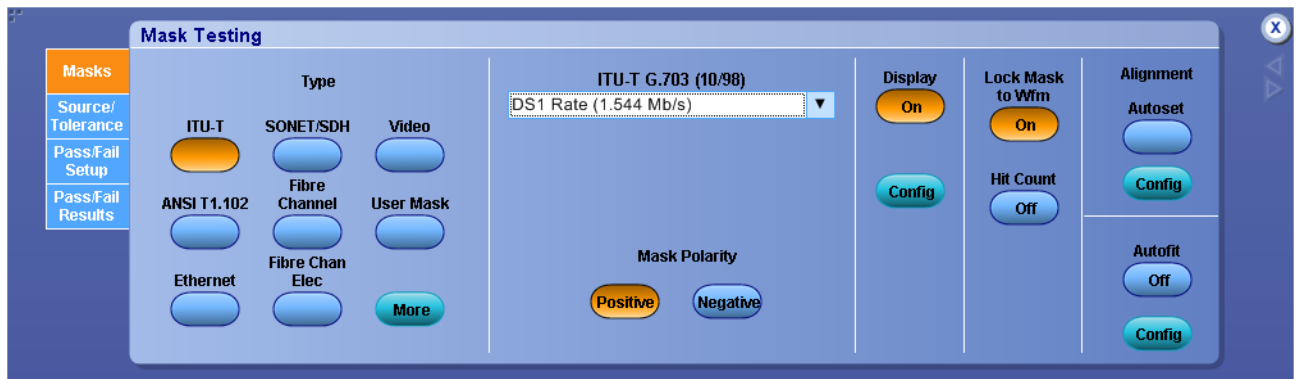

What do you want to do next?

- [Learn more about mask setups. \(see page 187\)](#)
- [Learn more about mask test setups. \(see page 189\)](#)

Serial Mask Testing Option

- Install Option MTM on DPO7000/C and MSO/DPO5000 Series instruments.
- Install Option MTH on DPO70000/B/C, DSA70000/B/C, and MSO70000/C Series instruments.


Mask Type Controls

From the Mask menu, select Mask Setup; then open the Masks tab.

Overview

Use the Type controls to choose a mask. Use the standard drop-down list to select a standard for the mask test. The Mask Polarity control will appear, depending on the standard selected. Use the Mask Polarity controls to choose whether to test the positive pulse, negative pulse, or both.

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the Serial Communications Mask Testing Option on some instruments before you can access the Comm triggers.*

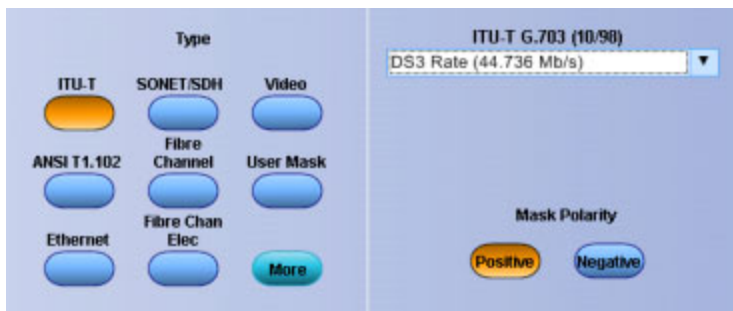

To Use

1. Click one of the Type controls to select the mask type.
2. Click More for additional selections.
3. Click the standard drop-down list to select the mask standard.
4. If the Mask Polarity control is displayed, click it to select positive or negative.

Behavior

The type of mask you choose will determine which standards are available from the standard drop-down list. The standard selected will determine whether the Mask Polarity control is displayed.

NOTE. *For some masks, you may see a pop-up message that reads, "Consider System Bandwidth when testing at this bit rate." This message appears if the bandwidth of the measurement system falls below 1.5 – 1.8 times the bit rate of the data signal. Because the T11 committee has published a strict rule of 1.8 times the bit rate for electrical standards, be aware that useful qualitative information can be gathered at the current system bandwidth but quantitative rise-time measurements may not be reliable. A Consider System Bandwidth message will appear for all optical standards, since optical filtering is not available.*

Alternatively, you can select Edge Setup from the Trigger menu to improve the stability.

What do you want to do next?

- [Learn about the Mask Display control window. \(see page 181\)](#)

- [Learn more about mask alignment. \(see page 185\)](#)
- [Go to the Mask Setup control window. \(see page 177\)](#)

Mask Types and Standards

The following tables list the Mask Types and Standards available with Mask Testing. The standards available for your instrument depend on the bandwidth and configuration of your instrument.

The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.

ITU-T masks

None	32 Mb 32.064 Mb/s	97 Mb 97.728 Mb/s	DS1 Rate 1.544 Mb/s
DS2 Rate Sym 6.312 Mb/s	DS2 Rate Coax 6.312 Mb/s	DS3 Rate 44.736 Mb/s	E1 Sym Pair 2.048 Mb/s
E1 Coax Pair 2.048 Mb/s	E2 8.448 Mb/s	E3 34.368 Mb/s	E4 Binary 0 139.26 Mb/s
E4 Binary 1 139.26 Mb/s	STM1E Binary 0 155.52 Mb/s	STM1E Binary 1 155.52 Mb/s	

ANSI T1.102 masks

None	DS1 1.544 Mb/s	DS1A 2.048 Mb/s	DS1C 3.152 Mb/s
DS2 6.312 Mb/s	DS3 44.736 Mb/s	DS4NA 139.26 Mb/s	DS4NA Max Output 139.26 Mb/s
STS-1 Pulse 51.84 Mb/s	STS-1 Eye 51.84 Mb/s	STS-3 155.52 Mb/s	STS-3 Max Output 155.52 Mb/s

Ethernet masks

None	100Base-TX STP 125 Mb/s	100Base-TX UTP 125 Mb/s	Gigabit Ethernet 1.25 Gb/s
1000B-CX Norm, TP2 1.25 Gb/s	1000B-CX Abs, TP2 1.25 Gb/s	1000B-CX Abs, TP3 1.25 Gb/s	XAUI, Near 3.125 Gb/s
XAUI, Far 3.125 Gb/s	1000B-SX/LX 1.25 Gb/s		

SONET/SDH masks

None	OC1/STM0 51.84 Mb/s	OC3/STM1 155.52 Mb/s	OC12/STM4 622.08 Mb/s
OC48/STM16 2.4883 Gb/s	OC48-FEC 2.666 Gb/s		

Fibre channel masks

None	FC133 Optical 132.8 Mb/s	FC266 Optical 265.6 Mb/s	FC531 Optical 531.2 Mb/s
FC1063 Optical 1.0625 Gb/s	FC1063 Optical Draft Rev 11	FC2125 Optical 2.125 Gb/s	

Fibre channel electrical masks

None	FC133E Elec. 132.8 Mb/s	FC266E Elec. 265.6 Mb/s	FC531E Elec. 531.2 Mb/s
FC1063E Elec. 1.0625 Gb/s	FC1063E Norm, Beta, Transm	FC1063E Norm, Delta, Transm	FC1063E Norm, Gamma, Transm
FC1063E Abs, Beta, Transm	FC1063E Abs, Delta, Transm	FC1063E Abs, Gamma, Transm	FC1063E Abs, Beta, Recv

Fibre channel electrical masks

FC1063E Abs, Delta, Recv	FC1063E Abs, Gamma, Recv	FC2125E Norm, Beta, Transm	FC2125E Norm, Delta, Transm
FC2125E Norm, Gamma, Trans	FC2125E Abs, Beta, Transm	FC2125E Abs, Delta, Transm	FC2125E Abs, Gamma, Transm
FC2125E Abs, Beta, Recv	FC2125E Abs, Delta, Recv	FC2125E Abs, Gamma, Recv	

InfiniBand masks

None	2.5 Optical 2.5 Gb/s	2.5 Electrical 2.5 Gb/s	
------	----------------------	-------------------------	--

Serial ATA masks

None	G1 Tx 1.5 Gb/s	G1 Rx 1.5 Gb/s	
G2 Tx 3.0 Gb/s	G2 Rx 3.0 Gb/s		

USB 1.1/2.0 masks

None	FS 12 Mb/s	HS:T1 480 Mb/s	HS:T2 480 Mb/s
HS:T3 480 Mb/s	HS:T4 480 Mb/s	HS:T5 480 Mb/s	HS:T6 480 Mb/s

IEEE 1394b masks

None	S400b T1 491.5 Mb/s	S400b T2 491.5 Mb/s	S400b Optical 491.5 Mb/s
S800b T1 983.0 Mb/s	S800b T2 983.0 Mb/s	S800b Optical 983.0 Mb/s	S1600b T1 1.966 Gb/s
S1600b T2 1.966 Gb/s	S1600b Optical 1.966 Gb/s		

Rapid IO LP-LVDS masks

None	Drv 500 Mb/s	Drv 750 Mb/s	Drv 1.0 Gb/s
Drv 1.5 Gb/s	Drv 2.0 Gb/s	Ext Drv 500 Mb/s	Ext Drv 750 Mb/s
Ext Drv 1.0 Gb/s	Ext Drv 1.5 Gb/s	Ext Drv 2.0 Gb/s	Rcv 500 Mb/s
Rcv 750 Mb/s	Rcv 1.0 Gb/s	Rcv 1.5 Gb/s	Rcv 2.0 Gb/s

Rapid IO Serial masks

None	RIO Serial 1.25 Gb/s	RIO Serial 2.5 Gb/s	RIO Serial 3.125 Gb/s
------	----------------------	---------------------	-----------------------

Video masks

None	4FSC NTSC "D2" 143.18 Mb/s	4:4:2 "D1" 270Mb/s	DVB ASI 270 Mb/s
4:2:2 SMPTE 259-M-D 360 Mb/s	SMPTE 292M 1.485 Gb/s		

Mask Display Controls

From the Mask menu, select Mask Setup; then open the Masks tab.

To Use

- Click the On/Off control to turn the mask display on or off.
- Click the Config control to activate the [Mask Configuration Display \(see page 181\)](#) control window.



Behavior

When the On/Off control is on, the mask is displayed on the graticule. When the On/Off control is off, the mask is not displayed.

Click the Config button to replace the Mask Testing control window with the Mask Configuration Display control window.

What do you want to do next?


- [Learn about the Mask Configuration Display control window. \(see page 181\)](#)
- [Learn about mask types. \(see page 177\)](#)
- [Learn about mask alignment. \(see page 185\)](#)
- [Go to the Mask Setup control window. \(see page 177\)](#)

Mask Configuration Control Window - Display

From the Mask menu, highlight Mask Configure; then select Display. From the Mask Testing control window, click the Display Config button.

Overview

Use this control window to set whether changes in the scale will also be made in the mask. You can also use this control window to return to the Mask Setup control window.

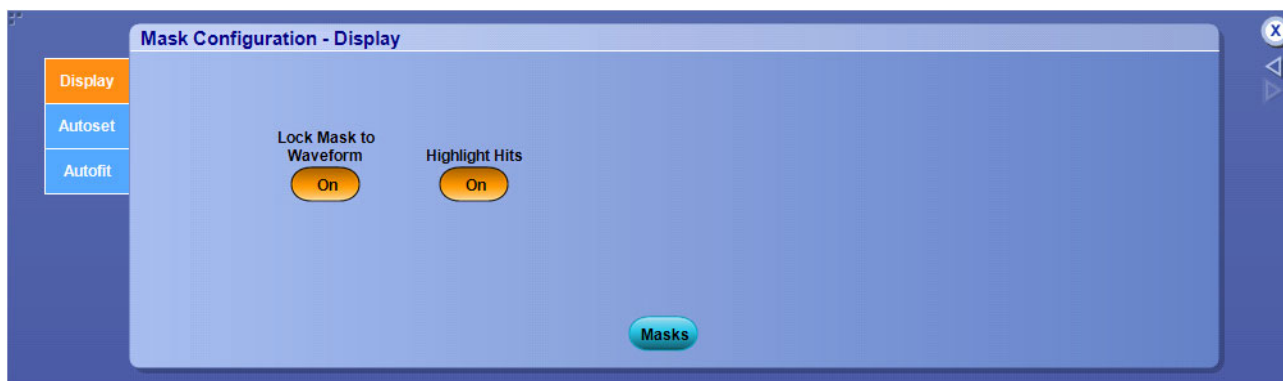

To use

- Click the Lock Mask to Waveform button to turn it on and off.
- Click the Masks button to go to the Mask Testing control window.

Behavior

When the Lock Mask to Waveform button is turned on, any changes you make to the scale, vertical position or horizontal position will be reflected in the mask. Turning on Highlight Hits displays the hits in a different color so they can be easily seen. When you click the Mask button this window closes, and the Mask Setup control window opens.

What do you want to do next?


- [Go to the Mask Setup control window. \(see page 177\)](#)
- [Learn more about mask configuration. \(see page 182\)](#)

Mask Configuration Control Window - Autose

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Testing control window, click the Autoset Config button.

Use this control window to set the vertical, horizontal, and trigger autoset parameters, activate autofit or autoset, choose the autoset mode, return to the default autoset configuration, or go to the Mask Testing control window.

For information on the controls, click the buttons.

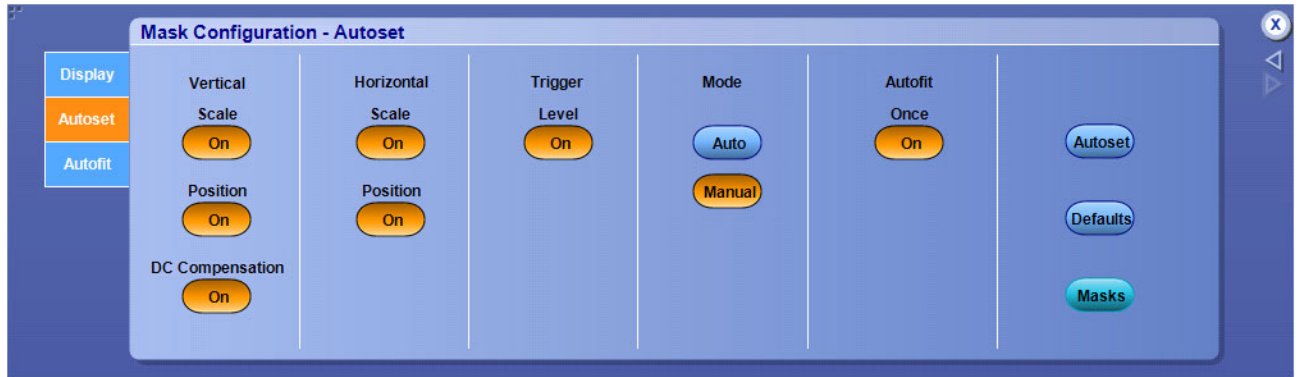

To Use

- Click Autoset to align the signal within the mask. This operates the same as the Autoset button on the front panel.
- Click Defaults to return the instrument to the default autoset configuration.
- Click Masks to replace this control window with the Mask Testing control window.

What do you want to do next?


- [Go to the Mask Setup control window. \(see page 177\)](#)
- [Learn about mask display configuration. \(see page 181\)](#)
- [Learn about mask autofit configuration. \(see page 183\)](#)

Mask Configuration Control Window - Autofit

From the Mask menu, highlight Mask Configure; then select Autofit. From the Mask Testing control window, click the Autofit Config button.

Overview

Use this control window to configure the limits for minimizing mask hits, return to default setting, or return to the Mask Testing control window.

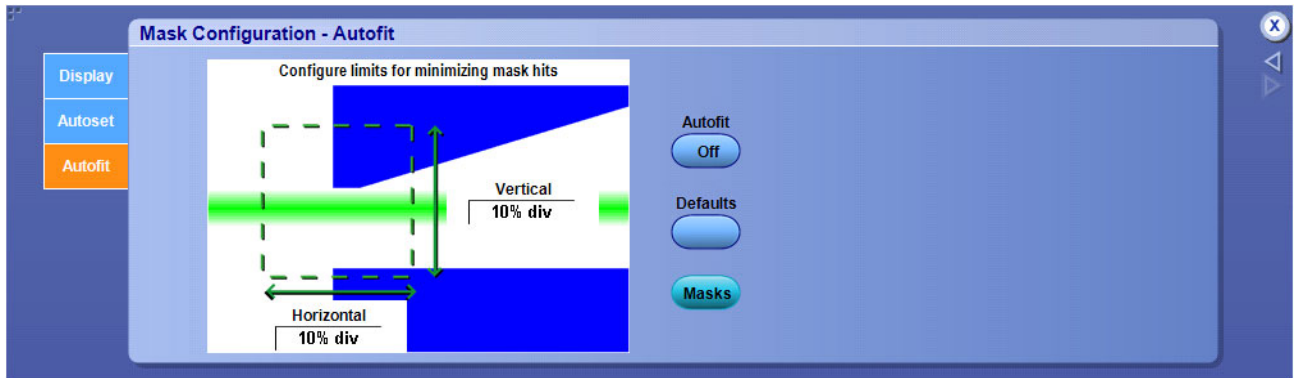

To Use

- Set the vertical and horizontal maximum levels of adjustment by clicking in the entry boxes and use the multipurpose knobs or double-clicking in the control and use the pop-up keypad.
- Click Autofit to align the signal within the mask.
- Click Defaults to reset the autofit configuration to the default values.
- Click Masks to return to the Mask Testing control window.

Behavior

The maximum level of adjustment determines how far Autofit will search for the best fit to minimize hits. For example, if you set the Vertical Maximum to 10% per division, Autofit searches up to and including 10 percent of the vertical divisions for the best fit. Autofit minimizes hits by aligning the signal within the mask.

Clicking Masks replaces the Mask Configuration Autofit control window with the Mask Testing control window.

NOTE. *The interaction between Autofit and Persistence can affect the display of persistence data. Autofit moves the waveform vertically and/or horizontally to reduce the number of hits within a given mask. If either infinite or variable persistence is enabled these movements will clear any persistence data. If Autofit makes frequent adjustments, there can be little or no persistence data.*

What do you want to do next?

- [Learn about display configuration. \(see page 181\)](#)
- [Learn about autoset configuration. \(see page 182\)](#)

Mask Alignment Controls

From the Mask menu, select Mask Setup; then open the Masks tab.

To Use

- Click the Autoset control to perform an autoset on the signal.
- Click the Autofit control to turn the minimize hits function on or off.
- Click the Config control to access the [Autoset \(see page 182\)](#) or [Autofit \(see page 183\)](#) Configuration control window.



Behavior

Clicking the Autoset control automatically aligns the mask based on the characteristics of the input signal. This function is done once, and that setting is not changed until you run the autoset command again or until you change any settings. This is the same as pushing the front-panel Autoset control.

When Autofit is used, the signal is aligned within the mask to minimize the number of hits on each acquisition. Settings may change after each acquisition when autofit is used.

NOTE. *The interaction between Autofit and Persistence can affect the display of persistence data. Autofit moves the waveform vertically and/or horizontally to reduce the number of hits within a given mask. If either infinite or variable persistence is enabled, these movements will clear any persistence data. If Autofit makes frequent adjustments, there can be little or no persistence data.*

Clicking the Autoset Config button will replace the control window with the Autoset Mask Configuration control window. Clicking the Autofit Config control will replace this control window with the Autofit Mask Configuration control window.

What do you want to do next?

- [Learn about autoset configuration. \(see page 182\)](#)
- [Learn about autofit configuration. \(see page 183\)](#)


- [Learn about mask display setup. \(see page 181\)](#)
- [Learn about mask types. \(see page 177\)](#)
- [Go to the Mask Setup control window. \(see page 177\)](#)

Mask Edit Control Window

From the Mask menu, select Mask Edit Setup, or click the Edit User Mask button in the Mask Testing control window.

Overview

Use this control window to select the Segment and Vertex for editing, set the Horizontal and Vertical mask values, and Save or Recall masks.

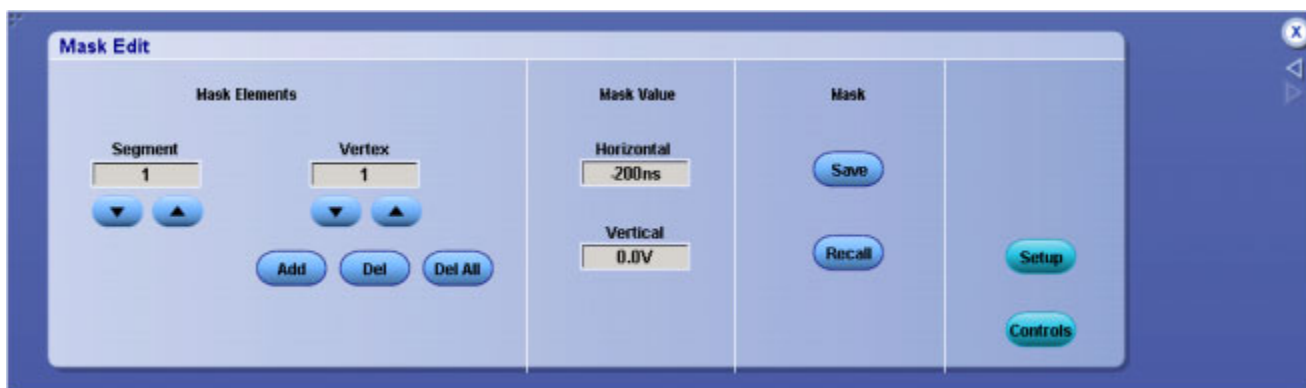

To Use

- Click the Mask Segment and Vertex up and down arrows to select the segment or the vertex of the mask to be edited.
- Click Add to add a point to the boundary in the selected segment and just after the selected vertex.
- Click Del to delete the selected vertex from the selected segment.
- Click Del All to remove all points in the selected segment.
- To change the horizontal or vertical mask values for the selected segment and vertex, click in the Horizontal or Vertical entry boxes, and then use the multipurpose knobs to set the values.
- To save a mask, click Save to activate the Save As dialog box.
- To recall a previously saved mask, click Recall to activate the Recall dialog box.

Behavior

The Segment up and down arrows increase or decrease the segment number by one. The Vertex up and down arrows increase or decrease the vertex by 1. To set a specific number, click in the Vertex entry box to activate the pop-up calculator.

Clicking the Add button adds a point to the boundary in the selected segment and just after the selected vertex in addition to moving any points that follow the newly added point in the boundary up one. For example, if there are 6 points in the boundary of the selected segment and you add a point when the selected vertex is 4, then the vertex which was 4 becomes vertex number 5, number 5 becomes 6, and vertex 6 is changed to vertex 7.

Clicking Del deletes the selected vertex from the selected segment and moves any points that follow the deleted point down one in the boundary. Clicking Del All deletes all points in the selected segment, effectively deleting that segment.

Clicking the Setup button will return you to the Masks Testing control window. Clicking the Controls button will activate the [User Mask Edit control window \(see page 202\)](#) where you can make quick changes to a User mask.

What do you want to do next?

- [Learn about saving masks. \(see page 410\)](#)
- [Learn about recalling saved masks. \(see page 203\)](#)
- [Learn more about mask types. \(see page 177\)](#)
- [Learn more about mask setups. \(see page 177\)](#)


Mask Testing Control Window (Source/Tolerance Tab)

From the Mask menu, select Source.

Overview

Use this control window to select the source of the signal you want to test.

For information on the controls, click the buttons.

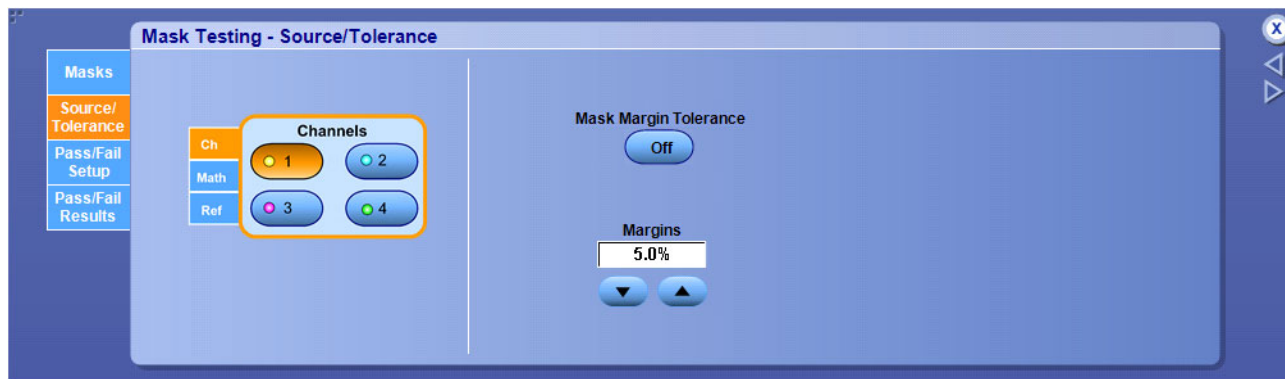

To Use

1. Click the Ch, Math, or Ref tab to select the source for mask testing.
2. Click the number (1–4) of the channel, math expression, or reference you want to use.

Behavior

When you click the Ch tab and select a channel number, it is used as the source for mask testing. You can select only one source at a time for mask testing.

What do you want to do next?

- [Learn more about mask setups. \(see page 188\)](#)
- [Learn more about mask test setups. \(see page 189\)](#)
- [Go to the Mask Setup control window. \(see page 177\)](#)

Mask Margin Controls

From the Mask menu, select Tolerance Setup.

Overview

Use this control to turn the margin mode on or off and to set the percentage of margin used for the mask test.



To Use

1. Click the On/Off button to turn the mask margin tolerance on or off.
2. Click the up and down arrows or click in the Margins entry box to activate the pop-up keyboard and set the percentage of margin tolerance.

Behavior

When the mask margin tolerance is on, you can control the percentage of margin used in the mask test.

Use the up and down arrow buttons to increase or decrease the percentage in 1% increments. A tolerance that is > 0 makes passing a mask test more difficult.

A mask test that passes with a tolerance that is > 0 demonstrates that the signal passes the test with a margin for further error. Setting the tolerance to < 0 makes a mask test easier to pass. A tolerance that is < 0 can be used to demonstrate by how much of a margin the signal fails.

What do you want to do next?

- [Learn more about mask testing setup. \(see page 189\)](#)
- [Go to the Mask Setup control window. \(see page 177\)](#)


Mask Testing Control Window (Pass/Fail Setup Tab)

From the Mask menu, select Pass/Fail Setup.

Overview

Use this control window to set the parameters for passing or failing the mask test, to set the test notification mode, to select the polarity for testing, and whether to repeat the test.

For information on the controls, click the buttons.

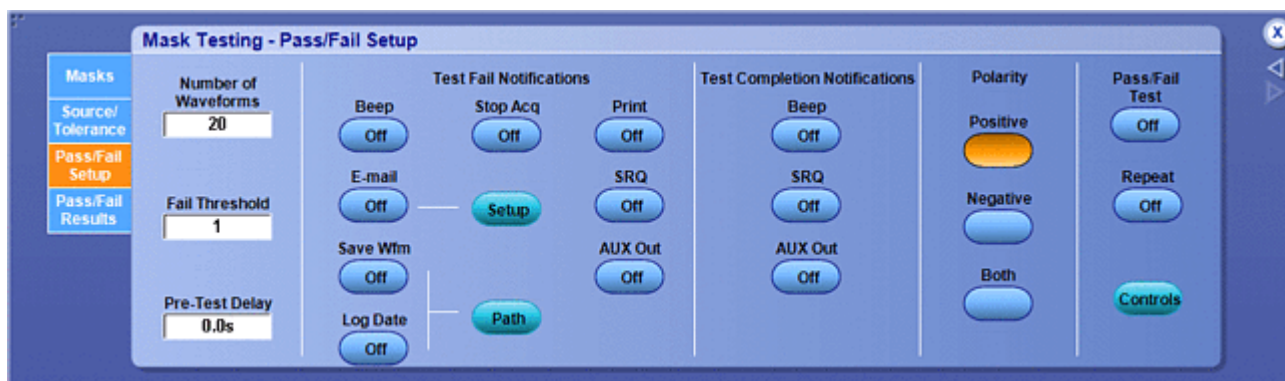

What do you want to do next?

- [Learn more about mask testing. \(see page 196\)](#)

- [Go to the Mask Setup control window. \(see page 177\)](#)

Mask Test Fail Notification

From the Mask menu, select Pass/Fail Setup.

Overview

Use the Test Fail Notification controls to set the mode of notification when a waveform fails a mask test.



To Use

Click a button to switch the control on or off. Use this control window to save a failed waveform, log the date and time of a failed waveform, and specify the directory where you want to save the waveform or send E-mail on a failed waveform.

Behavior

- **Beep.** When Beep is turned on, the instrument beeps when a mask test fails.
- **E-mail.** When E-mail is turned on, the instrument sends an E-mail when a mask test fails. Click the Setup button and complete the [E-mail on Event Setup \(see page 426\)](#) information.
- **Save WFM.** When Save WFM is turned on, failed waveform data is saved to a file. Click the Path button and enter the path location for the file.
- **Log Date.** When Log Date is turned on, the date and time for each failed mask test is recorded to a file. Click the Path button and enter the path location for the file.
- **Print.** When Print is turned on, the instrument sends the waveform to a printer when a mask test fails.

- SRQ. When SRQ is turned on, the instrument sends a GPIB SRQ command when a mask test fails.
- AUX Out. When AUX Out is turned on, the instrument sends a trigger to the Auxiliary Out connector when a mask test fails. See [External Signals Control Window \(see page 420\)](#) for additional details on this feature.

What do you want to do next?


- [Learn about mask polarity. \(see page 195\)](#)
- [Learn about waveform parameters. \(see page 192\)](#)
- [Go to the Test Setup control window. \(see page 189\)](#)

Mask Test Completion Notification

From the Mask menu, select Pass/Fail Setup.

Overview

Use the Test Completion Notification controls to beep, execute a command, or send an external trigger when a waveform passes a mask test.

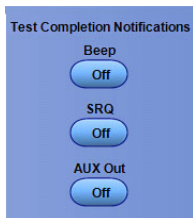

To Use

Click a button to switch a control on or off.

Behavior

- **Beep.** When Beep is turned on, the instrument beeps when the test is completed.
- **SRQ.** When SRQ is turned on, the instrument sends a GPIB SRQ command when a test is completed.
- **AUX Out.** When AUX Out is turned on, the instrument sends a trigger to the Auxiliary Out connector when the test is completed. See [External Signals Control Window \(see page 420\)](#) for additional details on this feature.

What do you want to do next?

- [Learn about mask polarity. \(see page 195\)](#)
- [Learn about waveform parameters. \(see page 192\)](#)
- [Go to the Test Setup control window. \(see page 189\)](#)


Mask Test Controls

From the Mask menu, select Pass/Fail Setup.

Overview

Use the Number of Waveforms (Samples), Fail Threshold, and Pre-Test Delay controls to set the parameters for the mask test.

NOTE. *If you are using Waveform Database mode, the Number of Waveforms entry box changes to a Samples entry box.*

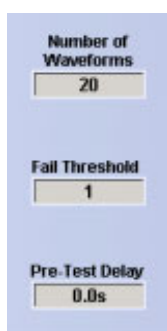

To Use

1. Click in the Number of Waveforms (Samples) entry box to activate the multipurpose knobs to enter a value.
2. Click in the Fail Threshold entry box to activate the multipurpose knobs and enter the minimum number of waveforms that must fail for the test to fail.
3. Click in the Pre-Test Delay entry box to activate the multipurpose knobs to enter the number of seconds to wait before starting the test.

Behavior

Entering a number in the Number of Waveforms (Samples) entry box stops the test when that number has been reached.

If the waveforms or samples that fail are equal to or greater than the number in the Fail Threshold entry box, the test has failed. If the failed waveforms or samples are less than the number in the Fail Threshold entry box, the test passes.

The instrument begins sampling after the number of seconds has passed set in the Pre-Test Delay entry box. Use the Test Delay if you need to give the signal source time to stabilize.

What do you want to do next

- [Learn about test notification. \(see page 190\)](#)
- [Learn about mask polarity. \(see page 195\)](#)
- [Learn about test results. \(see page 196\)](#)

- [Go to the Test Setup control window. \(see page 189\)](#)

Selecting the Sound Source

Your instrument is shipped with an internal speaker that some of the software features use to send an audible alert to the user. To enable this speaker, the sound card in your instrument must be turned off. With the sound card off, you will not have access to standard Windows audio features, such as the ability to listen to a music CD.

If you turn the sound card on, the internal speaker is disabled. You will need to connect headphones or an amplified speaker to the headphone jack on the instrument to hear the alerts.

NOTE. *The default setting disables the sound card.*

Use the following procedure to turn the sound card on or off.


1. Access the Device Manager:
 - a. From the File menu, click Minimize, or press CTRL+M to minimize the instrument application.
 - b. On your Windows desktop, right-click the My Computer icon.
 - c. Click Properties.
 - d. In the System Properties dialog box, click the Hardware tab.
 - e. Click the Device Manager button.
2. Select the Source:
 - a. Double-click Sound, video, and game controllers.
 - b. Double-click SigmaTel C-Major Audio.
 - c. In the Device usage drop-down list, click either Use this device (enable) or Do not use this device (disable).
3. Save Your Changes:
 - a. Click OK.
 - b. Close the Device Manager dialog box.
 - c. Close the System Properties dialog box.

Mask Polarity Controls

From the Mask menu, select Pass/Fail Setup.

Overview

Use the Mask Polarity control to select whether to test the positive or negative pulse or both.

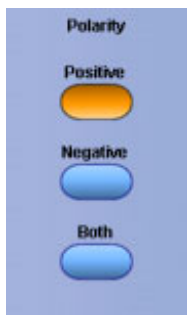

To Use

- Click Positive to set the pulse polarity to positive.
- Click Negative to set the pulse polarity to negative.
- Click Both to set the pulse polarity to both negative and positive.

Behavior

When the Positive control is selected, the mask test is performed on the positive pulse. When the Negative control is selected, the mask test is performed on the negative pulse.

When the Both control is selected, the mask test is performed on both the positive and negative pulses.

NOTE. *The mask polarity controls operate for pulse mask testing only; they have no affect on eye masks.*

What do you want to do next?

- [Learn about test notification. \(see page 190\)](#)
- [Learn about waveform parameters. \(see page 192\)](#)
- [Learn about test results. \(see page 196\)](#)
- [Go to the Test Setup control window. \(see page 189\)](#)

Mask Test Repeat Controls

From the Mask menu, select Pass/Fail Setup.

Overview

Use the Pass/Fail Test controls to start the test or to run the test continuously.



To Use

- Click the On/Off button to start the test.
- Click the Repeat button to run the test continuously.
- Click the Controls button to open the Mask Test control window.

Behavior

When the Repeat control is on, the test runs continuously. When you click the On/Off button, the test starts using the parameters from the Mask Test control window and the Pass/Fail Results window is displayed.

What do you want to do next?

- [Learn about waveform parameters. \(see page 192\)](#)
- [Learn about test notification. \(see page 190\)](#)
- [Learn about mask polarity. \(see page 195\)](#)
- [Learn about the Mask Test Controls window. \(see page 731\)](#)
- [Go to the Test Setup control window. \(see page 189\)](#)


Mask Testing Control Window (Pass/Fail Results Tab)

From the Mask menu, select Pass/Fail Results.

Overview

Use this control window to view real time test results, start the test, reset the test at the beginning, activate the waveform failure log file, and open the Mask Test Controls control window.

For information on the controls, click the buttons.

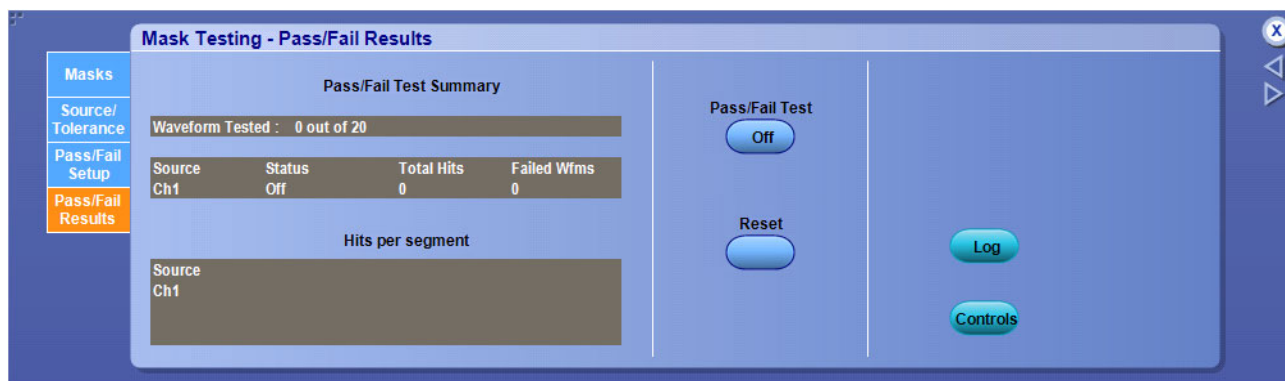

What do you want to do next?


- [Learn about test summary. \(see page 197\)](#)
- [Learn about hits per segment. \(see page 199\)](#)
- [Learn about the Mask Test Controls window. \(see page 731\)](#)
- [Go to the Test Setup control window. \(see page 189\)](#)

Mask Test Summary

From the Mask menu, select Pass/Fail Results.

Overview

Use this window to view real time test results.

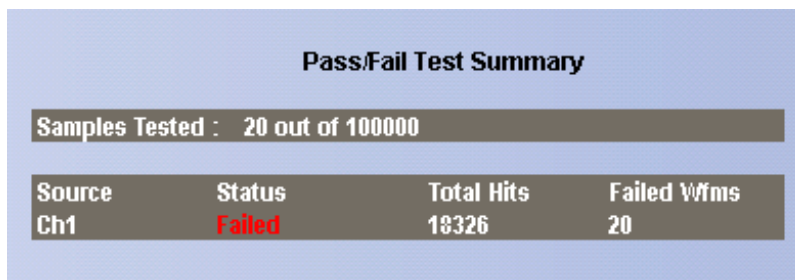

To Use

The Pass/Fail Test Summary is a read only field.

Behavior

The Pass/Fail Test Summary fields provide a real time summary of the test results. Waveforms or samples tested shows how many waveforms or samples have been tested in relation to how many were specified in the test setup.

- Source indicates what signal source was used for the test.
- Status indicates whether the test has passed, failed, or is passing.
Passing appears in yellow, passed in green, and failed in red.
- Total Hits shows the total number of data points that violated the mask.
- Failed Wfms shows the total number of waveforms that failed during the test sequence.

What do you want to do next?

- [Learn about hits per segment. \(see page 199\)](#)
- [Learn about the Mask Test Controls window. \(see page 731\)](#)
- [Learn about test results. \(see page 196\)](#)

Mask Hits Per Segment

From the Mask menu, select Pass/Fail Results.

Overview

Use this window to view the hits for each mask segment of the test.



Source	Seg1	Seg2	Seg3
Ch1	10186	8140	0

To Use

The Hits per segment is a read only field.

Behavior

Each mask test can have up to 16 segments. The data point violations per segment are shown in this window. Source indicates the input signal in use for the test. The segments are identified by Seg followed by the number of the segment. Only the number of segments used in a test is shown. A scroll bar appears if there are more segments used than can be seen at one time.

The segments of a mask are the polygonal regions on the screen. Segment one is the left upper most polygon. Segments are assigned from top to bottom and left to right on the screen.

What do you want to do next?


- [Learn about test summary. \(see page 197\)](#)
- [Learn about the Mask Test Controls window. \(see page 731\)](#)
- [Learn about test results. \(see page 196\)](#)

Mask Test Start or Reset Controls

From the Mask menu, select Pass/Fail Results.

Overview

Use these controls to start a test or reset the test to the starting point.

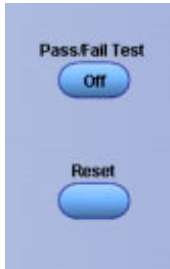

To Use

- Click the On/Off control to start the test.
- Click the Reset control to reset the test to the beginning.

Behavior

When the test starts, it uses the parameters in the Pass/Fail Test Setup control window. When the test is reset, the Total Hits, Failed Wfms, Hits per segment, and Waveform Tested fields are reset to zero.

What do you want to do next?

- [Learn about test summary. \(see page 197\)](#)
- [Learn about hits per segment. \(see page 199\)](#)
- [Learn about the Mask Test Controls window. \(see page 731\)](#)
- [Learn about test results. \(see page 196\)](#)

User Mask Control Window


From the Mask menu, select Mask Setup; then open the Masks tab and click the User Mask button.

Overview

Use this control window to access the Edit User Mask control window or to copy a standard mask as a user mask. You can also select the standard you want to copy or edit from the standard drop-down list.

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the Serial Communications Mask Testing Option on some instruments before you can access the Comm triggers.*

For information on the controls, click the buttons.

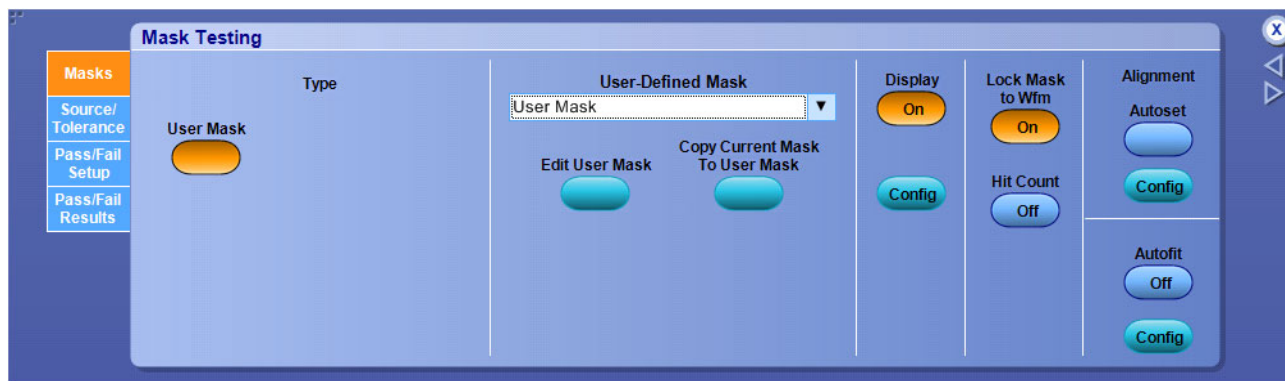

To Use

- Click the Edit User Mask button to access the Mask Edit control window.
- Click the Copy Current Mask button To User Mask to make the current mask a user mask.

Behavior

Clicking the User Mask button gives you access to the User Mask in the standard drop-down list. Clicking the Edit User Mask control will replace this control window with the Mask Edit control window. Clicking the Copy Current Mask to User Mask control will activate a dialog box where you can overwrite the user mask.

What do you want to do next?

- [Learn about editing masks. \(see page 186\)](#)
- [Learn more about mask types. \(see page 177\)](#)

- [Learn more about mask setups. \(see page 177\)](#)

User Mask Edit Control Window

From the Mask menu, select Mask Edit Controls.

Overview

Use this control window to select the segment and vertex for editing and set the Vertical and Horizontal Mask Values.



To Use

- Click the up and down arrows to select the segment or the vertex of the mask to be edited.
- Click the Add button to add a point to the boundary in the selected segment and just after the selected vertex.
- Click Del button to delete the selected vertex from the selected segment.
- To change the horizontal or vertical values for the selected segment and vertex, click in the Horizontal or Vertical entry boxes to activate the multipurpose knobs to enter a value.

Behavior

The Segment up and down arrows increase or decrease the segment number by one. The Vertex up and down arrows increase or decrease the vertex by 10. To set a specific number click the Vertex entry box to activate the pop-up calculator. Clicking the Add control adds a point to the boundary in the selected segment and just after the selected vertex in addition to moving any points that follow up one. Clicking Del deletes the selected vertex from the selected segment and moves any points that follow down one.

What do you want to do next?


- [Learn about saving masks. \(see page 410\)](#)
- [Learn about recalling saved masks. \(see page 203\)](#)
- [Learn more about mask types. \(see page 177\)](#)
- [Learn more about mask setups. \(see page 177\)](#)

Recall User Mask

From the File menu, select Recall, or from the [Reference Waveform controls \(see page 397\)](#), click the Recall button.

Overview

Use this dialog box to recall a saved user mask.

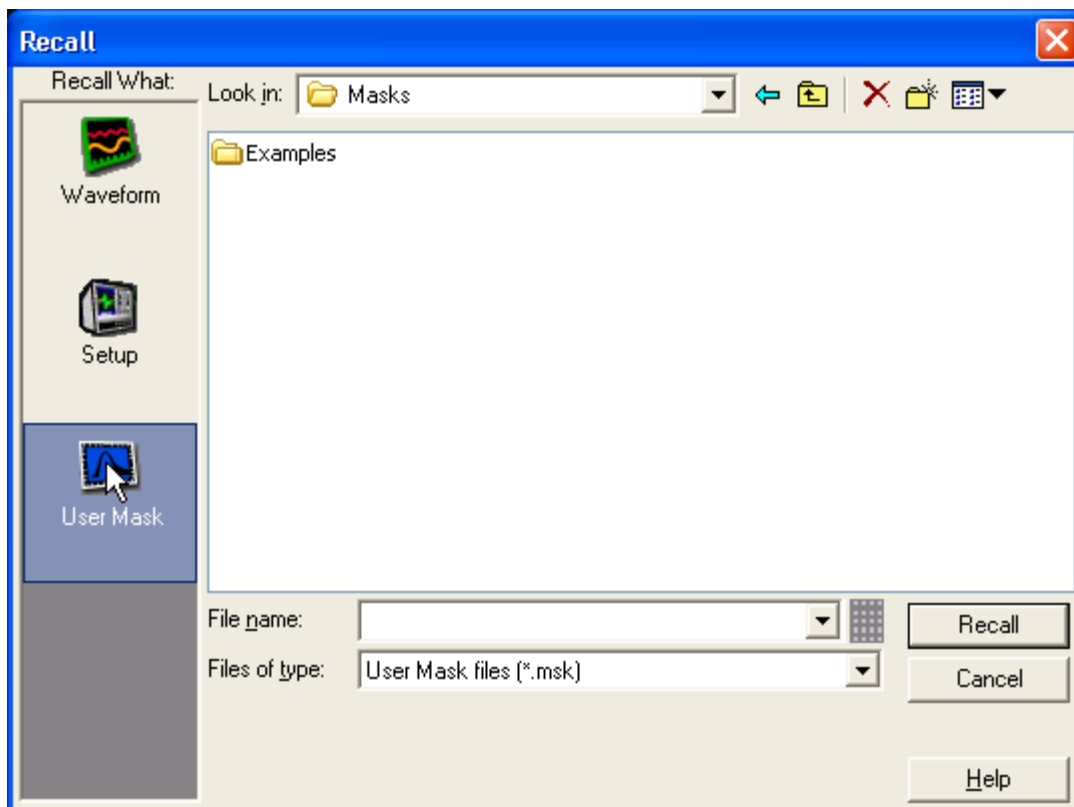

To Use

- Under Recall What, click User Mask.
- In the Look in drop-down list box, navigate to the location of the user mask.
- Click on the name of the mask file you want to recall. You can also click the keyboard icon to access the pop-up keyboard and enter the file name.
- Click Recall.

Behavior

The Recall dialog box displays when you click Recall in the Mask Edit control window. Clicking Recall replaces the current mask with the mask that you selected in the Recall dialog box.

Masks are saved in C:\TekScope\Masks unless you choose another directory.

What do you want to do next?


- [Learn about saving masks. \(see page 410\)](#)
- [Learn more about mask types. \(see page 177\)](#)
- [Learn more about mask setups. \(see page 177\)](#)

Limit Test Control Window (Setup Tab)

From the Mask menu, select Limit Test Setup; then open the Setup tab.

Overview

Limit testing allows you to compare an active signal to a template waveform.

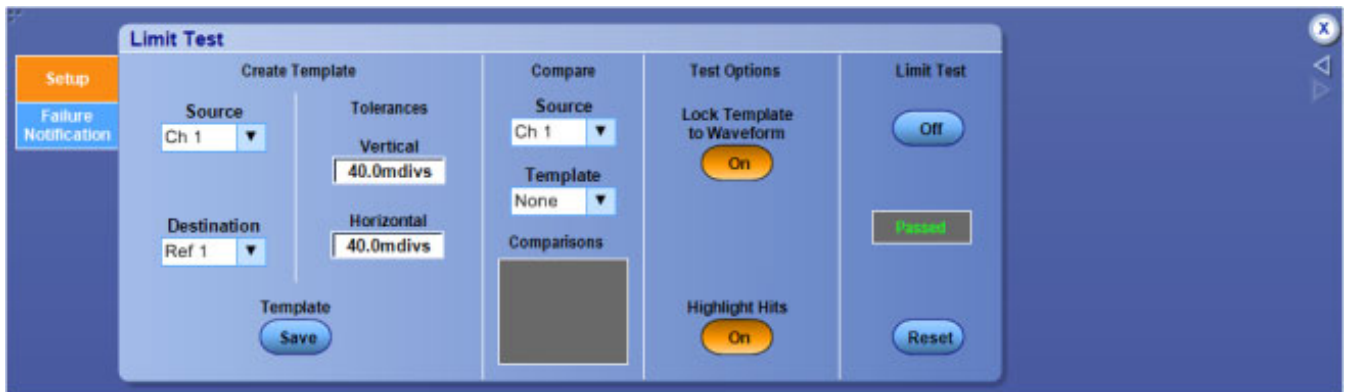

To Use

Use the following procedure to build a template from a known signal and compare it to an active signal.

1. Create a template:
 - a. Select the signal Source and template Destination in the drop-down list boxes.
 - b. Click in the Vertical and Horizontal Tolerances entry boxes and use the multipurpose knobs to specify the test limit tolerances. The Tolerances specify the margins allowed before a limit test fails.
 - c. Click Save to save the template as a reference waveform or save to a file. You can create and save multiple templates.
2. Compare a source waveform to a template:
 - a. In the Source drop-down list box, select the source waveform to compare to a template.
 - b. In the Template drop-down list box, select the template to compare to the source waveform. Normally, this is the template you created in the steps above, but you can compare multiple waveforms to multiple templates at the same time.
3. Failure Notification:
 - a. Open the Failure Notification tab and set up the mode you prefer for failure notification.
 - b. Click the Setup tab to return to the Limit Test setup window.
4. Select Test Options:
 - a. Click the Lock Template to Waveform button On to lock the vertical scale or position of the template to the source waveform.
 - b. Click the Highlight Hits button On to show points on the waveform that fall outside the template. These will occur in a different color.
5. Run Limit Test:
 - a. Click the Limit Test button On to start the test.
 - b. Click the Reset button to clear all violations in preparation for another test.

TIP. Use the Average acquisition mode to create a smoother template waveform; use the Envelope acquisition mode to create a template that allows occasional overshoots.


NOTE. Limit testing is not available on digital channels.

Save Template

From the Mask menu, select Limit Test Setup. In the Destination drop-down list, select File to open the Save Template dialog box. From the dialog box, click the Save button.

Overview

Use this dialog box to save the limit test template to a specified file.

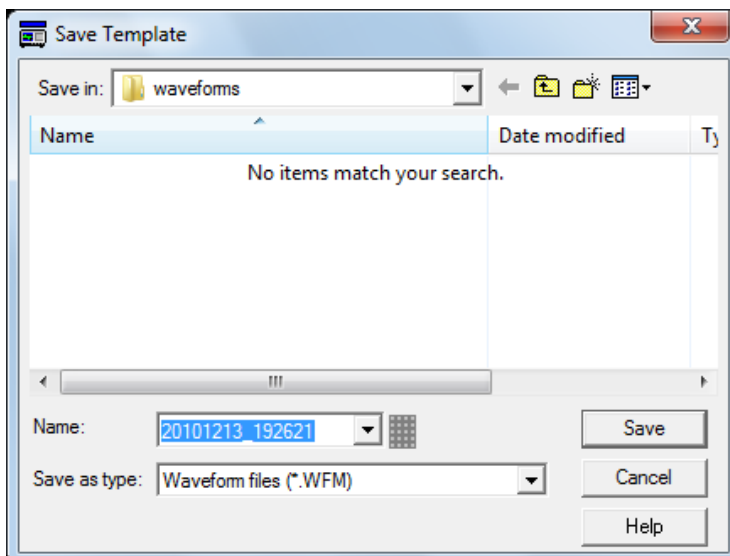

To Use

- To save to a file, enter a Name or use the default file name. The file extension specified in the Save as type list will automatically be appended to the file name.

Behavior

This dialog box opens when you select File from the Limit Test Setup control window. The default file type is a waveform (.WFM).

The default folder is C:\TekScope\waveforms.

NOTE. Any characters that you enter in the file name box become part of the file name. The instrument does not use any user-defined file extensions.

Limit Test Control Window (Failure Notification Tab)

From the Mask menu, select Limit Test Setup; then open the Failure Notification tab.

Overview

Use the Limit Test controls to set the mode of failure notification when a mask limit test fails.



To Use

Click a button to switch the control on or off. Use the controls to indicate the failure notification method, if a waveform fails a mask limit test.

Behavior

- **Beep.** When Beep is On, the instrument beeps if a mask test fails.
- **E-mail.** When E-mail is On, the instrument sends an E-mail if a mask test fails. Click the Setup button and complete the [E-mail on Event Setup \(see page 426\)](#) setup information.
- **Save WFM.** When Save WFM is On, failed waveform data is saved to a file. Click the Path button and enter a location to save the file.
- **Log Date.** When Log Date is On, the date and time for each failed mask test is recorded to a file. Click the Path button and enter a location to save the file.
- **Print.** When Print is On, the instrument sends the waveform to a printer if a mask test fails.
- **SRQ.** When SRQ is On, the instrument sends a GPIB SRQ command if a mask test fails.

Math Setup Control Window


From the Math menu, select Math Setup.

Overview

Use the Math Setup control window to [set up and define math waveforms \(see page 594\)](#).

NOTE. *Math calculations are not available on digital channels.*

For information on the controls, click the buttons.

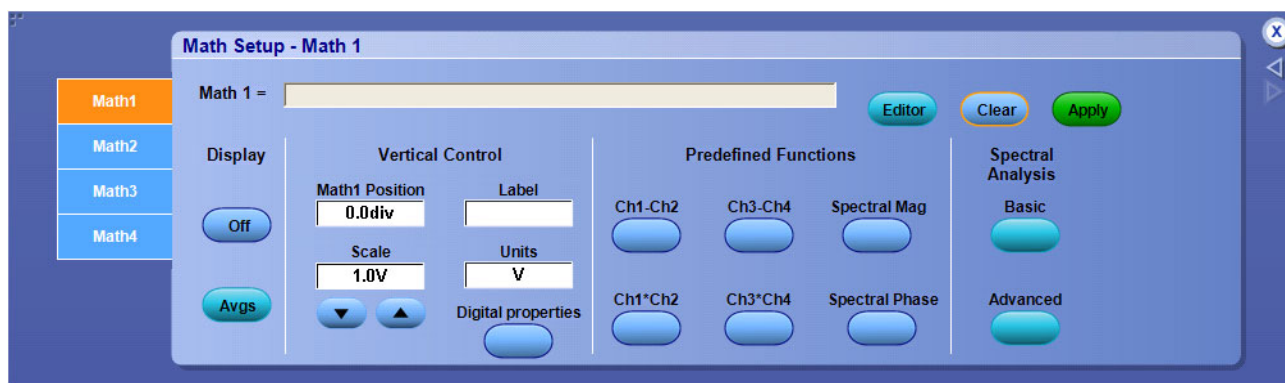

You can define up to four math waveforms. The controls for each waveform are similar, but independent of each other.

TIP. *To easily change the vertical position and scale of a math waveform, click the waveform handle on the left side of the screen. Use the multipurpose knobs to change the waveform position and scale.*

TIP. *To open the Math Equation Editor, double-click in the math expression field or click the Editor button.*

What do you want to do next?

- [Learn about the Math Waveform controls. \(see page 711\)](#)

 
- [Learn about the Equation Editor. \(see page 223\)](#)

Math Averaging Control Window

From the Math menu, select Set Math Averages.

Overview

Use this control window to specify the number of times the selected [math waveform \(see page 595\)](#) is averaged.

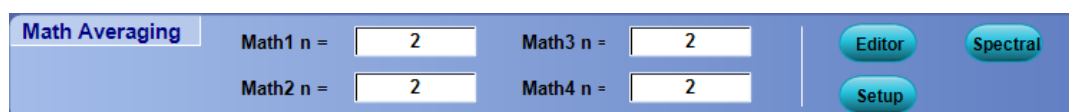

To Use

1. Click in a Math <1-4> n = entry box to map it to one of the multipurpose knobs.
2. Use the multipurpose knob to specify the number of times the selected waveform should be averaged.

Behavior

The selected math waveform is averaged over the number of acquisitions shown in the control. Each math waveform has its own set of controls.

The following buttons allow you to change other setups after you set the averaging:

- Click Editor to open the Math Equation Editor control window.
- Click Spectral to open the Spectral Setup control window.
- Click Setup to open the Math Setup control window.

What do you want to do next?

- [Learn about the Spectral Setup controls. \(see page 212\)](#)
- [Learn more about the Math Setup controls. \(see page 209\)](#)

Math Variables Control Window

From the Math menu, select Set Math Variables.

Overview

Use this control window to quickly set the math variables to use in your math expression.



To Use

- Use the 1 – 4 or 5 – 8 tabs to access the variables you want.
- Click in a Var <1–4> = or Var <5–8> = entry box and use the multipurpose knobs to set the value for the variable.
- Click the Editor button to access the Math Equation Editor.

Behavior

You can set or change the variable values in this control window. To add a variable to a math expression, go to the math editor, and click the VAR <1–8> buttons.

What do you want to do next?

- [Learn about the Edit controls. \(see page 659\)](#)

Spectral Setup Control Window (Basic)


From the Math menu, select Basic Spectral, or click Basic in the Math Setup control window.

Overview

Use these controls to set up a math waveform for simple spectral analysis.

To Use

For information on the controls, click the buttons.

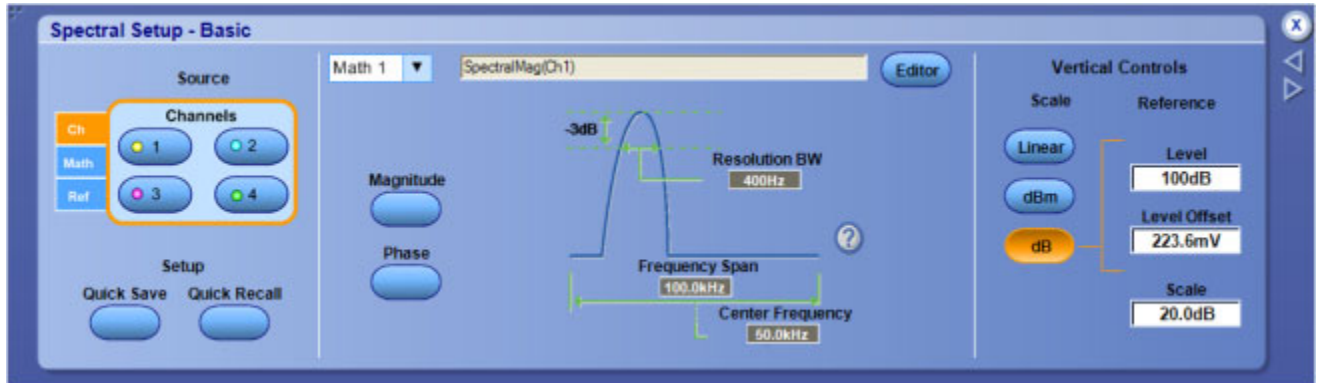

Spectral Controls: Front Panel

From the Math menu, select Basic or Advanced Spectral; in the Spectral Setup window, click the ? mark.

To Use

To map the spectral controls to the instrument front panel, do the following:

1. From the Horz/Acq menu, select Horizontal/Acquisition Setup.
2. Open the Horizontal tab.
3. Under Mode, click the Manual option box.
4. Return to the Spectral Setup control window.
5. Use the front panel Resolution knob to directly control Frequency Span.
6. Use the Horizontal Scale knob to directly control Resolution Bandwidth.

Spectral Setup Control Window (Advanced)


From the Math menu, select Advanced Spectral, or click Advanced in the Math Setup control window.

Overview

Use the controls in this window to set up advanced math waveforms for spectral analysis. Using the tabs, you can create a spectral waveform, define the vertical units, and adjust the measurement parameters. You can also lock waveforms together.

To Use

For information on the controls, click the buttons.

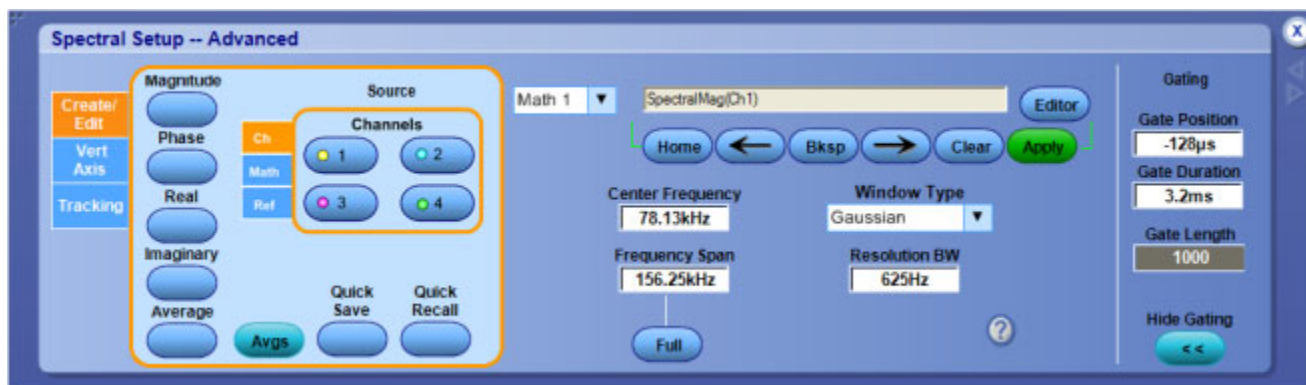

After you create the spectral waveform, use the controls on the right side of the control window to position and adjust the waveform so that you can view the data you are interested in.

You can operate the instrument and view spectral (FFT) waveforms using the time-domain controls, gating controls, or frequency domain controls. Some of these controls are interactive; making changes with one set of controls will sometimes change settings in another control set.

What do you want to do next?

- [Learn about creating spectral waveforms. \(see page 764\)](#)
- [Learn about the Math Setup controls. \(see page 209\)](#)

Spectral Controls: Frequency

From the Math menu, select Advanced Spectral, or click Advanced in the Math Setup control window.

To Use

- Click in an entry box, and then use the multipurpose knobs to set the [Center Freq \(see page 214\)](#), [Freq Span \(see page 214\)](#), and [Res BW \(see page 215\)](#).
- Click Full to set the frequency span to full.



Behavior

The maximum frequency span is equal to half of the sample rate. If you need a higher frequency span, set the sample rate to a larger value.

The Resolution Bandwidth determines how small of a frequency difference can be resolved in the frequency domain output data. It defines the bandwidth of filters used to perform the frequency domain analysis. The resolution bandwidth is measured in hertz at the 3 dB points on each side of the peak spectral lobe. Adjusting the resolution bandwidth controls the gate duration to obtain the desired resolution bandwidth.

NOTE. *The frequency domain controls interact with the gating and acquisition controls; changing one set of controls may change the other control settings.*

What do you want to do next?

- [Learn about the Gating controls. \(see page 215\)](#)
- [Learn about the Math Setup controls. \(see page 209\)](#)

Center Frequency

The center frequency is the frequency at the center of the frequency span. The maximum center frequency is equal to the sample rate divided by two (the Nyquist frequency) minus one half the span. The minimum center frequency is equal to one half of the span.

If the frequency span is set to maximum, then the center frequency will not move. To increase the center frequency beyond the present limits, either reduce the frequency span or increase the sample rate. To decrease the center frequency beyond the present limits, reduce the frequency span.

Frequency Span

The frequency span is the range of frequencies over which the spectral analysis is performed. The maximum span is from DC to one half of the sample rate (the Nyquist frequency). A smaller frequency span allows a greater range of center-frequency adjustment. If a larger frequency span is desired, increase the sample rate.

Resolution Bandwidth

The resolution bandwidth controls the bandwidth of the spectral analyzer filters. You can adjust the resolution bandwidth in units of hertz. The resolution bandwidth is measured at the -3 dB points on each side of the peak spectral lobe of the filter.

Resolution bandwidth is inversely proportional to the gate duration in the time domain. Changing the gate duration changes the resolution bandwidth. Changing the spectral analyzer window function also changes the resolution bandwidth but will not affect the gate duration.

To decrease the resolution bandwidth beyond the present limits, increase the time domain gate duration. If this is insufficient, increase the record length and then increase the gate duration again. You can also try the rectangular or Hamming window to maximize the frequency resolution (minimize resolution bandwidth).

Spectral Controls: Gating

From the Math menu, select Advanced Spectral, or click Advanced in the Math Setup control window.

To Use

1. Select an FFT window type from the Window Type list.



2. Click in the Gate Position, Gate Duration, or Gate Length entry boxes and use the multipurpose knobs to set the gating parameters.



Behavior

An [FFT Window Type \(see page 751\)](#) can help reduce spectral noise for many types of signals. Some windows provide better frequency resolution at the expense of better amplitude measurements. Other

windows provide better amplitude accuracy over frequency resolution. The choice of window also affects the resolution bandwidth.

- Gate Position moves the gate that selects the data for the spectral waveform. The gate position is the center point in the gate measured in seconds with respect to the trigger point. In most cases the phase reference point is located at the center of the gated data. However, if you use a Tek Exponential window, the phase reference point is at the 20% point of the gated data.
- Gate Duration sets the gate time duration in seconds. The default gate duration is the duration of the entire waveform record. The resolution bandwidth is inversely proportional to the gate duration.
- Gate Length displays the gate length in points. The default gate duration is the duration of the entire waveform record.

NOTE. *The gating controls interact with the acquisition and frequency domain controls; changing one set of controls may change the other control settings.*

What do you want to do next?

- [Learn about selecting an FFT window. \(see page 751\)](#)
- [Learn about the Math Setup controls. \(see page 209\)](#)
- [Learn about the Frequency controls. \(see page 213\)](#)

Spectral Analysis Overview

You can use math waveforms to perform FFT (Fast Fourier Transform) measurements with the instrument. The FFT process mathematically converts the standard time-domain signal (repetitive or single-shot acquisition) into its frequency components, providing spectral analysis capabilities.

The ability to quickly look at signal frequency components and spectrum shape is a powerful research and analysis tool. FFT is an excellent troubleshooting aid for the following:

- Testing the impulse response of filters and systems
- Measuring harmonic content and distortion in systems
- Identifying and locating noise and interference sources
- Analyzing vibration
- Analyzing harmonics in 50 and 60 Hz power lines

Spectral Analysis Features

You can display an FFT waveform on any actively acquired signal (periodic or single-shot), the last acquired signal, or any signal stored in reference memory.

FFT Windows

The instrument allows you to match the optimum window to the signal you are analyzing.

- The Rectangular window is best for nonperiodic events such as transients, pulses, and single-sequence acquisitions.
- The Hamming, Hanning, and Blackman-Harris windows are better for periodic signals.
- The Kaiser Bessel window has less spectral leakage than the Hanning, Hamming, or Rectangular windows.
- The Gaussian window provides optimal localization in both the time and frequency domain.
- The Flattop2 window is good for high accuracy magnitude measurements for signals that do not require narrow resolution bandwidth.
- The Tek Exponential window is useful for impulse response testing.

Vertical Scales

The FFT vertical graticule can be set to either dB or Linear RMS.

- A dB scale is useful when the frequency component magnitudes cover a wide dynamic range, letting you show both lesser and greater magnitude frequency components on the same display.
- A Linear scale is useful when the frequency component magnitudes are all close in value, enabling direct comparison of their magnitudes.


Spectral and Time-Domain Displays

Time signals and FFT waveforms can be shown together on the display. The time signal highlights the problem; the FFT waveform helps you determine the cause of the problem.

FFT Process


The FFT process mathematically converts the standard time-domain signal (repetitive or single-shot acquisition) into its frequency components.

The FFT function processes the waveform record and displays the FFT frequency domain record, which contains the input signal frequency components from DC (0 Hz) to $\frac{1}{2}$ the sample frequency (also called the [Nyquist frequency \(see page 150\)](#)).

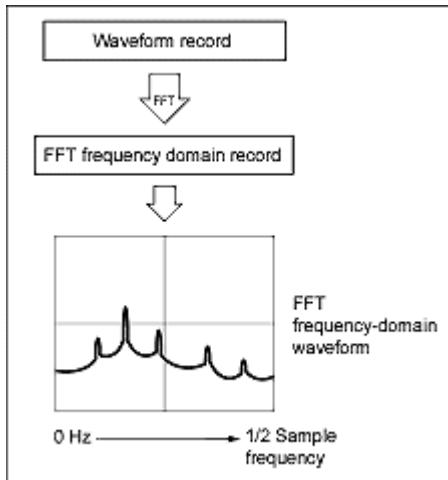

The FFT Display

The following illustration shows a typical time-domain waveform and the frequency components of that signal as part of the math FFT waveform.

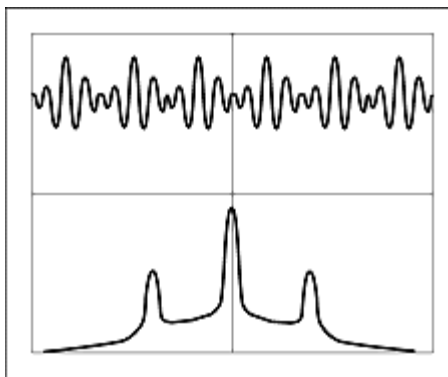


FFT Windows

The FFT process assumes that the part of the waveform record used for FFT analysis represents a repeating waveform that starts and ends at or near the same voltage of a cycle. In other words, it is an integer number of cycles. When a waveform starts and ends at the same amplitude, there are no artificial discontinuities in the signal shape, and both the frequency and amplitude information is accurate.

A nonintegral number of cycles in the waveform record causes the waveform start and end points to be at different amplitudes. The transitions between the start and end points cause discontinuities in the waveform that introduce high-frequency transients. These transients add false frequency information to the frequency domain record.

Applying a window function to the waveform record changes the waveform so that the start and stop values are close to each other, reducing the discontinuities. This results in an FFT measurement that more accurately reflects the actual signal frequency components. The shape of the window determines how well it resolves frequency or magnitude information.

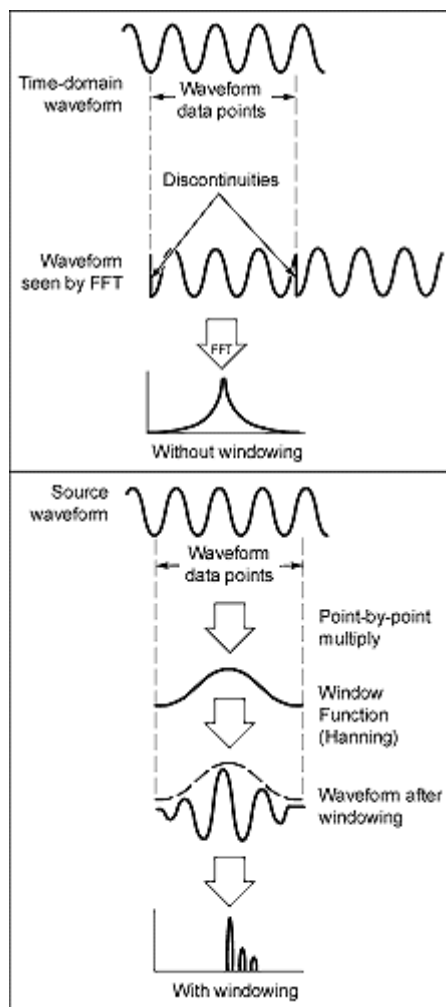

FFT Window Characteristics

Each FFT window is a trade-off between frequency resolution and magnitude accuracy. What you want to measure and your source signal characteristics help determine which window to use. Use the following guidelines to select the best window.


FFT window	Characteristics	Best for measuring
Rectangular	Best frequency, worst magnitude resolution. This is essentially the same as no window.	Transients or bursts where the signal levels before and after the event are nearly equal. Equal-amplitude sine waves with frequencies that are very close.
Hamming, Hanning	Better frequency, poorer magnitude accuracy than Rectangular. Hamming has slightly better frequency resolution than Hanning.	Sine, periodic, and narrow-band random noise. Transients or bursts where the signal levels before and after the event are significantly different.
Blackman-Harris	Best magnitude, worst frequency resolution.	Predominantly single frequency signals to look for higher order harmonics.

You can also determine the best window empirically by first selecting the Rectangular window, and then selecting (in the following order) the Hamming, Hanning, and Blackman-Harris windows until the frequency components merge. Use the window just prior to where the frequencies emerge for the best compromise between resolution and amplitude accuracy.

Time Domain Gating

You can use time domain gating to select a specific segment of your signal for spectral analysis. Two controls, gate position and gate duration, determine the location and size of the gate.

The resulting spectrum corresponds to the frequency components of the signal in the gated segment.

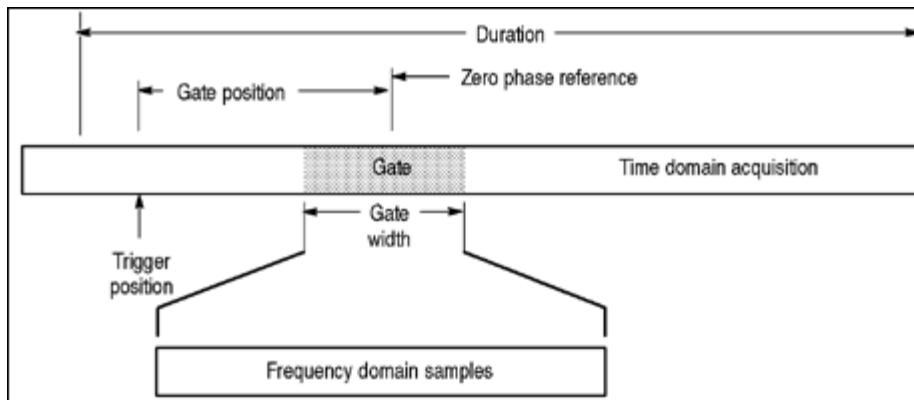


Time domain gating is inversely proportional to the resolution bandwidth of the spectral waveform. The narrower the gate, the larger the resolution bandwidth and the lower the frequency resolution. To obtain the best frequency resolution, use as wide a gate as possible.

Aliasing

Problems occur when the instrument acquires a signal containing frequency components that are higher in frequency than the [Nyquist frequency \(see page 150\)](#). The frequency components that are above the Nyquist frequency are under sampled and appear to "fold back" around the Nyquist frequency, showing as lower frequency components. These incorrect components are called aliases.

To quickly check for aliasing, slowly decrease the horizontal time scale. If the shape of the displayed waveform changes drastically or becomes stable, your waveform is probably aliased. You can also check for aliasing by turning on peak detect acquisition mode. To remove aliasing, modify the record length.

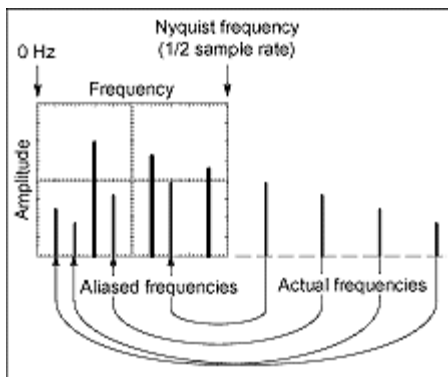

Eliminating Aliasing

Use the following methods to eliminate aliases:

- Increase the sample rate by adjusting the horizontal scale to a faster time-per-division setting. Since you increase the [Nyquist frequency \(see page 150\)](#) as you increase the time per division, the aliased frequency components should appear at their proper frequency. If the increased number of frequency components shown on the screen makes it difficult to measure individual components, use MultiView Zoom to magnify the FFT waveform.
- Use a filter on the source signal to limit the bandwidth of the signal to frequencies below that of the Nyquist frequency. If the frequency components that you want to view are below the built-in bandwidth settings, set the source channel bandwidth to the appropriate value.
- Push the Autoset button.
- [Switch the acquisition to Envelope mode or Peak Detect mode \(see page 171\)](#). Envelope mode searches for samples with the highest and lowest values over multiple acquisitions and can detect faster signal components over time. In Peak Detect mode, the acquisition alternates between saving the highest sample in one acquisition interval and lowest sample in the next acquisition interval.

Math Equation Editor Control Window

From the Math menu, select Equation Editor, or click the Editor button in the Math Setup or Spectral Setup control windows.

Overview

Use the Math Equation Editor control window to define or edit math waveforms. The readout shows the math expression as you construct it. New functions are added at the beginning of the expression each time you click one of the function buttons.

To Use

For information on the controls, click the buttons.



Behavior

You can create a math expression using one or more of the following approaches:

- Open the tabs and click one or more of the buttons to insert functions into the math expression. Then select one of the waveforms as an operand by clicking one of the [Channels Selector \(see page 224\)](#). Use the edit controls to add additional numbers and operators to complete the math expression.
- Connect an external keyboard and use it to enter the math expression.
- Create a math expression using an external text editor or another application. Copy the text to the Windows clipboard. Right-click with the mouse to paste the text into the math expression.

If you create a math expression that is longer than the physical space in the control window readout, you can scroll through the expression using the [Text Edit controls \(see page 225\)](#).

To edit another math waveform, select the waveform from the Math (n) drop-down list in the Equation Editor control window.

To open a [Math Averaging \(see page 210\)](#) control window, where you can specify the number of times the math waveform is to be averaged, click Avgs.

Click Apply to apply the math expression to the selected waveform.

For additional information on creating math waveforms, see [Guidelines for Working with Math Waveforms \(see page 668\)](#).

What do you want to do next?







- [Learn about the Math Setup controls. \(see page 209\)](#)
- [Learn about using math functions with math waveforms. \(see page 225\)](#)

Channels Selector

Specify the Ch <1 - 4> and waveform type (Channel, Math, or Reference) for oscilloscope operations.

- Click Ch and specify a channel to dedicate the controls for use with an input on the front panel.
- Click Math to dedicate the controls for use with a math waveform.
- Click Ref to dedicate the controls for use with a reference waveform.
- Shaded buttons Indicate unused or undefined waveforms.




Text Edit Controls	
Use the following controls to edit the Math expression.	
	Moves the text insertion point to the left of the first character in the expression.
	Moves the text insertion point one character to the left.
	Moves the text insertion point one character to the right.
	Deletes the character to the left of the insertion point.
	Moves the text insertion point to the right of the last character in the expression.
	Clears the entire math expression.

Math Equation Editor (Time Tab)

From the Math menu, select Equation Editor; then open the Time tab.

To Use

Use these controls to insert time domain functions into the math expression.

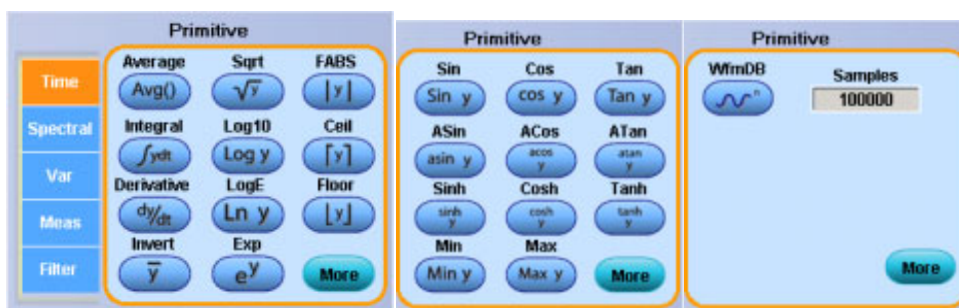

1. Click one of the Primitive buttons to insert a Time function into the math expression.

[Average \(see page 764\)](#)

[Sqrt \(see page 226\)](#)

[FABS \(see page 226\)](#)

[Sin \(see page 227\)](#)

[Cos \(see page 227\)](#)

[Tan \(see page 228\)](#)

[Integral \(see page 226\)](#)

[Log 10 \(see page 227\)](#)

[Ceil \(see page 227\)](#)

[ASin \(see page 228\)](#)

[ACos \(see page 228\)](#)

[ATan \(see page 228\)](#)

Derivative (see page 226)	Log e (see page 227)	Floor (see page 227)	Sinh (see page 228)	Cosh (see page 228)	Tanh (see page 228)
Invert (see page 227)	Exp (see page 227)		Min (see page 238)	Max (see page 238)	WfmDB (see page 228)

2. Click More to add additional functions.

Behavior

You can use any of the channels as arguments for the function. You can also create nested functions by inserting one function into the argument portion of another.

Consider the following when working with math waveforms:

- Scale and position the source waveform so it is contained on-screen; off-screen waveforms may be clipped, resulting in errors in the math waveform.
- Use the vertical position and vertical offset to position the source waveform. The vertical position will not affect the math waveform unless you position the source waveform off screen so that it is clipped.

What do you want to do next?

- [Learn about the Spectral Setup controls. \(see page 228\)](#)
- [Learn about using the measurement list with math waveforms. \(see page 230\)](#)

Integral

Inserts the text INTG(into the math expression. Enter an argument to the function. The integral function produces the integral of the argument.

Derivative

Inserts the text DIFF(into the math expression. Enter an argument to the function. The derivative function produces the derivative of the argument.

Absolute Value

Inserts the text FABS(into the math expression. The FABS function takes the absolute value of the expression.

Square Root

Inserts the text SQRT(into the math expression. Enter an argument to the function. The square root function produces the square root of the argument.

Base 10 Logarithm

Inserts the text LOG(into the math expression. Enter an argument to the function. The log function produces the base 10 logarithm of the argument.

Smallest Integer

Inserts the text CEIL(into the math expression. The CEIL function takes the largest integer $>$ the expression.

Natural Logarithm

1. Inserts the text LN(into the math expression.
2. Enter an argument to the function.

The LN function produces the natural logarithm of the argument.

Largest Integer

Inserts the text FLOOR(into the math expression. The FLOOR function takes the largest integer $<$ the expression.

Invert

Inserts the text INV(into the math expression. Enter an argument to the function. The invert function inverts the argument within the parentheses.

Natural Antilog

1. Inserts the text EXP(into the math expression.
2. Enter an argument to the function.

The natural antilog function raises e to the power of the argument.

Sine

Inserts the text SIN(into the math expression.

Cosine

Inserts the text COS(into the math expression.

Tangent

Inserts the text TAN(into the math expression.

Arc Sine

Inserts the text ASIN(into the math expression.

Arc Cosine

Inserts the text ACOS(into the math expression.

Arc Tangent

Inserts the text ATAN(into the math expression.

Hyperbolic Sine

Inserts the text SINH(into the math expression.

Hyperbolic Cosine

Inserts the text COSH(into the math expression.

Hyperbolic Tangent

Inserts the text TANH(into the math expression.

WfmDB

Inserts the text WFMBD(into the math expression. The WfmBD features accumulates sampling information into a data base.

Math Equation Editor (Spectral Tab)

From the Math menu, select Equation Editor; then open the Spectral tab.

To Use

Use these controls to insert spectral analysis functions into the math expression.

1. Click one of the Predefined Functions to insert a Spectral function into the math expression.


[Mag \(see page 229\)](#)

[Real \(see page 229\)](#)

[Phase \(see page 250\)](#)

[Imaginary \(see page 229\)](#)

2. Select one of the defined waveforms as an argument using the [Channels Selector \(see page 224\)](#).

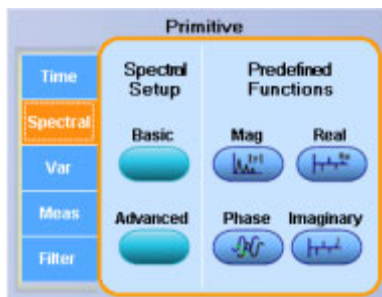

Behavior

You can use any of the channels as arguments for the function. Create nested functions by inserting a function into the argument portion of another.

What do you want to do next?

- [Learn about the Spectral Setup controls. \(see page 212\)](#)
- [Learn about using math functions with math waveforms. \(see page 225\)](#)
- [Learn about using the Measurement list with math waveforms. \(see page 230\)](#)

Magnitude

Inserts the text `SpectralMag(` into the math expression. Select one of the waveforms as an argument to the function. This function creates an FFT magnitude waveform.

Real Number

Inserts the text `SpectralReal(` into the math expression. Select one of the waveforms as an argument to the function. This function creates a waveform that displays only the real part of the FFT.

Imaginary Number


Inserts the text `SpectralImag(` into the math expression. Select one of the waveforms as an argument to the function. This function creates a waveform that displays only the imaginary part of the FFT.

Math Equation Editor (Var Tab)

From the Math menu, select Equation Editor; then open the Var tab.

To Use

1. Click in a Var <1-8> = entry box and use the multipurpose knobs to enter a value for the variable.
2. Click More to add additional variables
3. Click the associated button to enter that variable into the math expression.
4. Click Controls to access the [Math Variables \(see page 210\)](#) control window.

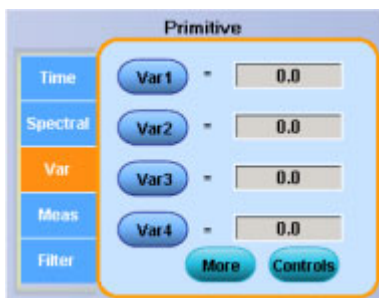

Behavior

You can assign up to eight different variables to add to your math expression.

- Clicking a Var <1-8> button enters the variable into the math expression.
- Clicking the More button accesses the other four variables.
- The Controls button activates the Math Variables control window where you can quickly set or change the math variables.

What do you want to do next?

- [Learn about the Edit controls. \(see page 659\)](#)
- [Learn about the Math Variable controls. \(see page 210\)](#)

Math Equation Editor (Meas Tab)

From the Math menu, select Equation Editor; then open the Meas tab.

To Use

1. Use the list to enter one of the predefined measurements into the math expression.
2. Click the button adjacent to an item to insert the measurement into the expression.



Behavior

The list contains the measurements defined in the Measurement control window. The buttons are only active for defined measurements; they are unavailable for any undefined measurements.

Measurements are continuously updated on live acquisitions. The most recent measurement values are always used in math expressions.

What do you want to do next?

- [Learn about the Edit controls. \(see page 659\)](#)

Math Equation Editor (Filter Tab)


From the Math menu, select Equation Editor; then open the Filter tab.

To Use

Use these controls to insert spectral analysis-based functions into the math expression.

1. In the Math Equation Editor control window, click a Load button.
2. In the Open dialog box, navigate to the location of the filter you want to load. You will find a selection of available [Math Arbitrary Filters \(see page 702\)](#) in C:/TekScope/Math Arbitrary Filters, or browse to the location of any custom filters.
3. Select the filter you want to use; then click Open.
4. Click the corresponding Flt <1– 4> button (that you used to load the filter) to insert its function into the math expression.
5. You can select one of the defined waveforms as an argument using the [Channels Selector \(see page 224\)](#).

6. Edit the math expression using the Operands and edit controls if needed.
7. When you finish building the expression, click Apply.

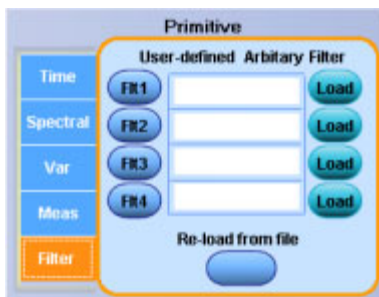

Behavior

You can use any of the channels as arguments for the function. Create nested functions by inserting a function into the argument portion of another.

What do you want to do next?


- [Learn about the Spectral Setup controls. \(see page 212\)](#)
- [Learn about using math functions with math waveforms. \(see page 225\)](#)
- [Learn about using the Measurement list with math waveforms. \(see page 230\)](#)

Measurement Snapshot Control Window

From the Measure menu, select Measurement Snapshot.

Overview

Measurement Snapshot lists all of the automated measurements that are available for a selected waveform.

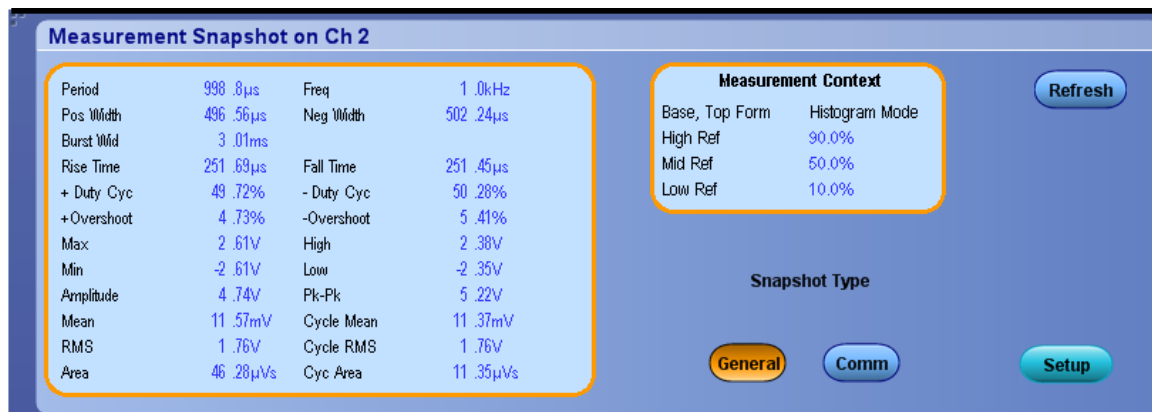

To Use

1. Select the waveform for which you want to take a snapshot.
2. Click the Snapshot button in the Measurement control window, or select Snapshot from the Measure menu.
3. Click either General or Comm in the Snapshot Type group box to begin the snapshot.

Behavior

When the instrument has completed all of the measurements, the snapshot window is updated with the measurements.

Measurement Snapshot executes all of the single waveform measurements once; the measurements are not continuously updated. Any measurements previously taken are retained on the display until you complete a new snapshot. To take another snapshot, click the Refresh button.

NOTE. Automatic measurements are not available on digital channels.

TIP. Before taking a snapshot, be sure to properly display the waveform. Measurement Snapshot does not warn you if a waveform is improperly scaled (for example, clipped, low signal amplitude, low resolution, and so on).

To change the source for taking a snapshot, select another channel, math, or reference memory waveform and then execute snapshot again.

TIP. For information on measurement algorithms, refer to the *Automatic Measurement Algorithms and Methods for High-Performance Communications Applications* application note, [85w 15763.pdf](#). This application note is available from the Documentation Browser on your instrument desktop; click the Documentation icon. It is also available from the www.tektronix.com Web site.

What do you want to do next?

- [Return to the Measurement control window overview.](#) (see page 234)

Measurement Setup Control Window (Amplitude Tab)


From the Measure menu, select Measurement Setup; then open the Ampl tab.

Overview

Use this control window to set up the instrument for taking automatic amplitude measurements.

To Use

For information on the controls, click the buttons.

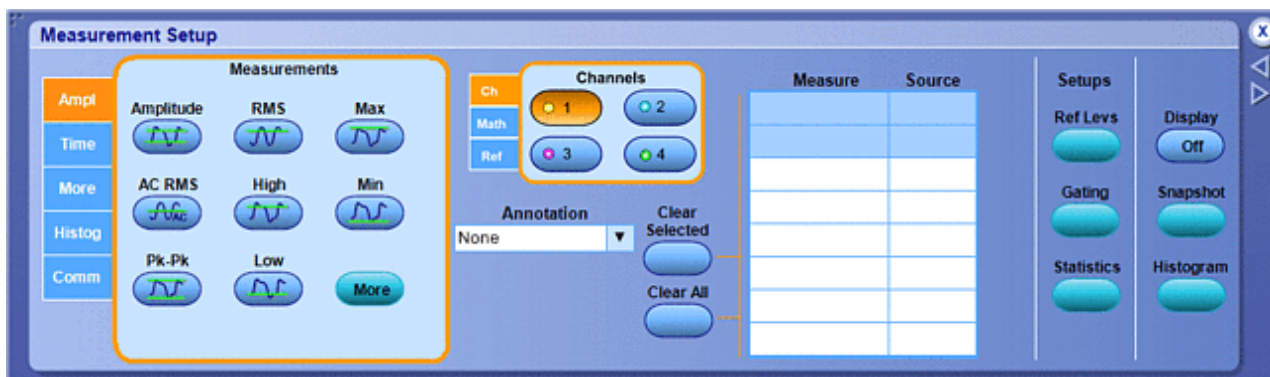

Behavior

From this control window, you can do the following:

- Define amplitude measurements for the selected waveforms.
- Select a waveform source using the [Channels Selector](#) (see page 224). You can measure live waveforms, math waveforms, or reference waveforms.

- Create a list of measurements to appear in the main graticule or in a separate measurement window.
- Define the unique reference levels for each measurement.
- Use gating to limit the measurements to a specific area of the waveform.
- Set up measurement statistics.
- Set up histograms to evaluate specific regions of the waveform.

TIP. Turn on Fast Acquisitions to enhance your measurements. In Fast Acquisitions mode, measurements are calculated on an array of acquired waveforms.

If three or more channels are displayed, Fast Acquisitions mode is turned off, and then the requested measurements are made. Fast Acquisitions mode is not automatically turned back on when you select fewer than three channels.

NOTE. Some measurements are less accurate using Fast Acquisitions mode, for example, timing measurements.

Automatic measurements are not available on digital channels.

What do you want to do next?

- [Go to a step-by-step procedure to set up the instrument for taking measurements. \(see page 473\)](#)



Measurement Readouts




An Info (information) column in the measurement readout area displays icons that indicate the status of each measurement. When an error icon displays, the instrument also displays an error code.

For a list of instrument error codes, messages, and definitions, refer to the Programmer guide available on the product software DVD or from www.tektronix.com/manuals.

The next table shows some of the icons with examples of their meaning.

TIP. If you hover the mouse pointer over the displayed icon, the instrument displays more specific information on the measurement status.

Icon	Meaning example
	The instrument is in the process of acquiring data and calculating the measurement.
	The instrument encountered an error.

Icon	Meaning example
	The instrument cannot locate the specified edge of the signal.
	The instrument cannot measure a waveform that is “clipped” on the screen.
	The instrument cannot locate the specified signal.

Amplitude Measurements


From the Measure menu, select Measurement Setup; then open the Ampl tab.

To Use

Use the Ampl tab to select automatic amplitude measurements.

1. Select a source with the [Channels Selector \(see page 224\)](#).
2. Click a Measurements button to add an Amplitude measurement to the Measure list:

- | | | |
|--|--|---|
| Amplitude (see page 237) | Low (see page 238) | +Ovrshoot (see page 238) |
| AC RMS (see page 237) | Max (see page 238) | -Ovrshoot (see page 238) |
| Pk-Pk (see page 237) | Min (see page 238) | Mean (see page 239) |
| RMS (see page 237) | Cycle RMS (see page 238) | Cycle Mean (see page 239) |
| High (see page 238) | | |

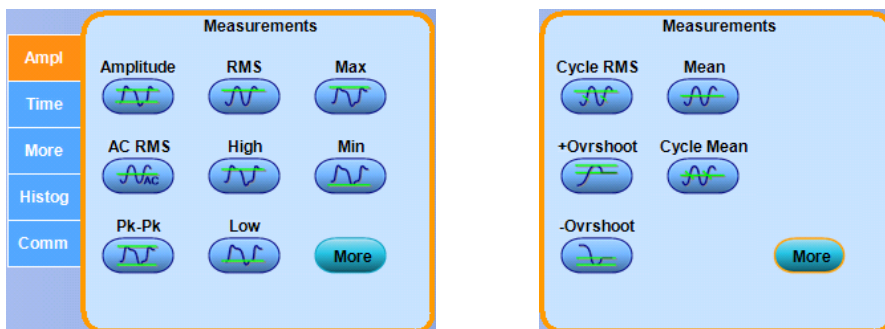

3. Click Display On in the upper-right corner of the [Measurement Setup Control Window \(see page 234\)](#) to turn the measurement display on and off.

Behavior

Measurements are updated approximately three times a second, or less for long record lengths. Measurements are calculated after each acquisition. You can display up to eight automatic measurements.

TIP. *Select the individual measurements directly from the Measure menu Amplitude submenu.*

What do you want to do next?

- [Learn about taking timing measurements. \(see page 239\)](#)
- [Learn about taking histogram measurements. \(see page 255\)](#)
- [Learn about other measurements. \(see page 247\)](#)
- [Learn about communication measurements. \(see page 244\)](#)
- [Learn more about the Measurements list. \(see page 715\)](#)
- [Learn more about the Measurement controls. \(see page 252\)](#)

Amplitude

This voltage measurement is the high value minus the low value measured over the entire waveform or gated region:

$$\text{Amplitude} = \text{High} - \text{Low}$$

AC RMS

This voltage measurement is the true Root Mean Square voltage over the measurement region.

Peak to Peak

This voltage measurement is the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region.

RMS

This voltage measurement is the true Root Mean Square voltage over the entire waveform or gated region.

High

The high level measurement is the value used as 100% whenever high reference, mid reference, or low reference values are needed, such as in fall time or rise time measurements. This value can be calculated using either the min/max or histogram method. The min/max method uses the maximum value found. The histogram method uses the most common value found above the midpoint. This value is measured over the entire waveform or gated region.

Low

The low level measurement is the value used as 0% whenever high reference, mid reference, or low reference values are needed, such as in fall time or rise time measurements.

This value can be calculated using either the min/max or histogram method. The min/max method uses the minimum value found. The histogram method uses the most common value found below the midpoint. This value is measured over the entire waveform or gated region.

Maximum

This voltage measurement is the maximum amplitude. It is typically the most positive peak voltage and is measured over the entire waveform or gated region.

Minimum

This voltage measurement is the minimum amplitude. It is typically the most negative peak voltage and is measured over the entire waveform or gated region.

Cycle RMS

This voltage measurement is the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region.

Positive Overshoot

This voltage measurement is measured over the entire waveform or gated region.

Positive Overshoot = (Maximum – High) × Amplitude 100%

Negative Overshoot

This voltage measurement is measured over the entire waveform or gated region and is expressed as:

Negative Overshoot = (Low – Minimum) × Amplitude × 100%

Mean

This voltage measurement is the arithmetic mean over the entire waveform or gated region.

Cycle Mean

This voltage measurement is the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region.

Measurement Setup Control Window (Time Tab)


From the Measure menu, select Measurement Setup; then open the Time tab.

Overview

Use this control window to set up the instrument for taking automatic time measurements.

To Use

For information on the controls, click the buttons.

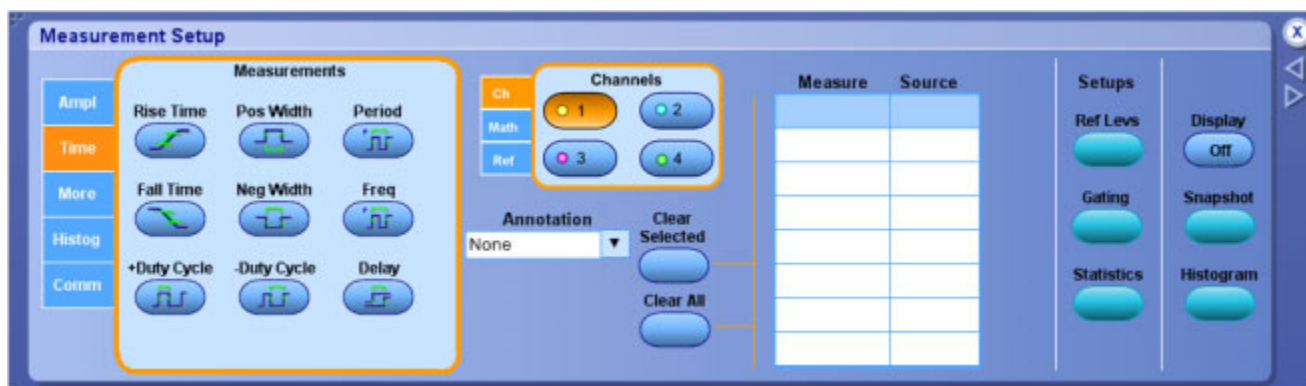**Behavior**

From this control window, you can do the following:

- Define time measurements for the selected waveforms.
- Select a waveform source using the [Channels Selector \(see page 224\)](#). You can measure live waveforms, math waveforms, or reference waveforms.
- Create a list of measurements to appear in the main graticule or in a separate measurement window.
- Define the unique reference levels for each measurement.

- Use gating to limit the measurements to a specific area of the waveform.
- Set up measurement statistics.
- Set up histograms to evaluate specific regions of the waveform.

NOTE. *Automatic measurements are not available on digital channels.*

TIP. *Turn on Fast Acquisitions to enhance your measurements. In Fast Acquisitions mode, measurements are calculated on an array of acquired waveforms. As the waveforms accumulate (with persistence on), your measurement accuracy may increase. However, only one or two channels can be displayed when you take automatic measurements using Fast Acquisitions mode.*

If three or more channels are displayed, Fast Acquisitions mode is turned off, and then the requested measurements are made. Fast Acquisitions mode is not automatically turned back on when you select fewer than three channels.

What do you want to do next?

- [Go to a step-by-step procedure to set up the instrument for taking measurements. \(see page 473\)](#)

Time Measurements

Type From the Measure menu, select Measurement Setup; then open the Time tab.

To Use

Use the Time tab to select automatic time measurements.

1. Select a source with the [Channels Selector \(see page 224\)](#).
2. Click a Measurements button to add a Time measurement to the Measure list:

[Rise Time \(see page 241\)](#)

[Pos Width \(see page 242\)](#)

[Period \(see page 242\)](#)

[Fall Time \(see page 241\)](#)

[Neg Width \(see page 242\)](#)

[Freq \(see page 242\)](#)

[+Duty Cycle \(see page 241\)](#)

[-Duty Cycle \(see page 242\)](#)

[Delay \(see page 242\)](#)



3. Click Display On in the upper-right corner of the [Measurement Setup Control Window \(see page 239\)](#) to turn the measurement display on and off.

Behavior

Measurements are updated approximately three times a second, or less for long record lengths. Measurements are calculated after each acquisition. You can display up to eight automatic measurements.

A new control window opens when you [click Delay \(see page 731\)](#). Enter the parameters for the delay measurement, and then click Ok to return to the Measurement Setup control window. The delay measurement is added to the list.

TIP. Select the individual measurements directly from the Measure menu Time submenu.

Rise Time

This timing measurement is the time required for the leading edge of the first pulse in the waveform or gated region to rise from the low reference value (default = 10%) to the high reference value (default = 90%) of the final value.

Fall Time

This timing measurement is the time required for the falling edge of the first pulse in the waveform or gated region to fall from the high reference value (default = 90%) to the low reference value (default = 10%) of the final value.

Positive Duty Cycle

This timing measurement is the ratio of the positive pulse width to the signal period expressed as a percentage.

The duty cycle is measured on the first cycle in the waveform or gated region.

Positive Duty Cycle = (Positive Width) \times Period \times 100%

Positive Width

This timing measurement is the distance (time) between the mid reference (default 50%) amplitude points of a positive pulse.

The measurement is made on the first pulse in the waveform or gated region.

Negative Width Measurement

This timing measurement is the distance (time) between the mid reference (default 50%) amplitude points of a negative pulse.

The measurement is made on the first pulse in the waveform or gated region.

Negative Duty Cycle

This timing measurement is the ratio of the negative pulse width to the signal period expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

Negative Duty Cycle = (Negative Width) \times Period \times 100%

Period

This measurement is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

Frequency

This timing measurement is a measure of the first cycle in a waveform or gated region. Frequency is the reciprocal of the period; it is measured in Hertz (Hz) where one Hz is one cycle per second.

Delay

This timing measurement is the time between the mid reference (default 50%) amplitude point of two different waveforms

Measurement Setup Control Window: (Communications Tab)


From the Measure menu, select Measurement Setup; then open the Comm tab.

Overview

Use this control window to set up the instrument for taking automatic communications measurements.

To Use

For information on the controls, click the buttons.

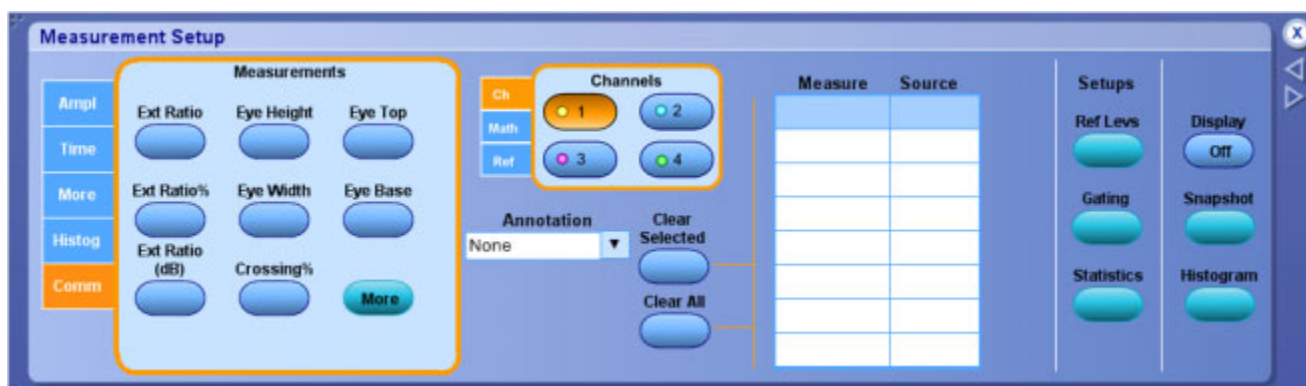

Behavior

From this control window, you can do the following:

- Define communications measurements for the selected waveforms.
- Select a waveform source using the [Channels Selector \(see page 224\)](#). You can measure live waveforms, math waveforms, or reference waveforms.
- Create a list of measurements to appear in the main graticule or in a separate measurement window.
- Define the unique reference levels for each measurement.
- Use gating to limit the measurements to a specific area of the waveform.
- Set up measurement statistics.
- Set up histograms to evaluate specific regions of the waveform.

NOTE. *Automatic measurements are not available on digital channels.*

TIP. *Turn on Fast Acquisitions to enhance your measurements. In Fast Acquisitions mode, measurements are calculated on an array of acquired waveforms. As the waveforms accumulate (with persistence on), your measurement accuracy may increase. However, only one or two channels can be displayed when you take automatic measurements using Fast Acquisitions mode.*

If three or more channels are displayed, Fast Acquisitions mode is turned off, and then the requested measurements are made. Fast Acquisitions mode is not automatically turned back on when you select fewer than three channels.

What do you want to do next?

- [Go to a step-by-step procedure to set up the instrument for taking measurements. \(see page 473\)](#)

Communications Measurements

From the Measure menu, select Measurement Setup; then open the Comm tab.

To Use

Use the Comm tab to select automatic communications measurements.

1. Select a source with the [Channels Selector \(see page 224\)](#).
2. Click a Measurements button to add a Communications measurement to the Measure list:

Ext Ratio (see page 245)	Eye Width (see page 246)	Jitter P-P (see page 246)	Noise RMS (see page 247)
ExtRatio% (see page 245)	Crossing% (see page 246)	Jitter RMS (see page 246)	S/N Ratio (see page 247)
Ext Ratio (dB) (see page 245)	Eye Top (see page 246)	Jitter 6s (see page 246)	CycDistortion (see page 247)
Eye Height (see page 245)	Eye Base (see page 246)	Noise P-P (see page 246)	Q-Factor (see page 247)



3. Click Display On in the upper-right corner of the [Measurement Setup Control Window \(see page 242\)](#) to turn the measurement display on and off.

Behavior

Measurements are updated approximately three times a second (or less for long record lengths). Measurements are calculated after each acquisition. You can display up to eight automatic measurements.

TIP. Most Comm measurements require either *WfmDB* or *FastAcq* mode.

You may need to select [Infinite Persistence display mode \(see page 145\)](#) to accumulate enough data for the Comm measurement to work.

NOTE. You can also select the individual measurements directly from the Measure menu Comm submenu.

What do you want to do next?

- [Learn about taking amplitude measurements. \(see page 236\)](#)
- [Learn about taking timing measurements. \(see page 239\)](#)
- [Learn about other measurements. \(see page 247\)](#)
- [Learn more about the measurement list. \(see page 715\)](#)
- [Learn more about the measurement controls. \(see page 252\)](#)

Extinction Ratio

Extinction ratio is the ratio of eye top to base. This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{Ext Ratio} = p\text{TopMean}/p\text{BaseMean}$$

Extinction Ratio Percent

Extinction ratio percent is the ratio of eye base to top expressed as a percentage.

This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{Ext Percent} = 100 \times (p\text{TopMean}/p\text{BaseMean}).$$

Extinction Ratio Decibel

Extinction ratio decibel is the ratio of eye top to base expressed in decibels.

This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{ExtdB} = 10 \times \text{Log}(p\text{TopMean}/p\text{BaseMean})$$

Eye Height

Eye height is the measurement of the eye height in volts.

$$\text{Eye Height} = (p\text{TopMean} - 3 \times p\text{TopSigma}) - (p\text{BaseMean} + 3 \times p\text{BaseSigma})$$

Eye Width

Eye width is the measurement of eye width in seconds.

$$\text{Eye Width} = (t_{\text{Cross2Mean}} - 3 \times p_{\text{TopSigma}}) - (t_{\text{Cross1Mean}} + *t_{\text{Cross1Sigma}})$$

Crossing Percent

Crossing percent measurement is the eye crossing point expressed as a percentage of eye height.

$$\text{Crossing Percent} = 100 \times [(p_{\text{Cross1Mean}} - p_{\text{BaseMean}})/(p_{\text{TopMean}} - p_{\text{BaseMean}})]$$

Eye Top

Eye Top is the top value used in the extinction ratio measurements.

$$\text{Eye Top} = p_{\text{TopMean}}$$

Eye Base

Eye Base is the base value used in the extinction ratio measurements.

$$\text{Eye Base} = p_{\text{BaseMean}}$$

Jitter Peak-to-Peak

Jitter p-p is the peak-to-peak value for the edge jitter in the current horizontal units.

$$\text{Jitter PP} = T_{\text{Cross1PP}}$$

Jitter Root Mean Square

Jitter RMS is the RMS value of the edge jitter in the current horizontal units.

$$\text{Jitter RMS} = T_{\text{Cross 1sigma}}$$

Jitter 6 Sigma

Jitter 6 sigma is six times the RMS value of the edge jitter in the current horizontal units.

$$\text{Jitter 6 sigma} = 6 \times (\text{JitterRMS})$$

Noise Peak-to-Peak

Noise p-p is the peak-to-peak value of the noise of the top or base of the signal as specified by you.

To ensure accurate noise values, be sure to set the signal type to Eye when measuring an Eye signal.

$$\text{Noise Pk-Pk} = P_{\text{Toppk-pk}} \text{ or } P_{\text{Basepk-pk}}$$

Noise Root Mean Square

Noise RMS is the RMS value of the noise of the top or base of the signal as specified by you.

To ensure accurate noise values, be sure to set the signal type to Eye when measuring an Eye signal.

Noise RMS = PTopsigma or PBasesigma

Signal to Noise Ratio

S/N ratio is the ratio of the signal amplitude to the noise of the top or base of the signal as specified by you.

S/N Ratio = (Ptop – Pbase)/(PTopsigma or PBasesigma)

Duty Cycle Distortion

Duty cycle distortion is the peak-to-peak time variation of the first eye crossing measured at the MidRef as a percent of the eye period.

DCD(sec) = 100% × TDCDp-p/(TCross2mean – TCross1mean)

Quality Factor

Quality factor is the ratio of eye size to noise.

Quality Factor = (PTopmean – PBasemean)/(PTopsigma + PBasesigma)

Measurement Setup Control Window (More Tab)


From the Measure menu, select Measurement Setup; then open the More tab.

Overview

Use this control window to set up the instrument for taking miscellaneous measurements.

To Use

For information on the controls, click the buttons.

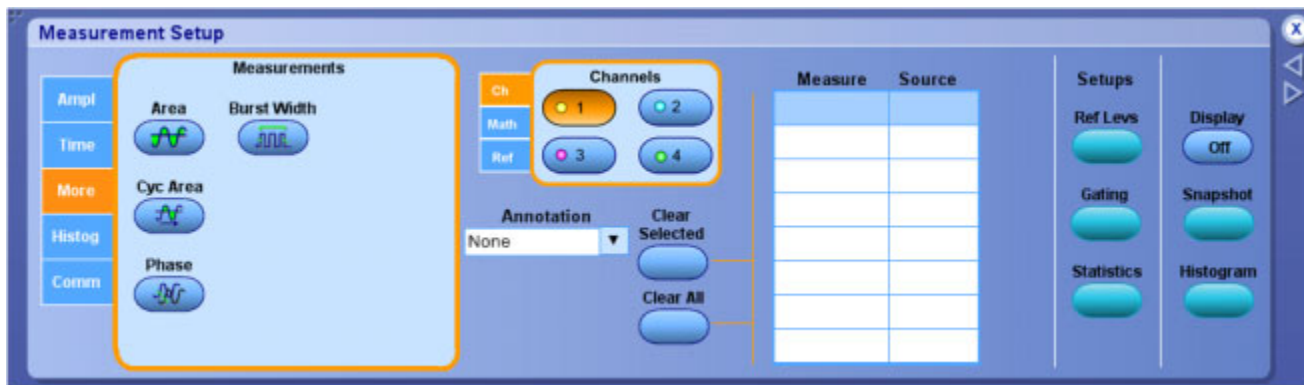

Behavior

From this control window, you can do the following:

- Define miscellaneous measurements for the selected waveforms.
- Select a waveform source using the [Channels Selector \(see page 224\)](#). You can measure live waveforms, math waveforms, or reference waveforms.
- Create a list of measurements to appear in the main graticule or in a separate measurement window.
- Define the unique reference levels for each measurement.
- Use gating to limit the measurements to a specific area of the waveform.
- Set up measurement statistics.
- Set up histograms to evaluate specific regions of the waveform.

NOTE. Automatic measurements are not available on digital channels.

TIP. Turn on Fast Acquisitions to enhance your measurements. In Fast Acquisitions mode, measurements are calculated on an array of acquired waveforms. As the waveforms accumulate (with persistence on), your measurement accuracy may increase. However, only one or two channels can be displayed when you take automatic measurements using Fast Acquisitions mode.

If three or more channels are displayed, Fast Acquisitions mode is turned off, and then the requested measurements are made. Fast Acquisitions mode is not automatically turned back on when you select fewer than three channels.

What do you want to do next?

- [Go to a step-by-step procedure to set up the instrument for taking measurements. \(see page 473\)](#)

Miscellaneous Measurements

From the Measure menu, select Measurement Setup; then open the More tab.

To Use

Use the More tab to select measurements not found under any of the other measurement tabs.


1. Select a source with the [Channels Selector \(see page 224\)](#).
2. Click a Measurements button to add a More measurement to the Measure list:

[Area \(see page 250\)](#)

[Cyc Area \(see page 250\)](#)

[Phase \(see page 250\)](#)

[Burst Width \(see page 250\)](#)

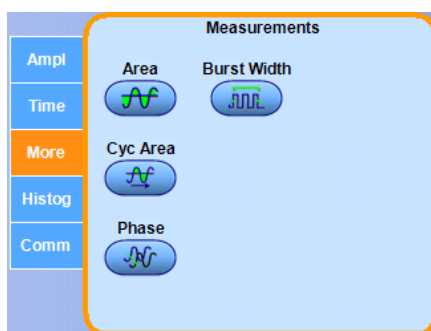

3. Click Display On in the upper-right corner of the [Measurement Setup Control Window \(see page 247\)](#) to turn the measurement display on and off.

Behavior

Measurements are updated approximately three times a second, or less for long record lengths. Measurements are calculated after each acquisition. You can display up to eight automatic measurements.

A new control window opens when you [click Phase \(see page 733\)](#). Enter the parameters for the phase measurement, and then click Ok to return to the Measurement Setup control window. The phase measurement is added to the list.

TIP. *Select the individual measurements directly from the Measure menu More submenu.*

What do you want to do next?

- [Learn about taking automatic phase measurements. \(see page 733\)](#)
- [Learn about taking amplitude measurements. \(see page 236\)](#)

- [Learn about taking timing measurements. \(see page 239\)](#)
- [Learn about taking histogram measurements. \(see page 255\)](#)
- [Learn about communications measurements. \(see page 244\)](#)
- [Learn more about the Measurements list. \(see page 715\)](#)
- [Learn more about the Measurement controls. \(see page 252\)](#)

Area

Area is a voltage-over-time measurement. The measurement is the area over the entire waveform or gated region expressed in volt-seconds. The area above the common reference point is positive while the area below the common reference point is negative.

Cycle Area

The cycle area is a voltage over time measurement. The measurement is the area over the first cycle in the waveform or the first cycle in the gated region expressed in volt-seconds. The area above the common reference point is positive while the area below the common reference point is negative.

Phase

This timing measurement is the amount of time that one waveform leads or lags another waveform. The measurement is expressed in degrees where 360° comprise one waveform cycle.

Burst Width

 
This timing measurement is the duration of a burst (a series of transient events) and is measured over the entire waveform or gated region.

Measurement Statistics Control Window

From the Measure menu, highlight Statistics; then select Statistics Controls from the submenu, or click the Statistics button in the Measurement Setup window.

Overview

Use the Measurement Statistics control window to display statistical calculations on measurements. The control window contains controls that determine which statistics are displayed in the measurement window.

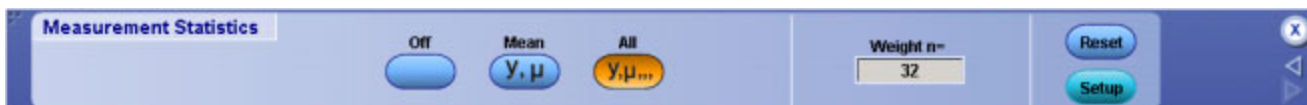

To Use

- Click Off to turn the measurement statistics display off.
- Click Mean to display the value and the mean (μ) of each measurement.
- Click All to display the statistics for each measurement value.
 - (μ) Mean
 - (m) Minimum
 - (M) Maximum
 - (s) Standard Deviation
 - (n) Population
- Click in the Weight entry box, and then use the multipurpose knobs to set the statistics weight.
- Click Reset to restart the statistics calculations.

TIP. *Select the individual statistics directly from the Measure menu Statistics submenu.*

Behavior

Measurement values continue as live updates while the statistics accumulate over time. The statistics appear on the main screen when a control window is open or on the right side of the screen when no control windows are open and there are less than four measurements active. The color of the statistics match the color of the waveform from which the measurement was taken.

The statistics weight specifies the constant used to calculate the mean and standard deviation; the minimum and maximum values are unaffected by weighting. A large value produces statistics that vary less over time.

All statistics (mean, minimum, maximum, standard deviation, and population) are always gathered even though the mean may be the only statistic shown. When measurements are turned on, the acquisitions take longer because measurements and statistic calculations are done on each acquisition.

What do you want to do next?


- [Return to the Measurement Setup control window overview. \(see page 234\)](#)
- [Learn about setting the Reference Level controls. \(see page 252\)](#)
- [Learn about using gating to specify measurement areas. \(see page 253\)](#)

Reference Levels Setup Control Window

From the Measure menu, select Reference Levels, or click the Ref Levs button in the Measurement Setup window.

Overview

Use the Reference Levels control window to define unique reference levels for each measurement. The default reference levels serve most general-purpose measurements. You can customize all measurements to use different reference levels.

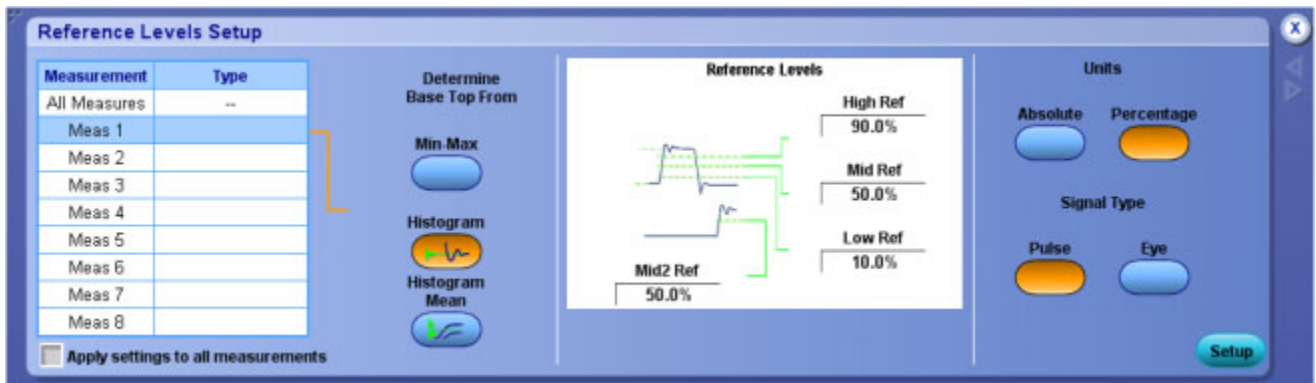

To Use

- Click the Min-Max button to derive the reference levels from the minimum and maximum values of the waveform record. If you want to derive the reference levels based on statistical data, click the Histogram or the Histogram mean button.
- Refer to the graphic in the center of the control window and determine the reference levels you want to define. Click in the entry boxes associated with the desired reference level, and use the multipurpose knobs to adjust the value.
- If you want the reference levels to be measured by volts, click the Absolute button under Units. To measure the reference levels as a percentage, click the Percentage button.
- Click either Eye or Pulse to select the signal type.

Behavior

The following reference levels are included: [High Reference \(see page 253\)](#), [Mid Reference \(see page 734\)](#), [Low Reference \(see page 253\)](#), and [Mid2 Reference \(see page 253\)](#).

Define the reference levels as percentages of the signal amplitude or as absolute values in vertical units by clicking the appropriate button to define the Units selection. Use Percentage to have reference levels track the signal. Use Absolute to set the reference levels to fixed values.

The top and base levels that the measurement system derives from a waveform influence the fidelity of measurements. The measurement system can derive the reference levels from either the minimum and maximum values of the waveform or from statistical data.

The Min-Max selection uses the highest and lowest values of the waveform record. This selection is best for examining waveforms with no large, flat portions at a common value, such as sine waves and triangle waves.

The Histogram selection sets the top and base values statistically. The most common values either above or below the midpoint are used (depending on whether the high reference point or the low reference point is being defined). Because the statistical approach ignores short-term aberrations (overshoot or ringing), the histogram method is the best setting for examining pulses.

What do you want to do next?

- [Return to the Measurement Setup control window overview. \(see page 234\)](#)
- [Learn more about Measurement controls. \(see page 253\)](#)
- [Learn about using Gating to specify measurement areas. \(see page 253\)](#)
- [Learn about using measurement Statistics. \(see page 250\)](#)

High Reference

The High Reference defines the high reference level of a waveform; the default level is 90%. This reference level is used with the Low Reference level in the calculation of rise and fall times. To change this level, click the control, and then set the level with the multipurpose knob.

Low Reference

The Low Reference defines the low reference level of a waveform; the default level is 10%. This reference level is used with the High Reference level in the calculation of rise and fall times. To change this level, click the control and then, set the level with the multipurpose knob.

Mid2 Reference

 
The Mid2 reference defines the middle reference used on the second waveform specified in delay or phase measurements; the default level is 50%. To change this level, click the control, and then set the level with the multipurpose knob.

Gating Control Window

From the Measure menu, highlight Gating; then select Gating from the submenu or click the Gating button in the Measurement Setup window.

Overview

Use the Gating control window to limit the measurement area of the waveform to the region bounded by the vertical bar cursors or to the left and right edges of a Zoom window.

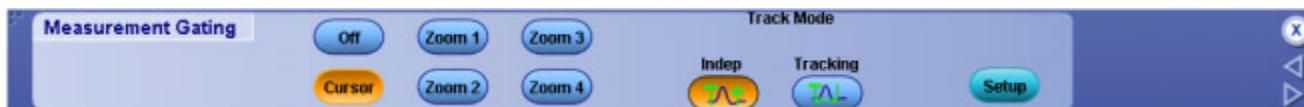

To Use

- To define the gating area with the vertical bar cursors, click Cursor, and then click either Indep or Tracking to select the Track Mode. These buttons are only displayed when you click Cursor.
- To define the gating area from a Zoom area, click one of the four Zoom buttons.
- To turn off measurement gating, click the Off button.
- Click Setup to return to the Measurement control window.

Behavior

Normally the instrument takes measurements over the entire waveform record. Gating lets you limit measurements to a specific portion of the waveform. You can limit gating to the region bounded by the vertical bar cursors or to the left and right edges of a Zoom area.

When you click Zoom (1–4) the Zoom window appears in the lower half of the display. Measurements are taken within the boundaries of the Zoom area. You can only take measurements on one Zoom area at a time.

When you click Cursor, measurements are taken within the boundaries of the vertical cursors. Use the multipurpose knobs to move the cursors.

When you use vertical cursors to control the gating, you can also specify the [cursor mode \(see page 76\)](#). Use the independent cursor mode to move the cursors one at a time with the multipurpose knobs. Use the tracking mode to have the cursors track one another; moving Cursor 1 automatically moves Cursor 2 in tandem.

TIP. Click, hold, and drag across the part of the graticule that you want to measure. After you define the measurement area, select Measurement Gating from the shortcut menu to place gating cursors around the measurement area.

Use the same click, hold, and drag method to turn measurement gating off; just select Measurement Gating Off in the shortcut menu.

What do you want to do next?

- [Return to the Measurement Setup control window overview. \(see page 234\)](#)
- [Learn more about using vertical bar cursors. \(see page 73\)](#)

- [Learn more about the Measurement controls. \(see page 250\)](#)
- [Learn about setting the Reference Level controls. \(see page 252\)](#)
- [Learn about using Measurement Statistics. \(see page 250\)](#)

Measurement Setup Control Window (Histogram Tab)


From the Measure menu, select Measurement Setup; then open the Histogram tab.

To Use

Use this control window to set up the instrument for taking histogram measurements.

Overview

For information on the controls, click the buttons.

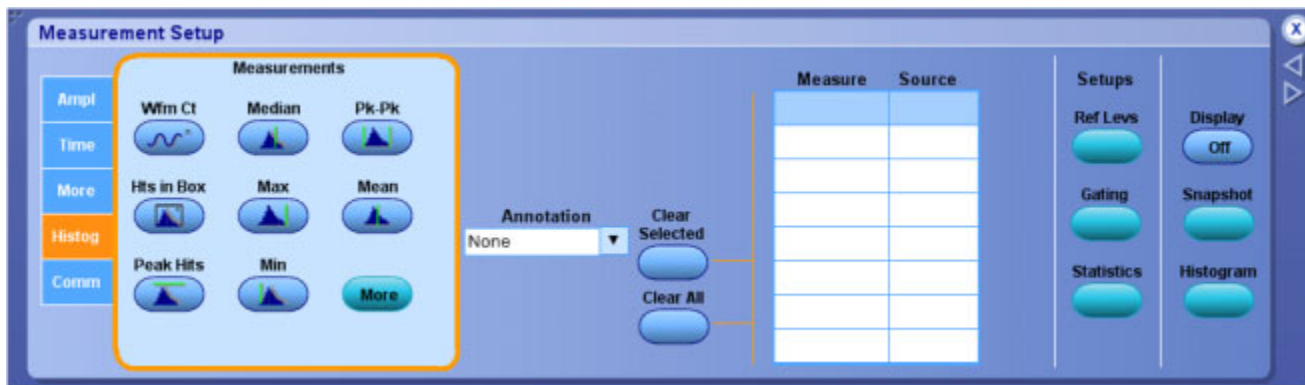

Behavior

From this control window, you can do the following:

- Define histogram measurements for the selected waveforms.
- Select a waveform source using the [Channels Selector \(see page 224\)](#). You can measure live waveforms, math waveforms, or reference waveforms.
- Create a list of measurements to appear in the main graticule or in a separate measurement window.
- Define the unique reference levels for each measurement.
- Use gating to limit the measurements to a specific area of the waveform.

- Set up measurement statistics.
- Set up histograms to evaluate specific regions of the waveform.

NOTE. *Automatic measurements are not available on digital channels.*

TIP. *Turn on Fast Acquisitions to enhance your measurements. In Fast Acquisitions mode, measurements are calculated on an array of acquired waveforms. As the waveforms accumulate (with persistence on), your measurement accuracy may increase. However, only one or two channels can be displayed when you take automatic measurements using Fast Acquisitions mode.*

If three or more channels are displayed, Fast Acquisitions mode is turned off, and then the requested measurements are made. Fast Acquisitions mode is not automatically turned back on when you select fewer than three channels.

What do you want to do next?


- [Go to a step-by-step procedure to set up the instrument for taking measurements. \(see page 473\)](#)

Histogram Control Window

From the Measure menu, select Waveform Histograms, or click the Histogram button in the Measurement Setup window.

Overview

Use the Histogram control window to set up a vertical or horizontal histogram. Use vertical histograms to measure signal noise and horizontal histograms to measure signal jitter.

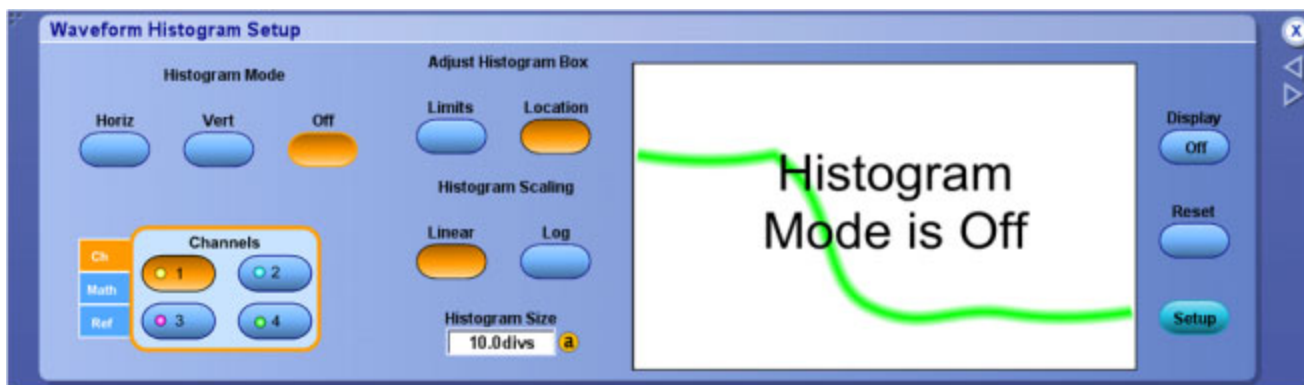

To Use

1. Use the [Channels Selector \(see page 224\)](#) to select the source waveform for the histogram measurements.
2. Click the type of histogram you want to use for your measurement, Horiz (Horizontal) or Vert (Vertical). When you make this selection, the instrument continues to calculate histograms until you set Display to Off.
3. Click either Linear or Log to set the scaling.
4. Adjust the size of the histogram box ([Horiz \(see page 259\)](#) or [Vert \(see page 260\)](#)) by clicking Limits under Adjust Histogram Box. Use the multipurpose knobs or [keypad \(see page 38\)](#) keypad to set the box boundaries.
5. Move the location of the histogram box ([Horiz \(see page 261\)](#) or [Vert \(see page 262\)](#)) by clicking Location under Adjust Histogram Box, and then use the multipurpose knobs or keypad to set the X and Y locations.

NOTE. You must explicitly click the *Histogram Mode Off* button to stop accumulating histogram data. You can also click *Reset* to start a new histogram.

Behavior

A histogram consists of a series of narrow bins into which samples are counted. The histogram box defines the graticule area of the histogram and the number of vertical or horizontal bins. Horizontal histograms have a maximum of 1000 bins while vertical histograms have a maximum of 252 bins. The upper-most and bottom-most bins are not displayed. They are used for tracking over-range and under-range hits and can be obtained by saving the histogram data to a file.

The displayed width or height of the bin that contains the most counts is determined by the Histogram Size control. The relative sizes for all other bins are scaled proportionally to the bin that contains the most counts.

Histogram limits use the same units as the horizontal and vertical scale controls. When you specify the histogram box in terms of location, the Y location control adjusts the bottom edges of the histogram while the X location control adjust the left edge of the histogram box.

TIP. Here are several tips for using histograms:

Right-click in the Histogram box to access a shortcut menu that will allow you to quickly make changes to the histogram.

Use the Measure menu or shortcut menu Reset Histogram command to reset all bin counts to 0.

Click, hold, and drag across part of the graticule where you want to set up a histogram and select Histogram from the shortcut menu.

Use the same click, hold, and drag method to remove a histogram from the display. Select Histogram Off from the shortcut menu.

You can turn the histogram display off and still accumulate histogram data. This enables you to view the waveform without having the histogram obscure the data. Turn the histogram display on (use the Display button on the right side of the control window) at any time to view the histogram.

Use the front-panel channel buttons to turn the source waveform display off so that the waveform does not obscure the histogram. Data accumulation continues whether the waveform display is on or off.

The instrument can perform up to eight [automated statistical measurements \(see page 255\)](#) on the histogram. Allow the histogram to accumulate data for a while, and then turn on the desired measurements.

You can use Fast Acquisitions mode with histograms. However, only one or two channels can be displayed. If three or more channels are displayed, the Fast Acquisitions mode is turned off. The Fast Acquisition mode is automatically turned back on when you select fewer than three channels.

What do you want to do next?


- [Return to the Measurement Setup control window overview. \(see page 234\)](#)

Histogram Box Limits - Horizontal


1. Select a mode:



2. Specify the adjustment:

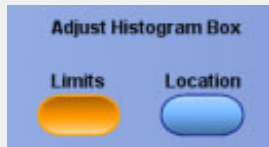


3. Enter limits:

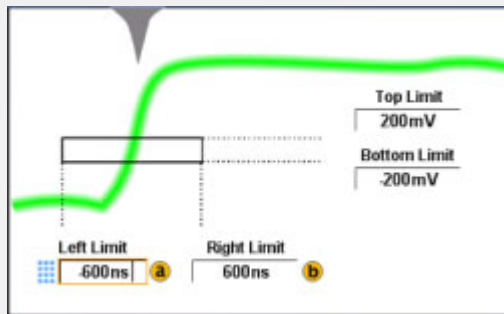


Histogram Box Limits - Vertical


1. Select a mode:

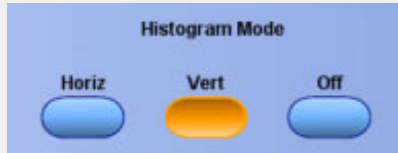

2. Specify the adjustment:

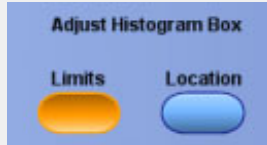

3. Enter limits:

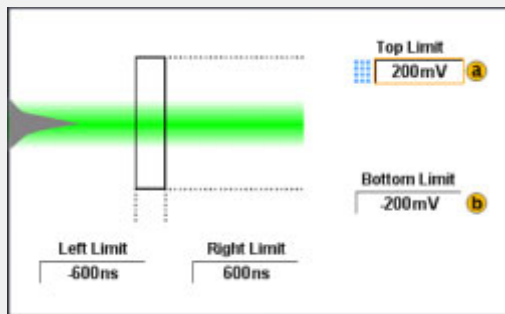


Histogram Box Location - Horizontal


1. Select a mode:



2. Specify the adjustment:

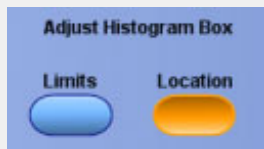


3. Enter limits:

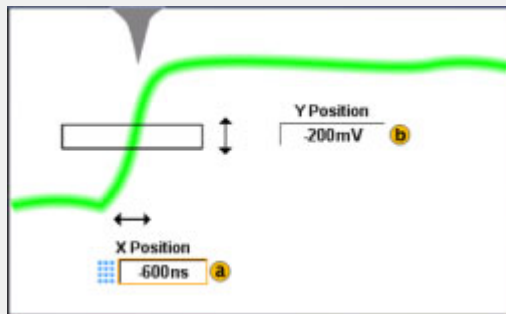

Histogram Box Location - Vertical


1. Select a mode:

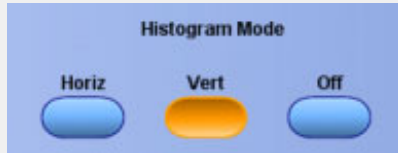

2. Specify the adjustment:



3. Enter limits:

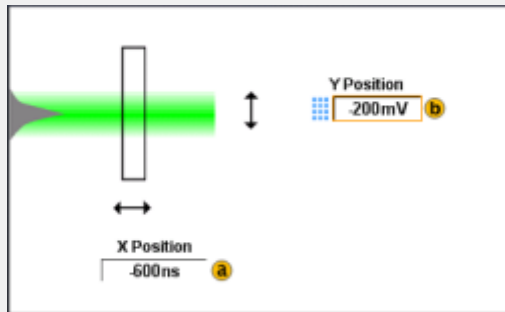

Mark Control Window

From the Analyze menu, select Mark.

Overview

Use the Mark Control Window to manually set and clear marks on acquired waveforms in areas of interest.



To Use

Use the controls in this window to set a mark on a waveform. You can return to the mark and analyze the waveform in the area at a later time.

1. Press the MultiView Zoom button on the instrument front panel. The instrument uses Zoom 1 to set marks.
2. From the Menu bar, select Analyze > Mark.
3. Move the zoom box to the area of interest on the waveform with the multipurpose knob.
4. Use the controls described below to set and clear marks.

NOTE. Marks appear as either green or white triangles on-screen. Green triangles represent locations placed automatically by the instrument; white triangles represent locations placed manually by the user.

Behavior

Use the Mark controls to set marks and analyze waveforms.

- **Description.** Click in the entry box and use the pop-up keyboard to enter a description for the mark you place.
- **Set/Clr.** Click this button to add or delete a mark. Marks are placed on the waveform at center screen.
- **Prev/Next.** Click these buttons to advance from one mark to another along the waveform.

- **Cursor 1/Cursor 2.** Click one of these buttons to position a cursor at the active mark.
- **Zoom 2/Zoom 3.** Click one of these buttons to zoom the area around the active mark. Zoom 1 is the default used by the Search and Mark feature.

Search - Select Control Window

From the Analyze menu, select Search; then open the Select tab.


Overview

Use the controls in this window to set up the instrument to automatically search and place mark(s). The instrument can search for and mark many of the same conditions that are available for triggers.

NOTE. Search and mark operations are not available on digital channels.

To Use

For information on the controls, click the buttons.

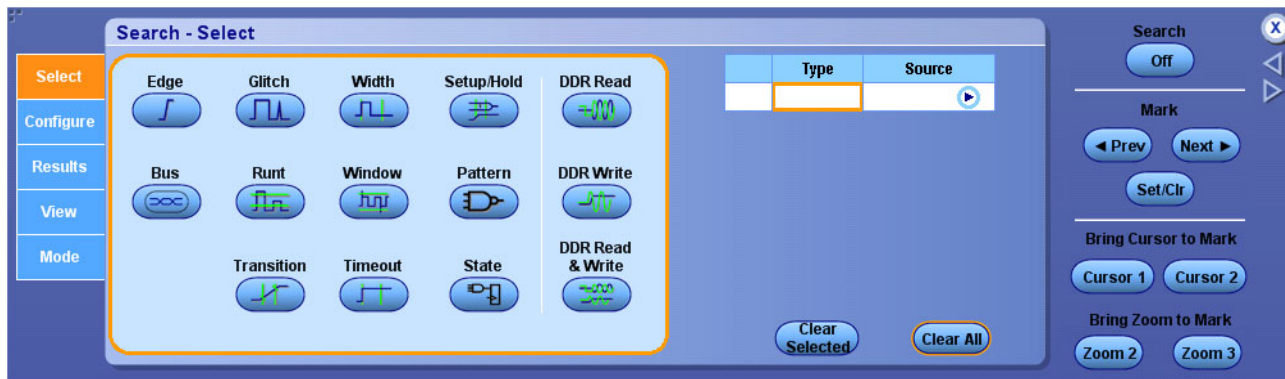

NOTE. The Edge search type is standard, all other search types are optional.

Behavior


You can search for and mark regions with particular edges, pulse widths, runts, logic states, rise and fall times, setup and hold violations and bus types. You can also search on math and reference waveforms.

Search Type

From the Analyze menu, select Search; then open the Select tab.

Overview

Use these controls to select the type of search you want the instrument to perform to automatically place marks on a waveform.

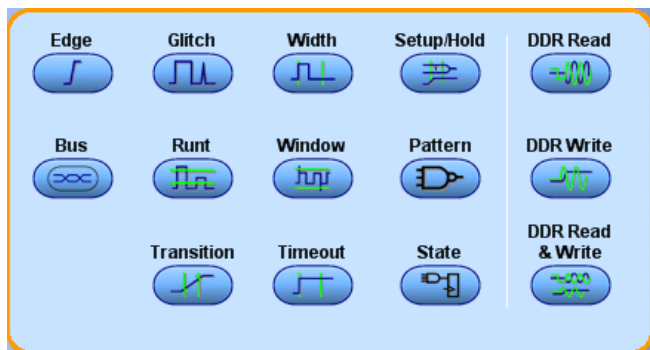

To Use

- Click a button to identify the type of search to perform.
- The search Type will appear under Type in the Type-Source table.

Behavior

Clicking a button places the search selection in the Type column of the Type-Source table

Source Selection

From the Analyze menu, select Search; then open the Select or Configure tabs.

Overview

The Source Selection windows allow you to specify the channel parameters used in the search.

To Use


1. In the Type-Source table, identify the search Type you want to use; then click the right arrow for that search type under Source.
2. After the Source Selection window opens, identify the Channel, Source, Clock, or Logic parameters to be used in the search.
3. Click OK

Behavior


Use the single Source Selection window to set the Channel parameters for an Edge, Glitch, Runt, Transition, Width, Window, or Timeout search.



Use the dual Source Selection window to set the Clock and Data Source parameters for a Setup and Hold search.

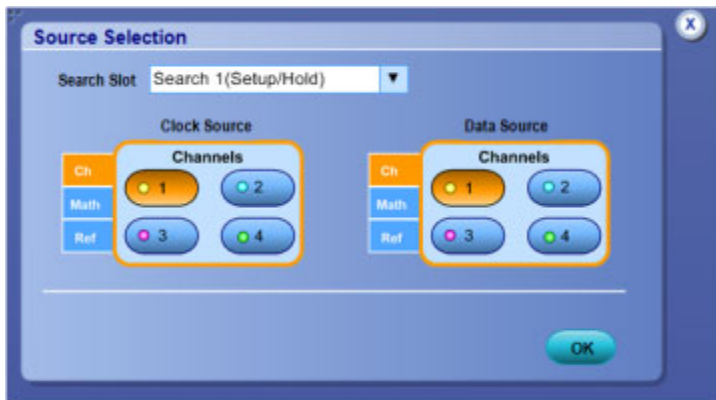

Use the Logic Source Selection window to set the threshold parameters for a Pattern or State logic search.

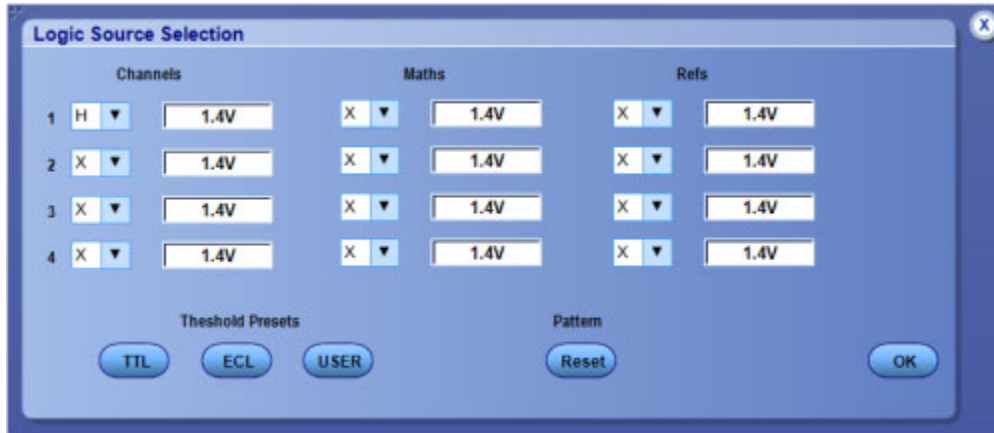

Search - Configure Control Window

From the Analyze menu, select Search; then open the Configure tab.


Overview

Use the controls in this window to set up the instrument to automatically search and place marks.

NOTE. Search and mark operations are not available on digital channels.

To Use

For information on the controls, click the buttons.

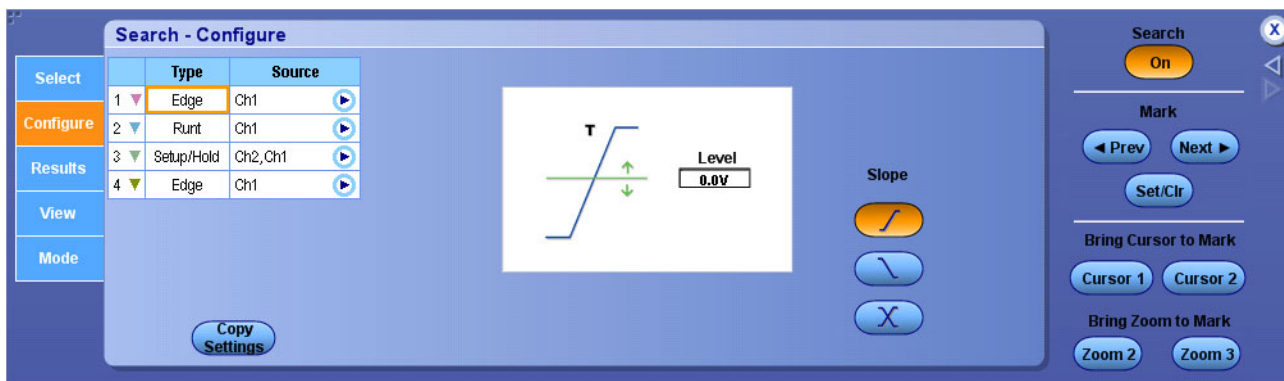

Behavior

Clicking an entry in the Type column activates the individual search controls, similar to the one shown above. These controls vary depending on the search Type. Setting the search conditions is similar to setting the parameters for an [Event Trigger \(see page 290\)](#).

NOTE. No information will be displayed in this window until you specify at least one search Type in the [Search Select Control Window \(see page 264\)](#).

Search - Copy Settings

From the Analyze menu, select Search; then open the Configure tab and press the Copy Settings button.

Overview

Use these controls to copy settings from one search to another. You can also copy a trigger setting to a search.



To Use

1. Set up the desired search(s) in the Search - Select window.
2. Set up the parameters for the search in the Search - Configure window.
3. Click the Copy Settings button to open the Copy Settings window.
4. In the From drop-down list box, select the search or trigger you want to copy.
5. In the To drop-down list box, select the search to copy the settings to.
6. Click the Copy button.

What do you want to do next?

- [Learn about Search Advanced DDR Control Settings. \(see page 269\)](#)

Search - Advanced DDR Control Settings


From the Analyze menu, select Search; then open the Configure tab.

Overview

Use the controls in these windows to set conditions for the instrument to automatically search and place marks.

To Use

1. Under Type, select one of the following entries DDR Read, DDR Write, and DDR Read & Write in the Select tab.
2. Specify a source for the selected DDR search in the Configure tab.
3. Click the Settings button to configure the advanced DDR settings.

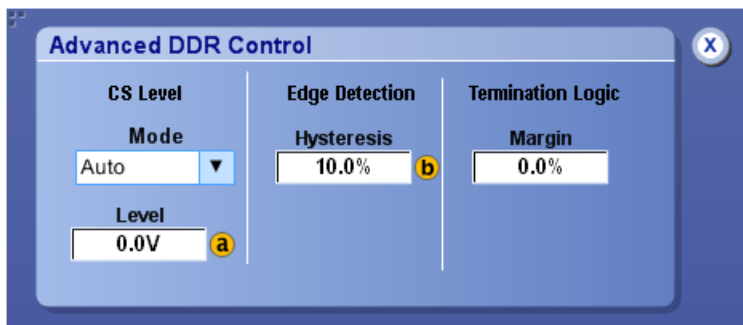

- Use either Auto or Manual option in the Mode drop-down (under CS Level). When auto is selected, the midlevel of the chip select source is automatically calculated, and values above or below this voltage are used to gate mark generation. In custom mode, the specified level is used as the midlevel.
- Specify a value in the Level entry box (under CS Level). This value is used when the CS Level Mode is set to manual.
- Specify a value in the Hysteresis entry box (under Edge Detection). This value is used for edge detection in the DDR algorithm.
- Specify a value in the Margin entry box (under Termination Logic).

What do you want to do next?

- [Learn about Search Copy Settings \(see page 268\).](#)

Search Parameters

From the Analyze menu, select Search; then open the Configure tab.

Overview

Use the controls in these windows to set conditions for the instrument to automatically search and place marks.

To Use

The available controls depend on the searches you selected in the Search - Select Control Window.

1. Under Type, click on an entry in the Type-Source table.
2. Set up the controls for each search you want to perform.
3. Click the Search button to On to initiate a search.

Behavior

Refer to the following table for information on automated searches the instrument can perform. The search controls are functionally similar to the trigger controls.

Search type	Description	Equivalent trigger
Edge	Searches for edges (rising or falling) with a user-specified threshold level.	Edge Trigger Control Window (see page 310)
Glitch	Searches for pulses narrower (or wider) than the specified width, or ignores glitches narrower (or wider) than the specified width.	Glitch Trigger Control Window (see page 311)
Pattern	Search for a logic pattern (AND, OR, NAND, or NOR) across multiple waveforms with each input set to either High, Low, or Don't Care. Search for when the event goes true, goes false, or stays valid for >, <, =, or ≠ a user-specified time. Additionally, you must define one of the inputs as a clock for synchronous (state) searches.	Serial Pattern Control Window (see page 319)
Pulse Width	Searches for positive or negative pulse widths that are >, <, =, or ≠ a user-specified pulse width	Width Trigger Control Window (see page 331)
Runt	Searches for positive or negative pulses that cross one amplitude threshold but fail to cross a second threshold before crossing the first again. Search for all runt pulses or only those with a duration >, <, =, or ≠ a user-specified time.	Runt Trigger Control Window (see page 317)
Setup and Hold	Search for violations of user-specified setup and hold times.	Setup and Hold Trigger Control Window (see page 320)
State	Searches for the condition when all logic inputs to the selected logic function cause the function to be True or False when the clock input changes state.	Logic State Trigger Control Window (see page 324)
Timeout	Searches for no pulse in a specified time.	Timeout Trigger Control Window (see page 325)

Search type	Description	Equivalent trigger
Transition	Search for rising and or falling edges that are >, <, =, or ≠ a user-specified time.	Transition Time Trigger Control Window (see page 327)
Window	Searches for a signal that is entering or leaving the threshold window. Qualify the search in terms of time by using the When Wider option, or by the logical state of other channels using the When Logic option.	Window Trigger Control Window (see page 332)
DDR Searches	Searches for DDR read or write events on source waveforms.	None
Bus	Search for bus events on source waveforms.	Bus Trigger Control Window for Parallel (see page 296) Bus Trigger Control Window for I2C Serial (see page 297) Bus Trigger Control Window for SPI Serial (see page 299) Bus Trigger Control Window for RS232 Serial (see page 300) Bus Trigger Control Window for USB Serial (see page 302) Setting Up an MIPI CSI2 Serial Bus (see page 458) Setting Up an MIPI DSI1 Serial Bus (see page 457)

Search - Results: Mark Table Control Window


From the Analyze menu, select Search; then open the Results tab.

Overview

The table in this window displays timing information for all marks placed during a search.

To Use

For information on the controls, click the buttons.

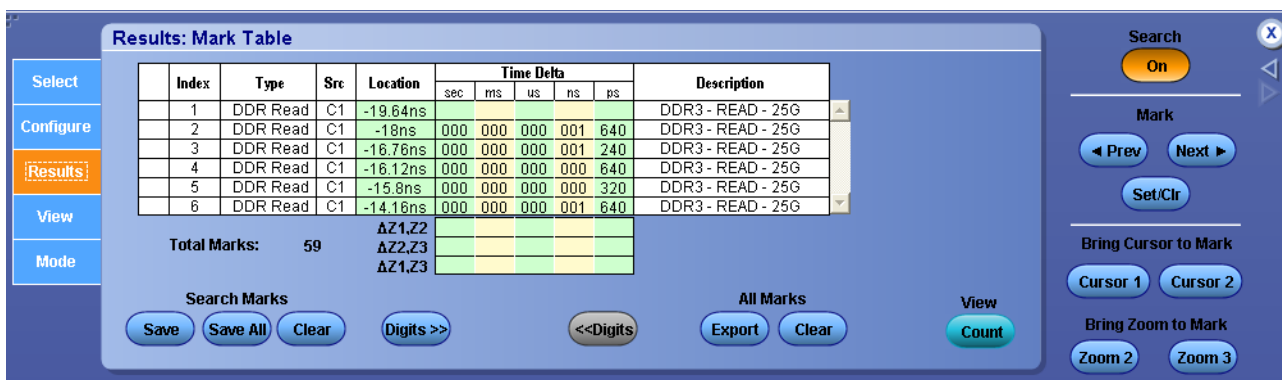

Behavior

The Location and Time Delta columns list the search results for each mark placed by the instrument for the search Type indicated. You can also use the buttons to edit or change the format of the table and save results to a file.

Search - Results: Counts Control Window

From the Analyze menu, select Search; then open the Results tab and click the Count button.

Overview

Use the controls in this window to view the number of times the search criteria was met and the instrument placed a mark on the waveform.

To Use

For information on the controls, click the buttons.



Behavior

The table in this window displays count results for automated search and mark operations. The Count column displays the number of times the search conditions were met for a specific Type of search.


You can also use the buttons to edit the Results Mark Table and save results to a file.

Search - View Control Window

From the Analyze menu, select Search; then open the View tab.

Overview

Use the controls in this window to display marks.

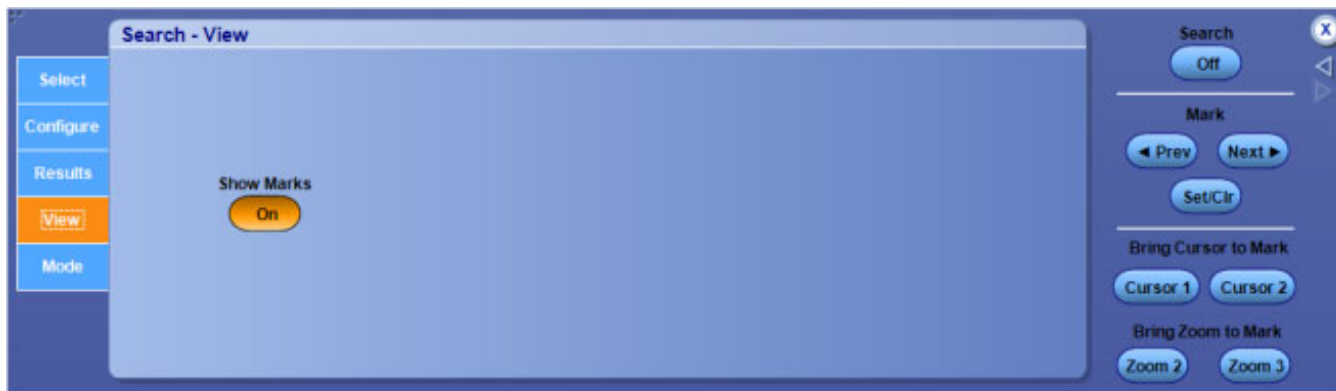

To Use


- Click the Show Marks button On or Off to display the marks placed on a waveform.

Search - Mode Control Window

From the Analyze menu, select Search; then open the Mode tab.

Overview

You can set up the instrument to stop acquiring waveforms when a search criteria is met and the instrument finds a match.

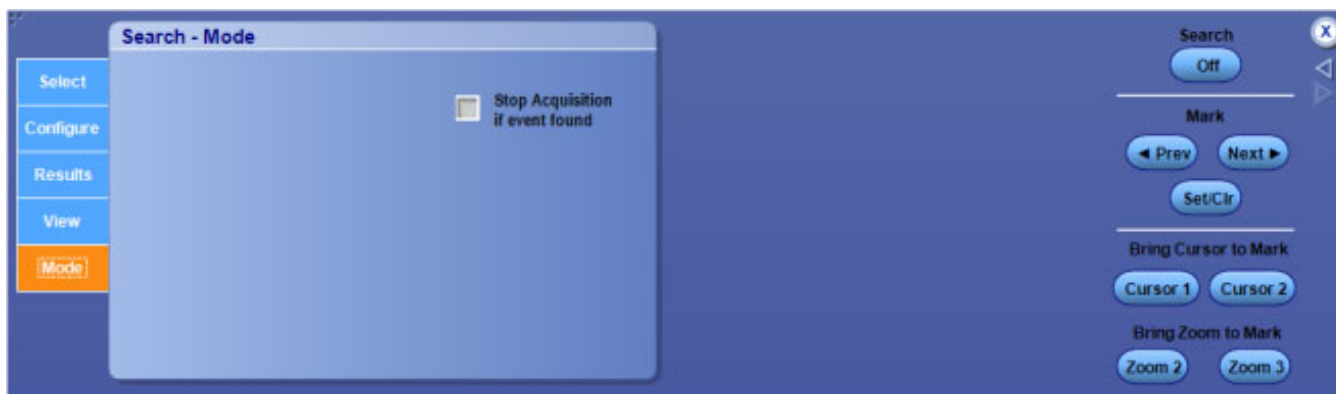

To Use

- Check the Stop Acquisitions if event found option box to stop acquisitions during a search, if a match is found.



Search and Mark Controls

From the Analyze menu, select Search, and then open any of the tabs.

Overview

Use these controls to find points of interest, and place or edit marks on the waveform. The Search and Mark controls are also available through front panel buttons.

NOTE. Search and mark operations are not available on digital channels.

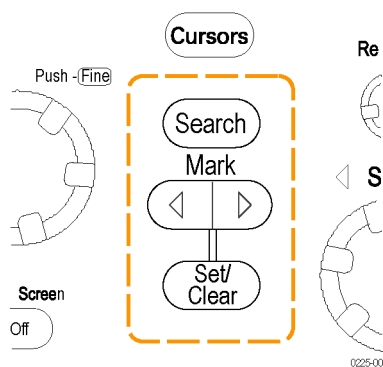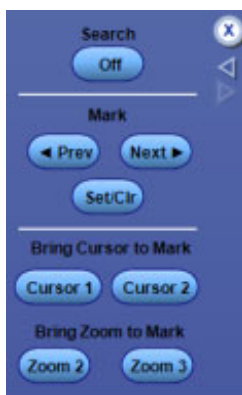

To Use

- **Search.** Click this button to turn the Search and Mark feature On or Off. Use the corresponding **Search** button on the front panel to also turn the feature On or Off.
- **Prev /Next.** Click this button to advance from one mark to another along the waveform. Use the corresponding **Mark** < and > buttons on the front panel to also move from mark to mark.
- **Set /Clr.** Click this button to add or delete a mark. Marks are placed on the waveform at center screen. Use the corresponding **Mark Set/Clr** button on the front panel to also add or delete a mark.
- **Cursor 1/Cursor 2.** Click one of these buttons to position a cursor at the active mark.
- **Zoom 2 / Zoom 3.** Click one of these buttons to zoom the area around the active mark. Zoom 1 is the default used by the Search and Mark feature.

Behavior

Use the Search and Mark controls to set a mark on a waveform at a point of interest. You can return to a mark and analyze the waveform at a later time.

Marks appear as either green or white triangles on-screen. White triangles represent locations placed manually by the user. Other triangles represent locations placed automatically by the instrument; the color of the triangles depend on the selected search index.

Search Marks

From the Analyze menu, select Search; then open the Results tab.

Overview

Use these controls to convert search marks to user marks and to edit the Result: Mark Table.



To Use

- **Save.** Click this button to convert a mark resulting from a search to a user mark.
- **Save All.** Click this button to convert all marks to user marks.
- **Clear.** Click to highlight a row in the Mark Table; then click the Clear button to remove the row from the table and its associated mark(s) from the waveform.

Digits

From the Analyze menu, select Search; then open the Results tab.

Overview

Use this control to change the type of notation used in the Results: Mark Table.



To Use

 
- Click the Digits button to toggle the display notation between engineering or high precision form.

All Marks

From the Analyze menu, select Search; then open the Results tab.


Overview

Use these controls to clear marks or export the Mark Table to a file.

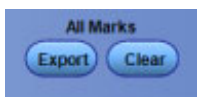

To Use

- **Export.** Click this button to open the Save Marks Table dialog box and export the table to a file in CSV format.

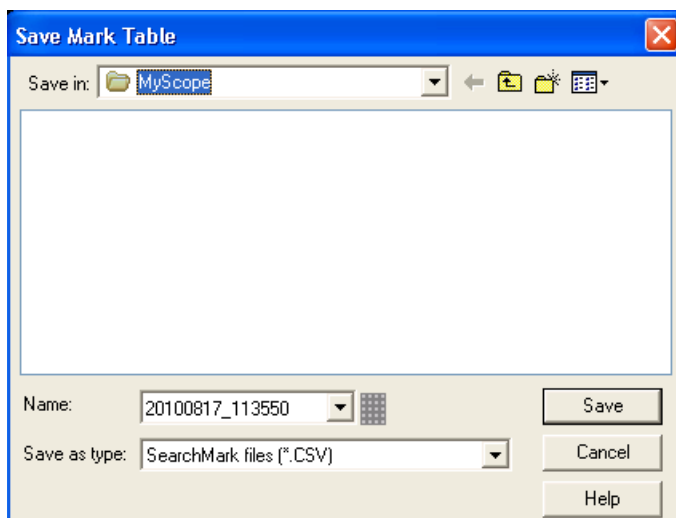

- **Clear.** Click this button to remove all data from the Results: Mark Table and all marks from the display.

View

From the Analyze menu, select Search; then open the Results tab.

Overview

Use this control to view event and timing information for marks.



To Use

- Click the View Time / Count button to toggle between the Results Mark and Results Count tables.


Protocol Decode Event Table

NOTE. Protocol Decode Event Table is only available when a parallel bus is selected on MSO models and on DPO5000 models with option MSOE.

From the Bus Setup window, select the Display tab, and click Protocol Event Table, or in the Analyze menu, select Protocol Decode Event Table.

Overview

Use this dialog box to view the decoded contents of a bus.

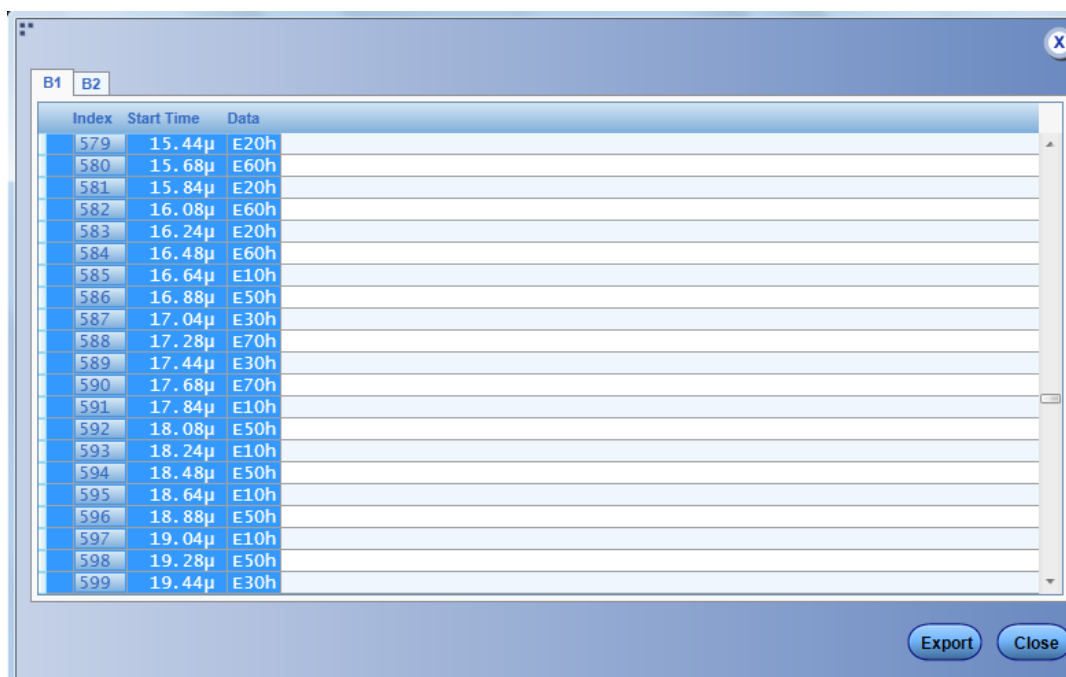

To Use

- To view the decoded contents of a bus, select the tab for the bus. There is one tab for each defined bus.

Behavior

This dialog box opens when you click Protocol Event Table from the Bus Setup Display tab, or in the Analyze menu, when you select Protocol Decode Event Table.

Symbol substitution, annotation and radix behavior is controlled by the Bus Setup control window. There is one row per bus packet. There is one column per visible property or nondetail field in the bus. You can change the column width and column order. Some rows can be expanded to show field details.

Two types of icons are displayed in the Index column.

An Error/Warning icon is displayed if the packet contains an error or warning.



If the packet contains collapsed detail, the Expand icon is displayed. Click on the icon to expand the packet detail. If the packet detail is expanded, the Collapse icon is displayed. Click on the icon to close the expanded detail.




Event Table data and Waveform Zoom 1 are correlated with each other. Event Table highlights rows that intersect with the current Waveform Zoom 1, if enabled. Waveform Zoom 1 moves zoom to center around the selected row in the event table.

Save Event Table

From the Analyze menu, select Protocol Decode Event Table. Click the Export button to open the Save Event Table dialog box. From the dialog box, click the Save button.

Overview

Use this dialog box to save the contents of the event table to a specified file in comma separated values (CSV) format.

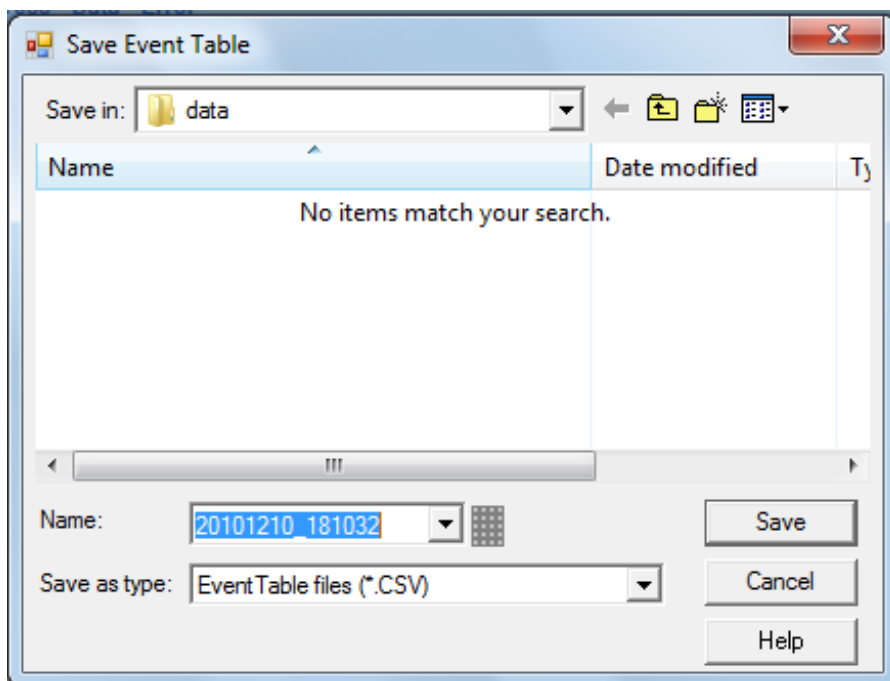

To Use

- To save to a file, enter a Name or use the default file name. The file extension specified in the Save as type list will automatically be appended to the file name.

Behavior

This dialog box opens when you click Export from the event table control window. The default file type is a file with comma separated values (.csv).

The default folder is C:\TekScope\data.


NOTE. Any characters that you enter in the file name box become part of the file name. The instrument does not use any user-defined file extensions.

MyScope Setup Control Window

From the MyScope menu, select New Control Window.

Overview

MyScope allows you to create custom control windows that include only the controls you use regularly. Instead of switching between several control windows, put the controls you use into a custom control window.

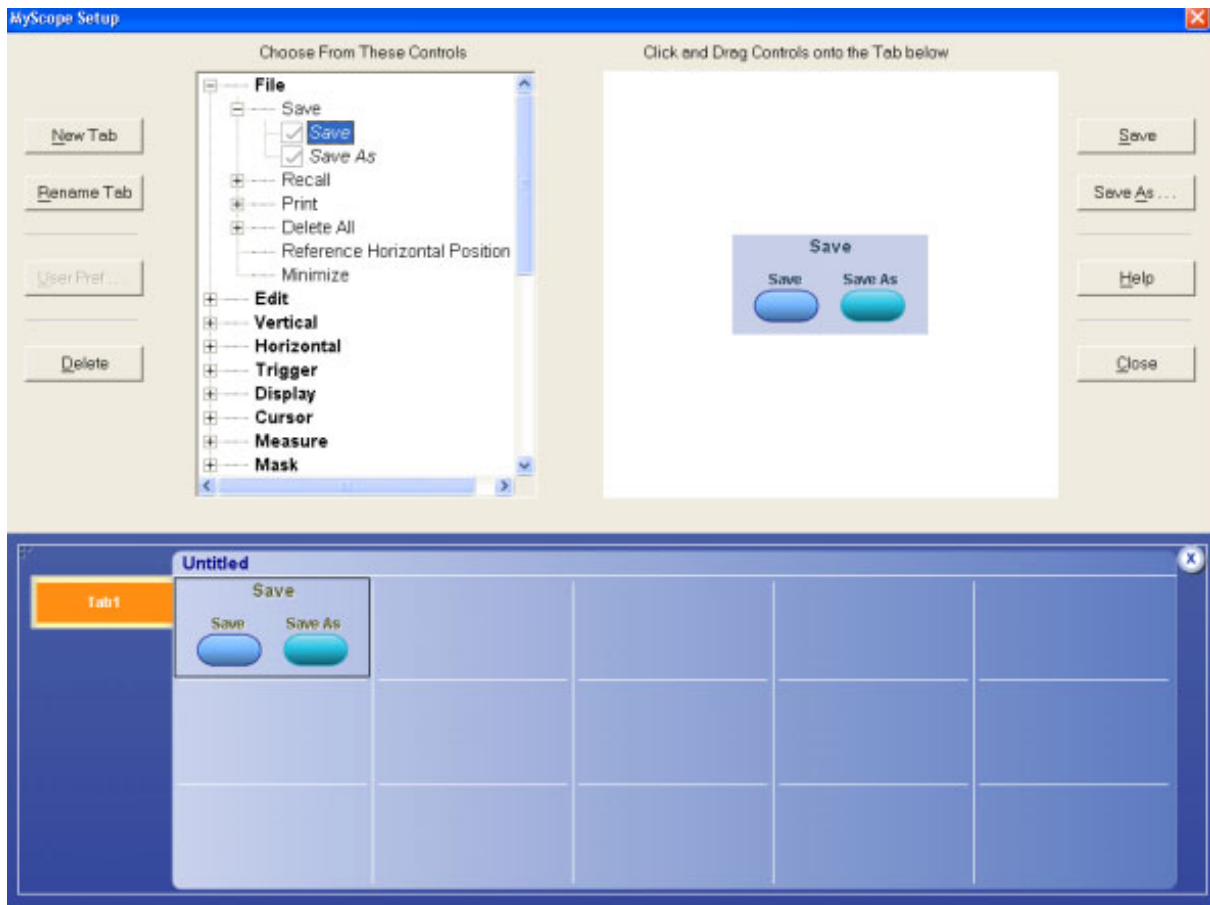

To Use

- Click + to expand a control category.
- Click a control to preview it in the pane at the right.
- Click the + additionally to expand the control list. (If there is no +, then the control cannot be customized further.)

- Clear check boxes in the expanded control list to remove any components you do not want.
- Click and drag the controls to your MyScope control window. You can also change the placement of the control in your MyScope control window by clicking and dragging again.
- Click the New Tab button to add a tab to your MyScope control window. You can have up to six tabs in your MyScope control window. To rename a tab, click the Rename Tab button or double-click the tab.
- Click a control already added to the MyScope window, and then click the Delete button to remove it.
- Click User Pref to specify the user preferences you want to load:
 - [Prompts \(see page 430\)](#)
 - [Keypad Defaults \(see page 430\)](#)
 - [Readouts \(see page 431\)](#)
 - [Measurement Annotation \(see page 433\)](#)
 - [Units \(see page 434\)](#)
- Click [Save or Save As \(see page 286\)](#) to save your MyScope control window.
- Click Close to close the control window without saving it.

NOTE. *Some MyScope controls operate differently than the identical control in the user interface.*

Behavior

Clicking on a control in the list allows you to preview the control in the pane at the right. Selecting or clearing the check boxes for the controls in the list adds or removes controls. When you click and drag a control to assemble your custom control window, it will snap to the nearest grid location when you release the mouse.

TIP. *To change a control you have already placed into a MyScope control window, drag it back to the preview pane and the appropriate control category will open for quick modifications.*

Using MyScope Control Windows

Some MyScope controls operate differently than the identical controls in the user interface.

Horizontal Controls

The Delay Mode control contains only an On/Off button and Position control.


Trigger Controls

Trigger Type and Trigger Sequence controls have a setup button that is automatically included with the controls. Use this setup control window to set the parameters for the selected trigger type.

The Trigger Sequence controls represent the right half of the Trigger Setup control window under the A -> B Event tab. Use this setup window to set the parameters for the trigger sequence.

Cursor Controls

The Cursor Multipurpose Knob (MPK) and style controls are available but what displays in your MyScope control window will depend on what type of cursor you select. For example if you select Screen cursors, then Cursor MPKs controls and Cursor Style controls display as shown in the following graphic.

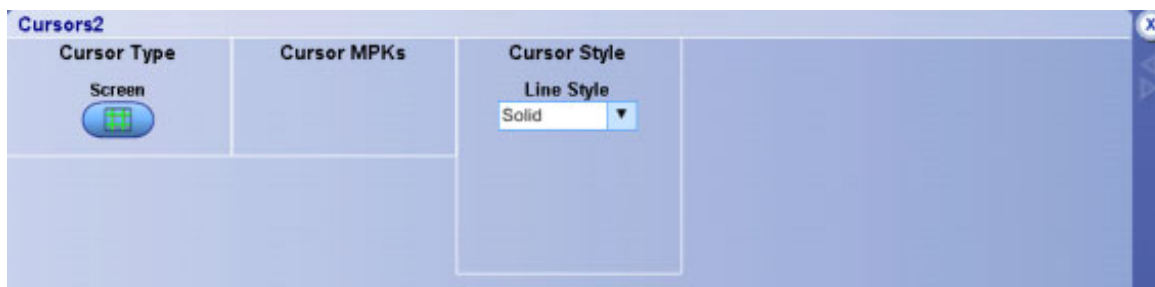

However if you select V Bars, then Cursor MPKs controls are not available and the Cursor Style controls change as shown below.



Measure Controls

Measurement controls always include a Next and Clear button. The Clear button clears all measurements on all channels. The Next button advances the Source to the next active channel and assigns the same measurements to the next channel as were assigned to the previous channel. This is a quick way to assign the same measurements to multiple channels.

Each page of the measurement controls can hold up to twelve measurements.

Mask Controls

The Mask Test controls act as shortcuts to the Mask Test setup control windows.

Utilities Controls

The Set Time and Date, Instrument Diagnostics, E-mail on Event, and User Preferences Utilities controls act as shortcuts to the setup control window for these controls. Clicking the Setup button in any one of these controls will activate the setup control window for that command.

What do you want to do next?

- [Learn about saving MyScope control windows. \(see page 286\)](#)
- [Learn about editing MyScope control windows. \(see page 467\)](#)


Save MyScope File As Dialog Box

In the MyScope Control Window, click the Save button.

To Use

Use this dialog box to save a MyScope control window to a specified location:

- Enter a Name in the Name text box, use the default file name, or click [Auto-increment file name \(see page 287\)](#) if you want to save a series of files without typing in a new name each time. The file extension specified in the Save as type list will automatically be appended to the file name.
- To save to a different directory, select a location in the Save in drop-down list.
- Click Save.

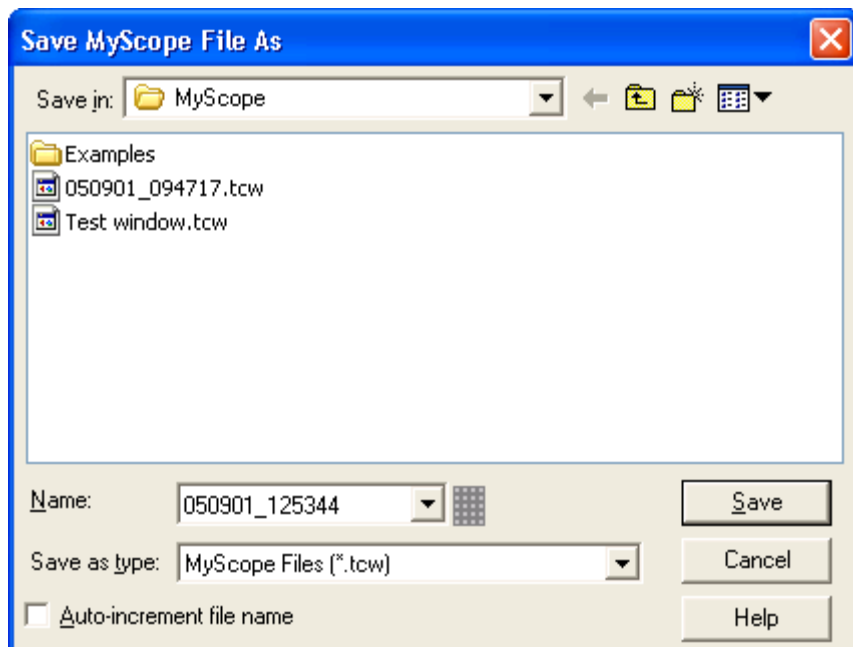

Behavior

This dialog box opens in the default directory `C:\TekScope\MyScope`. If you want to save MyScope control windows in another directory, click the Save in drop-down list to go to that directory. The only available file type is `.tcw`.

When you open the saved MyScope control window, the File name is displayed in the upper left corner of the control window.

What do you want to do next?

- [Learn about the MyScope Setup and Edit control window. \(see page 283\)](#)
- [Learn about opening a MyScope Control window. \(see page 287\)](#)

Auto-Increment File Name

1. Select the Auto-increment file name to save numerous similar files without retyping the entire file name each time.
2. Enter a Base file name.
3. Click Save.

For the initial save the default count is 000, but you can overwrite this number if you choose. Your first file is saved as `[Base filename][count].ext`, where `ext` is the file extension. On subsequent saves, the instrument searches for the highest numbered file name and increases the number by one, as in `Base filename001.ext`.

For example, if you are saving a series of rise time data files, you can use "Risetime" as the base file name. Your first file is saved as `Risetime000.ext`, where `ext` is the file type extension. The next file will be `Risetime001.ext`, and so on.


***TIP.** If Count reaches 999, it is suggested that you change the base file name to Base filename1 (for example, Risetime1) on the next save. Your next file will then be saved as Risetime1000.ext. You will receive a warning message if you are going to overwrite any files with the same name.*

Open or Edit MyScope Dialog Box

From the MyScope menu, select Open Control Window.

To Use

1. In the Look in drop-down list, navigate to the file location or select a control window file from the dialog box.
2. Click Open.

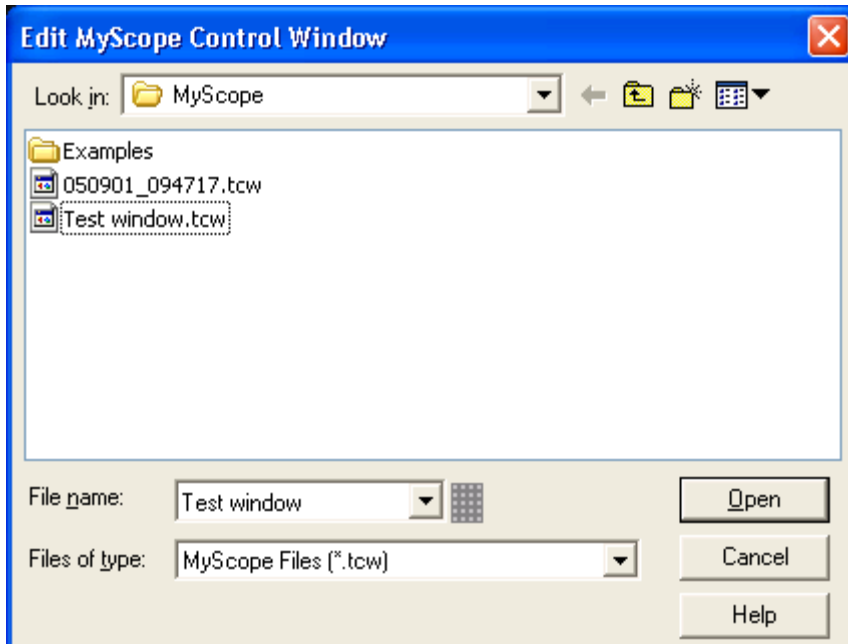

Behavior

This dialog box opens to the default directory C:\TekScope\MyScope. If you saved MyScope control window files in another directory, click the Look in drop-down list to go to that directory.

Clicking Open will open the selected MyScope control window, allowing you to add or delete controls.

NOTE. The only available file type is . tcw.

What do you want to do next?

- [Learn about the MyScope Setup and Edit control window. \(see page 283\)](#)
- [Learn about the Save MyScope File As dialog box. \(see page 286\)](#)

Trigger Setup Control Window (A Event Tab)


From the Trig menu, select A Event (Main) Trigger Setup.

NOTE. This online help documents features and options available for several instrument models. Your instrument may not have every feature discussed in this online help, depending on its configuration.

Overview

Use the Trigger Setup control window to set up the instrument to trigger on live waveforms.

For information on the controls, click the buttons.

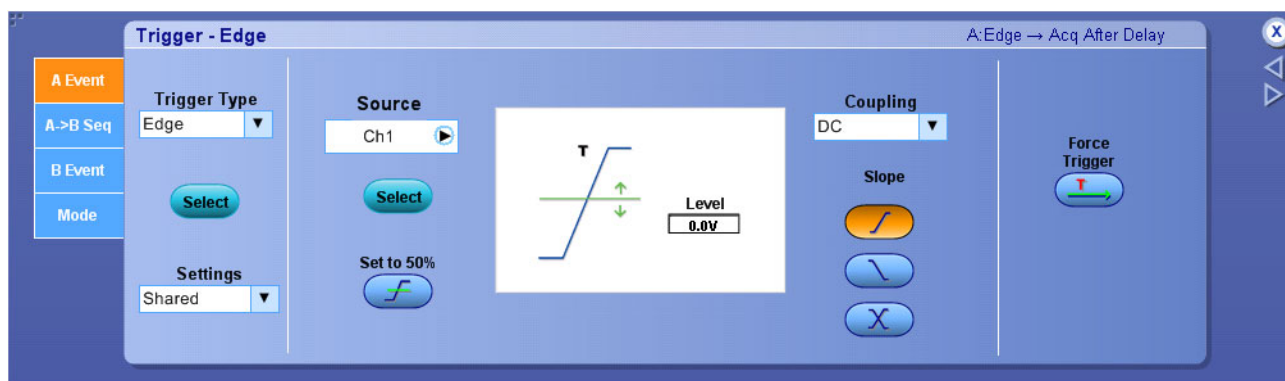

Behavior

This control window sets up the main trigger type, also known as the A Event trigger. When you click on the controls, the [trigger graphic \(see page 290\)](#) displays details on the trigger type.

The trigger expression near the top right side of the Trigger window provides a one-line summary of the conditions that must be fulfilled before the instrument will trigger.

The trigger event establishes the time-zero point in the waveform record. All points in the record are located in time with respect to the time-zero point. The instrument continuously acquires and retains sample points to fill the [pretrigger \(see page 43\)](#) portion of the waveform record. When a trigger event occurs, the instrument starts acquiring samples to build the [posttrigger \(see page 338\)](#) portion of the waveform record. Once a trigger is recognized, the instrument will not accept another trigger until the acquisition is complete and the holdoff time has passed.

NOTE. If you select an inverted channel waveform as a trigger source, the normal waveform is used instead.

What do you want to do next?

- [Learn about the main trigger types. \(see page 290\)](#)
- [Learn about sequential triggering. \(see page 754\)](#)
- [Learn about B Event triggers. \(see page 347\)](#)
- [Learn about Trigger Mode and Holdoff. \(see page 348\)](#)

Trigger Graphic

The trigger graphic displays a visual indicator of the trigger criteria. Depending on the trigger type, the instrument will update the graphic as you define the trigger parameters.

Event Trigger Type

From the Trig menu, select A Event Trigger Setup or B Event Trigger Setup.

To Use

In the Trigger Type drop-down list box, select a trigger type.

A Trigger type

Edge
Glitch
Width
Runt
Timeout
Pattern
State
Setup/Hold
Transition
Comm
Serial
Video
Window
Bus
CAN Bus
SPI
I2C
RS232
Edge

B Trigger type

Edge
Glitch
Width
Runt
Timeout
Pattern
State
Setup/Hold
Transition
Window

NOTE. This online help documents features and options available for several instrument models. Your instrument model may not have every trigger type listed above, depending on its configuration.

Behavior

The instrument provides the following trigger type categories.

- **Comm.** The [Communication triggers \(see page 308\)](#) are designed to work with communication masks and standards.

NOTE. *Comm trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Edge triggers.** This is the most commonly used trigger type. You can use [Edge triggers \(see page 310\)](#) with analog and digital signals. Edge triggers are available on both the Main and Delayed triggers.

- **Logic triggers.** These are special-purpose triggers that are primarily used with digital logic signals. Two of the classes, [Pattern \(see page 314\)](#) and [State \(see page 324\)](#), trigger the instrument based on the Boolean operator you select for the trigger sources. A third class, [Setup and Hold \(see page 320\)](#), triggers when data on one trigger source changes state within the setup and hold times that you specify relative to a clock on another trigger source. Logic triggers are only available on the main trigger.

NOTE. *Logic trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Pulse triggers.** These are special-purpose triggers that are primarily used with digital signals. The following classes of pulse triggers are available: [Glitch \(see page 311\)](#), [Runt \(see page 317\)](#), [Window \(see page 332\)](#), [Width \(see page 331\)](#), [Transition \(see page 327\)](#), and [Timeout \(see page 325\)](#). Pulse triggers are only available on the main trigger.

NOTE. *Pulse trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Serial.** Serial is a special trigger type used on signals with serial data patterns.

NOTE. *Serial trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Video.** Use [Video triggers \(see page 329\)](#) to trigger the instrument on specified fields or lines of a video signal. You can use one of several preset video signal formats or set a custom format.

NOTE. *Video trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Window.** Use the [Window trigger \(see page 332\)](#) to trigger the instrument when the input signal rises above an upper threshold or falls below a lower threshold level.

NOTE. *Window trigger on B Events is not available on MSO/DPO5000 Series instruments.*

NOTE. *Bus trigger on B Events is not available on MSO/DPO5000 Series instruments.*

- **Bus.** Use to trigger on parallel or serial bus signals.

NOTE. *The bus used to trigger on parallel or serial bus signals is available only on MSO70000/C and MSO5000 Series instruments and on DPO5000 Series instruments with option MSOE.*

- **CAN Bus.** Use to trigger on CAN Bus signals.
- **SPI.** Use to trigger on Serial Peripheral Interface signals.

- **I2C.** Use to trigger on Inter-IC signals: start, stop, repeated start, missing acknowledge, address, data, and address and data.
- **RS-232.** Use to trigger on RS-232 signals.

TIP. Use the Trig menu *Quick Select* submenu to directly access the Event triggers.

What do you want to do next?

 
- [Learn about sequential triggering. \(see page 754\)](#)
- [Learn about B Event triggers. \(see page 347\)](#)
- [Learn about Trigger Mode and Holdoff. \(see page 348\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Trigger Mode Control Window

From the Trig menu, select Mode.

Overview

Use the Trigger control window to set the trigger mode, to force a trigger, or to set the trigger level to 50%.

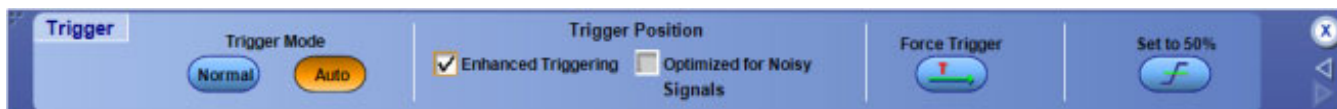

To Use

- Click [Normal \(see page 58\)](#) or [Auto \(see page 58\)](#) to set the Trigger Mode.
- Click Enhanced Triggering to more accurately place the trigger on the display.
- Click Optimized for Noisy Signals to more accurately place the trigger on a noisy signal (available only if Enhanced Triggering is enabled.)
- Click [Force Trigger \(see page 294\)](#) once to acquire a waveform record without a trigger event. Forcing a trigger is useful when the input signal does not contain a valid trigger. The instrument recognizes and acts upon the forced trigger even when you click the button before the end of the pretrigger holdoff. The button has no effect when acquisitions are stopped.
- Click [Set 50% \(see page 294\)](#) to set the trigger threshold level of the selected trigger channel to 50% of the amplitude of the channel.

Behavior

These controls operate identically to the controls on the front panel. For more information on the individual controls, click the related control in the adjacent graphic.

What do you want to do next?

- [Read information about Trigger Holdoff. \(see page 294\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Read information on the Run/Stop controls. \(see page 165\)](#)

Force Trigger

Click this button to force the instrument to trigger and complete the current acquisition, regardless of whether any other trigger event occurs.

NOTE. *This command has no effect if the acquisition system is not running.*

Push the front-panel Level knob. This control is also available in some trigger setup windows.

To Use

Click this button to have the instrument automatically search for and set the trigger level to a value halfway between the peaks of the trigger source signal.

NOTE. *Some trigger types support multiple trigger levels, whereas other trigger types are unsupported, and the front-panel control is inoperative. This control also works differently for certain Comm triggers.*

Trigger Holdoff Control Window

From the Trig menu, select Holdoff.

Overview

Use the Trigger Holdoff control Window to set the [trigger holdoff \(see page 295\)](#).



To Use

- Click Auto to set the holdoff to the default amount of time.
- Click the Time button; then click in the Trig Holdoff entry box and use a multipurpose knob to specify a holdoff time.
- Click Random to delay the trigger a random amount of time between triggers.

Behavior

When Holdoff is set to Auto, the holdoff time is based on the time equal to five times the current horizontal scale setting. You may want to manually set the holdoff time to help stabilize the display of complex waveforms, such as digital pulse trains that may have several possible trigger points.

The Level control can be either the main trigger level when there is no B Trigger event, or the A Event trigger level when a B Event trigger is defined. To change the B Event trigger level, change the B Trig Level control under the B Event tab of the Trigger Setup control window.

What do you want to do next?

- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Read information on Trigger modes. \(see page 293\)](#)

Trigger Holdoff

After a trigger event, the instrument will not accept another trigger event until after the holdoff value is exceeded. Holdoff is usually specified in units of time, but other units may be used.

Set to 50%

Push the front-panel Level knob. This control is also available in some trigger setup windows.

To Use

Click this button to have the instrument automatically search for and set the trigger level to a value halfway between the peaks of the trigger source signal.

NOTE. *Some trigger types support multiple trigger levels, whereas other trigger types are unsupported, and the front-panel control is inoperative. This control also works differently for certain Comm triggers.*

Bus Trigger Control Window for Parallel

NOTE. The Bus Trigger Control window for Parallel option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Trigger menu, select the Bus setup.

Overview

Use the controls to define the trigger for a Parallel bus.

To Use

For information on the controls, click the buttons.

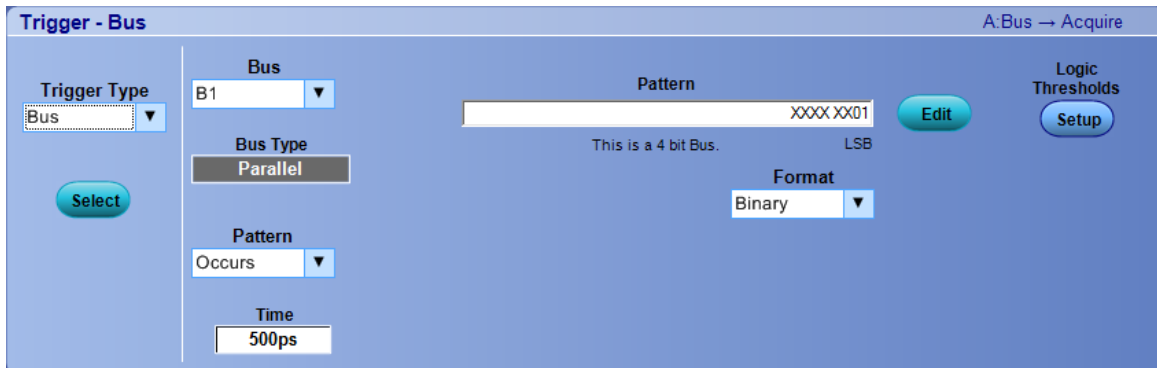

To Use

- Click the Trigger Type box and select Bus from the drop-down list.
- Click the Bus box and select the bus number or name from the drop-down list. The Bus Type shows Parallel.
- Click the Logic Thresholds Setup button to set the voltage threshold levels for the channels in the bus.
- Click the Pattern box and select the condition.
- Double-click the Time entry box and use the keypad or the multipurpose knob to enter a time.
- When All is selected in the Bus box, click the Trigger if Logic State Goes True or False and select True or False.
- Click the Edit button to define a numeric or symbolic value of the Pattern.
- Click the Format box and select a Binary, ASCII, Decimal, Hex, or Symbolic display format.

What do you want to do next?

- [Learn how to define a pattern for a bus. \(see page 793\)](#)
- [Learn how to set the voltage threshold reference level for logic waveforms and to define a pattern. \(see page 799\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about digital setups. \(see page 81\)](#)

Bus Trigger Control Window for I2C Serial

NOTE. The Bus Trigger Control Window for I2C Serial option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Trigger menu, select the Bus setup.

Overview

Use the controls to set up the I2C Bus parameters.

To Use

For information on the controls, click the buttons.

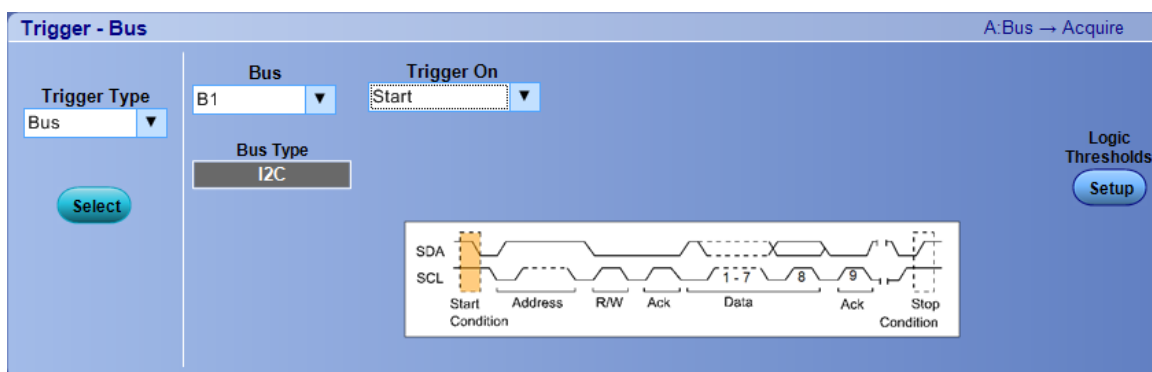


To Use

- Click the Trigger Type box and select Bus from the drop-down list.
- Click the Bus box and select the bus number or name from the drop-down list.


NOTE. You have the option to add user-defined label for bus sources.

- Click the Logic Thresholds Setup button to set the voltage threshold levels for the channels in the bus.
- Select the type of bus cycle or activity to use as the trigger from the Trigger On drop-down list.
- For some Trigger On selections, you need to set additional fields to define other parameters such as for an Address.

In the following example, you need to set an Address Format, Address Value (click the [Edit \(see page 792\)](#) button), Data Direction, and Addressing Mode. Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.

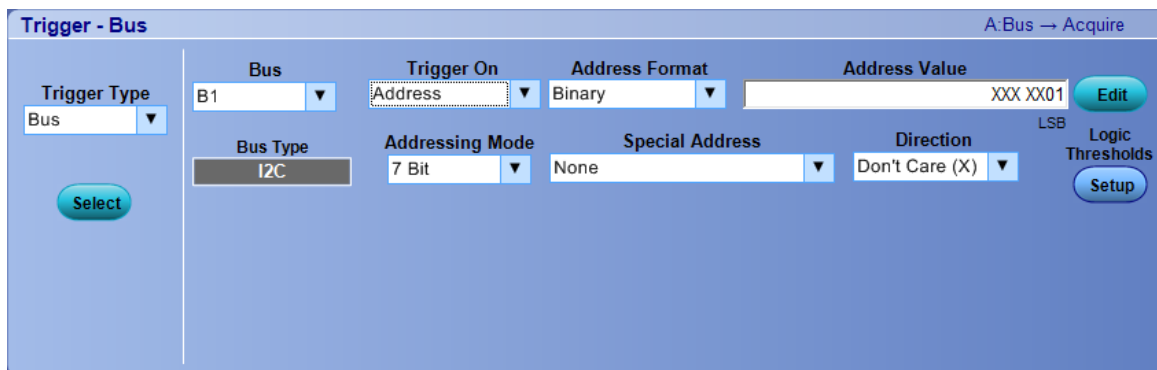

In the following example on MSO/DPO5000 Series instruments, you need to set an Address Format, Address Value (click the [Edit \(see page 793\)](#) button), Addressing Mode, Special Address, Direction, Number of Bytes, Data Format, Data Value ([Edit \(see page 793\)](#)) for the Addr+Data Trigger On type. Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.

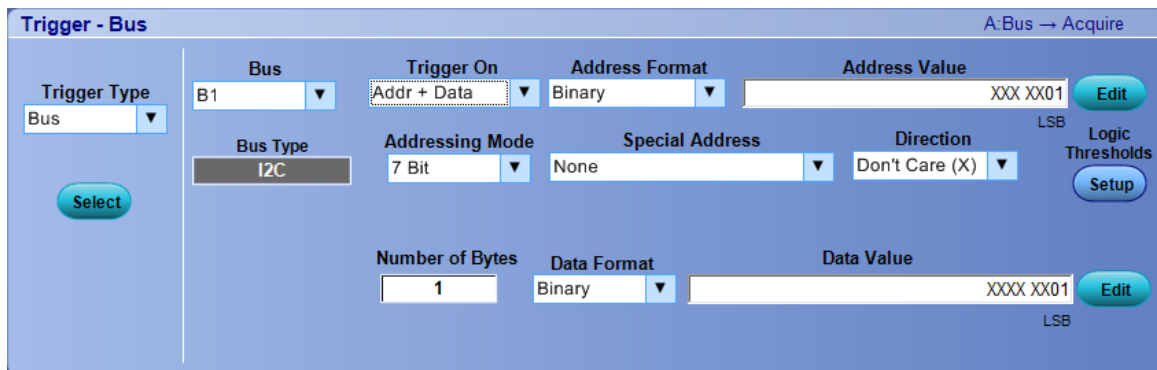

In DPO7000 and MSO70000/C Series instruments, when you trigger on an Address for I2C serial bus, there are some predefined patterns termed as Special Addresses. Use this information to debug your serial bus. The following table lists the predefined patterns along with their names.

Name	Address
General Call	0000 000 0
START Byte	0000 000 1

Name	Address
HS-mode	0000 1XX X
EEPROM	1010 XXX X
CBUS	0000 001 X

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)

Bus Trigger Control Window for SPI Serial

NOTE. The Bus Trigger Control Window for SPI Serial option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Trigger menu, select the Bus setup.

Overview

Use the controls to set up the SPI Bus parameters.

To Use

For information on the controls, click the buttons.

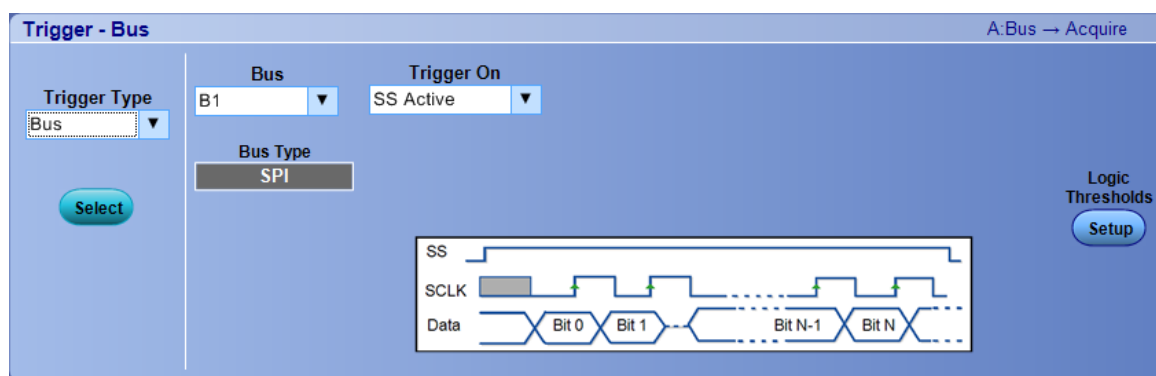

To Use


- Click the Trigger Type box and select Bus from the drop-down list.
- Click the Bus box and select the bus number or name from the drop-down list.

NOTE. You have the option to add user-defined label for bus sources.

- Click the Logic Thresholds Setup button to set the voltage threshold levels for the channels in the bus.
- Select the type of cycle to use as the trigger from the Trigger On drop-down list.
- For the MISO + MOSI Trigger On selection, push the Edit button to set additional fields for the Data Value, and then set the Format to match. Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.

For some Trigger On selections, you need to set additional fields to define other parameters such as for a Data.

In the following example, you need to set the Number of Words, Format, and Data Value (click the [Edit](#) (see page 792) button). Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.

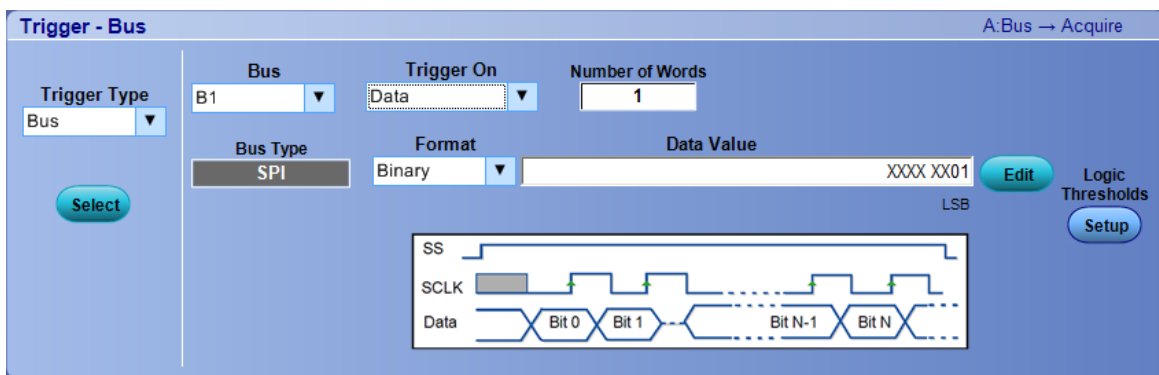

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)

Bus Trigger Control Window for RS-232 Serial

NOTE. The Bus Trigger Control Window for RS-232 Serial option is available only on MSO5000 Series instruments and on DPO5000 Series instruments with option MSOE.


From the Trigger menu, select Bus setup.

Overview

Use the controls to set up the RS-232 Bus parameters.

To Use

For information on the controls, click the buttons.

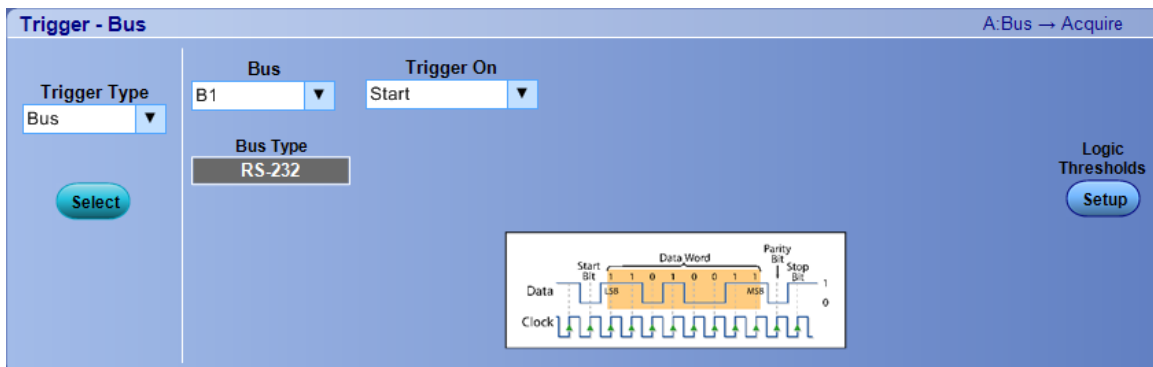


To Use

- Click the Trigger Type box and select Bus from the drop-down list.
- Click the Bus box and select the bus number or name from the drop-down list.

NOTE. You have the option to add user-defined label for bus sources.

- Click the Logic Thresholds Setup button to set the voltage threshold levels for the channels in the bus.
- Select the type of bus cycle or activity to use as the trigger from the Trigger On drop-down list.
- For some Trigger On selections, you must set additional fields to define other parameters such as for a Data.

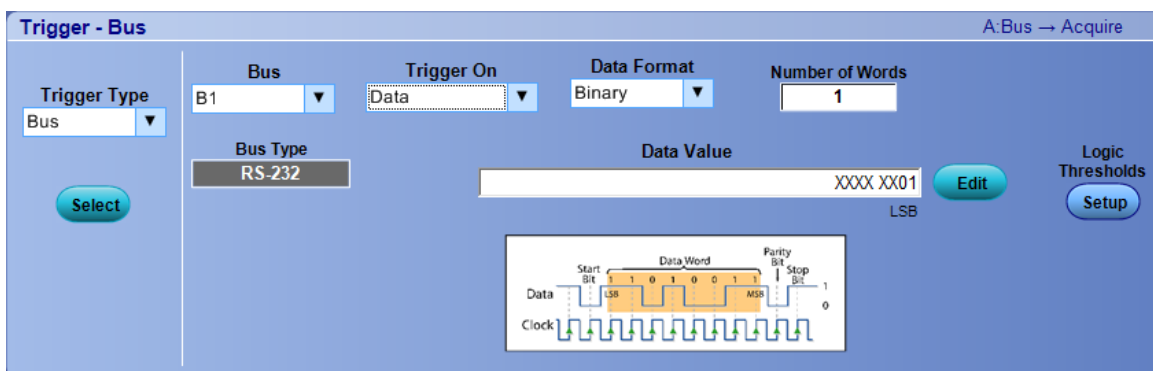

In this example, you need to set the Data Format (click the drop-down list), Number of Bytes, and Data Value (click the [Edit \(see page 793\)](#) button).

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)

Bus Trigger Control Window for USB Serial

NOTE. The Bus Trigger Control Window for USB Serial option is available only on MSO5000 Series instruments and on DPO5000 Series instruments with option MSOE.

From the Trigger menu, select Bus setup.

Overview

Use the controls to set up the USB Bus parameters.

To Use

For information on the controls, click the buttons.




To Use

- Click the Trigger Type box and select Bus from the drop-down list.
- Click the Bus box and select the bus number or name from the drop-down list.

NOTE. You have the option to add user-defined label for bus sources.

- Click the Logic Thresholds Setup button to set the voltage threshold levels for the channels in the bus.
- Select the type of bus cycle or activity to use as the trigger from the Trigger On drop-down list.
- For some Trigger On selections, you must set additional fields to define other parameters such as for a Data Packet.


In this example, you need to set a Data Packet Type, Trigger when data packet is, Data Format, Number of Bytes, Byte Offset, and Data Value (click the [Edit \(see page 793\)](#) button). Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.

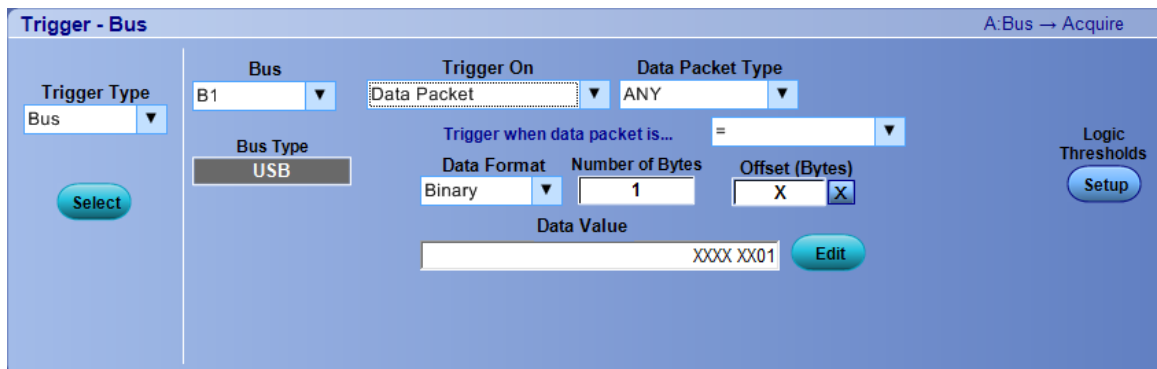

Click the Trigger On selections [Token \(Address\) Packet \(see page 303\)](#), [Handshake Packet \(see page 304\)](#), [Special Packet \(see page 305\)](#), or [Error \(see page 306\)](#) to view their parameters.

What do you want to do next?

- [Learn about bus setups. \(see page 89\)](#)

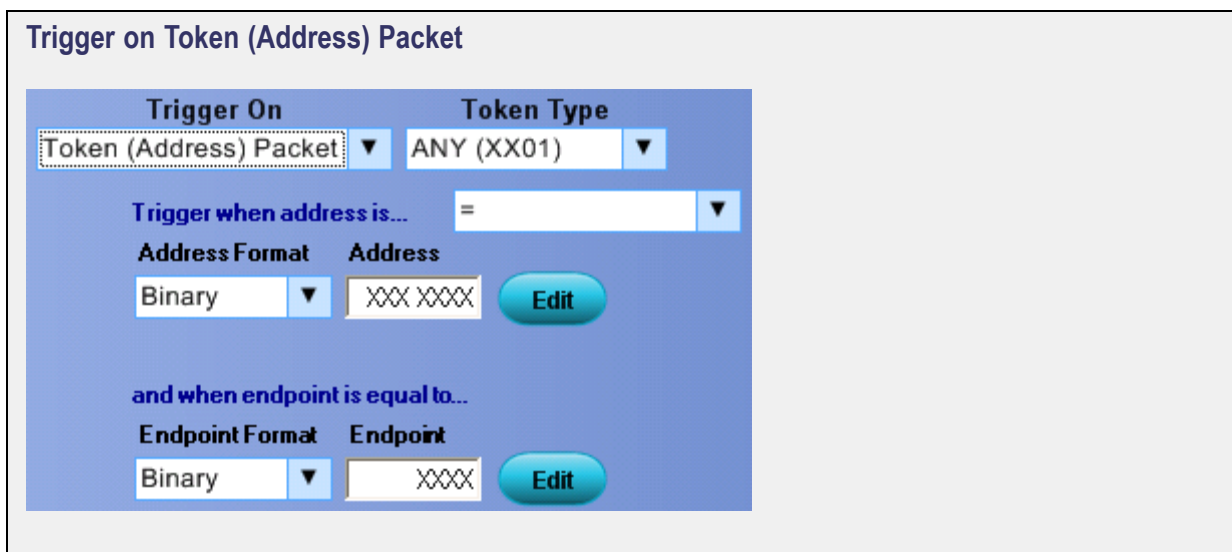

Trigger on Handshake Packet

The handshake type options available in Trigger on Handshake Packet are as follows:

Trigger On	Handshake Type
Handshake Packet ▼	ANY (XX10) ▼
	ACK (0010)
	NAK (1010)
	STALL (1110)

Trigger on Special Packet

The special type options available in Trigger on Special Packet are as follows:

Trigger On	Special Type
Special Packet ▼	ANY (XX00) ▼
	ERR (1100)
	SPLIT (1000)
	PING (0100)
	Reserved (0000)

In the USB bus setup window, set the Speed to High (480 Mbps).

In the Trigger setup window, set the Trigger On condition to Special Packet. Here you have the option to trigger on ANY, specifically on ERR (high only), SPLIT (high only), PING (high only) or Reserved special types.

The Trigger on SPLIT token field allows you set the Hub Format and Address, Port Format and Address, [Start/Complete \(see page 306\)](#), [Start and End bits \(see page 306\)](#), and [Endpoint Type \(see page 307\)](#).

The following fields are AND'd together to form a complete trigger definition

Hub Format Binary ▼	Hub Address XXX XXXX Edit	Start/Complete Don't Care (X) ▼
Port Format Binary ▼	Port Address XXX XXXX Edit	
Start and End bits Don't Care (X) ▼		Endpoint Type Don't Care (X) ▼

Trigger on Error

The error type options available in Trigger on Error are as follows:

Trigger On	Error Type
Error ▼	PID Check Bits ▼
	Token CRC5
	Data CRC16
	Bit Stuffing

NOTE. The Bit Stuffing error type option is not available on high speed bus.

Start/Complete

The options available in Start/Complete are as follows:

Start/Complete
Don't Care (X) ▼
Don't Care (X)
Start (SSPLIT) (0)
Complete (CSPLIT) (1)

Start and End bits

The options available in Start and End bits are as follows:

Don't Care (X)
Control/Bulk/Interrupt Full Speed Device (0X)
Control/Bulk/Interrupt Low Speed Device (1X)
Isochronous Data is Middle (00)
Isochronous Data is End (01)
Isochronous Data is Start (10)
Isochronous Data is All (11)
Don't Care (X) ▼

Endpoint Type

The options available in Endpoint Type are as follows:

Don't Care (X)	
Control (00)	
Isochronous (01)	
Bulk (10)	
Interrupt (11)	
Don't Care (X)	▼

CAN Bus Trigger Control Window

NOTE. *The CAN Bus Trigger type is not available on DPO/MSO5000 Series instruments.*

From the Trig menu, select CAN Setup.

NOTE. *You must install Protocol Trigger and Decode Option (Opt PTH) on some instruments before you can access the CAN triggers.*


Overview

Use the controls in this window to set up the parameters to trigger on a CAN bus.

NOTE. *The CAN bus trigger is only available on analog channels.*

To Use

For information on the controls, click the buttons.

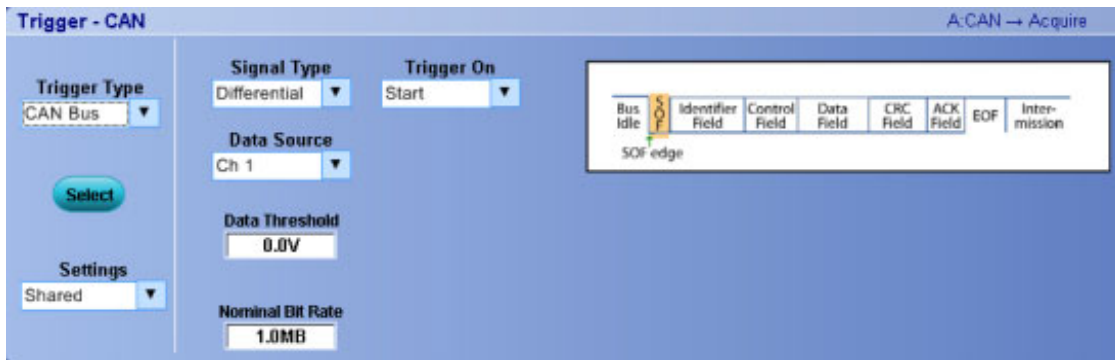

Behavior

Use this trigger to analyze CAN_H or CAN_L bus data frames with single-ended probes, or use a differential probe to read both signals simultaneously.

NOTE. For low-speed Serial triggering on data streams, the instrument implicitly pads the MSB side of the entered value, up to the next byte, with "don't care" values (X). To trigger on a two-byte message, you must enter don't care values explicitly up to the desired size.

For example, a binary entered value of 01 is equivalent to XXXX XX01, whereas a two-byte message would be entered as XXXX XXXX XXXX XX01.

Comm Trigger Control Window

From the Trig menu, select Comm Setup.

NOTE. The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.


Overview

Use the controls in this window to select the trigger source, coding format, and standard for communications testing.

NOTE. The Comm trigger is only available on analog channels.

To Use

For information on the controls, click the buttons.

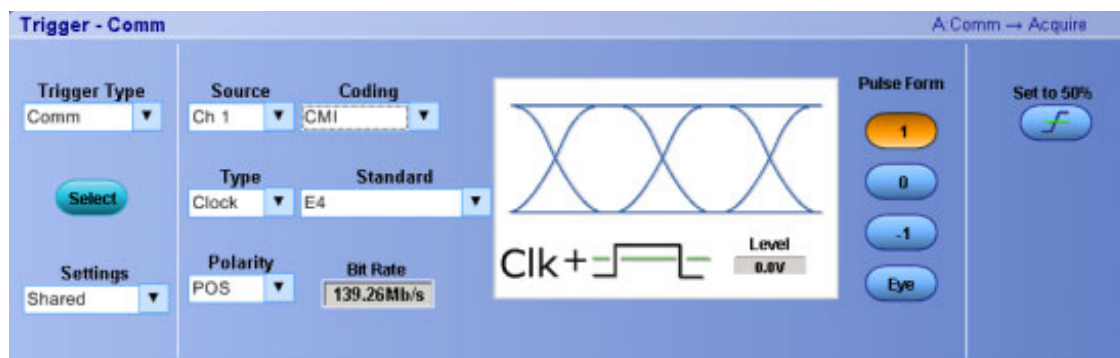

Depending on which coding format you use, you can also change the Upper, Lower, and Clock level thresholds and the pulse form using the multipurpose knobs.

Behavior

Use the Comm Trigger control window to trigger the instrument in conjunction with mask testing on communications codes and standards. The controls work together to define the parameters for the trigger event. The standards that appear in the Standard drop-down list depend on the coding format that you selected. The coding format also determines whether upper, lower, single, or clock threshold levels or pulse forms are used. The standard determines the bit rate. When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Learn about Set to 50% with Comm triggers. \(see page 760\)](#)

Edge Trigger Control Window

From the Trig menu, select Edge Setup.

Overview

Use the controls in this window to set up Edge trigger parameters for general-purpose testing.

To Use


For information on the controls, click the buttons.

NOTE. The Trigger Edge screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000 and MSO70000/C Series instrument except for the source selection .

In a DPO/DSA Series instrument, the source selection is a drop-down list.

In MSO/DPO5000 and MSO70000/C Series the source selection includes a combo list and a Select button.

The following Trigger Edge screen appears on MSO70000/C Series instruments:

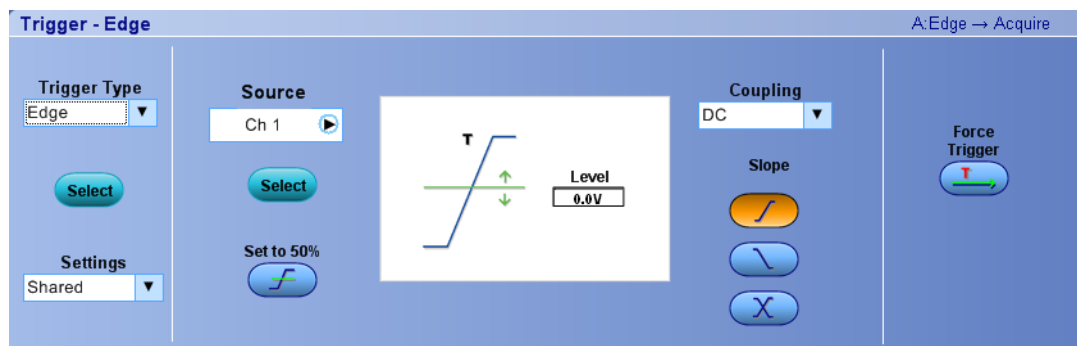

Behavior

Edge triggering is the most common way to trigger an instrument. The trigger occurs when the trigger source passes through a specific level on the specified slope (rising or falling).

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Glitch Trigger Control Window

From the Trig menu, select Glitch Setup.

Overview

Use the controls in this window to set up the Glitch trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. The Trigger Glitch screen on a DPO/DSA Series instrument is same as that on an MSO/DPO5000 and MSO70000/C Series instrument except for the source selection and Trigger if Glitch Qualification options.


In a DPO/DSA70000 Series instrument, the source selection is a drop-down list and the Trigger if Glitch Qualification option has Occurs and Logic.

In MSO70000/C Series the source selection includes a combo list and a Select button. The Trigger if Glitch Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Glitch screen appears on MSO/DSA/DPO70000/C Series instruments:

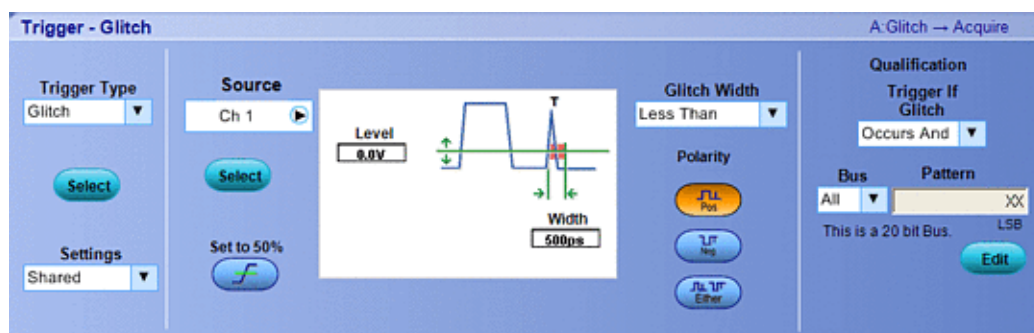

The following Trigger Glitch screen appears on MSO/DPO5000 Series instruments:

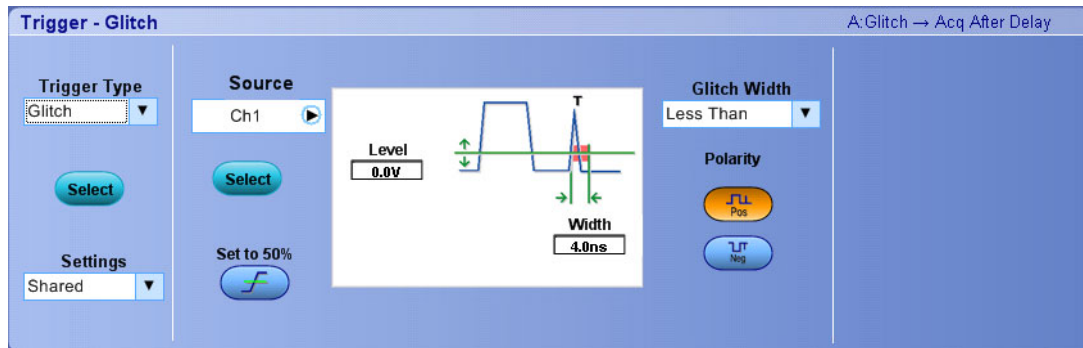

Behavior

Use the Glitch trigger to detect and trigger on a glitch or to ignore a glitch. Glitches are defined as pulses that are narrower than a specified time. The trigger occurs when the instrument detects a pulse outside (either less than or greater than) the parameters that you specify.

The trigger can also be qualified by the logical state of other channels or by a bus pattern (MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

I2C Bus Trigger Control Window

NOTE. The I2C Bus Trigger type is not available on DPO5000 and MSO5000 Series instruments.

From the Trig menu, select I2C Setup.


NOTE. This online help documents features and options available for several instrument models. Your instrument may not have every feature discussed in this online help, depending on its configuration.

Overview

Use the controls in this window to set up the I2C trigger parameters.

To Use

For information on the controls, click the buttons.

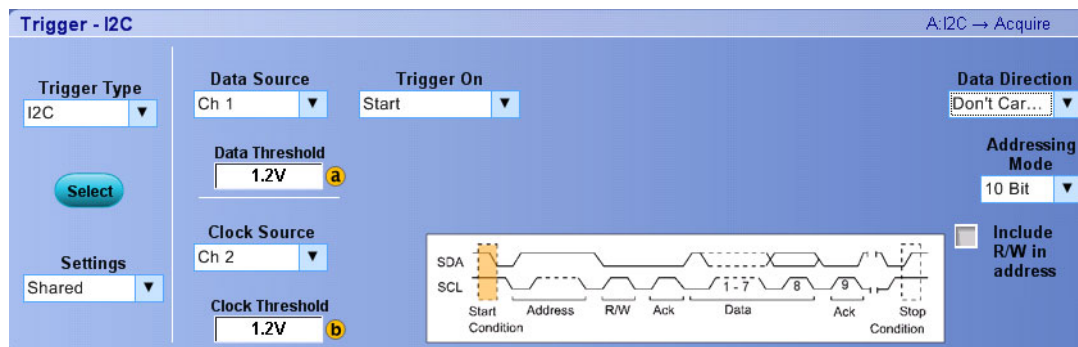

Behavior

Use this trigger to analyze Inter-IC Control Bus data frames.

NOTE. For low-speed serial triggering on data streams, the instrument implicitly pads the MSB side of the entered value, up to the next byte, with "don't care" values (X). To trigger on a two-byte message, you must enter don't care values explicitly up to the desired size.

For example, a binary entered value of 01 is equivalent to XXXX XX01, whereas a two-byte message would be entered as XXXX XXXX XXXX XX01.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

Logic Pattern Trigger Control Window (MSO/DPO5000 and MSO70000/C Series)

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.


From the Trig menu, select Logic Pattern. It includes the D15-D0 digital channels in the trigger setup.

Overview

Use the controls in this window to set up the Logic Pattern trigger parameters.

To Use

For information on the controls, click the buttons.

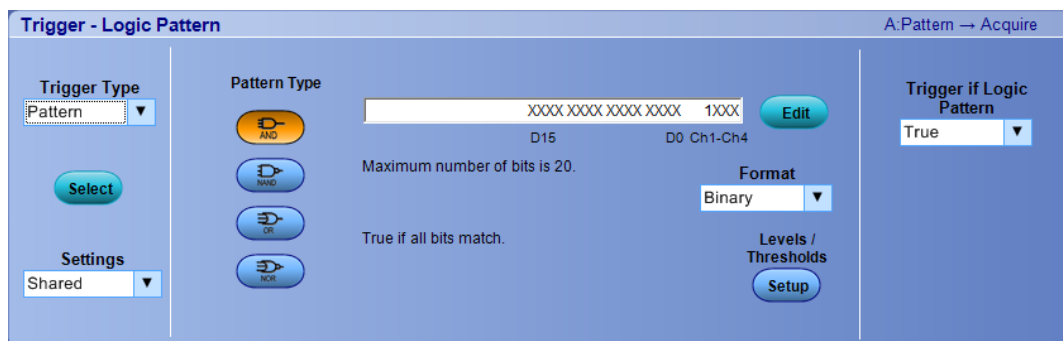

Behavior

Use the Logic Pattern trigger to trigger the instrument when the logic inputs cause the selected function to become True or False. You can also time qualify the trigger to specify that the logic conditions must be satisfied for a specific amount of time before the instrument triggers.

The Pattern Type buttons set the Boolean logic function for the trigger.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Logic Pattern Trigger Control Window


From the Trig menu, select Logic Pattern.

Overview

Use the controls in this window to set up the Logic Pattern trigger parameters.

To Use

For information on the controls, click the buttons.

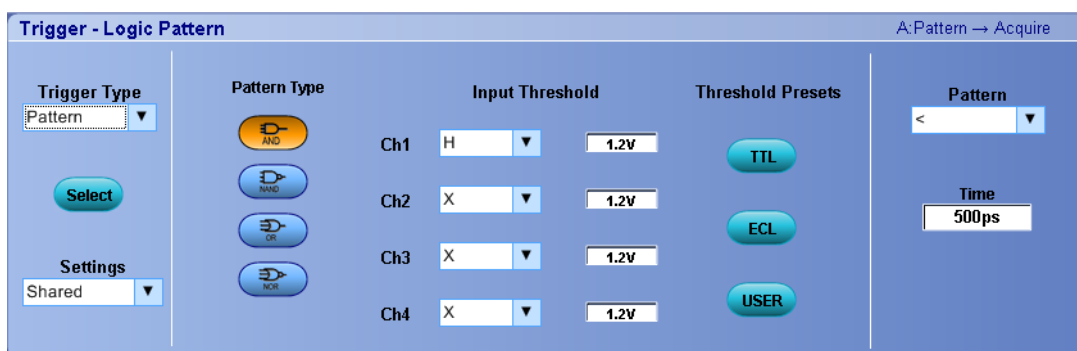

Behavior

Use the Pattern trigger to trigger the instrument when the logic inputs cause the selected function to become True or False. You can also time qualify the trigger to specify that the logic conditions must be satisfied for a specific amount of time before the instrument triggers.

The instrument input channels represent the data inputs. You can set each channel to be logic high, logic low, or "don't care". Use the multipurpose knobs to change the threshold voltages for logic levels other than TTL.

The Pattern Type buttons set the Boolean logic function for the trigger.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

RS-232 Trigger Control Window

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

From the Trig menu, select RS-232 Setup.


Overview

Use the controls in this window to set up the RS-232 trigger parameters.

NOTE. The RS-232 trigger is only available on analog channels.

To Use

For information on the controls, click the buttons.

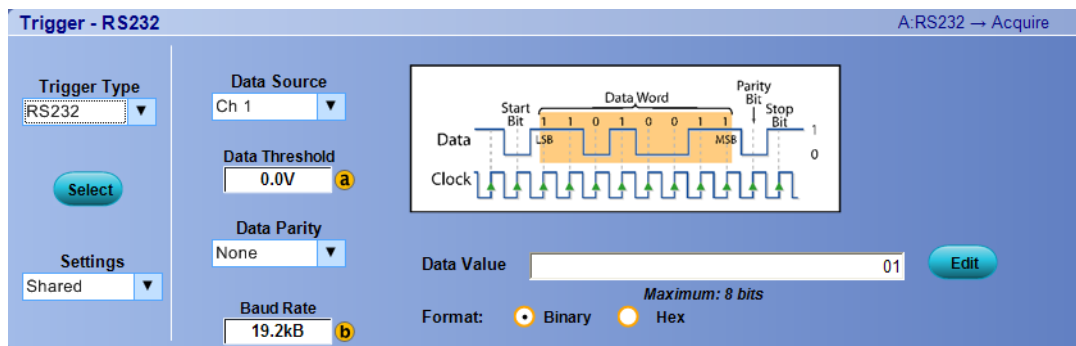

Behavior

Use this trigger to analyze RS-232 communications data. For this feature the oscilloscope acts as an RS-232 receiver, allowing it to trigger on low-speed serial data. All data is assumed to be 8 bits. You can specify the parity and baud rate to trigger on. Start and stop bits are automatically recognized. Since RS-232 data is transmitted in reverse order (LSB to MSB with polarity inverted) the data you see on the oscilloscope screen may appear backwards.

NOTE. For low-speed serial triggering on data streams, the instrument implicitly pads the MSB side of the entered value, up to the next byte, with "don't care" values (X). To trigger on a two-byte message, you must enter don't care values explicitly up to the desired size.

For example, a binary entered value of 01 is equivalent to XXXX XX01, whereas a two-byte message would be entered as XXXX XXXX XXXX XX01.

Runt Trigger Control Window

From the Trig menu, select Runt Setup.

Overview

Use the controls in this window to set up the Runt trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. *The Trigger Runt screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000, and MSO70000/C Series instrument except for the source selection and Trigger if Runt Qualification options.*


In some instruments, the source selection is a drop-down list and the Trigger if Runt Qualification option has Occurs and Logic.

In other instruments the source selection includes a combo list and a Select button. The Trigger if Runt Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Runt screen appears on MSO70000/C Series instruments:

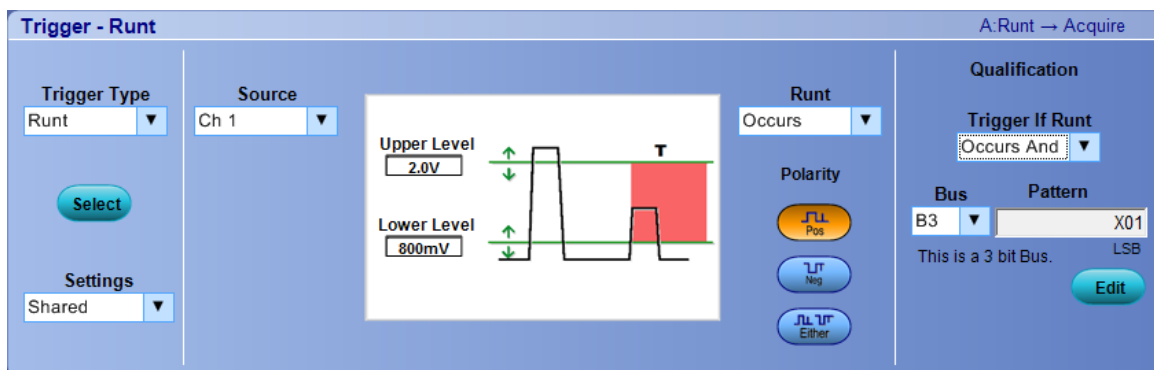

The following Trigger Runt screen appears on MSO/DPO5000 Series instruments:

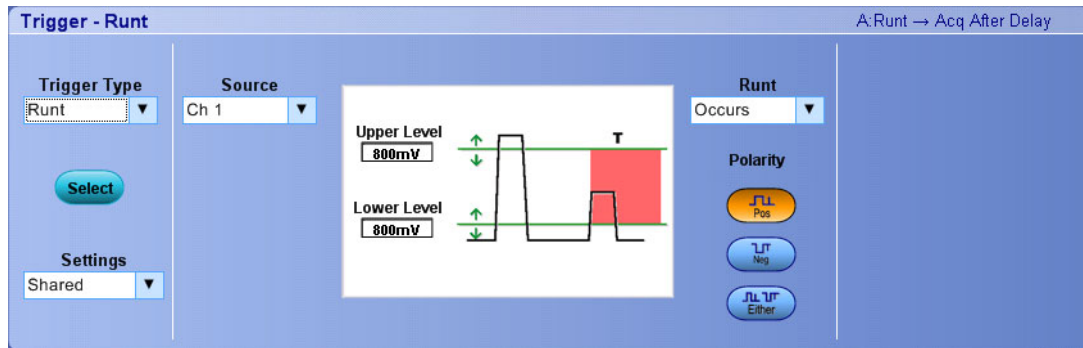

NOTE. Logic qualification option is not available on DPO5000 and MSO5000 Series instruments.

Behavior

Use the Upper Level and Lower Level threshold controls to set the voltage ranges that define a valid pulse.

Runt pulses are short pulses that cross one threshold but fail to cross a second threshold before crossing the first threshold again. The pulse widths are measured at the voltage level specified by the level controls. These pulses can also be qualified by time, by the logical state of other channels, or by a bus pattern (MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Serial Pattern Control Window

NOTE. *The Serial Pattern Trigger type is not available on DPO5000 and MSO5000 Series instruments.*

From the Trig menu, select Serial Pattern Setup.


NOTE. *You must install Protocol Trigger and Decode Option (Opt PTH) on some instruments before you can access the Serial Pattern triggers.*

Overview

Use the controls in this window to set up the Serial Pattern trigger parameters. The coding you select will determine what standards are available. The clock source determines whether clock level and clock polarity are available to set.

To Use

For information on the controls, click the buttons.

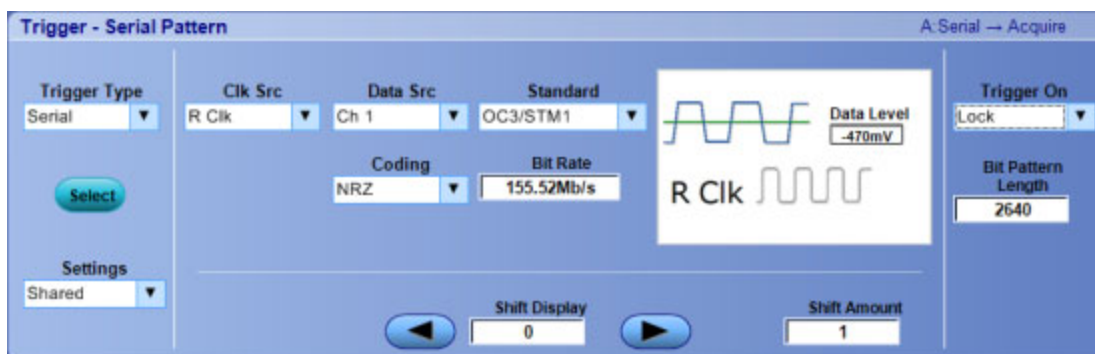

Behavior

You can use this trigger to analyze NRZ patterns found in serial bit streams. Functionality includes triggering on up to 64 bits and recovery on clock data up to 3.125 GB/s, for ≥ 4 GHz models.

If you select the same clock and data source, or if the clock source is R Clk, only one level is available for the data source.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

Setup and Hold Trigger Control Window

From the Trig menu, select Setup/Hold Setup.

Overview

Use the controls in this window to set up the Setup and Hold violation trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. The Trigger Setup/Hold screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000 and MSO70000/C Series instrument except for the source selection and Trigger if Setup/Hold Qualification options.


In some instruments, the source selection is a drop-down list and the Trigger if Setup/Hold Qualification option has Occurs and Logic.

In other instruments the source selection includes a combo list and a Select button. The Trigger if Setup/Hold Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Setup/Hold screen appears on MSO70000/C Series instruments:

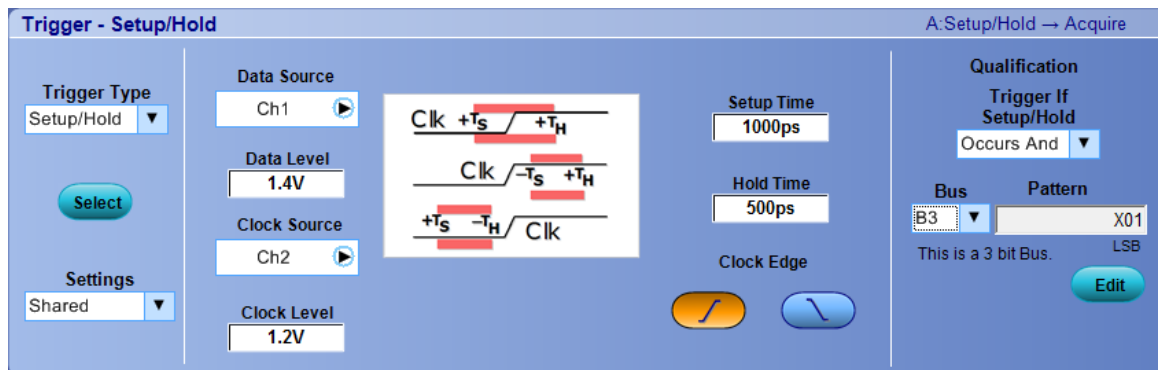

The following Trigger Setup/Hold screen appears on MSO/DPO5000 Series instruments:

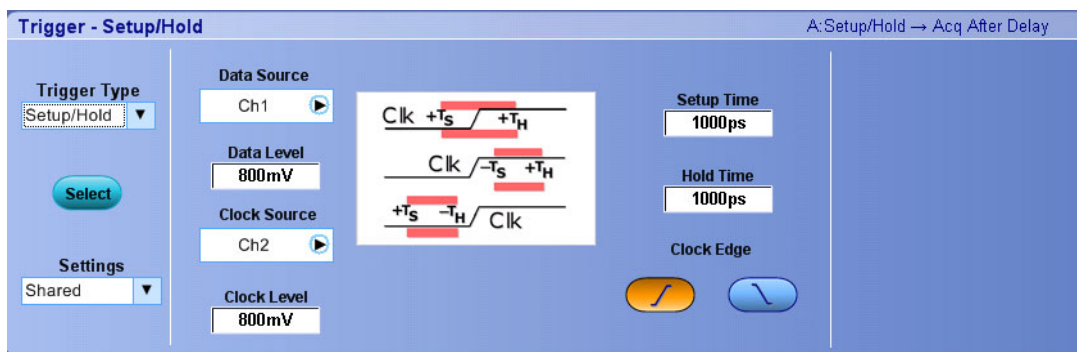

NOTE. The Logic qualification option is not available on DPO5000 and MSO5000 Series instruments.

Behavior

Use the Setup and Hold violation trigger to trigger on setup and hold time violations. When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

The setup and hold times define a violation region relative to a clock. Data is considered to be invalid in the violation region. The instrument monitors the data and clock sources. When a clock edge occurs, the instrument checks the data channel for transitions within the violation region. If any violations occur, the instrument triggers with the trigger point located at the clock edge. The setup and hold values can be positive or negative. The trigger can also be qualified by the logical state of other channels or by a bus pattern (MSO70000/C Series only).

The minimum setup and hold time is 2 ns. Negative setup and hold times skew the violation region to locate it before or after the clock edge. The instrument can detect and trigger on violations of time ranges that are before or after the clock.

Use one of the channel inputs as the clock signal and a second channel input as the data input. The clocking and data levels are used to determine if a clock or data transition has occurred.

NOTE. You have the option to add user-defined labels for analog, reference, bus, and digital sources.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

SPI Bus Trigger Control Window

NOTE. The SPI Bus Trigger type is not available on DPO5000 and MSO5000 Series instruments.

From the Trig menu, select SPI Setup.


NOTE. This online help documents features and options available for several instrument models. Your instrument may not have every feature discussed in this online help, depending on its configuration.

Overview

Use the controls in this window to set up the SPI trigger parameters.

To Use

For information on the controls, click the buttons.

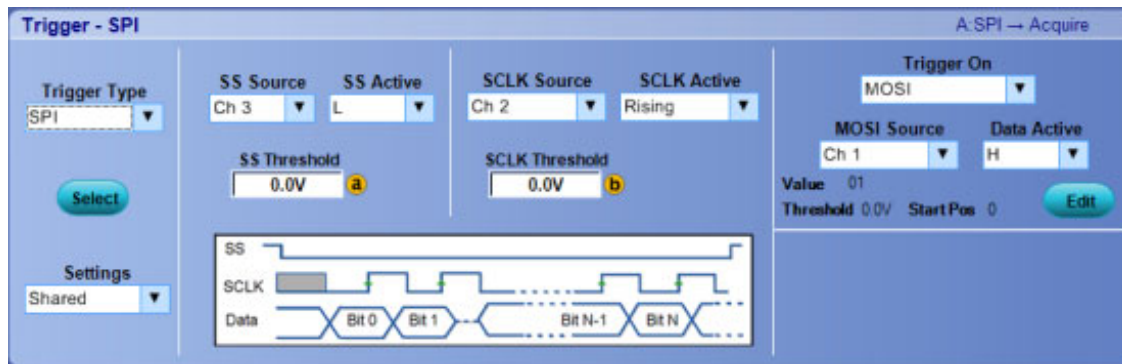

Behavior

Use this trigger to analyze Serial Peripheral Interface Bus data.

You must supply the following inputs to analyze standard configuration SPI frames:

- Slave Select (SS) Source control line
- Serial Clock (SCLK) Source
- Serial Data In (MISO) Source or Serial Data Out (MOSI) Source

The SS, SCLK, and Data Active controls allow compensation for inverted signals or synchronization on the falling edge of the clock, if applicable.

NOTE. For low-speed serial triggering on data streams, the instrument implicitly pads the MSB side of the entered value, up to the next byte, with "don't care" values (X). To trigger on a two-byte message, you must enter don't care values explicitly up to the desired size.

For example, a binary entered value of 01 is equivalent to XXXX XX01, whereas a two-byte message would be entered as XXXX XXXX XXXX XX01.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

Logic State Trigger Control Window (MSO/DPO5000 and MSO70000/C Series)

NOTE. The Logic State Trigger Control Window option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.


From the Trig menu, select Logic State Setup.

Overview

The trigger setup includes the D15-D0 digital channels. Use the controls in this window to set up the Logic State trigger parameters.

To Use

For information on the controls, click the buttons.

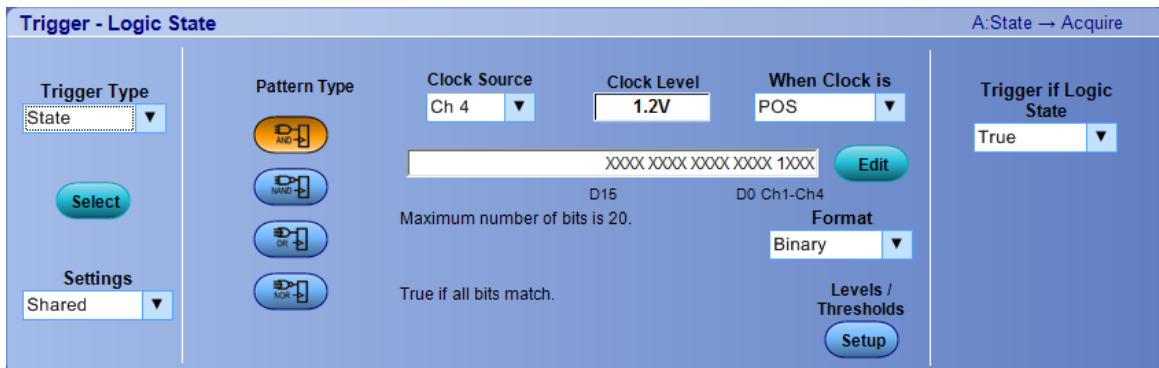

Behavior

Use the Logic State trigger to trigger the instrument when all of the logic inputs to the selected logic function cause the function to be True or False when the clock input changes state.

The Pattern Type buttons set the Boolean logic function for the trigger.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Logic State Trigger Control Window


From the Trig menu, select Logic State Setup.

Overview

Use the controls in this window to set up the Logic State trigger parameters.

To Use

For information on the controls, click the buttons.

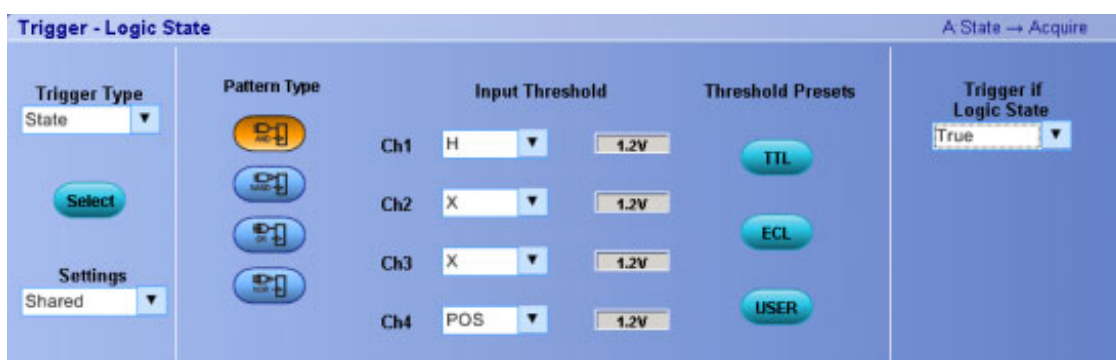

Behavior

Use the Logic State trigger to trigger the instrument when all of the logic inputs to the selected logic function cause the function to be True or False when the clock input changes state.

Channels 1, 2, and 3 represent the data inputs, and channel 4 represents the clock input. (The clock input is channel 2 on 2-channel models.) You can set each data channel to be logic high, logic low, or a "don't care" value. You can set the channel 4 input to a rising or falling clock edge (or channel 2 on 2-channel models). Use the multipurpose knobs to change the threshold voltages for logic levels other than TTL.

The Pattern Type buttons set the Boolean logic function for the trigger.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Timeout Trigger Control Window

From the Trig menu, select Timeout Setup.

Overview

Use the controls in this window to set up the Timeout trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. The Trigger Timeout screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000 and MSO70000/C Series instrument except for the source selection and Trigger if Timeout Qualification options.


In some instruments, the source selection is a drop-down list and the Trigger if Timeout Qualification option has Occurs and Logic.

In other instruments the source selection includes a combo list and a Select button. The Trigger if Timeout Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Timeout screen appears on MSO70000/C Series instrument:

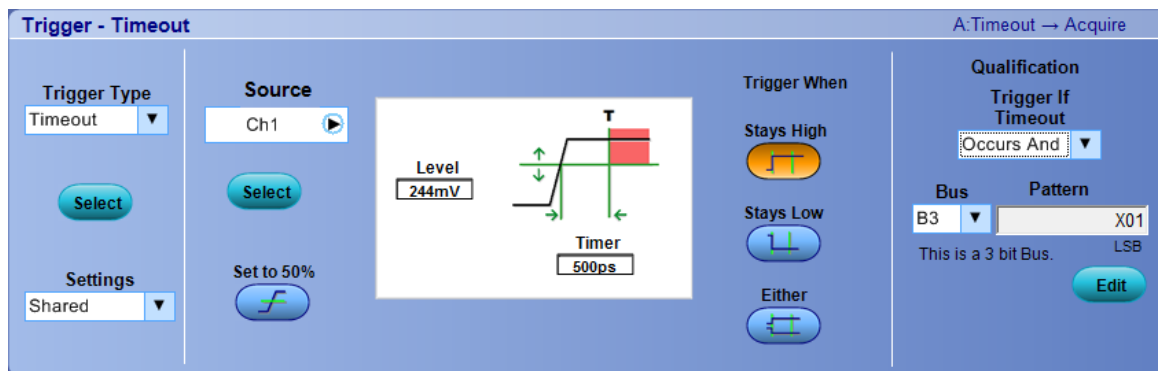

The following Trigger Timeout screen appears on MSO/DPO5000 Series instruments:

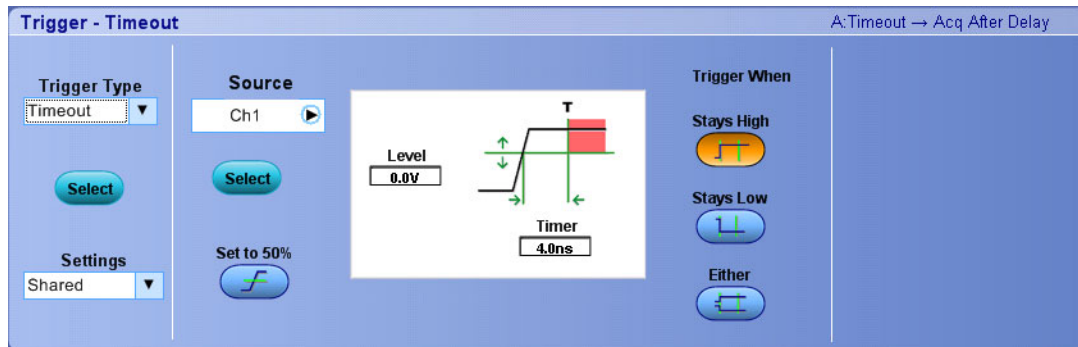

NOTE. The Logic qualification is not available on DPO5000 and .MSO5000 Series instruments.

Behavior

Use the Timeout trigger to trigger the instrument on pulses longer than the specified time. The instrument will trigger at the end of the time-out period. The instrument can trigger on high, low, or both high and low pulses. The trigger can also be qualified by the logical state of other channels or by a bus pattern (MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.



Use the Timer control to specify the time-out limit; any pulses wider than the limit will trigger the instrument. The time-out limit is measured at the voltage level specified by the Level control.

NOTE. *You have the option to add user-defined labels for analog, reference, bus, and digital sources.*

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Transition Time Trigger Control Window

From the Trig menu, select Transition Setup.

Overview

Use the controls in this window to set up the Transition time trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. The Trigger Transition screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000 and MSO70000/C Series instrument except for the source selection and Trigger if Transition Qualification options.


In some instruments, the source selection is a drop-down list and the Trigger if Transition Qualification option has Occurs and Logic.

In other instruments the source selection includes a combo list and a Select button. The Trigger if Transition Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Transition screen appears on MSO70000/C Series instrument:

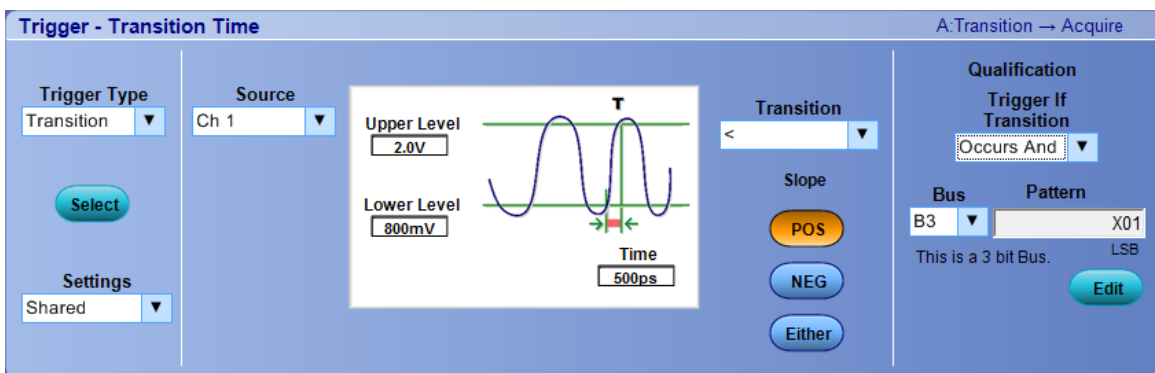

The following Trigger Transition screen appears on MSO/DPO5000 Series instruments:

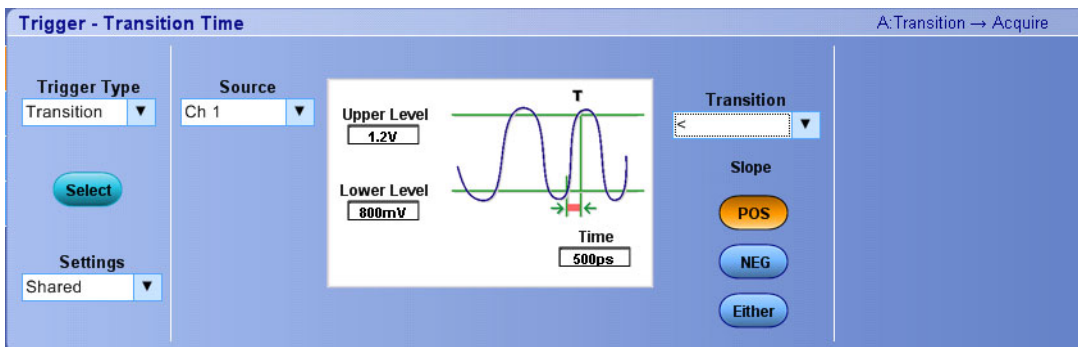

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

Behavior

Use the Transition trigger to trigger the instrument on pulse edges that traverse between two thresholds at faster or slower rates than the specified time. You can set up the instrument to trigger on positive or negative edges. The trigger can also be qualified by the logical state of other channels or by a bus pattern

(MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.



Use the Upper Level and Lower Level controls to define the voltage ranges of interest. The Time control specifies the target transition time.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Video Trigger Control Window

NOTE. *The video trigger type is available only on DPO7000, MSO5000, and DPO5000 Series instruments.*

From the Trig menu, select Video Setup.


Overview

Use the controls in this window to set up the Video trigger parameters.

NOTE. *The Video trigger is only available on analog channels.*

To Use

For information on the controls, click the buttons.

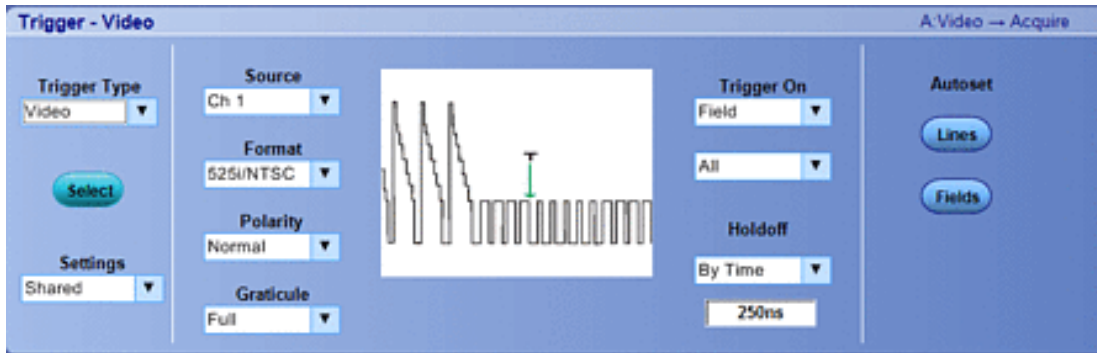

Behavior

Use the Video trigger to trigger the instrument on specified fields or lines of a composite video signal.

NOTE. Only composite signal formats are supported. Graphic display formats such as RGB and VGA are not supported.

Select from several preset video signal formats. If using a preset format, the Lines and Fields Autoset buttons will optimize the instrument for viewing the fields or lines for your chosen format. You can also select a graticule and set the polarity of the scan. When you click on the trigger window controls, the [trigger graphic](#) (see page 290) shows the trigger sequence.

You must also set the [Scan Type and Scan Rate](#) (see page 330) and you can specify a value for the [Holdoff](#) (see page 295) control in units of time only.

What do you want to do next?

- [Learn more about other trigger types.](#) (see page 290)
- [Return to the Trigger Setup control window.](#) (see page 289)

Scan Controls

These controls are available for the Bilevel and Trilevel video format types. Interlaced and Progressive are the only available Scan Types.



The Scan Rate enables you to trigger on nonbroadcast video signals that have unique scan rates. Select the scan rate range that includes your signal: 15-20 kHz, 20-25 kHz, 25-35 kHz, 35-50 kHz, or 50-65 kHz.

Width Trigger Control Window

From the Trig menu, select Width Setup.

Overview

Use the controls in this window to set up the Width trigger parameters.

Behavior


For information on the controls, click the buttons.

NOTE. The Trigger Width screen on DPO/DSA Series instrument is same as that on an MSO/DPO5000, and MSO70000/C Series instrument except for the source selection and Trigger if Width Qualification options.


In some instruments, the source selection is a drop-down list and the Trigger if Width Qualification option has Occurs and Logic.

In other instruments the source selection includes a combo list and a Select button. The Trigger if Width Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Width screen appears on MSO70000/C Series instrument:

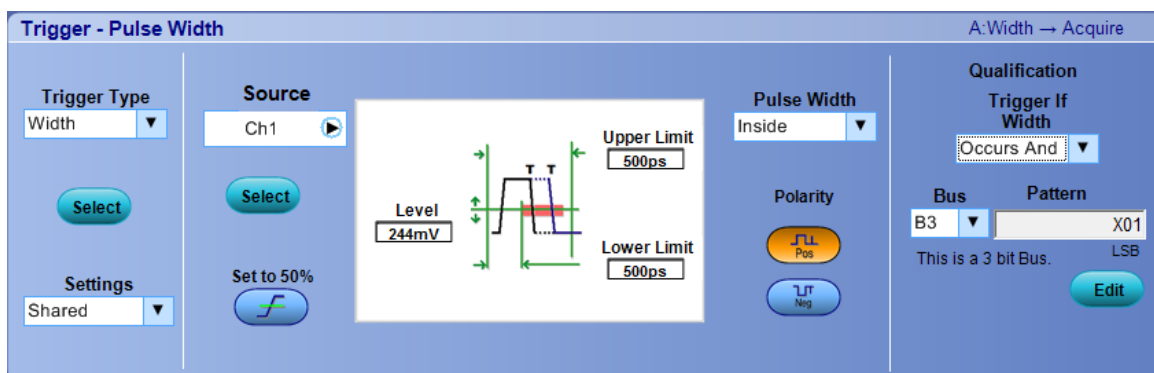

The following Trigger Width screen appears on MSO/DPO5000 Series instruments:

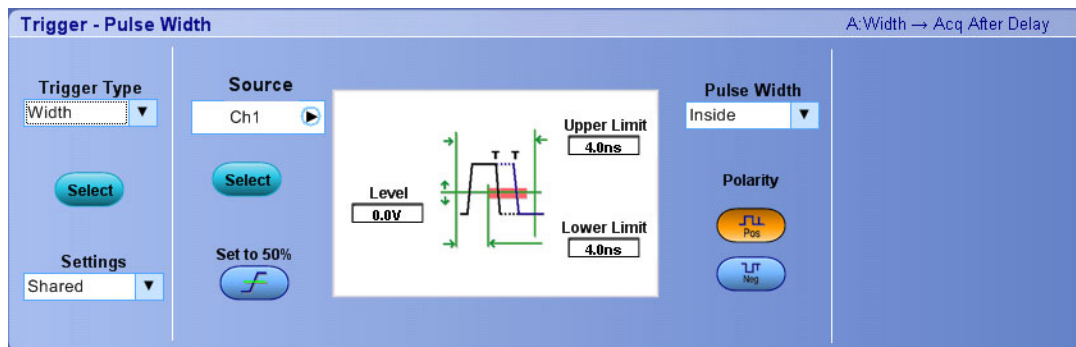

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

Behavior

Use the Width trigger to trigger the instrument on a pulse that is either within or outside the specified range. The range is defined by the Upper Limit and Lower Limit controls. You can specify widths for either positive or negative pulses. The pulse widths are measured at the voltage level specified by the Level control. The trigger can also be qualified by the logical state of other channels or by a bus pattern (MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

NOTE. You have the option to add user-defined labels for analog, reference, bus, and digital sources.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Window Trigger Control Window

NOTE. Window trigger is not available on MSO/DPO5000 Series instruments.

From the Trig menu, select Window Setup.

Overview

Use the controls in this window to set up the Window trigger parameters.

To Use


For information on the controls, click the buttons.

NOTE. *The Trigger Window screen on DPO/DSA Series instrument is same as that on an MSO70000/C Series instrument except for the source selection and Trigger if Window Qualification options.*

In a DPO/DSA Series instrument, the source selection is a drop-down list and the Trigger if Window Qualification option has Occurs and Logic.

In MSO70000/C Series the source selection includes a combo list and a Select button. The Trigger if Window Qualification option has Occurs, Logic, and Occurs And.

The following Trigger Window screen appears on MSO70000/C Series instrument:

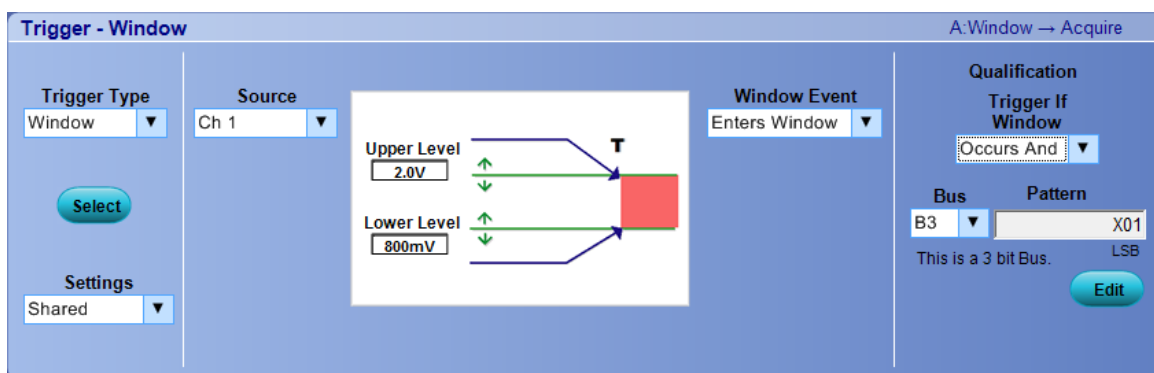

Behavior

Use the Window trigger to trigger the instrument when the input signal rises above an upper threshold level or falls below a lower threshold level. After setting these levels, you can specify whether you want to trigger the instrument as the signal is entering or leaving the threshold window. The trigger can also be qualified by the logical state of other channels or by a bus pattern (MSO70000/C Series only). When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

You can further qualify the trigger event in terms of time by using the Inside > t or Outside > t selections, or by the logical state of other channels using the Trigger When Logic option.

The Trigger When controls change as you select different combinations of options.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)


Sequential Triggering (Horizontal Delay Off)

From the Trig menu, select A - B Trigger Sequence; then open the A->B Seq tab.


Overview

Select the A->B Seq tab to use the A Event (main) trigger with the B Event trigger to capture complex data.

For information on the controls, click the buttons.

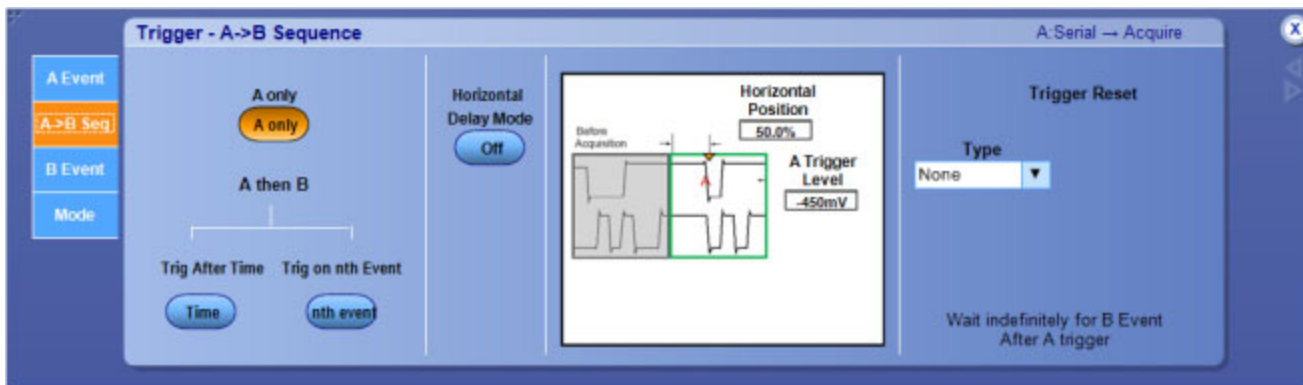

The following screen appears on MSO/DPO5000 Series instruments:

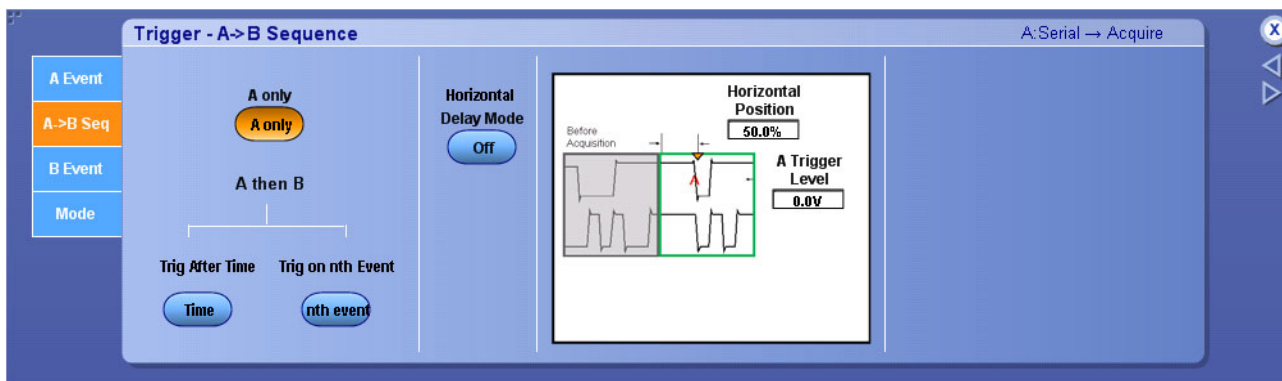

Behavior

The A Event trigger arms the trigger system; the instrument will trigger on the B Event trigger defined by events or time. You can also set up the instrument to delay the B Event Trigger by a specified time period by turning Horizontal Delay Mode on.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn about the A Event trigger types. \(see page 290\)](#)
- [Learn about B Event triggers. \(see page 347\)](#)
- [Learn about Trigger Mode and Holdoff. \(see page 348\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)


Trigger on A Only (Horizontal Delay On)

From the Trig menu, select A - B Trigger Sequence.


Overview

Use the controls in this window to define the parameters for the A ->B Sequence trigger with Horizontal Delay on.

For information on the controls, click the buttons.

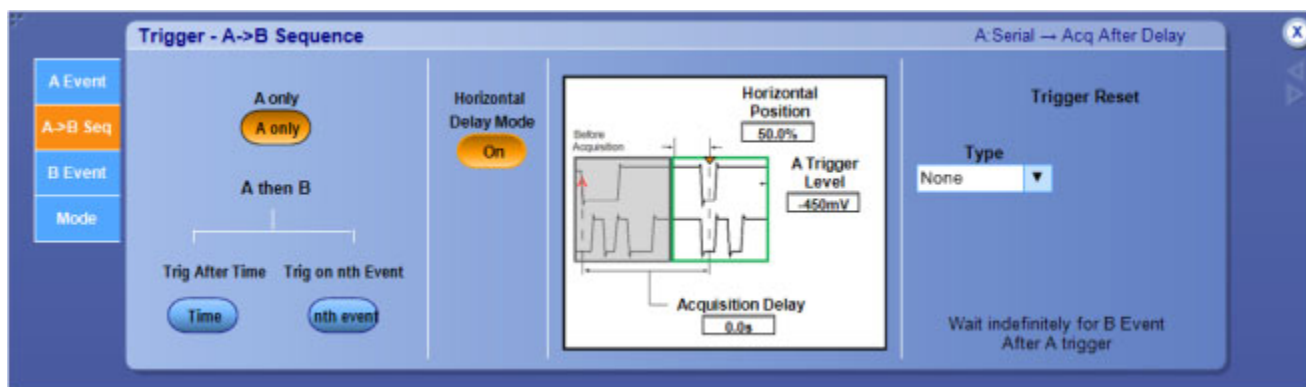

The following screen appears on MSO/DPO5000 Series instruments:

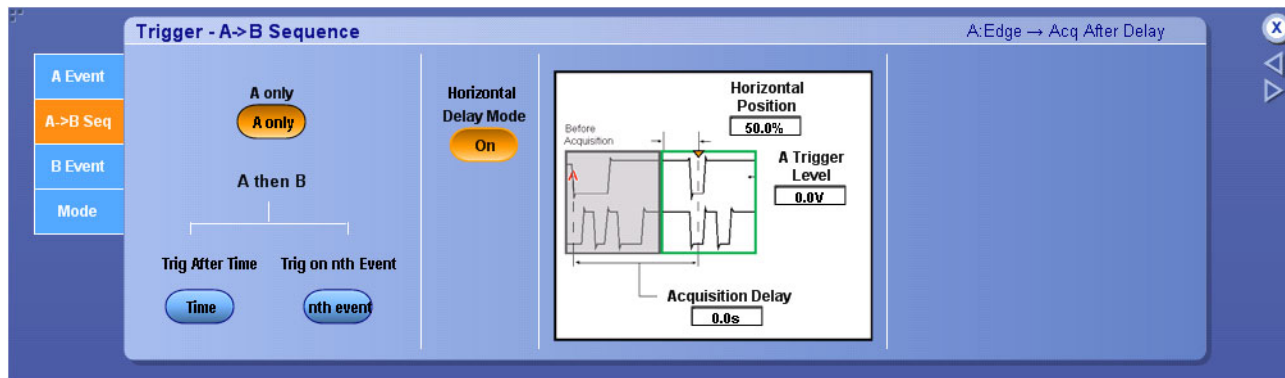

To Use

1. From the A Event tab, select the Trigger Type.
2. Configure the controls for the A Event in the trigger setup window.
3. Select the A->B Seq tab; then click A Only.
4. Click to set the Horizontal Delay Mode button to On.
5. Use the Horiz Delay and Reference Point entry boxes to delay the acquisition relative to the A Event trigger.

Behavior

When you select A Only with Delay Mode on, the instrument first looks for the trigger conditions specified by the A Event. The instrument then delays the acquisition for the time specified by the Horiz Delay control before acquiring the data.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn more about horizontal delay. \(see page 683\)](#)
- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)


Trigger on A Only (Horizontal Delay Off)

From the Trig menu, select A - B Trigger Sequence.


Overview

Use the controls in this window to define the parameters for the A ->B Sequence trigger with Horizontal Delay off.

For information on the controls, click the buttons.

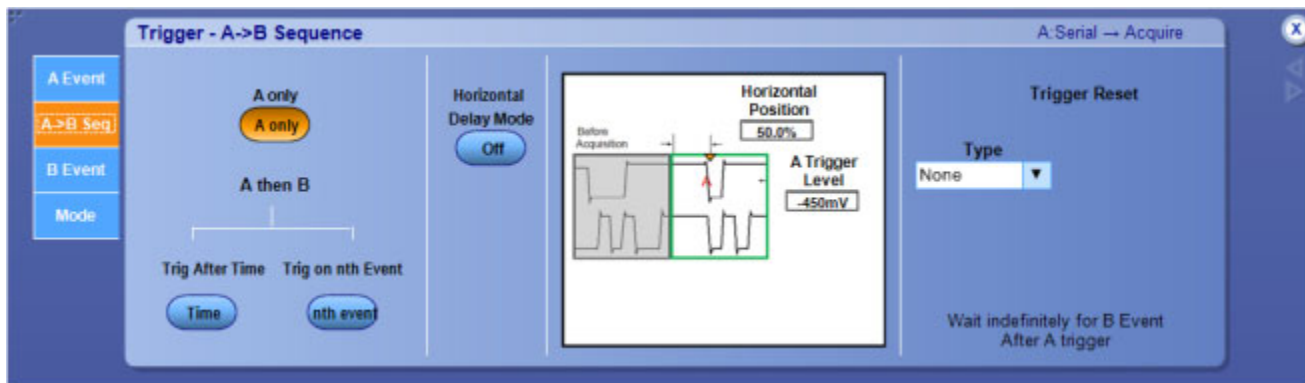

The following screen appears on MSO/DPO5000 Series instruments:

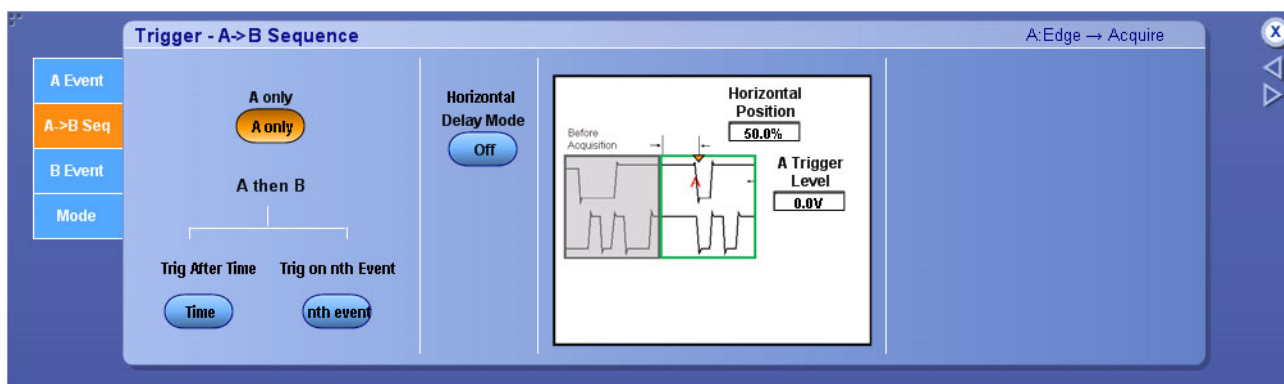

To Use

1. From the A Event tab, select the Trigger Type.
2. Configure the controls for the A Event in the trigger setup window.
3. Select the A->B Seq tab; then click A Only.
4. Click to set the Horizontal Delay Mode button to Off.
5. Use the front panel Horizontal Position control (or click in the Horizontal Position entry box and use a multipurpose knob) to define the amount of [pretrigger data](#) (see [page 43](#)).
6. Use the front panel Trigger Level control (or click in the A Trigger Level entry box and use a multipurpose knob) to set the A trigger level.

Behavior

When you select A Only with Delay Mode off, the instrument looks for the trigger conditions specified by the A event. When the instrument recognizes the A event, it acquires the [posttrigger data](#) (see [page 338](#)).

TIP. Use the front-panel Horizontal Position knob to set the amount of pretrigger data.

What do you want to do next?

- [Learn more about other trigger types.](#) (see page 290)
- [Return to the Trigger Setup control window.](#) (see page 289)

Posttrigger Data

The data acquired and displayed after the trigger event. You can set the amount of pretrigger data with the Horizontal Position control.

Trigger After Time (Horizontal Delay On)


From the Trig menu, select A - B Trigger Sequence.

Overview


Use the controls in this window to define the parameters for the A ->B Sequence trigger with Horizontal Delay on.

NOTE. The A->B Sequence trigger is not available with MultiScope Triggers.

For information on the controls, click the buttons.

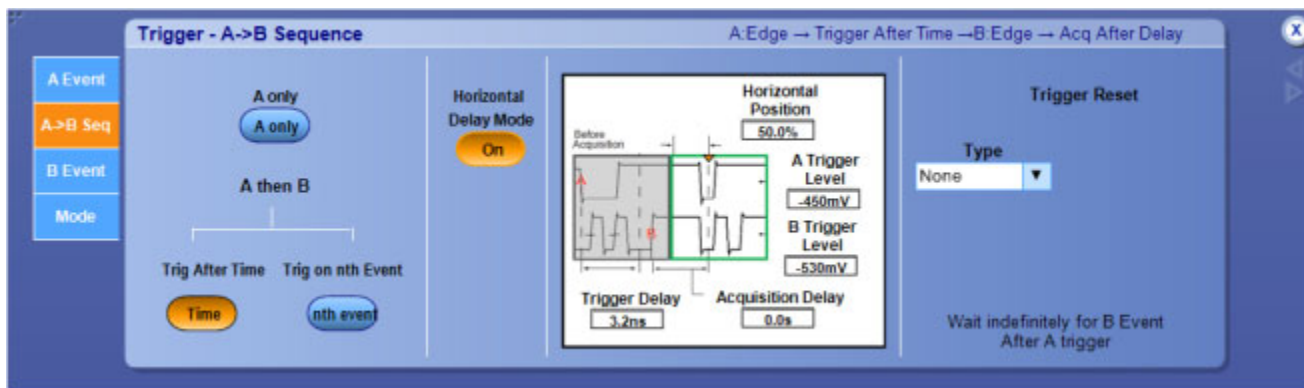

The following screen appears on MSO/DPO5000 Series instruments:

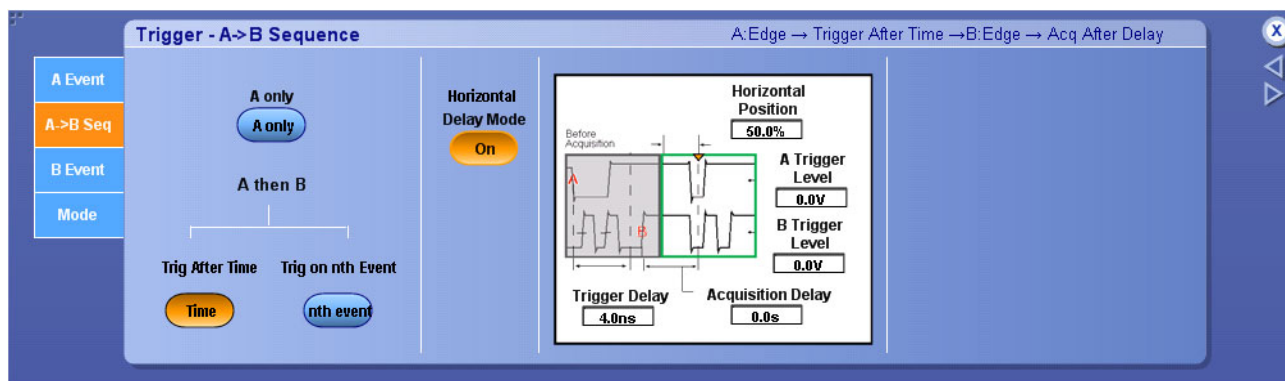

To Use

1. Set up the A Event and B Events from their individual tabs.
2. Select the A->B Seq tab; then click Trig After Time.
3. Click to set the Horizontal Delay Mode button to On.
4. Select the trigger delay time with the Trig Delay control.
5. Use the Horiz Delay control to delay the acquisition relative to the B event.
6. Adjust the Ref Point and B Trig Level controls as necessary.

Behavior

Use this trigger sequence to trigger the instrument on the B trigger event after the A event.

When you select Trig After Time, the instrument looks for the trigger conditions specified by the A event. After the A event arms the trigger system, the instrument delays the trigger for the period of time specified by the Trig Delay control. After the trigger delay time has expired, the instrument looks for the B trigger event. When the instrument detects the B event, it delays the acquisition for the period of time specified by the Horiz Delay.

What do you want to do next?

- [Learn more about Horizontal Delay. \(see page 683\)](#)
- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Trigger After Time (Horizontal Delay Off)


From the Trig menu, select A - B Trigger Sequence.

Overview


Use the controls in this window to define the parameters for the A ->B Sequence trigger with Horizontal Delay off.

NOTE. The A->B Sequence trigger is not available with MultiScope Triggers.

For information on the controls, click the buttons.

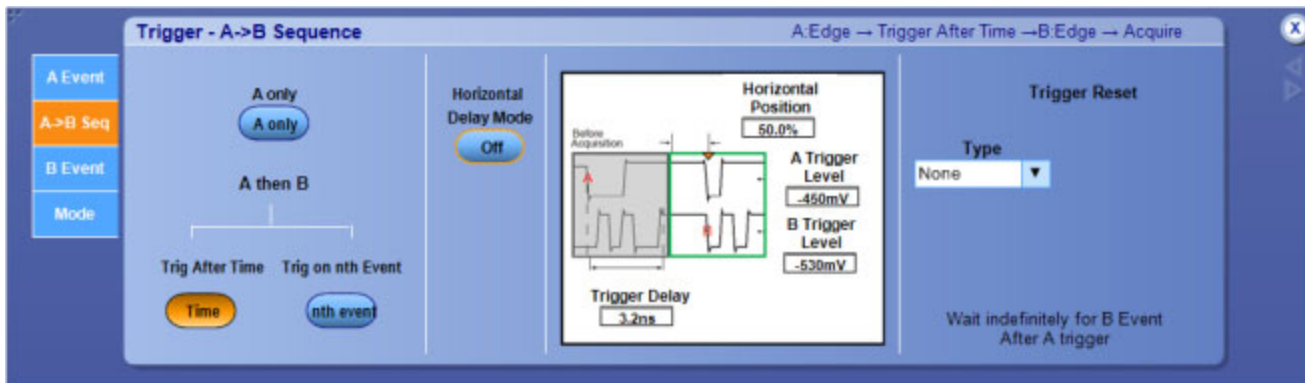

The following screen appears on MSO/DPO5000 Series instruments:

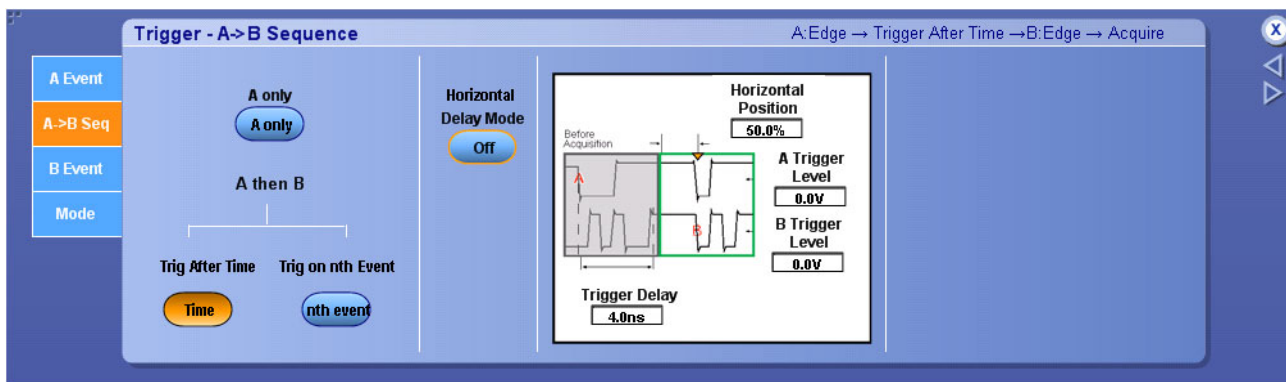

To Use

1. Set up the A Event and B Events from their individual tabs.
2. Select the A->B Seq tab; then click Trig After Time.
3. Click to set the Horizontal Delay Mode button to Off.
4. Select the trigger delay time with the Trig Delay control.
5. Adjust the Horiz Position and B Trig Level controls as necessary.

Behavior

When you select Trig After Time, the instrument looks for the trigger conditions specified by the A event. After the A event arms the trigger system, the instrument triggers on the next B event that occurs after the time specified by the Trig Delay control.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)


Trigger on nth Event (Horizontal Delay On)

From the Trig menu, select A - B Trigger Sequence.


Overview

Use the controls in this window to define the parameters for the A ->B Sequence trigger with Horizontal Delay on.

For information on the controls, click the buttons.

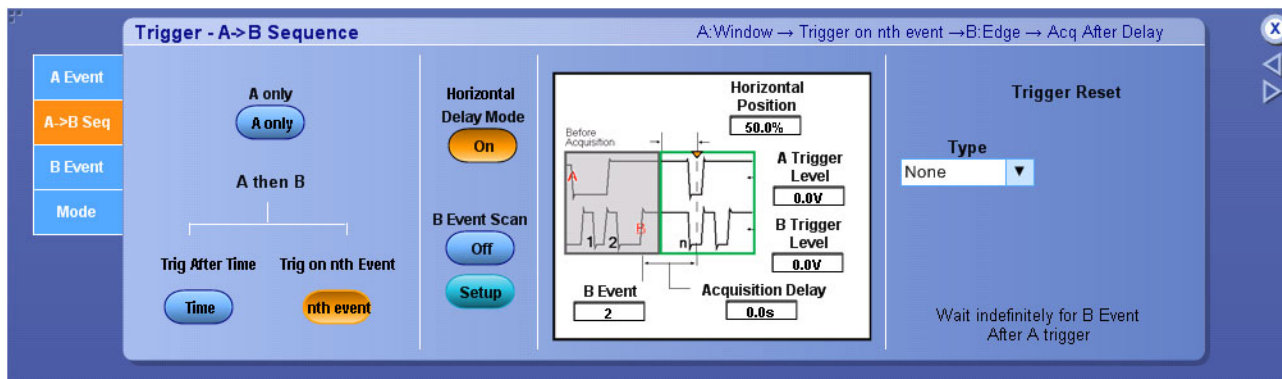

The following screen appears on MSO/DPO5000 Series instruments:

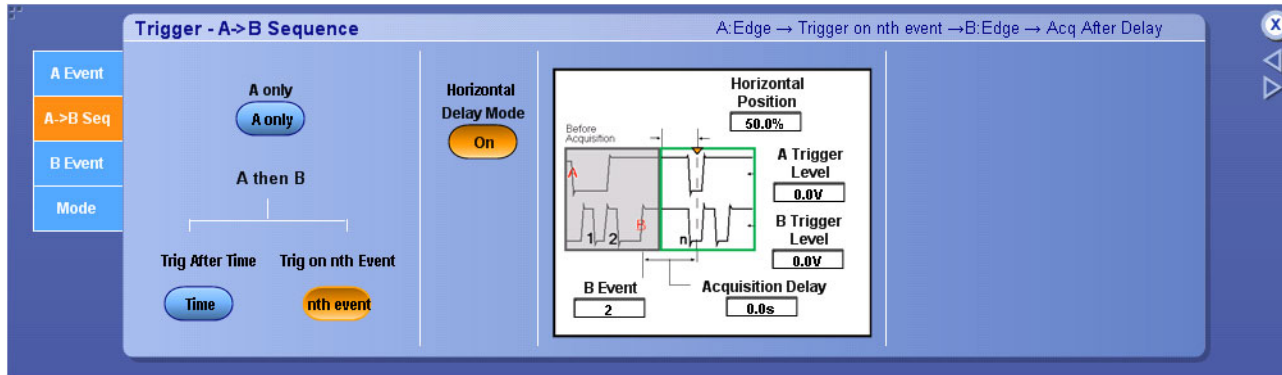

To Use

1. Set up the A Event and B Events from their individual tabs.

NOTE. *On MSO/DPO5000 Series instruments, trigger on B events is available only for Edge trigger.*

2. Select the A→B Seq tab; then click Trig on nth Event.
3. Set the Horizontal Delay Mode button to On.
4. Select the number of B events with the Trig Event control.
5. Use the Horiz Delay control to delay the acquisition relative to the B event.
6. Adjust the Ref Point and B Trig Level controls as necessary.

Behavior

When you select Trig on nth Event, the instrument looks for the trigger conditions specified by the A event. After the A event arms the trigger system, the instrument looks for a specific number of B events before triggering. The instrument then delays the acquisition for the amount of time specified by the Horiz Delay control. After the delay time has expired, the instrument displays the data.

What do you want to do next?

- [Learn more about Horizontal Delay. \(see page 683\)](#)
- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Trigger on nth Event \(Horizontal Delay Off\). \(see page 342\)](#)
- [Trigger on nth Event \(B-Event Scan\). \(see page 344\)](#)
- [Trigger on nth Event \(B-Event Scan and Horizontal Delay On\). \(see page 345\)](#)


Trigger on nth Event (Horizontal Delay Off)

From the Trig menu, select A - B Trigger Sequence.


Overview

Use the controls in this window to define the parameters for the A →B Sequence trigger with Horizontal Delay off.

For information on the controls, click the buttons.

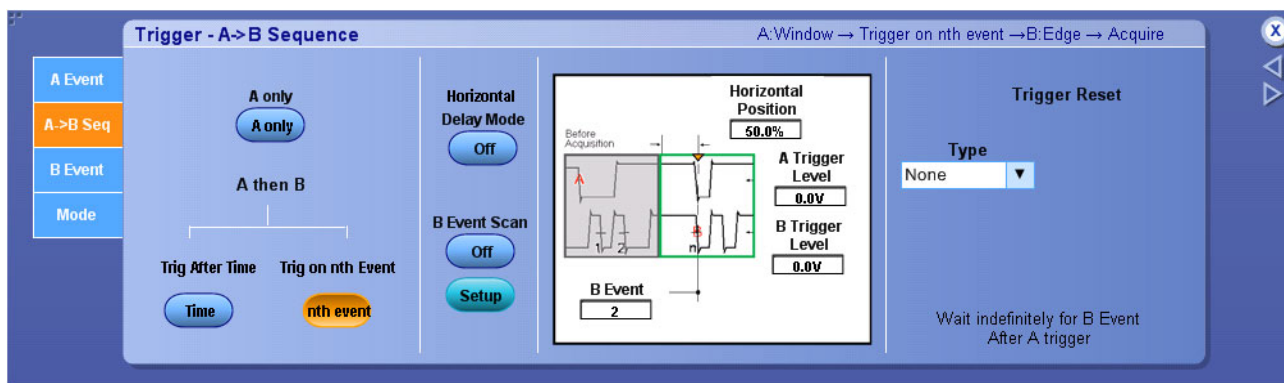

The following screen appears on MSO/DPO5000 Series instruments:

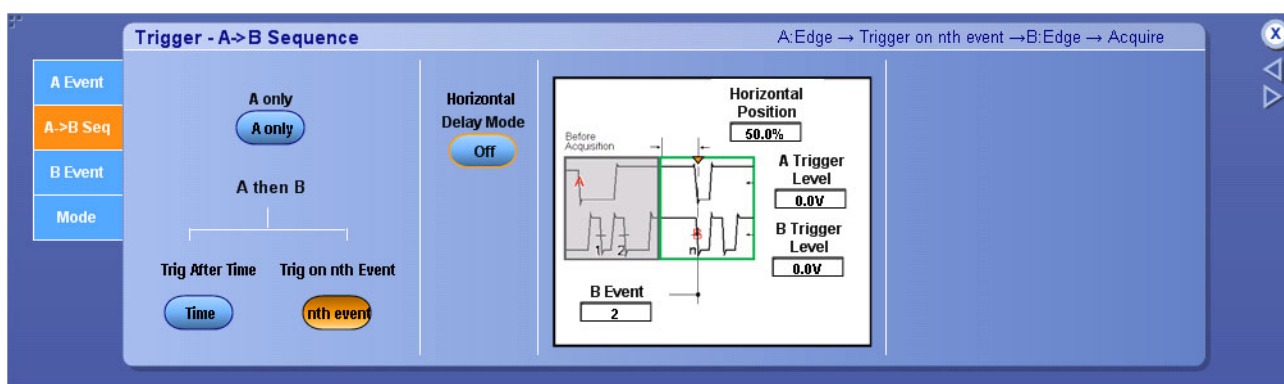

To Use

1. Set up the A Event and B Events from their individual tabs.

NOTE. On MSO/DPO5000 Series instruments, trigger on B events is available only for Edge trigger.

2. Select the A->B Seq tab; then click Trig on nth Event.
3. Set the Horizontal Delay Mode button to Off.
4. Select the number of B events with the Trig Event control.
5. Adjust the Horiz Position and B Trig Level controls as necessary.

Behavior

Use this sequence to trigger the instrument on the nth occurrence of the B event after the A event.

When you select Trig on nth Event, the instrument looks for the trigger conditions specified by the A event. After the A event arms the trigger system, the instrument looks for a specific number of B events before triggering and displaying the [data \(see page 338\)](#).

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Trigger on nth Event \(Horizontal Delay On\). \(see page 341\)](#)
- [Trigger on nth Event \(B-Event Scan\). \(see page 344\)](#)
- [Trigger on nth Event \(B-Event Scan and Horizontal Delay On\). \(see page 345\)](#)

Trigger on nth Event (B-Event Scan)


NOTE. B-Event Scan is not available on MSO/DPO5000 Series instruments.

From the Trig menu, select A - B Trigger Sequence.

Overview

Use the controls in this window to define the parameters for the A ->B Sequence trigger with B-Event Scan on.


For information on the controls, click the buttons.

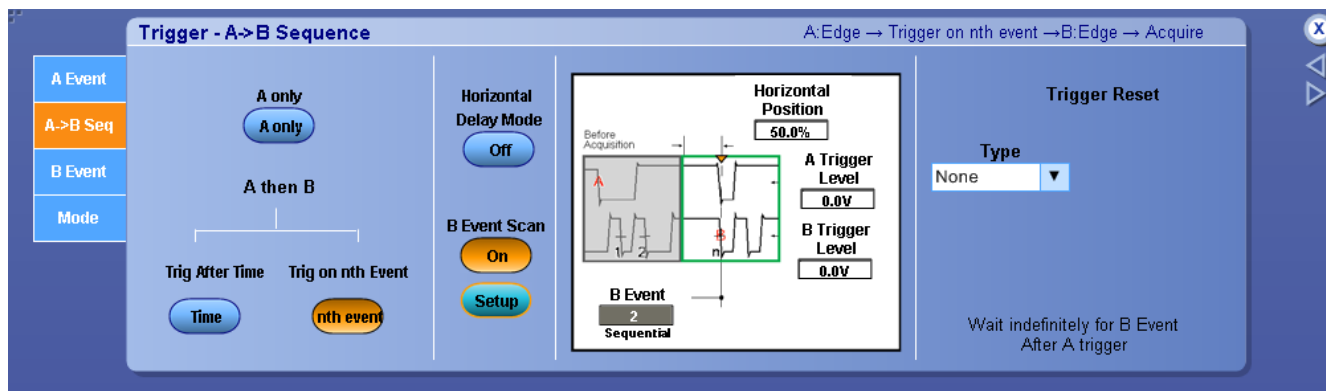

To Use

1. Set up the A Event and B Events from their individual tabs.
2. Select the A->B Seq tab; then click Trig on nth Event.

3. Set the Horizontal Delay Mode button to Off.
4. Set the B Event Scan button to On.
5. Click Setup button to set the values for B Event Advance mode, Start Event, End Event, and Advance After.

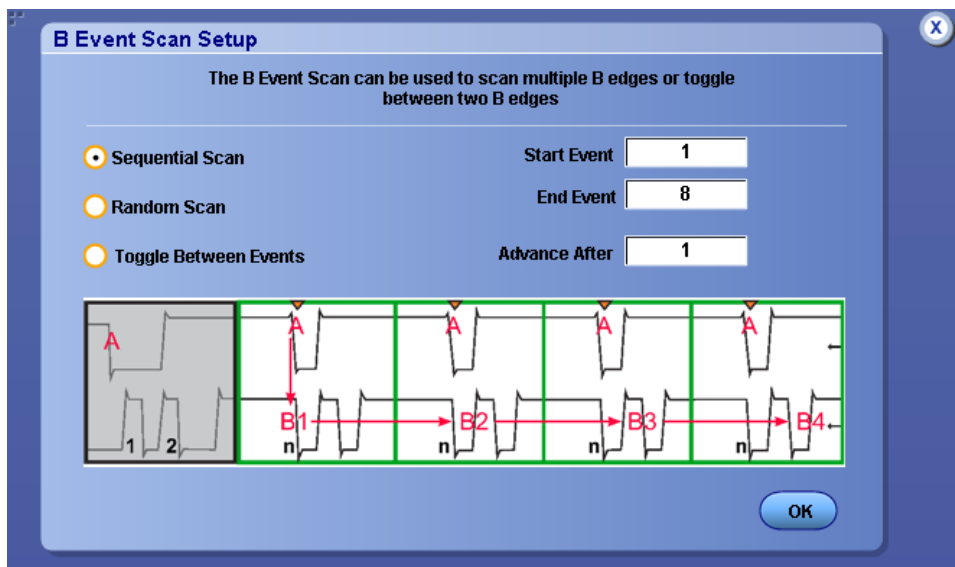

Behavior

Use this sequence to trigger the instrument on the nth occurrence of the B event after the A event.

When you enable the B-Event Scan, the instrument automatically advances the B-Event value to capture a different portion of the signal. The B-Event value is initialized to the Start Event value and is advanced to the End Event value by one of three Advance Methods: Sequential, Random, and Toggle.

What do you want to do next?

- [Learn more about B-Event scan setup. \(see page 636\)](#)
- [Learn more about other trigger types. \(see page 290\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Trigger on nth Event \(Horizontal Delay Off\). \(see page 342\)](#)
- [Trigger on nth Event \(Horizontal Delay On\). \(see page 341\)](#)
- [Trigger on nth Event \(B-Event Scan and Horizontal Delay On\). \(see page 345\)](#)

Trigger on nth Event (B-Event Scan and Horizontal Delay On)


NOTE. *The B-Event Scan is not available on MSO/DPO5000 Series instruments.*

From the Trig menu, select A - B Trigger Sequence.

Overview

Use the controls in this window to define the parameters for the A ->B Sequence trigger with B-Event Scan and Horizontal Delay on.

For information on the controls, click the buttons.

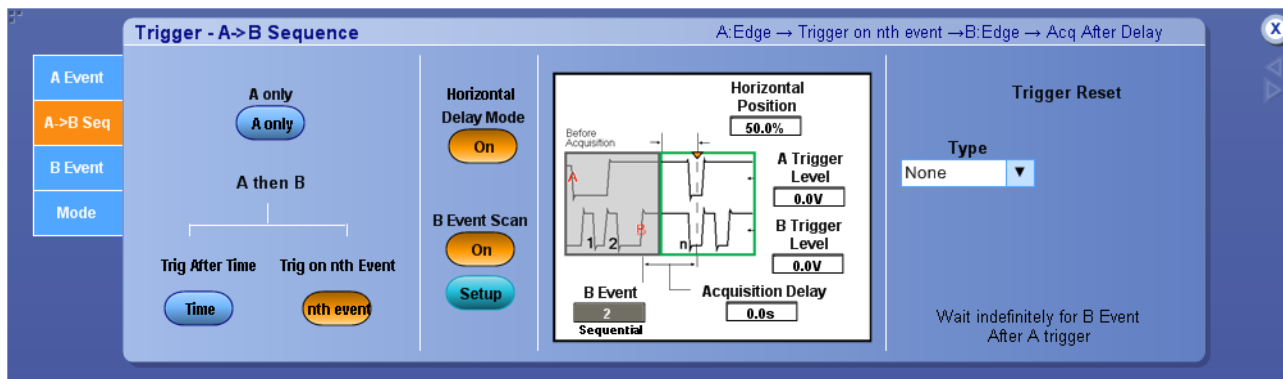

To Use

1. Set up the A Event and B Events from their individual tabs.
2. Select the A->B Seq tab; then click Trig on nth Event.
3. Set the Horizontal Delay Mode button to On. Select the number of B events with the Trig Event control, use the Acquisition Delay control to delay the acquisition relative to the B event, and adjust the Ref Point and B Trig Level controls as necessary.
4. Set the B Event Scan button to On. Click Setup button to set the values for B Event Advance mode, Start Event, End Event, and Advance After.

Behavior

Use this sequence to trigger the instrument on the nth occurrence of the B event after the A event. The instrument then delays the acquisition for the amount of time specified by the Acquisition Delay control. After the delay time has expired, the instrument displays the data.

When you enable the B-Event Scan, the instrument automatically advances the B-Event value to capture a different portion of the signal. The B-Event value is initialized to the Start Event value and is advanced to the End Event value by one of three Advance Methods namely Sequential, Random, and Toggle.

What do you want to do next?

- [Learn more about B-Event scan setup. \(see page 636\)](#)

- [Learn more about other trigger types. \(see page 290\)](#)

- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Trigger on nth Event \(Horizontal Delay Off\). \(see page 342\)](#)
- [Trigger on nth Event \(Horizontal Delay On\). \(see page 341\)](#)
- [Trigger on nth Event \(B-Event Scan\). \(see page 344\)](#)

Trigger Setup Control Window (B Event Tab)


From the Trig menu, select B Event (Delayed) Trigger Setup.

To Use

Use the controls in this window to define the parameters for the B Event trigger.

For information on the controls, click the buttons.

NOTE. On MSO/DPO5000 Series instruments, trigger on B events is available only for Edge trigger.

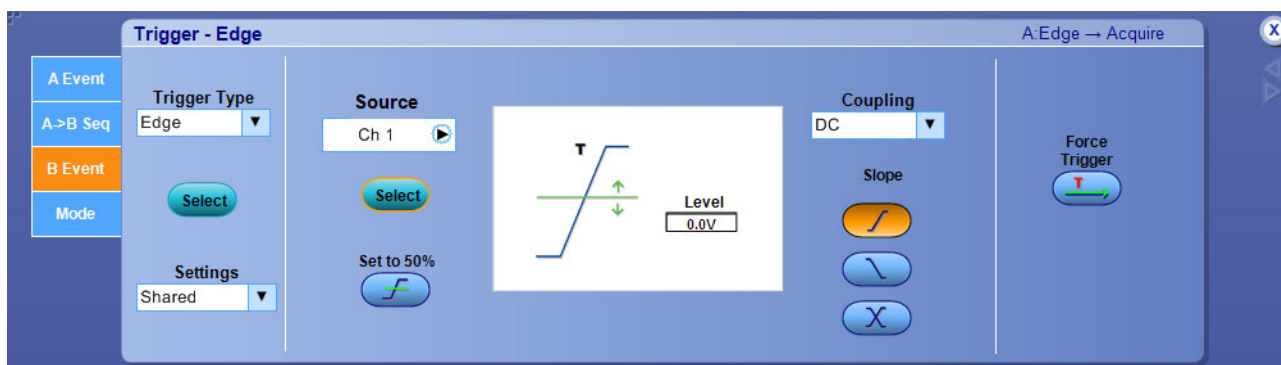

Behavior

These controls work together to define the parameters for the trigger event. Use the B Event trigger with the A Event trigger to capture more complex events. The B Event trigger controls are independent from the A Event trigger. When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn about sequential triggering. \(see page 754\)](#)
- [Learn about the A Event trigger types. \(see page 290\)](#)
- [Learn about Trigger Mode and Holdoff. \(see page 348\)](#)

- [Return to the Trigger Setup control window. \(see page 289\)](#)


Trigger Setup Control Window (Mode Tab)

From the Trig menu, select the A Event or B Event Trigger Setup; then open the Mode tab.

Overview

Use the controls in this window to set up the trigger mode.

For information on the controls, click the buttons.

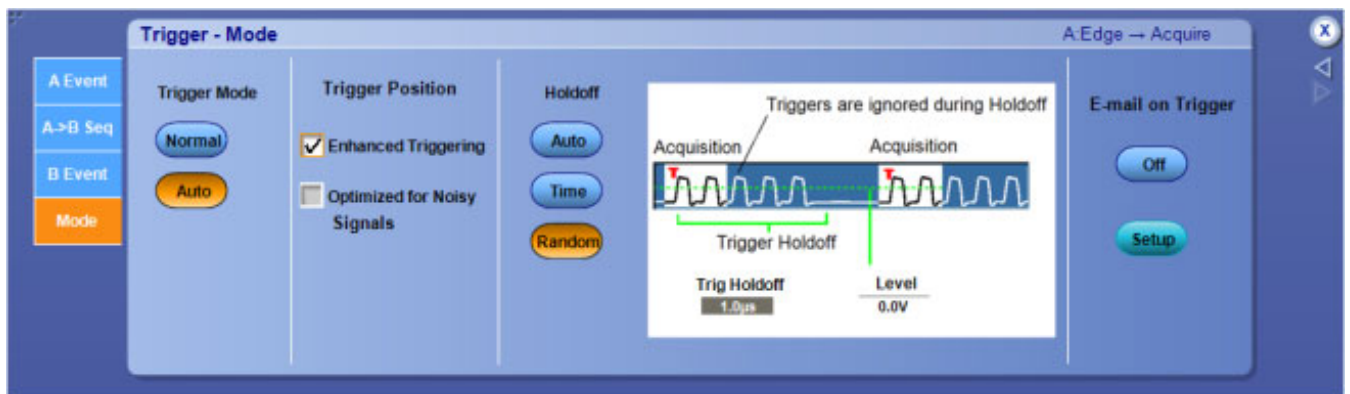

To Use

- To set the Trigger Mode, click either Auto or Normal.
- To [enhance trigger positioning \(see page 349\)](#), click in the option boxes.
- To set the Trigger Holdoff time manually, click Time, and then use the multipurpose knob to set the holdoff time. The Holdoff range is 250 ns (minimum holdoff available) to 100 s (maximum holdoff available).
- To enable E-mail on Trigger, click On.
- To set up the e-mail on event parameters, click Setup. Set the A Event trigger level using the A Trig Level control and the multipurpose knob.

Behavior

Use the trigger holdoff time to delay the trigger system for a specified amount of time between triggers, or click Auto to let the instrument calculate the time for you. You can also set the holdoff to a Level that synchronizes the instrument with an incoming signal to generate a stable display and avoid triggering on undesired events. When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

If E-mail on Event has already been set up, clicking E-mail on Trigger enables you to send e-mail on a trigger. If E-mail on Event has not been set up, you must first click Setup, and then configure E-mail on Event in the setup control window.

What do you want to do next?

- [Return to the Trigger Setup control window. \(see page 289\)](#)
- [Learn about setting up E-mail on Event. \(see page 426\)](#)

Trigger Position Correction

From the Trig menu, select A Event (Main) Trigger setup; then open the Mode tab.

Overview

Trigger Position corrects for internal differences in the data and trigger paths to more accurately place triggers on displayed waveforms. This feature can also use averaging to improve trigger placement on noisy signals.

Trigger Position Correction works for all pinpoint trigger types, except Pattern trigger: Edge, Glitch, Width, Timeout, Runt, State, Setup and Hold, Transition, Window.



To Use

To more accurately place triggers:

- Click Enhanced Triggering to more accurately place a trigger on the display.
- Click Optimized for Noisy Signals to more accurately place the trigger on a noisy signal (available only if Enhanced Triggering is enabled.)

Behavior

The Trigger Type indicator(s) in the status area change when you apply Trigger Position Correction. In the example below, the Trigger A indicator changed from A to A' when trigger correction was applied.



NOTE. You can use Trigger Position Correction in any combination for A Event, B Event, or Sequence triggers, including Trigger After Time and Trigger on nth Event. It is fully compatible with all acquisition and logic qualification sampling modes, Bandwidth Enhancement, and FastFrame, but not Fast Acquisition.

MultiScope Trigger Setup Control Window

From the Trig menu, select A Event (Main) Trigger Setup; then open the MultiScope Trigger tab.

NOTE. TekLink is not available on DPO7000, MSO5000, and DPO5000 Series instruments.

Overview

Use the controls in the MultiScope Trigger Setup windows to configure additional instruments to trigger on the same event. You can connect two instruments together with a single TekLink cable, or up to four instruments using an appropriate number of cables and a TekLink 4 Port Instrument Hub.

NOTE. When you connect two or more instruments, the B Event (Delayed) Trigger Setup and the Quick Select B Trigger are not available from the Trig menu.

To Use


Connect Two TekLink-Compatible Instruments

1. Use a TekLink cable to [connect instruments \(see page 351\)](#). Refer to [Controls and Connectors \(see page 61\)](#) for the location of TekLink connectors on Tektronix DPO70000B/C, DSA70000B/C, and MSO70000/C Series instruments.


NOTE. TekLink is not available on DPO7000, MSO5000, and DPO5000 Series instruments.



2. Verify the [connection status \(see page 351\)](#) in the horizontal readout of the host oscilloscope.
3. From the Trig menu, select A Event (Main) Trigger Setup.

The oscilloscope detects the TekLink connection and displays the MultiScope Trigger Setup control window.

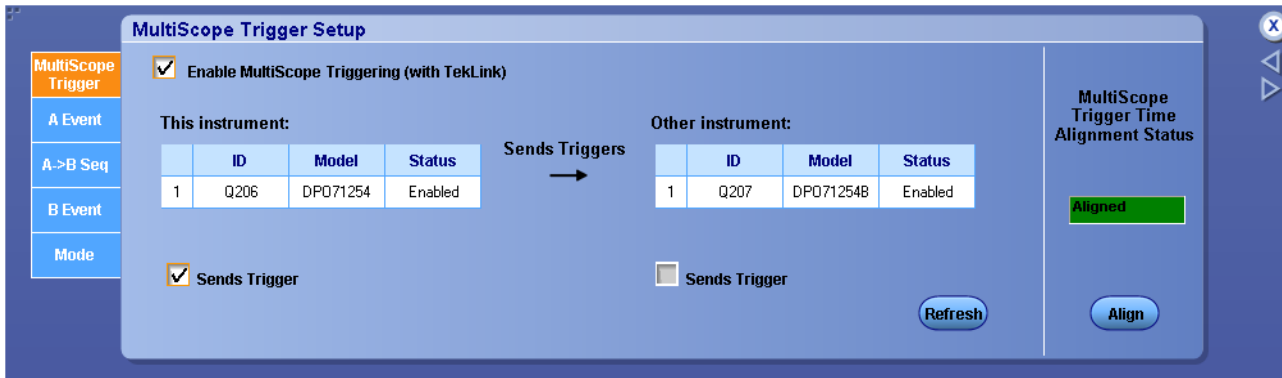

4. Click Enable MultiScope Triggering (with TekLink) to enable the MultiScope feature.
5. Under This instrument or Other instrument, click Sends Trigger to identify which instrument will initiate the trigger for both instruments. The attached instrument will automatically be set to receive the trigger.
6. Click the Align button to align the MultiScope Trigger.

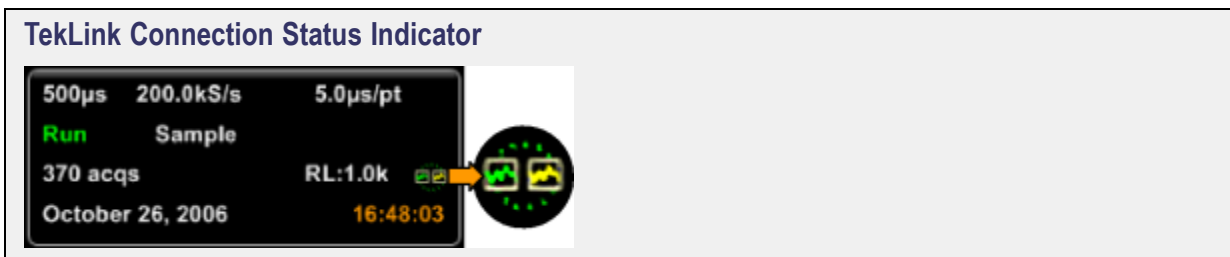

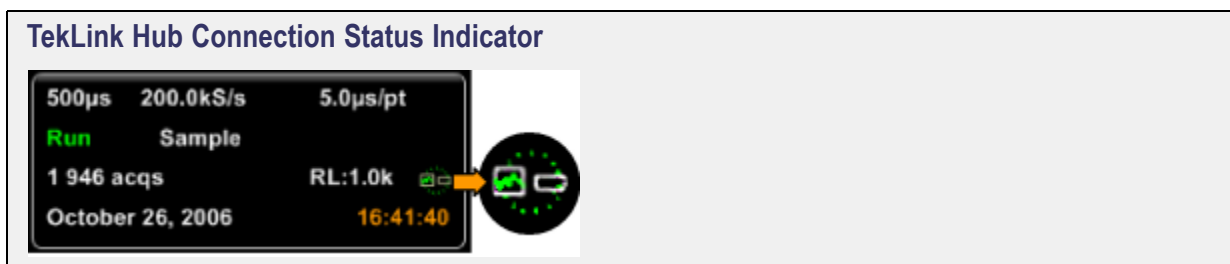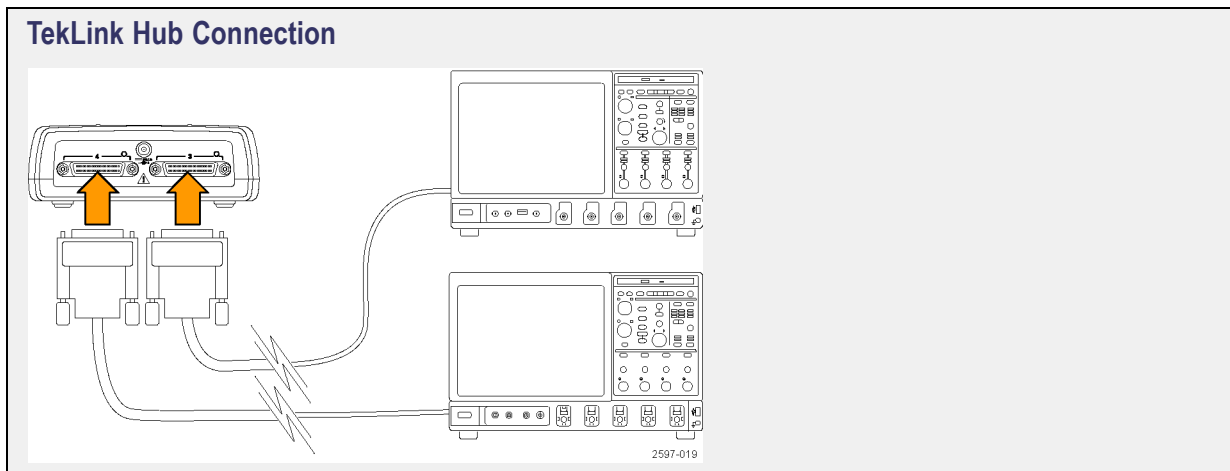


Connect Up to Four TekLink-Compatible Instruments

NOTE. TekLink is not available on DPO7000, MSO5000, and DPO5000 Series instruments.

1. Use TekLink cables to [connect instruments \(see page 352\)](#) to a TekLink Hub. Refer to [Controls and Connectors \(see page 61\)](#) for the location of TekLink connectors on Tektronix DPO70000B, DSA70000B, and MSO70000/C Series instruments.
2. Verify the [connection status \(see page 352\)](#) in the horizontal readout of the oscilloscope.
3. From the Trig menu, select A Event (Main) Trigger Setup.

The oscilloscope detects the TekLink Hub connection and displays the MultiScope Trigger Setup control window.

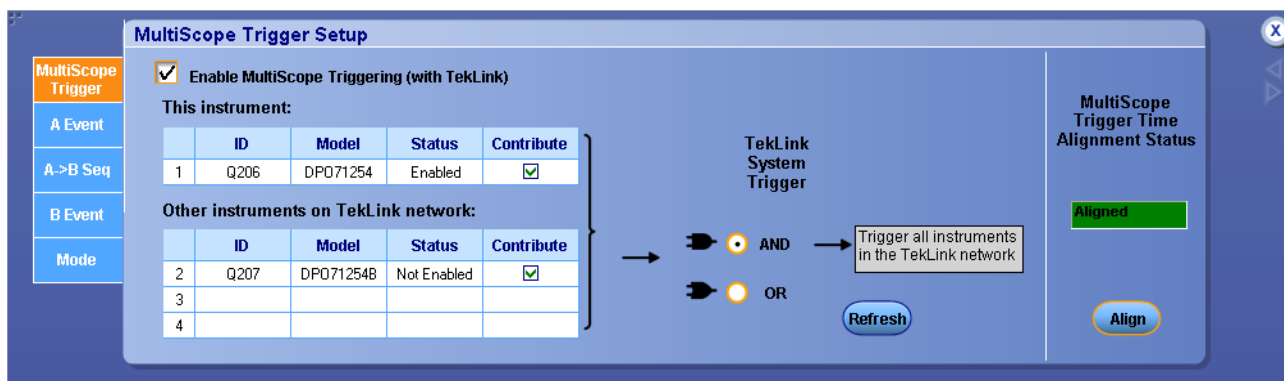

4. Click Enable MultiScope Triggering (with TekLink) to enable the MultiScope feature.
5. Click Contribute to identify the instruments that will supply the trigger for the TekLink setup. The other instruments will be set to receive the trigger automatically.
6. Click AND or OR to combine all contributing triggers before triggering all instruments in the TekLink setup.
AND triggering with a hub works with edge and pattern trigger types.
OR triggering with a hub works with all trigger types.
7. Click Refresh if you want the instrument to scan the TekLink network to see which instruments are connected to the TekLink network.
8. Click the Align button to align the MultiScope Trigger.
9. The [MultiScope readout \(see page 352\)](#) is displayed when MultiScope Triggering is enabled.

The TekLink system allows you to connect up to four instruments in a test and measurement network. The system has hardware and software capabilities beyond that of a single instrument.

Key features of the TekLink system include the following:

- Four ports, allowing any four instruments with TekLink capability to enter into the system.
- Complex trigger functions; you can set up OR gates or AND gates with the trigger functions.
- Interoperability between Tektronix instruments, including logic analyzers, oscilloscopes, spectrum analyzers, and signal sources.
- Sharing of trigger events, GPIB commands, and reference clocks between instruments.


Vertical Setup Control Window

From the Vertical menu, select Vertical Setup.


Overview

Use the Vertical Setup control windows to set vertical parameters for live (channel) waveforms. The example windows below do not show controls for attached probes.

Click for <4 GHz instruments

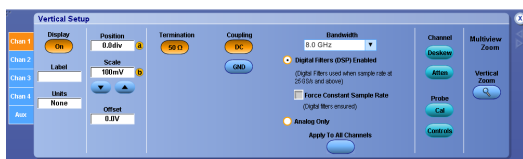

Click for ≥ 4 GHz instruments

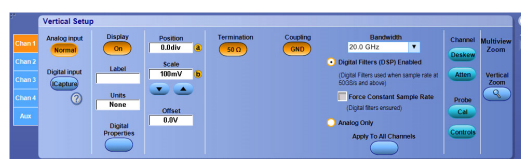

For information on the Vertical Setup controls, click the buttons.

NOTE. *iCapture is available only on MSO70000/C Series instruments.*

NOTE. *The bandwidth readout displays in reverse video if the bandwidth is not what you selected. If you want the bandwidth to be what you selected, make sure that the sample rate is high enough to enable Digital Filters (DSP). One way to enable DSP is to select Force Constant Sample Rate.*

NOTE. *The features and options that are documented in this online help are available for several instrument models. Your instrument may not have every feature discussed in this online help.*

Behavior

Use the tabs on the side of the control window to select the channel you want to change. The controls for each channel are independent.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 806\)](#)

Input Setup


NOTE. *iCapture is available only on MSO70000/C Series instruments.*

From the Vertical menu, select Vertical Setup.


To Use

- Click the Analog Input Normal button when you want the instrument to display the channel for the selected tab. Each channel has a tab.
- Click the [Digital Input iCapture \(see page 649\)](#) button when you want the instrument to display analog characteristics of a digital channel.

The following screen is captured on MSO70000/C Series instruments:

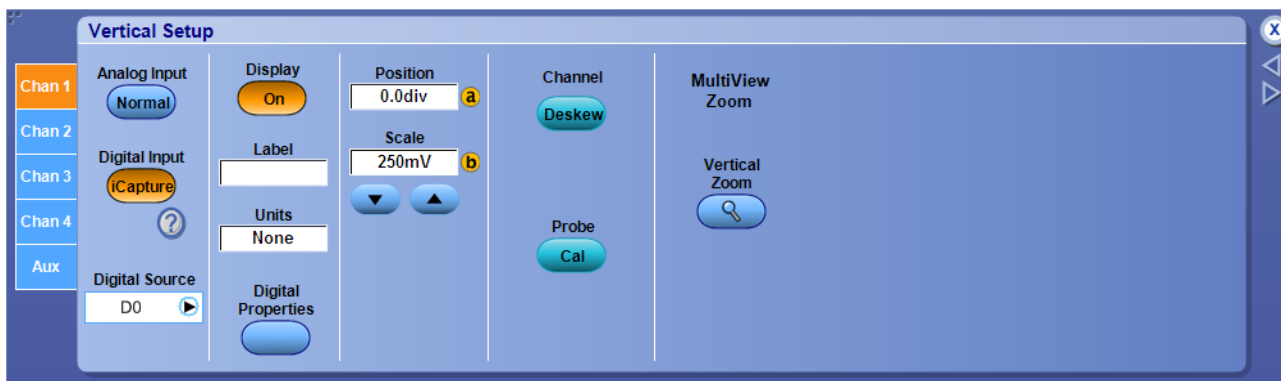

The following screen is captured on MSO/DPO5000 Series instruments:

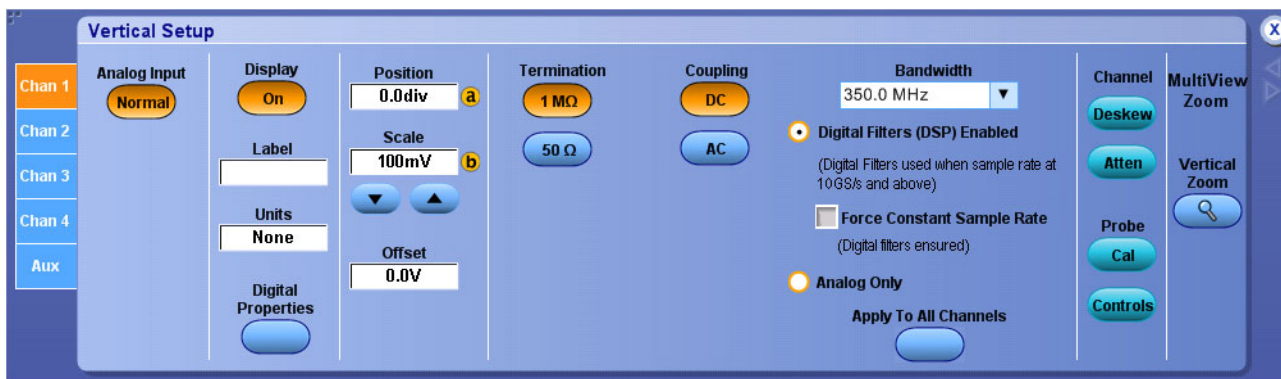

NOTE. Right-click on the digital source readout in the waveform window to reroute from one analog channel to any of the other three analog channels. For example, right-click on D0 captured on Ch1 and select **iCapture on Ch2** to reroute the source D0 to Ch2.

TIP. You have the option to add user-defined labels for the analog, reference, bus, and digital sources.

Behavior

When the Analog Input Normal button is selected, the remaining display, probe, and zoom parameters are the same as on all other models.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 806\)](#)
- [Learn about the Digital Input iCapture feature. \(see page 649\)](#)
- [Learn about the Digital Properties button. \(see page 652\)](#)

Zoom Control Window


From the Vertical or Horiz /Acq menus, select Zoom Controls, or push the front-panel MultiView Zoom button.


Overview

Use the Zoom control window to select the Zoom Area and Source, assign, and to lock and scroll the zoomed areas.



The following screen appears on MSO70000/C Series instruments:

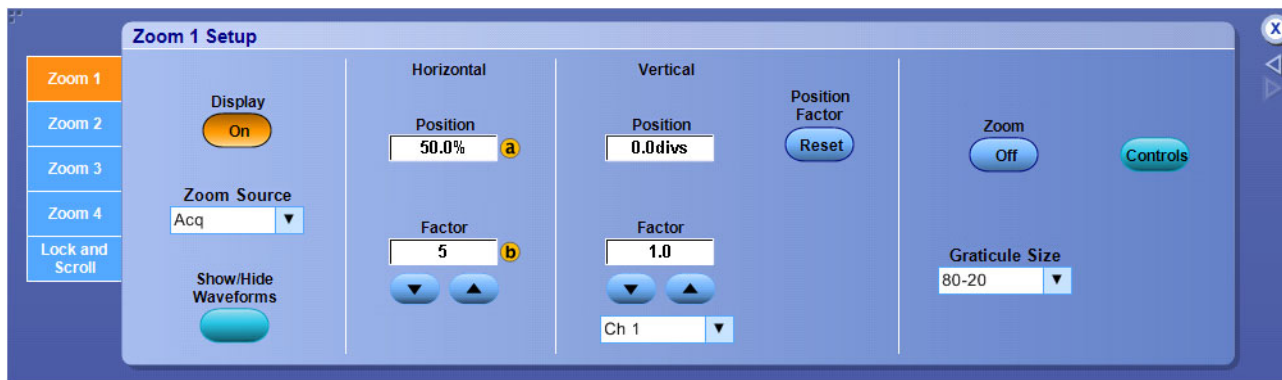

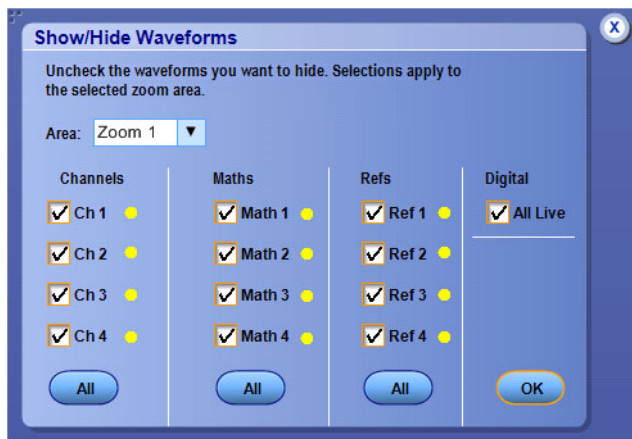

To Use

1. Click a Horiz or Vert button to assign the Horizontal or Vertical zoom controls to the multipurpose knobs.
2. Select the zoom area from the Area drop-down list. The changes you make in this control window apply only to the zoom area selected.
3. Use the Zoom Source drop-down list to select the waveform or area you want to zoom in on.
4. Click the Waveforms Hide button to open the Show/Hide Waveforms dialog box; here you can identify waveforms you do not want to display in the selected zoom area.

Click Setup to display the [Zoom Setup control window \(see page 175\)](#) where you can access additional Zoom controls.

Behavior.

You can also access the controls for both the Acquisition and Zoom windows from the front panel. Selecting Zoom (1–4) as the Zoom Source allows you to zoom on zoom.

TIP. You can easily zoom in on a waveform by clicking and dragging a box around the area of interest. Then select Zoom (1–4) On from the shortcut.

What do you want to do next?


- [Learn about the Zoom Setup controls. \(see page 175\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)
- [Return to the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the AutoScroll control window. \(see page 720\)](#)

Waveform Display Control Window

From the Vertical or Math menus, select Display On/Off.

Overview

Use the Position/Offset control window to turn the selected waveform on or off.

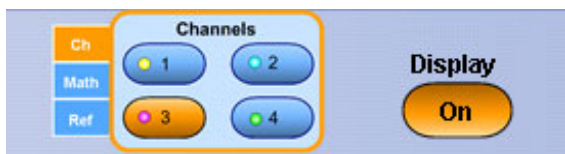

To Use

1. Click the [Channels selector \(see page 224\)](#) to select a valid channel, math, or reference waveform.
2. Click Display to turn the selected waveform on or off.

Behavior

The Display button applies only to the selected waveform. Each waveform (channel, math, or reference) has its own Display button.

Any displayed channel, math, or reference waveform can be turned off without impacting any math functions, measurements, or histograms done on that waveform. You may want to turn some waveform displays off to make the remaining waveforms easier to view and analyze.

TIP. Use the dedicated front-panel buttons to turn the channel waveforms on or off.

What do you want to do next?

- [Learn more about the Waveform controls. \(see page 359\)](#)

Position/Offset Control Window

From the Vertical or Math menus, select Position/Scale.

To Use

Use the Position/Offset control window to set the vertical position and offset of the selected waveform.

1. Use the [Channels Selector](#) (see page 224) to select a waveform.
2. Use the [Scale](#) (see page 789) and [Position](#) (see page 788) controls to set the vertical position and scale of the selected waveform.
3. Use the Offset control to set the [vertical offset](#) (see page 361) of the selected waveform.



What do you want to do next?

- [Learn more about the Vertical Position control.](#) (see page 788)
- [Learn more about the Vertical Scale control.](#) (see page 789)
- [Learn more about the Waveform controls.](#) (see page 361)
- [Learn more about the Vertical controls.](#) (see page 361)

Waveform Label Control Window

From the Vertical or Math menus, select Label.

Overview

Use the Label control window to attach a label to the waveform.



To Use

1. Use the [Channels Selector \(see page 224\)](#) to select a valid channel, math, or reference waveform.
2. Click in the Label entry box, and then use the pop-up keyboard to create a label for the selected waveform.
3. Click in the X Position and Y Position entry boxes to activate them.
4. Use the multipurpose knobs to position the label on the graticule. You can also position the label anywhere on the screen by clicking and dragging it to the desired location.

Behavior

The label applies only to the selected waveform. Each waveform (channel, math, or reference) can have its own label. If you do not enter a label for the selected waveform, the label will be left blank. A label only appears when its associated waveform is turned on.

The X Pos control values are relative to the left side of the display. The YPos control values are relative to the waveform handle. The values are expressed in divisions.

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 361\)](#)
- [Learn more about the Math controls. \(see page 209\)](#)
- [Learn more about the Reference Waveform controls. \(see page 397\)](#)

Vertical Offset Control Window

From the Vertical menu, select Offset.

Overview

Use the Position/Offset control window to set the offset value of the selected waveform to shift the vertical [acquisition window \(see page 55\)](#) to match the waveform data you want to acquire.



To Use

1. Use the [Channels Selector \(see page 224\)](#) to select a valid channel, math, or reference waveform.
2. Click a Channel button to select the vertical input channel.
3. Click in the Offset entry box, and use a multipurpose knob to set the offset value.

Behavior

The main purpose of the Offset control is to avoid [clipping the waveform \(see page 363\)](#). The Offset control adjusts the DC bias level that is subtracted from the input signal of a channel and establishes the level at the vertical center of the acquisition window for that channel. Channel reference indicators always point to the offset level of the channels. Offset affects only channel waveforms, whereas the Position control affects all waveforms, including math and reference waveforms.

NOTE. *The range of vertical offset available depends on the type of probe used.*

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 359\)](#)

Using Offset to Avoid Clipping Signals

Clipping
The circled portion of the incoming waveform is clipped, and therefore, is not acquired. The clipped portion cannot be processed or displayed. Offset can move the acquisition window vertically relative to the incoming waveform.

Offset removes clipping
By setting an offset to vertically shift the acquisition positive relative to the waveform, the clipped portion can be acquired.

Termination Controls

From the Vertical menu, select Termination.

Overview

 
Use the Termination control window to select the channel input resistance.



For ≥ 4 GHz model oscilloscopes, Termination is fixed at 50 Ω .



The following screen appears on MSO/DPO5000 Series instruments:

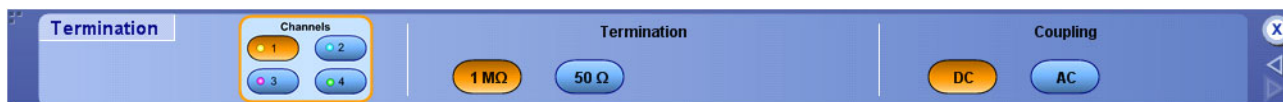

To Use

- Click a Channels button to select the vertical input channel.
- Click one of the Termination buttons to set the termination for your probe; termination can also be set during probe calibration.

NOTE. If you are using a probe with a [TekProbe/TekVPI interface \(see page 365\)](#), the termination is set automatically.

Behavior

The correct termination is set automatically when you attach a probe with a TekProbe interface to the instrument.

You may need to set the termination manually if you use a probe without the TekProbe Interface. In general:

- Select 1 MΩ to use [high impedance passive probes \(see page 365\)](#).
- Select 50 Ω to use most [active probes \(see page 365\)](#) and [low impedance \(Z_o\) probes \(see page 812\)](#).

NOTE. The 50 Ω termination becomes an open circuit if you set the channel input coupling to GND.

Consider the following when using 50 Ω termination with any channel:

- The instrument does not accurately display frequencies under 200 kHz with AC coupling, if set to 50 Ω termination.
- The instrument reduces the maximum vertical scale setting for the channel to 1 V from 10 V (to 10 V from 100 V with a 10X probe attached), since the amplitudes appropriate for the higher settings would overload the 50 Ω input.
- The instrument switches to 50 Ω and disables AC coupling (and switches coupling to DC if AC is selected) if you connect an active probe. The active probes also reduce the maximum vertical scale setting as described above. This behavior results in 50 Ω, non-AC coupling, which is appropriate for active probes.

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 366\)](#)
- [Learn more about the Bandwidth controls. \(see page 368\)](#)

TekProbe/TekVPI Interface

This interface enables the instrument to sense information about the probe such as the serial number and other unique identification information. It also allows the instrument to provide power directly to the probe.

With this information, the instrument can automatically set up its requirements to match the characteristics of the probe, such as termination and attenuation.

High Impedance Probes

Most general-purpose probes have high input impedance.

The high input resistance of passive probes (typically 10 M Ω) provides negligible DC loading and provides accurate DC amplitude measurements.

Most passive probes require the instrument input impedance to be 1 M Ω . However, their 8 pF to 12 pF (over 60 pF for 1X) capacitive loading can distort timing and phase measurements.

Use high resistance passive probes for measurements involving the following:

- Device characterization (above 15 V, thermal drift applications)
- Maximum amplitude sensitivity using 1X probe
- Large voltage range (between 15 V and 500 V)
- Qualitative or go/no-go measurements

Active Probes

Active voltage probes often contain preamplifiers that provide high resistance and low capacitance at the probe tip. Some active voltage probes contain differential amplifiers that provide high Common Mode Rejection Ratio (CMRR).

Active current probes often contain Hall-effect sensors that extend the probe bandwidth down to DC.

Many active probes, especially high frequency probes, can drive a 50 Ω instrument input.

Coupling Controls

From the Vertical menu, select Coupling.

Overview

Use the Termination control window to select the input coupling.



For ≥ 4 GHz model oscilloscopes, DC coupling is the only selection.



The following screen appears on MSO/DPO5000 Series instruments:



To Use

1. Click a Channels button to select the vertical input channel.
2. Click one of the Coupling buttons to couple the signal from the probe to the instrument.

Behavior

- Select DC coupling to display a waveform with AC and DC components.
- Select AC coupling to display a waveform with its DC component removed.
- Select GND to display a zero-volt waveform. Use this selection to establish the ground reference point on the display.

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 736\)](#)
- [Learn more about the Bandwidth controls. \(see page 368\)](#)

Deskew/Attenuation Control Window

From the Vertical menu, select Deskew or Attenuation.

Overview

Use the Deskew/Attenuation control window to compensate for propagation delays of different length probes and to set the input/output ratio of any external attenuation or gain between the signal and input channels.



To Use

Use the Deskew/Attenuation controls to change the settings after you set up the [Vertical Setup Control Window](#) (see page 355).

Deskew.

1. Connect the probes to a signal source.
2. Use the horizontal and vertical controls to center the fastest signal on the screen.
3. Click a Ch <1–4> button to select the slower channel.
4. Click in the Deskew Time entry box, and use a multipurpose knob to adjust the deskew time so the two signals align.
5. To clear the deskew value, click the Set To 0.0s button.

Each input channel has its own deskew settings. Deskew compensates individual channels for probes or cables of different lengths. The instrument applies the delay values after each completed acquisition. The deskew values are saved as part of the instrument setup. The deskew values for the selected channel will be retained until you change the probe, you restore a saved setup, or you recall the factory setup.

Attenuation.

1. Click a Ch <1–4> button to select the vertical input channel for the attached probe.
2. To set the external attenuation as a multiplier or ratio, click in the External Atten entry box and use a multipurpose knob to enter a value.
3. To set the external attenuation as dB values, click in the External Atten (dB) entry box and use a multipurpose knob to enter a value.
4. To set the external attenuation to the default value, click Set to Unity.

Each input channel has its own external attenuation settings. The attenuation control is automatically set to the correct value when you attach a probe with a TekProbe/TekVPI interface to the instrument. You can change the external attenuation by entering a multiplier or ratio with one control, or by entering a dB value with the other control.

Bandwidth Control Window

From the Vertical menu, select Bandwidth Limit.

Overview

Use the Bandwidth control window to filter unwanted high-frequency noise from the waveform and to decrease the noise bandwidth.



To Use

1. Click a Channels button to select the vertical input channel.
2. Use the drop-down list box to select the range of frequencies to acquire.

Behavior

Bandwidth refers to the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation.

Each input channel has its own bandwidth selection. Bandwidth selections with (HW) indicate a hardware/analog-only filter. See the [Vertical Setup Control Window \(see page 355\)](#) for more information on controls that affect the [bandwidth selections. \(see page 368\)](#)

To take accurate measurements, the input frequency should be much less than the rated bandwidth of the instrument. A good rule to follow is to ensure the bandwidth of the instrument system is three to five times the bandwidth of the signal that you want to measure.

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 372\)](#)

Enhanced Bandwidth

From the Vertical menu, select Bandwidth Enhanced.

Overview


The Bandwidth Enhancement controls (similar to those shown below) allow you to use DSP processing to achieve more accurate rise time measurements, to extend the bandwidth, and to flatten the passband at the full sample rate.

Enhanced Bandwidth also provides a matched response across enabled channels for channel-to-channel comparisons and differential measurements. The available bandwidth enhancement selections will vary depending on the instrument you purchased. Enhanced bandwidth is extended to the probe tip for some high performance probes and tips.


To Use

To enable Bandwidth Enhancement for a vertical input channel:

1. Select a Channel tab in the Vertical Setup window.
2. Click Digital Filters (DSP) Enabled to activate the Bandwidth Enhancement filters.
3. Click Apply to All Channels to On to apply Bandwidth Enhancement to all channels simultaneously.
4. Click Analog Only to disable Bandwidth Enhancement and return to Analog operation. The Bandwidth drop-down list adds (HW) to the selection indicating a hardware/analog-only filter.

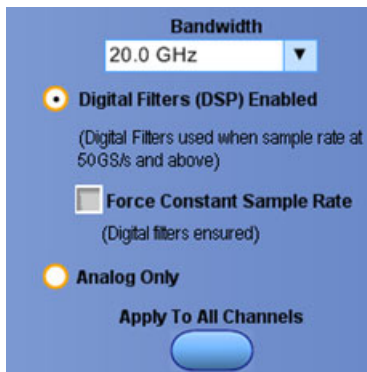

The following screen appears on MSO/DPO5000 Series instruments:

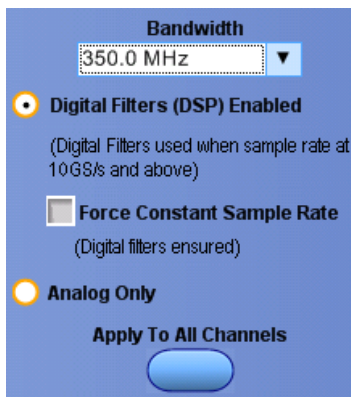

NOTE. For ≥ 3.5 GHz instrument models, the DSP filter on each channel provides magnitude and phase compensation of the analog bandwidth to provide more accurate signal fidelity for high-speed measurements. Digital Filtering (DSP) Enabled provides low-pass bandwidth filtering only to reduce noise. Refer to your oscilloscope Specifications for a list of bandwidth enhancements available for each vertical scale setting on your instrument.

The bandwidth enhance filter does not operate in FastAcq mode.

Behavior

Enhanced bandwidth, when enabled, applies independent DSP filtering to four channels.

The following settings are available:


- **Digital Filters (DSP) Enabled.** Enables the selected channel to automatically use the Digital Signal Process (DSP) filter. The **BW indicator** (see page 370) appears in the readouts when Enhanced Bandwidth is active. The BW indicator will appear in [reverse video](#) (see page 370) if the user requested bandwidth cannot be achieved.
- **Force Constant Sample Rate.** The instrument takes the constant sample rate that you set in the Horizontal control window, and applies a sample rate supported by DSP. It then enables DSP and selects the appropriate bandwidth.
- **Analog Only.** Disables the DSP filter for the selected input channel.
- **Apply to All Channels.** Applies the DSP settings of the active channel to all channels simultaneously.

TIP. To enable or disable DSP filtering for all channels at once, click the *Apply to All Channels* button after turning the Enhanced Bandwidth feature on or off.

NOTE. You may want to turn the DSP filter off to take advantage of the full analog bandwidth for analyzing and debugging multiple-lane serial devices. DSP Enabled is the Default setting.

What do you want to do next?

- [Learn more about bandwidth enhancement. \(see page 545\)](#)

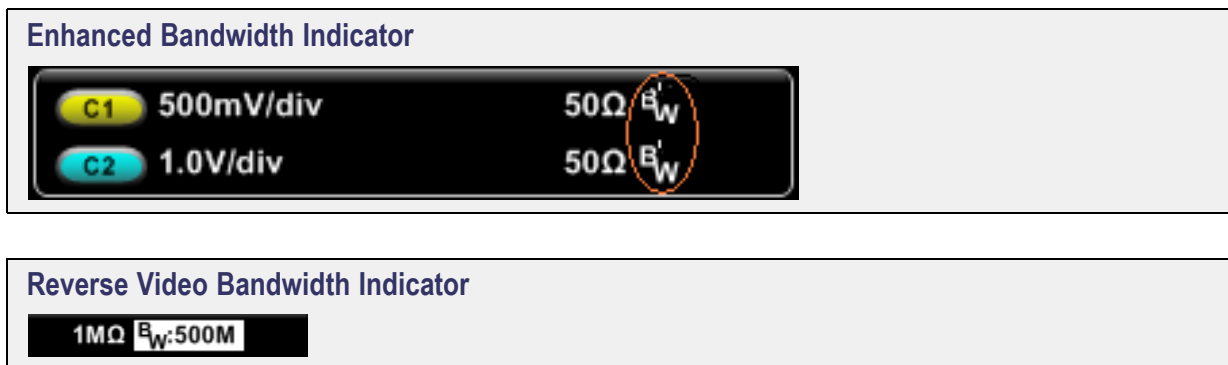


Vertical Setup Control Window: Aux Tab


From the Vertical menu, select Vertical Setup; then open the Aux tab.

Overview

The Vertical Setup Aux Tab, similar to the window shown below, reports the status of the Auxiliary trigger input. This input is located on the [instrument front panel \(see page 51\)](#).

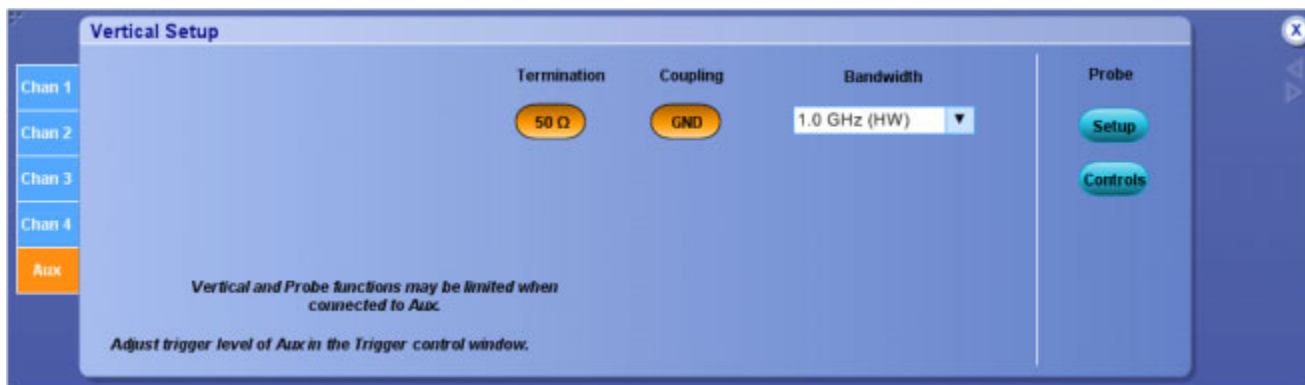

The following screen appears on MSO/DPO5000 Series instruments:

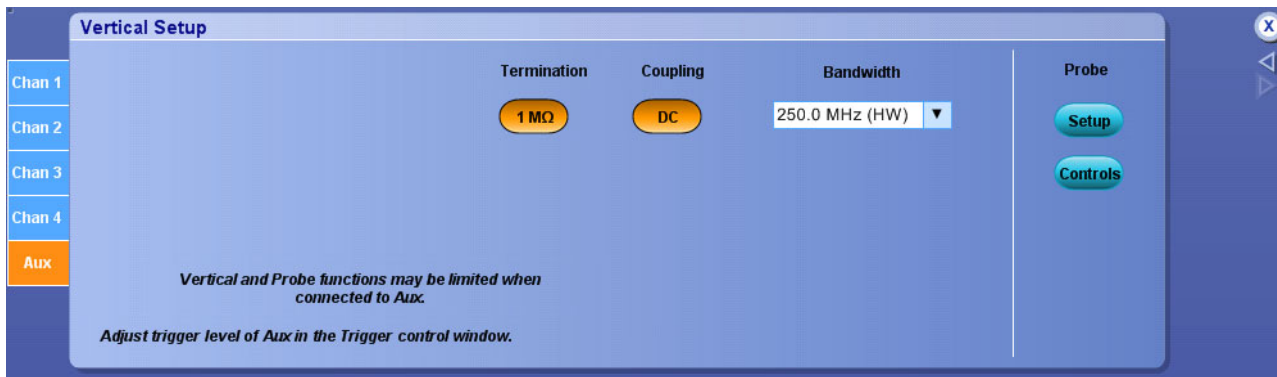

NOTE. Some instruments include a Bandwidth control. For these instruments, you can set the Auxiliary Input bandwidth in the drop-down list box.

To Use

To access the controls for this window, connect a compatible probe.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 806\)](#)

Probe Setup Control Window


From the Vertical menu, select Probe Cal.

Overview


Use the Probe Setup control window to calibrate and check probe status and to compensate the entire signal path. This will improve the probe gain and offset accuracy. Probe calibration is one of several features you can use to optimize measurement accuracy.

NOTE. *The example windows below do not show the controls for the attached probes.*

Click for <4 GHz instruments:

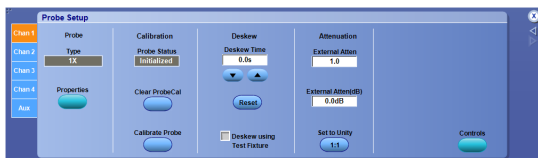

Click for ≥ 4 GHz instruments:

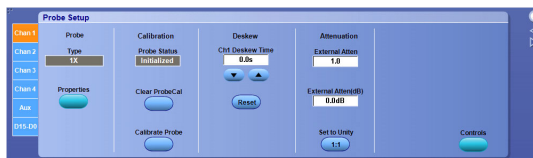

For information on the Probe Setup controls, click the buttons.

NOTE. *The Probe Status control indicates the status of probe calibration for the selected channel. If the probe status does not indicate Pass, the instrument may not take accurate measurements. You may want to perform the probe calibration procedure before taking any measurements with the selected probe.*

In addition to the probe setup above, it is recommended that you do the following to assure measurement quality:


- Use the correct probe tip for your probe. This will ensure that the correct bandwidth filter is applied and performance is extended to the probe tip.
- Use the [Probe Compensation \(see page 447\)](#) procedure to compensate passive probes. This will ensure maximum distortion-free inputs to the instrument and avoid high frequency amplitude errors.
- Use the [Signal Path Compensation \(see page 385\)](#) procedure to compensate the internal signal path used to acquire waveforms based on the ambient temperature.

Tips for Reducing Measurement Noise

- Use the least amount of attenuation. Probe noise is a function of probe attenuation, for example, using a 25X probe, versus a 5X probe, results in significantly greater noise.
- Select the lowest attenuation that displays the input voltage swing of your signal; then use the vertical scale setting to adjust the waveform display on screen, as needed.
- Use a lower bandwidth probe to reduce noise.
- Reduce the vertical bandwidth of your oscilloscope. In general, a bandwidth 3 to 5 times the fundamental frequency of the waveform is a good compromise, allowing capture of harmonic content while minimizing noise.

What do you want to do next?

- [Learn more about the Probe Status indicator. \(see page 384\)](#)
- [Learn more about the Probe Calibration controls. \(see page 376\)](#)
- [Go to a step-by-step procedure to calibrate active probes. \(see page 445\)](#)
- [Go to a step-by-step procedure to calibrate passive probes. \(see page 446\)](#)
- [Learn more about the Vertical controls. \(see page 379\)](#)

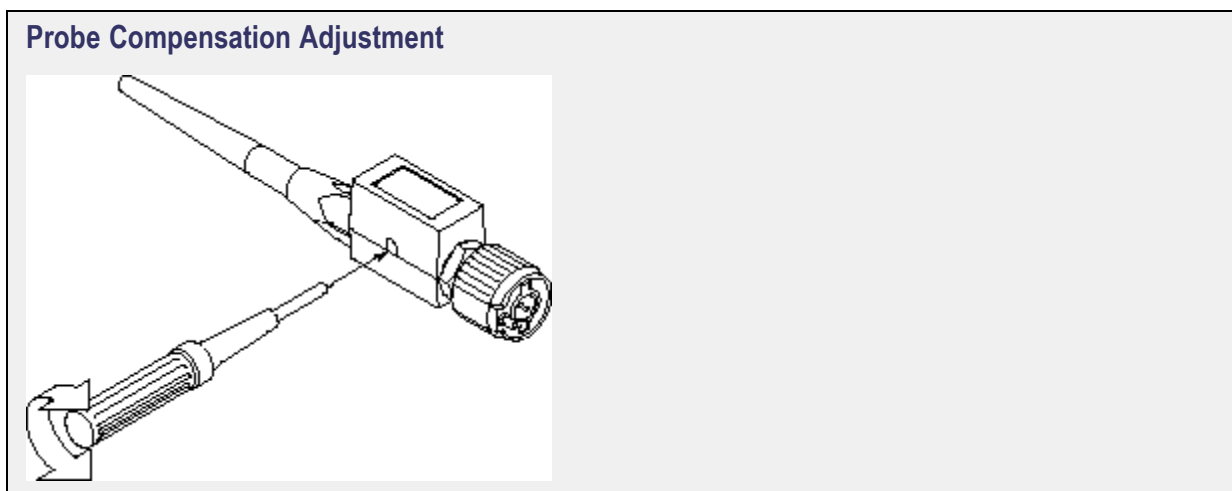

Signal Path Compensation Status	
The following table lists the possible calibration status messages for signal path compensation and the recommended action.	
Status	Meaning and recommended action
Pass	The instrument had warmed up for 20 minutes, there were no failures during the signal path compensation procedure, and the current operating temperature is within 5 °C of the operating temperature when the previous signal path compensation was run.
Fail	One or more failures occurred during the signal path compensation procedure. Contact your local Tektronix service representative for further action.
Temp	The operating temperature is not within 5 °C of the previous signal path compensation.
Warmup	The instrument has not warmed up for 20 minutes. Wait for the instrument to warm up for at least 20 minutes before running the signal path compensation procedure.

Probe Setup Control Window: Setup Type


From the Vertical menu, select Probe Controls, and then click the Setup button.

NOTE. You must attach an appropriate probe to the logic probe port or to the Ch1-Ch4 vertical input to activate this setup window.


Overview

Use the Probe Setup control window to configure a probe that you connect to the vertical input.

Click for <4 GHz instruments:

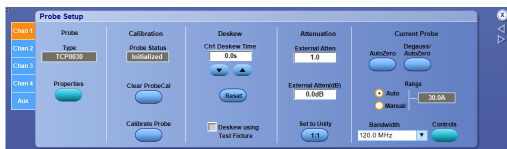

Click for ≥4 GHz instruments:

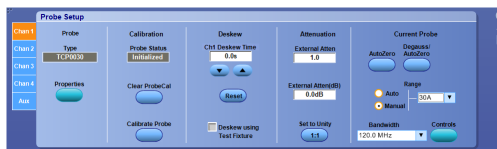

For information on the Probe Setup controls, click the button.

To Use

1. Connect a probe to a vertical input.
2. Press a front panel Ch <1–4> button to activate the channel.

3. In the Probe Setup window, click a Chan <1–4> tab to activate the controls for the input source.
4. Configure the controls for the probe type you attached.

What do you want to do next?

- [Learn more about the Vertical controls. \(see page 380\)](#)

Probe Setup Control Window: D15-D0 Tab

NOTE. The Probe Setup Control Window: D15-D0 Tab is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

From the Vertical menu, select Probe Controls, click the Setup button, and then open the D15-D0 tab.

NOTE. You must attach a logic probe to the logic probe port on the front panel to activate this setup window.


Overview

Use the Probe Setup control window to align the instrument trigger path to optimize measurement accuracy. The logic probe input for channels D15-D0 is located on the [instrument front panel \(see page 51\)](#).

The instrument requires the Logic Probe Deskew Fixture (Tektronix part number 067-2083-XX) to deskew the logic probe trigger path.

To Use

For information on the controls, click the buttons.

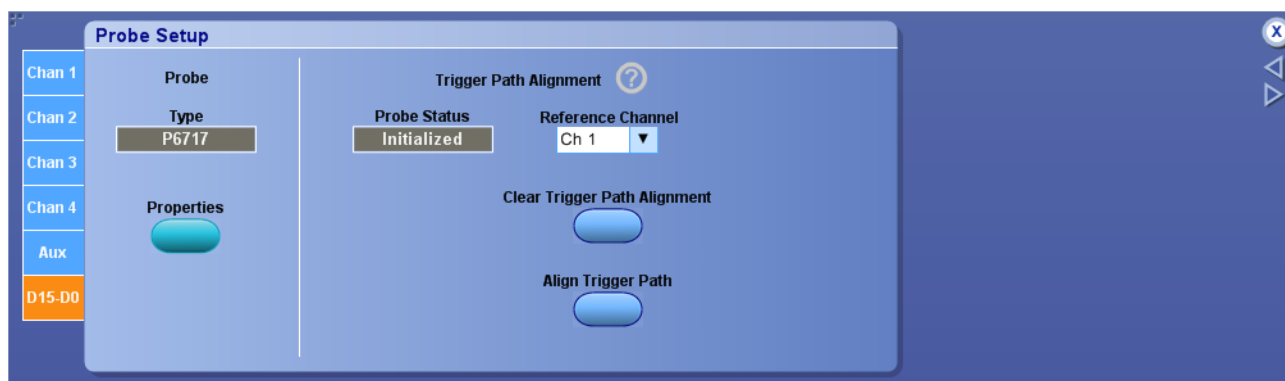

To Use

1. Connect a logic probe to the logic probe port on the front panel.
2. From the Digital menu, select Digital Setup.
3. Click the D7-D0 or the D15-D8 tab, and then the desired digital channel buttons to activate the controls for the logic source.
4. From the Vertical menu, select Probe Controls, and then click the Setup button.
5. Click the Properties button to display information on the logic probe and the status of the trigger path alignment.

What do you want to do next?

- [Learn about setting up the digital channels. \(see page 82\)](#)
- [Learn about digital setups. \(see page 81\)](#)
- [Learn about setting up a bus. \(see page 89\)](#)


Probe Setup Control Window: Probe Calibration

From the Vertical menu, select Probe Cal.


Overview

Use the Probe Setup control window to compensate a probe; this will improve the gain and offset accuracy. Probe calibration is specific to the channel to which it is connected.

Click for <4 GHz instruments:

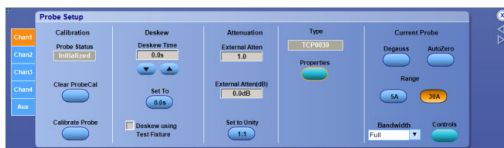

Click for ≥4 GHz instruments:

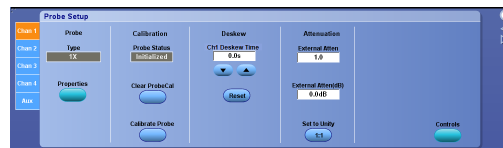

To Use

1. Connect a probe to a vertical input.
2. Press a front panel Ch <1–4> button to activate the channel.
3. In the Probe Setup window, click a Chan <1–4> tab to activate the controls for the input source.
4. Select the probe Type for the appropriate signal and ground connections of the probe compensation terminals.

For some probes, click the [Probe Tip Select button \(see page 378\)](#) and select the tip that matches the one you are using.

5. Click Clear Probe Cal to clear the old calibration values.
6. Click Calibrate Probe to begin the calibration procedure.

Behavior

When you perform a probe calibration on the selected channel, you optimize the instrument to make accurate measurements for that channel and probe. The probe calibration makes significant performance improvements when performed with active probes or older passive probes.

You can perform a probe calibration at any time to ensure measurements are taken with the highest possible accuracy. Perform a probe calibration if you have changed probes since the last time a probe calibration was performed.

TIP. *If you are compensating a passive probe, you must first compensate the low-frequency response of the probe. Refer to the Probe Compensation Procedure for more information.*

Some types of probes can be gain compensated, some can be offset compensated, and some can be compensated for both. If the probe has a [TekProbe/TekVPI interface \(see page 365\)](#), the instrument can determine the type of compensation needed and will display the appropriate instructions when you perform the probe calibration procedure. Some probes cannot be compensated; for information on these probes, refer to probe calibration restrictions.

Some probes cannot be calibrated or compensated. This might be because the probes have an attenuation factor greater than 20X. You will get an error message if you try to compensate such a probe.

The instrument cannot compensate for probes that may have gain and/or offset errors that are too great (>2% or >50 mV offset). If these errors are within the specified limits of your probe, you may want to use another probe. If the errors are outside the limits, have your probe checked by service personnel.

Probe calibration is not recommended for the P5050 passive probe. This probe typically has little gain and offset error, and therefore, the performance improvement after a probe calibration is not worth the time needed to do the probe calibration.

What do you want to do next?

- [Go to a step-by-step procedure to calibrate active probes. \(see page 445\)](#)
- [Go to a step-by-step procedure to calibrate passive probes. \(see page 446\)](#)
- [Learn more about the Vertical controls. \(see page 379\)](#)

Probe Setup Control Window: Probe Tip Selection

From the Vertical menu, select Probe Cal, and then click the Probe Tip Select button.

NOTE. Some probes have more than one type of probe tip available. The type of probe tips in the selection window change according to the probe connected to the instrument. Refer to the probe instructions manual for more information on the tips available for your probe.


To Use

1. Select the type of probe tip to match the one you are using.
2. Click OK.

Here is an example of Probe Tip for Tektronix P73XX probe.



Here is an example of Probe Tip for Tektronix Trimode probe.

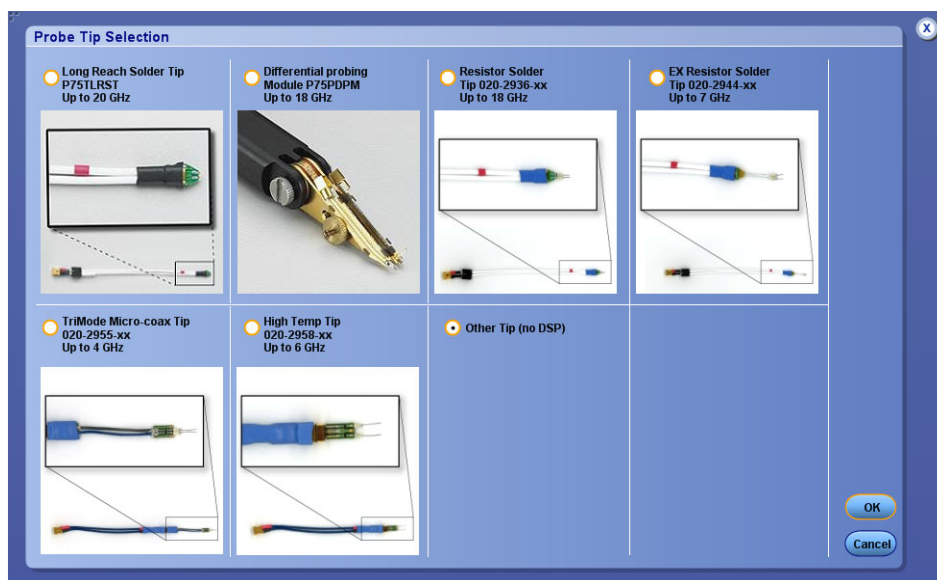


Probe Setup Control Window: Probe Deskew

From the Vertical menu, select Deskew.


Overview

Use the Probe Setup control window to compensate for propagation delays of different length probes connected to the vertical input channels.

Click for <4 GHz instruments:

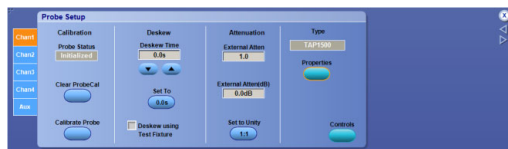

Click for ≥ 4 GHz instruments:

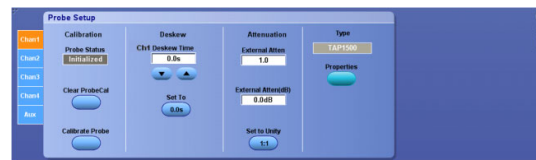

NOTE. To compensate for timing differences between voltage and current probes, order the following Probe Calibration and Deskew Fixtures:

Tektronix part number 067-0405-XX (for <4 GHz oscilloscopes).

Tektronix part number 067-1586-XX (for ≥ 4 GHz oscilloscopes).

Tektronix part number 067-2083-XX (for MSO Series instruments) to deskew the logic probe trigger path.

The fixtures may require a user-supplied pulse generator.

To Use

1. Connect the probes to a signal source.
2. Use the horizontal and vertical controls to center the fastest signal on the screen.
3. Click a Chan <1–4> tab to select the slower channel.
4. Click in the Deskew Time entry box, and use a multipurpose knob to adjust the deskew time so that the two signals align.
5. To clear the deskew value, click the Set To 0.0 s button.

Behavior

Each input channel has its own deskew settings. Deskew compensates individual channels for probes or cables of different lengths. The instrument applies the delay values after each completed acquisition. The deskew values, which have a range of ± 75 ns, do not affect triggering. Deskew is available for Sample and Average acquisition modes only.

The deskew values are saved as part of the instrument setup. The deskew values for the selected channel will be retained until you change the probe, you restore a saved setup, or you recall the factory setup.

What do you want to do next?

- [Go to a step-by-step procedure to deskew the probes. \(see page 448\)](#)
- [Learn more about the Vertical controls. \(see page 380\)](#)


Probe Setup Control Window: Probe Attenuation

From the Vertical menu, select Attenuation.


Overview

Use the Probe Setup control window to describe the input/output ratio of any external attenuation or gain between the signal and input channels.

Click for <4 GHz instruments:

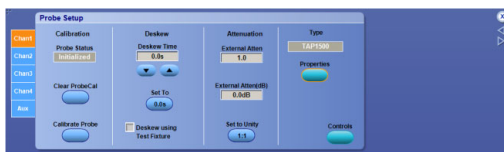

Click for ≥ 4 GHz instruments:

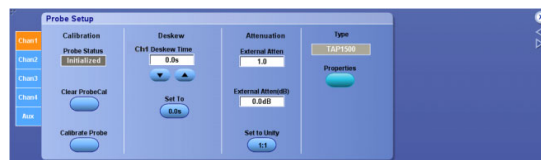

To Use

1. Click a Chan <1–4> tab to select the vertical input channel for the attached probe.
2. To set the external attenuation as a multiplier or ratio, click in the External Atten entry box and use a multipurpose knob to enter a value.
3. To set the external attenuation as dB values, click in the External Atten (dB) entry box and use a multipurpose knob to enter a value.
4. To set the external attenuation to the default value, click Set to Unity.

Behavior

Each input channel has its own external attenuation settings. The attenuation control is automatically set to the correct value when you attach a probe with a [TekProbe/TekVPI interface \(see page 365\)](#) to the instrument. You can change the external attenuation by entering a multiplier or ratio in the top control, or by entering a dB value in the lower control.

When you return the attenuation to the default value, the multiplier returns to 1, and the dB value returns to zero.

What do you want to do next?

- [Return to the Vertical Setup control window overview. \(see page 355\)](#)

Probe Controls Window

 
From the Vertical menu, select Probe Controls.

NOTE. You must attach a probe to the D15-D0 digital vertical inputs, or to a Ch <1–4> vertical input and press a Ch <1–4> front-panel button to activate the Probe Controls window for a specific channel.

Overview

Use the controls in these windows to operate a probe while taking measurements.

The type of probe you connect determines the available controls. For example, the window below contains controls for a Tektronix current probe.

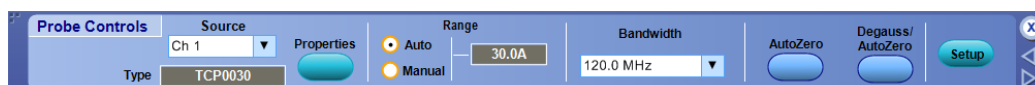

The following window contains controls for Tektronix TAP1500/TAP2500 type probes.



 
This window contains controls for Tektronix TriMode probes.



This window contains controls for Tektronix logic probes.



This window contains controls for Tektronix generic probes.

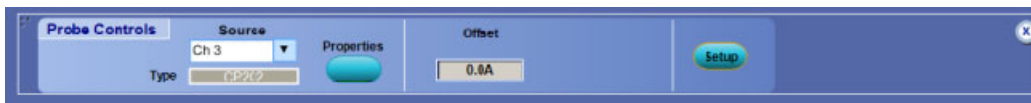

Probe Properties

From the Vertical menu, select Probe Controls, click the Setup button, and then click the Properties button.


To Use

The Probe Properties dialog displays information on the probe attached to the analog or to the digital channels. To view the probe information, select the channel of interest from the drop-down list of channels under Probe.

The dialog includes the following information for analog probes:

- Type of probe connected to the selected channel
- Serial number of the attached probe (for probes with serial numbers)
- Status information, such as the time you connected the probe, the probe type, the serial number, and calibration results


NOTE. When the probe is calibrated, the instrument polls the probe and displays the serial number. An N/A indicates that the probe has not been calibrated.

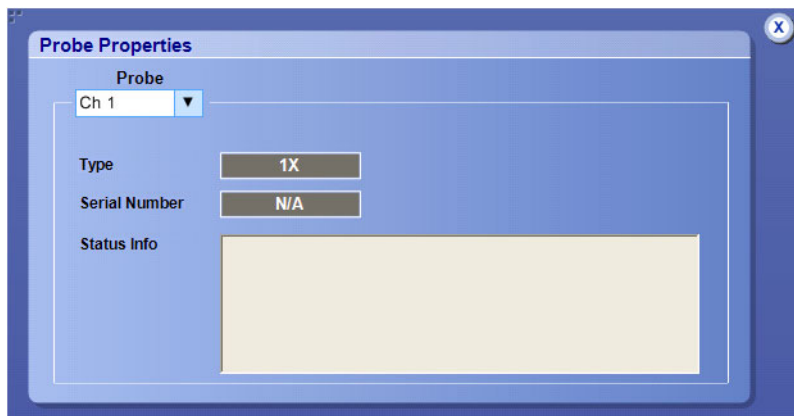

The Probe Properties dialog includes the following information for logic probes:

- Type of logic probe connected
- Serial number of the logic probe
- Analog channel selected as the Reference Channel
- Type of probe connected to the Reference Channel
- Status of the Analog to Digital Trigger Path Alignment routine

NOTE. The instrument requires the Logic Probe Des skew Fixture (Tektronix part number 067-2083-XX) to run the Analog to Digital Trigger Path Alignment routine.

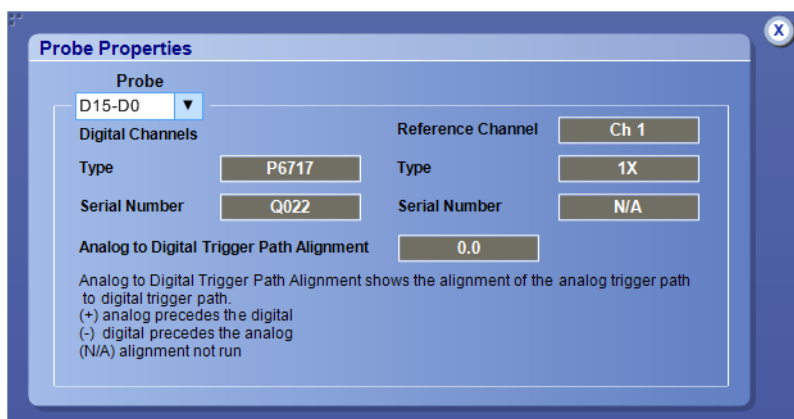

The instrument displays the following information in the Analog to Digital Trigger Path Alignment field:

- N/A means that the trigger path alignment routine has not been run
- Numeric value for the amount of time the instrument needs to skew the channel to align the logic trigger path to the reference channel


- (+) indicates that the analog trigger path occurs before the logic path
- (-) indicates that the logic trigger path occurs before the analog path

Probe Setup Control Window: Probe Status

From the Vertical menu, select Probe Cal.

To Use

The Probe Status readout provides information on the status of the probe connected to the vertical input channel.

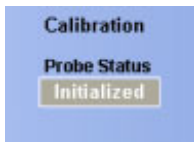

Behavior

The instrument automatically detects the type of probe that you have installed and displays the probe status information.

- **Initialized.** The instrument has no calibration data on file for this probe, on this channel, and is applying factory-nominal corrections for probe operation only. This message may appear if you connect a probe and have not performed the probe calibration. Perform a probe calibration before you using this probe. This message also appears when you disconnect a probe from the vertical input.
- **Pass.** Calibration data for the probe connected to this channel is available from the most recent probe calibration or the calibration data has been retrieved from nonvolatile memory.
- **Fail.** The instrument was unable to complete the probe calibration procedure; the probe may be faulty. Have the probe checked by Tektronix service personnel.

NOTE. The instrument must pass a [signal path compensation \(see page 385\)](#) procedure before it will perform a probe calibration procedure.

What do you want to do next?

- [Learn more about the Probe Calibration controls. \(see page 376\)](#)
- [Go to a step-by-step procedure to calibrate active probes. \(see page 445\)](#)
- [Go to a step-by-step procedure to calibrate passive probes. \(see page 446\)](#)
- [Learn more about the Vertical controls. \(see page 379\)](#)

Signal Path Compensation

Use the following procedure to compensate the internal signal acquisition. Perform this procedure if the ambient temperature has changed more than 5 °C (9 °F) since you performed the last signal path compensation.

1. Power on and warm up the instrument for 20 minutes before continuing with this procedure.
2. Disconnect any probes that you have connected to the input channels.
3. Set the instrument to Menu mode.
4. Select Instrument Calibration from the Utilities menu.
5. Note any instructions that appear under Calibration Instructions in the resulting control window.
6. Click Calibrate to begin the procedure. The procedure may take several minutes to complete.
7. Verify that the Status changes to Pass after the procedure is complete. If the Calibration Status field indicates anything other than Pass, see [Signal Path Compensation Status \(see page 374\)](#) for information on the readout and recommended action.


NOTE. *When making measurements at vertical scale settings less than or equal to 5 mV, you should perform the signal path compensation at least once a week. Failure to do so may result in the instrument not meeting warranted performance levels at those volts/div settings.*

Copy Setup: Images

From the Edit menu, select Copy Setup; then open the Images tab.

Overview

Use this control window to copy images to the clipboard for use with other applications.

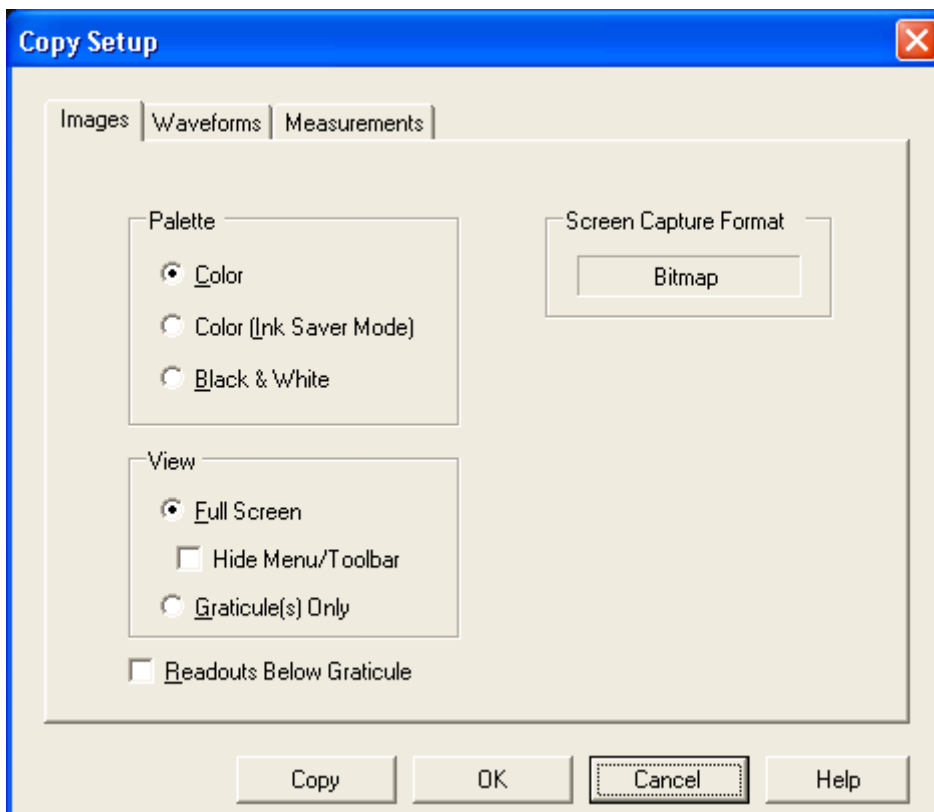

To Use

1. Select the Palette for the image:
 - Color
 - Color (Ink Saver Mode)
 - Black & White
2. Select the type of View:
 - Full Screen. Copies an image of the entire screen.
 - Graticule(s) Only. Copies an image of the selected graticule.
3. Click the Hide Menu/Toolbar check box to save the image without including the Menu bar or Toolbar.
4. Click OK.

Behavior

The Palette, View, and Image selections are identical to those in the Page Setup dialog box and in the Screen Capture Save Options dialog box.

The copy operation takes place after you click Copy. Clicking OK saves the changes and closes the dialog box but does not copy the image.

NOTE. *Bitmap (.bmp) is the only available Data Format.*

What do you want to do next?


- [Learn about copying waveforms. \(see page 388\)](#)
- [Learn about copying measurements. \(see page 390\)](#)
- [Learn about saving images to a file. \(see page 407\)](#)

Copy Setup: Waveforms

From the Edit menu, select Copy Setup; then open the Waveforms tab.

Overview

Use this control window to copy waveforms to the clipboard for use with other applications.

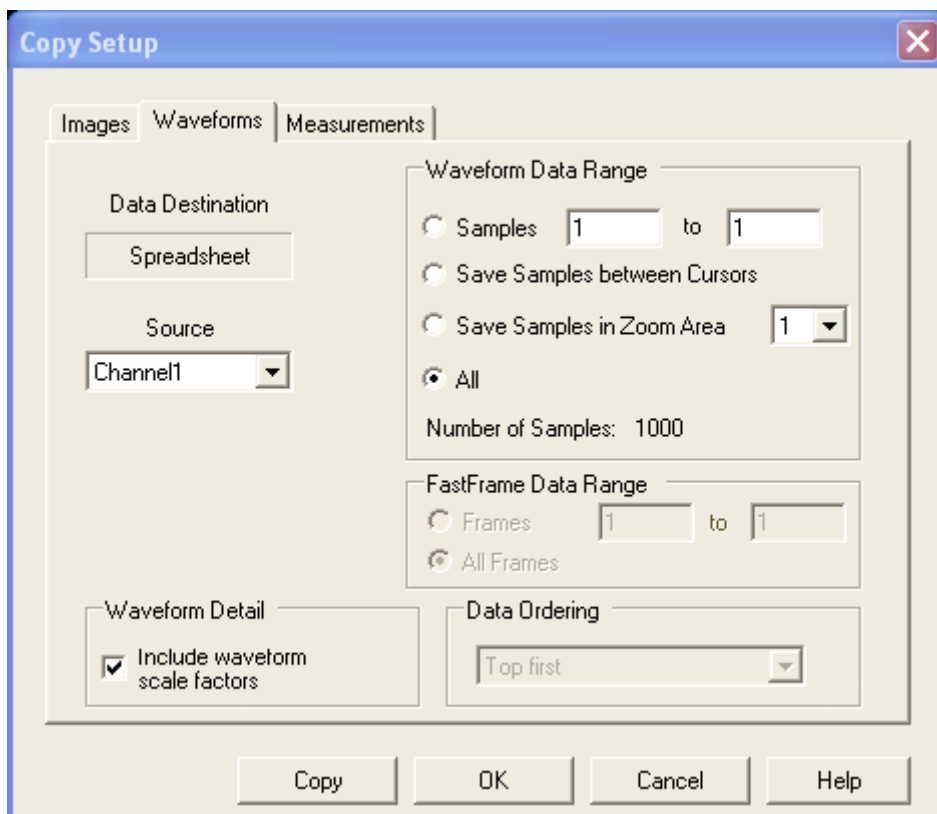

To Use

- The Data Destination (data format) is Spreadsheet only.
- Select a valid waveform from the Source list.
- Select the number of samples you want to copy. Select All samples, a range of samples, or only the samples between the cursors. If you select Save Samples between Cursors, you can use the multipurpose knobs to adjust the positions if the cursors are already active. If they are not, the cursors will be turned on at the positions they were in the last time they were used.
- Select the Include waveform scale factors check box if you want to include waveform details, such as header information (record length, sample interval, trigger point information, and so on). If you only want to include the waveform voltage values, clear the selection.
- Specify the FastFrame Data Range if you are copying FastFrame data.

If you are copying Fast Acquisition data, select the data ordering from the list.

Behavior

- The Waveform curve data range can be anywhere from one sample to the record length of the selected waveform.
- The copy operation takes place after you click Copy.
- If you select Data between cursors, another set of cursors may temporarily appear on your screen while the copy is in progress.

What do you want to do next?


- [Learn about copying images. \(see page 387\)](#)
- [Learn about copying measurements. \(see page 390\)](#)
- [Learn about saving waveforms to a file. \(see page 727\)](#)

Copy Setup: Measurements

From the Edit menu, select Copy Setup; then open the Measurements tab.

Overview

Use this control window to copy measurements to the clipboard for use with other applications.

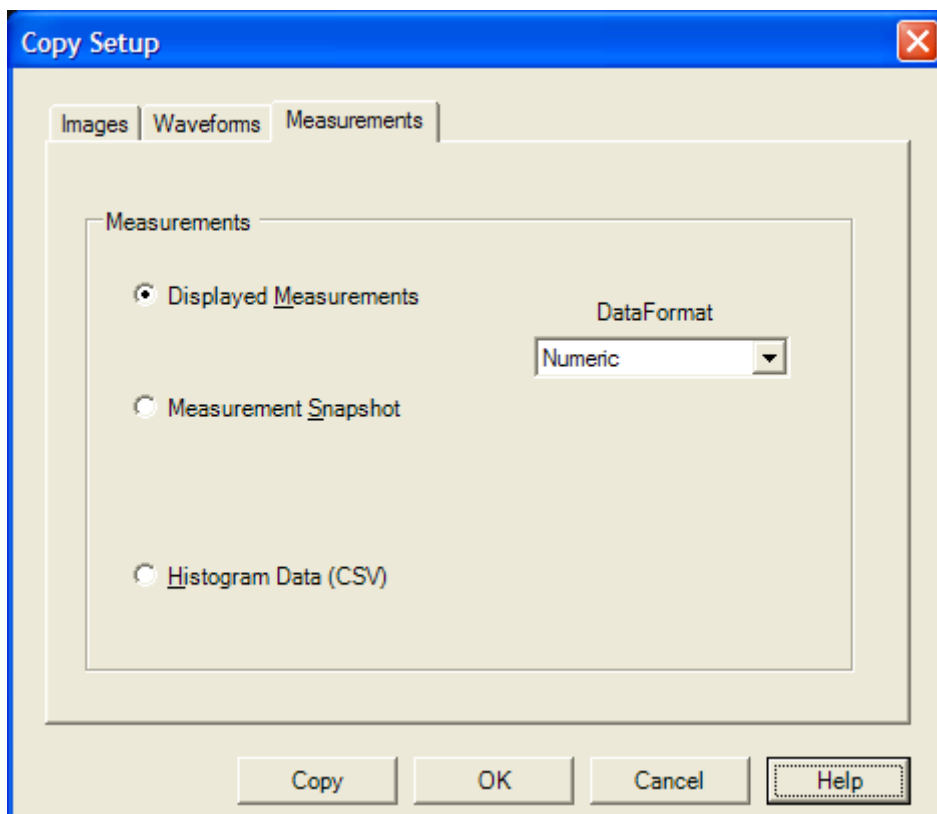

To Use

1. Click the type of Measurements you want to copy.
2. For Displayed Measurements, select the Data Format.
3. Click OK.

Behavior

When you select Displayed Measurements, all displayed measurements will be copied to the clipboard.

NOTE. For Histogram Data, the data format is always CSV.

The copy operation takes place after you click Copy. Clicking the OK button accepts the changes and closes the dialog box but does not copy the measurements.

What do you want to do next?

- [Learn about copying images. \(see page 387\)](#)
- [Learn about copying waveforms. \(see page 388\)](#)

- [Learn about saving measurements to a file. \(see page 405\)](#)
- [Learn more about CSV text format. \(see page 730\)](#)

Copying the Screen for Use in Other Applications

Use the following steps to copy the contents of the screen for use in other applications, such as WordPad, Microsoft Word, or Paint.

1. From the Edit menu, click Copy Setup.
2. Open the Images tab.
3. Select the Palette, View, and Image as needed for your application.
4. Click Copy to paste the image to the clipboard. You can now paste the bitmap image into other applications.
5. If you want to copy another image to the clipboard, click Copy on the Edit menu or press Ctrl+C on the attached keyboard.

NOTE. *If you try saving a copy of the screen to the clipboard by pressing the PrtScn button on the attached keyboard, the bitmap image will not contain any waveforms. Use the procedure above to save a copy of the entire screen (or the graticule) to the clipboard.*

TIP. *If your setup information does not change, you do not need to open the Copy Setup dialog box each time you want to copy a screen. Use the Edit menu Select for Copy option if you need to change the type of items, for example, to copy waveforms instead of images.*

Copying Measurements for Use in Other Applications

Use the following steps to copy the measurements for use in other applications such as WordPad or Microsoft Word.

1. From the Edit menu click Copy Setup.
2. Open the Measurements tab.
3. Select either Displayed Measurements (make sure that measurements are displayed in the graticule via the Measurement Control window) or Histogram Data.
4. If you clicked the Displayed Measurements option, select the Data Format, either Numeric or Text.
5. Click Copy to paste the measurements to the clipboard. You can now paste the measurements into your other applications.

Page Setup Dialog Box


From the File menu, select Page Setup.

Overview

Use the Page Setup dialog box to define the page before sending it to a printer.

To Use

The controls in this window are similar to the Page Setup dialog boxes used in most Windows applications (see example below).

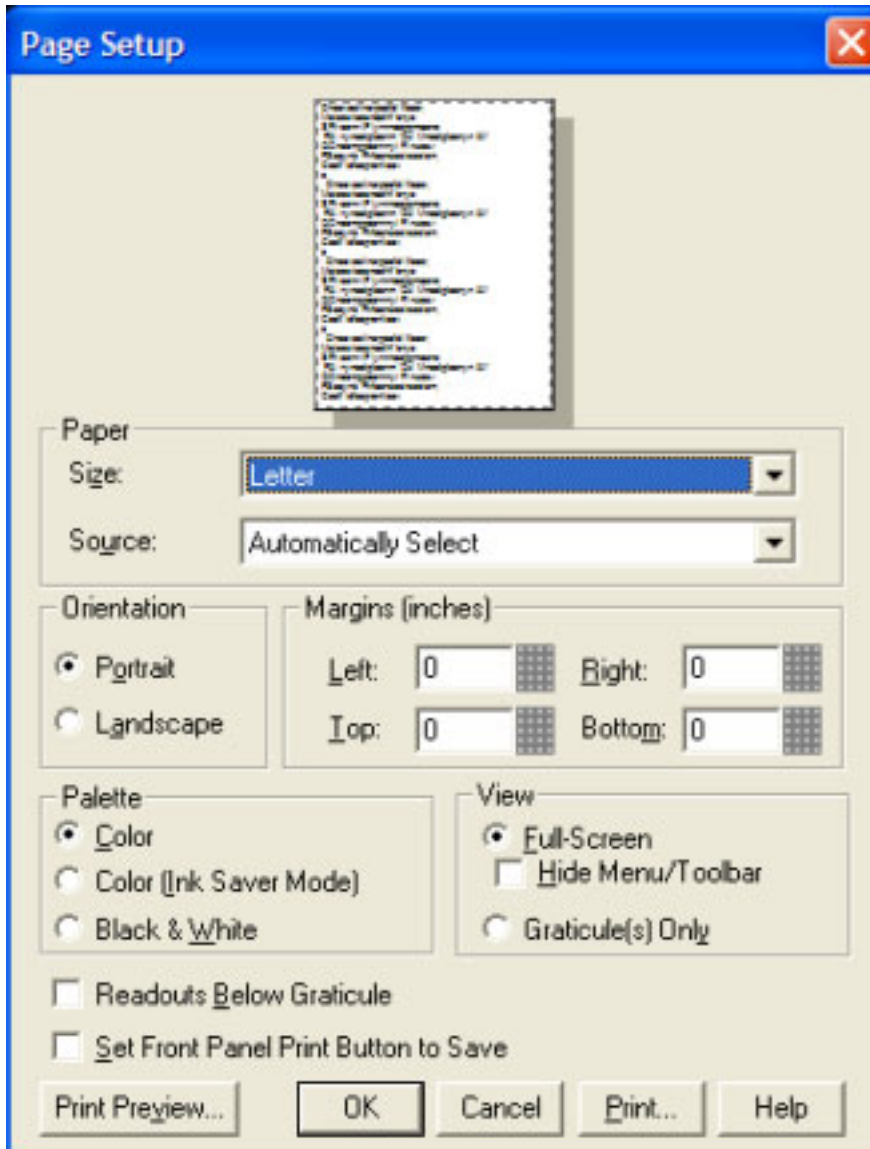

The Paper settings are dependent on the type of printer connected to the instrument. A reduced preview image appears at the top of the window. To view a larger image, click Print Preview at the bottom of the window.

Click the Print button when you have selected all of your desired settings.

Behavior

The Type of printing should be Screen-copy for all screen shots.

Print Preview Dialog Box

From the File menu, select Print Preview.

Overview

Use the Print Preview dialog box to preview an image before sending the data to a printer.

To Use

- Use the Magnify control at the top of the window to zoom in and out to view the details of the image.
- To return to the Page Setup dialog box, click the down arrow.
- Click the Printer button to open the Print dialog box.

Print Dialog Box

From the File menu, select Print.

Overview

Use the Print dialog box to send data to a printer.

To Use

The controls in this window are similar to the Print dialog boxes used in most Windows applications. The settings are dependent on the type of printer connected to the instrument.




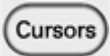 
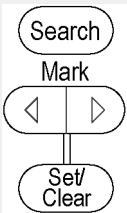
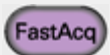 

Printing the Screen to a Printer

The easiest way to print the contents of the screen is to press the front panel [Print button \(see page 396\)](#). The instrument will print the screen contents according to the settings in the Page Setup dialog.

1. Use the File menu Page Setup dialog to select the Type of printing, Palette, View, and Image before printing. The Type should be Screen-copy, the default.
2. Use the Print Preview feature to test the appearance of the screen before printing. For example, you may want to experiment with the different palettes before sending the data to the printer.
3. Click Print in either the Print Preview dialog box or in the Page Setup dialog box to open the Print dialog box.
4. Click OK to begin printing.

General Purpose Controls

Use the following front-panel controls to perform general-purpose tasks such as Autoset the instrument, send items to the printer, or enable cursors.

<p>Autoset</p> 	<p>Push the Autoset button to automatically set up the instrument to obtain and display a stable waveform of usable size. For information on the Autoset default settings click Autoset (see page 163).</p>
<p>Default Setup</p> 	<p>Push the Default Setup button to reset the instrument to the factory default settings.</p>
<p>Print</p> 	<p>Push the Print button to make a hard copy of the screen. The printed image is sent directly to the selected (internal or attached) printer. To change the print settings, click the File menu Print command, and change the settings in the Print dialog box.</p>
<p>Cursors</p> 	<p>Push the Cursors button to enable cursors on the screen. The Cursor Type control window (see page 67) opens so that you can specify the cursor parameters.</p>
<p>Search Mark</p> 	<p>Push the Search and Mark buttons to find and place a mark on a waveform at a point of interest, or to edit marks. You can return to a mark and analyze the waveform at a later time.</p>
<p>FastAcq</p> 	<p>Push the FastAcq DPX button to turn Fast Acquisition On or Off. The FastAcq button is lighted when Fast Acquisition is turned on.</p>
<p>Intensity</p> 	<p>Use the Intensity knob to adjust the brightness of the waveform. High intensity settings show less frequently acquired points more clearly.</p>

Reference Waveform Controls

From the File menu, select Reference Waveform Controls.

Overview

Use the Reference control window to display and control reference waveforms. Reference waveforms are shown with the horizontal settings in effect at the time they are saved.

NOTE. Reference waveforms are only available for analog channels.



To Use

1. Select the Ref <1–4> waveform from the drop-down list.
2. Click the On button to display the waveform.
3. Click in the Vert Position or Scale entry boxes. and then use the multipurpose knobs to make adjustments.
4. Click in the Label entry box, and then use the pop-up keypad to create a label for the waveform.
5. Click the Save button to access the Save As dialog box and save the waveform as a Reference waveform or save it to a file.
6. Click the Recall button to access the Recall dialog box and recall a waveform from memory.

Behavior

Clicking Save or Recall buttons activates the respective dialog boxes. Typing a name in the Label text box places the label on the graticule. You can move the label on the graticule by clicking and dragging it. The label is saved with the Reference waveform.

TIP. To easily change the vertical position of a reference waveform, click the waveform handle on the left side of the screen, and drag the waveform to the new position. To easily change the vertical scale of a reference waveform, click the waveform handle, and then use the multipurpose knobs to change the waveform scale. You can also use the multipurpose knobs to change the waveform position.

What do you want to do next?


- [Learn how to create a reference waveform. \(see page 497\)](#)
- [Learn about instrument setups. \(see page 403\)](#)
- [Learn about saving reference waveforms to a file. \(see page 411\)](#)
- [Learn about restoring waveforms from a file. \(see page 398\)](#)
- [Learn about deleting waveform files. \(see page 401\)](#)

Recall Dialog Box: Waveform

From the File menu, select Recall, or from the [Reference Waveform controls \(see page 397\)](#), click the Recall button.

Overview

Use this dialog box to recall a saved waveform file to a reference location.

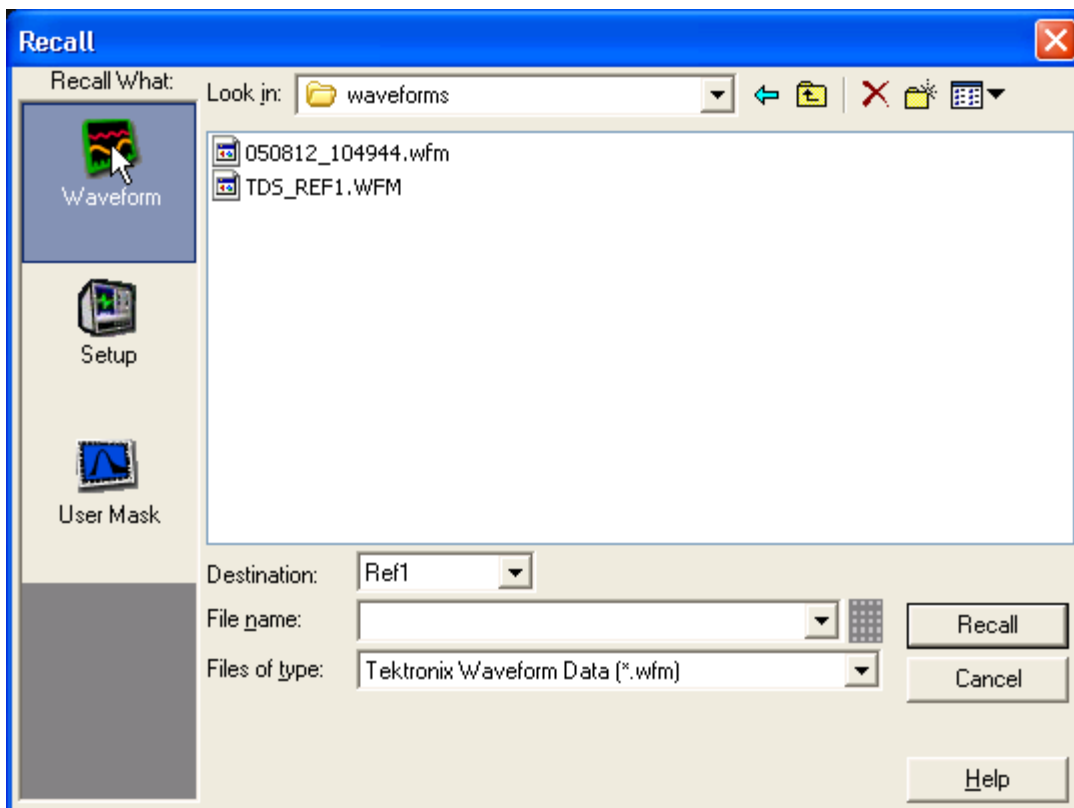

To Use

- Under Recall What, click Waveform.
- From the Destination drop-down list, select the Ref <1– 4> location that you want to recall the waveform to. The default folder for reference waveforms is C:\TekScope\waveforms.
- Use the pop-up keyboard to enter a File name, or click the file name to select it.

TIP. *If you do not see the file that you want to recall, verify that the Files of type list shows the correct file format. You may also need to check other folders if the file was stored in a location other than the C:\TekScope\Waveforms folder.*

Behavior

This dialog box opens when you click Recall from the File menu or when you click the Recall button from the Reference waveform controls. Waveforms are stored in WFM file format, which is an internal format of the instrument. When you click Recall, the Ref 1-4 waveform is displayed in the graticule.

NOTE. *When you recall a reference waveform, a temporary file containing the waveform data is written to C:\TekScope\Waveforms. The file is named TDS_REF n.WFM, where n is the reference waveform number. This file is deleted when the reference waveform is deleted.*

What do you want to do next?


- [Learn about saving a waveform to a file. \(see page 411\)](#)
- [Learn about deleting waveform files. \(see page 401\)](#)

Recall Dialog Box: Instrument Setups

From File menu, select Recall, or from the [Reference Waveform controls \(see page 397\)](#), click the Recall button.

Overview

Use the Recall dialog box to recall an instrument setup.

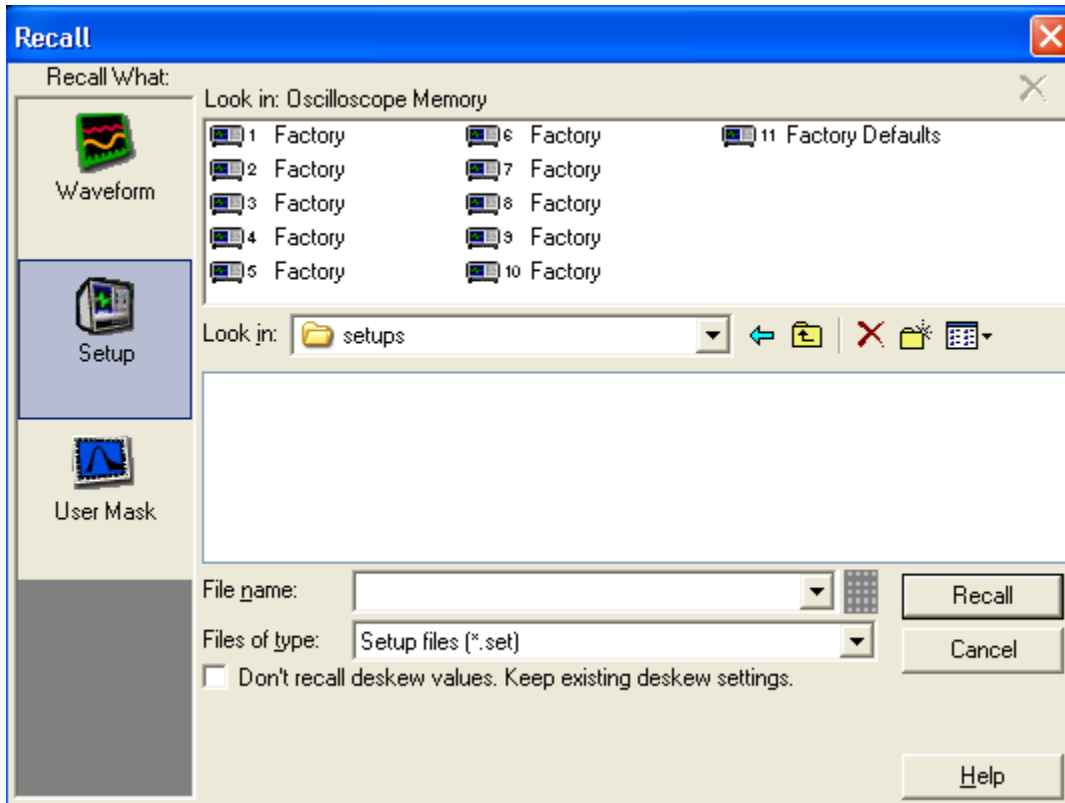

To Use

Setups are recalled from an internal file on your hard drive or from a setup file that you have named.

- Under Recall What, click Setup.
- Click one of the icons under Look in: Oscilloscope Memory, and then click the Recall button to restore the setup.
- Click the Factory Defaults icon to recall the default factory setup for the instrument.

TIP. Select the File menu Recall Default Setup command to instantly restore the default setup.

To recall an instrument setup from a file, select the location of the setup from the Look in list. Select the setup you want to recall, and then click Recall.

Behavior

The setups are restored from an internal file on your hard drive as soon as you click the Recall button. The labels adjacent to the icons were created when the setups were first saved. Any of the setups with the label "Factory" will restore the default factory setups.

The data in reference waveforms is not saved with the instrument setup. However, the setup information does include which reference waveforms are turned on and which reference waveforms are used with math waveforms and automatic measurements. If you want to [save the reference waveform data \(see page 411\)](#), save the reference waveform separate from the instrument setup. You can then recall the saved waveform to the setup from the [Reference Waveform Controls \(see page 397\)](#).

NOTE. *If a restored setup attempts to use an undefined reference waveform (or to use it in a math waveform or with an automatic measurement), then an undefined reference waveform is created. This reference waveform becomes a 500-point waveform filled with null data. Any math waveforms or any measurements done on this waveform will contain invalid or unusable data. However, you can recall a valid saved waveform to the new reference waveform so that the math waveforms and the automatic measurements will become valid.*

What do you want to do next?

- [Learn about saving instrument setups. \(see page 403\)](#)
- [Learn about deleting instrument setups. \(see page 401\)](#)

Delete Setups and Reference Waveforms

From the File menu highlight Delete; then select an entry in the submenu.


Overview

Use this dialog box to delete a saved reference waveform or setup file.

To Use

- Select the setup or reference waveform you want to delete.
- To delete all Setups at the same time, select All Setups
- To delete All Reference Waveforms at one time, select All Refs.

Behavior

Setups or waveforms stored in Windows directories can be deleted by clicking the  in the Save or Recall dialog boxes.

NOTE. *You can only delete setups and reference waveforms stored in oscilloscope memory using this command.*

What do you want to do next?

- [Learn about saving instrument setups. \(see page 403\)](#)
- [Learn about restoring instrument setups. \(see page 399\)](#)
- [Learn about saving a waveform to a file. \(see page 411\)](#)

Print Setups


For information on the Print Setups, click [here \(see page 393\)](#).

Save As Dialog Box: Histogram

From the File menu, highlight Save As; then select Histogram Data from the submenu.

Overview

Use this dialog box to save histograms to a file for use with other applications.

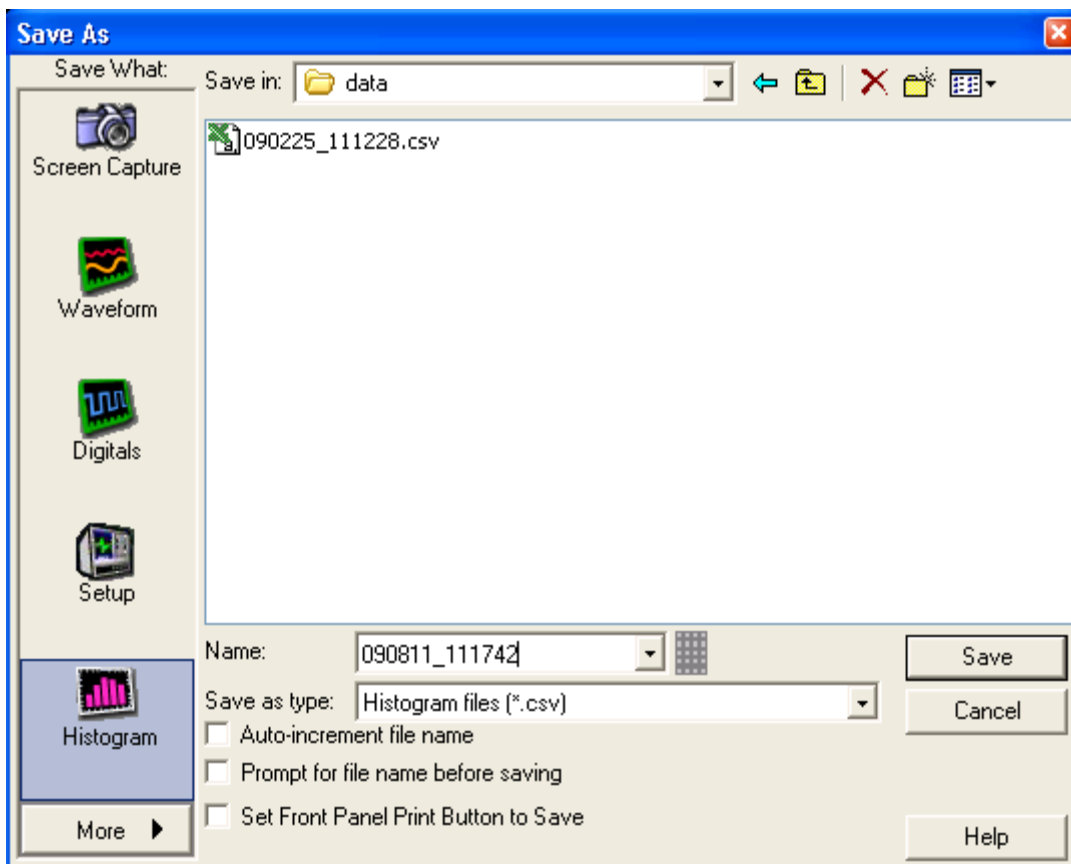

To Use

- To save histogram data with the default file name, click the Save button.
- To enter a different file name, click the keyboard icon and use the pop-up keyboard.
- Select [Auto-increment file name \(see page 287\)](#) if you want to save a series of files without typing in a new name each time.
- Select a file extension from the Save as type drop-down list. The file type will be automatically appended to the file name.

Behavior

Histogram data is saved in C:\TekScope\data unless you select a different location. To access the Histogram Save As dialog box, you may need to select it from the More submenu.

What do you want to do next?


- [Learn about saving waveforms. \(see page 411\)](#)
- [Learn about saving screen captures. \(see page 407\)](#)
- [Learn about saving measurements. \(see page 405\)](#)

Save As Dialog Box: Instrument Setup

From the File menu, highlight Save As; then select Setup from the submenu.

Overview

Use the Save As dialog box to save instrument setups for later use.

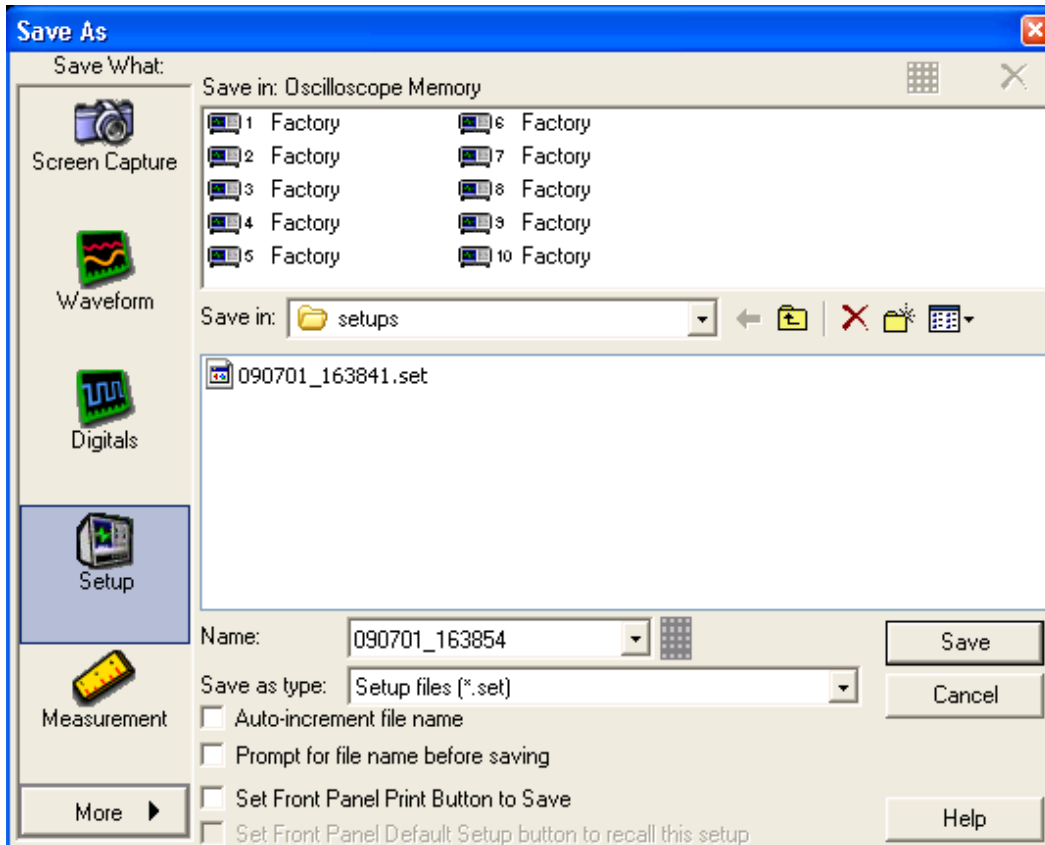

To Use

To save in Oscilloscope memory:

1. Click on one of the setup location icons under Save in: Oscilloscope Memory.
2. Enter a Name for the setup by clicking on it once more and modifying the existing text.
3. Click the Save button.

To save the setup in a different location:

1. Select the location from the Save in drop-down list.
2. Enter a name in the Name text box.
3. Click the Save button.

Behavior

You can display up to ten saved instrument setups in this dialog box. Additional setups can be saved to the hard drive. When you save a setup, the label adjacent to the setup icon changes from its previous value to User. You can save setups to any location labeled Factory without overwriting a saved setup.

The data in reference waveforms is not saved with the instrument setup. However, the setup information does include which reference waveforms are turned on and which reference waveforms are used with math waveforms and automatic measurements. If you want to [save the reference waveform data \(see page 411\)](#), save the reference waveform separate from the instrument setup.

The instrument preference settings are not saved with the setup. They are saved when the instrument is powered off.

NOTE. *Before saving an instrument setup, make sure the location does not contain a setup that you have previously saved. The previously saved setup will be overwritten.*

What do you want to do next?

- [Learn about recalling instrument setups. \(see page 399\)](#)
- [Learn about deleting instrument setups. \(see page 401\)](#)

Save As Dialog Box: Measurement

From the File menu, highlight Save As; then select Measurement from the submenu.


Overview

Use this dialog box to save a measurement to a file for use with other applications.



To Use

1. Under Save What, click Measurement.
2. Set the parameters for the measurement you want to save.
3. Click the Measurement Options button
4. In the Measurement Save Options dialog box, select a Measurement Format from the drop-down list box.

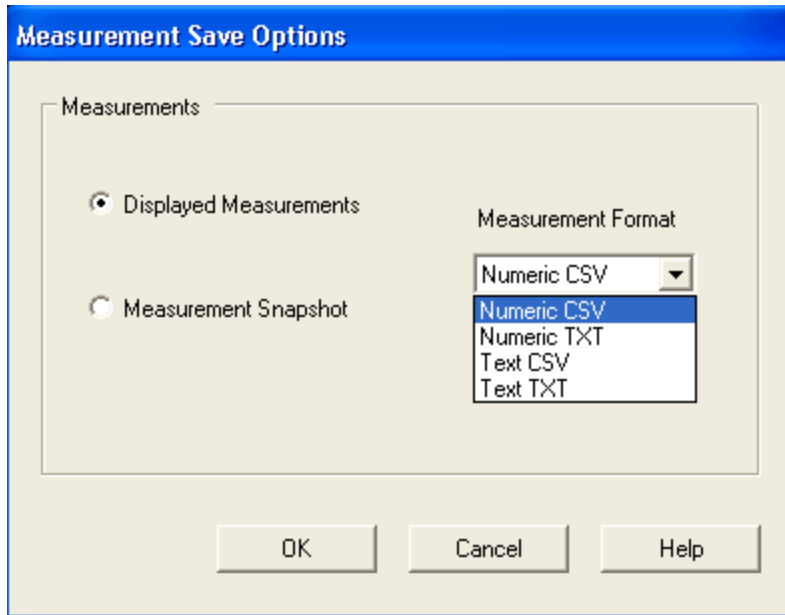

5. After making the above selection, click OK to return to the Save As dialog box.
6. Use the default name or enter a unique in the Name text box.
7. Select the type of file (either .txt or .csv) to save from the Save as type list. By default, the file will be saved to the C:\TekScope\Data folder.
8. Click the Save button to accept any changes and close the dialog box.

Behavior

When you select Displayed Measurements, all displayed measurements are saved.

What do you want to do next?

- [Learn about saving waveforms. \(see page 411\)](#)
- [Learn about saving screen captures. \(see page 407\)](#)
- [Learn more about CSV text format. \(see page 730\)](#)

Save As Dialog Box: Screen Capture

From the File menu, highlight Save As; then select Screen Capture from the submenu.


Overview

Use this dialog box to save screen captures to a file for use with other applications.



To Use

1. Under Save What click Screen Capture; then click Options.

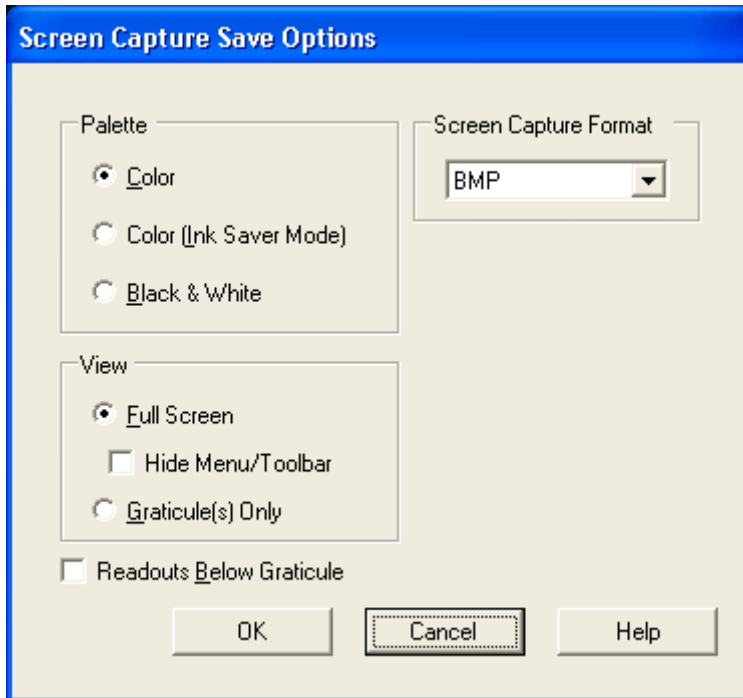

2. Select the Palette for the image: Color or Black & White.
3. Under View, select the image style:
 - To save an image of the entire screen, select Full Screen.
 - To select an image of the selected graticule, select Graticule(s) only.
4. Click the Hide Menu/Toolbar check box to save the image without including the Menu bar or Toolbar.
5. Select a file type from the Screen Capture Format drop-down list.
6. Click OK.
7. In the Save As dialog box, assign your own file name, and then save the file to a specified folder. By default, the image will be saved to C:\TekScope\ScreenCaptures.
8. Click Save to save the screen capture or cancel to close the dialog box without saving.

Behavior

The Palette, View, and Image selections are identical to those in the Page Setup dialog box.

The following file types are available:

- .bmp
- .jpg
- .pcx

- .png
- .tif

What do you want to do next?


- [Learn about saving a waveform. \(see page 411\)](#)

Save As Dialog Box: User Mask

From the File menu, highlight Save As; then select User Mask from the submenu.

Overview

Use this dialog box to save user masks. Masks are saved in `C:\TekScope\Masks` unless you choose another folder.

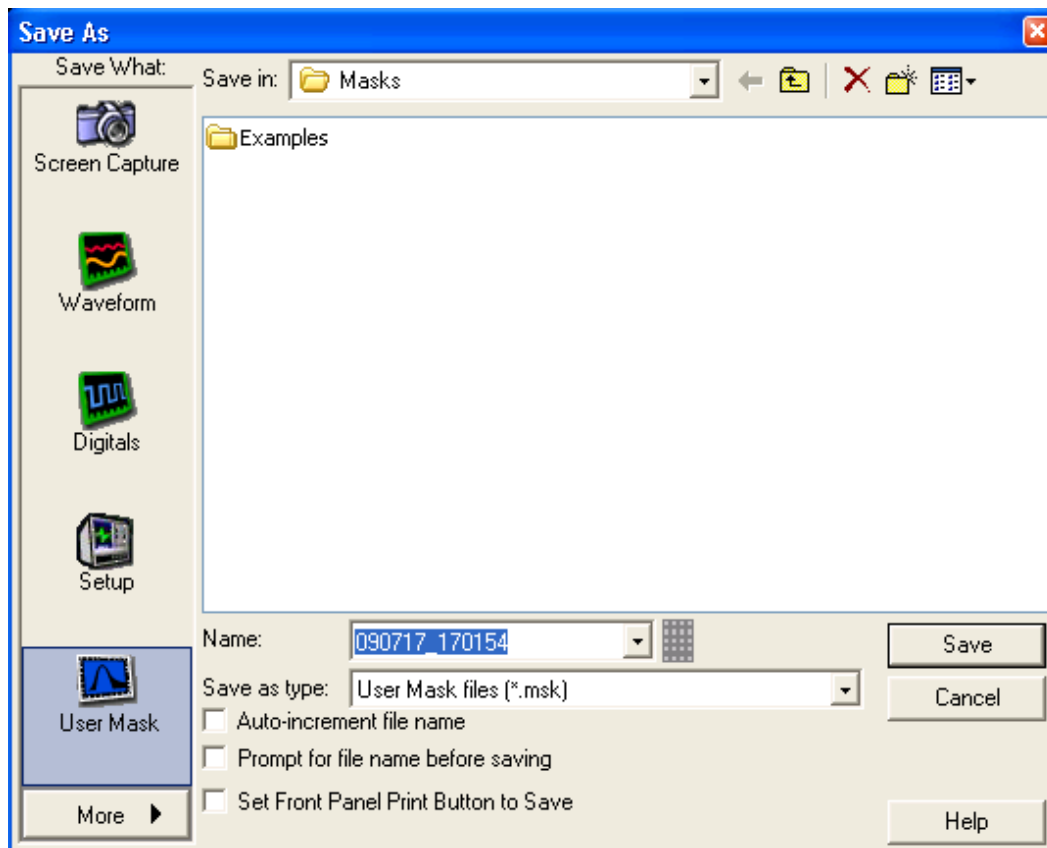

To Use

- To save the mask with the default file name, click the Save button.
- To enter a different file name, click the keyboard icon and use the pop-up keyboard to enter a unique file name. The extension specified in the Save as type list will automatically be appended to the file name.

Behavior

The Save As dialog box displays when you click Save in the Edit Mask control window. The mask is saved in the format specified in the Save as type list.

What do you want to do next?


- [Learn about recalling saved masks. \(see page 203\)](#)
- [Learn more about mask types. \(see page 177\)](#)
- [Learn more about mask setups. \(see page 177\)](#)

Save As Dialog Box: Waveform

From the File menu, highlight Save As; then select Waveform from the submenu. From the [Reference Waveform controls \(see page 397\)](#), click the Save button.

Overview

Use this dialog box to save a waveform to a reference location or to a specified folder.

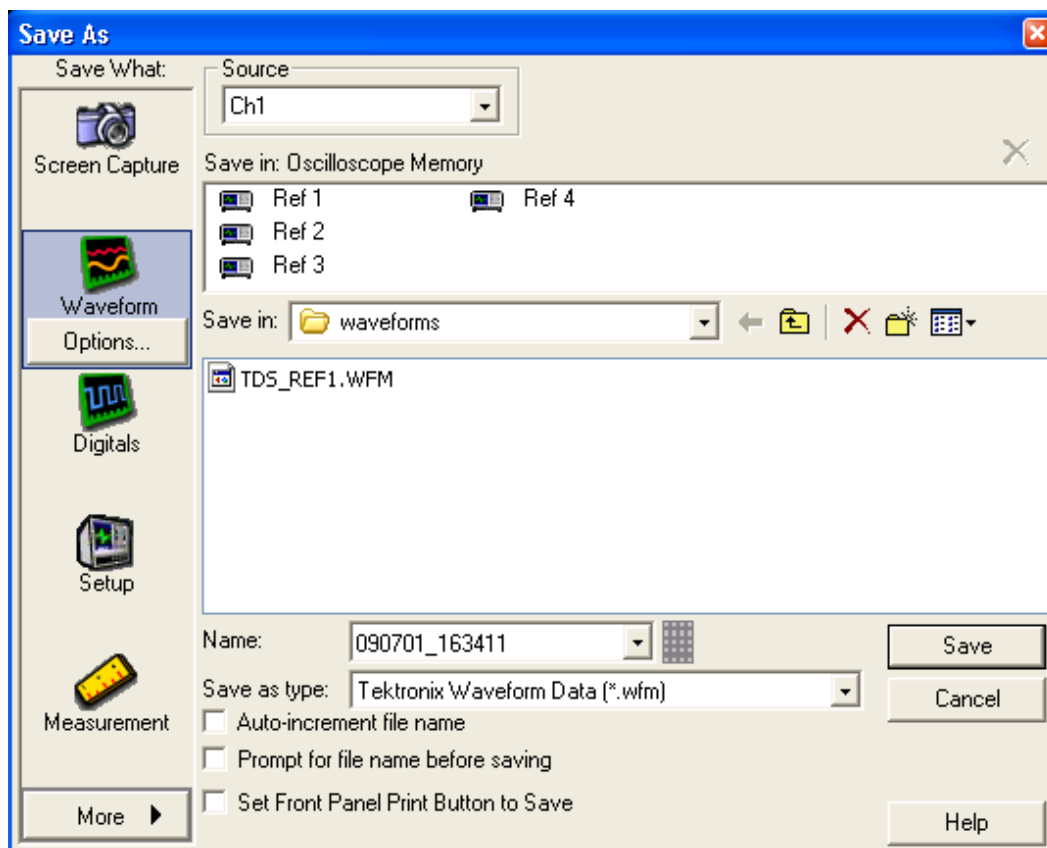

To Use

- To save to a reference location, select the Source, and then click the reference location in Oscilloscope Memory.
- To save to a file, enter a Name, use the default file name, or click [Auto-increment file name \(see page 287\)](#) if you want to save a series of files without typing in a new name each time. The file extension specified in the Save as type list will automatically be appended to the file name.

Behavior

This dialog box opens when you select Save As from the File menu or click Save from the Reference Waveform controls. The default file type is a Tektronix waveform file (.wfm).

If you select a different file type from the Save as Type list, you can also define the [options \(see page 727\)](#) for saving the waveform.

The default folder for reference waveforms is C:\TekScope\waveforms.

The following file formats are available:

- **.wfm** used for internal instrument formats
- **.csv** used for spreadsheets, such as Microsoft Excel
- **.txt** used for standard text file format
- **.dat** used for Mathcad and MATLAB

NOTE. *Any characters that you enter in the file name box become part of the file name. The instrument does not use any user-defined file extensions.*

What do you want to do next?


- [Learn about recalling a saved waveform. \(see page 398\)](#)
- [Learn about deleting waveform files. \(see page 401\)](#)
- [Learn more about CSV text format. \(see page 730\)](#)

Save As Dialog Box: Digitals

From the File menu, highlight Save As; then select Digitals from the submenu.

Overview

Use this dialog box to save the values of logic waveforms to a .csv file.

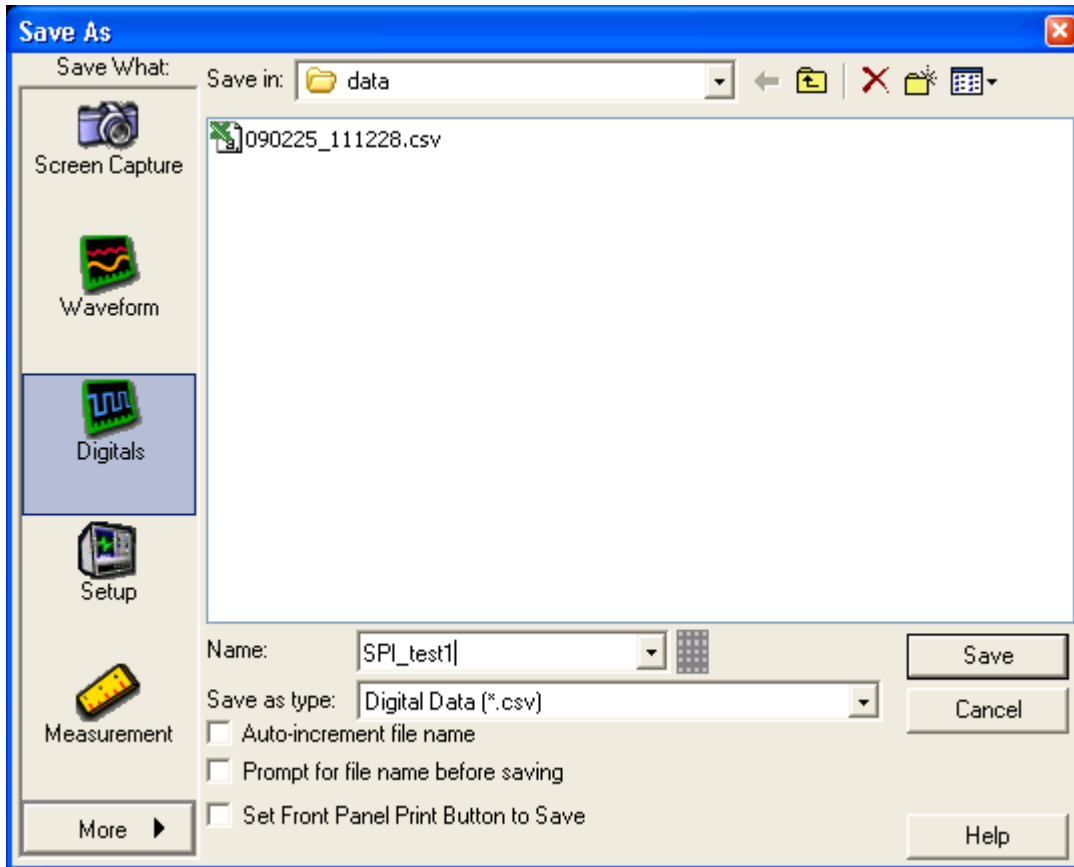

To Use

1. Under Save What, click Digitals.
2. Name the file and set the Save as type parameters for the digital data you want to save.
3. Click the Save button to accept any changes and close the dialog box.

Behavior


Digital data is saved in C:\TekScope\data unless you select a different location.

Save As Dialog Box: Timestamp

From the File menu, highlight Save As; then select Timestamp Table from the submenu.

Overview

Use this dialog box to save a time stamp to a file.

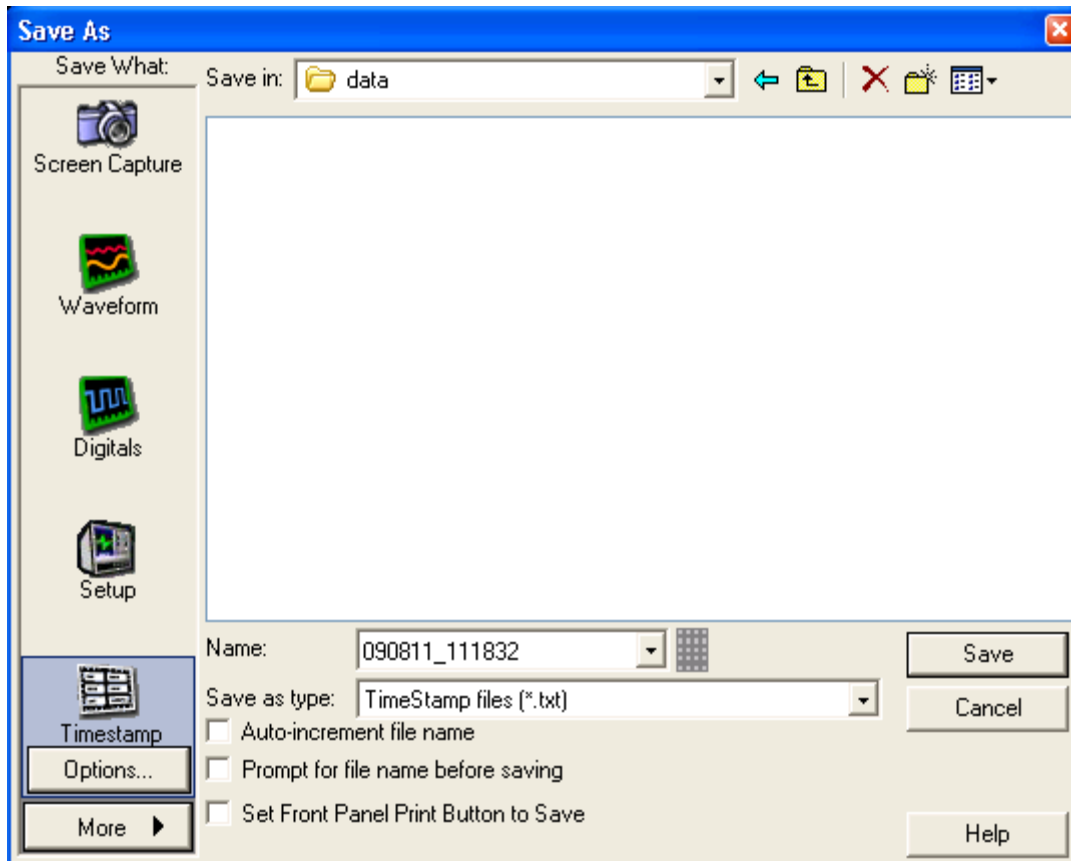

To Use

1. Under Save What, click Timestamp.
2. Click the Timestamp Options button to set the Source and FastFrame Data Range for the time stamp.
3. Name the file and set the Save as type parameters for the timestamp you want to save.
4. Click the Save button to accept any changes and close the dialog box.

Behavior

Timestamp data is saved in C:\TekScope\data unless you select a different location.

TIP. You can conveniently save time stamps from the FastFrame Control Window by using the Acquisition > FastFrame > Analyze tab > Save button.

What do you want to do next?


- [Learn about saving waveforms. \(see page 411\)](#)
- [Learn about saving screen captures. \(see page 407\)](#)
- [Learn about saving measurements. \(see page 405\)](#)

Tek Secure Erase

From the Utilities menu, select Tek Secure Erase.

Overview

Use TekSecure to erase all waveforms and instrument setups.

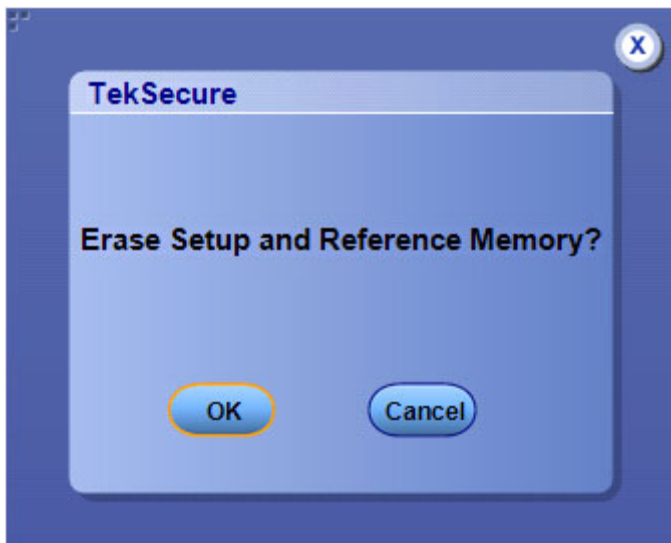

To Use

- Click OK to erase.
- Click Cancel to exit the dialog box.

Behavior


Tek Secure Erase removes all reference waveform and instrument setup memory locations. Erased setups are replaced with the default factory setups. This is useful if you are using the instrument to gather sensitive or secure data.

Set Time and Date

From the Utilities menu, select Set Time & Date.

Overview

Use the Set Time and Date control window to set the time and date on the instrument.

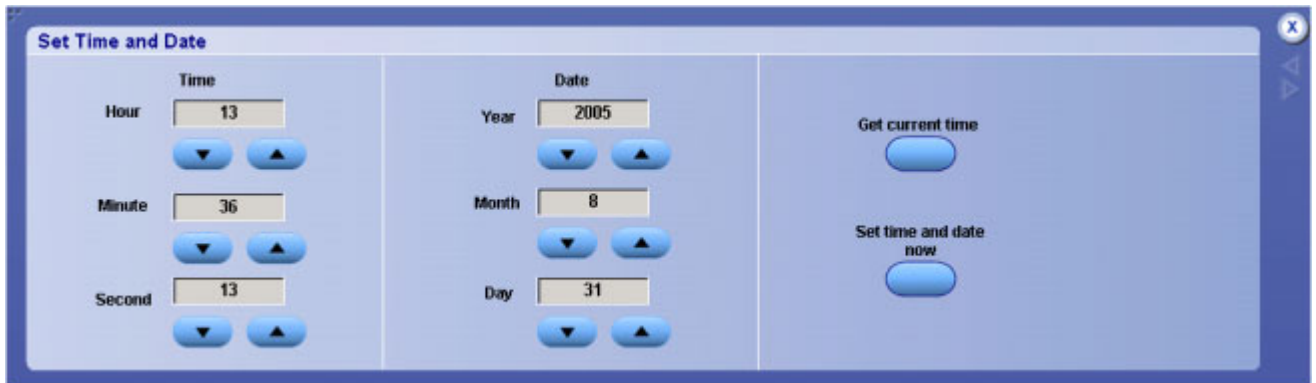

To Use

- Click in the entry boxes to map them to the multipurpose knobs, and then use the knobs to set the time and date.
- Click the Set time and date now button to save your changes.
- You can also click Get current time to set the time using the system clock. This is useful if the instrument clock is out of sync.

Behavior

The controls in this window operate the same as the standard Windows Date/Time Properties dialog box. After you click Set time and date now, the system date and time are set to the specified values. These controls are provided as a convenience so you can change the date and time without having to go to the Windows Control Panel > Date and Time properties dialog box.

TIP. The instrument clock is suspended when this window is open. Click Get current time to resynchronize the clock with the PC clock.

GPIB Configuration Control Window

From the Utilities menu, select GPIB Configuration.

Overview

Use the GPIB Configuration control window to configure the instrument for GPIB (General Purpose Interface Bus) applications.

GPIB applications enable you to remotely control your instrument, for example, taking measurements, setting controls, or performing calculations.



The following screen appears on MSO/DPO5000 Series instruments:



To Use

- Click the Talk/Listen button to enable the GPIB.
- Click in the Address entry box to map it to a multipurpose knob and use the knob to set the GPIB address for the instrument.
- Click the Controller button to use your instrument to control other instruments.
- Click the Off Bus button to make the GPIB port unavailable.

NOTE. *The Address controls are only available when you are in Talk/Listen mode.*

Behavior

The instrument is defined as a GPIB talker/listener when you click Talk/Listen. This is the device-based operation.

The instrument is defined as a controller when you click Controller. This is the controller-based operation. You cannot use GPIB commands to control your instrument when it is in Controller mode. When in Controller mode, clicking Off Bus has no effect. The Off Bus control only makes the GPIB port unavailable if you are in Talk/Listen mode.

What do you want to do next?

- [Learn about External Signals control window. \(see page 420\)](#)
- [Learn about LAN Server Status control window. \(see page 420\)](#)

LAN Server Status Control Window

From the Utilities menu, select LAN Server Status.

Overview

This control window allows you to enable the VXI-11 LAN server to accept GPIB commands.



For more information, see the *Getting Started with OpenChoice Solutions* manual that shipped with your instrument.

To Use

- Click the Start button to enable the VXI LAN server to accept GPIB commands.
- Click the Stop button to disable the ability of the VXI-11 LAN server to accept GPIB commands.

What do you want to do next?


- [Return to the Utilities Menu. \(see page 787\)](#)
- [Learn about oscilloscope analysis and connectivity. \(see page 18\)](#)
- [Learn about GPIB Configuration Control Window. \(see page 418\)](#)

External Signals Control Window

From the Utilities menu, select External Signals, or click the Ext Ref button on the Acquisition tab of the [Horizontal/Acquisition control window \(see page 159\)](#).


Overview

Use the External Signals control window to select the signal to send to the Aux Out BNC connector, or to toggle the instrument clock reference source.

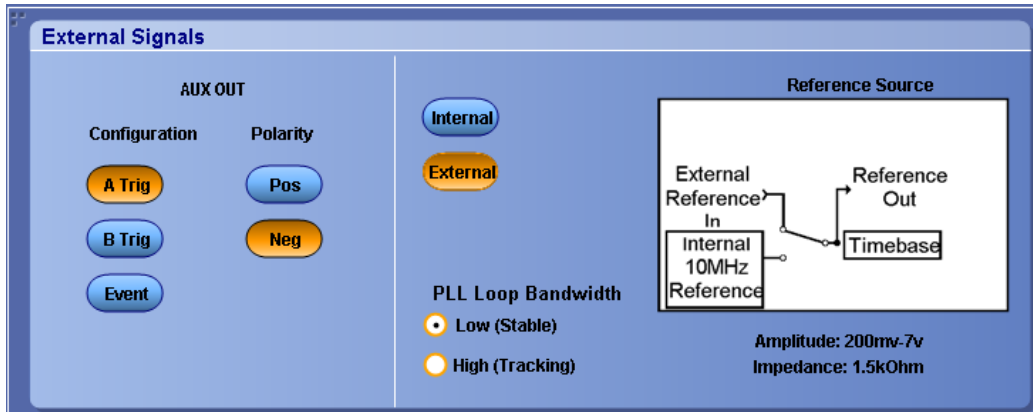

NOTE. TekLink is available only on MSO/DSA/DPO70000/B/C Series instruments.

The oscilloscope detects TekLink or TekLink Hub connections and allows you to select TekLink as a reference source.

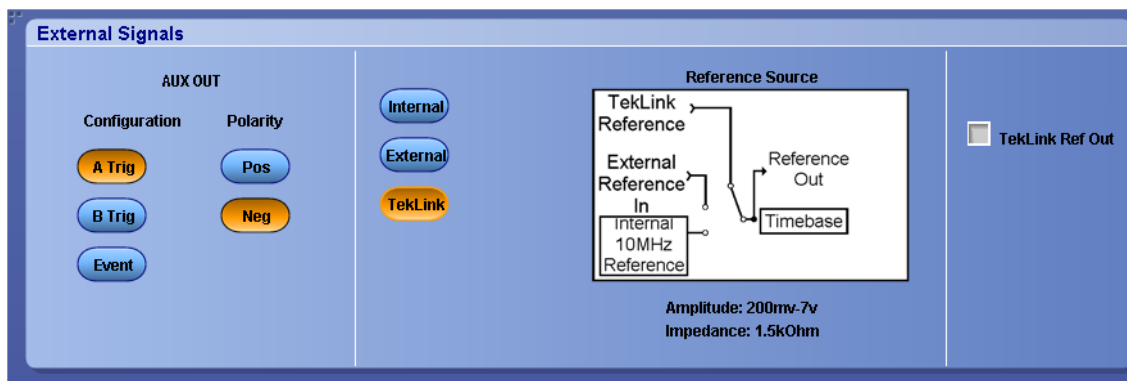

To Use

To send a signal from the Aux Out BNC connector when the instrument triggers:

1. Click on the desired configuration button: A Trig, B Trig, Event, or Ref Out.
 - A Trig to send a signal when the A Trigger generates a trigger
 - B Trig to send a signal when the B Trigger generates a trigger
 - Event to send a signal out the connector when certain events occur, such as a mask test failure or completion
 - Ref Out to send a copy of the internal reference clock out the connector

NOTE. *Ref Out is not available on ≥ 4 GHz instruments.*

2. Click Pos or Neg to set the polarity.

To select the oscilloscope clock reference source:

1. Click the Internal, External, or TekLink source button.

If you have another instrument set up to provide the TekLink Reference, the oscilloscope asks if you want to disable the TekLink output from the other source.

2. Click TekLink Ref Out for the instrument you want to provide the TekLink Reference source. Only one instrument can have this selected.

To minimize jitter when using an external reference clock input (available on ≥ 4 GHz instruments only):

- Select the Low (Stable) option when using a stable low-jitter clock source.
- Select the High (Tracking) option when the oscilloscope needs to track the external clock to minimize jitter.

Behavior

For Auxiliary Output, the selected signal is routed to the Aux Out BNC connector so that you can trigger another instrument, such as a logic analyzer. The output voltage is TTL-compatible.

For External Reference Sources, the clock reference is routed to the Ext Ref BNC connector when you select External.

NOTE. *You must perform a signal path compensation whenever you change the reference.*

Touch Screen

From the Utilities menu, highlight Touch Screen; then select Calibrate.

Overview

Use the Touch Screen submenu to calibrate the touch screen.

To Use

1. Select Calibrate.
2. Follow the on-screen instructions.

Behavior


The Calibrate command starts the Touch Screen calibration program.

Instrument Calibration Control Window

From the Utilities menu, select Instrument Calibration.

Overview

Use the Instrument Calibration control window to calibrate the Signal Path Compensation (SPC).

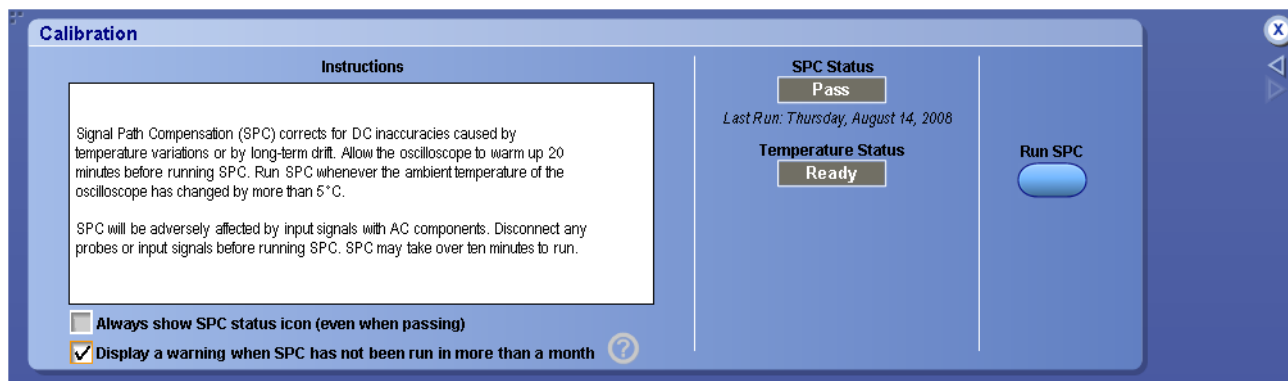

To Use

Click “Always show SPC status icon (even when passing)” to always display the SPC icon in the status readout. The icon resembles a thermometer.



NOTE. *The SPC icon changes color to indicate when you need to run the SPC routine because the temperature of the oscilloscope has changed by more than 5 °C since the last time the SPC routine was run.*

Click “Display a warning when SPC has not been run in more than a month” so the oscilloscope displays a message when the SPC routine is due to be run again.

1. Follow the calibration set up instructions.
2. Click the Run SPC button to begin the procedure.

Behavior

The only user-accessible calibration is the signal path compensation (SPC). All other calibration is accessible to qualified service personnel only. For all calibrations, the SPC Status control should indicate Pass. If it does not, contact your local Tektronix service personnel.

The oscilloscope displays the date of the last time the SPC routine was run beneath the SPC Status control.

What do you want to do next?


- [Follow a step-by-step signal path compensation procedure. \(see page 445\)](#)

Instrument Diagnostics Control Window


From the Utilities menu, select Instrument Diagnostics.

Overview

Use this control window to run the instrument diagnostics.

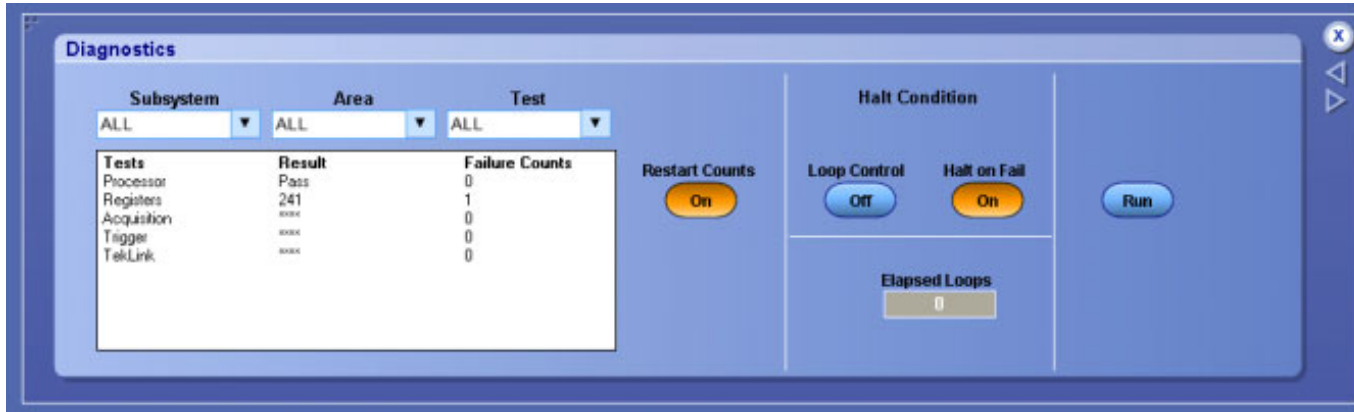

The following screen appears on MSO/DPO5000 Series instruments:

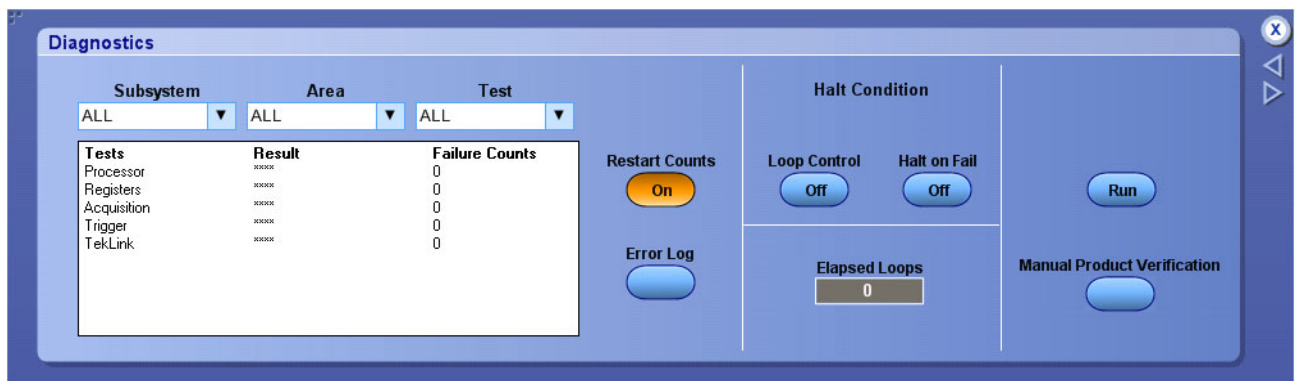


To Use

1. Use the drop-down list boxes to identify the Subsystem, Area, and Test you want to run.
2. Use the Halt Condition controls to enable looping on the selected test(s) or to halt looping as soon as a failure occurs.
3. Click the Run button to initiate the tests.

The Error Log button displays the number of entries in the error log if the number is greater than 0, else nothing is displayed. The Diagnostics error Log window is available only when the power up diagnostic setting is set to Factory.

NOTE. The Manual Product Verification option to know how to use special PV modes is available only on MSO/DPO5000 Series instruments.

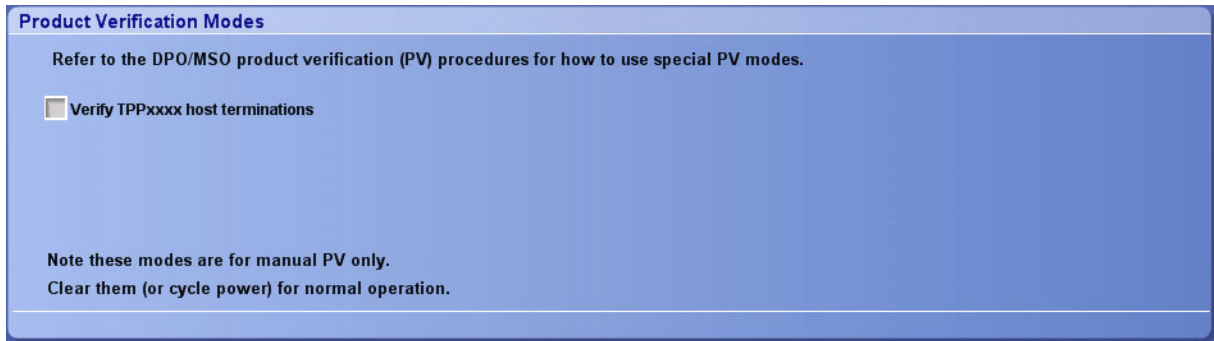

You can run all tests or specific tests using the options on the Subsystem, Area, and Text drop-down lists. The Diagnostic Status table lists each diagnostic, the results of the test, and the number of failures that occurred.

Behavior

This window is mainly intended for service personnel. The diagnostic information can be used as part of an incoming inspection or to diagnose potential problems with the instrument.

NOTE. *Remove the input signals before running any diagnostics.*


If any diagnostic failures occur, record the failure information, and then contact your local Tektronix service personnel for more information.

E-mail on Event Control Window

From the Utilities menu, highlight E-mail on Event; then select Setup.

Overview

Use this control window to set up the conditions under which the instrument will send an e-mail, the types of attachments to include, and the message limits.

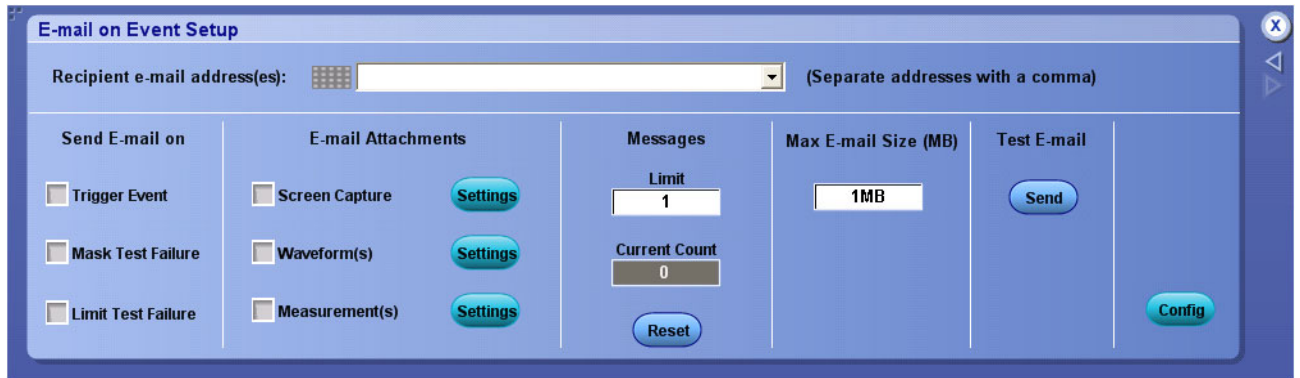

To Use

1. In the Recipient e-mail address(es) entry box, type in the addresses where you want to send e-mail. Use a comma to separate multiple addresses.
2. In the Send E-mail on check boxes, select the events on which you want to send e-mail.
3. Use the E-mail Attachments check boxes to select the type of attachment to include with the e-mail.
4. Click the Settings button to open the Save Options dialog box and set the parameters for the attachment.
5. In the Limit text box, enter the number of e-mail messages to send, up to a maximum of 32767.
6. In the Max E-mail Size entry box, enter the maximum message size, up to 2 GB, for each e-mail message.
7. Click the Send button to send a test e-mail.
8. Click the Config button to open the E-mail Configuration dialog box.

Behavior

The maximum number of characters in the Recipient e-mail address(es) box is 252, so you can enter any number of e-mail addresses up to a total of 252 characters. You can select one or all of the events to send e-mail on. If you do not have a SMTP server address or e-mail address set up, you cannot select an event to send e-mail on.

The screen capture, waveform, and measurement types for the e-mail attachments are determined by the type that you select in the Save Options dialog box when you click Settings.

When the maximum number of messages is reached, the Send E-mail on check boxes are cleared and the Current Count is reset to 0. You must select the event again to continue sending e-mail. Clicking Reset changes the current count back to 0.

Attachments that exceed the Max E-mail Size are saved to the hard drive on the instrument.

TIP. To save your attachments on the instrument hard drive and still send an e-mail, set the Max E-mail Size limit to 0.

What do you want to do next?


- [Learn about the E-mail Configuration dialog box. \(see page 662\)](#)
- [Learn about Mask Testing. \(see page 177\)](#)
- [Learn about Limit Testing. \(see page 204\)](#)
- [Learn about Measurement Save Options. \(see page 428\)](#)

Measurement Save Options

From the Utilities menu, highlight E-mail on Event; then select Setup. From the E-mail on Event Setup dialog box, select Measurement(s) and then click Settings.

Overview

Use this control window to set up the conditions under which the instrument will send an e-mail and with the types of attachments to include for the measurements.

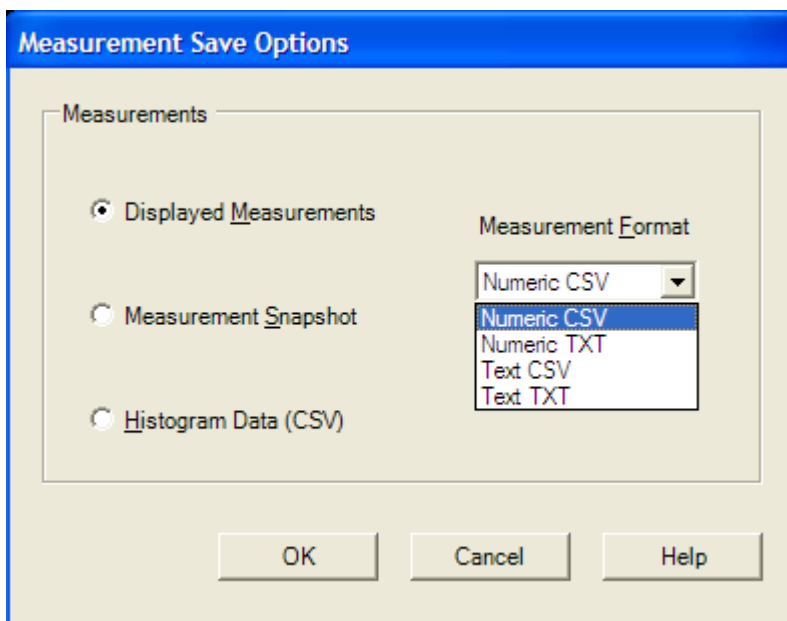

To Use

1. Click the Settings button to open the Measurement Save Options dialog box.
2. Select the measurement option and the file format. Click OK.

Selecting the Displayed Measurements option includes the measurements that are displayed on the screen; the Measurement Snapshot option includes the information on measurements snapshot, and the Histogram Data (CSV) option includes the histogram data in CSV format for the e-mail.

The following measurement file formats are available:

Numeric CSV. This creates (.csv) files in a numeric format usable by spreadsheets.

Numeric TXT. This creates (.txt) files in a numeric format usable by text and word processors.

Text CSV. This creates (.csv) files in a text format usable by spreadsheets.


Text TXT. This creates (.txt) files in a text format usable by text and word processors.

Multipurpose Knobs

The multipurpose knobs can be used to set screen interface parameters. To use, click a control on the screen to map it to the multipurpose knob(s).



For MSO/DPO5000 Series instruments:

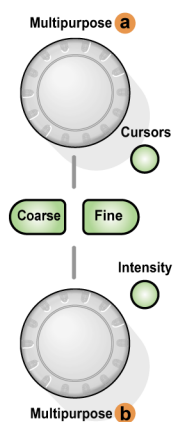

You can undo any mapping by right-clicking the multipurpose knob(s) and selecting Deassign Multipurpose Knobs, or from the Utilities menu, select the Deassign Multipurpose Knobs command. The mapping is deassigned until you perform that function again.

Turn the knob(s) or scroll with the mouse wheel until the desired selection appears in the readout mapped to the knob. Push the FINE button, or click the mouse wheel to use the knob to make small changes, for example, to add another decimal place for greater accuracy.

When no control windows are open and cursors are turned on, the multipurpose knobs control the cursor positions.


NOTE. These knobs are automatically mapped when certain functions are performed, for example, when the MultiView Zoom button is pushed.

User Preferences: Prompt Before Action

From the Utilities menu, select User Preferences; then open the Prompts tab.

Overview

Use the Prompts tab to indicate whether or not you want the instrument to display prompts (confirmation messages) before carrying out certain tasks, like deleting files or waveforms.

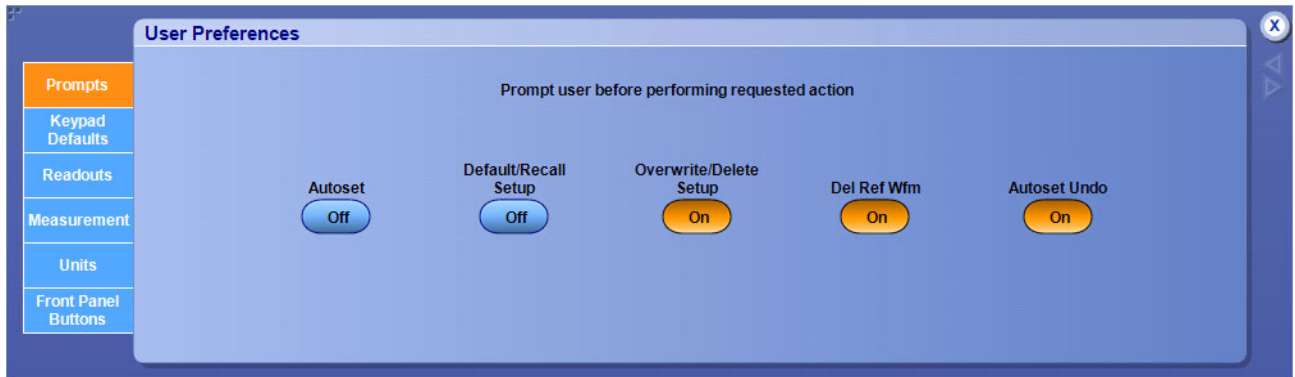

To Use

Click a button to enable or disable the control setting.

Behavior

The confirmation messages give users the chance to change their minds before taking action. The messages generally explain the implications of the action.

All preference settings are saved when you power off the instrument.

What do you want to do next?


- [Learn about setting user preferences for trigger level presets. \(see page 430\)](#)

User Preferences: Keypad Defaults

From the Utilities menu, select User Preferences; then open the Keypad Defaults tab.

Overview

Use the Keypad Defaults tab to define the preset trigger levels.

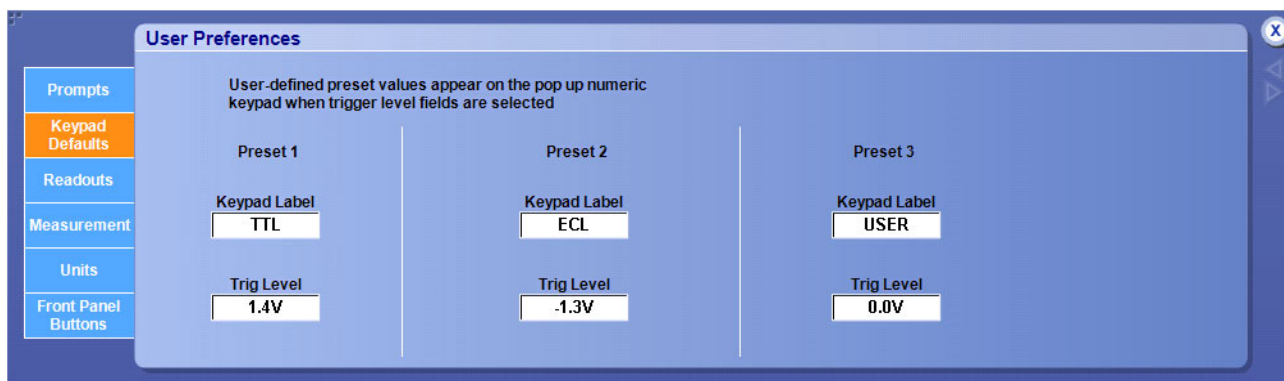

To Use

- To change the label for the selected preset control, click in the Keypad Label text entry boxes and enter a name.
- Click in the Trig Label Level entry boxes to map them to the multipurpose knobs. Use the knobs to set the trigger level values.

Behavior

Use this control window to change the trigger level preset values. This can be useful when you want to trigger the instrument on nonstandard trigger levels.

By default:

- TTL fixes the trigger level at +1.4 V.
- ECL fixes the trigger level at -1.3 V.

When you set the volts/div less than 200 mV, the instrument reduces the TTL or ECL trigger levels below their standards. This is because the trigger level range is fixed at ± 12 divisions from the center. For example, at 100 mV, the trigger range is ± 1.2 V, smaller than the standard TTL and ECL levels.

All preference settings are saved when you turn the instrument power off.

What do you want to do next?


- [Learn about setting up prompts for certain controls. \(see page 430\)](#)

User Preferences: Readouts

From the Utilities menu, select User Preferences; then open the Readouts tab.

Overview

Use the Readouts tab to select a transparent or opaque background and turn Highlight readouts on and off.

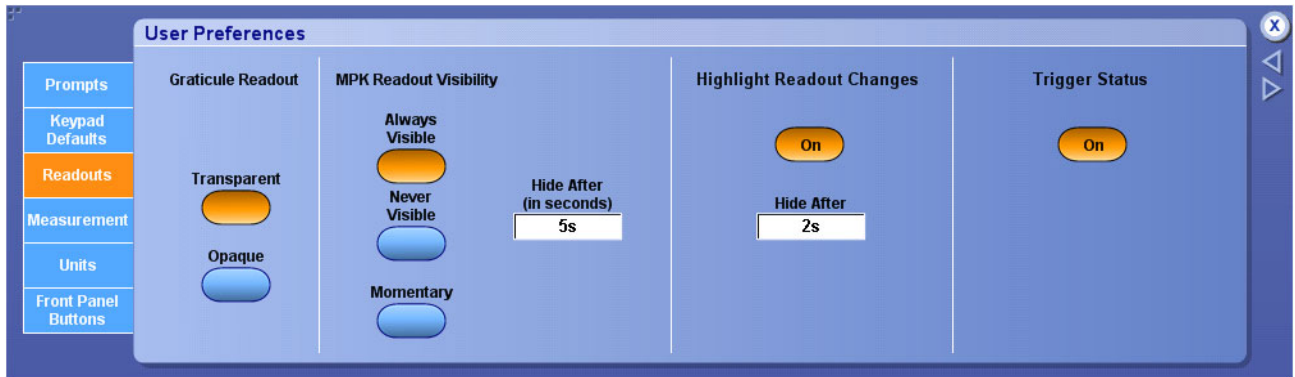

To Use

- Click the Transparent button to set the readout background to transparent.
- Click the Opaque button to set the readout background to opaque.
- Select an option for MPK Readout Visibility.
- Click the Highlight Control Changes button On or Off to highlight readouts when you make changes.
- Enter a time to leave the readout highlighted in the Hide After entry boxes.
Click the Trigger Status button to toggle it on or off.

Behavior

When the readout background is set to transparent, the readouts appear behind the waveform. When the readout background is set to opaque, the waveform appears behind the readouts.

The maximum length of time you can leave the readouts highlighted is 5 seconds.

The following readouts are highlighted:

- Vertical Scale
- Horizontal Delay
- Trigger Level
- Trigger Source
- Trigger Slope
- Source Termination

What do you want to do next?

- [Learn about setting up prompts for certain controls. \(see page 430\)](#)


- [Learn about setting user preferences for trigger level presets. \(see page 430\)](#)

User Preferences: Measurement Annotation

From the Utilities menu, select User Preferences; then open the Measurement tab.

Overview

Use the Measurement tab to set the user preference for measurement annotation. Annotations show the exact segment of the waveform from which the measurement is derived.

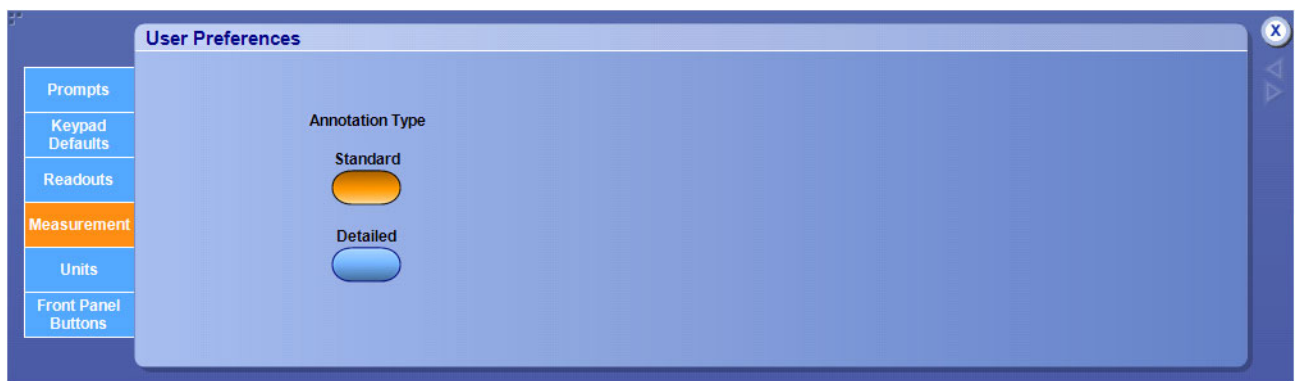

To Use

Click a button to select the annotation type, Standard or Detailed.

Behavior

The annotation types consist of horizontal bars, vertical bars, horizontal arrows, or vertical arrows.


TIP. You can access this feature, or turn the feature off, from the Measure menu. Select Measure > Annotation; then select Standard, Detailed, or Off.

User Preferences: Units

From the Utilities menu, select User Preferences; then open the Units tab.

Overview

Use the Units tab to set the detents for the vertical scale controls.

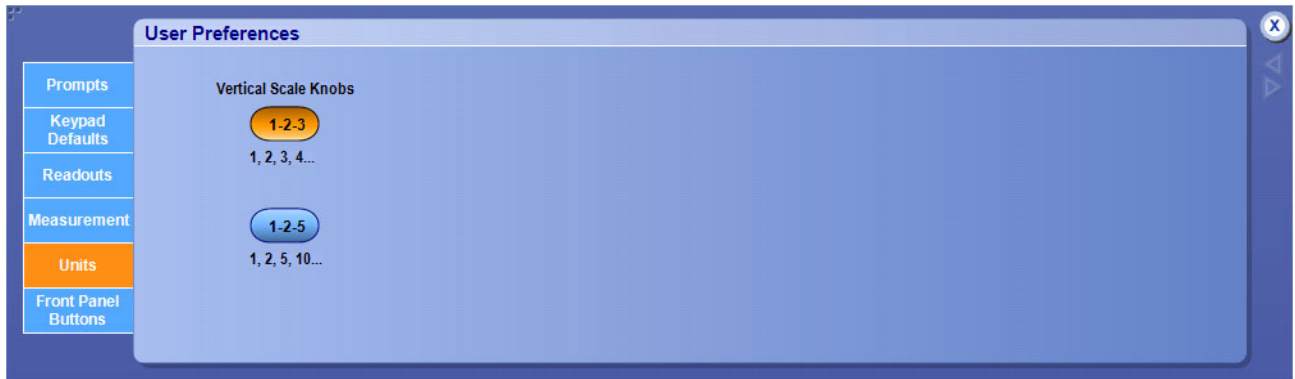

To Use

Click one of the buttons to set the vertical scale detents:

- Click 1–2–3 to set the vertical detent increments to 1, 2, 3, 4...
- Click 1–2–5 to set the vertical detent increments to 1, 2, 5, 10...

Behavior

If the user preference is set to 1–2–3, the vertical knobs will increase or decrease the scale in a 1–2–3... 10–20–30... 100–200–300... sequence.


If the user preference is set to 1–2–5, the vertical knobs will increase or decrease the scale in a 1–2–5... 10–20–50... 100–200–500... sequence.

User Preferences: Front Panel Buttons

From the Utilities menu, select User Preferences; then open the Front Panel Buttons tab.

Overview

Use the Front Panel Buttons tab to set the function of the Print and the Default Setup buttons.

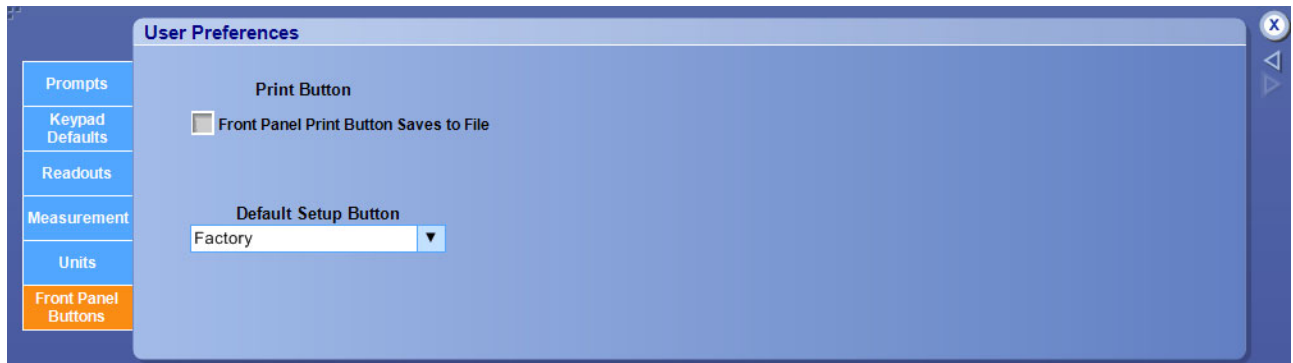

To Use


Click the Set Front Panel Print Button to change the function of the front panel Print button to save a file each time you push the button.

To select a saved setup for the oscilloscope to recall when you push the Default Setup front panel button:

- Select Factory from the list to recall the Factory setup.
- Select a saved setup (from Setup 1 through Setup 10) to recall a specific setup.

Behavior

When the Set Front Panel Print Button is not selected, the function of the front panel Print button is to print. When you select the alternate save function for the Print button, the oscilloscope updates the File Save As menu (under the File menu) for the selected file type.

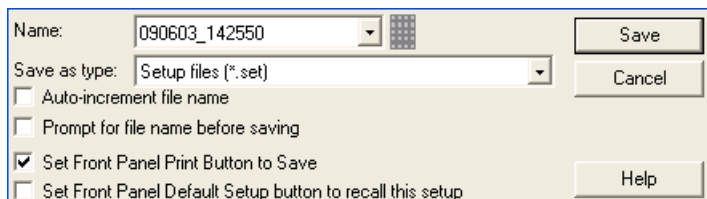

Option Installation


From the Utilities menu, select Option Installation.

Overview


Use Option Installation to enable upgrades that you have purchased for your instrument from Tektronix. For the most current list of upgrades, go to www.tektronix.com or contact your local Tektronix representative.

To Use

1. Click the Continue button in the initial dialog box.

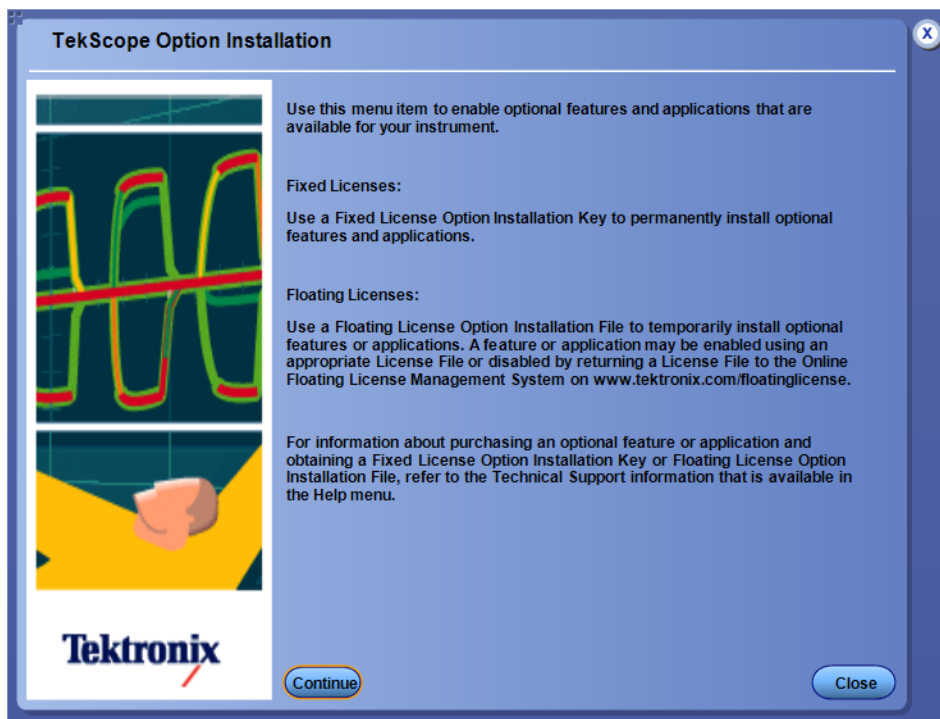

2. Use either floating license or fixed license and follow the on-screen instructions to install the options.

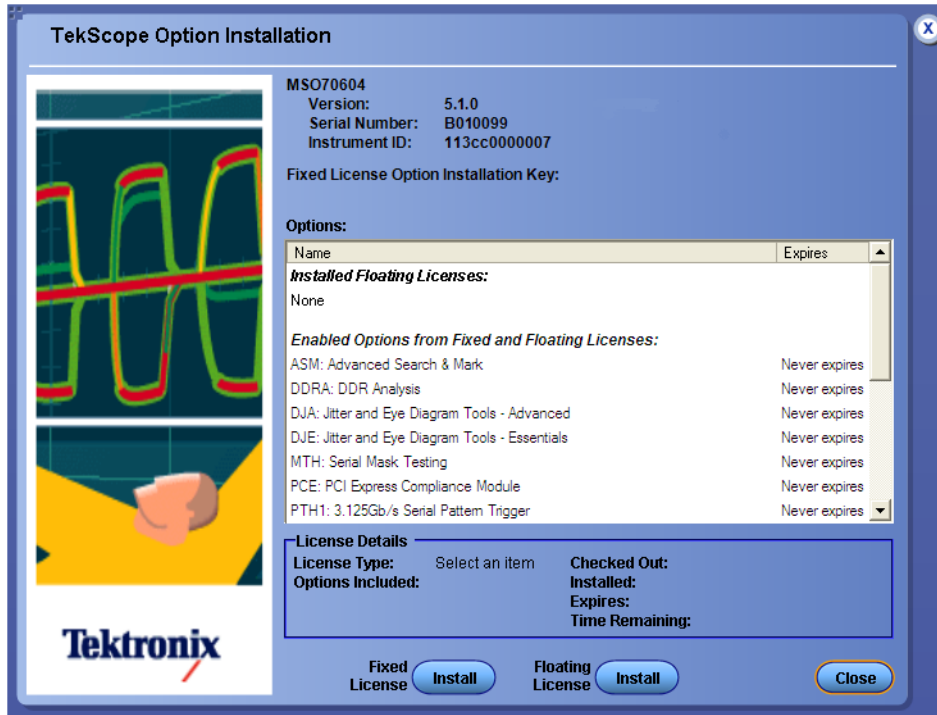

NOTE. Use the [fixed license option installation \(see page 440\)](#) to permanently install the optional features and applications.

Use the [floating license option installation \(see page 438\)](#) to temporarily install the optional features and applications.

Behavior

The installation dialog box lists information about the installed options and applications. The installation is acknowledged when complete.

To run external applications following installation:

1. In the Menu bar, click Analyze.
2. Select the application name from the submenu.

What do you want to do next?

- [Install the Floating license. \(see page 438\)](#)
- [Install the Fixed license. \(see page 440\)](#)

- [Return the Floating License for the Installed Option\(s\). \(see page 441\)](#)

Install the Floating License


From the Utilities menu, select Option Installation.

Overview


Use Option Installation to enable upgrades that you have purchased for your instrument from Tektronix. For the most current list of upgrades, go to www.tektronix.com or contact your local Tektronix representative.

To Use

1. Click the Install button next to Floating License.

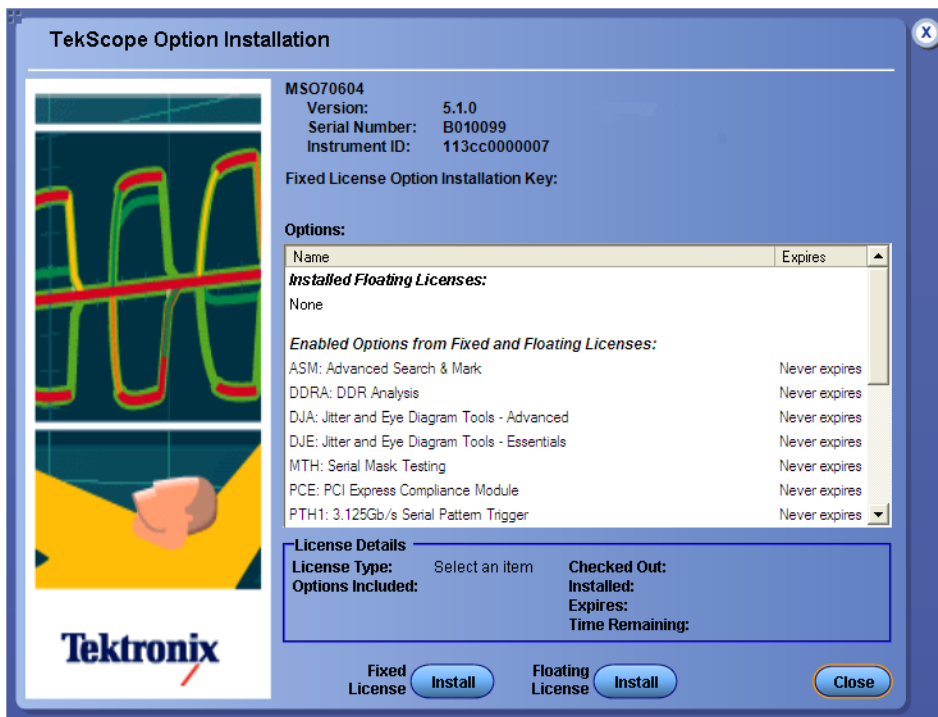


2. Browse to the path where the floating license key file (.lic) is located, select the file, and click Open.

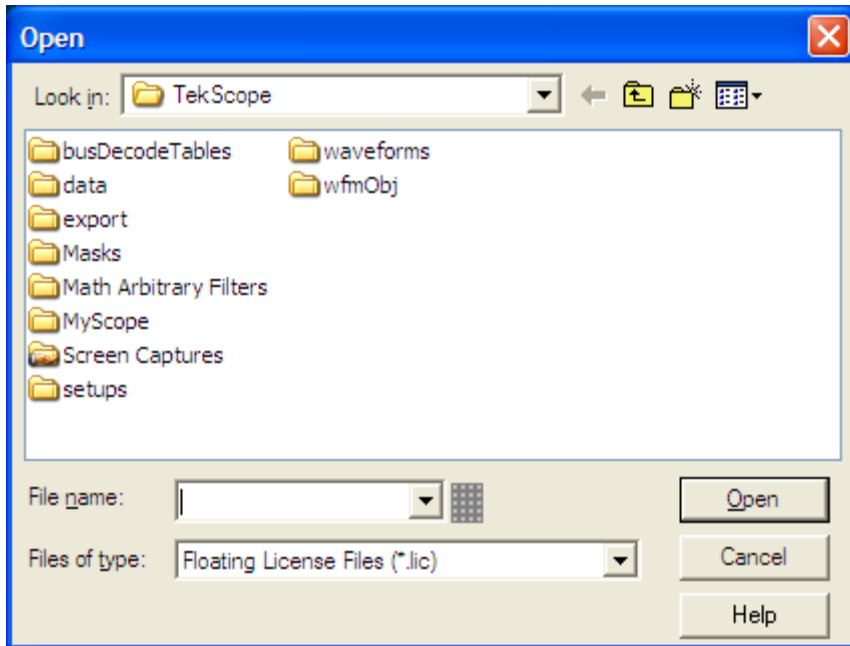

3. On successful installation, a dialog box appears indicating that the Option is enabled. Reboot the instrument for the changes to take effect.

For example, after installing DPOFL-PTD (TDSPTD), the Tekscope Option Installation dialog box appears as follows:

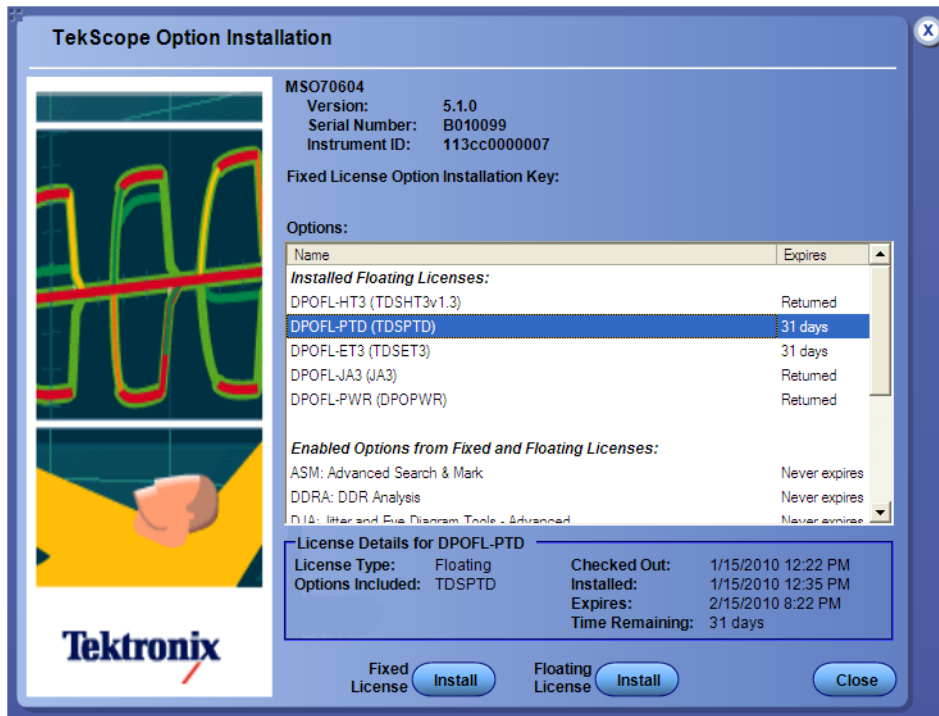

NOTE. Ensure that you select an authorized option installation key file to avoid any errors during installation. For any information on the purchase of an Option Installation key file, refer to the Technical Support information at <http://www.tektronix.com/floatinglicense>.

You must minimize the oscilloscope application to see the WEB page.

Install the Fixed License

From the Utilities menu, select Option Installation.


Overview

Use Option Installation to enable upgrades that you have purchased for your instrument from Tektronix. For the most current list of upgrades, go to www.tektronix.com or contact your local Tektronix representative.


To Use

Fixed License

1. Click the Install button next to Fixed License.

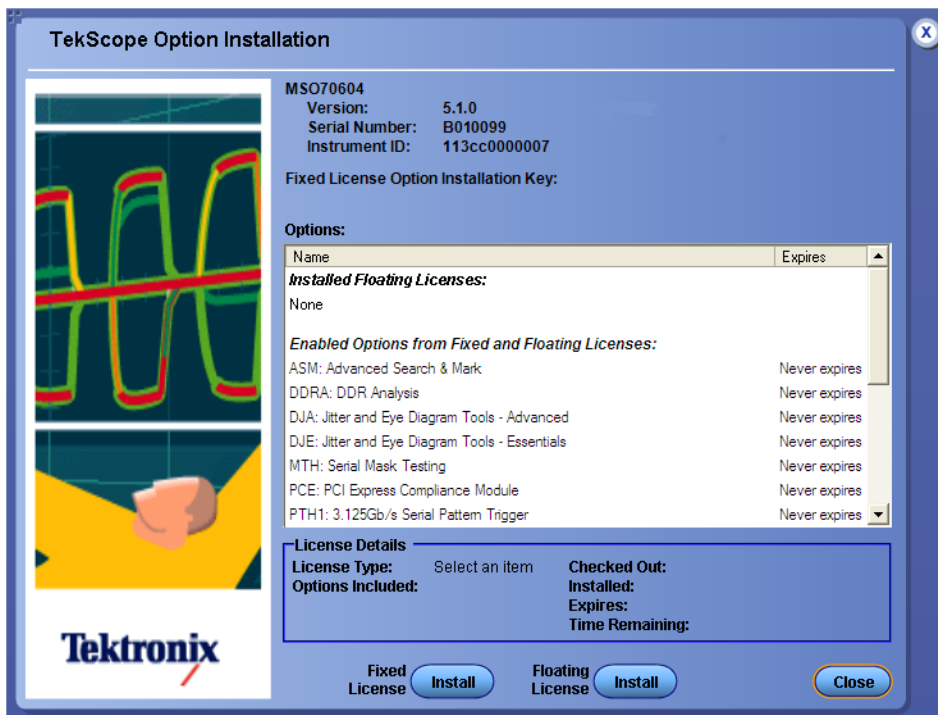

2. Enter the option installation key (provided by Tektronix) in the Options dialog box.

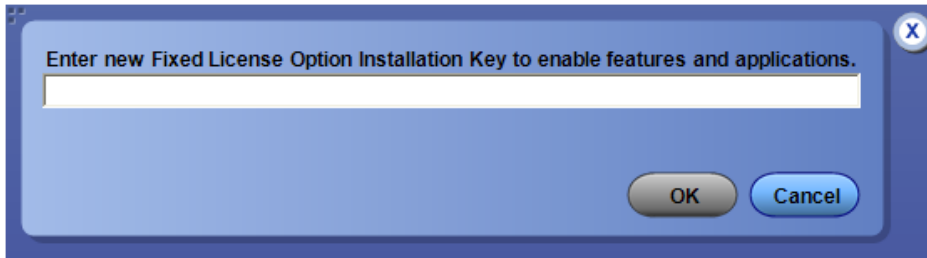

3. Click OK. On successful installation a dialog box appears. Reboot the instrument for the changes to take effect.

Return the Floating License for the Installed Option(s)


From the Utilities menu, select Option Installation.

Overview

Use the Option Installation to return the floating license for the installed Option(s) that you purchased for your instrument from Tektronix.

To Use


1. From the Utilities menu, select Option Installation.
2. Click Continue. The following dialog box appears.

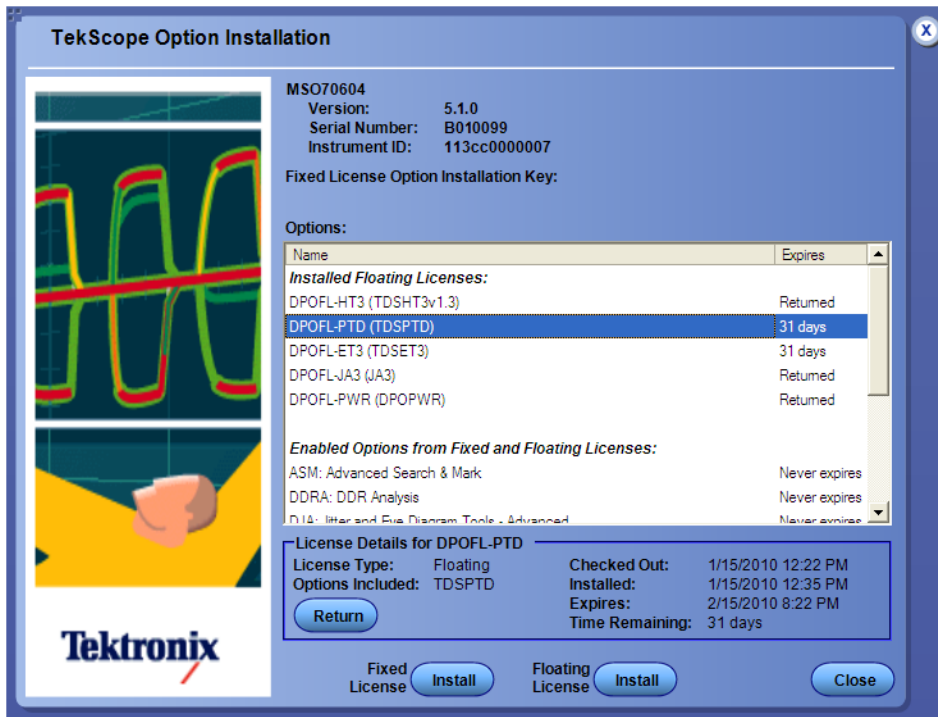

3. Select the Option (for example DPOFL-PTD (TDSPTD)) in the Tekscope Option Installation dialog box and click the Return button (when the license is still valid) or click Exit Key button (when the license has expired).


A dialog box appears. Click OK.

4. Browse to the path where you want to save the Exit Key file.

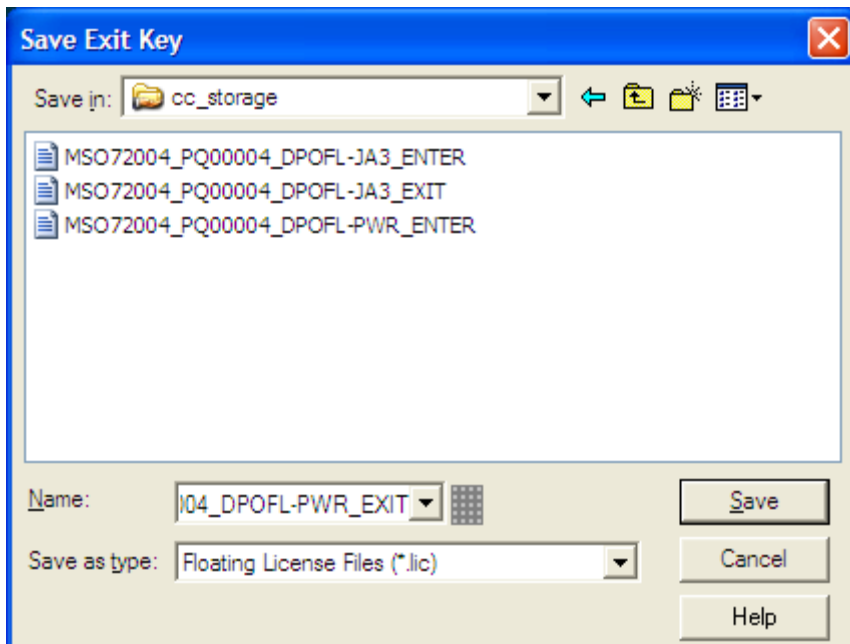

NOTE. Ensure that the Exit Key file is uploaded to the Online Floating License Management System on <http://www.tektronix.com/floatinglicense> to access the floating license again.

5. The following dialog box appears on completing the return of a floating license. Click Close.

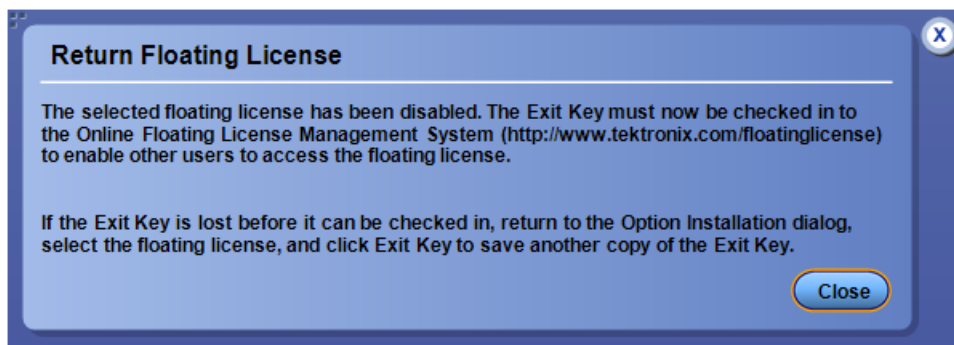

6. A dialog box appears indicating that the selected Option is disabled. Reboot the instrument for the changes to take effect.

For example, after returning the floating license for DPOFL-PTD (TDSTPTD), the Tekscope Option Installation dialog box appears as follows:

TekScope Option Installation

MSO70604
 Version: 5.1.0
 Serial Number: B010099
 Instrument ID: 113cc000007

Fixed License Option Installation Key:

Options:

Name	Expires
Installed Floating Licenses:	
DPOFL-HT3 (TDSHT3v1.3)	Returned
DPOFL-PTD (TDSPTD)	Returned
DPOFL-ET3 (TDSET3)	31 days
DPOFL-JA3 (JA3)	Returned
DPOFL-PWR (DPOPWR)	Returned
Enabled Options from Fixed and Floating Licenses:	
ASM: Advanced Search & Mark	Never expires
DDRA: DDR Analysis	Never expires
DIA: Filter and Eye Diagram Tools - Advanced	Never expires

License Details for DPOFL-PTD

License Type:	Floating	Checked Out:	1/15/2010 12:22 PM
Options Included:	TDSPTD	Installed:	1/15/2010 12:35 PM
		Expired:	1/15/2010 1:51 PM
		Time Remaining:	Returned

Exit Key

Fixed License **Install** Floating License **Install** **Close**

Signal Path Compensation

Use the following procedure to compensate the internal signal acquisition path. Perform this procedure if the ambient temperature has changed more than 5 °C (9 °F) since you performed the last signal path compensation. Perform the signal path compensation once a week. Failure to do so may result in the instrument not meeting warranted performance levels.

1. Power on and warm up the instrument for 20 minutes before continuing with this procedure.
2. Disconnect any probes you have connected to the input channels.
3. Set the instrument to Menu mode.
4. Select Instrument Calibration from the Utilities menu.
5. Note any instructions that appear under Calibration Instructions in the resulting control window.
6. Click Calibrate to begin the procedure. The procedure may take several minutes to complete.
7. Verify that the Status changes to Pass after the procedure is complete. If the Calibration Status field indicates anything other than Pass, see [Signal Path Compensation Status \(see page 374\)](#) for information on the readout and recommended action.

NOTE. *When making measurements at vertical scale settings less than or equal to 5 mV, you should perform the signal path compensation at least once a week. Failure to do so may result in the instrument not meeting warranted performance levels at those volts/div settings.*

Calibrating Active Probes

NOTE. *This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.*

Use this procedure to optimize gain and offset accuracy at the probe tip for each active probe. Allow the instrument and probe to warm up for 20 minutes before performing this procedure. Then complete the following steps:

1. If you have not already done so, connect the probe to one of the vertical inputs on the instrument.
2. For <4 GHz instruments only, connect the probe tip to the probe compensation (Fast Edge on some models) outputs. Connect only one probe at a time.
3. For ≥ 4 GHz instruments, connect the probe to the DC PROBE CAL output through the deskew fixture as shown in the *Z-Active Probe Deskew Fixture Instructions*. These instructions are available from the Documentation Browser on your instrument desktop; click the Documentation icon.

4. Select Probe Cal from the Vertical menu to open the Probe Setup control window.
5. Select the channel to which the probe is attached.
6. Click Calibrate Probe to begin the calibration procedure. The Probe Status indicator changes to Pass when the procedure is complete. If the procedure does not pass, contact your local Tektronix service personnel.
7. Remove the connections from the terminals.

Calibrating Passive Probes

Use this procedure to optimize gain and offset accuracy at the probe tip. Allow the instrument to warm up for 20 minutes before performing this procedure.

Perform the [low frequency probe compensation \(see page 447\)](#) for passive probes.

NOTE. *The probe calibration procedure is not recommended for the P5050 passive probes. These probes have little gain or offset errors. However, you should perform this procedure for other passive probes.*

Complete the following steps:

1. If you have not already done so, connect the probe to the instrument.
2. Connect the probe to probe compensation (Fast Edge on some models) terminals as shown. Connect only one probe at a time.
3. Select Probe Cal from the Vertical menu to open the Probe Calibration control window.
4. Select the channel to which the probe is attached.
5. Click Calibrate Probe to begin the calibration procedure. The Probe Status indicator changes to Pass when the procedure is complete. If the procedure does not pass, contact your local Tektronix service personnel.
6. Remove the connections from the terminals.

Low Frequency Probe Compensation

Use this procedure to compensate passive probes to ensure maximum distortion-free inputs to the instrument.

1. Connect the probe to Ch 1 on the instrument.
2. Attach the probe tip and reference lead to the probe compensation terminals .
3. Press the Autoset button on the instrument.
4. [Adjust the probe \(see page 373\)](#) until you see a square wave with a perfectly flat top on the display.



5. See your probe manual for adjustment instructions.

Deskew

Use the following procedure to compensate for timing differences between voltage probes:

1. Set up the instrument to display all of the channels that you want to deskew.
2. Push the instrument Autoset button.
3. Adjust the vertical Scale and Position controls for each channel so that the signals overlap and are centered on the display.
4. Adjust the horizontal Position so that a rising edge is triggered at the center of the display.
5. Adjust the horizontal Scale so that the differences in the channel delays are clearly visible.
6. Adjust the horizontal Position again so that the first rising edge is exactly at the center of the display. The fastest probe is connected to this channel (the fastest probe is usually the one with the shortest cable or with the highest bandwidth).
7. Select Deskew from the Vertical menu to open the Deskew control window.
8. Select one of the slower channels.
9. Adjust the deskew time for the slower channel so that its signal aligns with that of the fastest channel. The deskew adjustment range is ± 75 ns.
10. Repeat steps 8 and 9 for each additional channel you want to deskew.
11. Remove the connections from the probe compensation terminals.

For information on how to deskew probes when using the Probe Setup Control Window, click [here \(see page 379\)](#).

NOTE. To compensate for timing differences between voltage and current probes, order the following Probe Calibration and Deskew Fixtures. These fixtures may require a user-supplied pulse generator.

For <4 GHz oscilloscopes, order Tektronix part number 067-0405-XX.

For ≥ 4 GHz oscilloscopes, order Tektronix part number 067-1586-XX.

For MSO70000/C Series instruments: Tektronix part number 067-2083-XX to deskew the logic probe trigger path.

Setting Up Analog Channels

Use the following procedure to set the scale and position parameters for analog signal acquisition.

1. Set the acquisition system to Run continuously.
2. Connect the probe to the input signal source using proper probing/connecting techniques.

3. Click [here \(see page 355\)](#) for details on setting up the Vertical input controls.

NOTE. *Some probes automatically set their termination and other values.*

4. Push a front panel channel button (Ch <1– 4>) to select the input signal channel. A channel button lights when its channel is on.
5. Open the Vertical Setup control window by clicking Vert on the toolbar or selecting the Vertical Setup command from the Vertical menu. To change the input coupling, select the appropriate Termination button.
 - Select DC to couple both the AC and DC components of an input signal.
 - Select AC to couple only the AC components of an input signal.
 - Select GND to disconnect the input signal from the acquisition system.
6. Use the Vertical knobs to scale and position the waveform on the screen. Dragging the waveform handle also positions the waveform.
7. Use the Vertical Setup controls to change the offset. Click in the Offset entry box, and then use the multipurpose knob to adjust the offset.
8. Use the Horizontal knobs to scale and position the waveform on the screen and to set the record length. Dragging the reference icon also positions the waveform.
9. Use the Resolution knob to set the record length and sample interval.
10. If you need to stabilize the display, push the trigger Level control to set the trigger level to 50%.

Setting Acquisition Modes

Use this procedure to set the data acquisition mode and specify acquisition start/stop methods.

1. Power on the instrument.
2. Set up the [horizontal \(see page 155\)](#), [vertical \(see page 355\)](#), and [triggering \(see page 289\)](#) controls.
3. From the Horiz/Acq menu, open the Acquisition control window.
4. Click an Acquisition Mode button. For Average and Envelope modes only, select the number of acquisitions to average or envelope. For WfmDB acquisition mode, select the number of samples.
5. Push the Run/Stop front-panel button to toggle between starting and stopping acquisitions, or push the Single button to acquire enough waveforms to satisfy the acquisition mode.

6. To select the sampling mode, click the Horiz toolbar button, or select the Horizontal/Acquisition Setup command from the Horiz/Acq menu to open the Horizontal/Acquisition Setup control window.
7. Open the Acquisition tab and select one of the following Sampling Modes:
 - Real Time. This sampling mode acquires all points in a waveform record after one trigger event. RT mode will switch to ET or IT mode, depending on the time-per-division setting and the number of channels acquiring data.
 - Interpolated. This mode interpolates between the samples the instrument acquires when it cannot acquire all the real samples it needs to fill up its waveform record.
 - Equivalent. This mode starts when the time base setting (horizontal scale) is too fast to let the instrument get enough samples with which to create a waveform record using real-time sampling. Equivalent time mode is intended for repetitive signals only.

Using Fast Acquisitions

To operate the instrument in Fast Acquisitions mode, set up the horizontal, vertical, and triggering controls, and then follow the procedure below.

1. Enable Fast Acquisitions mode:
 - a. In the Horiz/Acq menu, select Horizontal/Acquisition Setup.
 - b. Open the Acquisition tab.
 - c. Toggle the Fast Acq button to On, or push the front-panel FastAcq button.
 - d. Click an option button to optimize the capture of data to suite your measurement.
2. Set up the Display Appearance:
 - a. In the Display menu, select Display Setup.
 - b. Open the Appearance tab.
 - c. Click one of the Style buttons: Vectors, Dots, or Inten Samp. Vectors is the default.
 - d. For the display Persistence, click either Infinite, Variable, or Off. Off is the default, and erases the screen each time a new waveform array is displayed. For an explanation of Variable persistence, click [here \(see page 452\)](#).
 - e. If you specified Variable, click Time, and adjust the persistence time (decay rate) with the multipurpose knob.
3. Set the Display Readout Options:
 - a. Open the Display control window Objects tab.
 - b. Click the Display Date/Time button to toggle the date/time display On or Off.

4. Adjust the Intensity:
 - a. Open the Display control window Appearance tab.
 - b. Rotate the front-panel Intensity knob to adjust the intensity of displayed waveforms, or click in the Intensity FastAcq/WfmDB entry box and enter the intensity value with the keypad or multipurpose knob.
5. Select the Color Palette:
 - a. Open the Display control window Colors tab.
 - b. Click a color palette button in the Fast/Acq WfmDB Palette. In Fast Acquisitions mode, Temp and Spectral show more detail than the other color palettes.
 - c. For a definition of each color palette, click [here \(see page 152\)](#).


Display Persistence

From the Display menu, select Display Setup; then open the Appearance tab.

To Use

Click one of the buttons to select the display persistence.

- Click Infinite (persistence) to continuously accumulate record points on the waveform until you change one of the acquisition display settings.
- Click Variable; then click in the Time entry box and use the multipurpose knobs to set the persistence time.
- Click Reset to clear the persistence.
- Click Controls to activate the Persistence Control window.

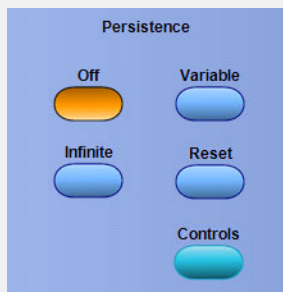

Behavior

- Use infinite persistence for displaying record points that may occur outside the normal acquisition envelope.
- Use Variable to accumulate record points on the waveform for a specified time interval. Each record point decays independently according to the time interval.
- If you click Off, the waveform record points appear for the current acquisition only.

TIP. Use the Display menu Display Persistence submenu or right-click in the graticule and select Display Persistence from the shortcut menu to directly access the persistence options.

Viewing the Analog Characteristics of a Digital Signal

NOTE. *iCapture is available only on MSO70000/C Series instruments.*

The iCapture function allows you to view the analog characteristics of signals connected to a digital channel. Additional measurement capabilities are available while viewing the analog characteristics of a signal. You can route up to four of the 16 digital inputs (D15-D0) and Clock/qualifier inputs to the analog channels through a logic probe using iCapture. When a logic channel is routed to an analog channel, the normal signal (analog input) is no longer visible.

To use iCapture, follow these steps:

1. From the Vertical menu, select Vertical Setup.
2. Press the Digital Input iCapture button.
3. Click the Digital Source box and select a signal connected to a digital channel to send through the analog input.
4. To set the voltage reference level thresholds of the channel for the instrument to use when converting an analog waveform to digital format to include in a bus, click the Digital Properties button.
5. To choose whether to share threshold settings or to have independent threshold settings, click in the Channel Settings box, and select Shared or Independent from the list.
6. For each threshold you want to change, click the channel threshold entry box, and use the keypad or multipurpose knobs to set the threshold level.
7. Click OK.

What do you want to do next?

- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)

Setting Up Digital Channels

NOTE. *Acquiring digital signals is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

You can set the voltage reference level threshold, position, and display size parameters for digital signal acquisition. To do so, follow these steps:

1. Connect the logic probe to the input signal source using proper probing and connecting techniques.
2. Click [here \(see page 81\)](#) for details on setting up the Digital input controls.

3. Use the multipurpose knob to change the vertical position of the waveform on the screen. Dragging the waveform handle also positions the waveform.
4. Use the Horizontal knobs to scale and position the waveform on the screen and to set the record length. Dragging the reference icon also positions the waveform.
5. Use the Resolution knob to set the record length and sample interval.

Setting Up a Bus

NOTE. *The MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE can display waveforms as a bus.*

You can set up parallel or serial buses. For both types of buses, follow these steps:

1. From the Digital or the Vertical menu, select Bus Setup.
2. Select the Select tab, scroll through the Bus list, and select the Bus <B1-B16> to configure.
3. To toggle the display of the bus on or off, click the Bus <B1-B16> button.
4. To change the default label of the bus, click the Label box, and use the keyboard to enter a new label.
5. To change the position of the bus in the display, click the Bus Position box, and use the keyboard or multipurpose knob to adjust the bus position.
6. Continue to set up specific parameters:
 - [for a parallel bus \(see page 454\)](#)
 - [for n SPI Serial Bus \(see page 455\)](#)
 - [for an I2C bus \(see page 456\)](#)
 - [for a USB bus \(see page 457\)](#)
 - [for an RS-232 bus \(see page 456\)](#)
 - [for n MIPI CSI2 Serial Bus \(see page 458\)](#)
 - [for n MIPI DSI1 Serial Bus \(see page 457\)](#)

Setting Up a Parallel Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up a parallel bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Parallel as the Bus Type.
2. To add sources to the parallel bus, click the Add Sources Select button. The Bus Source Selection dialog appears.

3. In the Bus Source Selection dialog , click the button for each channel you want in the bus.
4. Click OK.
5. To move a channel within the parallel bus, scroll to and select the channel you want to move, and then click the up or down arrow buttons.
6. To remove a channel from the bus, scroll to and select the channel you want to remove, and then click the Remove button.
7. To set the voltage reference level thresholds, click the Thresholds Setup button.
8. Click the Channel Settings box, and select Shared or Independent. To set the thresholds to the same level for all the analog channels (Ch), select Shared.
9. Double-click a channel Threshold entry box, and use the keypad or multipurpose knobs to enter a threshold level.
10. To set the thresholds to the same level for all the analog, math and digital channels, click the Global Threshold entry box, and use the keypad or multipurpose knobs to enter the threshold level. Click Apply.
11. Click OK.
12. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up an SPI Serial Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an SPI serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select SPI from the drop-down list.
2. To select the input for the displayed components of the bus, click on a component Input and select a channel from the cascading list.
3. To set an input voltage reference threshold level, double-click the Threshold entry box and use the keypad to enter the level.
4. To set the input polarity, click the Polarity entry box, and select Rising or Falling or Active Low or Active High from the drop-down lists.
5. To set the input word size, double-click the Word Size entry box, and use the keypad or multipurpose knobs to enter the size.
6. To set the input direction, click the Bit Order entry box, and select MS First or LS First from the drop-down list.
7. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up an I2C Serial Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an I2C serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select I2C from the drop-down list.
2. To select the input for the displayed components of the bus, click on the component Input and select a channel from the cascading list.
3. To set an input voltage reference threshold level, double-click the Threshold entry box and use the keypad to enter the level.
4. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up an RS-232 Serial Bus

NOTE. *This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.*

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an RS-232 serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select RS-232 from the drop-down list.
2. To select the input for the displayed components of the bus, click on a component Input and select a channel from the cascading list.
3. To set an input voltage reference threshold level, double-click the Threshold entry box and use the keypad to enter the level.
4. To set the input polarity, click the Polarity entry box, and select Normal or Inverted from the drop-down lists.
5. To set the input data bits, double-click the Data Bits drop-down list, and select use the keypad or multipurpose knobs to enter the size.
6. To set the parity, click Parity entry box, and select None, Odd, or Even from the drop-down list.
7. To set the bit rate, click Bit Rate entry box, and select Custom, 50, 300, 1200, 2400, 9600, 19200, 38400, 115200, 921600, or 10000000 from the drop-down list.
8. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up a USB Serial Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an USB serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select USB from the drop-down list.
2. To select the input for the displayed components of the bus, click on a component Input and select a channel from the cascading list.
3. To set an input voltage reference threshold high level, double-click the Threshold (H) entry box and use the keypad to enter the level.
4. To set an input voltage reference threshold low level, double-click the Threshold (L) entry box and use the keypad to enter the level.
5. To set the speed, click the Speed entry box, and select Low (1.5 Mbps) or Full (12 Mbps) from the drop-down lists.
6. To set the signal type, click the Signal Type entry box, and select Differential or Single Ended from the drop-down list.
7. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up an MIPI DSI-1 Serial Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an MIPI DSI-1 serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select MIPI DSI-1 from the drop-down list.
2. To set the channel type, click the Channel Type entry box, and select Analog or Digital from the drop-down lists.
3. To select the input for the displayed components of the bus, click on a component Input and select a channel from the cascading list.
4. To set an input voltage reference threshold level, double-click the Threshold entry box and use the keypad to enter the level.
5. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Setting Up an MIPI CSI-2 Serial Bus

First, [follow the common steps to set up any bus \(see page 454\)](#). To continue to set up an MIPI CSI-2 serial bus, follow these steps:

1. To define the bus type in the Bus Setup window, click Serial as the Bus Type, and select MIPI CSI-2 from the drop-down list.
2. To set the channel type, click the Channel Type entry box, and select Analog or Digital from the drop-down lists.
3. To select the input for the displayed components of the bus, click on a component Input and select a channel from the cascading list.
4. To set an input voltage reference threshold level, double-click the Threshold entry box and use the keypad to enter the level.
5. Click the Display tab, and [configure the bus display \(see page 459\)](#).

Configuring the Bus Display

You can configure the bus components, and decoding of parallel and serial buses. To do so, follow these steps:

1. From the Bus Setup menu, click the Display tab, scroll through the Bus list, and select the bus to configure its display.
2. Click the desired display component for the bus: Waveform, Busform, or Both.
3. Click the desired display style for the decoding method: Hex or Binary.

NOTE. *Mixed, Decimal, and ASCII decoding methods are available for USB serial bus type.*

ASCII and Packet View decoding methods are available for RS-232 serial bus type.

Mixed decoding methods like symbol for DT (Data Type MIPI element), decimal for VC (Virtual Channel MIPI element) and WC (Word Count MIPI element), and hexadecimal for all other fields are available for MIPI DSI-1 serial bus type.

4. If you also want the instrument to use a symbol table file for decoding, click the Use Symbol File check box, double-click the entry box, and click the Browse button to locate the file.

NOTE. *This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.*

NOTE. *The symbol file must [follow a specific format, \(see page 130\)](#) and reside in the C:\TekScope\BusDecodeTables directory for the instrument to locate the file, decode the bus, and display the symbols.*

5. For some serial buses, such as for an I2C bus, you can choose to include an R or W in the displayed address.

Tracking Down I2C Serial Bus Anomalies

NOTE. *This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.*

You can use your oscilloscope, with its bus triggering and long-record length management features, to track down a problem in the physical layer and the protocol layer of a bus. To track down I2C bus anomalies, follow these steps:

1. Connect a probe between a Ch <1–4> input of the instrument and the SCLK signal of the I²C serial bus in your system under test.
2. Connect a second probe between one of the other Ch inputs of the instrument and the SDA data signal of the bus.
3. Push the Autoset front-panel button.
4. From the Digital menu, select Bus Setup.
5. Click Serial as the Bus Type and select I2C.
6. Click the Input box of the SCLK component and select the channel connected to the SCLK signal in step 1.
7. Double-click the Threshold entry box, and use the keypad or the multipurpose knobs to change the voltage reference threshold level.
8. Click the Input box of the SDA component and select the channel connected to the SDA signal in step 2.
9. Double-click the Threshold entry box, and use the keypad or the multipurpose knobs to change the level.
10. Click the Config tab and set the bus display parameters. The instrument acquires, decodes and displays data from the bus customized for you to more readily interpret and analyze activity on the bus.
11. From the Trig menu, select Bus Setup.
12. Click the Bus box and select the appropriate Bus setup <B1-B16> to acquire data from the I²C bus.
13. Click the Trigger On box , and select the bus cycle or activity for the instrument to use as the trigger.

For some Trigger On selections, you need to set additional fields to define other parameters such as for an Address. In this example, you need to set an Address Format, Address Value (click the Edit button), Data Direction, and Addressing Mode. Optionally, you can also set the component threshold levels through the Logic Thresholds Setup button.
14. Acquire data and analyze the physical layer. If an analog channel is displayed, you can use Cursors to take manual measurements or you can take automatic measurements.
15. Push the MultiView Zoom button and scroll to see all the events. Do you have all the packets that you expected to have? If not, at least you have narrowed your search down to the last packet sent.
16. Analyze the decoded packets in the protocol layer. Did your program send the data bytes in the correct order? Did you use the correct address?



What do you want to do next?

- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)


Troubleshooting Circuits Using a Parallel Bus

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

You can use digital, analog, or math waveforms to create, monitor, and analyze a parallel bus with your instrument. The supported instruments let you see the on-off status of the signals and decodes the parallel bus signals for you.


1. Connect a logic probe to the logic probe port on the front panel.
2. Connect the logic probe tips for data to test points for signals of interest in your system under test. For parallel buses that include a clock signal, connect the Clock probe tip to a clock signal in your system under test.
3. From the File menu, select Recall Default Setup. Push the Ch1 1 button to remove the waveform from the display.
4. From the Digital menu, select Digital Setup.
5. Click the digital channel buttons for the channels you plan to use in your parallel bus. For a wider bus, click the other tab and select more digital channels. To remove a channel, click the channel button again.
6. From the Digital menu, select Bus Setup.
7. Click Parallel as the Bus Type.
8. Click the Add Sources Select button.
9. In the Bus Source Selection dialog, click the channels to use in the parallel bus. Click OK.
10. Arrange the channels in the desired bit order in the Bus Contains list of channels. To change the bit order of a channel in the bus, select the channel, and click the up or down arrows to move the channel to a more or a less significant bit position.
11. Click the Thresholds Setup button, double-click the Threshold entry box for each channel used, and use the keypad or the multipurpose knobs to change the voltage reference threshold level. You can also set all the thresholds to the same level with the Global Thresholds entry box. Click OK.
12. To include a clock signal, click the Clocked check box. Then, click the Clock Source box, select the appropriate channel from the drop-down list, and also select which edge to use in the Clock Polarity box: Rising, Falling, or Either.
13. Click the Config tab and set the bus display parameters. The instrument acquires, decodes and displays data from the bus customized for you to readily interpret and analyze activity on the bus.
14. To decode the parallel bus with a symbol table file, click the Use Symbol check box, and enter the full path to the file in the entry box or use the Browse button to locate the file. The file must reside on the instrument in the C:\TekScope\busDecodeTables directory.

Here is the symbol table file used in this troubleshooting example.

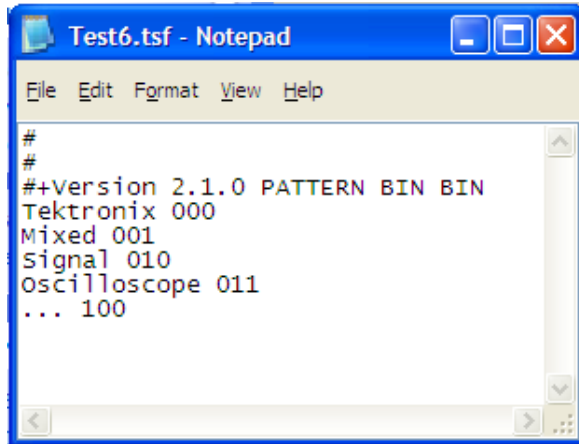

```
Test6.tsf - Notepad
File Edit Format View Help
#
#
#+Version 2.1.0 PATTERN BIN BIN
Tektronix 000
Mixed 001
Signal 010
Oscilloscope 011
... 100
```

15. Acquire data and analyze the physical layer. If an analog channel is displayed, you can use Cursors to take manual measurements or you can take automatic measurements.
16. Turn the Horizontal Scale knob to adjust the time base.
As you increase the time per division, you will see more data appear in the Bus display.
17. From the Trig menu, select the Bus trigger type.
18. Click the Bus box and select the appropriate bus setup <B1-B16> to acquire data from the parallel bus.
19. Click the Trigger If Logic State Goes box , and select True or False.
20. Click the Edit button, select the Format as Binary, Hex, or Symbolic, and enter a bus pattern for the instrument to use as the trigger event. Click OK.
21. Acquire data from the parallel bus.
22. Push the MultiView Zoom front panel button, and scroll to the areas of interest to analyze the results.

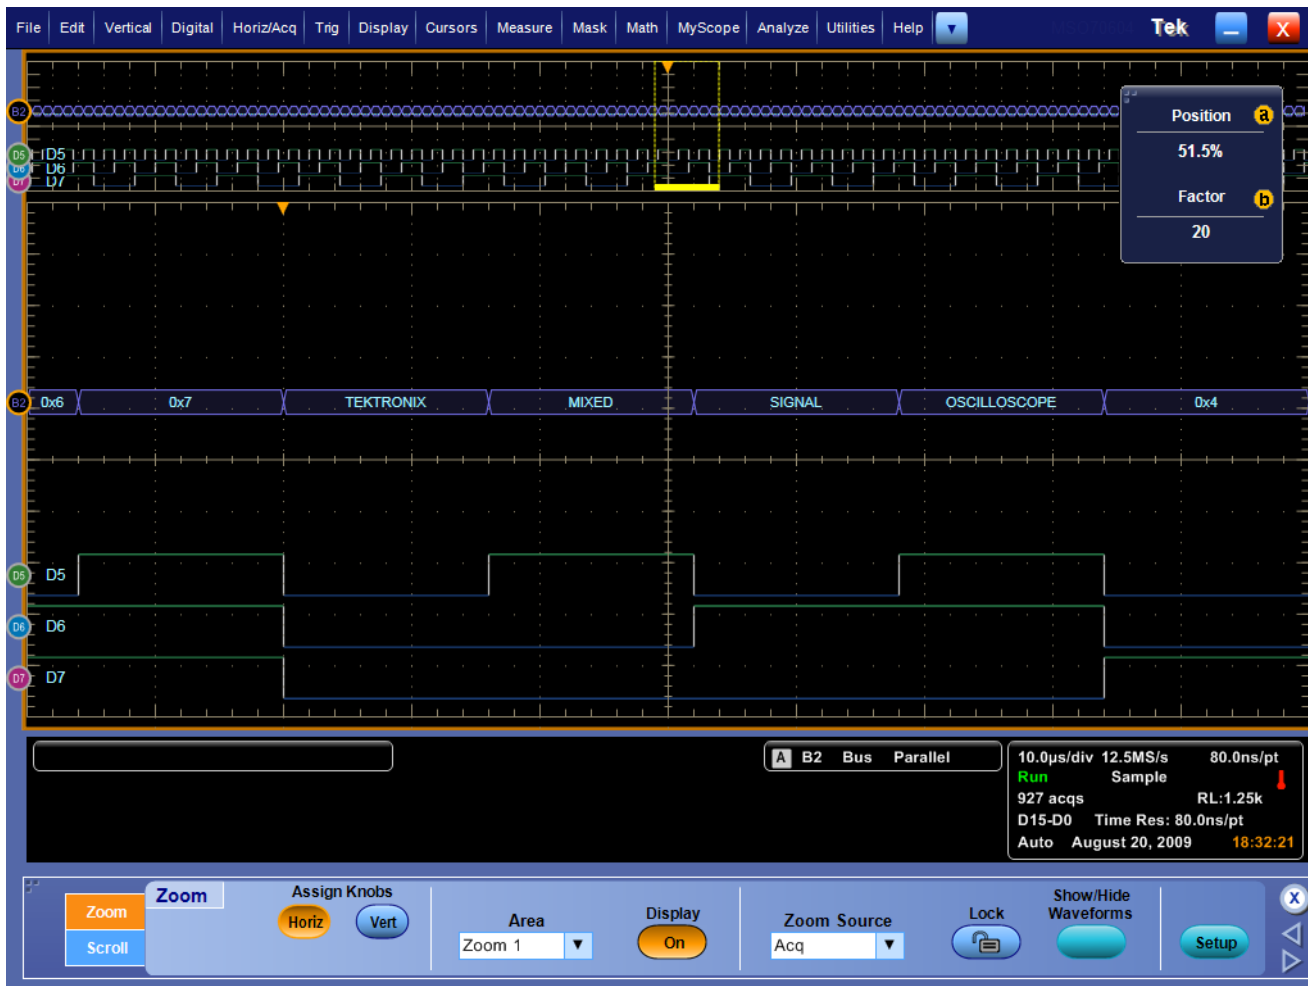

What do you want to do next?

- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)
- [Learn about symbol tables for parallel buses. \(see page 129\)](#)

Troubleshooting an SPI Serial Bus

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

There are various situations where you need to look at analog characteristics of a digital signal in a digital circuit. For example, you may want to analyze the signal integrity of a signal in a system under test, such as for an SPI serial bus.

You can use the supported instrument, with its 4 analog channels and 16 digital channels (plus a clock/qualifier) to track down the problem. It will even decode your SPI signals into ASCII characters.

To analyze the signal integrity of an SPI signal, you need to acquire and display the signal. Then, you will look at both the analog and digital representations of the signal. Finally, you will search through each SPI byte with the search and mark functions.

1. Connect a logic probe to the probe port on the front panel.
2. Connect the probe tip for D3 to a test point for the Data signal in your SPI system under test. It's convenient to use D3 because it matches the default channel assignment for the SPI bus setup.

NOTE. *You can connect any digital channel to the SPI signals, as long as you also set the signals to map to the appropriate digital channel in the Bus Setup menu.*

3. Connect D4 to a test point for the SCLK signal.
4. Connect D2 to a test point for the SS signal.
5. From the File menu, select Recall Default Setup.
6. Push the Ch 1 front-panel button to turn off the channel.
7. From the Digital menu, select Bus Setup.
8. Click an unused Bus from the list <B1-B16>.
9. Click the Bus On button.

NOTE. *You can double-click the Label box and use the keypad to enter a name for the bus, and adjust the position of the bus on the screen. You can also click the bus handle and drag it to reposition the bus on screen.*

10. Click Serial as the Bus Type.
11. Click the arrow and select SPI from the list of bus standards.

The default channel assignments are for the Data component to be acquired on D3, the SCLK component on D4, and the SS component on D2.

12. Click the Config tab and set the bus display parameters, such as to display a busform. The instrument acquires, decodes and displays data from the bus customized for you to readily interpret and analyze activity on the bus.
13. To decode the bus as ASCII characters, you can create a with ASCII and click the Use Symbol check box.

The [must follow a specific format \(see page 130\)](#), and reside in a specific directory where the instrument can locate and use the file. You can use the entry box to enter the path or to Browse to the file.

14. Turn the Horizontal Scale button to adjust the time base.

As you increase the time per division, you will see more data appear in the Bus display.

15. From the Trig menu, select Bus Setup.


16. Click the Bus box and select the appropriate bus <B1-B16> from which to acquire, decode, and display data.

17. Click the Trigger On box, and select an SPI trigger: SS Active or Data.

18. For Data, click the Edit button, select the Format as Binary, or Hex to use. Enter a bus pattern for the instrument to use as the trigger event. Click OK.

19. Acquire data from the serial bus.

20. Push the MultiView Zoom front panel button, and scroll to the areas of interest to analyze the results.

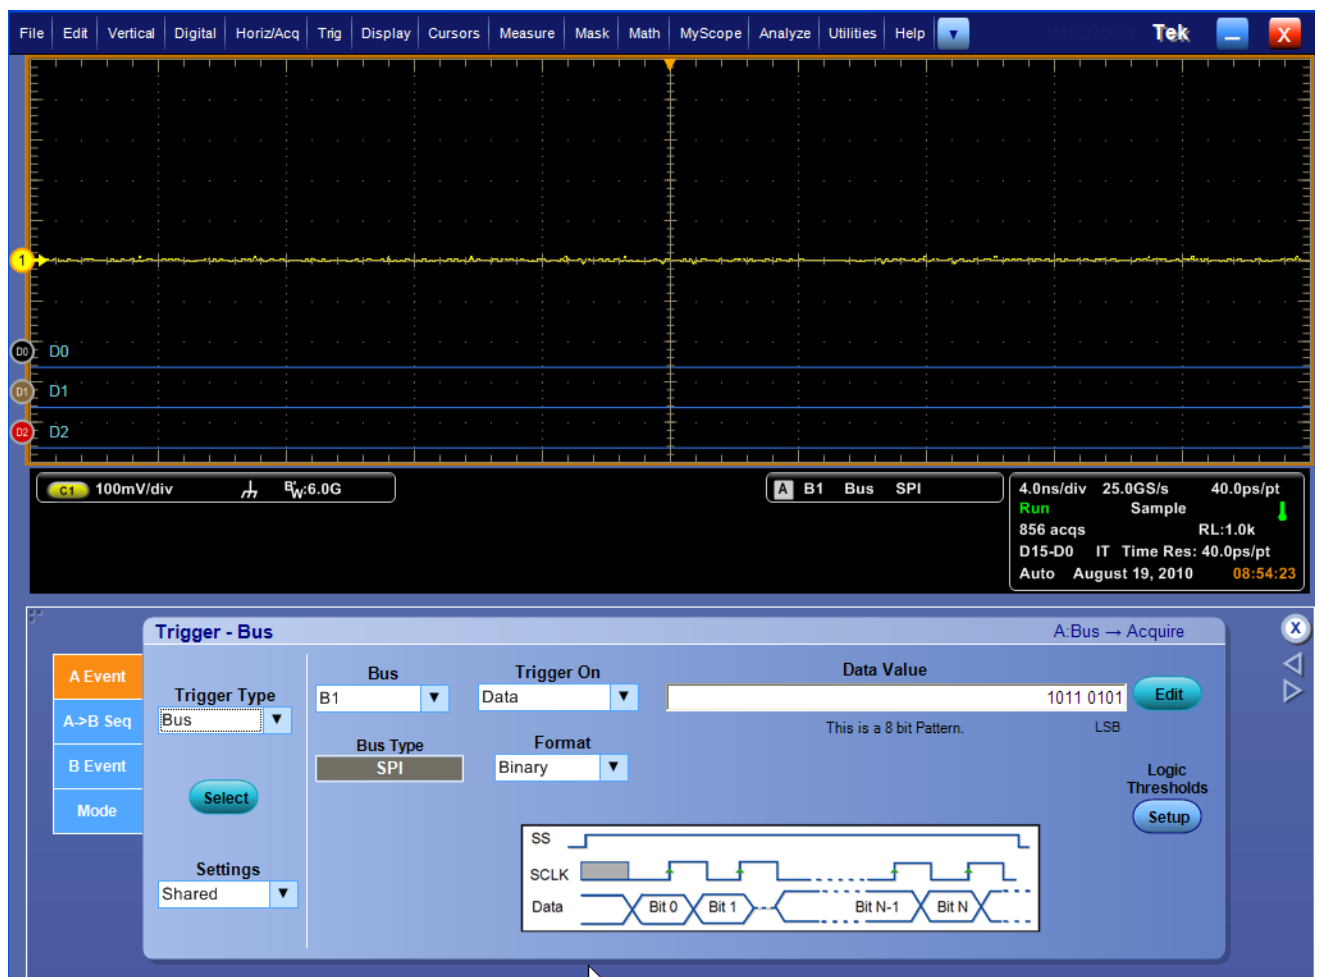

What do you want to do next?

- [Learn about digital setups. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)
- [Learn about bus configuration. \(see page 124\)](#)

Creating MyScope Control Windows

Use this procedure to create your own control windows:

1. From the MyScope menu, select New Control Window.
2. Click on the (+) to expand a control group and see the available controls within that group.
3. Click on a selection to see the control in the preview window.
4. Clear the check boxes for any controls that you do not want to appear. Most controls show all check boxes selected by default.
5. Drag the customized control to your MyScope control window. You can also move a control after it has been placed in the new control window by dragging it.
6. To remove the control from the custom control window select it, and then click the Delete button.
7. Click New Tab to add up to eight tabs.
8. Click the Rename Tab to create a unique name for each tab in your control window.
9. Click the User Pre button, and then select the user preferences you want to apply to this control window.
10. By default, the preferences are the same as what is currently set on your instrument. The preferences you set from the MyScope Setup window only apply to your MyScope control window. The preferences will take effect when the MyScope control window is activated.
11. Click Save or Save As to save your MyScope control window.
12. Enter a unique name for your MyScope control window and click Save. (This name will display in the upper-right corner of the control window when you open it.) The default location to save MyScope files is C:\TekScope\MyScope.
13. From the MyScope menu, click Open Control Window....
14. Select the MyScope control window that you want from the Open MyScope Control Window dialog box, then and click Open.

Editing MyScope Control Windows

Use the following procedure to edit previously defined MyScope control windows.

1. From the MyScope menu, select Edit Control Window.
2. Select the MyScope control window that you want to edit from the Edit MyScope Control Window dialog box. The control window you selected opens in the MyScope Setup control window.
3. Edit the control window using the same procedures as you did to [create the control window](#). (see [page 468](#))
4. Click Save to save your changes to this control window.
5. Click Save As to save your changes as a different control window. Enter a unique name for your MyScope control window, and click Save. The default location to save MyScope files is C:\TekScope\MyScope.

Creating MyScope Control Windows

Use this procedure to create your own control windows:

1. From the MyScope menu, select New Control Window.
2. Click on the (+) to expand a control group and see the available controls within that group.
3. Click on a selection to see the control in the preview window.
4. Clear the check boxes for any controls that you do not want to appear. Most controls show all check boxes selected by default.
5. Drag the customized control to your MyScope control window. You can also move a control after it has been placed in the new control window by dragging it.
6. To remove the control from the custom control window select it, and then click the Delete button.
7. Click New Tab to add up to eight tabs.
8. Click the Rename Tab to create a unique name for each tab in your control window.
9. Click the User Pre button, and then select the user preferences you want to apply to this control window.
10. By default, the preferences are the same as what is currently set on your instrument. The preferences you set from the MyScope Setup window only apply to your MyScope control window. The preferences will take effect when the MyScope control window is activated.
11. Click Save or Save As to save your MyScope control window.
12. Enter a unique name for your MyScope control window and click Save. (This name will display in the upper right corner of the control window when you open it.) The default location to save MyScope files is C:\TekScope\MyScope.
13. From the MyScope menu, click Open Control Window....
14. Select the MyScope control window that you want from the Open MyScope Control Window dialog box, and then click Open.

Setting Cursor Sources

Use the following procedure to set up cursors on a source waveform.

1. Display the waveform(s) to be measured on the screen.
2. Push the CURSORS front-panel button, or click Cursors on the toolbar to open the Cursor Controls window.
3. In the Cursor Controls window, click the Setup button.
4. Click a Cursor Type button. See [Cursor Types \(see page 470\)](#) for an explanation of the cursor types.
5. Select a Cursor Source from the Source drop-down list.

NOTE. *If you are using H Bars or V Bars there is only one source for both Cursor 1 and 2. If you are using Waveform or Screen cursors, select a source for both Cursor 1 and 2. If a waveform is not available, it appears shaded in the drop-down list.*




6. To change the position of a cursor, use the multipurpose knobs, enter a numeric value in the X and or Y Position entry boxes, or click and drag the cursors to a new position.
7. Select a cursor Track Mode:
 - Indep. Makes each cursor moveable without regard to the position of the other cursor.
 - Tracking. Makes both cursors move in unison and maintain a fixed horizontal or vertical distance between each other.
8. To turn the display of the cursors on or off, push the front-panel Cursor button.
9. For waveform or screen cursors, set the cursor style by selecting one of the following from the list:
 - Lines. Displays the intersection of horizontal and vertical lines. Lines are the default style for Screen cursors.
 - Line & X. Displays the horizontal position as a vertical line; the Y-axis is displayed as an X.
 - X. Displays the horizontal and vertical position as a single X.

Cursor Types

Because cursor measurements give immediate feedback on the amplitude or time values they measure, they are usually quick to take and are more accurate than graticule measurements. Also, since you can position cursors wherever you want them on the waveform, they are easier to localize to a waveform segment or feature than automatic measurements.

The following table defines the cursor types.

Cursor function

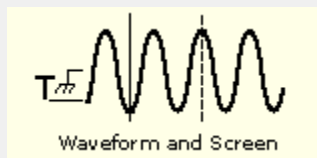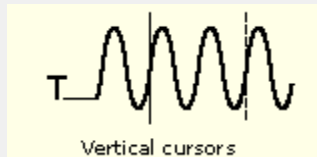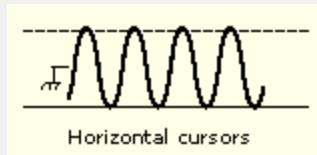

Measurements

Horizontal cursors measure vertical parameters (amplitude) in volts, watts, or IRE. The cursor readouts are defined as:

$V1$ = Level @ Cursor 1 with respect to its source ground level.

$V2$ = Level @ Cursor 2 with respect to its source ground level.

ΔV = Level @ Cursor 2 - Level @ Cursor 1.

Level is cursor displacement from the source ground multiplied by the source in volts/div. The two cursors may have different sources and therefore can have different volts/div settings.

Vertical cursors measure horizontal parameters. Typically the horizontal parameters are in time or frequency, but depend on the units you select. The cursor readouts are defined as:

$T1$ = Time @ Cursor 1 with respect to the trigger point

$T2$ = Time @ Cursor 2 with respect to the trigger point

ΔT = Time @ Cursor 2 - Time @ Cursor 1

Time is divisions of displacement of the cursor from its source trigger point multiplied by the source in time/div.

Waveform cursors measure vertical parameters (typically volts) and horizontal parameters (typically time or frequency) simultaneously. Each cursor is, in effect, both a vertical and horizontal cursor. These paired cursors cannot be moved off of the waveform. The two cursors can have a different source.

Use screen cursors to indicate an arbitrary X and Y position in the waveform display area represented by the intersection of a vertical and horizontal cursor line. Screen cursors measure both vertical parameters (typically volts) and horizontal parameters (typically time or frequency).

Taking Cursor Measurements

Use the following procedure to take measurements with cursors:

1. To open the Cursor Controls window, press the Cursors button on the front panel, click Cursors on the toolbar, or select Cursor Setup from the Cursors menu.
2. Select the waveform you want to measure and a [Cursor Type \(see page 67\)](#) from the control window.
3. Position the cursors with the multipurpose knobs.
4. Read the cursor information from the on-screen Position controls.

TIP. Select the cursor mode (Tracking or Independent) in the Cursor Setup control window.

NOTE. Cursor measurements are not available on digital channels.

Taking Automatic Measurements

Use the following procedures to quickly take a measurement based on the default settings for High and Low reference levels. The instrument must be installed and operating, with a signal connected to an input channel, and the horizontal and vertical controls and triggering set up.

1. Obtain a stable display of the waveform to be measured.
2. From the toolbar, click Measure to open the Measurement Setup control window.
3. Click the appropriate waveform button for the Channels <1– 4> and Ch, Math, or Ref Source tab.
4. Select the tab on the Measurement Setup control window that contains the measurement you want to take:
 - Ampl
 - Time
 - More
 - Histog
 - Comm
5. Click a button for the Measurements type.

The readout for the measurement and associated statistics is automatically displayed, and the measurement is added to the Measurements list in the control window.

NOTE. In roll mode, measurements are not available until after you stop acquisitions.

NOTE. Automatic measurements are not available on digital channels.

Removing Measurements

1. To remove the measurement, click Clear Selected.
 - The last measurement on the list is removed.
 - To remove any measurement, click the name on the Measurements list to highlight the measurement, and then click Clear.
 - You can click and drag to select and clear several measurements.
 - Toggle the display of measurements on the graticule by clicking the Display button On and Off.

Displaying Measurement Statistics

1. From any tab on the Measurement Setup control window, click Statistics to open the Measurement Statistics control window.
2. From the Measurement Statistics control window you can select from the following options:
 - Off. Turns off the display of measurement statistics.
 - Mean. Displays the mean of measurements.
 - All. Displays the Mean, Min, Max, Standard Deviation, and Population measurements.
3. To set the number of measurements included in the measurement statistics, click Weight n=, and use the multipurpose knobs or pop-up keypad to set the weighting.

Setting Measurement Reference Levels

1. From the toolbar, click Measure to open the Measurement Setup control window.
2. From any tab on the Measurement Setup control window, click Ref Levs to open the Reference Levels Setup control window.
3. To set how the instrument determines the base and top of the waveform, click Determine Base Top From:
 - Min-Max. Uses the highest and lowest values of the waveform record. (See [Automatic Measurements \(see page 590\)](#) High/Low Method for more information.)
 - Histogram. Select the most common values above or below the midpoint. (See Automatic Measurements High/Low Method for more information.)

4. To select the reference level units, click Units:
 - Absolute. Sets the units to absolute values in user units.
 - Percentage. Sets the units as a percentage of the High/Low range.
5. To set the reference levels, click on these controls and use the multipurpose knob or pop-up keypad to set:
 - High Ref. Defines the high reference level. The default level is 90%.
 - Mid Ref. Defines the middle reference level. The default level is 50%.
 - Low Ref. Defines the low reference level. The default level is 10%.
 - Mid2 Ref. Defines the middle reference used on the second waveform specified in delay or phase measurements; the default level is 50%.

Taking Automatic Measurements Procedure

Use the following procedures to take automatic measurements.

NOTE. *This procedure assumes you are using the default reference levels.*

1. Open the Measurement Setup control window by clicking Measure on the toolbar or by clicking Measurement Setup on the Measure menu.
2. Select the source waveform using the [Channels Selector, \(see page 224\)](#) or press one of the front-panel buttons.
3. Select the desired measurements from the measurement tabs. Each measurement is automatically added to the measurement list.

The measurement is added to the display in the same color as the selected channel waveform.

NOTE. *If the waveform is clipped by the edge of the graticule, the measurement readout will display question marks.*

TIP. *You can select an automatic measurement from the menu bar Measure menu by selecting the measurement type (for example, Amplitude) and clicking the measurement. The measurement is taken on the currently selected waveform.*

Localizing a Measurement

Use the following procedure to take a measurement over a segment of the waveform:

1. The instrument must be installed and operating, with a signal connected to an input channel, and horizontal and vertical controls and triggering set up.
2. Obtain a stable display of the waveform to be measured.
3. From the toolbar, click Measure to open the Measurement Setup control window.
4. Under Setups, click Gating from any tab. The Measurement Gating control window opens.
5. To select how to define the gated area, click one of the following:
 - Cursor. Sets the gated area to the area between the cursors. Use the multipurpose knobs to adjust the cursors on screen.
 - Zoom (1–4). Sets the gated area to the waveform area contained in the Zoom (1–4) area.
 - Off. Turns off measurement gating. You can also turn gating off from the Zoom shortcut menu.
6. If you selected Cursor, you must also select the Track Mode:
 - Indep. This mode lets you move one cursor at a time using the multipurpose knobs.
 - Tracking. This mode allows you to move both cursors at the same time. The cursors track one another; moving one cursor moves the other cursor in tandem.

Saving Measurements

Use this procedure to save measurements to a spreadsheet or text format:

1. Measurements that you want to save must be selected.
2. From the File menu select Save or Save As. Under Save What, click Measurement.
3. Click the Options button to open the Measurement Save Options dialog box.
4. Select the Measurement Format from the drop-down list.
5. Click OK to save the measurement options, or click Cancel to close the dialog box without saving the changes.
6. To save the measurements to a file, select the location to save from the Save in drop-down list. The default location is C:\TekScope\data.
7. Use the default name for your file, type a unique name into the Name text box, or select an existing name from the Name list (data in the existing file will be overwritten). You can also select the Auto-increment file name check box to save a series of files without typing in a new name each time.
8. Select the file type from the Save as type drop-down list; this is the same as the Measurement format that you selected in the Options dialog box.
 - Use .csv for spreadsheets.
 - Use .txt for text.

NOTE. *Changing the file type here will also change the selected format in the Option dialog.*

9. Click Save.

Using Math Waveforms

Use the same techniques to work with math waveforms that you use with channel waveforms. This procedure demonstrates some common operations that you can perform on math waveforms:

NOTE. *Math calculations are not available on digital channels.*

NOTE. *Each math waveform you create derives its horizontal scale and position from the sources you include in its math expression. You can adjust these controls for the source waveforms, and your adjustments are reflected in the math waveform.*

You can also magnify math waveforms using MultiZoom, and use the mouse for positioning.

Prerequisites

A math waveform must be defined and displayed.

Creating a Math Waveform

Use the following procedure to create a math waveform. Ensure that the sources, waveforms, and measurement scalars you will use are present. The sources do not have to be displayed.

1. From the toolbar, click the Math button to open the Math Setup control window.
2. Select the Math tab for the math waveform you want to create; then click Display Off/On to toggle it on.

TIP. *If the waveform that you select already exists, its math expression appears in the window. You can still use the waveform by clicking Clear, which discards the previous math expression. You may also want to select another waveform.*


3. Click one of the Predefined Functions buttons to use a predefined math expression, or click Editor to access the Math Equation Editor.
4. Use the Math Equation Editor control window to define a math expression. See [Creating Math Waveforms \(see page 477\)](#) for examples, and use the following guidelines:
 - Math definitions are not implemented if the sources are not valid.
 - Use the Bksp (backspace) button to remove the last entry; click Clear to remove the entire expression and start over.
 - Use parentheses to group terms in the expression to control execution order, for example, 5(Ch1 + Ch2).
5. Select the Time, Spectral, Var, Meas, or Filter tabs to display the available functions.
6. Click a Primitive button to enter the function in the math expression. Click an operand button (+, -, *, /) to insert an operand.
7. Use the Home and arrow buttons to move within the math expression. Use the Bksp (backspace) button to delete portions of the expression.
8. Click Apply to apply your new math expression to the math waveform.
9. Click Avgs to open the Math Averaging control window. The controls in the window apply to the math waveform defined by the expression.
10. Click in one of the Math <1–4> n = entry boxes, and then set the number of averages using the multipurpose knobs or pop-up keypad. This number of averages affect math waveforms if the Avg() function is used.
11. Once you have defined the math expression, click Apply in the Math Setup or Math Equation Editor windows.

Creating Math Waveforms

You create math waveforms when you create a math expression. You do so by applying numerical constants, math operators and functions to operands. You can display and manipulate these derived math waveforms much like you can the channel and reference waveforms (see [Using Math Waveforms \(see page 475\)](#)).

Some examples of typical math waveforms follow:


To normalize this waveform:

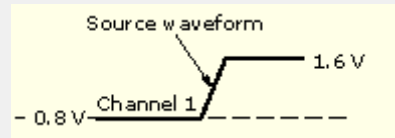


Enter this math expression:

$(Ch1 - Meas1) / Meas2$, where Ch1 is the waveform shown at left Meas1 = Low of Ch1 Meas2 = amplitude of Ch1

 And get this math waveform:

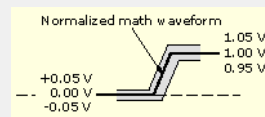


To simulate AC coupling on this waveform:

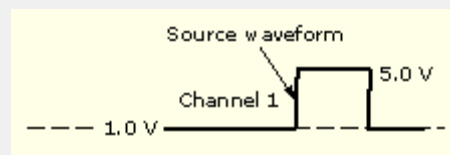

Enter this expression:

$Intg(Ch1 - Avg(Ch1))$, where Ch1 is the waveform shown at left Avg is the average function

And get this math waveform:

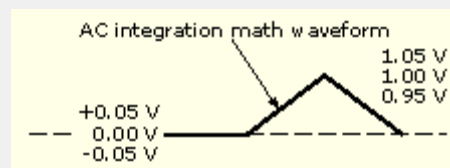

Offset, Position, and Scale

The settings that you make for offset, scale, and position affect the math waveform you obtain. Here are some tips for obtaining a good display:

- Scale and position the source waveform so that it is contained on the screen. (Off-screen waveforms may be clipped, resulting in errors in the derivative waveform.)
- Use vertical position and vertical offset to position your source waveform. The vertical position and offset will not affect your derivative waveform unless you position the source waveform off screen so that it is clipped.

Select and Display

1. Click the Math toolbar button to open the Math Setup control window.
2. Select the tab for the math waveform that you want to work with.
 - If the waveform you select is not defined, use the [Creating a Math Waveform \(see page 476\)](#) procedure to define the math waveform.
 - If the waveform is not displayed, click Display.

Set Scale and Position

1. Click in the Position and Scale entry boxes and use the multipurpose knobs or pop-up keypad to size and position the waveform on the screen.

Keep in mind the following:

- The position is in divisions, so changing the scale can make the math waveform disappear until position is also changed (the same effect happens with channel waveforms).
- You can click and drag a waveform handle to change the waveform vertical position.
- You can change the waveform vertical position and scale by clicking on the waveform handle and using the multipurpose knobs to adjust.
- You cannot adjust the offset of a math waveform.
- You cannot adjust horizontal scale, position, and sample density (resolution) of math waveforms; different length source waveforms result in a math waveform of the shortest source record length. If you adjust these settings for sources of a math waveform, the adjustments are reflected in the math waveform.

Take Automatic Measurements

1. Click the Measure toolbar button to open the Measurement Setup control window.
2. Select the Channels Math tab, and click a channel button to choose a math waveform.
3. Select a Measurements type (for more information, see [Taking Automatic Measurements \(see page 471\)](#)).
4. To display the measurement, click Display to toggle it to on.

NOTE. *Automatic measurements are not available on digital channels.*

Take Cursor Measurements

1. Click the Cursor toolbar button to display the cursors and open the Cursor Controls window.
2. Select the cursor type by clicking either H Bars, V Bars, Screen, or Waveform (for more information, see [Taking Cursor Measurements \(see page 470\)](#)).
3. Use the multipurpose knobs to position each cursor on the math waveform to measure the feature that interests you.
4. Read the results in the cursor readout. The cursor readout is displayed under the multipurpose readouts or in the upper right corner of the graticule area.

NOTE. *Cursor measurements are not available on digital channels.*

NOTE. *The amplitude measurements on a derivative waveform are in volts-per-second, and volt-seconds for an integral waveform measurement.*

Creating Math Waveforms using Predefined Expressions

Use the following steps to create math waveforms using predefined expressions:

1. Open the Math Control window by clicking Math on the toolbar or by clicking Math Setup in the Math window.
2. Select a Math waveform by clicking one of the tabs in the control window.
3. Click one of the Predefined Expression buttons in the control window. The predefined expression is added to the math expression at the top of the control window and the math waveform appears on the screen.

TIP. *You can select Predefined Expressions directly from the Math menu.*

Creating Math Waveforms with the Equation Editor

Use the following steps to create math waveforms using the Equation Editor:

1. Open the Math Setup control window by clicking Math on the toolbar, or by selecting Math Setup in the Math menu.
2. In the Math Setup control window, click the Editor button to open the Math Equation Editor.
3. Select a Math waveform from the drop-down list.
4. Select a math function by clicking a button under the tabs on the left side of the Equation Editor (for example, click Derivative).
5. Select a valid waveform to use as an operand from the [Channels Selector \(see page 224\)](#).
6. Use other buttons in the Equation Editor as necessary to create the math expression for the math waveform.
7. Click OK to create and display the math waveform.

Creating a Math Waveform

Use the following procedure to create a math waveform. Ensure that the sources, waveforms, and measurement scalars you will use are present. The sources do not have to be displayed.

1. From the toolbar, click the Math button to open the Math Setup control window.
2. Select the Math tab for the math waveform you want to create; then click Display Off/On to toggle it on.

TIP. *If the waveform that you select already exists, its math expression appears in the window. You can still use the waveform by clicking Clear, which discards the previous math expression. You may also want to select another waveform.*

3. Click one of the Predefined Functions buttons to use a predefined math expression, or click Editor to access the Math Equation Editor.
4. Use the Math Equation Editor control window to define a math expression. See [Creating Math Waveforms \(see page 594\)](#) for examples, and use the following guidelines:
 - Math definitions are not implemented if the sources are not valid.
 - Use the Bksp (backspace) button to remove the last entry; click Clear to remove the entire expression and start over.
 - Use parentheses to group terms in the expression to control execution order, for example, 5(Ch1 + Ch2).
5. Select the Time, Spectral, Var, Meas, or Filter tabs to display the available functions.
6. Click a Primitive button to enter the function in the math expression. Click an operand button (+, -, *, /) to insert an operand.
7. Use the Home and arrow buttons to move within the math expression. Use the Bksp (backspace) button to delete portions of the expression.
8. Click Apply to apply your new math expression to the math waveform.
9. Click Avgs to open the Math Averaging control window. The controls in the window apply to the math waveform defined by the expression.
10. Click in one of the Math <1–4> n = entry boxes, and then set the number of averages using the multipurpose knobs or pop-up keypad. This number of averages affect math waveforms if the Avg() function is used.
11. Once you have defined the math expression, click Apply in the Math Setup or Math Equation Editor windows.

Setting Up Mask Testing

Use the following procedure to set up the instrument to perform mask testing.

1. Connect the instrument to the source signal or save the source signal to a math or reference waveform memory location.
2. Access the mask setup window:
 - a. From the toolbar, click Masks to display the Mask Testing control window.
 - b. From the Source/Tolerance tab select the channel, math, or reference tab, and then select the waveform to use as the mask test source. You can only mask test one waveform at a time.
3. Specify the mask Type:
 - a. Open the Masks tab.
 - b. Click the appropriate button in the Type field.
 - c. Click the More button to display further selections.

NOTE. This window lists the mask types and standards available on your instrument. Industry standard masks are available. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.

TIP. Selecting a mask type and standard adjusts the instrument horizontal, vertical, and trigger settings to those appropriate for displaying a waveform of the specified type. If the signal is not found within the mask, do the following:

- Click the Autoset button to center the waveform in the mask.
 - If Autoset did not align the signal within the mask, adjust the instrument vertical and horizontal controls.
 - If you clicked the Autoset button and the Autoset Undo preference is On, the instrument will display an Autoset Undo window. Click the Undo button to return to the previous settings, or click the X icon to remove the window.
4. Select a standard from the drop-down list to specify the mask standard.

5. Specify the display parameters:
 - a. In the Masks tab, click the Display button to toggle mask display on or off. The mask must be turned on to do mask testing.
 - b. Click the Hit Count button to turn on or off hit counting. The hit count is shown in the Pass/Fail Results tab.
 - c. Click the Display Config button to set mask hit highlighting and to lock the mask to the waveform. Lock Mask to Wfm (Waveform) resizes the mask to reflect changes in the horizontal or vertical settings of the instrument.
6. Autoset the signal:
 - a. In the Masks tab, click the Autoset button to have the instrument automatically adjust instrument settings to align the waveform to the mask based on the characteristics of the input signal. Autoset is performed on the first waveform acquired after clicking the Autoset button.

NOTE. *If the Autoset Undo preference is On, the instrument will display an Autoset Undo window allowing you to do the following:*

- Click the Undo button to return to the previous settings.
- Click the X icon to remove the window.

NOTE. *Selecting the AutosetConfig button opens the Mask Configuration - Autoset window that lets you do the following:*

- Set the vertical, horizontal, and trigger autoset parameters.
- Activate autofit or autoset.
- Select the autoset mode.
- Return to the default autoset configuration.
- Return to the Mask Setup control window.

7. Enable and set the waveform autofit parameters:
 - a. In the Masks tab, click the Autofit button to enable the waveform autofit function.

Autofit checks each waveform for any mask hits. If there are hits, autofit repositions the waveform to minimize hits. The number of hits reported is the number after autofit has minimized hits.

The autofit Config button lets you do the following:

- Set the autofit maximum waveform repositioning parameters (as a percentage of the horizontal and vertical divisions).
 - Return to default settings.
 - Return to the Mask Setup control window.
 - Change the vertical or horizontal autofit parameters.
8. Click the Masks button to return to the Mask Testing control window.
 9. Set the mask test tolerance margins:
 - a. From the Source/Tolerance tab, you can set the percentage of margin used in the mask test. Click in the Margins entry box and use the multipurpose knob, pop-up keypad, or the up/down arrow buttons to enter the mask margin tolerance percentage. The range of values is -50% to 50%

NOTE. *Margin tolerance settings greater than 0% expand the size of the segments, making the mask test harder to pass; margin tolerance settings less than 0% (negative percent) reduces the size of the segments, making the mask test easier to pass.*

10. Set the Mask test pass and fail parameters:

- a. Open the Pass/Fail Setup tab of the Masks Testing control window.
- b. Use the control knob, keypad, or pop-up keypad to enter the number of waveforms to test (number of samples in some modes), the failure threshold (the number of waveforms that must fail to fail the test), and the delay time (the time from when mask test starts to when the instrument begins sampling).
- c. Click the Test Fail Notification buttons to set up what the instrument does when a mask test fails:
 - Initiate an instrument beep (BEEP).
 - Send an e-mail (E-mail).
 - Save Wfm. This saves the waveform data of the first waveform that causes the test to fail to a .wfm file.
 - Log Date. This saves the time, date, and basic test information of the first waveform that causes the test to fail to an ASCII text (.txt) file.
 - Stop the signal acquisition immediately (Stop Acq).
 - Send the instrument screen image to a printer (Print).
 - Send an SRQ on the GPIB bus (SRQ).

NOTE. *Files are saved to the location specified by the Path button. The file name format is YYMMDD-HHMMSS, where YY is year, MM is month, DD is day, HH is hour, MM is minutes, and SS is seconds. You may also need to select a sound source to enable the BEEP. See [Selecting the Sound Source for more information \(see page 194\)](#).*

11. Use the Test Pass Notification buttons to set what the instrument does at the successful completion of a mask test.
12. Use the Polarity buttons to set mask and waveform polarity. Positive tests the positive waveform pulses. Negative inverts the mask and tests the negative waveform pulses. Both test the first half of the waveforms in positive polarity mode, and then test the remaining waveforms in negative polarity mode.
13. Toggle the Repeat button to On to set the instrument to repeat (continue) mask testing on the completion of each test.

Creating a New User Mask

Use following procedure to create a new user mask that is not based on an existing mask:

1. Use the communications trigger features to trigger the instrument on a signal. The instrument saves these settings with the mask information.
2. From the toolbar, click Masks.
3. In the Mask Testing control window, open the Masks tab.
4. Click the User Mask button.
5. In the User-Defined Mask drop-down list, select None.
6. Click the Copy Current Mask To User Mask button. If you are asked if you want to overwrite the current user mask, click the Yes button.
7. Click the Edit User Mask button to display the user Mask Edit functions.
8. Click in the Segment entry box and use the up/down arrows, multipurpose knob, or keypad to enter or select segment 1.
9. Click the Vertex Add button. The instrument draws the default new segment shape, a triangle.
10. Use the instructions on [Editing a User Mask \(see page 486\)](#), starting at step 5 to edit a segment.
11. Repeat steps 9 through 11, selecting an unused and sequential segment number, to create and edit more segments.
12. See [Saving a User Mask to Disk \(see page 486\)](#) procedure.

NOTE. *You do not need to save an edited user mask to disk; the instrument retains the current user mask in nonvolatile memory.*

If you plan to create a number of user masks, store your user masks on disk or the hard drive. The instrument can only load one user mask at a time.

Editing a User Defined Mask

1. From the toolbar, click Masks.
2. In the Mask Testing control window, open the Masks tab.
3. Click the User Mask button.
4. Click the Edit User Mask button. The instrument displays the Mask Edit control window.
5. Click the Controls button to open the Mask Edit control window.
6. Click in the Segment entry box and use the up/down arrows, multipurpose knob, or keypad to select a segment to edit. The selected (active) segment is highlighted in red. Each mask can have up to 16 segments.
7. Click in the Vertex entry box, and use the up/down arrows, multipurpose knob, or keypad to select the vertex to edit. The active vertex is indicated with an X on the template segment. Each segment can have up to 50 vertices.
8. Click in the Horizontal entry box, and then use the multipurpose knob or keypad to change the selected vertex horizontal position.
9. Click in the Vertical entry box, and then use the multipurpose knob or keypad to change the selected vertex vertical position.
10. To add a vertex, select the closest vertex that is clockwise from where you want to place a new vertex. Click Add to add a vertex midway between the selected vertex and the next counterclockwise vertex.
11. To delete a vertex, enter or select the vertex number; then click Del. The remaining vertices located counterclockwise from the deleted vertex are renumbered.
12. See [Saving a User Mask to Disk \(see page 486\)](#) procedure.

NOTE. *You do not need to save an edited user mask to disk; the instrument retains the current user mask in nonvolatile memory.*

If you plan to create a number of user masks, store your user masks on disk or the hard drive. The instrument can only load one user mask at a time.

Saving a User Mask to Disk

1. From Mask menu, select Mask Edit Setup.
2. In the Mask Edit control window, click the Save button to open the Save As dialog box.
3. Specify the save location in the Save in drop-down list box.
4. In the Name field, enter the mask name; (*.msk) is the default save type for User Mask Files.
5. Click Save to save the mask to specified location on disk.

Creating a User Mask from a Defined Mask

NOTE. Refer to [Mask Key Points \(see page 625\)](#) before creating or editing a mask.

Use the following procedure to create a user mask from a defined mask:

1. From the toolbar, click Masks.
2. In the Mask Testing control window, open the Masks tab.
3. Click the appropriate button in the Type field to select a mask type.
4. Click the More button to display further selections.

NOTE. Industry standard masks are available with the Mask Testing feature. The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the Serial Communications Mask Testing Option on some instruments before you can access the Comm triggers.

5. Select a standard from the drop-down list. The control window lists mask types and standards that are available on your instrument.
6. Click the User Mask button.
7. Click the Copy Current Mask To User Mask button. The instrument copies the current mask to the user mask memory.
8. See the [Editing User Mask procedure \(see page 486\)](#).
9. See [Saving a User Mask to Disk \(see page 486\)](#) procedure.

NOTE. You do not need to save an edited user mask to disk; the instrument retains the current user mask in nonvolatile memory.

If you plan to create a number of user masks, store your user masks on disk or the hard drive. The instrument can only load one user mask at a time.

Editing a User Defined Mask

1. From the toolbar, click Masks.
2. In the Mask Testing control window, open the Masks tab.
3. Click the User Mask button.

4. Click the Edit User Mask button. The instrument displays the Mask Edit control window.
5. Click the Controls button to open the Mask Edit control window.
6. Click in the Segment entry box and use the up/down arrows, multipurpose knob, or keypad to select a segment to edit. The selected (active) segment is highlighted in red. Each mask can have up to 16 segments.
7. Click in the Vertex entry box, and use the up/down arrows, multipurpose knob, or keypad to select the vertex to edit. The active vertex is indicated with an X on the template segment. Each segment can have up to 50 vertices.
8. Click in the Horizontal entry box, and then use the multipurpose knob or keypad to change the selected vertex horizontal position.
9. Click in the Vertical entry box, and then use the multipurpose knob or keypad to change the selected vertex vertical position.
10. To add a vertex, select the closest vertex that is clockwise from where you want to place a new vertex. Click Add to add a vertex midway between the selected vertex and the next counterclockwise vertex.
11. To delete a vertex, enter or select the vertex number; then click Del. The remaining vertices located counterclockwise from the deleted vertex are renumbered.
12. See [Saving a User Mask to Disk \(see page 486\)](#) procedure.

NOTE. *You do not need to save an edited user mask to disk; the instrument retains the current user mask in nonvolatile memory.*

If you plan to create a number of user masks, store your user masks on disk or the hard drive. The instrument can only load one user mask at a time.

Saving a User Mask to Disk

1. From Mask menu, select Mask Edit Setup.
2. In the Mask Edit control window, click the Save button to open the Save As dialog box.
3. Specify the save location in the Save in drop-down list box.
4. In the Name field, enter the mask name; (*.msk) is the default save type for User Mask Files.
5. Click Save to save the mask to specified location on disk.

Recalling a User Mask from Disk

1. From the toolbar, click Masks; then open the Masks tab.
2. Click the User Mask button.
3. Click the Edit User Mask button. The instrument displays the Mask Edit control window.
4. Click the Mask Recall button.
5. The instrument opens the Recall dialog box. The default recall location is the TekScope/Masks folder. If the mask files are in another folder, use the navigation controls to access the appropriate folder.
6. Select the mask name.
7. Click Recall to load the user mask into user mask memory on the instrument.

Alternatively, the mask can be recalled by selecting Recall from the File Menu. This opens the Recall dialog box where you can navigate to and select the mask that you want to recall.

Creating a User Mask with Mask Testing

Use the Edit control to change a standard mask and create your own mask.

NOTE. Industry standard masks are available with the Mask Testing feature. The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.

1. From the Masks menu, select Mask Setup, or click the Masks button in the toolbar.
2. In the Mask Testing control window, open the Masks tab.
3. From the Masks tab, select the type of mask and standard that you want to use as a basis for your mask.
4. Click User Mask, and then click Copy Current Mask To User Mask.
5. Click Yes. The mask that you selected is now a user mask.
6. To alter the mask, click Edit User Mask.
7. Under Mask Elements, use the up/down arrows to select the segment and vertex that you want to edit. The selected segment appears in red and a white X indicates the selected vertex.
8. Under Mask Value, click in the Horizontal or Vertical entry boxes. and then use the multipurpose knobs to change the horizontal or vertical values of the mask.
9. Click Save to save your changes as the User Mask.

Using Mask Testing

Follow these steps to perform mask testing:

1. From the Mask menu, select Mask Setup, or click the Mask toolbar button.
2. In the Mask Testing control window, open the Masks tab.
3. Select the Type of mask you want to use.
4. Select the mask standard from the drop-down list.

NOTE. *The standard you select will determine whether you also need to set the polarity for the test.*

5. Make any necessary changes to the Display or Alignment configurations.
6. Click the Hit Count button to turn it off or on.
7. Open the Source/Tolerance tab.
8. Click the input channel you want to test.
9. From the Source/Tolerance tab, make adjustments to the mask margins tolerance.
10. Open the Pass/Fail Setup tab and set the rest of the test parameters.
11. From the Pass/Fail Setup tab or the Pass/Fail Results tab, click the Pass/Fail Test button to run the test.

Sending E-mail on Events

You can set up the instrument to send e-mail following an event.

Setting Up E-mail on Event

1. From the Utilities menu, select E-mail on Event Setup.
2. Enter the recipients' e-mail addresses in the entry box.
3. Click the Config button, and then enter your SMTP server address; then click OK.
4. Select the events on which to send e-mail.
5. Select which types of e-mail attachments you want to include.
6. Set the maximum message limit. (The maximum allowed by the system is 50.)
7. Set the maximum message size.

NOTE. *The default is 1 MB and the maximum is 2 GB. Setting the maximum message size to 0 causes attachments to be saved to the default location on the instrument hard drive.*

8. Click Send to send a test e-mail.

Sending E-mail on Mask Test Failure

1. See [Setting up the Mask Test \(see page 482\)](#), and follow the procedure for setting up a mask test.
2. From the Pass/Fail Setup tab, under Test Fail Notification, click E-mail to On.
3. Click the Pass/Fail Test button On to start the mask test or click the Repeat button for continuous mask testing.

Sending E-mail on Trigger

1. Select the trigger type.
2. Select the trigger source.
3. Set the appropriate parameters for the trigger.
4. From the Mode tab, click E-mail on Trigger to On.
5. Press the Run/Stop button to begin acquiring data to trigger.

Creating a Spectral Waveform

Use these steps to display a spectral (FFT magnitude) waveform.

1. Set the source signal Vertical Scale so that the signal peaks do not go off screen. Off-screen signal peaks can result in FFT waveform errors.
2. Set the Horizontal Scale control to show five or more cycles of the source signal. Showing more cycles means the FFT waveform can show more frequency components, provide better frequency resolution, and reduce [aliasing \(see page 492\)](#).
3. If the signal is a single-shot (transient) signal, make sure that the entire signal (transient event and ringing or noise) is displayed and centered on the screen.
4. Click Math on the toolbar, or click Math Setup from the Math menu to open the Math Setup control window.
5. Click the Basic button.
6. Click the Magnitude button to insert the magnitude function into the math expression.
7. Click the channel that is related to the time-domain signal that you want to view as an FFT waveform. The respective channel is inserted into the math expression.


8. Select the appropriate FFT window type.
9. Set the Vertical Scale and Reference as appropriate.

Aliasing

Problems occur when the instrument acquires a signal containing frequency components that are higher in frequency than the Nyquist frequency. The Nyquist frequency is the highest frequency that any digital oscilloscope can measure without errors is one-half of the sample rate or frequency.

The frequency components that are above the Nyquist frequency are under sampled and appear to "fold back" around the Nyquist frequency, showing as lower frequency components. These incorrect components are called aliases.

To quickly check for aliasing, slowly decrease the horizontal time scale. If the shape of the displayed waveform changes drastically or becomes stable, your waveform is probably aliased. You can also check for aliasing by turning on peak detect acquisition mode. To remove aliasing, modify the record length.

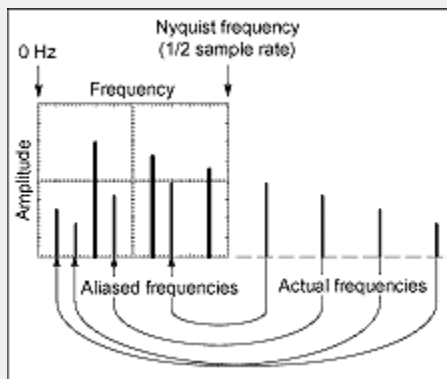

Defining a Spectral Math Waveform

Use the following procedure to define a spectral math waveform. Before you begin, ensure that the sources you will use are either acquiring or have acquired data. These sources do not have to be displayed to be used.

1. All sources that you will use in your math waveform must be available.
2. From the toolbar, click the Math button to open the Math Setup control window.
3. Click a Math <1–4> tab to select the math waveform you want to create.
4. Under Spectral Analysis, click Advanced to open the Spectral Analysis - Advanced control window.
5. Open the Create/Edit tab.
6. Click Magnitude to create a magnitude spectral waveform or Phase to create a phase spectral waveform. If you want an averaged spectral waveform, click Avgs to set the number of averages. See the step Apply Averaging [Creating a Math Waveform \(see page 481\)](#) for details.)

7. Under Source, select the tab and channel number for the source waveform.

TIP. *If you want to redefine your waveform, click the Clear button, and repeat the above steps.*

8. To display your spectral waveform, click Apply.
9. Set the magnitude scale:
 - a. Click the Magnitude button.
 - b. Open the Vert Axis tab.
 - c. Under Scale, click to select the vertical scale factor.
 - Linear. Displays magnitude using units equal to the source units.
 - dBm. Sets the reference level offset to predefined values for dBm; see next step.
 - dB. Displays magnitude using the log scale, expressed in dB relative to the reference level offset.

TIP. *You can also adjust the scale and position by clicking the waveform handle and using the multipurpose knobs.*

- d. To set the reference level, click in the Level entry box, and use the multipurpose knobs or pop-up keypad to set the reference level.

TIP. *Reference level is the value at the top of the display screen. It only applies to magnitude waveforms. Adjusting the reference level positions the waveform with respect to the top of the display, but does not change the position of the waveform with respect to its ground reference.*

- e. To set the reference level offset, click in the Level Offset entry box, and use the multipurpose knobs or pop-up keypad to set the offset.

TIP. *Offset determines where zero dB is in the output waveform. Changing offset moves the waveform with respect to its ground reference. When the input is equal to the offset, it will display as zero dB in the output.*

10. Set the phase scale:

- a.** Open the Create/Edit tab.
- b.** Click the Phase button.
- c.** Open the Vert Axis tab.
- d.** Use the Scale controls to set the vertical scale factors.
 - Deg (Degree). Sets the phase units to degrees. Phase is displayed using degrees as the scale, where degrees wrap from -180° to $+180^\circ$.
 - Rad (Radian). Sets the phase units to radians. Phase is displayed using radians as the scale, where radians wrap from $-P$ to $+P$.
 - GroupDelay. Unwraps the phase spectrum and displays its derivative.

[Using the Phase Controls \(see page 610\)](#) provides in-depth information on setup for phase displays.

- Click Unwrap to specify whether to unwrap phase in a spectral analysis phase waveform.
- To set the level in dB that a magnitude in the spectrum must exceed to have its phase computed (to reduce the effect of noise in your phase waveform), click in the Suppression Threshold entry box, and use the multipurpose knobs or pop-up keypad to set the threshold level. If the magnitude is less than the threshold, then its phase is set to zero. See [Using the Phase Controls \(see page 610\)](#), for additional information on suppression threshold.

11. Set the time and frequency domain control tracking:

To enable changing time and frequency domain controls for one math waveform to change the same controls for another math waveform,

- a.** Open the Tracking Tab
- b.** Toggle the Track Time/Frequency Domain Controls buttons on or off.

12. To select the window type:

- a.** Open the Create/Edit tab.
- b.** Select the Window Type from drop-down list. For more information on window types see [Using Spectral Analyzer Windows \(see page 615\)](#).

13. Set the frequency domain controls:

- a.** Open the Create/Edit tab.
- b.** To set the frequency range over which the spectral analysis is performed, click in the Frequency Span entry box and use the multipurpose knobs or pop-up keypad to set the frequency range. Higher sample rates allow you to set greater frequency spans. To set the frequency span to the maximum allowed by the current sample rate, click Full.
- c.** To set the center frequency of the spectral analysis, click in the Center Frequency and use the multipurpose knobs or pop-up keypad to set the center frequency.
- d.** Resolution bandwidth determines how small of a frequency difference can be resolved in the frequency domain output data. It basically defines the bandwidth of the filters used to do the

frequency domain analysis. To set the resolution bandwidth, click in the Resolution BW entry box and use the multipurpose knobs or keypad to set the resolution bandwidth.

14. Set the time domain controls:

- a. Open the Create/Edit tab.
- b. The Time domain controls determine the sample rate and record length of the acquisition. These controls allow you to change the duration on the acquisition without changing the sample rate. Click in the Resolution entry box and use the multipurpose knobs to adjust the time interval between data samples of the input waveform.

NOTE. Resolution is the inverse of Sample rate. Adjust resolution to adjust sample rate. Resolution may also cause a change in record length such that the duration is kept constant at the value selected by the Duration control.

- c. To adjust the number of seconds over the duration of the acquired waveform (record length), click in the Duration entry box and use the multipurpose knobs or pop-up keypad to adjust the duration.

NOTE. Changing duration also changes the record length.

- d. Gate position is the position of the phase reference point in the gate with respect to the trigger in seconds. The gate position and gate duration must be within the acquisition. To set the gate position, click in the Gate Position entry box and use the multipurpose knobs or pop-up keypad to adjust the gate position.
- e. Gate duration and resolution bandwidth are the same. Gate duration is displayed in seconds and resolution bandwidth in hertz. To set the gate duration, click in the Gate Duration entry box and use the multipurpose knobs or pop-up keypad to adjust the gate duration.

15. Take cursor measurements:

- a. From the toolbar, click the Cursors button to display the cursors and open the Cursor Controls window.
- b. Click the Setup button to open the Cursor Setup window.
- c. Use the Source drop-down lists to select the channels for the spectral waveform you want to measure.
- d. Select the cursor type. For more information, see [Taking Cursor Measurements \(see page 496\)](#).
- e. Click in the X and Y Position entry boxes and use the multipurpose knobs to position each cursor on the waveform to measure the feature(s) that interests you.
- f. Read the results in the cursor readout.

NOTE. The cursor readout is displayed under the multipurpose readouts or in the upper right corner of the graticule area. The cursor units will be in dB or volts for magnitude waveforms and in degrees or radians for those measuring phase.

- g. Select V Bars, and use the multipurpose knobs to align the two vertical cursors to points of interest along the horizontal axis of the waveform.
- h. Read the frequency difference between the cursors from the Δ : readout. Read the frequency of each cursor relative to the zero frequency point from the cursors readout.

Taking Cursor Measurements

Use the following procedure to take measurements with cursors:

1. To open the Cursor Controls window, press the Cursors button on the front panel, click Cursors on the toolbar, or select Cursor Setup from the Cursors menu.
2. Select the waveform you want to measure and a [Cursor Type \(see page 67\)](#) from the control window.
3. Position the cursors with the multipurpose knobs.
4. Read the cursor information from the on-screen Position controls.


TIP. Select the cursor mode (Tracking or Independent) in the Cursor Setup control window.

Using a Predefined Spectral Math Waveform

The following procedure is an example of setting up the instrument to perform spectral analysis of a signal. This example uses the probe compensation signal available on the front panel of the instrument.


1. Connect the probe compensation signal to Ch 1 through a suitable probe.
2. Press Default Setup.
3. Press Autoset.
4. From the toolbar, click Vertical, and select the Chan 1 tab.
5. Click in the Offset entry box, and then use the multipurpose knobs or keypad to set the offset to 900 mV.
6. Click in the Scale entry box, and use the multipurpose knobs or keypad to set the Channel 1 Scale to 200 mV.
7. From the toolbar, click Math, and select the Math 1 tab.
8. Click the Spectral Mag button.

The instrument sets up a predefined magnitude spectral analysis waveform. Your waveform should be similar to the one below.

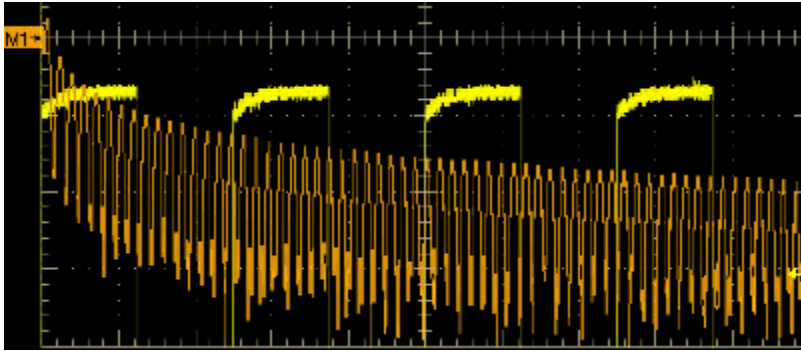

9. Click the Spectral Analysis Basic button.
10. Use the multipurpose knobs or keypad to set the frequency span to 125 kHz and the center frequency to 62.5 kHz (if necessary, reduce the sample rate).
11. From the toolbar, click Cursors.
12. To assign the cursors to the spectral analysis math waveform, select Math 1 from the Source list for Cursor 1.
13. Click Setup to open the Cursor Setup control window.
14. Use the multipurpose knobs or keypad to set the Curs1 Pos to 0.0 Hz and the Curs2 Pos to 125 kHz. The cursor readout should now indicate the frequency span set in step 10.
15. Use the multipurpose knobs or keypad to set the Curs2 Pos to 62.5 kHz. The cursor readout should now indicate the center frequency set in step 10.
16. Use the multipurpose knobs or keypad to set the Curs1 Pos to 3.0 kHz and the Curs2 Pos to 11.0 kHz.
 In this example, the cursors are now on the third and eleventh harmonic of the probe compensation signal. Read the frequencies from the cursor readouts.
17. Click the Cursor Type Waveform button; then click in the Cursor 2 and the Math 1 entry boxes.

In addition to the frequency at the cursor locations, the cursor readout displays the amplitude at the cursor locations. The readout also displays the difference in frequency and amplitude between the cursor locations as shown below.

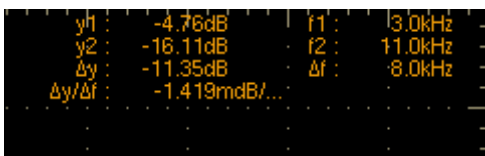

Creating Reference Waveforms

Use this procedure to create reference waveforms from active or math waveforms.

1. Click Save on the toolbar or click Save As from File menu.
2. Select Waveform to open the Save As dialog box.
3. From the Source list, select the waveform you want to save as a reference.
4. Under Save in: Oscilloscope Memory, click Ref <1–4> to save the waveform to nonvolatile memory. You can also select a location from the Save in drop-down list to save the waveform to a file.
5. Use the pop-up keyboard to enter a meaningful name for the waveform in the Name text box.
6. Click Save.

NOTE. When you save a waveform as a reference waveform, a file containing the waveform data is created in C:\TekScope\Waveforms. The file is named TDS_REFn.WFM, where n is the reference waveform number. Do not manually delete this file because the data will no longer be available.

Saving Reference Waveforms using Auto-Increment File Name

Use this procedure to repetitively save waveforms without typing in a large number of unique file names.

1. Click Save on the toolbar or click Save As from File menu.
2. Select Waveform.
3. From the Source list, select the waveform that you want to save as a reference.
4. Click Auto-increment file name near the bottom of the dialog box.
5. Enter a descriptive name in the Base file name text box. For example, if you are saving a series of rise time data files, you can use " Risetime " as the base file name.
6. The Count text box defaults to "000." Change this if you want to start saving your series of files with another 3-digit number.
7. Change the file Save as type if necessary.
8. Click Save.

Your first file is saved as Risetime000.ext, where ext is the file type extension. The next file will be Risetime001.ext, and so on.

If Count reaches 999, Tektronix suggests that you change the base file name, for example, Risetime1 on the next save. Your next file will then be saved as Risetime1000.ext. You will receive a warning message if you are going to overwrite any existing files with the same name.

TIP. Use the auto-increment file name feature to save a series of setups, exported images, waveforms, and measurements.

Recalling Reference Waveforms

Use this procedure to recall a reference waveform from a file:

1. Click Recall on the toolbar, or select Recall from the File menu.
2. Under Recall What, select Waveform.
3. Select the waveform you want to recall; then select the Destination Ref <1–4>.
4. Click Recall to load the waveform into memory.

You can use reference waveforms for measurements, math functions, or other uses. Simply select the reference waveform from the [Channels Selector \(see page 224\)](#) on the individual control windows.

NOTE. *When you recall a reference waveform from a file, a new file containing waveform data is created in C:\TekScope\Waveforms. The file is named TDS_REFn.WFM, where n is the reference waveform number. This file is deleted when the reference waveform is deleted.*

Saving a Waveform

Use the following procedure to save a waveform or waveforms to a reference location, the instrument hard drive or DVD drive, or a third-party storage device.

1. Make sure the waveform to be saved exists. The source must be a channel, an active math waveform, or an active reference waveform. Display the waveform along with the setup before you save it.
2. From the File menu select Save As; then click Waveform.
3. From the Source drop-down list, select the waveform that you want to save. Only available waveforms are displayed in the list.
4. Under Save in: Oscilloscope Memory, select the location Ref <1–4>; then click Save to save your waveform to that reference location. Any data in the existing reference will be overwritten.
5. To save the waveform to a file, select the location to save from the Save in drop-down list. The default location is C:\TekScope\waveforms.
6. Name your waveform file by typing a name in the Name text box, or select an existing name from the file list (data in the existing file will be overwritten). You can also select the Auto-increment file name check box to save a series of files without typing in a new name each time. For more information, see [Saving Reference Waveforms Using Auto-Increment File Name \(see page 498\)](#).

TIP. *If you did not attach a keyboard, click the keyboard icon to display the virtual keyboard.*

7. The file extension specified in the Save as type drop-down list will automatically be appended to the file name. You can also select from the following file formats:
 - .wfm is an internal instrument format.
 - .csv is usable by spreadsheets such as Microsoft Excel.
 - .txt is the standard text file format.
 - .dat is usable by Mathcad and MATLAB.
8. If your file type is other than .wfm, click the Options button to set up the Waveform Save Options.
9. Select the data format (Data destination) for the waveform you want to export.
10. Select a valid waveform from the Source list.
11. Under Waveform Detail, select the Include waveform scale factors check box if you want to include waveform details like header information (record length, sample interval, trigger point information, and so on). If you only want to include the waveform voltage values, clear the selection.
12. Under Waveform Data Range, select the samples that you want to save. You can select a range of samples, only the samples between the cursors, samples in a Zoom Area, or All samples. If you select Samples between cursors, you can use the multipurpose knobs to adjust the positions if the cursors are active. If they are not, the cursors are activated in their most recent positions.
13. If you are exporting Fast Acquisitions data, select the data ordering from the list.
14. Click OK, and then click Save to save the waveform file. To cancel without saving, click Cancel.

Copying Waveform Data

1. Identify the waveform, image, or measurement to be copied. The source must be a channel, an active math waveform, or an active reference.
2. From the Edit menu, highlight Select for Copy.
3. In the submenu, select the format for export:
 - Select Full Screen to export a bitmap of all screen contents.
 - Select Graticule to export a bitmap of only the graticule area.
 - Select Waveform to export waveform data.
 - Select Measurements to export measurement data.
4. From the Edit menu, select Copy Setup.
5. Open the Images tab.

6. Set the Image Options:
 - a. Select a color Palette for your copied images.
 - b. Select the image View: to copy an image of the entire screen, select Full-screen; to copy an image of the selected graticule, select Graticule(s) only.
 - c. The Screen Capture Format is BMP only.
7. Set the Waveform Options:
 - a. Open the Waveforms tab.
 - b. Select the data format (Data Destination) for the waveform you want to copy.
 - c. Select a valid waveform from the Source list.
 - d. Select the Include waveform scale factors check box if you want to include waveform details like header information (record length, sample interval, trigger point information, and so on). If you only want to include the waveform voltage values, clear the selection.
 - e. Select the number of samples that you want to copy from the Waveform curve data range. Select all samples, a range of samples, or only the samples between the cursors. If you select Save Samples between Cursors, you can use the multipurpose knobs to adjust the positions if the cursors are already active. If they are not, the cursors are activated in their most recent positions.
 - f. If you are copying Fast Acquisitions data, select the data ordering from the list.
8. Set the Measurement Options:
 - a. Open the Measurements tab.
 - b. Select either Displayed Measurements (make sure that measurements are displayed in the graticule via the Measurement Control window) or Histogram Data.
 - c. If you clicked the Displayed Measurements option, select the Data Format, either Numeric or Text.
9. Click Copy to save your setup information to the Windows clipboard.

Saving a Screen Capture

Use this procedure to save screen captures to the instrument memory, a CD, or third-party storage device. The images you want to save must be displayed within the graticule.

1. From the File menu, select Save As; then select Screen Capture.
2. Click the Options button to open the Screen Capture Save Options dialog box.
3. Select a color Palette for your screen capture.
4. Under View, select from the following:
 - Full Screen. Saves an image of the entire screen.
 - Hide Menu/Toolbar. Click this check box if you do not want the menu and toolbar included.
 - Graticule(s) Only. Selects an image of the selected graticule.
5. Select a data format from the Screen Capture Format list.
6. Click OK to save the screen capture options, or click Cancel to close the dialog box without saving the changes.
7. In the Save As dialog box, select the location to save from the Save in drop-down list. The default location is C:\TekScope\Screen Captures.
8. Name your screen capture by typing a name in the Name text box, or select an existing name from the file list (data in the existing file will be overwritten). You can also select the Auto-increment file name check box to save a series of files without typing in a new name each time.
9. Click Save.

Setting the Horizontal Delay

Use the following steps to set up the horizontal delay mode of the instrument.

1. Open the Horizontal/Acquisition Setup control window.
2. Open the Horizontal tab.
3. Turn on the Horizontal Delay mode by clicking Delay Mode on or pressing the front panel Delay button.
4. Click in the Horiz Delay entry box and use the multipurpose knobs to set the delay time and reference point (Ref Point). To view data before the trigger event, enter a negative value; to view data after the trigger event, enter a positive value.

TIP. You can also use the horizontal delay with complex trigger events in the Trigger Setup control window by clicking the A->B Seq tab and configuring the horizontal delay.

Comparing Data Using Horizontal Delay

After setting up the instrument to use the horizontal delay, press the front panel Delay button to toggle the horizontal delay on and off. This allows you to quickly compare two segments of a signal that are separated from each other by a fixed amount of time.

Setting Up Roll Mode

Use the following procedure to set up roll mode acquisitions.

1. Power on the instrument and set up the [horizontal \(see page 155\)](#) and [vertical \(see page 355\)](#) controls and [triggering \(see page 289\)](#).
2. Click the Horiz/Acq toolbar button to open the horizontal/acquisition setup control window.
3. Open the Acquisition tab.
4. Click the Roll Mode Auto button to enable roll mode. The resolution, record length, horizontal scale, and number of active channels are dependent variables. Therefore, the fastest horizontal scale setting when Roll mode starts is 40 ms/div, the record length is 1000, the acquisition mode is either Sample or Peak Detect, and 1 or 2 channels must be on. As the record length or the number of on channels grows, the time per division required to enter Roll mode is slower.

NOTE. Envelope and Average acquisition modes inhibit roll mode. Hi Res roll mode starts when the resolution is 4 ms or greater.

5. Push the Single button on the instrument front panel to start and acquire enough points to satisfy the acquisition mode (when the waveform makes it to the left edge of the screen). The acquisition mode must be either Sample or Peak Detect.
6. To stop acquisitions in roll mode:
 - If you are not in Single Sequence, push Run/Stop to stop roll mode.
 - If you are in Single Sequence, roll mode acquisitions stop automatically when a complete record is acquired.
7. Click the Horiz toolbar button to open the horizontal/acquisition setup control window.

8. Open the Acquisition tab.
9. Click Roll Mode Off to disable roll mode. Roll mode is also disabled when you set the horizontal scale to 200 ms per division or faster. At record lengths greater than 500 points, the time per division to turn off roll mode becomes slower.

NOTE. *Switching to Envelope or Average acquisition mode will also turn off roll mode.*

Using Roll Mode

Use Roll mode to view data at very slow sweep speeds. This is useful for observing data samples on the screen as they occur.

NOTE. *Roll mode turns on automatically at slower sweep speeds. You may want to turn Roll mode off to avoid conflicts with other instrument settings.*

To [turn Roll mode off \(see page 503\)](#), deselect Roll Mode Auto in the acquisition setup control window.

Checking Trigger Status

To assess the state and setup of the triggering circuit, check the trigger status lights, readouts, and display.

Trigger Status Lights

To quickly determine the trigger status, check the Arm, Ready, and Trig'd indicators on the instrument front panel.

- If Trig'd is on, the oscilloscope has recognized a valid trigger and is filling the posttrigger portion of the waveform.
- If Ready is on, the oscilloscope can accept, and is waiting for, a valid trigger.
- If Arm is on, the trigger circuitry is filling the pretrigger portion of the waveform record.
- If both Trig'd and Ready are on, a valid A event trigger has been recognized and the instrument is waiting for a delayed trigger. When a delayed trigger is recognized, the posttrigger portion of the delayed waveform will fill.
- If Arm, Trig'd, and Ready are off, the acquisitions have stopped.

Acquisition Readouts

To determine the settings of some key trigger parameters, check the Trigger readout at the bottom of the display. The readouts differ for edge and the advanced triggers.

Trigger Level Marker

To determine the trigger level on the waveform display, turn on a trigger level indicator (marker). See [Trigger Level Marker \(see page 506\)](#) for instructions on setting the indicator.

The trigger level indicator remains on the screen as long as the channel providing the trigger source is displayed.

You can choose between two types of trigger level indicators:

- Short. Consists of an arrow at the right side of the graticule.
- Long. Consists of a horizontal bar within the waveform display area.

Trigger Level Marker

From the Display menu, select Objects, or open the Objects tab in the Display control window.

To Use

Click one of the buttons to select the trigger level indicator.



Behavior

The [trigger level markers \(see page 506\)](#) indicate the voltage level where the trigger or threshold levels of the active waveform occur:

- The Short trigger level marker displays a short arrow on the side of the graticule by the active waveform.
- The Long trigger level marker displays a horizontal line through the active waveform.

NOTE. *The trigger level indicator does not appear on inactive waveforms, reference waveforms, or fast acquisition signals.*

Triggering from the Front Panel

The front panel provides quick access to the most frequently used trigger controls. The trigger readout shows you the state of the trigger system.

The Slope, Coupling, and Source controls only apply to edge triggering. To access the advanced trigger controls, open the Trigger Setup control window by pushing the Advanced button. (See [Advanced Triggering \(see page 508\)](#) for more information.)

Use the following procedure to set up triggers using the front-panel controls:

1. Set the acquisition system to Run (the Run/Stop control is lighted), and set the vertical and horizontal controls appropriately for the signal you want to acquire.
2. Push the Edge button to select edge triggering. Pushing Advanced opens the Trigger control window to set up other trigger types.
3. Push the Slope button to toggle between Positive and Negative:
 - Pos. Triggers on a rising edge (positive-going) signal.
 - Neg. Triggers on a falling edge (negative-going) signal.
 - Pos + Neg. Triggers on both edges of the signal.


You can also set the Polarity in the Trigger control window.
4. To manually change the trigger level for edge triggers (or certain threshold levels for logic or pulse triggers), turn the front-panel Level knob. You can also set the Level in the Trigger control window.
5. To quickly set the edge trigger level to 50% of the waveform voltage range, push the Level knob. The instrument sets the trigger level to the halfway point between the peaks of the trigger signal. This function has no effect for the other trigger types.

You can also click Set 50% in the Trigger control window.
6. Push the Trigger left and right arrow button to select a Source:
 - Ch 1 through Ch 4. These are the input channels. The channel you select as a trigger source will function whether it is displayed or not.
 - Ext. This is a fifth, nondisplayable auxiliary (external) trigger source. To use the auxiliary trigger, connect the source to the front-panel Auxiliary In connector.
 - Line. This is the AC line voltage. The oscilloscope is used to generate the trigger and you do not have to input a signal. The trigger level is fixed at zero volts.
7. From the Trig menu select Edge Setup to set the Coupling for an A or B Event main trigger:
 - DC. Passes both AC and DC components of the input signal.
 - AC. Passes only the AC components of an input signal.
 - HF Reject. Attenuates signals above 30 kHz.
 - LF Reject. attenuates signals below 80 kHz.
 - Noise Rej. Provides lower sensitivity, reducing the chance of falsely triggering on noise.
8. Push the front-panel Mode button to toggle between normal and automatic trigger modes:
 - Norm (Normal). Requires a valid trigger event to acquire a waveform.
 - Auto (Automatic). Acquires a waveform even if no valid trigger event occurs.

NOTE. *Be aware that in Auto mode, the acquired waveforms may not be triggered.*

Advanced Triggering

You can check the advanced trigger status in the readout. The readout indicates the trigger type and then shows sources, levels, or any other parameters that are important for the particular trigger type.

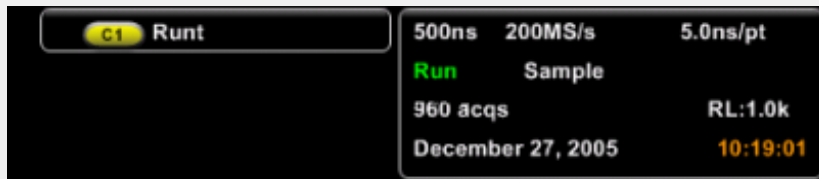

Triggering from the Trigger Setup Window

The following trigger parameters are accessible only through the Trigger control windows:

- Holdoff
- Trigger level presets
- Force trigger

Use the procedures below to set up these trigger parameters.

Holdoff Triggers

Changing the holdoff time helps to stabilize triggering.

1. Push the front-panel Advanced button.
2. In the Trigger control window, select the Mode tab.
3. **Click Default or Time:**
 - Auto. Uses the instrument default holdoff time, which is five times the current horizontal scale setting. Default maintains a good value for general-purpose triggering.
 - Time. Enables you to enter a holdoff that may allow more stable triggering. This time is used at all horizontal scale settings
4. **If using Time,** click in the Trig Holdoff entry box and use the multipurpose knob to enter a time value. The holdoff range is 250 ns to 100 s.

Preset Triggers

1. Push the front-panel Advanced button.
2. In the Trigger control window, select the A Event tab.

3. Click a Trigger Type button to select a trigger, such as Edge, that uses a level adjustment. A trigger uses a level adjustment if the Level control appears within the [trigger graphic \(see page 290\)](#), along with the other trigger type setup controls.
4. Click Level, and then click the keypad icon to open the keypad. Click on either TTL, ECL, or USER:
 - TTL. Sets the trigger level to +1.4 V.
 - ECL. Sets the trigger level to -1.3 V.
 - USER. You can set the trigger level to a preset voltage.

When you set the volts/div less than 200 mV, the instrument reduces the TTL or ECL trigger levels below standard TTL and ECL levels. This reduction occurs because the trigger level range is fixed at +12 divisions from the center. At 100 mV (the next lower setting after 200 mV) the trigger range is +1.2 V, which is less than the typical TTL (+1.4 V) or ECL (-1.3 V) level.

Define Preset Levels

1. From the Utilities menu, select user Preferences.
2. In the User Preferences control window, open the Keypad Defaults tab.
3. Click in the appropriate Trig Level entry box; then use the pop-up keypad or multipurpose knob to adjust the preset.
4. If desired, click a Keypad Label and change the label of the preset using the pop-up keypad.

Forced Triggers

When using Normal trigger mode, forcing a trigger is useful if the input signal is not supplying a valid trigger.

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event or B Event tab
3. In the Trigger Type drop-down list, select Edge.
4. To force the instrument to immediately acquire one waveform record, even without a trigger event, click the Force Trigger button.

TIP. Click Force Trigger to quickly confirm there is a signal present for the instrument to acquire. Then determine how to trigger on the signal. For example, push LEVEL to set 50%, check the trigger source setting, and so on.

NOTE. The instrument acts on a Force Trigger even if it is selected before the end of pretrigger holdoff. However, the button has no effect if the acquisition system is stopped.

Triggering on a Sequence

Use the following procedure to set up the instrument to trigger on a sequence:

1. Connect a signal to an input channel.
2. Set the acquisition system to Run; then set the vertical and horizontal controls appropriately for the signal you want to acquire.
3. To trigger on A Event (main) only:
 - a. Click Trigger on the toolbar; then open the A->B Seq tab of the Trigger control window.
 - b. Click the A Only button to turn off sequential triggering.
4. To trigger on a B event after time:
 - a. To set the time base to run after an A trigger, a trigger delay, and a B trigger, click Trigger on the toolbar; then open the A->B Seq tab of the Trigger Setup window.
 - b. Click Trig After Time.
 - c. To set the trigger delay, click in the Trig Delay entry box; then use the multipurpose knob or pop-up keypad to set the time.
 - d. To set the B trigger level, click in the B Trig Level entry box; then use the multipurpose knob or pop-up keypad to set the level.
5. To trigger on B events:
 - a. To set the time base to trigger after an A trigger and a specified number of B trigger events, click Trigger on the toolbar; then open the A->B Seq tab of the Trigger Setup window.
 - b. Click Trig on nth Event.
 - c. To set the number of B trigger events, click in the Trig Event entry box; then use the multipurpose knob or pop-up keyboard to set the number of events.
 - d. To set the B trigger level, click in the B Trig Level entry box; then use the multipurpose knob or pop-up keypad to set the level.
6. To set up B Event triggering:
 - a. To set the B Event trigger, click Trigger on the toolbar; then open the B Event tab of the Trigger control window.
 - b. To specify which channel becomes the B trigger source, click Source; then select the source from the drop-down list.
 - c. Click Coupling, then select the trigger coupling to match your trigger signal.
 - d. To specify the direction of the edge, click a Slope button, positive or negative.
 - e. To set the B trigger level, click in the Level entry box; then use the multipurpose knob or pop-up keypad to set the level.

NOTE. You can click Set 50% to set the B trigger level to the midpoint between the positive and negative peak of the B trigger signal.

Trigger on A Event Only

Use the following trigger sequence to trigger the instrument after the A event has occurred:

1. Set the A Event Trigger Type and Source from the A Event tab in the Trigger control window.
2. Open the A->B Seq tab; then click the A Only button.

Triggering on an Event after a Specified Delay

Use the following trigger sequence to trigger the instrument on the B event after a specified amount of time after the A event:

1. Set the A Trigger Type and Source from the A Event tab in the Trigger control window.
2. Set the B Trigger Type and Source from the B Event tab.

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

3. Open the A->B Seq tab; then click Trig After Time.
4. Click in the Trig Delay entry box; then enter the trigger delay time between the A and B events.

Triggering on a B Event

Use the following trigger sequence to trigger the instrument after a specified number of B events:

1. Set the A Trigger Type and Source from the A Event tab in the Trigger control window.
2. Set the B Trigger Type and Source from the B Event tab.

NOTE. For MSO70000/C Series instruments, when you select a Pattern or a State trigger as the B Event, digital channels are not available.

3. Open the A->B Seq tab; then click Trig on nth Event.
4. Click in the Trig Event entry box; then enter the number of B events that should occur before starting the acquisition after the A event.

Triggering on a Glitch

Use the following procedure to detect and trigger on a glitch, or to ignore a glitch:

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event tab.
3. Select Glitch from the Trigger Type drop-down list.
4. Specify the trigger source. Click Source; then select a channel from the drop-down list.
5. Click a Polarity button to specify the glitch polarity:
 - Pos. Looks at positive-going pulses.
 - Neg. Looks at negative-going pulses.
 - Either. Looks at both positive and negative pulses.
6. To specify the width of the glitch, click in the Width entry box; then set the glitch width using the multipurpose knob or keypad.
7. Select from the Glitch Width drop-down list to specify whether to trigger on glitches narrower or greater than the width you specify:
 - Less Than. Trigger only on narrower pulses.
 - Greater Than. Trigger only on wider pulses.
8. Click in the Level entry box; then use the multipurpose knob, keypad, or front-panel Trigger Level knob to set the level that the glitch must cross to be recognized by the instrument. You can also set the level to a value appropriate to either the TTL or ECL logic families by selecting Logic in the Trigger if Glitch drop-down list.
9. You can also Trigger on a logic-qualified pulse using the Trigger if Glitch "Logic" selection. When the instrument detects that a glitch condition has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
10. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on a Runt Pulse

Use the following procedure to detect and trigger on a runt pulse. The instrument can look for positive or negative runt pulses. These pulses can also be qualified by time or by the logical state of other channels.

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event tab.
3. Select Runt from the Trigger Type drop-down list.
4. Specify the trigger source. Click Source; then select a channel from the drop-down list.
5. Select a Polarity value to specify the direction of the runt pulse. Triggering occurs at the point the pulse returns over the first threshold without crossing the second threshold level. The polarity selected determines the order that the threshold must be crossed for a runt trigger to occur:
 - Pos. Looks at positive-going pulses. The lower threshold must be first crossed going positive, then recrossed going negative without the upper threshold being crossed at all.
 - Neg. Looks at negative-going pulses. The upper threshold must be first crossed going negative, then recrossed going positive without the lower threshold being crossed at all.
 - Either. Looks at both positive and negative pulses. Either one of the thresholds must be first crossed going in either direction, then recrossed going in the opposite direction without the other threshold being crossed at all.

For all three polarity settings, triggering occurs at the point the runt pulse recrosses its first threshold.
6. To qualify the runt pulse trigger, click Runt; then select from the drop-down list:
 - Occurs. Triggers on all runt pulses.
 - Wider. Triggers only on runt pulses that exceed the minimum width that you set. Enter the Width using the multipurpose knob or pop-up keypad.
7. To set the threshold levels, click in the Upper Limit or Lower Limit entry boxes; then use the multipurpose knobs or pop-up keypad to set the values.
8. You can also Trigger on a logic-qualified runt pulse using the Trigger if Runt "Logic" selection. When the instrument detects that a runt condition has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.

TIP. To use the trigger level marker to help in setting the threshold levels, open the Display control window Objects tab; then click Long to activate the marker.

9. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on a Pulse Width

Use the following procedure to detect and trigger on a pulse that is either wider or narrower than the specified range:

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event tab.
3. Select Width from the Trigger Type drop-down list.
4. Specify the trigger source. Click Source; then select a channel from the drop-down list.
5. To specify the Polarity of the pulse, click Pos (for positive-going pulses) or Neg (for negative-going pulses).
6. To set the range of pulse widths in units of time, click in the Upper Limit and Lower Limit entry boxes; then enter values with the multipurpose knobs or pop-up keypad:
 - Upper Limit. This is the maximum valid pulse width the trigger source will look for.
 - Lower Limit. This is the minimum valid pulse width. The instrument will always force the Lower Limit to be less than or equal to the Upper Limit.
7. In the Pulse Width drop-down list:
 - Select Inside to trigger on pulses that fall within the specified range.
 - Select Outside to trigger on pulses that are outside the range.
8. You can also Trigger on a logic-qualified pulse using the Trigger if Width "Logic" selection. When the instrument detects that a width trigger condition has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
9. Click in the Level entry box; then use the multipurpose knob, pop-up keypad, or front-panel Level control to set the trigger level.
10. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on Pulse Timeout

Use the following procedure to detect and trigger on pulses longer than a specified time. The instrument will trigger at the end of the timeout period.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Timeout from the Trigger Type drop-down list.
4. Specify the trigger source. Click Source; then select a channel from the drop-down list.
5. To set the trigger timeout level, click in the Level entry box; then use the multipurpose knob or pop-up keypad to enter the voltage level.

NOTE. You can set the level to a value appropriate to either the TTL or ECL logic families by clicking TTL or ECL on the Level pop-up keypad.

6. To set the timeout timer, click Timer, and then use the multipurpose knob or pop-up keypad to set the time.
7. To set the pulse threshold, click one of the following:
 - Stay High. Triggers if the signal stays higher than the trigger level for longer than the timeout (Timer) value.
 - Stay Low. Triggers if the signal stays lower than the trigger level for longer than the timeout (Timer) value.
 - Either. Triggers if the signal stays lower or stays higher than the trigger level for longer than the timeout (Timer) value.
8. You can also Trigger on a logic-qualified pulse using the Trigger if Timeout "Logic" selection. When the instrument detects that a timeout condition has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
9. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on a Pattern

Use the following procedure to trigger the instrument when the logic inputs cause the selected function to become True or False. You can also specify that the logic conditions must be satisfied for a specific amount of time before the instrument triggers.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Pattern from the Trigger Type drop-down list.
4. Select a value from the Input Threshold drop-down list for each channel. The channel inputs combine to form a logic pattern. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage. A value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
5. To set the Input Threshold voltages, click one of the Threshold Presets buttons to define the level type. If you selected USER, click in the Ch <1–4> entry boxes, and then use the multipurpose knobs or pop-up keypad to set each threshold.
6. Select the Pattern Type Boolean logic function for the combination of input channels. The instrument will trigger on a clock edge when the input waveforms match the specified logic pattern.

NOTE. See [Pattern Triggers \(see page 518\)](#) for definitions of the logic functions for pattern triggers.

7. From the Pattern drop-down list, select True to trigger the instrument when the logic patterns are true. Select False to trigger the instrument when the logic patterns are false.
8. You can time qualify a pattern logic trigger, that is, you can specify the amount of time the Boolean logic function must be True:

NOTE. On MSO/DPO5000 Series instruments, < or > are used instead of Less than or More Than from the Pattern drop-down list.

- a. Select Less than or More Than from the Pattern drop-down list.
- b. Under Pattern, click in the Time entry box, and then use the multipurpose knob or keypad to set the time.

NOTE. When you select Less Than and specify a time, the input conditions must drive the logic function true for less than the specified time. Conversely, the true for More Than item requires the Boolean function to be true for longer than the time you specify.

The instrument determines the trigger point in the following manner:


 
 
 
 
 

 
- It waits for the logic condition to become True.
 - It starts timing and waits for the logic function to become False.
 - It compares the times and, if the time True is longer (More Than Time) or shorter (Less Than Time), then it triggers a waveform display at the point the logic condition became False. This time can be, and usually is, different from the time set.
9. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Pattern Triggers

A pattern trigger occurs when the inputs to the selected logic function cause the function to become True or False. When you use a pattern trigger, you define:

- The precondition for each logic input: logic high, low, or "don't care"; the logic inputs are the instrument channels
- The Boolean logic function: AND, NAND, OR, or NOR
- The condition for triggering: the Boolean function becomes True (logic high) or False (logic low), and whether the True condition is time qualified

Pattern trigger logic choices are summarized in the following table.

Pattern	State	Definition ^{1, 2}
AND 	Clocked AND 	If all the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NAND 	Clocked NAND 	If not all of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
OR 	Clocked OR 	If any of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NOR 	Clocked NOR 	If none of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.

¹ For state triggers, the definition must be met at the time the clock input changes state

² The definitions given here are correct for the Goes TRUE setting in the Trigger When menu. If that menu is set to Goes False, swap the definition for AND with that for NAND and for OR with NOR for both pattern and state types.

³ The logic inputs are channels 1, 2, 3, and 4 when using Pattern triggers. For State triggers, channel 4 becomes the clock input, leaving the remaining channels as logic inputs.

Triggering on a Logic State

Use the following procedure to trigger the instrument when all of the logic inputs to the selected logic function cause the function to be True or False when the clock (channel 4) input changes state.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select State from the Trigger Type drop-down list.
4. Select a value from the Input Threshold drop-down list for each data channel. The channel inputs combine to form a logic pattern. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage. A value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.

NOTE. Channels 1, 2, and 3 represent the data inputs. Channel 4 should be connected to the clock signal.

5. Select either the POS (rising) or NEG (falling) edge for the Clock Channel (Channel 4).
6. To set the Input Threshold voltages, click one of the Threshold Presets buttons to define the level type. If you selected USER, click in the Ch <1–4> entry boxes, and then use the multipurpose knobs or pop-up keypad to set each threshold.
7. Select the Pattern Type Boolean logic function for the combination of input channels. The instrument will trigger on a clock edge when the input waveforms match the specified logic pattern.

NOTE. See [Pattern Triggers \(see page 518\)](#) for definitions of the logic functions for pattern triggers.

8. In the Trigger if Logic State drop-down list, select True to trigger the instrument when the logic patterns are true. Select False to trigger the instrument when the logic patterns are false.

TIP. For simplest operation, leave this control set to True. Setting the control to False complements the output of the chosen pattern function (for example, from AND to NAND or NOR to OR).

9. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on Transition Time

Use the following procedure to detect and trigger on pulse edges that traverse between two thresholds at faster or slower rates than the specified time. You can set up the instrument to trigger on positive or negative edges.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Transition from the Trigger Type drop-down list.
4. Specify the trigger source. Click Source; then select a channel from the drop-down list.
5. Click a Polarity button to specify the direction of the pulse edge:
 - Pos. Monitors the transition time (slew rate) of the positive-going edges of pulses. The edge must first cross the lower threshold and then cross the upper threshold.
 - Neg. Monitors the transition time (slew rate) of the negative-going edges of pulses. The edge must first cross the upper threshold and then cross the lower threshold.
 - Either. Monitors positive- and negative-going edges of pulses. The edge may first cross either threshold and then cross the other.
6. The threshold levels and the delta time setting determine the transition time (slew rate) setting. The level settings determine the voltage component of slew rate (Volts/Second). Click in the Upper Level or Lower Level entry boxes; then use the multipurpose knobs or pop-up keypad to set the values for the upper and lower levels.

NOTE. You can set the level(s) to a value appropriate to either the TTL or ECL logic families by clicking TTL or ECL on the Level pop-up keypad.

TIP. To use the trigger level marker to help in setting threshold levels, open the Display control window Objects tab; then click Long to activate the marker.

7. To finish specifying the slew rate (transition time), set the time component by clicking in Time entry box; then use the multipurpose knob or keypad to set the delta time value.
8. In the Transition drop-down list:

NOTE. On MSO/DPO5000 Series instruments, < or > options are available instead of Less Than or Greater Than.

- Click Less Than to trigger when the transition time is less than the time you set above.
- Click Greater Than to trigger when the transition time is greater than the time you set above.

NOTE. *If you select Transition Greater Than, and the instrument does not trigger, the pulse edge may be too fast. To check the pulse edge speed, switch to edge triggering. Trigger on the pulse edge and determine the time the edge takes to travel between the upper and lower levels that you set for this trigger. The instrument cannot transition trigger on pulse edges that traverse between threshold levels in 600 ps or less.*

Also, to reliably trigger on transition time, a pulse must have a width of 7.5 ns or more. A pulse of less width may trigger on the wrong slope or not trigger at all. Switch to edge triggering, and check the pulse width if you cannot trigger on transition time as expected.

9. You can also Trigger on a logic-qualified pulse using the Trigger if Violation "Logic" selection. When the instrument detects that a transition violation has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
10. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on Setup/Hold Time Violations

Use the following procedure to detect and trigger on setup and hold time violations. The setup and hold times define a violation region relative to a clock. Data is considered to be invalid in the violation region.

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event tab.
3. Select Setup/Hold from the Trigger Type drop-down list.
4. Specify the channel that is connected to the data signal. Click Source; then select a channel from the drop-down list.
5. Specify the channel that is connected to the clock signal. Click Clock Source; then select a channel from the drop-down list.

NOTE. *Do not select the same channel for both the data and clock sources.*


6. The Clock Edge determines whether the instrument finds the trigger point on the rising edge or the falling edge of the clock signal. Click a Clock Edge button.
7. To set the data transition level, click in the Data Level entry box, and then use the multipurpose knobs or pop-up keypad to set the value.



8. The instrument uses the clock level to determine when a clock edge occurs; the point that the clock crosses the clock level is the reference point from which it measures setup and hold time settings. To set the clock threshold level, click in the Clock Level entry box, and then use the multipurpose knobs or pop-up keypad to enter a value.

NOTE. Both Clock and Data Levels can be set to a value appropriate to either the TTL or ECL logic families by clicking TTL or ECL on the Data Level or Clock Level pop-up keypads.


9. To set the setup time relative to the clock, click in the Setup Time entry box, and then use the multipurpose knob or pop-up keypad to enter a value.
10. To set the hold time relative to the clock, click in the Hold Time entry box, and then use the multipurpose knob or pop-up keypad to enter a value.

NOTE. Positive setup time always leads the clock edge; positive hold time always follows the clock edge. Setup time always leads the hold time by at least 2 ns ($T_S + T_H \geq 2 \text{ ns}$). Attempting to set either time to reduce the 2 ns limit adjusts the other time to maintain the limit. In most cases, you will enter positive values for both setup and hold time. Positive values set the instrument to trigger if the data source is still settling inside the setup time before the clock or if it switches inside the hold time after the clock. You can skew this setup/hold violation zone by entering negative values as shown below.

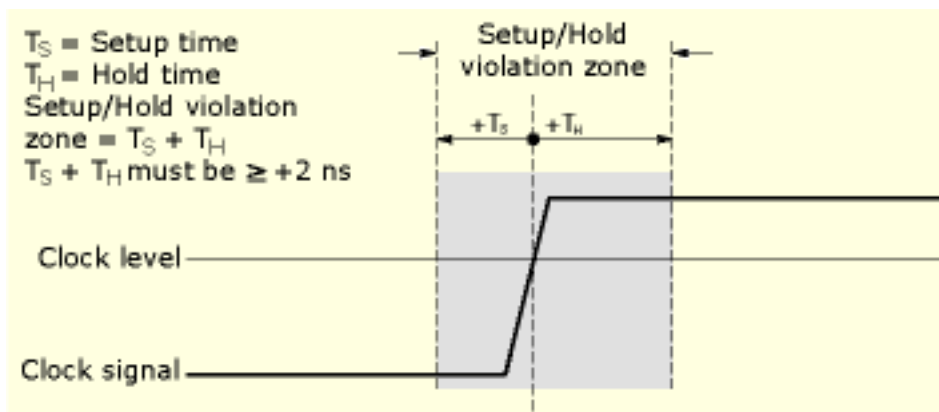

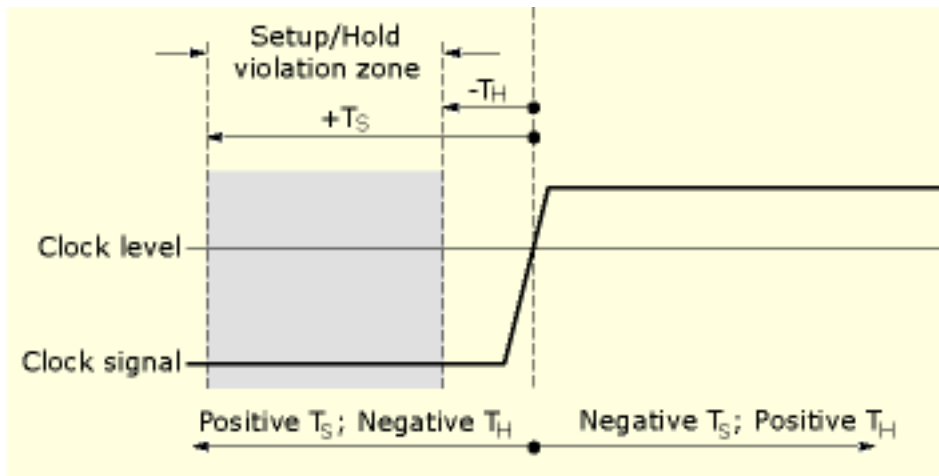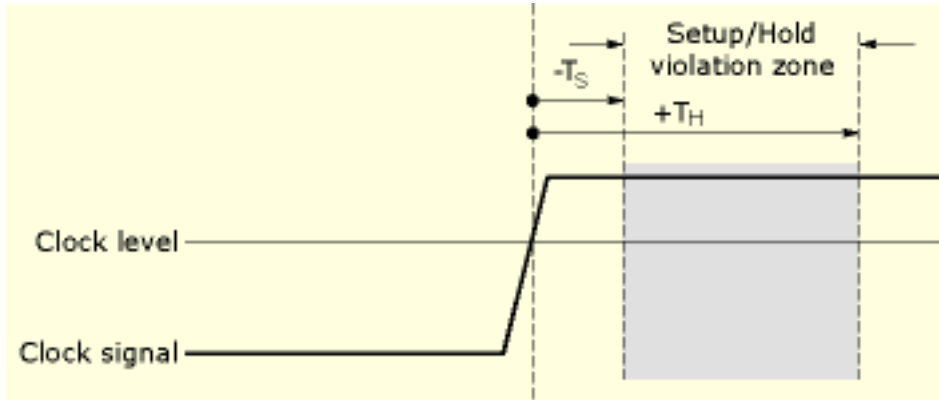

11. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

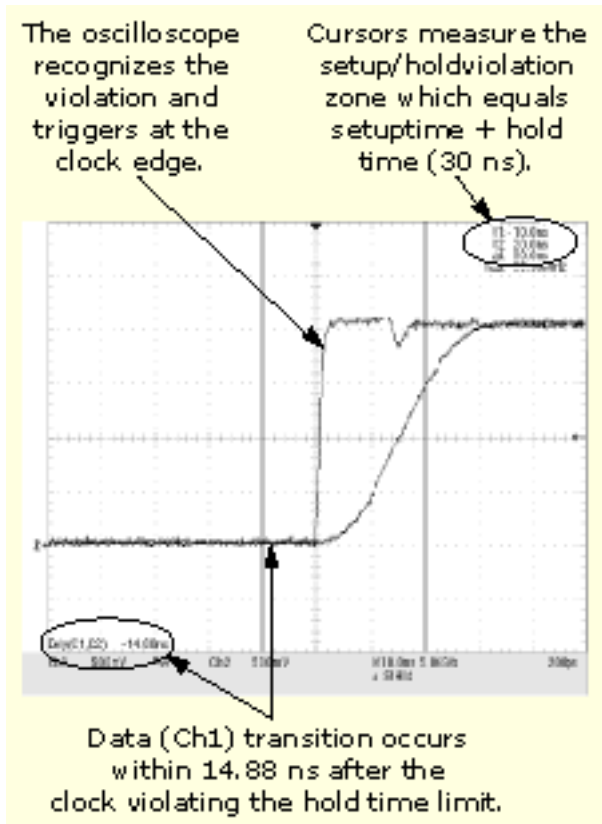

Set up and hold violation trigger

Triggering on Window Threshold Violations

Use the following procedure to trigger the instrument when the input signal rises above an upper threshold level or falls below a lower threshold level.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Window from the Trigger Type drop-down list.
4. To specify which channel becomes the trigger source, click Source; then select a channel from the drop-down list.

5. The upper and lower threshold levels define the voltage limits of the window. To set the threshold levels, click in the Upper Level or Lower Level entry boxes, and then use the multipurpose knobs or pop-up keypad to enter the values
6. To qualify the window trigger, select from the Window Event drop-down list combinations. The Window Event controls change as you select different combinations of options:
 - Enter Window and Occurs or Exits Window and Occurs. Triggers the instrument when the signal enters (or leaves) the window defined by the threshold levels.
 - Inside > t and Occurs or Outside > t and Occurs. Triggers the instrument when the signal enters (or leaves) the window defined by the threshold levels for the time specified by Width.
 - Inside > t and Logic or Outside > t and Logic. When the instrument detects a signal entering or leaving the window defined by the threshold levels, it checks the logic state of up to two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X).

A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage. Use the "don't care" selection for any channels that will not be used as part of the pattern.
7. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on a Video Signal

Use the following procedure to detect and trigger on a video signal. Only composite signal formats are supported. Graphic display formats such as RGB and VGA are not supported.

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Video from the Trigger Type drop-down list.
4. To specify which channel becomes the trigger source, click Source; then select a channel from the drop-down list.
5. Select a signal format from the Format drop-down list:
 - If using a preset format, click the Lines and Fields Autoset buttons to optimize the instrument for viewing the fields or lines for your chosen format
 - If you select the Custom signal format, no Autoset options are available. You must set the Scan Type (Interlaced or Progressive) and Scan Rate.
 - Custom scan rates enable you to trigger on nonbroadcast video signals that have unique scan rates. Select the scan rate that includes your signal.

6. Select a value from the Trigger On drop-down list to specify where the trigger will occur on the video signal:
 - Field. Use the drop-down list to select either Odd, Even, or All.
 - All Lines. The trigger will occur on any and all lines.
 - Line #. Use the multipurpose knob or pop-up keypad to set the line number. Line numbers wrap when their limits are reached. The range of line numbers depends on the format.
7. Specify the Holdoff from the drop-down list, By Time or By Fields, then use the multipurpose knob to change the value. If setting a Custom format, only the By Time control is available.
8. Select the Polarity:
 - Normal. Generally triggers on negative polarity, since the sync pulse leading edge is negative for most standard formats.
 - Inverted. Use when probing circuitry that inverts the video signal.
9. You can set the mode and holdoff for all standard trigger types. Refer to [trigger mode \(see page 293\)](#) and set [holdoff \(see page 348\)](#) to learn more about trigger mode and holdoff.

Triggering on a Communication Signal

Use the following procedure to set up the instrument to trigger on a communication signal:

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.*

1. Push the front-panel Advanced button.
2. In the Trigger control window, Open the A Event tab.
3. Select Comm from the Trigger Type drop-down list.
4. To specify the trigger source, click Source; then select a channel from the drop-down list.
5. Select Clock or Data from the Type drop-down list. If you select Clock, you will also need to select the polarity.
6. Select the Coding format for triggering on a communication signal and the Standard to use with the coding format. The coding format determines which standards are available as well as other parameters, such as trigger threshold and pulse form. The standard sets the bit rate. Changing the bit rate will change the Standard to Custom.
7. Depending on the coding format, you may also need to set the Pulse Form and Threshold Level.
8. Follow the [Setting up Mask Testing \(see page 482\)](#) procedure to select the communications mask you want to use.

Triggering on a Bus

NOTE. *The MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE support triggering on a bus.*

Use the following procedure to set up the instrument to trigger on a parallel or on a serial bus:

1. Push the front-panel Advanced button.
2. In the Trigger control window, open the A Event tab.
3. Select Bus from the Trigger Type drop-down list.
4. Select if the Settings are to be Shared or Independent.
5. Select the Bus to trigger on from the drop-down list.
The type of bus displays below the bus selection.
6. Select the condition in the Trigger If Logic State Goes field: True or False.
7. Select the Format of the pattern: Binary or Hex.
8. Click the Edit button and define the Pattern in the Pattern Editor dialog.
9. Click OK.
10. Click the Logic Thresholds Setup button to change the reference voltage threshold levels for the channels in the bus.

Setting up a Histogram

Use the following steps to set up a histogram:

1. From the Measure menu, click Waveform Histograms to open the Waveform Histogram Setup window.
2. Use the [Channels Selector \(see page 224\)](#) to select the waveform, and then use the other instrument controls to position the waveform in the center of the screen.
3. Use the Histogram Mode controls to turn on the histogram, click either Horiz or Vert.
4. Under Adjust Histogram Box, click Location.
5. Click in an X Position or Y Position entry box; then use the multipurpose knobs to position the histogram box over the area of interest on the waveform.
6. Under Adjust Histogram Box, click Limits.
7. Click in a Left/Right Limit or Top/Bottom Limit entry box; then use the multipurpose knobs to adjust the size of the histogram box.
8. Select the type of scaling by clicking either Linear or Log under Histogram Scaling.

TIP. Click the waveform handle to [select the waveform \(see page 753\)](#). Hold the left mouse button and drag across the segment of the waveform that you want the histogram to cover; then select Histogram from the pop-up list on the screen.

- [Taking Automated Measurements on Histogram Data. \(see page 528\)](#)

Taking Automated Measurements on Histogram Data

Use the following steps to take automatic measurements on histogram data:

1. Set up a histogram box over the waveform on the screen.
2. Open the Measurement Setup control window, and then select the Histogram tab.
3. Click the histogram measurement buttons to add the measurements to the display readouts list.

- [Setting up a Vertical Histogram. \(see page 528\)](#)

Starting and Resetting Histogram Counting

Use this procedure to quickly take a measurement based on the default settings for histograms:

1. Display the waveform(s) to be measured on the screen.
2. From the Measure menu, click Waveform Histograms to open the Waveform Histogram Setup window.
3. Use the [Channels Selector \(see page 224\)](#) to select the waveform, and then use the other instrument controls to position the waveform in the center of the screen.
4. Click a Histogram Mode button to start histogram counting and display the histogram data:
 - Horiz. Displays a horizontal histogram that shows how time varies in the histogram box.
 - Vert. Displays a vertical histogram that shows how your vertical units vary in the histogram box.
 - Off/On. Turns histogram counting and the display on or off.

NOTE. *You can only display one type of histogram at a time. Horizontal histograms have a maximum of 1000 bins while, vertical histograms have a maximum of 252 bins.*

5. Click a Histogram Scaling option:
 - Linear. Displays histogram data linearly. Bin counts smaller than the maximum counts are scaled linearly by dividing the bin count by the maximum bin count.
 - Log. Displays histogram data logarithmically. Bin counts smaller than the maximum counts are scaled logarithmically. Logarithmic scaling provides better visual details for bins with low counts.
6. Click Adjust Histogram Box Limits, and then use the Top Limit, Bottom Limit, Left Limit, and Right Limit controls to set the size of the histogram box. The histogram box selects the section of the waveform used for histograms.
7. Click Adjust Histogram Box Location, and then use the X Location and Y Location controls to set the location of the histogram box.
8. Click Reset to reset the histogram count. Histograms track numbers of counts. Clicking Reset resets those counts to zero and begins counting from zero.
9. Click Display to toggle the display of the selected histogram on and off.

TIP. *To clear histogram data, right-click in the display area, and then select Clear Data from the short cut menu.*

Displaying Waveforms

This procedure demonstrates the display adjustments you can make.

1. Connect a signal to an [input channel \(see page 51\)](#).
2. Press Run on the front-panel.
3. Push the Ch <1–4> button for the channel that has the signal connected to it.
4. Adjust the front-panel vertical controls to achieve a good display of the waveform.
5. Use the front-panel horizontal knobs to adjust the Scale and Position of the waveform and to set the sample Resolution.

NOTE. *The Resolution knob also sets the record length. (See [Horizontal Acquisition Window Interrelated Parameters \(see page 550\)](#) for details.)*

6. Push the Level knob (Set 50%) if required to stabilize the display.
7. To adjust the point around which the waveform expands and contracts, click on the [horizontal reference marker \(see page 40\)](#), and drag it along the horizontal axis until it aligns to the point on the waveform that you want to be stationary on screen.

NOTE. *If horizontal delay is off, the horizontal reference point is the same as the horizontal position.*

8. Release the Horizontal Reference, and then adjust the Horizontal Scale to expand or contract the waveform.

Using the XY Display Format

Use the following steps to set up the instrument in XY Display format:

1. Determine the [waveform pairs \(see page 148\)](#) you want to display.
2. Click Display in the toolbar, or select Appearance in the Display menu.
3. In the Display control window, open the Appearance tab.
4. Under Format, click the XY button.
5. Use the vertical scale and position controls of the waveform connected to the X-axis source to set horizontal scale and position of the XY waveform.
6. Use the vertical scale and position controls of the waveform connected to the Y-axis source to set vertical scale and position of the XY waveform.

Using MultiView Zoom with Waveforms

The instrument must be installed and operating, with a signal connected to an input channel, and the horizontal and vertical controls and triggering set up.

1. Obtain a stable display of the waveform to be measured.
2. Click and drag across the segment of the waveform that you want to see in greater detail.
3. Select Zoom <1-4> On from the shortcut menu to magnify the highlighted waveform segment.

NOTE. *The instrument displays the zoomed area of the waveform as magnified in the bottom graticule. You can also press the front-panel MultiView Zoom button to split the screen and add a zoom graticule.*

4. To zoom on multiple areas, repeat steps 2 and 3.
5. Push the front-panel MultiView Zoom button to select the axis you want to focus on in the zoom graticule. The Zoom control window opens, if it is not already present.
6. To select the waveform you want to scale or position, press the Horiz and Vert buttons.
7. Select the Channel (Ch), Math, or Reference (Ref) waveform from the drop-down list.
8. Use the multipurpose knobs to adjust the Position and Factor of the zoomed waveform. Note that as you adjust the factor or position, the instrument adjusts the Zoom box relative to the unmagnified waveform.
9. Click Setup in the Zoom control window to open the Zoom Setup control window.
10. To change the size of the unmagnified (Acquisition) and Zoom windows, select one of the following from the Graticule Size drop-down list:
 - 50-50. Allocates half of the available display for the zoomed graticule and half of the available display for the acquisition window.
 - 80-20. Allocates 80% of the available display for the zoomed graticule and 20% for the acquisition window.
 - Full. Uses the entire display for the zoomed graticule.
11. Click the Lock and Scroll tab to select a zoom lock and scroll setting:
 - To scroll a single zoomed area, click Zoom <1-4>, and then click an AutoScroll button.
 - To scroll multiple zoomed areas simultaneously, click Lock, and then click the Zoom <1-4> buttons you want to scroll through.
12. To quickly determine the magnification factor and position of a zoomed waveform, check the controls on the appropriate tab (Horizontal or Vertical) of the Zoom Setup control window.
13. To reset all Zoom settings to their defaults, click the Position Factor Reset button in the Zoom Setup control window.

Choosing Color Palettes

Use the following information to help you select a color palette:

1. Select Colors In the Display menu, or click Display in the toolbar.
2. Open the Colors tab.
3. Under Record View Palettes or FastAcq/WfmDB Palettes, click a button to select a palette for your application. Use the following criteria:
 - Normal. Use this palette to display hues and lightness levels for best overall viewing. Every waveform has its own color: shades of yellow for channel one; shades of blue for channel two, shades of pink for channel three, shades of green for channel four.
 - Green. Use this palette to display waveforms and the graticule style in shades of green. The Green palette simulates the display of an analog oscilloscope. Areas of the waveform with the highest sample density appear in lighter shades while the areas of lower sample density appear in darker shades.
 - Gray. Use this palette to display waveforms and the graticule in shades of gray. Areas of the waveform with the highest sample density appear in lighter gray shades, while areas of the waveform with lower sample density appear in darker gray shades.
 - Temp. Use this (temperature) palette to display variable persistence style waveforms. Areas of the waveform with the highest sample density appear in warmer colors (red shades), while areas of the waveform with lower sample density appear in cooler colors (blue shades). This palette is best suited for seeing detail within a single waveform.
 - Spectral. Use this palette to display variable persistence style waveforms. Areas of the waveform with the highest sample density appear in blue shades, while areas of the waveform with lower sample density appear in red shades. This palette is best suited for seeing detail within a single waveform.
 - User. Use this palette to select a color previously defined for the User palette.

NOTE. To define a custom color for the User palette, click the Edit button and follow the steps to [Customize Color Palettes](#) (see page 645).

Display Palette

From the Display menu, select User Palette, or click the Edit button in the Colors tab of the Display control window.

Overview

Use this control window to customize the color of your waveform display.



To Use

1. Click the Source drop-down list to select the waveform for which you want to change the color.
2. Select HLS from the Wfm Palette drop-down menu; then click in the Hue, Saturation, or Lightness entry boxes and use the multipurpose knobs to adjust the percentage of each of these attributes.
3. If you prefer:
 - Select Temp (Temperature Grading) from the Wfm Palette menu to define areas of the waveform with the highest sample density to appear in warmer colors (red shades) while the areas of lowest sample density appear in cooler colors (blue shades).
 - Select Spectral (Spectral Grading) from the Wfm Palette menu to define areas of the waveform with the highest sample density to appear in blue shades while the areas of lowest sample density appear in red shades.
4. Click the Reset button to return the User palette to the default, if desired.

To activate the Display Setup Control Window, click the Setup button.

Behavior

Increasing the hue value changes the color to blue tones. Decreasing the hue value changes the color to red tones. For best viewing, set the lightness to 50. Higher numbers tend to wash out the color and lower numbers can darken the color and make it difficult to see. Lower saturation values reduce the amount of color displayed in the waveform. Higher saturation values increase the amount of color.

What do you want to do next?

- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about the display persistence. \(see page 145\)](#)

Saving Instrument Setups

Use the following procedure to save the current setup to oscilloscope memory:

1. Use the instrument controls to set up the instrument for your application.
2. From the File menu, highlight Save As; then select Setup from the submenu.
3. In the Save As dialog box, select one of the 10 locations under Save in Oscilloscope Memory.
4. In the Save in drop-down list, specify where to save the setup.
5. In the Name list box, enter a name for the setup, use the default name, or select [Auto-increment file name \(see page 287\)](#) if you want to save a series of files without typing in a new name each time.
6. Click Save.
7. Click OK to overwrite an existing instrument setup, if desired.

NOTE. *The data in reference waveforms is not saved with the instrument setups. However, the setup information includes which reference waveforms are turned on and which are used with math waveforms and automatic measurements. If you want to save the reference waveform data, save the reference waveform separate from the instrument setup.*

Further note that user preferences and GPIB configurations are not stored with instrument setups, and are not affected by the front panel Default Setup button.

- [Creating Reference Waveforms. \(see page 497\)](#)

Recalling Instrument Setups

Use this procedure to recall a saved instrument setup:

1. From the File menu, select Recall.
2. In the Recall dialog box, click the Setup icon.
3. Navigate to the location where you saved the setup file
4. Select the setup, then click Recall.


NOTE. *The data in reference waveforms is not saved with instrument setups. However, the setup information does include which reference waveforms are turned on and which are used with math waveforms and automatic measurements. If you want to save the reference waveform data, save the reference waveform separate from the instrument setup. You can then recall the saved waveform to the restored setup.*

Deleting Instrument Setups

Use this procedure to delete all instrument setups previously saved to the oscilloscope memory.

1. From the File menu, highlight Delete; then select All Setups from the submenu.
2. In the resulting Delete all setups? dialog box, click Yes.

Use the following procedure to delete an instrument setup previously saved to a Windows directory.

1. From the File menu, select Recall.
2. In the Recall dialog box, click Setup.
3. Navigate to the directory where the setup was saved
4. Select the setup.
5. Click the  next to the directory.

GPIB Programmer Online Help

You can control the instrument via GPIB from a remote PC, or from an Internet or Intranet connection. GPIB programming information is available as a separate file you can install. See the instructions in the product software DVD booklet.

Oscilloscope Applications Software

You can install and run optional application software packages on the instrument. These software packages provide advanced capabilities that support several applications, such as jitter analysis and disk drive measurements.

Each application can be purchased and installed on the instrument at any time. Contact your Tektronix representative for purchasing information. Follow the installation instructions that come with the application.

To open your application software on the instrument, click Analyze in the menu bar, and then select the application to run.

NOTE. *Application software packages have their own online help that is separate from the main instrument online help.*

Adding Software Applications to the Instrument

Because the instrument is an open Windows platform, you can easily install and remove additional software applications. Follow the instructions that came with your software and the basic Windows instructions to install and remove your application.

NOTE. *When adding software to the instrument, avoid making changes to system files. See [Windows Interface \(see page 22\)](#) for more information.*

Setting up a Dual Display

Use the following steps to set up the instrument for dual display operation. You can use the main display for most instrument operations while you use a second monitor to access other PC applications that you may have installed.

You can also drag up to five dockable control windows from the TekScope application onto the display of the second monitor.


For example, this feature allows you to have the Horizontal/Acquisition, the Horizontal Zoom, and the Display Setup Control Windows (half screen) open on the second monitor at the same time.

In addition to the five dockable windows on the second monitor, you can have one dockable window open on the main display. If you open a seventh dockable window, whichever window has not been used for the longest amount of time will automatically close.

TIP. *You may want to print this procedure since it requires you to power off the instrument.*

1. Power off the instrument.
2. Connect an external monitor to a video port on the instrument.
3. Connect a keyboard and mouse.
4. Power on the instrument and external monitor.
5. After the instrument display appears, click Minimize in the File menu or press **CTRL+M** to minimize the instrument application.
6. Right-click on the desktop and select Properties to open the Display Properties dialog box.
7. Open the Settings tab to define the physical location of the monitors.
8. Click on the grayed-out Monitor 2 icon (connected to the video port of the instrument) and drag it to the left of Monitor 1 icon (the oscilloscope).

TIP. *A Monitor 3 icon may be available on some setups. Monitor 3 represents an additional monitor you could place on the right side of the instrument, which you would then connect to the Secondary Video Out.*

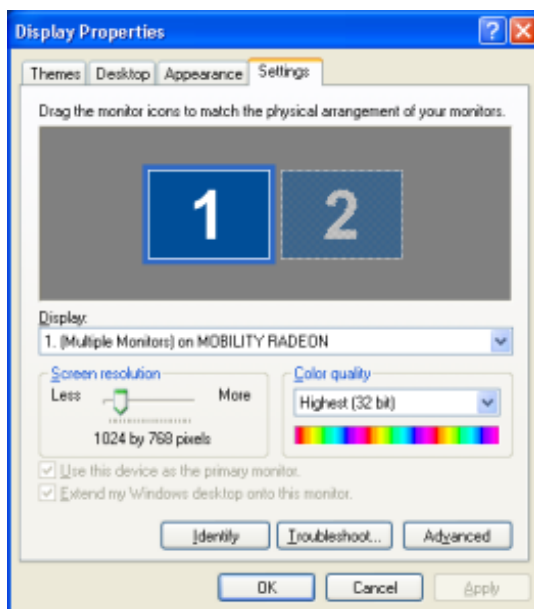

NOTE. Do not change the display settings for the internal monitor. The display settings must be 1024 x 768 pixels and colors must be set to 32-bit color. Ensure that the second monitor is also set to 32-bit color. If you use other instrument display settings, the video port may not work properly. However, you can use a resolution setting other than 640 x 480 on the second monitor.

9. Click Yes when you are prompted to enable the new monitor.
10. Click Apply.
11. Click Yes to restart your instrument.
12. Drag any item, except for the instrument application, from the desktop of the instrument to the new monitor. You can also drag the task bar.


Enabling a Network Connection

Use the following steps to enable network access to the instrument. You must begin this procedure with the instrument powered off.

TIP. You may want to print these instructions before you proceed.

1. Attach a keyboard and mouse to the instrument.
2. Power on the instrument.
3. Use the Windows Network Connection Wizard to define the instrument as a network client and configure it for your network. You can find the network setup program in the Windows Start menu if you select Settings > Control Panel, and then double-click Network Connections.
4. Consult with your network administrator for specific instructions for these settings.


Exiting the Instrument Application

From the File menu, click Exit to quit the instrument application or click the  icon in the upper-right corner of the screen.

To restart the instrument application, launch the TekScope icon from the Windows taskbar, Start menu, or your desktop.

Minimizing the Instrument Application

To temporarily close the TekScope application (so you can use other Windows programs):

- Select Minimize from the File menu.
- Right-click anywhere in the graticule and select Minimize from the shortcut menu.
- Click the  button in the Menu bar.

To restore the application, click the TekScope icon in the Windows taskbar.

Shutting Down the Instrument

When you push the front-panel [On/Standby switch \(see page 742\)](#), the instrument starts a shutdown process (including a Windows shutdown to preserve settings) before it goes into standby mode. Avoid disconnecting the power cord to shut down the instrument.

NOTE. *It may be necessary to hold the On/Standby switch for up to 20 seconds for the shutdown process to initiate.*

To completely remove power to the instrument, perform the shutdown process described above, and then disconnect the power cord from the power source.

Adjusting Display Contrast

If you find that the instrument screen is too bright or too dark, use these steps to adjust the LCD display contrast to your preference. You need to have a mouse attached to perform this procedure.

1. Right-click on the Windows desktop.
2. Select Properties.
3. Select the Settings tab.
4. Click Advanced.
5. Select the Color tab.
6. Adjust slider controls for desired contrast.
7. Click OK to apply.

Functional Model

The instrument has four high-level subsystem processes, consisting of both hardware and software functions, and the data that connects them.

Digital Signal Acquisition System

This system acquires a waveform record from each input signal you probe. This system consists of the following subsystems:

- **Input Channels.** Condition the input signal, primarily through the use of analog hardware, before converting the signal to a digital format.
- **Trigger System.** Recognizes a specific event of interest on the input signal and informs the Time base system of the occurrence of the trigger event
- **Time base System.** Triggers the Acquisition system to start an acquisition cycle. In more general terms, synchronizes the capturing of digital samples in the Acquisition system to the trigger events generated from the Trigger system.

Acquisition System

This system converts and stores the analog signal to a digital format.

Signal Processing and Transformation

This system performs transformations or operations on user-specified waveform data (channel, reference, and/or math waveforms). Automatic measurements, spectral waveforms, and histogram generation are examples of signal processing and transformation.

Display and UI


This system provides output (and sometimes input) of instrument-data elements in a form suitable to the user and also provides user input control.

What do you want to do next?

- [Learn about a process overview of the instrument operation. \(see page 542\)](#)
- [Learn about the Acquisition System. \(see page 547\)](#)

- [Learn about the Display. \(see page 580\)](#)

Process Overview

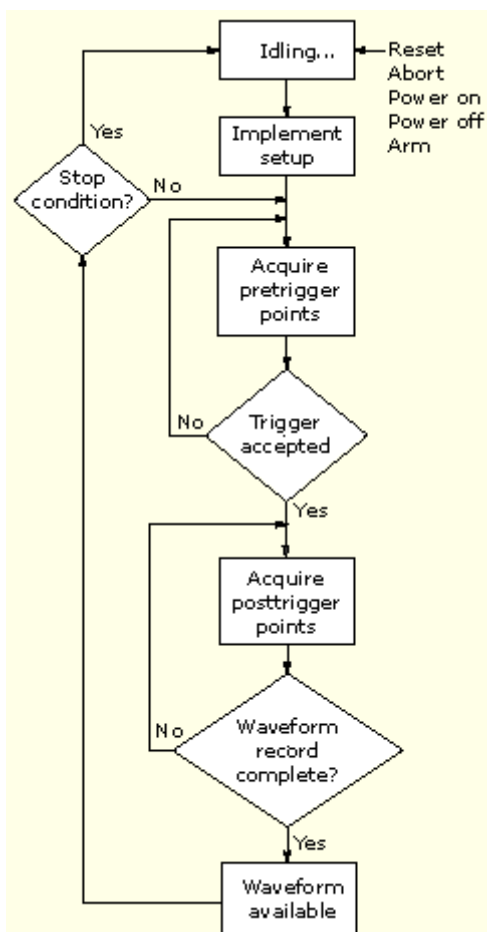

1. The instrument starts in the idle state; it enters this state at power on, upon receiving most control setting changes, or on finishing acquisition tasks.
2. Control settings are implemented as they are requested. When you toggle the Run/Stop control to Run, the instrument starts the hardware.
3. The instrument acquires samples until the pretrigger portion of the waveform record (channel) being acquired is filled.
4. The instrument then begins looking for a trigger. Acquiring continues to take place, keeping the pretrigger points current, until triggering criteria are met or a trigger is forced (Auto trigger mode only). The instrument accepts the trigger.
5. The instrument acquires samples until the posttrigger portion of the waveform record (channel) being acquired is filled.
6. If averaging or enveloping is on, the record becomes part of the multi-acquisition record that these modes produce. The process loops back to step 3 to acquire additional records until the number of acquisitions required for the acquisition mode currently set are processed, and then processing continues to step 7.
7. At this point, the acquisition record is in memory and is available to the instrument for measurement of its parameters, display, and so on.
8. The instrument then checks for a user-specified stop condition and either returns to its idle state or continues at step 3, according to what it finds.

Keep in mind that this instrument samples in real time or random equivalent time; both sampling systems provide pretrigger information by using the trigger to stop an already running acquisition. Both sampling systems also sample the input after it is scaled, providing improved input protection and dynamic range.


What do you want to do next?

- [Learn about the Acquisition System. \(see page 547\)](#)

- [Learn more about triggering. \(see page 558\)](#)

Signal Connection

This diagram displays the signal connection model for each input channel.

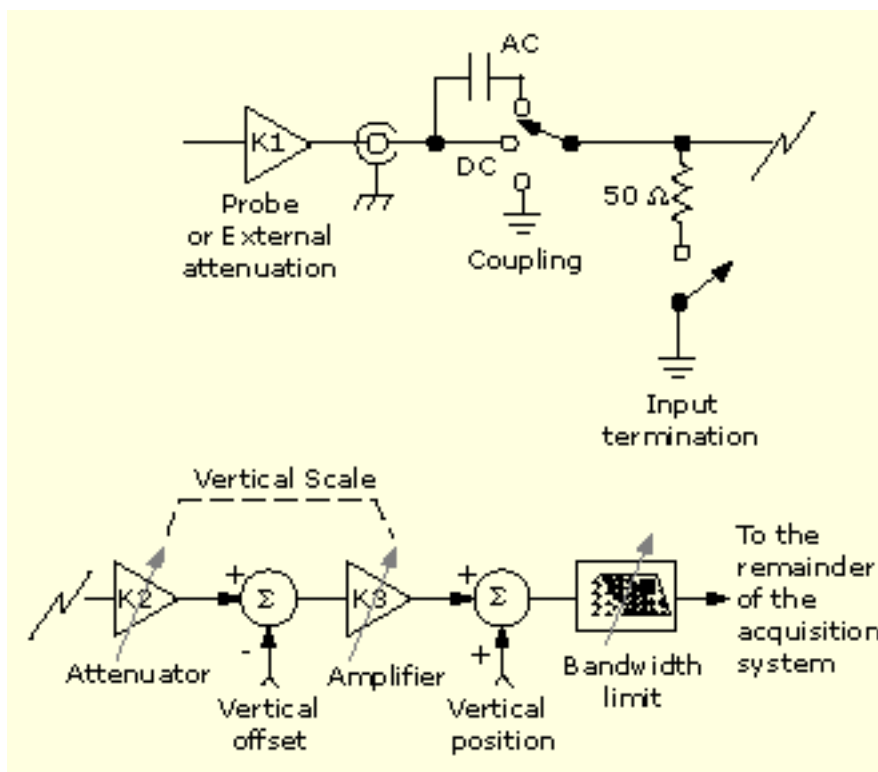

What do you want to do next?

- [Learn more about coupling.](#) (see page 546)
- [Learn more about the vertical acquisition system.](#) (see page 547)

Probes and Signal Connection

Select the probe or cable that brings the signal into the instrument. Choose the probe or cable that best fits your acquisition task, whether it is connecting an active probe to test a digital circuit, or connecting to a test fixture through BNC cables to characterize a device. The connection to the instrument depends on your application.

Up to four acquisition channels are available. You can display each channel as a waveform or use the channel data to create other waveforms, such as math and reference waveforms.

Tektronix provides a variety of probes and cables for this product. You can also check your Tektronix catalog for connection accessories to support your probing requirements.

For more information about a particular probe, read the documentation that came with that probe.

What do you want to do next?

- [Get a list of compatible probes. \(see page 6\)](#)

Input Conditioning

You can use input conditioning to ensure that the instrument acquires the best possible data for processing.

- Set the [Vertical scale \(see page 789\)](#) to control the size of the vertical acquisition window for each channel to capture all or part of the input signal vertical amplitude. When vertical scaling is set to capture a fraction of the input signal (to increase detail), the vertical offset control determines which part of the input signal is captured by the vertical acquisition window. (See note.)
- Set the [Horizontal scale \(see page 677\)](#) to control the size of the horizontal acquisition window to capture as much as you want of the input signal(s). Set the horizontal position to change the trigger position or to delay the window relative to a trigger event and to control where in the input signal (data stream) that the horizontal acquisition window acquires. (See note.)

For additional information on how to use the acquisition windows, refer to the following:

- [Vertical Acquisition Window Considerations \(see page 547\)](#)
- [Horizontal Acquisition Window Considerations \(see page 550\)](#)

The instrument can automatically obtain and display a stable waveform of usable size. Push the Autoset button to automatically set the instrument controls based on the characteristics of the input signal. Autoset is much faster and easier than a manual control-by-control setup.

The instrument can also be reset to its factory default settings by pushing the front-panel Default Setup button.

Use of some input conditioning controls or features may be limited when other control settings are in effect. Voltage offset is incompatible with reference waveforms because offset is an acquisition control for live waveforms (channels), not stored waveforms (reference).

NOTE. *The terms vertical acquisition window and horizontal acquisition window refer to the vertical and horizontal range of the segment of the input signal that the acquisition system acquires. The terms do not refer to any display windows on screen.*

What do you want to do next?

- [Learn more about Autoset. \(see page 553\)](#)
- [Learn about horizontal acquisition interrelated parameters. \(see page 550\)](#)

Bandwidth Enhancement

Bandwidth enhancement is a DSP implemented FIR filter that flattens the oscilloscope frequency response, and makes the phase response more linear. This results in better matching of channel responses and better signal fidelity. On some oscilloscope models, the bandwidth may be extended beyond what the analog channel exhibits, while other models provide no bandwidth extension but use the enhanced filter to reduce noise and provide better signal fidelity.

Bandwidth Filtering

The bandwidth enhancement (BW) filter reduces noise and alias magnitudes in the frequency range of the stop band below and above the Nyquist frequency. In oscilloscopes that do not extend the bandwidth, overall noise is reduced when the filter is on. In oscilloscopes that incorporate a small amount of bandwidth extension, the filter increases noise at frequencies just above the transition band but decreases noise at frequencies in the stop band and the aliased stop band. The overall amount of noise with the filter on may be more or less depending on the oscilloscope model and the enhanced filter characteristics used within that model.

The BW enhancement filter will only operate at the base sample rate of the channel A/D converters and is applied at that sample rate. If ET or IT acquisition modes are used, the filter will be applied to the data before interpolation in IT mode and before it is placed into bins in ET mode. If the sample rate is lower than base rate, then the filter will turn off. The vertical bandwidth field will display BW' when the filter is on.

The individual filters are calibrated at manufacturing for each of the four channels and for multiple attenuator settings. The calibrated filters from these attenuator settings are used for the remaining attenuator settings.

For instrument models >3.5 GHz, the bandwidth enhanced filters are calibrated with a reference plane at the SMA, or 2.92 mm TekConnect input to a channel depending on the oscilloscope model.

Controls

From the Menu bar, select Vertical > Bandwidth Enhancement.

- When Analog Only is selected, the bandwidth enhancement filter is not applied to the input data.
- When Digital Filters (DSP) Enabled is selected, the bandwidth enhancement filter is turned on whenever the base sample rate of the channel, or higher, is selected using the horizontal time base controls. When in Enabled,, the filter will turn off if the sample rate goes lower than the base rate or if other oscilloscope settings are selected that do not support the filter operation, such as Fast Acquisition.

Coupling

All instruments and probes specify a maximum signal level. Do not exceed the limit, even momentarily, as the input channel or probe may be damaged. Use external attenuators if necessary to prevent exceeding the limits.

Coupling determines whether an input signal is directly connected to the input channel (DC coupling), connected through a DC blocking capacitor (AC coupling), or not connected at all (GND coupling).

The input resistance of each input channel can be 1 M Ω or 50 Ω . To properly terminate signals when using coaxial cables, or to support active probes with different termination requirements, select the termination in the Coupling control window.

All probes expect a specific coupling and input termination. Both coupling and input termination are displayed on the screen. If the instrument determines the coupling and termination required by the probe, either implicitly because of the TekProbe/TekVPI interface or through performing a probe calibration, the instrument sets the required coupling and input termination.

Consider the following when you use 50 Ω termination with any channel:

- The instrument does not accurately display frequencies under 200 kHz if AC coupling is selected.
- The instrument reduces the maximum volts per division setting for the channel to 1 V from 10 V (10 V from 100 V with a 10X probe attached), since input amplitudes appropriate for the higher settings would overload the 50 Ω input.
- The instrument switches to 50 Ω termination and DC coupling if you connect an active probe. Active probes also reduce the maximum volts per division.


What do you want to do next?

- [Learn about the Vertical Setup window. \(see page 355\)](#)
- [Learn about the Termination control window. \(see page 736\)](#)

Scaling and Positioning

The scaling and positioning controls determine the portion of the input signal received by the acquisition system. Set vertical scaling, positioning, and DC offsets to display the features of interest on your waveform and to avoid clipping.

Waveform data outside of the vertical acquisition window is clipped; that is, the data is limited to the minimum or maximum boundaries of the vertical acquisition window. This causes inaccuracies in amplitude-related measurements. For more information see [Vertical Acquisition Window Considerations \(see page 547\)](#).

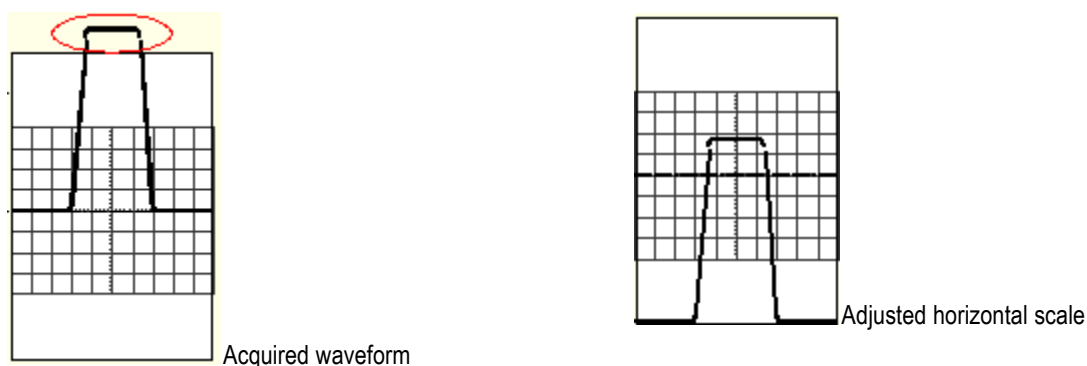

Set the horizontal scale, position, and resolution (record length) to include the acquired waveform record waveform attributes of interest with good sampling density on the waveform. These settings define the horizontal acquisition window, described in [Horizontal Acquisition Window Considerations \(see page 550\)](#).

NOTE. The terms *vertical acquisition window* and *horizontal acquisition window* refer to the vertical and horizontal range of the segment of the input signal that the acquisition system acquires. The terms do not refer to any display windows on screen.

What do you want to do next?

- [Learn about the Vertical Setup Position and Scale controls. \(see page 807\)](#)
- [Learn about the Vertical Offset control. \(see page 553\)](#)

Vertical Acquisition Window Considerations

You can set the vertical scale, position, and offset of each channel independently of other channels. Vertical scale and offset specify the vertical acquisition window for each channel. Parts of the signal amplitude that fall within the vertical window are acquired; parts outside (if any) are not.

The offset control subtracts a constant DC level from the input signal before the vertical scale factor is applied, and the vertical position control adds a constant number of divisions of signal after the scale factor is applied to the resulting difference.

The vertical scale and position controls have the following affects on the vertical acquisition window and the displayed waveform:

The vertical volts per division you set determines the vertical size of the acquisition window, allowing you to scale it to contain all of a waveform amplitude or only part. Figures A and B below show two vertical acquisition windows that contain the entire waveform, but only the window in Figure B contains the entire waveform in the graticule on screen.

NOTE. *Amplitude-related automatic measurements (for example, peak-to-peak and RMS) will be accurate for vertical windows like those shown in Figures A and B below because neither waveform is clipped (that is, both waveforms are acquired). But if signal amplitude were to extend outside the vertical acquisition window, the data acquired is clipped. Clipped data causes inaccurate results if used in amplitude-related automatic measurements. Clipping also causes inaccurate amplitude values in waveforms that are stored or exported for use in other programs.*

If the scale of a math waveform is changed so that the math waveform is clipped, it will affect the amplitude measurements on that math waveform as follows:

- The vertical position adjusts the display of the graticule relative to the vertical acquisition window (position is a display control). Figure B shows how vertical position moves the waveform graticule vertically in the acquisition window to place the acquired waveform in the graticule display. That is all position does; it does not determine what data is acquired as do vertical scale and offset.

Figure A



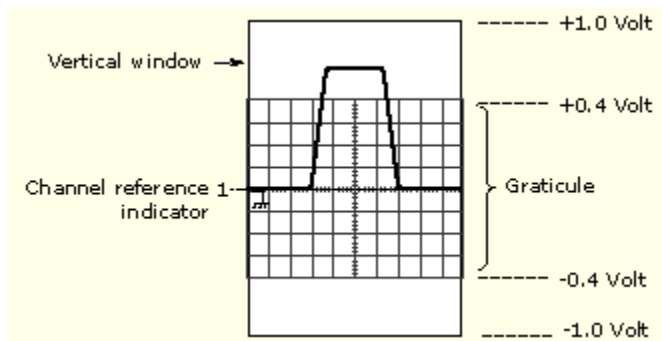


Figure B

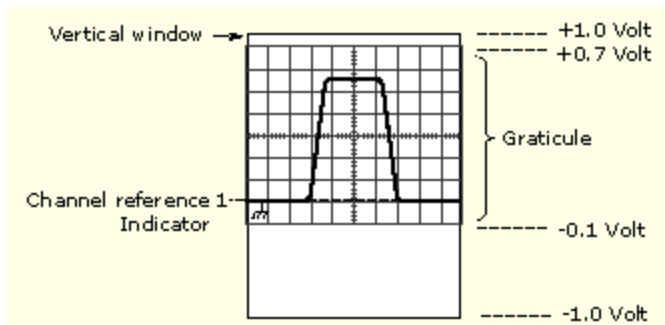

- As you vary vertical offset, the middle voltage level moves relative to zero. This moves the vertical acquisition window up and down on the waveform. With input signals that are smaller than the window, it appears the waveform moves in the window. Actually, a larger signal shows what really happens: the offset moves the middle of the vertical acquisition window up and down on the input signal. The next figure shows how offset moves the acquisition window to control the portion of the waveform amplitude the window captures.
- Applying a negative offset moves the vertical range down relative to the DC level of the input signal. Likewise, applying a positive offset moves the vertical range up. See the following illustration.

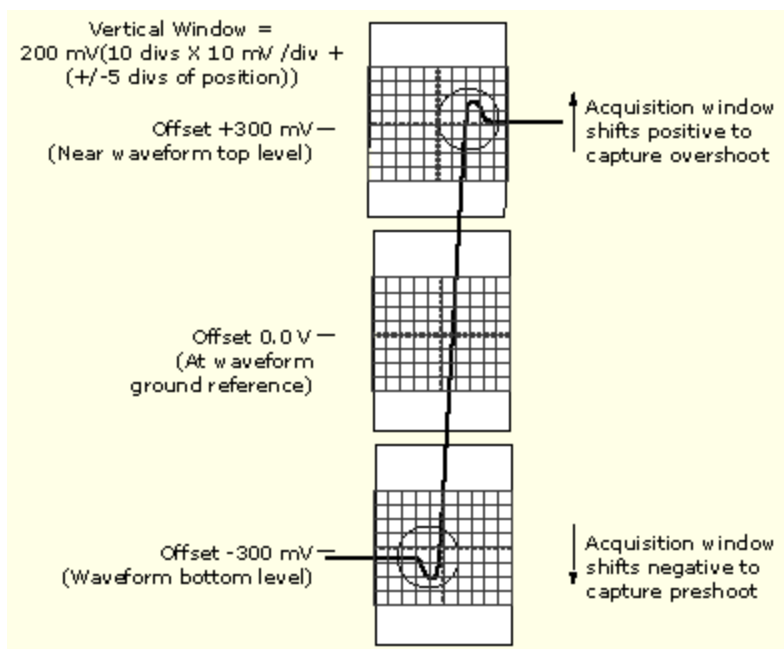

What do you want to do next?

- [Learn about horizontal acquisition window considerations. \(see page 550\)](#)
- [Learn about setting offset. \(see page 361\)](#)


Horizontal Acquisition Window Considerations

The instrument lets you define the horizontal acquisition window parameters that determine which segment of an incoming signal that becomes the waveform record, following acquisition. For additional information, see [Waveform Record \(see page 556\)](#).

These common parameters specify a horizontal acquisition window that is applied to all channels in parallel. See [Independent vs. Shared Window \(see page 551\)](#) for additional information.

These parameters are shown in the next figure (horizontal window with delay on):

- The trigger position determines where the trigger event will be located in the waveform record. To see more pretrigger data move your trigger position to the right on the graticule.
- The horizontal position determines the number of pretrigger and posttrigger samples. Samples before the trigger point are pretrigger samples and those after the trigger point are posttrigger samples. When Delay is off, the horizontal position is the same as the trigger position.
- The horizontal delay determines the time from the trigger point to the Horizontal Reference.
- The horizontal scale determines the horizontal size of the window relative to any waveform, allowing you to scale it to contain a waveform edge, a cycle, or several cycles.

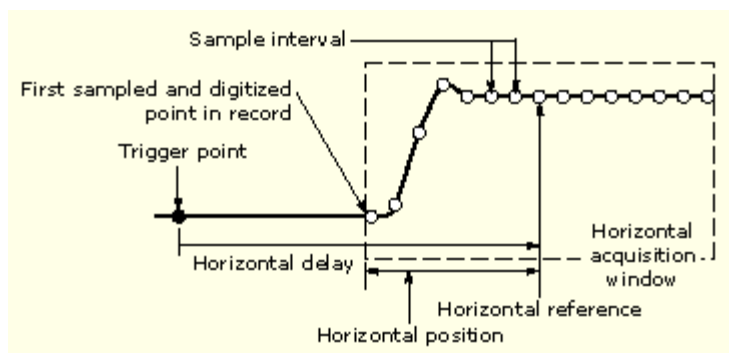

What do you want to do next?

- [Learn more about Horizontal Setup. \(see page 155\)](#)

Horizontal Acquisition Window Interrelated Parameters

Horizontal Scale, Record Length, Sample Interval, and Resolution are related parameters that specify the horizontal acquisition window.

Because the horizontal acquisition window must fit in the 10 horizontal division display, for most cases, you can set the Time Duration of the horizontal acquisition window ($10 \text{ divs} \times \text{the scale setting}$) as described below. By also setting a Record Length in samples, you indirectly set the Resolution, Sample Interval, and Sample Rate for the horizontal acquisition window (waveform record).

The relationship between these horizontal elements is as follows:

- Time Duration (seconds) = 10 divs (window size) × Horizontal Scale (sec/div)
- Time Duration (seconds) = Sample Interval (seconds/sample) × Record Length (samples), where Time Duration is the horizontal acquisition window time duration, and Sample Interval (sec/sample) = Resolution (sec/sample) = 1/Sample Rate (samples/sec)

Note that it is the Sample Interval that changes to accommodate the window Time Duration (and its scale setting) and the Record Length setting.

The elements behave as follows:

- If the Record Length or Time Duration change, the Sample Interval will vary to accommodate the change. The Sample Interval can vary up to the highest Sample Rate, (this corresponds to the lowest Sample Interval, and the highest Resolution).
- If the Sample Interval reaches its lower limit, the Record Length must decrease if the Time Duration decreases (you set faster scale settings), or Time Duration must increase (forcing slower scale settings) if Record Length increases (you set longer record lengths. The equation becomes: Maximum Record Length = Time Duration ÷ Min Sample Interval.

NOTE. Resolution and the equivalent elements, Sample Interval and Sample Rate, are derived and cannot be set directly. You can, however, check the Resolution at anytime in the resolution readout. Also note that the front-panel Resolution knob actually adjusts the Record Length to increase sample density.

This discussion assumes that Horizontal Scale is held constant. You can hold the Sample Rate constant instead by clicking Hold Sample Rate constant on the Record Length tab of the User Preferences control window.


What do you want to do next?

- [Overview Learn about horizontal scale. \(see page 677\)](#)
- [Learn about record length. \(see page 745\)](#)
- [Learn about horizontal resolution. \(see page 171\)](#)

Independent versus Shared Window

The instrument applies the same horizontal acquisition window to all channels from which it acquires data. Unlike the vertical acquisition window that you size and offset independently for each channel, the same time/div, resolution (record length), and horizontal position (from the same trigger point) apply to all channels simultaneously.

One trigger, from a single trigger source, will locate a common horizontal acquisition window for all active channels, which you can shift in parallel by setting the horizontal position control.

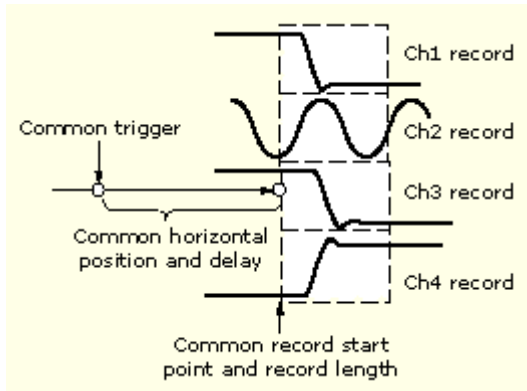

What do you want to do next?

- [Learn more about the horizontal acquisition window. \(see page 155\)](#)

Incompatible Acquisition Features

The following table shows which acquisition features and modes are incompatible with other features or modes:

Incompatible with	Control/Feature	Explanation
Reference Waveforms (Ref 1– 4)	Voltage Offset	Offset is an acquisition control, not a display control
Single shot acquisition	Average	Acquisitions continue until the specified number of waveforms have been acquired and averaged
Single shot acquisition	Envelope	Acquisitions continue until the specified number of waveforms have been acquired for the enveloped waveform
Measurements	Roll	Measurements are not available until you stop acquisitions
Envelope, Average, or WfmDB acquisition modes	Roll	Using these acquisition modes will turn Roll mode off

Autoset Considerations

Autoset acquires samples from the input signal and attempts to take the following actions based on the input data:

- Evaluates the amplitude range of the input signals and sets the size and vertical offset of the vertical acquisition window to acquire the signal with good resolution, but without clipping.
- Sets the trigger to the approximate midlevel of the signal being Autoset and switches to edge trigger mode.
- Evaluates the signal transitions and sets the horizontal scale to produce a waveform display of 2 or 3 cycles of the input signal.

Sometimes Autoset cannot produce a correct display due to the nature of the input signal. If so, you may have to adjust the scale, trigger, and acquisition controls manually. The following are some conditions that can cause Autoset to fail:

- No signal present
- Signals with extreme or variable duty cycles
- Signals with multiple or unstable signal periods
- Signals with too low amplitude
- No recognizable trigger signal
- Signals with a frequency < 20 Hz
- Signals with a frequency above the bandwidth of the instrument


What do you want to do next?

- [Learn about adjusting the horizontal scale. \(see page 677\)](#)
- [Learn about trigger setup. \(see page 289\)](#)
- [Learn about horizontal acquisition controls. \(see page 56\)](#)

Acquisition Hardware

Before a signal can be acquired, it must pass through the input channel where it is scaled and digitized. Each channel has a dedicated input amplifier and digitizer, as shown in the next figure; each channel can produce a stream of digital data from which the instrument extracts waveform records.

Refer to [Signal Connection \(see page 555\)](#) for further description of scaling, positioning, and DC offsetting of channels.

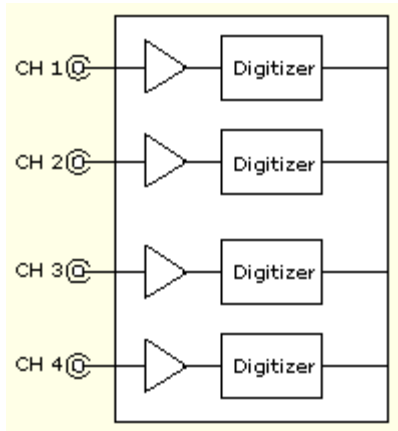


What do you want to do next?

- [Learn about the sampling process. \(see page 555\)](#)

Signal Connection

This diagram displays the signal connection model for each input channel.

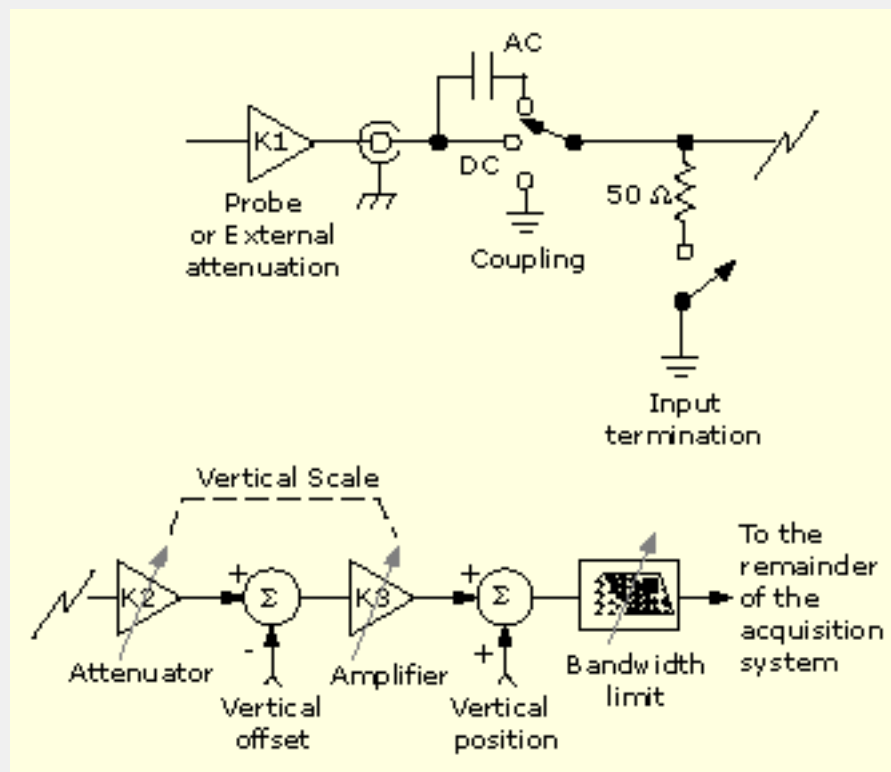


What do you want to do next?


- [Learn more about coupling. \(see page 546\)](#)
- [Learn more about the vertical acquisition system. \(see page 547\)](#)

Sampling Process

Acquisition is the process of sampling an analog signal, converting it into digital data, and assembling it into a waveform record, which is then stored in acquisition memory. Sampling is the process that provides a waveform record per trigger event as shown in the next figure.

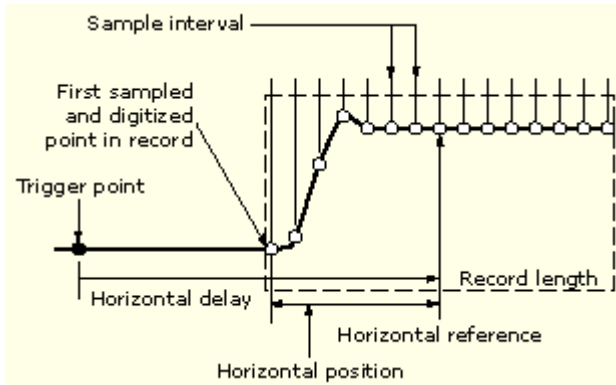

The signal parts within the vertical range of the amplifier are digitized as shown in the next figure.

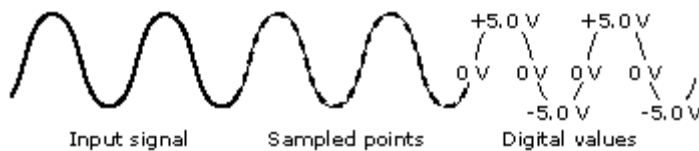

What do you want to do next?

- [Learn about sampling modes. \(see page 556\)](#)

Sampling Modes

The acquisition system can process the data as it is acquired, averaging or enveloping the waveform data to produce enhanced waveform records. Once the waveform record exists (enhanced or not), you can use the post processing capabilities of the instrument to further analyze that record.

Refer to [Acquisition Mode \(see page 680\)](#) for a description of the acquisition modes.

What do you want to do next?

- [Learn about waveform measurements. \(see page 234\)](#)


Waveform Record

While sampling on the input signal provides the data that makes up the waveform record for any given channel, the instrument builds the waveform record through use of some common parameters ("common" means they affect the waveforms in all channels).

The next figure shows how these common parameters define the waveform record. They define how much data is taken and the location within the data stream. These parameters include the following:

- **Sample Interval.** This is the time between sample points taken during acquisition.
- **Record Length.** This is the number of samples required to fill a waveform record.
- **Trigger Point.** The trigger point marks the reference zero time in a waveform record. All waveform samples are located in time (minus and/or plus) with respect to the trigger point.
- **Horizontal Position.** When horizontal delay is off, the horizontal position is the time from the first sample taken (first point in the waveform record) to the trigger point (in percent of samples before the trigger). The trigger point and the horizontal reference are at the same time in the waveform record.

When horizontal delay is on, the Horizontal Position knob controls the horizontal delay time. The horizontal delay is the time from the trigger point to the horizontal reference.

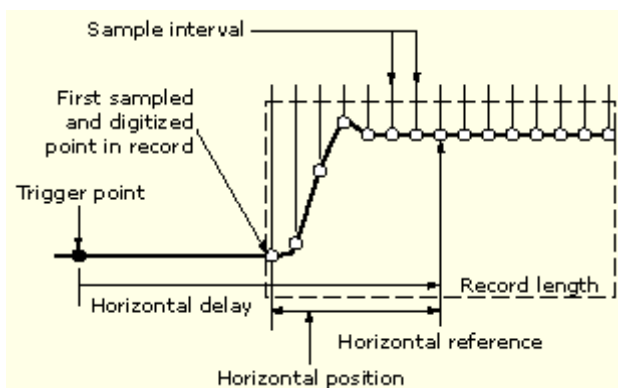

The waveform record and its defining parameters (horizontal delay on)

The previous figure shows that the instrument acquires points in order from left to right.

When all of the points in the waveform record have been sampled and digitized, the waveform record is stored in acquisition memory and becomes available for display (or use in math waveforms, storage, and so on).

What do you want to do next?

- [Learn about Horizontal window considerations. \(see page 550\)](#)
- [Learn about Horizontal Acquisition Window interrelated parameters. \(see page 550\)](#)

Interleaving

The instrument can interleave channels to attain higher real-time digitizing rates and longer record length when only one or two channels are turned on without equivalent-time sampling. The instrument applies the resources of unused channels (that is, channels that are turned off) to sample those that are in use (turned on).

Once you set the horizontal scale to exceed the maximum digitizing rate for the number of channels in use, the instrument will not be able to get enough samples to create a waveform record. At that point, the instrument will switch from real-time to equivalent-time to obtain additional samples.

What do you want to do next?

- [Learn about equivalent time sampling. \(see page 167\)](#)

Interpolation

When the sample density falls to less than one sample per display column, the instrument must calculate intermediate points to display a waveform. This process is called interpolation.

There are two options for interpolation:

- **Sin(x)/x Interpolation.** Computes record points using a curve fit between the actual values acquired. It assumes that all the interpolated points fall along that curve.
- **Linear Interpolation.** Computes record points between actual acquired samples by using a straight line fit. It assumes that all the interpolated points fall in their appropriate point in time on that straight line.

What do you want to do next?


- [Learn about using the MultiView Zoom feature. \(see page 590\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Triggering Concepts


Overview

To use the instrument to sample a signal and digitize it into a waveform record that you want to process, you need to set up the trigger conditions.

The next figure shows how triggers fit into the overall instrument operation.

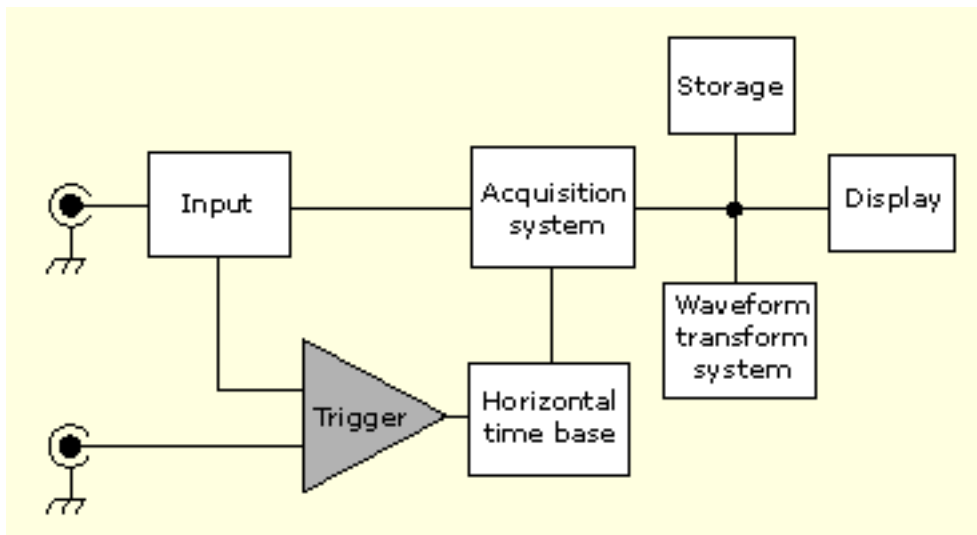

Triggers create meaningful waveforms from signal displays. This instrument has simple edge triggers as well as a variety of advanced triggers.

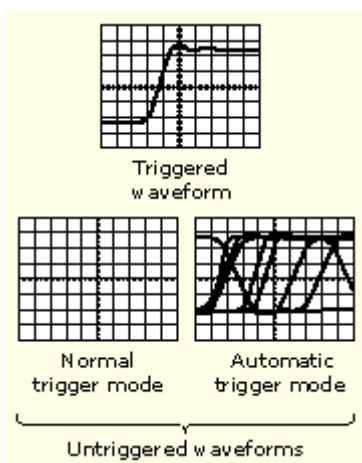

The Trigger Event

The trigger event establishes the time-zero point in the waveform record. All waveform record data are located in time with respect to that point. The instrument continuously acquires and retains enough sample points to fill the pretrigger portion of the waveform record (that part of the waveform that is displayed before, or to the left of, the triggering event on screen).

When a trigger event occurs, the instrument starts acquiring samples to build the posttrigger portion of the waveform record (displayed after, or to the right of, the trigger event). Once a trigger is recognized, the instrument will not accept another trigger until the acquisition is complete and the holdoff time has expired.

What do you want to do next?

- [Learn about trigger sources. \(see page 560\)](#)
- [Learn about trigger types. \(see page 561\)](#)
- [Learn about trigger modes. \(see page 564\)](#)
- [Learn about trigger holdoff. \(see page 565\)](#)

Trigger Sources

The trigger source provides the signal that triggers acquisition. Use a trigger source that is synchronized with the signal that you are acquiring and displaying.

NOTE. *This online help supports many oscilloscope models from Tektronix. Some of these sources may not be available on your instrument. Some of the sources may not be available on your instrument with its current setup.*

You can derive your trigger from the following sources:

- **Input channels.** These are the most commonly used trigger sources. You can select any one of the four input channels. The channel that you select as a trigger source will function whether it is displayed or not.
- **Digital channels.** These sources are available on MSO instruments. You can select any combination of digital channels.
- **Bus.** This source is used to trigger a parallel bus or a serial bus. You can include any combination of analog, math, or digital channels to build a parallel bus with up to 20 bits (and a clock), or use any channel as a component in a serial bus. You define the trigger as a bus pattern for parallel buses or as a bus cycle for serial buses.
- **AC Line Voltage.** This source is often used to look at signals related to the power line frequency (for example, signals from devices such as lighting equipment and power supplies). Because the instrument generates the trigger from the power line, you do not have to use a channel input.
- **Auxiliary Trigger.** (AUX IN) provides a fifth source that you can use as a trigger input when you need to use the four input channels for other signals. For example, you might want to trigger on a clock while displaying four other logic signals. To use the auxiliary trigger, connect the signal to the auxiliary input connector on the front panel. The input connector is not compatible with most probes, nor can you display the auxiliary trigger signal.

The trigger level range for the front-panel auxiliary input (Aux In) is adjustable from +5 V to –5 V. The maximum input voltage is ± 20 V.

What do you want to do next?

- [Learn about trigger types. \(see page 561\)](#)
- [Learn about trigger modes. \(see page 564\)](#)

Trigger Types

NOTE. *This online help documents features and options available for several instrument models. Your instrument may not have every feature discussed in this online help, depending on its configuration.*

From the Trig menu, select A Event Trigger Setup or B Event Trigger Setup.

To Use

Click the Select button for selecting the trigger type in the Trigger Selection dialog box.


The triggers type available are listed as follows:

Edge trigger. This is the simplest and most commonly used trigger type, used with both analog and digital signals. An edge trigger event occurs when the trigger source passes through a specified voltage level in the specified direction (rising or falling signal voltage).

Bus trigger. This trigger is used with both analog and digital signals used to set up parallel buses or a serial buses. A bus trigger event occurs when the instrument detects a bus pattern that you specify for a parallel bus, or a bus cycle you select for a serial bus.

NOTE. *This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.*

[Glitch trigger \(see page 571\)](#), [Transition trigger \(see page 575\)](#), [Pattern trigger \(see page 571\)](#), [Runt trigger \(see page 572\)](#), [Window Trigger \(see page 576\)](#), [State trigger \(see page 574\)](#), [Width trigger \(see page 576\)](#), [Timeout trigger \(see page 575\)](#), and [Setup/Hold trigger \(see page 572\)](#)

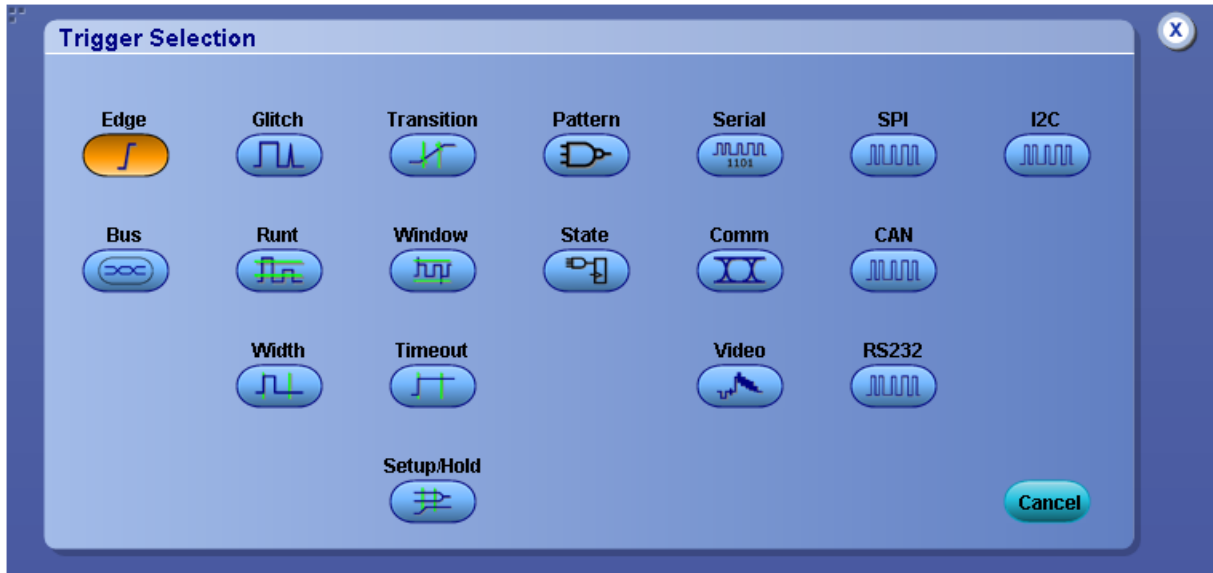

Pulse trigger

NOTE. Pulse trigger on B event is not available on MSO/DPO5000 Series instruments.

These are special-purpose triggers that are primarily used with digital signals. The following types of pulse triggers are available: Glitch, Runt, Window, Width, Transition, and Timeout. Pulse triggers are available on the main and B event triggers only.

Logic trigger

NOTE. Logic trigger on B event is not available on MSO/DPO5000 Series instruments.

These are special-purpose triggers that are primarily used with digital logic signals. Two of the types, Pattern and State, trigger the instrument based on the Boolean operator that you select for the trigger sources. A third type, Setup and Hold, triggers when data in one trigger source changes state within the setup and hold times that you specify relative to a clock in another trigger source. Logic triggers are available on the main and B event triggers.

Communication trigger

NOTE. Communication trigger is not available on MSO/DPO5000 Series instruments.

Available with Mask Testing, this trigger is designed to work with communication masks and standards. Mask testing automatically uses Communication triggers.

NOTE. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.

Video trigger

NOTE. Video trigger is available on DPO7000/C and MSO/DPO5000 Series instruments.

These are used to trigger the instrument on specified fields or lines of a video signal. You can use one of several preset video signal formats or set a custom format.

Serial trigger

NOTE. Serial trigger is not available on MSO/DPO5000 Series instruments.

Serial triggering allows you to define a 64-bit pattern and trigger on it. The serial pattern can be set in radices of binary or hex. Serial triggering also offers Recovered Clock as the clock source in addition to Ch1 – Ch4. Use serial triggering in conjunction with mask testing to trigger the instrument on communications codes and standards. The communication codes and standards work together to define the parameters for the trigger event.

What do you want to do next?

- [Learn about trigger sources. \(see page 560\)](#)
- [Learn about trigger modes. \(see page 564\)](#)

Trigger Modes

The trigger mode determines how the instrument behaves in the absence of a trigger event:

- Normal trigger mode enables the instrument to acquire a waveform only when it is triggered. If no trigger occurs, the instrument does not acquire a waveform, and the last waveform record acquired remains "frozen" on the display. If no last waveform exists, no waveform is displayed.
- Auto trigger mode enables the instrument to acquire a waveform even if a trigger does not occur. Auto mode uses a timer that starts after a trigger event occurs. If another trigger event is not detected before the time out, the instrument forces a trigger. The length of time it waits for a trigger event depends on the time base setting.

Auto mode, when forcing triggers in the absence of valid triggering events, does not synchronize the waveform on the display. In other words, successive acquisitions are not triggered at the same point on the waveform; therefore, the waveform will appear to roll across the screen. If valid triggers occur, the display will become stable.


What do you want to do next?

- [Learn about trigger sources. \(see page 560\)](#)
- [Learn about trigger types. \(see page 561\)](#)

Trigger Holdoff

Trigger holdoff can help stabilize triggering. When the instrument recognizes a trigger event, it disables the trigger system until acquisition is complete. In addition, the trigger system remains disabled during the holdoff period that follows each acquisition. Adjust holdoff to obtain stable triggering when the instrument is triggering on undesired trigger events.

A digital pulse train is a good example of a complex waveform. Each pulse looks like any other, so many possible trigger points exist. Not all of these will result in the same display. The holdoff period allows the instrument to trigger on the correct edge, resulting in a stable display.

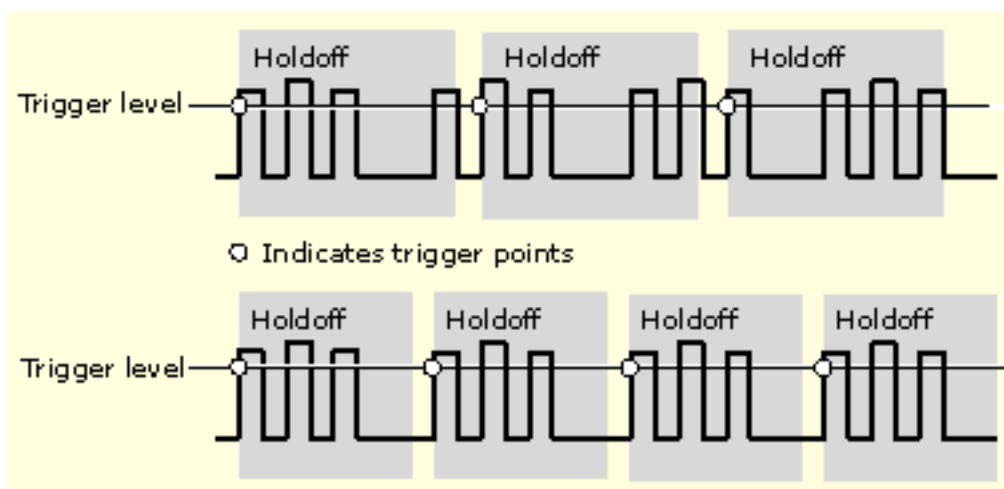

At the longer holdoff time for the top waveform, unstable triggering occurs. With a shorter holdoff set for the bottom waveform, triggers all occur on the first pulse in the burst to remedy the unstable trigger.

The Holdoff setting range is 1.5 μs (minimum holdoff available) to 12 s (maximum holdoff available). For more information on how to set holdoff, [click here \(see page 348\)](#). You can also set a default holdoff. The default holdoff is the general-purpose holdoff for most applications and varies with the horizontal scale. It is equal to five times the current horizontal scale setting.

What do you want to do next?

- [Learn about trigger coupling. \(see page 566\)](#)
- [Learn about trigger modes. \(see page 564\)](#)

Trigger Coupling


Trigger coupling determines what part of the signal is passed to the trigger circuit. Edge triggering can use all available coupling types: AC, DC, Low Frequency Rejection, High Frequency Rejection, and Noise Rejection. All of the advanced trigger types use DC coupling only. For a description of each coupling type, [click here \(see page 57\)](#).

What do you want to do next?

- [Learn about trigger position. \(see page 567\)](#)
- [Learn about trigger holdoff. \(see page 565\)](#)

Trigger Slope and Level

The slope control determines whether the instrument finds the trigger point on the rising or the falling edge of a signal. The level control determines where on that edge the trigger point occurs. See the next figure.

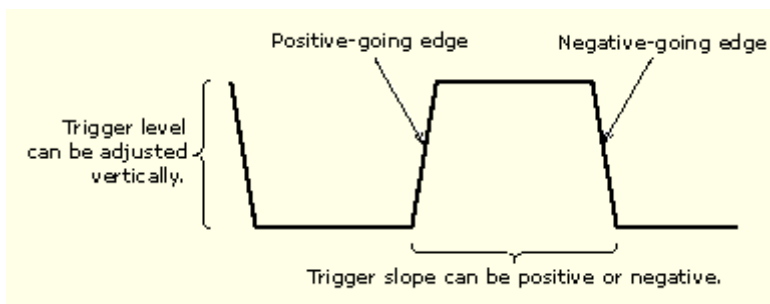

What do you want to do next?

- [Learn about trigger position. \(see page 567\)](#)
- [Learn about trigger slope. \(see page 566\)](#)

Horizontal Trigger Position

Horizontal position is an adjustable feature that defines where the trigger occurs on the waveform record. It lets you choose how much the instrument acquires before and after the trigger event. The part of the record that occurs before the trigger is the pretrigger portion. The part that occurs after the trigger is the posttrigger portion. A longer posttrigger period may be useful when you want to see the effects an event has on your system under test.

Pretrigger data can be valuable when troubleshooting. For example, if you are trying to find the cause of an unwanted glitch in your test circuit, you can trigger on the glitch and make the pretrigger period large enough to capture data before the glitch. By analyzing what happens before the glitch, you may uncover information that helps you find the source of the glitch.

What do you want to do next?

- [Learn about trigger coupling. \(see page 566\)](#)
- [Learn about trigger slope. \(see page 566\)](#)
- [Learn about glitch triggers. \(see page 571\)](#)

Delayed Trigger System

You can trigger with the A (Main) trigger system alone or you can combine the A (Main) trigger with the B (Delayed) trigger to trigger on sequential events. When using sequential triggering, the A trigger event arms the trigger system, and the B trigger event triggers the instrument when the B trigger conditions are met.

A and B triggers can (and typically do) have separate sources. The B trigger condition can be based on a time delay or a specified number of counted events.


For more details on delayed triggering, click [here \(see page 754\)](#).

What do you want to do next?

- [Learn about advanced triggering. \(see page 568\)](#)

Advanced Triggering

You can check the advanced trigger status in the readout. The readout indicates the trigger type and then shows sources, levels, or any other parameters that are important for the particular trigger type.

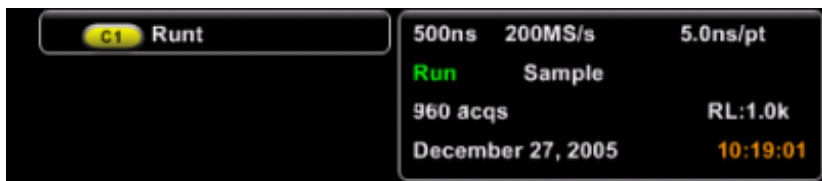

Bus Trigger

NOTE. *Bus trigger is not available on MSO/DPO5000 Series instruments.*

A bus trigger occurs when a supported instrument detects a bus pattern that you specify for a parallel bus, or a bus cycle you select for a serial bus.

You can set the instrument to trigger on a parallel bus when the instrument detects a match to the bus pattern, or when the instrument detects that the value on the bus is < or > the value of the bus pattern. The pattern can be in Binary, Hex, or Symbolic format.

You can set the instrument to trigger on an SPI bus when the instrument detects an SS or an MISO + MOSI bus cycle. For the MISO + MOSI selection, click the Edit button to define the Data Value pattern, and then set the Format to match.

You can set the instrument to trigger on an I2C bus when the instrument detects a Start, Stop, Repeated Start, Missing Ack, Address, Data, or Addr + Data bus cycle or activity. For some Trigger On selections, you need to set additional fields to define other parameters, such as for an Address. In this example, you need to set an Address Format, Address Value (click the Edit button), Data Direction, and Addressing Mode.

You can set the instrument to trigger on an USB bus when the instrument detects a Sync, Reset, Suspend, Resume, End of Packet, Token (Address) Packet, Data Packet, Handshake Packet, Handshake Packet, Special Packet, or Error bus cycle or activity. For some Trigger On selections, you need to set additional fields to define other parameters, such as for a Token (Address) Packet. In this example, you need to set a Token Type, Trigger when address is, Address Format, Address (click the Edit button), and when endpoint is equal to Endpoint Format, and Endpoint.

You can set the instrument to trigger on an RS232 bus when the instrument detects a Start, End of Packet, Data, or Parity Error bus cycle or activity. For some Trigger On selections, you need to set additional fields to define other parameters, such as for a Data. In this example, you need to set a Data Format, Number of Bytes, and Data Value (click the Edit button).

For all the serial standard buses, you can also set the component threshold levels through the Logic Thresholds Setup button.

Communication Trigger

Use the Comm trigger to trigger the instrument in conjunction with mask testing on communications codes and standards. The controls work together to define the parameters for the trigger event.

The standards that appear in the Standard drop-down list depend on the coding format that you selected. The coding format also determines whether upper, lower, single, or clock threshold levels or pulse forms are used. The standard determines the bit rate.

Communication Triggering

Communication (Comm) triggers are one type of trigger. Comm triggers are designed to work with communication masks and standards. When you select a mask to test, it is associated with a specific communication standard. The mask you select determines the Comm trigger needed for that standard.

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.*

Eye diagrams that are set up with an external clock use a time base position value large enough to guarantee the edge is always before the acquisition record starts. This forces all Comm triggers to disable the B-Trigger.

Even though Comm triggers are designed to work with masks, you can set up Comm triggering without using a mask. You can also set up your own mask to use with Comm triggers.

What do you want to do next?

- [Learn about mask testing. \(see page 626\)](#)
- [Learn more about eye measurements. \(see page 628\)](#)
- [Go to the mask testing setup overview. \(see page 177\)](#)

Glitch Trigger


 
 

 



A glitch trigger occurs when the instrument detects a pulse narrower (or wider) than some specified time. You can set the instrument to trigger on glitches of either polarity or to reject glitches of either polarity.

Pattern Trigger

A pattern trigger occurs when the inputs to the selected logic function cause the function to become True or False. When you use a pattern trigger, you define:

- The precondition for each logic input: logic high, low, or "don't care"; the logic inputs are the instrument channels
- The Boolean logic function: AND, NAND, OR, or NOR
- The condition for triggering: the Boolean function becomes True (logic high) or False (logic low), and whether the True condition is time qualified

 Pattern trigger logic choices are summarized in the next table.

Pattern	State	Definition ^{1, 2}
AND 	Clocked AND 	If all the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NAND 	Clocked NAND 	If not all of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
OR 	Clocked OR 	If any of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NOR 	Clocked NOR 	If none of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.

¹ For state triggers, the definition must be met at the time the clock input changes state

² The definitions given here are correct for the Goes TRUE setting in the Trigger When menu. If that menu is set to Goes False, swap the definition for AND with that for NAND and for OR with NOR for both pattern and state types.

³ The logic inputs are channels 1, 2, 3, and 4 when using Pattern triggers. For State triggers, channel 4 becomes the clock input, leaving the remaining channels as logic inputs.

Runt Trigger

A runt trigger occurs when the instrument detects a short pulse that crosses one threshold but fails to cross a second threshold before recrossing the first.


- You can set the instrument to detect any positive or negative runt pulse, or only those wider than a specified minimum width.
- Runt pulses can also be qualified by the logical state of other channels.



Setup and Hold Trigger

A setup/hold trigger occurs when a data signal changes state inside of the user specified setup and hold times relative to the clock. When you use setup/hold triggering, you define:

- The channel containing the logic input (the data source) and the channel containing the clock (the clock source)
- The direction of the clock edge to use
- The clocking level and data level that the instrument uses to determine if a clock or data transition has occurred
- The setup and hold times that together define a time range relative to the clock

Data that changes state within the setup/hold violation zone triggers the instrument. The next figure shows how the setup and hold times that you choose position the violation zone relative to the clock.

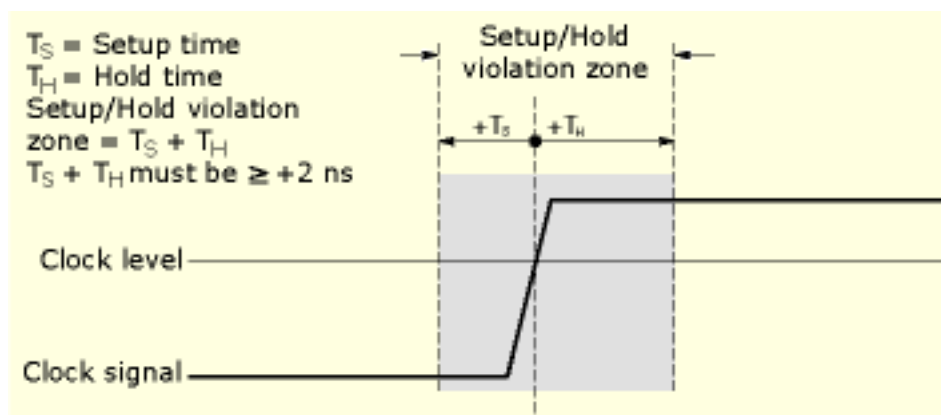

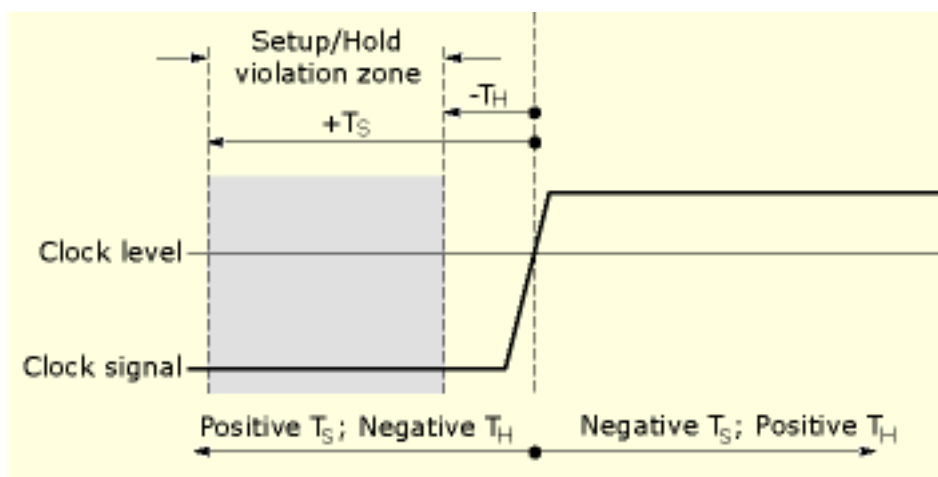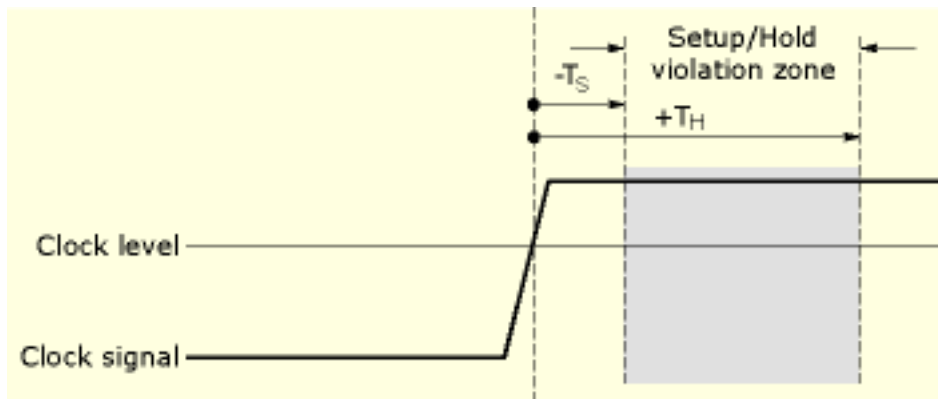

Setup/hold triggering uses the setup/hold violation zone to detect when data is unstable too near the time it is clocked. Each time trigger holdoff ends, the instrument monitors the data and clock sources. When a clock edge occurs, the instrument checks the data stream it is processing (from the data source) for transitions occurring within the setup/hold violation zone. If any occur, the instrument triggers with the trigger point located at the clock edge.

Positive settings for both setup and hold times (the most common application) locate the setup/hold violation zone so that it spans the clocking edge as shown above in the top waveform. The instrument detects and triggers on data that does not become stable long enough before the clock (setup time violation) or that does not stay stable long enough after the clock (hold time violation).

Negative settings for setup or hold times skew the setup/hold violation zone to locate it before or after the clocking edge as shown above in the center and bottom waveforms. The instrument can then detect and trigger on violations of a time range that occurs before or one that occurs after the clock.


 

 

 

 
NOTE. Keep the hold-time setting to no more than 2.5 ns less than one-half the clock period (hold time < (period/2) - 2.5 ns) or the instrument cannot trigger (this assumes a 50% duty cycle clock).

State Trigger

A state trigger occurs when the inputs to the logic function cause the function to become True or False at the time the clock input changes state. When you use a state trigger, you define:

- The precondition for logic input channels 1 through 3
- The direction of the state change for the clock input, channel 4
- The Boolean logic function: AND, NAND, OR, or NOR
- The condition for triggering: the Boolean function becomes True (logic high) or False (logic low)

State trigger logic conditions are summarized in the following table.

Pattern	State	Definition ^{1, 2}
AND 	Clocked AND 	If all the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NAND 	Clocked NAND 	If not all of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
OR 	Clocked OR 	If any of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.
NOR 	Clocked NOR 	If none of the preconditions selected for the logic inputs ³ are TRUE, then the instrument triggers.

¹ For state triggers, the definition must be met at the time the clock input changes state.

² The definitions given here are correct for the Goes TRUE setting in the Trigger When menu. If that menu is set to Goes False, swap the definition for AND with that for NAND and for OR with NOR for both pattern and state types.

³ The logic inputs are channels 1, 2, 3, and 4 when using Pattern triggers. For State triggers, channel 4 becomes the clock input, leaving the remaining channels as logic inputs.

Timeout Trigger

A timeout trigger occurs when the instrument does not detect an expected pulse transition within a user specified period of time, such as when a signal gets stuck either high or low. If the pulse transition occurs prior to a specified timeout time (the expected case), then no trigger results.

Transition Time Trigger

Transition triggering is based on the slope (change in voltage/change in time) of a pulse edge.

Use the transition trigger to trigger the instrument on pulse edges that traverse between two thresholds at faster or slower rates than the specified time. You can set up the instrument to trigger on positive or negative edges.

Video Trigger

Use the Video trigger to trigger the instrument on specified fields or lines of a composite video signal. You can select from several preset video signal formats or set a custom format.

NOTE. *Only composite signal formats are supported. Graphic display formats such as RGB and VGA are not supported.*

Width Trigger

A width trigger occurs when the instrument detects a pulse that is inside or outside some specified time range. The instrument can trigger on positive or negative width pulses. Width triggers can also be qualified by the logical state of other channels.

Window Trigger

NOTE. *Window trigger is not available on MSO/DPO5000 Series instruments.*

Use the Window trigger to trigger the instrument when the input signal rises above an upper threshold level or falls below a lower threshold level.

After setting these levels, you can specify whether you want to trigger the instrument as the signal is entering or leaving the threshold window. You can further qualify the trigger event in terms of time, or by the logical state of other channels.

Sequential Triggering

In applications that involve two or more signals, you may be able to use sequential triggering to capture more complex events. Sequential triggering uses the A (Main) trigger to arm the trigger system, and then uses the B (Delayed) trigger to trigger the instrument if a specific condition is met.

You can choose one of two trigger conditions:

- **Trigger After Time.** After the A trigger arms the trigger system, the instrument triggers on the next B-trigger event that occurs after the trigger delay time. You can set the trigger delay time with the keypad or the multipurpose knobs.
- **Trigger on nth Event.** After the A trigger arms the trigger system, the instrument triggers on the nth B event. You can set the number of B events with the keypad or the multipurpose knobs.

NOTE. The traditional delayed trigger mode called "Runs After" is controlled by the Horizontal Delay feature. You can use horizontal delay to delay acquisition from any trigger event, whether from the A (Main) trigger alone or from a sequential trigger that uses both the A (Main) and B (Delayed) triggers. See [Triggering with Horizontal Delay On \(see page 578\)](#) for more information.

Keep in mind the following when using sequential triggers:




- In most cases, you will set separate trigger sources for the A (Main) and B (Delayed) triggers.
- Sequential triggering for Trigger after Time or Trigger on nth Event is available for all trigger types.
- The B trigger is can be any trigger type except Bus.

What do you want to do next?

- [Learn more about sequential triggering. \(see page 577\)](#)
- [Learn about advanced triggers \(see page 568\)](#)

Triggering with Horizontal Delay Off

The next figure compares the sequential trigger choices A Only, Trig After Time, and Trig on nth Event when horizontal delay is off. Each illustration shows where pretrigger and posttrigger data is acquired relative to the trigger event.

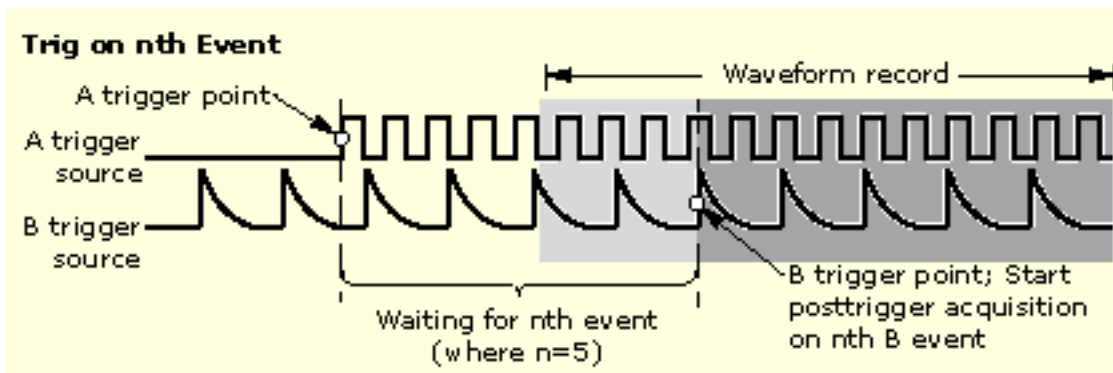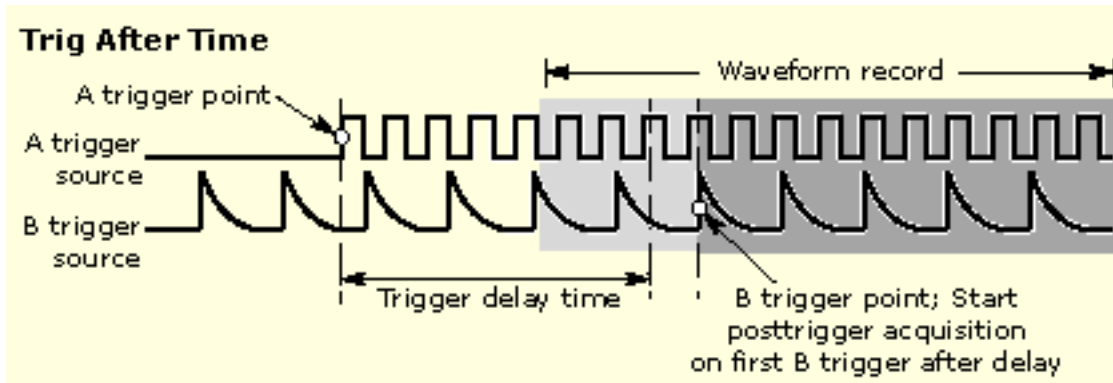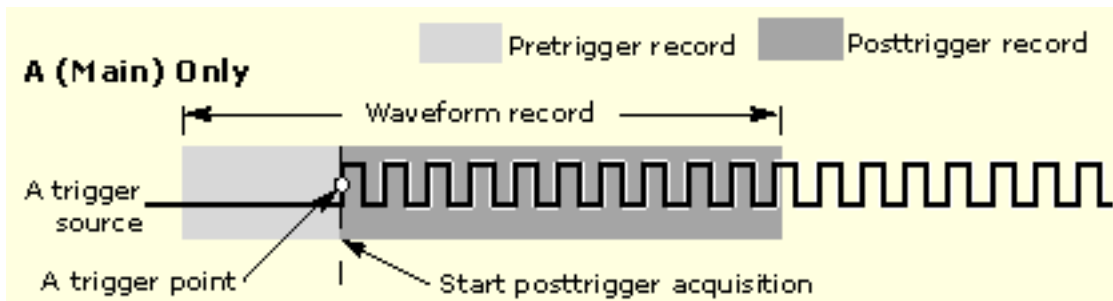

What do you want to do next?


- [Learn more about sequential triggering. \(see page 578\)](#)
- [Learn about advanced triggers. \(see page 568\)](#)

Triggering with Horizontal Delay On

You can use horizontal delay when you want to acquire a waveform record that is separated from the trigger event by a significant interval of time. The horizontal delay function can be used with any trigger setup.

You can turn horizontal delay on and off from the front panel, the Horizontal/Acquisition control window, and many of the Trigger control windows.

The next figure compares the sequential trigger choices A Only, Trig After Time, and Trig on nth Event when horizontal delay is on. Each illustration shows where pretrigger and posttrigger data is acquired relative to the trigger event.

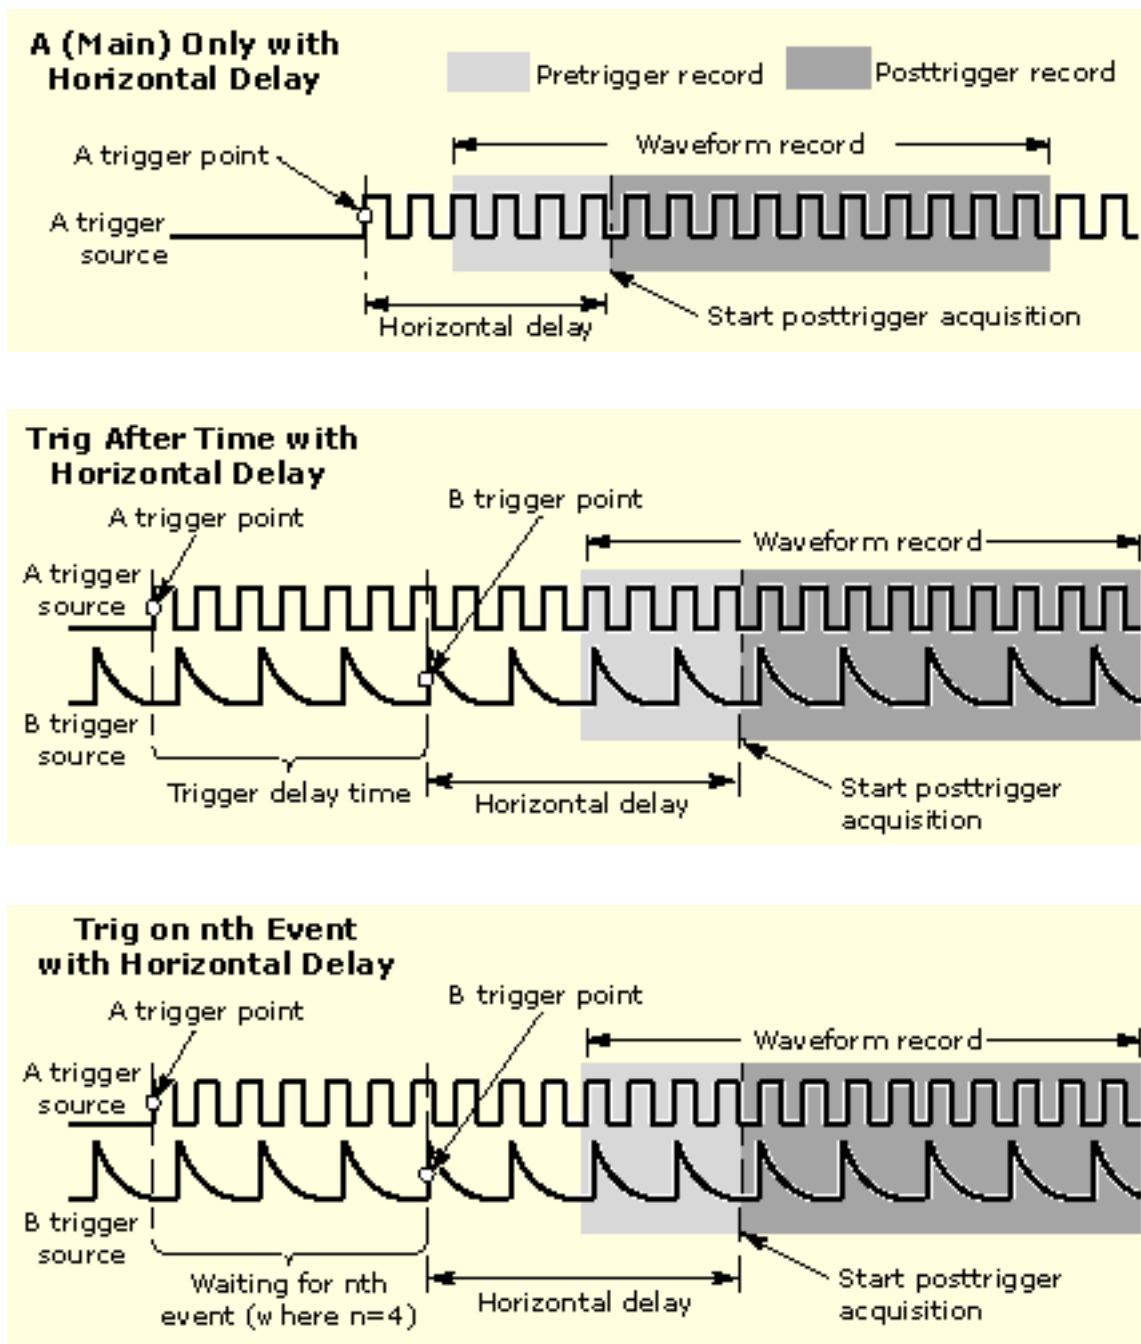


What do you want to do next?

- [Learn about advanced triggers. \(see page 568\)](#)
- [View a summary of triggering and horizontal delay. \(see page 580\)](#)

Triggering and Horizontal Delay Summary

The next figure shows all combinations of triggering and horizontal delay.

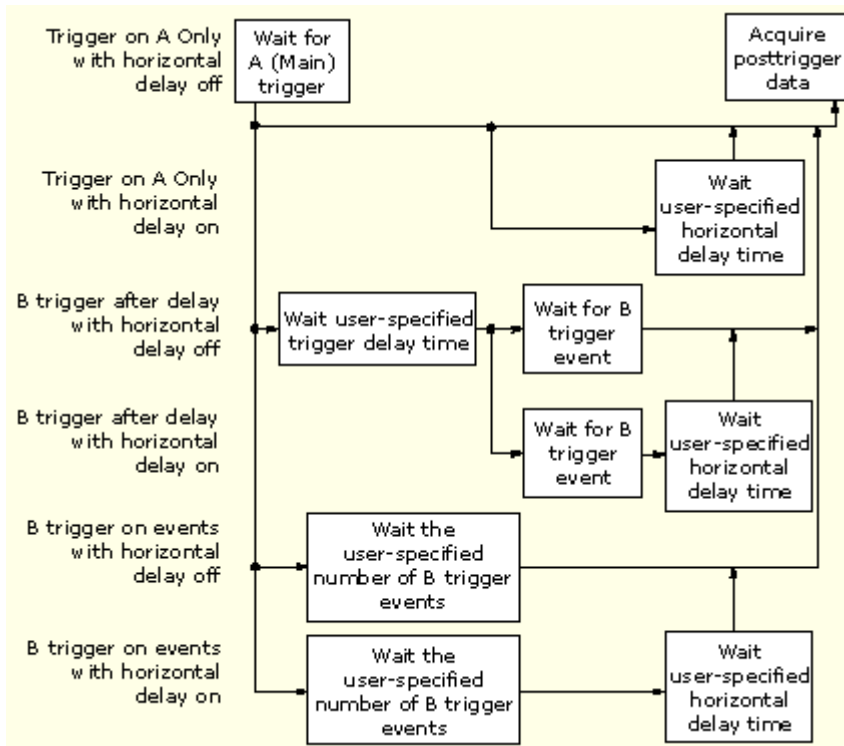


What do you want to do next?

- [Go to a step-by-step procedure for sequential triggering. \(see page 510\)](#)
- [Learn about advanced triggers. \(see page 568\)](#)

Display Overview

This instrument includes a flexible, customizable display that lets you control how waveforms appear. The next figure shows how the display features fit into the overall instrument operation.

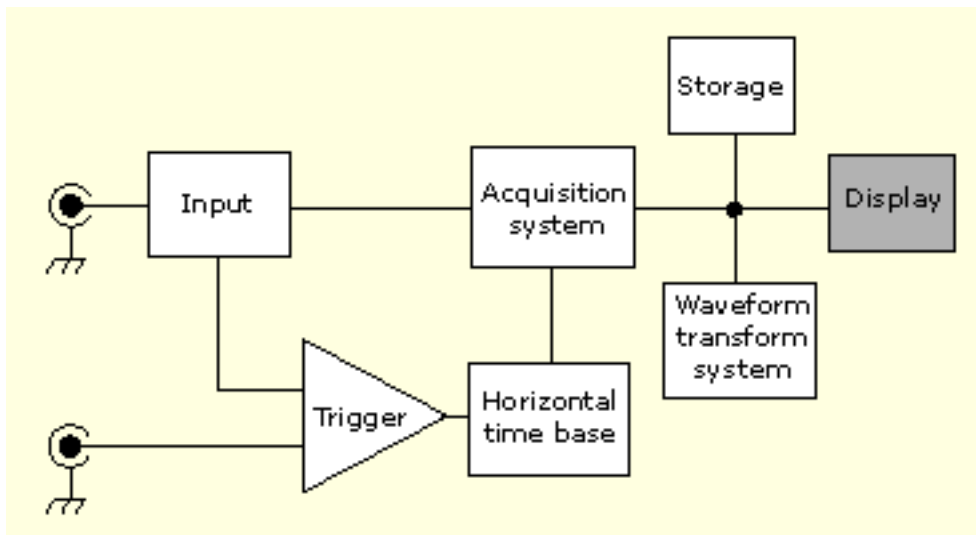


What do you want to do next?

- [Learn about display elements. \(see page 581\)](#)
- [Learn about customizable display elements. \(see page 583\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Display Elements


The waveform shown below is displayed as part of the user interface (UI) application. Some terms that are useful in discussing the UI follow.

1. **Menu Bar.** Access the controls for data I/O, printing, online help, and instrument functions here.
2. **Buttons/Menu.** Click to toggle between the toolbar and menu bar modes.
3. **Multipurpose Knob Readout.** Adjust and display the parameters controlled by the multipurpose knobs.
4. **Display.** Live, reference, and math waveforms are displayed here, along with cursors.
5. **Waveform Handle.** Click and drag to change the vertical position of a waveform.
6. **Controls Status.** Obtain a quick reference to the vertical selections, scale, and parameters.
7. **Readouts.** The cursor and measurement readouts are displayed in this area. Measurements are selectable from the menu bar or toolbar. If a control window is displayed, some combinations of readouts move to the graticule area.
8. **Status.** Displays the acquisition status, mode, and number of acquisitions; trigger status; date; time; and quick reference to horizontal parameters

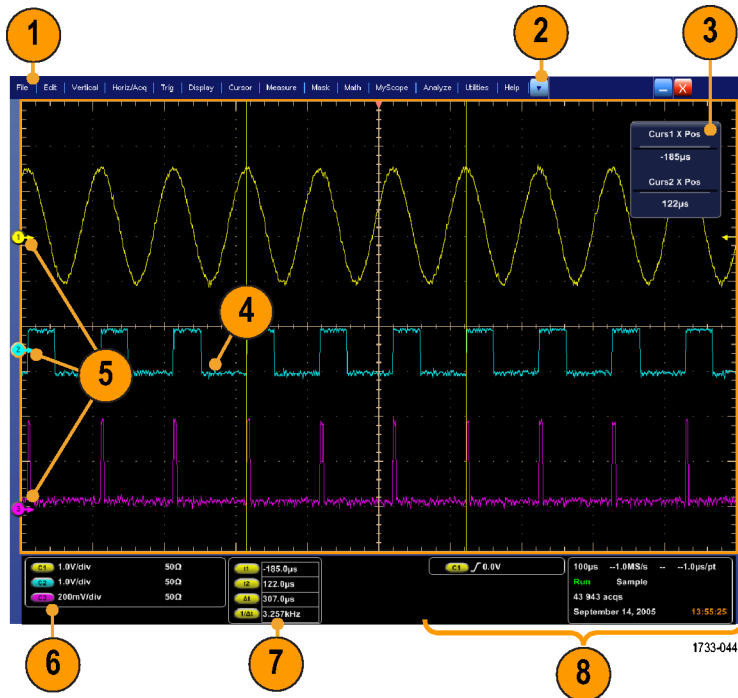

See the next figure for some ideas on how to manipulate the display elements.

1. Click to toggle between toolbar and menu bar modes and select toolbar extensions.
2. Drag cursors to measure waveforms on screen.
3. Drag the horizontal reference marker to reposition a waveform.
4. Click the waveform handle to assign the multipurpose knobs to waveform vertical position and scale.
5. Drag across the waveform area to create a box for zooming, enabling/disabling histograms, and gating measurements.
6. Drag the trigger level marker to change the trigger level.

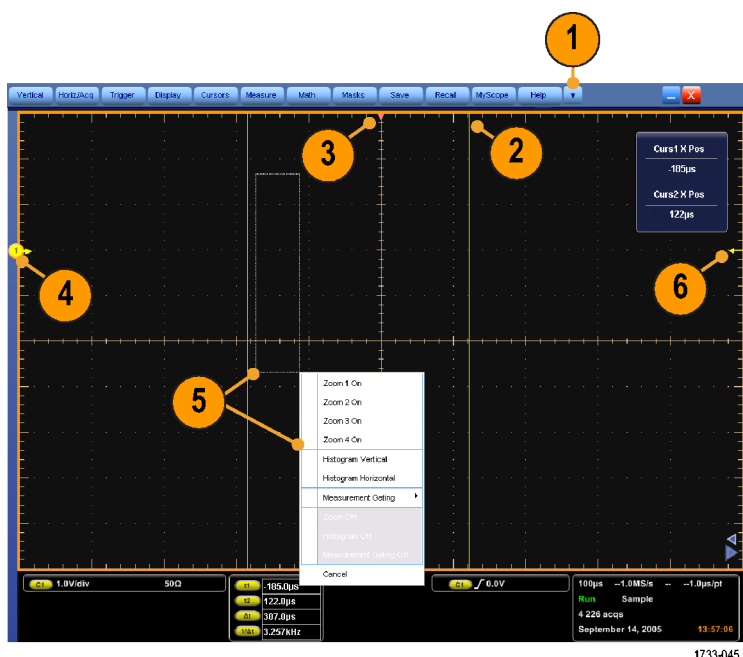

1733-045

What do you want to do next?

- [Learn about acquisition preview. \(see page 586\)](#)
- [Learn about customizable display elements. \(see page 583\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Customizable Display Elements

The following lists contains information on customizable display elements and their points of access.

Color Palette (Graticule and Waveform):

Access these elements through the Display menu Colors command, Display menu Display Palette submenu, or Display Setup control window Colors tab (Disp toolbar button):

- **Normal.** Displays hues and lightness levels for best overall viewing. The color of each channel waveform matches the color of the corresponding front-panel vertical SCALE knob.
- **On the Spectral Grading) palette.** Areas of the waveform with the highest sample density appear in blue shades and the areas of lowest sample density appear in red shades.
- **On the Temp (Temperature Grading) palette.** Areas of the waveform with the highest sample density appear in warmer colors (red shades) and the areas of lowest sample density appear in cooler colors (blue shades).

- **Gray (Monochrome Gray).** Displays waveforms in shades of gray. Areas of the waveform with the highest sample density appear in lighter gray shades and the areas of lowest sample density appear in darker gray shades.
- **Green (Monochrome Green).** Displays waveforms in shades of green. Areas of the waveform with the highest sample density appear in lighter green shades and the areas of lowest sample density appear in darker green shades.

Date and Time:

Access these elements through the Display menu Objects command, Display menu Display Date & Time command, or Display Setup control window Objects tab Disp toolbar button):

- **Toggle.** Alternates the display of the date and time on the graticule. To set the time and date, use the Utilities menu Set Time & Date command.

Display Format:

Access these elements through the Display Appearance or Display Format commands, the Display toolbar button, or the Display Setup Control Window Appearance tab:

- **XY or YT Formatting.** For additional information, see [Display Format \(see page 146\)](#).

Display Persistence:

Access these elements through the Display menu Display Persistence submenu commands or Display Setup control window Appearance tab (Disp toolbar button):

- **Infinite persistence.** Continuously accumulates record points on the waveform until you change one of the acquisition display settings. Use for displaying points that may occur outside the normal acquisition envelope.
- **Variable persistence.** Accumulates record points on the waveform for a specified time interval. Each record point decays independently according to the time interval.
- **Off.** Shows waveform record points for the current acquisition only. Each new waveform record replaces the previously acquired record for a channel.

Display Style:

Access these elements through the Display menu Display Style submenu commands or Display Setup control window Appearance tab (Disp toolbar button):

- **Vectors.** Displays waveforms with lines drawn between record points.
- **Dots.** Displays waveform record points as dots on the screen.
- **Inten Samp (Intensified Samples).** Shows the actual samples on interpolated waveforms.

Graticule Style:

Access these elements through the Display menu Graticule Style command or Display Setup control window Objects tab Disp toolbar button):

- **Full.** Provides a grid, cross hairs, and frame on the instrument display. Use for quick estimates of waveform parameters.

- **Grid.** Shows a frame and grid on the instrument display. Use for full-screen measurements with cursors and automatic readouts when cross hairs are not needed.
- **Cross Hair.** Shows cross hairs and a frame on the instrument display. Use for making quick estimates of waveforms while leaving more room on the display for automatic readouts and other data.
- **Frame.** Shows only a frame on the instrument display. Use with automatic readouts and other screen text when other display features are not needed.
- **IRE.** Use for NTSC video signals.
- **mV.** Use for video signals other than NTSC.

Math Colors:

Access these elements through the Display menu Colors command or Display Setup control window Colors tab Disp toolbar button):

- **Default.** Uses the default system color (red) for math waveforms.
- **Inherit.** Uses the same color for the math waveform as the waveform the math function is based on.

Reference Colors:

Access these elements through the Display menu Colors command or Display Setup control window Colors tab (Disp toolbar button):

- **Default.** Uses the default system color (white) for reference waveforms.
- **Inherit.** Uses the same color for the reference waveform as the original waveform.

Screen Text:

Access these elements through the Display menu Screen Text command or Display Setup control window Screen Text tab (Disp toolbar button):

- **Up to eight (8) lines of text.** Provides notes for screen shots, printouts, or for other instrument users.
- **Display.** Turns the text display on and off.
- **Properties.** Opens the Text Properties control window for positioning of the text on the display.
- **Clear.** Erases the entire text of the selected line.

Trigger Level Marker:

Access these elements through the Display menu Objects command or Display Setup control window Objects tab (Disp toolbar button):

- **Short.** Displays a short arrow on the side of the graticule by the active waveform.
- **Long.** Displays a horizontal line through the active waveform.

Waveform Interpolation:

Access these elements through the Display menu Waveform Interpolation submenu or Display Setup control window Appearance tab (Disp toolbar button):

- **Sin(x)/x.** Provides Sin(x)/x interpolation of the waveform.

- **Linear.** Provides linear interpolation of the waveform.

What do you want to do next?

- [Learn about waveform display and the time base. \(see page 588\)](#)
- [Learn about using the MultiView Zoom feature. \(see page 590\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Acquisition Preview

The acquisition preview attempts to show what the next acquisition will look like when the acquisition is delayed due to slow triggers or long acquisition duration, or when the acquisitions have stopped. Acquisition preview recalculates math waveforms, but does not represent changes in trigger levels, trigger modes, or different acquisition modes.

Acquisition preview has some limitations. For example, if the horizontal scale is changed to a setting that is significantly faster or slower, the waveform display is cleared.

NOTE. *There is no acquisition preview in Fast Acquisitions mode.*

What do you want to do next?

- [Learn more about waveform display. \(see page 586\)](#)
- [Learn about waveform display and time base. \(see page 588\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Waveform Display

The instrument uses the following methods to display waveforms:

- Defines the waveform (math and reference waveforms only).
- Enables the waveform display.

The following table summarizes this process as it applies to the different types of waveforms.

Waveform	To define	To display
Channel: Ch <1-4>	Channels are predefined	Push the Vertical CH n button to toggle the channel display on or off.
Logic: D <15-0>	Channels are predefined	From the Digital Setup control window, click the D15-D8 or D7-D0 tab, and then click the button of the desired digital channel to toggle the waveform display on and off.
Math: Math <1-4>	Create a math waveform using existing sources (channel, math, and reference waveforms; measurements).	From the Math Setup control window, click Display on the Math n tab to toggle the math waveform display on and off.
Reference: Ref <1-4>	Define an active reference waveform by: <ul style="list-style-type: none"> ■ Saving a channel, reference, or math waveform to one of locations Ref1 – Ref4. ■ Recalling a waveform previously saved to a file into one of locations Ref1 – Ref4. Perform these operations from the File menu.	From the Reference Setup control window, click Display on the Ref n tab to toggle the reference waveform display on and off.

In general, the method of adjusting (vertically scaling, offsetting, positioning, and so on) the waveform display is from the front-panel vertical Scale and Position knobs. Note that math and reference waveforms are scaled and positioned from their setup control windows.

For channel waveforms, the vertical and horizontal controls that you set also adjust the instrument acquisition parameters. See the following for more information:

- [Vertical Acquisition Window Considerations. \(see page 547\)](#)
- [Horizontal Acquisition Window Considerations. \(see page 550\)](#)

To change the size of the acquisition waveform and zoomed waveform windows, select the Graticule Size in the Zoom Setup control window. The 50-50 selection allocates half of the available display for the zoomed graticule and half of the available display for the acquisition window. The 80-20 selection allocates 80% of the available display for the zoomed graticule and 20% for the acquisition window. Select Full to use the entire display for the zoomed graticule.

The display elements are the same for each graticule.

What do you want to do next?

- [Learn about customizable display elements. \(see page 583\)](#)
- [Learn about using the MultiView Zoom feature. \(see page 590\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Operations on the Time Base

In general, to adjust the time base, use the front-panel horizontal Scale, Resolution, and Positions knobs. Only channel waveforms can be set directly.

Here are some key points to remember about how horizontal operations relate to the waveform types:


- Reference waveforms are shown with the horizontal settings in effect at the time that they are saved. You cannot adjust these settings. See [Saving and Recalling Waveforms \(see page 630\)](#) more information on reference waveforms.
- Math waveforms are shown with the horizontal settings derived from the math expression that creates them. You cannot change these directly. See [Creating \(see page 594\)](#) or [Using Math Waveforms \(see page 475\)](#) for more information on math waveforms.
- All waveforms are displayed within the horizontal divisions that the graticule provides. However, some waveforms may actually be wider or narrower than the display due to acquisition rate/time scale combinations and acquisition preview.

What do you want to do next?

- [Learn about the horizontal reference point. \(see page 589\)](#)
- [Learn about using the MultiView Zoom feature. \(see page 590\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Horizontal Position and the Horizontal Reference Point

The time value you set for horizontal position is measured from the trigger point to the horizontal reference point. This is not the same as the time value from the trigger point to the start of the waveform record, unless you set the horizontal reference to 0%. See the next figure.

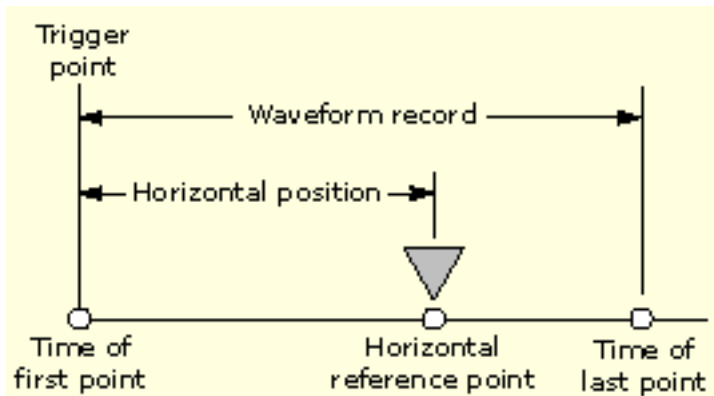

What do you want to do next?

- [Learn about interpolation. \(see page 558\)](#)
- [Learn about using the MultiView Zoom feature. \(see page 590\)](#)
- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)

Using the MultiZoom Feature

Use the instrument MultiZoom feature to magnify an acquisition vertically, horizontally, or in both dimensions to let you see the fine detail in your signals without changing the acquisition parameters (sample rate, record length, and so on). For example, to temporarily expand the front corner of a pulse to inspect its aberrations, push the front-panel MultiZoom button to expand it horizontally and vertically.

To help you use Multizoom effectively, consider how it operates on waveforms:

- When zooming vertically, the instrument expands up to four zoomed areas at one time. The zoomed areas can all be on the same waveform or they can be on different Channel, Math or Reference waveforms. Each zoomed area has its own vertical position and factor.
- When zooming horizontally, the Zoom Source is either the acquisition waveform or one of the zoomed areas.
- When zooming either horizontally or vertically, Zoom expands or contracts the waveform by the Zoom Factor.

What do you want to do next?

- [Go to a step-by-step procedure for displaying waveforms. \(see page 529\)](#)
- [Go to a step-by-step procedure for using MultiView Zoom. \(see page 531\)](#)

Automatic Measurements

All channel, reference, and math waveforms can serve as sources for automatic measurements. Some measurements, such as Delay and Phase, require two sources.

NOTE. *Automatic measurements are not available on digital channels.*

The following automatic measurement categories are available:

- [Amplitude \(see page 236\)](#)
- [Time \(see page 239\)](#)
- [More \(see page 247\)](#) (miscellaneous)
- [Histogram \(see page 255\)](#)
- [Communication \(see page 244\)](#)

Click the category for a list of the measurements that you can choose from in each category.


The instrument can take and update up to eight measurements at one time. You can apply measurements to any combination of sources. For example, you can take all eight measurements on Channel 1, or you

can take measurements on a combination of channel waveforms, math waveforms, reference waveforms, and/or histograms.

High/Low Method

The levels that the automatic measurement system derives as the High (top) or Low (bottom) for a waveform influence the fidelity of amplitude and aberration measurements. Select among the modes the instrument provides for determining these levels:

- Histogram mode sets the values statistically. It selects the most common value either above or below the midpoint (depending on whether it is defining the High or Low reference level). Since this statistical approach ignores short term aberrations (overshoot, ringing, and so on), Histogram is the best setting for examining pulses. See the next figure.
- Min-Max mode uses the highest and lowest values of the waveform record. This setting is best for examining waveforms that have no large, flat portions at a common value, such as sine waves and triangle waves (almost any waveform except for pulses). See the next figure.

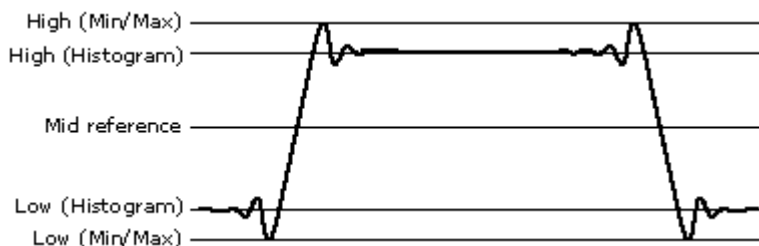


Reference Levels Method

A second set of levels affect the fidelity of time-related measurements. For example, the measurement system calculates rise time from the waveform edge that transitions from the Low to the High reference levels.

The instrument provides the following calculation methods (see the next figure):

- Relative Reference is calculated as a percentage of the High/Low range.
- Absolute Reference is set by absolute values in user units.

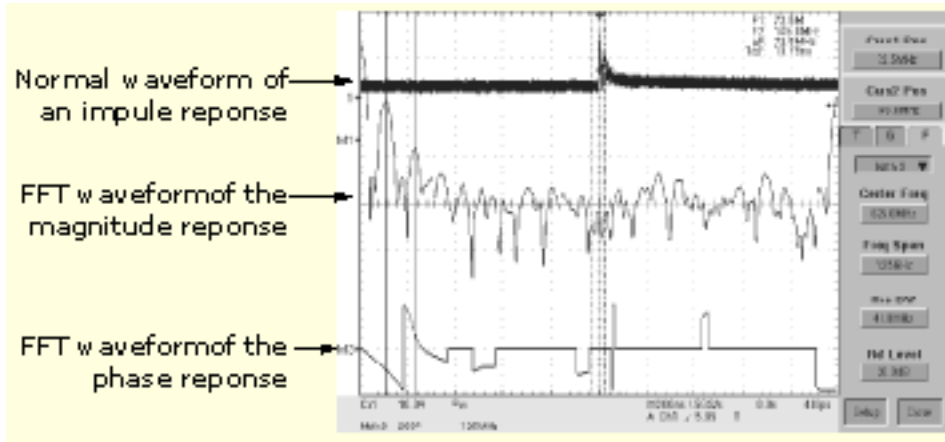




What do you want to do next?

- [Learn about cursor measurements. \(see page 76\)](#)
- [Go to a step-by-step procedure for taking automatic measurements. \(see page 471\)](#)

Cursor Types

Because cursor measurements give immediate feedback on the amplitude or time values they measure, they are usually quick to take and are more accurate than graticule measurements. Also, since you can position cursors wherever you want them on the waveform, they are easier to localize to a waveform segment or feature than automatic measurements.

The following table defines the cursor types.

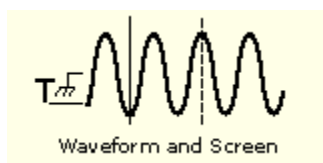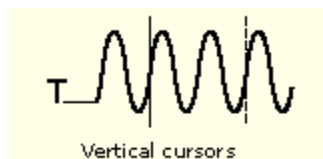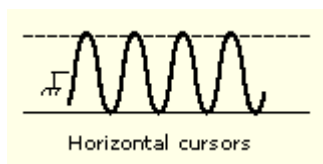Cursor function**Measurements**

Horizontal cursors measure vertical parameters (amplitude) in volts, watts, or IRE. The cursor readouts are defined as:

$V1 = \text{Level @ Cursor 1}$ with respect to its source ground level.

$V2 = \text{Level @ Cursor 2}$ with respect to its source ground level.

$\Delta V = \text{Level @ Cursor 2} - \text{Level @ Cursor 1}$.

Level is cursor displacement from the source ground multiplied by the source in volts/div. The two cursors may have different sources and therefore can have different volts/div settings.

Vertical cursors measure horizontal parameters. Typically the horizontal parameters are in time or frequency, but depend on the units you select. The cursor readouts are defined as:

$T1 = \text{Time @ Cursor 1}$ with respect to the trigger point

$T2 = \text{Time @ Cursor 2}$ with respect to the trigger point

$\Delta T = \text{Time @ Cursor 2} - \text{Time @ Cursor 1}$

Time is divisions of displacement of the cursor from its source trigger point multiplied by the source in time/div.

Waveform cursors measure vertical parameters (typically volts) and horizontal parameters (typically time or frequency) simultaneously. Each cursor is, in effect, both a vertical and horizontal cursor. These paired cursors cannot be moved off of the waveform. The two cursors can have a different source.

Use screen cursors to indicate an arbitrary X and Y position in the waveform display area represented by the intersection of a vertical and horizontal cursor line. Screen cursors measure both vertical parameters (typically volts) and horizontal parameters (typically time or frequency).

What do you want to do next?

- [Learn about histograms. \(see page 594\)](#)
- [Go to a step-by-step procedure for taking automatic measurements. \(see page 471\)](#)

Histograms

The instrument can display histograms constructed from the selected waveform data. You can display both vertical (voltage) and horizontal (time) histograms, but only one at a time. Use histogram measurements to get statistical measurement data for a section of a waveform along one axis.

The histogram source can be any channel, math, or reference waveform.

Turning on histograms starts histogram counting and data accumulation. A sample histogram display is shown below. Histogram data is continuously accumulated until you explicitly turn off histograms. This allows you to continue collecting histogram data even when you turn off the histogram display.

In addition to using limit controls to set histogram box boundaries, you can also use standard Windows drag-and-drop to resize and reposition the histogram box.

Histograms are not available in Zoom modes.

What do you want to do next?

- [Go to a step-by-step procedure for starting histogram counting. \(see page 529\)](#)
- [Go to a step-by-step procedure for taking automatic measurements. \(see page 471\)](#)


Creating Math Waveforms

You create math waveforms when you create a math expression. You do so by applying numerical constants, math operators and functions to operands. You can display and manipulate these derived math waveforms much like you can the channel and reference waveforms (see [Using Math Waveforms \(see page 475\)](#)).

NOTE. *Math calculations are not available on digital channels.*

Some examples of typical math waveforms follow:


To normalize this waveform:

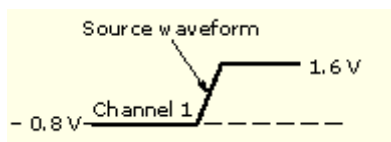


Enter this math expression:

$(\text{Ch1} - \text{Meas1}) / \text{Meas2}$, where Ch1 is the waveform shown above Meas1 = Low of Ch1 Meas2 = amplitude of Ch1

 And get this math waveform:

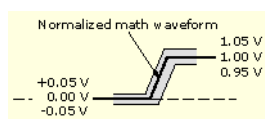


To simulate AC coupling on this waveform:

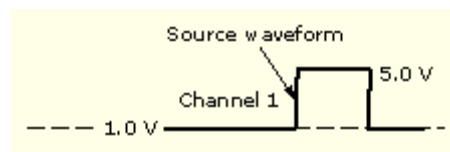

Enter this expression:

$\text{Intg}(\text{Ch1}-\text{Avg}(\text{Ch1}))$, where Ch1 is the waveform shown above Avg is the average function

And get this math waveform:

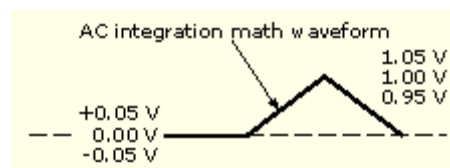

Offset, Position, and Scale

The settings that you make for offset, scale, and position affect the math waveform you obtain. Here are some tips for obtaining a good display:


- Scale and position the source waveform so that it is contained on the screen. (Off-screen waveforms may be clipped, resulting in errors in the derivative waveform.)
- Use vertical position and vertical offset to position your source waveform. The vertical position and offset will not affect your derivative waveform unless you position the source waveform off screen so that it is clipped.

What do you want to do next?


- [Learn about math waveform sources. \(see page 599\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)

Math Waveforms


Once you have acquired waveforms or taken measurements on waveforms, the instrument can mathematically combine them to create a waveform that supports your data-analysis task. For example, you might have a waveform clouded by background noise. You can obtain a cleaner waveform by subtracting the background noise from your original waveform. Or, you can integrate a single waveform into an integral math waveform as shown below.

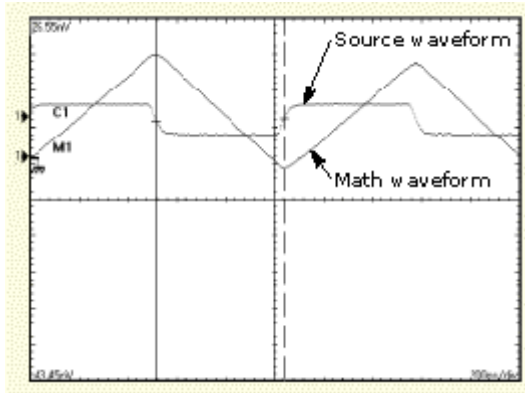

With spectral analysis you can analyze waveforms in the frequency domain. The interface is similar to a dedicated spectrum analyzer, so you do not need to know the details of the underlying algorithms. See the next figure.

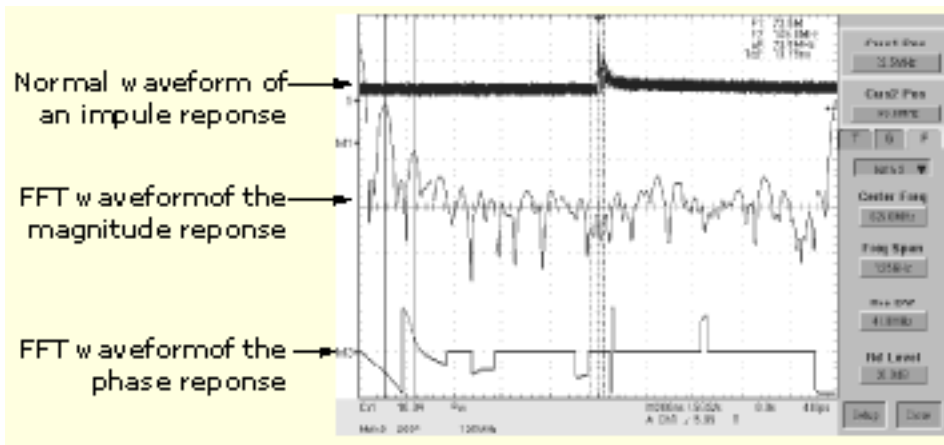

This instrument supports mathematical combination and functional transformations of waveforms it acquires. The next figure shows this concept:

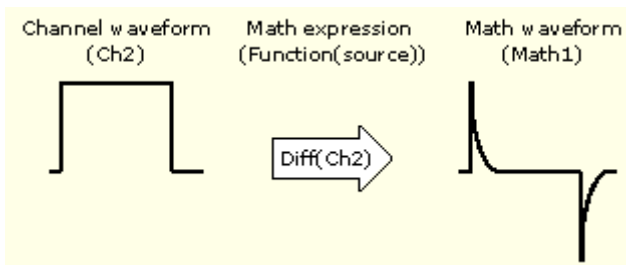

You create math waveforms to support the analysis of your channel and reference waveforms. By combining and transforming source waveforms and other data into math waveforms, you can derive the data view that your application requires. Create math waveforms that result from:

- Mathematical operations on one or several waveforms: add, subtract, multiply, and divide.
- Functional transformations of waveforms, such as integration, differentiation, and so on.
- Spectral analysis of waveforms, such as testing impulse response.

You can create up to four math waveforms.

Measurement scalars can be used in math expressions. For example, you can measure the average of a waveform (using the measurement capabilities of the instrument) and subtract it from the original waveform to define a new math waveform. Measurements 1 through 8 are allowed in a math definition, but not measurement functions, such as rise (Ch1).

This instrument supports the following operations for math waveforms:

- Vertical display scaling and positioning
- Taking automatic measurements
- Taking cursor measurements
- Using histograms
- User defined vertical units

In addition to the operations listed above, you can save math waveforms as reference waveforms.

You cannot use the following math waveforms for some operations:

- Circular Math-on-Math. You cannot use circular definitions of math waveforms. For example, if you define $\text{Math2} = \text{Ch1} - \text{Math1}$, and then define a second math waveform as $\text{Math3} = \text{Ch2} + \text{Math2}$, you cannot define a third math waveform as $\text{Math1} = \text{Math2} + \text{Ch3}$. If you do, the Math1 definition is rejected with an error because a circular definition is not allowed.
- Fast Acquisitions. Math is not allowed in Fast Acquisitions mode.
- Roll Mode. Math is not allowed in roll mode until you push STOP.
- Different Length Sources. If you use two waveforms (channel and reference waveforms) of different lengths, the length of the math waveform will be the shorter of the two lengths.

What do you want to do next?

- [Learn about creating math waveforms. \(see page 594\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Math Waveform Differentiation

The math capabilities of the instrument include waveform differentiation. This allows you to display a derivative math waveform that indicates the instantaneous rate of change of the waveform acquired.


Derivative waveforms are used in the measurement of slew rate of amplifiers and in educational applications. You can create a derivative math waveform and then use it as a source for another derivative waveform. The result is the second derivative of the waveform that was first differentiated.

The math waveform, derived from the sampled waveform, is computed based on the following equation:

$$Y_n = (X(n + 1) - X_n) / T$$

Where: **X** is the source waveform, **Y** is the derivative math waveform, and **T** is the time between samples.

Since the resultant math waveform is a derivative waveform (see the next figure), its vertical scale is in volts/second (its horizontal scale is in seconds). The source signal is differentiated over its entire record length; therefore, the math waveform record length equals that of the source waveform.

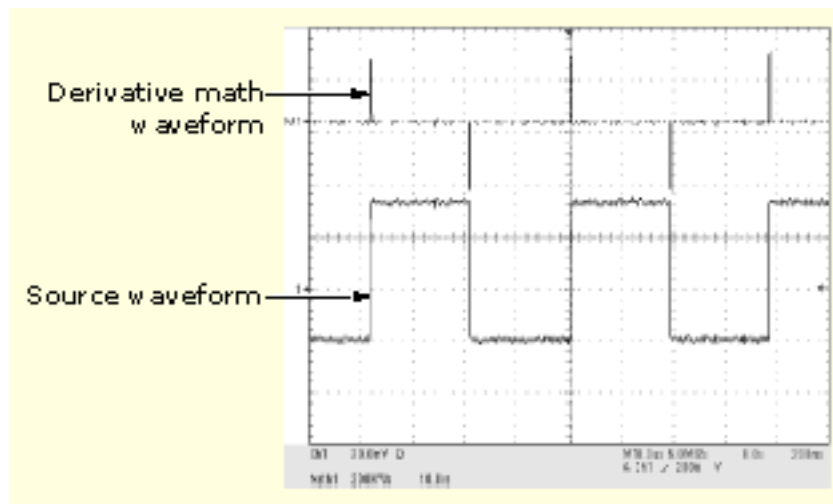

Cursor Measurements

You can also use cursors to measure derivative waveforms. Use the steps in [Taking Cursor Measurements \(see page 470\)](#). When using that procedure, note that the amplitude measurements on a derivative waveform will be in volts per second rather than in volt-seconds as is indicated for the integral waveform measured in the procedure.

NOTE. *Cursor measurements are not available on digital channels.*

What do you want to do next?

- [Learn more about cursor measurements. \(see page 76\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Math Waveform Sources

You can create Math waveforms from the following:

- Channel waveforms
- Reference waveforms
- Measurement scalars (automated measurements) that measure channel, reference, or math waveforms, or histograms.
- Other math waveforms
- Variables

Dependencies

In general, math waveforms that include sources as operands are affected by updates to those sources:

- Shifts in amplitude or DC level of input sources that cause the source to clip also clip the waveform data supplied to the math waveform.
- Changes to the vertical offset setting for a channel source that clip its data also clip the waveform data supplied to the math waveform.
- Changes to the acquisition mode globally affects all input channel sources, modifying any math waveforms using them. For example, with the acquisition mode set to Envelope, a Ch1 + Ch2 math waveform will receive enveloped channel 1 and channel 2 data, and will also be an envelope waveform.
- Clearing the data in a waveform source causes a baseline (ground) to be delivered to any math waveform that includes that source until the source receives new data.

What do you want to do next?

- [Learn about math waveform expression syntax. \(see page 600\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Math Waveform Expression Syntax

You can build math waveforms using the Predefined Expressions or Equation Editor control window. To help you create valid math waveforms, the following tools will block most illegal entries by disabling any window element that would create an invalid entry in the math waveform expression.

Predefined expressions are performed from the Math Setup control window by selecting an expression.

The following syntax describes the valid math expressions you can use with the Equation Editor:

<Mathwaveform> := <Expression>

<Expression> := <UnaryExpression> | <BinaryExpression>

<UnaryExpression> := <UnaryOperator> (<Term>) | <UnaryOperator> (<Expression>)

<BinaryExpression> := <Term> <BinaryOperator> <Term> | <Scalar>

<BinaryOperator> <Term> | <Term> <BinaryOperator> <Scalar>

<Term> := <Waveform> | (<Expression>)

<Scalar> := <Integer> | <Float> | <Meas-Result>

<waveform> := <Channelwaveform> | <ReferenceWaveform> | <MathWaveform>

<Channelwaveform> := Ch1 | Ch2 | Ch3 | Ch4

<ReferenceWaveform> := Ref1 | Ref2 | Ref3 | Ref4

<MathWaveform> := Math1 | Math2 | Math3 | Math4

<UnaryOperator> := Invert | Derivative | Integral | Average | Max | Min | Filter | Vmag | Exp | log 10 | log e | sqrt | Spectral Magnitude | Spectral Phase | Spectral Real | Spectral Imag

<BinaryOperator> := + | - | / | *

<Meas-Result> := meas1 | meas2 | meas3 | meas4 | meas5 | meas6 | meas7 | meas8

<Variable> = VAR1 | VAR2 | VAR3 | VAR4

What do you want to do next?

- [Learn about math waveform differentiation. \(see page 597\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Offset, Position, Scale, and Math Waveforms

The settings that you make for offset, scale, and position affect the math waveform you obtain. Here are some tips for obtaining a good display:

- Scale and position the source waveform so that it is contained on the screen. (Off-screen waveforms may be clipped, resulting in errors in the derivative waveform).
- Use vertical position and vertical offset to position your source waveform. The vertical position and offset will not affect your derivative waveform unless you position the source waveform off screen so that it is clipped.

What do you want to do next?

- [Learn about waveform integration. \(see page 601\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Waveform Integration

The math capabilities of the instrument include waveform integration. This allows you to display an integral math waveform that is an integrated version of the acquired waveform.

Use integral waveforms in the following applications:

- Measuring power and energy, such as in switching power supplies.
- Characterizing mechanical transducers, as when integrating the output of an accelerometer to obtain velocity.

The integral math waveform, derived from the sampled waveform, is computed based on the following equation:

$$y(n) = scale \sum_{i=1}^n \frac{x(i) + x(i-1)}{2} T$$

Where: $x(i)$ is the source waveform, $y(n)$ is a point in the integral math waveform, **scale** is the output scale factor, and **T** is the time between samples.

Since the resultant math waveform is an integral waveform, its vertical scale is in volt-seconds (its horizontal scale is in seconds). The source signal is integrated over its entire record length; therefore, the math waveform record length equals that of the source waveform.

Offset and Position

When creating integrated math waveforms from live channel waveforms, consider the following:

- You should scale and position the source waveform so that it is contained on screen. (Off screen waveforms may be clipped, which will result in errors in the integral waveform.)
- You can use vertical position and vertical offset to position your source waveform. The vertical position and vertical offset will not affect your integral waveform unless you position the source waveform off screen so that it is clipped.

DC Offset

The source waveforms that you connect to the instrument often have a DC offset component. The instrument integrates this offset along with the time-varying portions of your waveform. Even a few divisions of offset in the source waveform may be enough to ensure that the integral waveform saturates (clips), especially with long record lengths.

What do you want to do next?

- [Learn about spectral math waveforms. \(see page 602\)](#)
- [Go to a step-by-step procedure for creating math waveforms. \(see page 481\)](#)
- [Go to a step-by step procedure for using math waveforms. \(see page 475\)](#)

Defining Spectral Math Waveforms

The math capabilities of the instrument include waveform spectral analysis. This section describes how you can control the analysis intuitively with time domain and frequency domain controls. These controls merge the time domain controls with the frequency domain controls to provide a complete spectral analyzer.

Signals may be represented by their characteristics in both the time and the frequency domain. By combining and transforming source waveforms into spectral math waveforms, you can simultaneously view signal characteristics in both domains.

This spectral analyzer provides a complete set of controls and features that allow you to make time and frequency domain measurements without the need to learn extensive details about FFT algorithms.

- **Frequency Domain Controls.** Use traditional spectrum analyzer controls to set the center frequency, span, and resolution bandwidth directly.
- **Time Domain Controls.** The time domain controls for the acquired waveform set the time duration and the resolution (time between samples). You can easily set the required sample rate and record length.
- **Gating Controls.** These controls are the bridge that connects the time domain to the frequency domain. You can perform spectral analysis on a gated region of the input waveform. This gating also determines the resolution bandwidth.
- **Window Functions.** Eight different window functions are available to shape the filter response.

- **Magnitude Versus Frequency.** Displays log data in dB, dBm, or linear mode. You can display the real or imaginary parts of the spectral magnitude only. Reference level offset and reference level controls give complete control over the vertical position and offset of the spectrum.
- **Phase Versus Frequency.** Displays phase data as a function of frequency in radians or degrees. You may zero the noise phase for magnitudes below a threshold level. Finally, you may select Phase unwrap and dq/dw, group delay.
- **Spectral Averaging.** You can turn on averaging in the frequency domain for phase and magnitude waveforms.
- **Multiple Analyzer Control Locks.** Up to four spectral analyzers can be used simultaneously. They can all be assigned to different gates on the same source waveform or to different channel sources. The controls of Math1 and Math2 can be locked, and the controls of Math3 and Math4 can be locked. When controls are locked, turning a control on one analyzer changes the control on the other analyzer to the same value. Other combinations of locking, including all four analyzers, are available using GPIB commands.

The same exclusions for math waveforms apply to spectral math waveforms. In addition, sources for spectral math waveforms must be channel waveforms.

What do you want to do next?

- [Learn about using the spectral math controls. \(see page 603\)](#)
- [Go to a step-by-step procedure for creating a spectral math waveform. \(see page 492\)](#)

Using the Spectral Math Controls

The spectral analyzer contains five primary control categories. These are shown in the table below.

Click one of the links for more information on using each type of control.

Time controls (see page 604)	Gate controls (see page 606)	Frequency controls (see page 607)	Magnitude controls (see page 609)	Phase controls (see page 610)
Source	Position	Center	dB, dBm linear, real imaginary	degrees, radians, group delay
Duration, record length	Duration	Span	Ref level	Zero threshold
Duration, sample rate	Window	Resolution bandwidth	Ref level offset	Phase Unwrap
Resolution				

What do you want to do next?


- [Learn about using spectral analyzer windows. \(see page 615\)](#)
- [Learn how to recognize aliasing. \(see page 624\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using the Time Controls

The operation of the time domain controls for the spectral analyzer is summarized by the following rules:

- Duration selects the time from the beginning to the end of the acquired waveform. You may set duration using the record length control or the sample rate control.
- Resolution determines the time between samples. Duration is kept constant as resolution is changed. Therefore, the Resolution control affects both the sample rate and the record length simultaneously.
- Most often, you will want to use a short record length because long record lengths can slow instrument response. However, long record lengths lower the noise relative to the signal and increase the frequency resolution for the spectral math waveform. More importantly, they might be needed to capture the waveform feature that you want to include in the waveform.

Examples of how duration and resolution affect the acquired waveform are shown in the next figure.

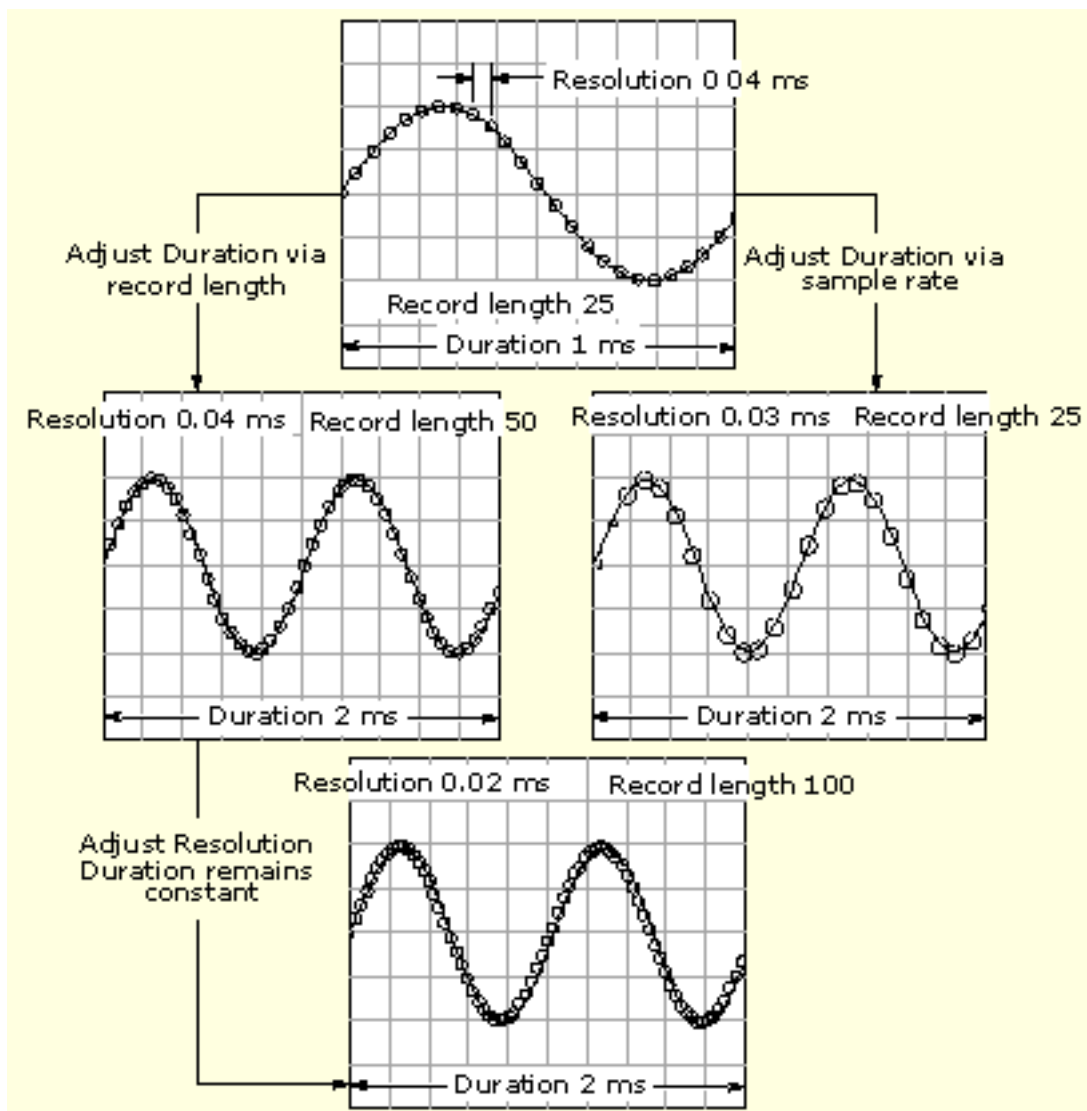


What do you want to do next?

- [Go to a list of all spectral math controls. \(see page 603\)](#)
- [Learn more about spectral math controls. \(see page 606\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using the Gating Controls

Gating determines which portion of the acquired waveform is transformed into the frequency domain. The gate has a position and a width control.

The gate position is the time in seconds from the trigger location to the center 50% position of the gate interval (see the next figure). The position and width units are seconds.

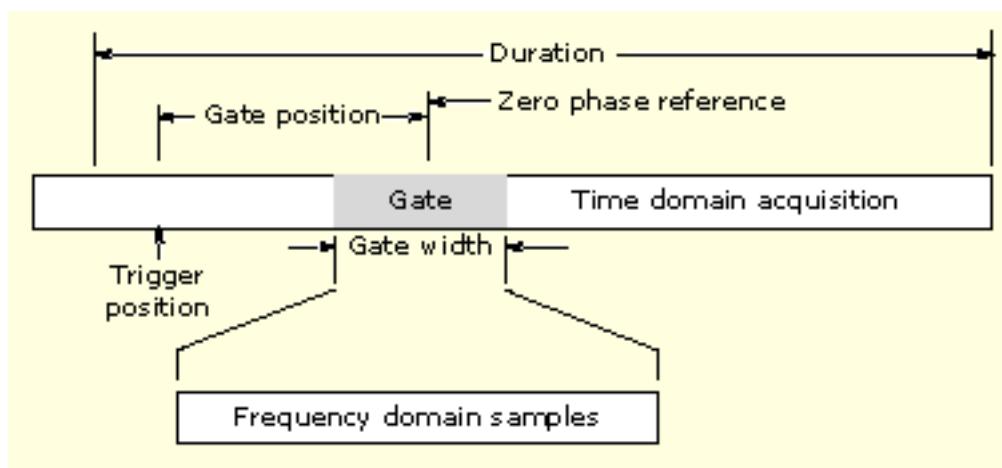

The gate must reside within the duration interval of the source waveform. If the source waveform duration is adjusted, and the gate position and width would result in the gate being outside of that duration, then the gate position or width is set within the limits.

The width of the gate affects the resolution bandwidth of the spectral analyzer. Gate width has units of seconds. The resolution bandwidth directly controls the gate width, but the numerical value is entered in units of hertz. Therefore, the time domain gate markers move as you adjust the resolution bandwidth control.

The data contained in the gated region is transformed into the frequency domain.

The gate is identified on the display using dashed markers (similar to cursors). The default gate width setting is equal to the duration of the source waveform.

What do you want to do next?

- [Go to a list of all spectral math controls. \(see page 603\)](#)
- [Learn more about spectral math controls. \(see page 607\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using the Frequency Domain Controls

The gated region of the source waveform is transformed into a spectral phase or magnitude waveform. The horizontal units are always hertz. The vertical units depend on whether phase or magnitude is selected. The frequency domain controls for the spectral waveform are span, center, and resolution bandwidth. The spectrum normally appears on the display fit to a screen width of 10 divisions.

Span

Span is the frequency at the end of the spectral waveform minus the frequency at the beginning of the waveform. The span control maximum value is equal to the current sample rate divided by two. Therefore, if you are unable to increase the span to the desired value and if you want to keep the same source waveform duration, go to the time base controls and increase the sample rate using the resolution control. Or, if you want to also decrease the source waveform duration, adjust the sample rate control. If you decrease the sample rate, the span setting may decrease, if necessary, to keep the span less than the sample rate divided by two.

Center


This is the frequency at the center of the spectral waveform. Center is equal to the start frequency plus one half of the span. The adjustment range depends on the sample rate and the current span setting. Remember that the span must always be in the interval of zero to one half of the sample rate. Therefore, if the span is set to full, the center frequency control will not have any adjustment range and will remain at one half of the sample rate. It is necessary to decrease the span before the center will have an adjustment range. If you are unable to increase the center to the desired value, increase the sample rate using either the sample rate or resolution controls. You may also change sample rate by using the HORIZONTAL SCALE knob on the instrument front panel.

Resolution Bandwidth (RBW)

This is the 3 dB down bandwidth of the spectral analyzer frequency response to a sine wave input. The resolution bandwidth is affected by two parameters:

- Different window functions produce different filter response shapes in the spectrum and result in different resolution bandwidths.
- The gate width of the input data affects the RBW because the RBW is inversely proportional to the gate width. So, adjusting the gate width changes the RBW. Gate width has units of seconds. The RBW directly controls the gate width, but the numerical value is entered in units of hertz. Therefore, the time domain gate markers move as you adjust the RBW control.

The next figure demonstrates the effects of adjusting the center frequency and span. Center frequency is a horizontal position control for the spectrum. Span is a horizontal scale control. Resolution bandwidth adjusts the bandwidth of the analyzer filters without affecting the span and center frequency.

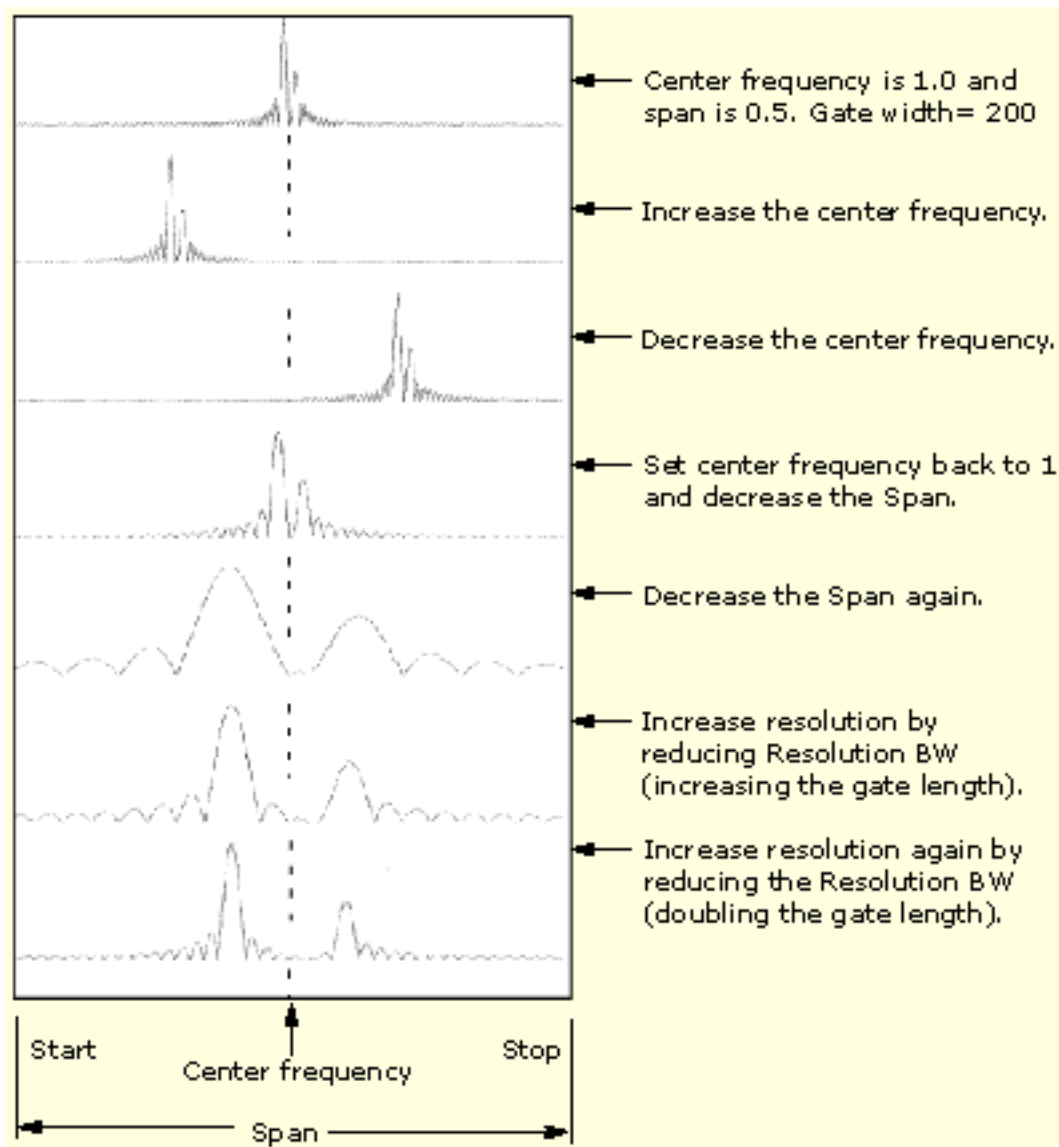

What do you want to do next?

- [Go to a list of all spectral math controls. \(see page 603\)](#)
- [Learn more about spectral math controls. \(see page 609\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using the Magnitude Controls

Vertical units can be either linear or log. You can select from the following choices by clicking the Math menu button. Then select the Spectral Analysis Setup command.

Mag Tab

Select the desired scale type, Linear, dB, or dBm:


- **Linear.** When the spectrum is linear magnitude the vertical units are the same as the source waveform. Usually this is volts. However, it may also be watts or amperes.
- **dB.** This sets the vertical scale of the magnitude spectrum to dB. Use the Reference Level Offset to set which vertical position in the magnitude spectrum will be zero dB. The following equation applies:

$$\text{dB} = 20 \log (|X| - \text{Ref})$$

Where **X** is a complex data point in the spectrum and **Ref** is the Reference Level Offset value.


- **dBm.** This selects dB as described in the above equation, but also sets the Reference Level Offset to a value that is equivalent to 1 mW of power into 50 ohms. Therefore, if the input units are volts, then the value is set to 223.6 mV. If the input units are amperes, then the value is set to 40 mA. If the input units are watts, then the value is set to 1 mW.

Reference Level

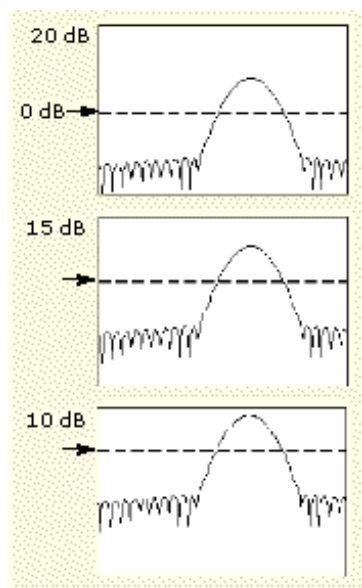

This sets the vertical position of the displayed spectrum. Its value is the magnitude at the top of the display screen. When this control is adjusted, the spectral waveform along with its zero reference marker move vertically on the screen as shown. This control does not change the spectral data.

Reference Level Offset

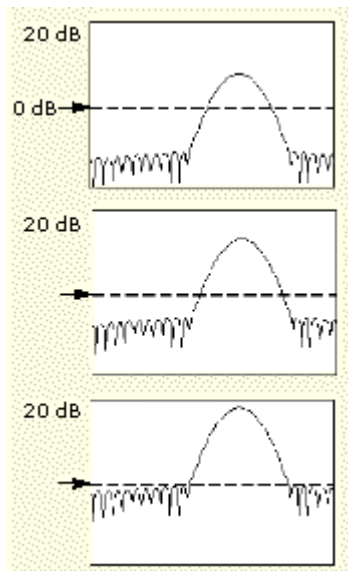

This changes the value of Ref in the equation for dB shown above. Unlike the Reference Level control, this control actually changes the output data values in the spectrum. Zero dB is shown on the display screen by the marker associated with the spectral waveform. Adjusting the Reference Level Offset causes the spectral waveform to move vertically with respect to the waveform reference marker as shown. This moves the waveform without changing the Reference Level control setting. Sometimes it is beneficial to adjust this control so that the peak of a fundamental is at zero dB. Then you can measure other harmonics in terms of how many dB they are away from the fundamental. Click the dBm button to preset this level to the equivalent of 1 mW into 50 ohms.

Real and Imaginary Magnitudes

You can display the linear magnitude of the real data or the imaginary data in the spectrum. This is useful if you process the spectrum off line and transform it back into a time domain trace. You can save the real and the imaginary spectrum into reference memory, and export the waveforms directly into Mathcad, MATLAB, or Excel documents to update in real time.

To turn on a real or imaginary spectrum, click the Math menu button, select Define/Edit Expression Editor, and select the Freq tab. Click either the Real or the Imag buttons and enter an expression. Click the appropriate channel button, and click Apply.

What do you want to do next?

- [Go to a list of all spectral math controls. \(see page 603\)](#)
- [Learn more about spectral math controls. \(see page 610\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using the Phase Controls

Using the Phase Controls

You can set the vertical units to Degrees, Radians, or Group Delay in seconds. To do this, click the Math toolbar button, click Spectral Analysis Setup, and select the Phase tab. Then select the desired scale type from Degrees, Radians, or Group Delay.

Phase Reference Position

Phase is a relative measurement that must have a time domain reference point. The phase value is specified with respect to this phase reference position.

For the spectral analyzer, the phase reference position is the 50% position of the gate, that is, the middle of the gate interval of the data that is input to the spectral analyzer. This is true for all window functions except for the Tek Exponential window. This window has a reference point at the 20% position of the gate.


Phase Unwrap

The spectral analyzer produces phase values from $-\pi$ to $+\pi$ radians or -180 to 180 degrees. However, when you perform impulse response testing and the phase is continuous, then phase values outside these ranges may occur. The spectral analyzer then wraps the data with discontinuities in the display from $+180$ to -180 degrees. Phase unwrap will display the correct result by unwrapping the phase.

Phase unwrap is only valid when the phase spectrum is a continuous function of frequency. Therefore, do not use it when analyzing the harmonic content of the typical repetitive signal.

Suppression Threshold

Random noise in the spectrum may have phase values over the entire range. This could make the phase display unusable. However, you can set the suppression threshold control to a level in dB. The phase of any complex spectral points with a magnitude below this threshold is set to zero. See the next figure for an example.

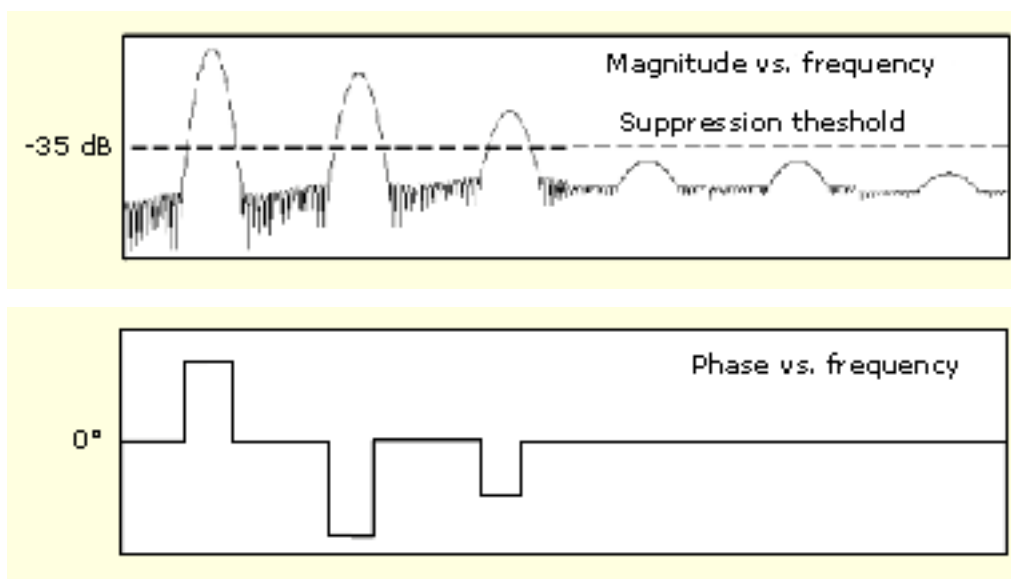

Group Delay

When the phase spectrum is a continuous function of frequency, group delay may be computed. This is true of impulse response testing where an impulse is fed into the system, and the spectrum of the response of the system output is computed.

Group delay measures how well a system passes a signal in terms of phase distortion. Group delay is the derivative of the phase with respect to frequency.

This feature is not useful for analysis of harmonic content of signals where the phase response is not continuous.

Impulse Response Testing

When performing impulse response testing of a system, place the impulse at the zero-phase reference position of the acquisition. This produces a correct phase display. Because the Tek Exponential window has its zero phase reference position at the 20% point, more of the impulse response is captured. All other window functions have their phase reference position at the 50% position in the gated region.


There are several ways to adjust the position of the zero phase reference point with respect to your input signal:

- Adjust the spectral analyzer gate position
- Perform fine adjustment using the front-panel trigger level control
- Adjust the front-panel horizontal Position control

Using Spectral Analyzer Windows

In the time domain, a window is a bell-shaped function equal in length to the gate duration.

For most windows, this function tapers to zero at both ends of the gate region. Before computation of the spectral transformation, the window is multiplied, sample by sample, times the input data in the gated region. The window function affects the shape of the spectral analyzer response in the frequency domain.

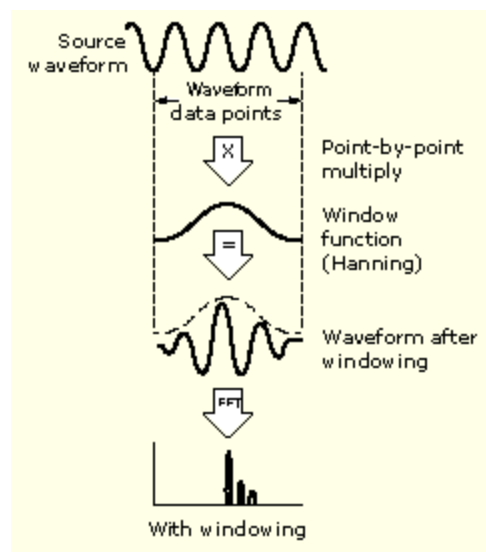

The window functions affect the ability to resolve frequency in the output spectrum and can affect the accuracy of the magnitude and phase measurements. The previous figure shows how the time domain record is processed.

Accurate magnitude measurements require that the input source waveform be stationary within the gated region. This means that waveform parameters, such as frequency and amplitude, should not change significantly as a function of time within the gate region that is input to the spectral analyzer. Also, the gate

width must be greater than or equal to the period of the start frequency of the span of the spectral analyzer. That is, there must be at least one cycle of the harmonic being measured within the gated region.

There are eight different spectral analyzer windows:

- [Rectangular \(see page 622\)](#)
- [Gaussian \(see page 619\)](#)
- [Hamming \(see page 620\)](#)
- [Blackman-Harris \(see page 620\)](#)
- [Hanning \(see page 620\)](#)
- [Flattop2 \(see page 618\)](#)
- [Kaiser-Bessel \(see page 620\)](#)
- [Tek Exponential \(see page 623\)](#)

Your choice of window function will depend on the input source characteristics that you want to observe and the characteristics of the window function. The window characteristics are shown in the following table.

Window	3 dB BW in bins	Scallop loss	Nearest side lobe	Zero phase reference	Coefficients
Rectangular	0.89	3.96 dB	-13 dB	50%	1.0
Hamming	1.3	1.78 dB	-43 dB	50%	0.543478, 0.456522
Hanning	1.44	1.42 dB	-32 dB	50%	0.5, 0.5
Kaiser-Bessel	1.72	1.02 dB	-69 dB	50%	0.40243, 0.49804, 0.09831, 0.00122
Blackman-Harris	1.92	0.81 dB	-92 dB	50%	0.35875, 0.48829, 0.14128, 0.01168
Gaussian	2.0	0.76 dB	-79 dB	50%	a = 3.75 (not cosine series)
Flattop2	3.8	0.0065 dB	-90 dB	50%	0.213348, -0.206985, 0.139512, -0.043084, 0.003745
Tek Exponential	1.42	0.60 dB	-67 dB	20%	not applicable

3 dB BW in Bins

This is the bandwidth in units of bins, which are the intervals between spectral output samples when no zero fill is used. The bandwidth is measured between the points on the lobe that are 3 dB down from the


peak of the lobe. The bandwidth in hertz may be computed by dividing the BW in bins by the gate duration in seconds. This is also referred to as resolution bandwidth (RBW).

Coherent gain

The gain factor normally associated with different window functions is correctly scaled into the magnitude spectrum output. Therefore, the magnitudes in the output spectrum do not change as different windows are selected.

Scallop Loss

This is the magnitude error of the spectral analyzer when the frequency of the observed signal is exactly half way between two frequency samples of the spectrum when the interpolation ratio due to zero fill of the FFT is one. When zero fill is in effect, scallop loss is essentially eliminated because of the interpolation in the frequency domain due to zero fill. If you work with span settings less than full and you work with larger resolution bandwidth settings, zero fill is in effect most of the time.

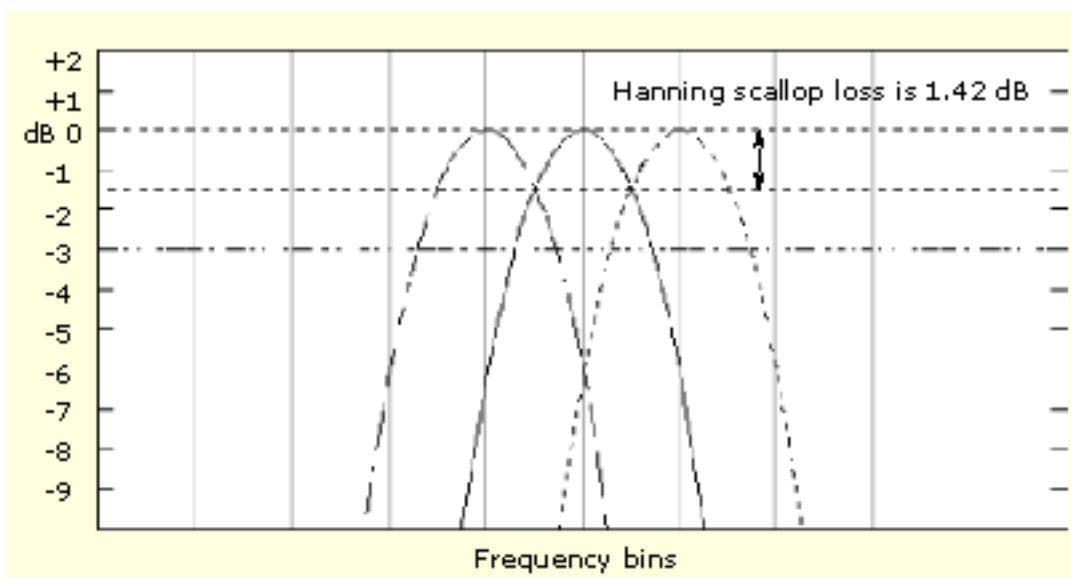

Nearest Side Lobe

This is the difference in magnitude between the spectral lobe peak in the spectrum and the next side lobe that occurs due to energy leakage. Different windows have different leakage characteristics. The more narrow the resolution bandwidth of the window the more leakage in the spectrum.

Zero Phase Reference

This is the position in the time domain gate that is the reference point for phase in the output spectrum. That is, if a sine wave input has its peak at the zero phase reference position, then it reads out as zero phase in the spectrum. If the phase is to be correct when doing impulse response testing, the impulse in the time domain must be located at this position in the gate interval.

Coefficients

These are used to generate the windows that are constructed from a cosine series. For the Gaussian window, the value of "a" is given instead of a set of coefficients. You can find descriptions of cosine series windows in the *Handbook of Digital Signal Processing Engineering Applications* by Elliot. ISBN 0-12-237075-9.


What do you want to do next?

- [Go to a list of all spectral math controls. \(see page 603\)](#)
- [Learn about using spectral analyzer windows. \(see page 615\)](#)
- [Go to a step-by-step procedure for defining a spectral math waveform. \(see page 492\)](#)

Using Spectral Analyzer Windows

In the time domain, a window is a bell-shaped function equal in length to the gate duration.

For most windows, this function tapers to zero at both ends of the gate region. Before computation of the spectral transformation, the window is multiplied, sample by sample, times the input data in the gated region. The window function affects the shape of the spectral analyzer response in the frequency domain.

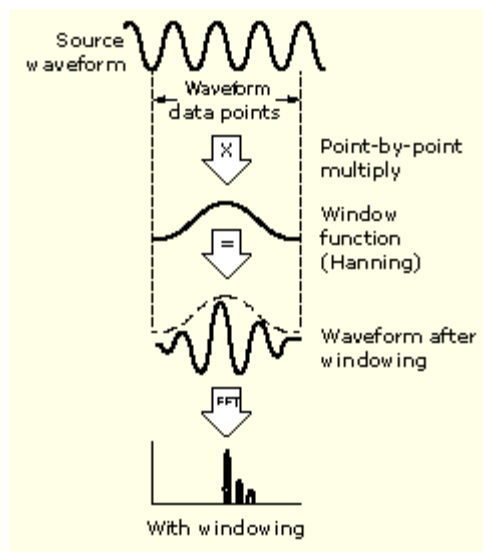

The window functions affect the ability to resolve frequency in the output spectrum and can affect the accuracy of the magnitude and phase measurements. The previous figure shows how the time domain record is processed.

Accurate magnitude measurements require that the input source waveform be stationary within the gated region. This means that waveform parameters, such as frequency and amplitude, should not change significantly as a function of time within the gate region that is input to the spectral analyzer. Also, the gate width must be greater than or equal to the period of the start frequency of the span of the spectral analyzer. That is, there must be at least one cycle of the harmonic being measured within the gated region.

There are eight different spectral analyzer windows:

- [Rectangular \(see page 622\)](#)
- [Gaussian \(see page 619\)](#)
- [Hamming \(see page 620\)](#)

- [Blackman-Harris \(see page 620\)](#)
- [Hanning \(see page 620\)](#)
- [Flattop2 \(see page 618\)](#)
- [Kaiser-Bessel \(see page 620\)](#)
- [Tek Exponential \(see page 623\)](#)

Your choice of window function will depend on the input source characteristics that you want to observe and the characteristics of the window function. The window characteristics are shown in the following table.

Window	3 dB BW in bins	Scallop loss	Nearest side lobe	Zero phase reference	Coefficients
Rectangular	0.89	3.96 dB	-13 dB	50%	1.0
Hamming	1.3	1.78 dB	-43 dB	50%	0.543478, 0.456522
Hanning	1.44	1.42 dB	-32 dB	50%	0.5, 0.5
Kaiser-Bessel	1.72	1.02 dB	-69 dB	50%	0.40243, 0.49804, 0.09831, 0.00122
Blackman-Harris	1.92	0.81 dB	-92 dB	50%	0.35875, 0.48829, 0.14128, 0.01168
Gaussian	2.0	0.76 dB	-79 dB	50%	a = 3.75 (not cosine series)
Flattop2	3.8	0.0065 dB	-90 dB	50%	0.213348, -0.206985, 0.139512, -0.043084, 0.003745
Tek Exponential	1.42	0.60 dB	-67 dB	20%	not applicable

3 dB BW in Bins


This is the bandwidth in units of bins, which are the intervals between spectral output samples when no zero fill is used. The bandwidth is measured between the points on the lobe that are 3 dB down from the peak of the lobe. The bandwidth in hertz may be computed by dividing the BW in bins by the gate duration in seconds. This is also referred to as resolution bandwidth (RBW).

Coherent gain

The gain factor normally associated with different window functions is correctly scaled into the magnitude spectrum output. Therefore, the magnitudes in the output spectrum do not change as different windows are selected.

Scallop Loss

This is the magnitude error of the spectral analyzer when the frequency of the observed signal is exactly half way between two frequency samples of the spectrum when the interpolation ratio due to zero fill of the FFT is one. When zero fill is in effect, scallop loss is essentially eliminated because of the interpolation in the frequency domain due to zero fill. If you work with span settings less than full and you work with larger resolution bandwidth settings, zero fill is in effect most of the time.

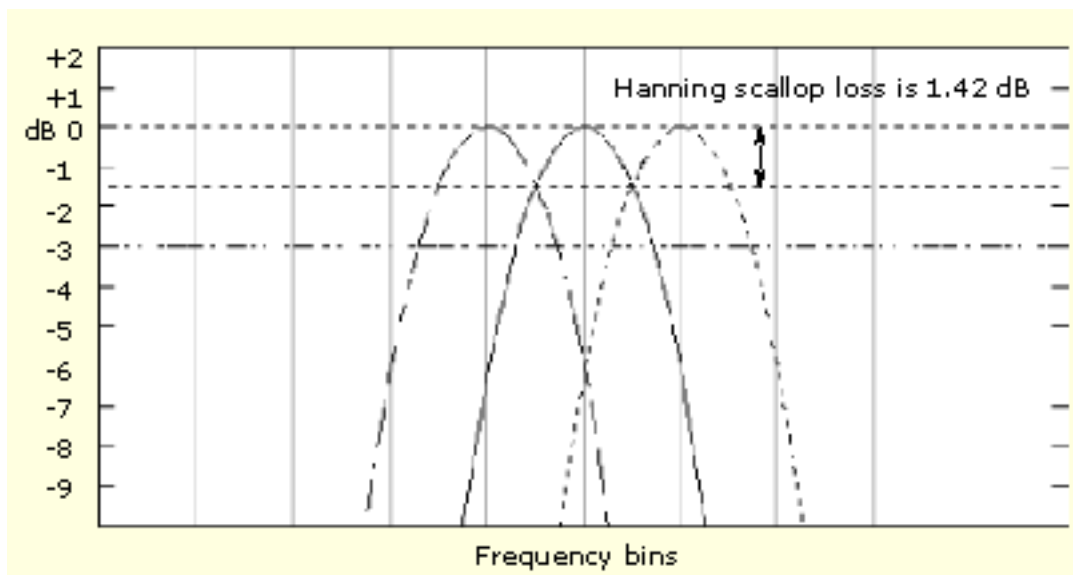

Nearest Side Lobe

This is the difference in magnitude between the spectral lobe peak in the spectrum and the next side lobe that occurs due to energy leakage. Different windows have different leakage characteristics. The more narrow the resolution bandwidth of the window the more leakage in the spectrum.

Zero Phase Reference

This is the position in the time domain gate that is the reference point for phase in the output spectrum. That is, if a sine wave input has its peak at the zero phase reference position, then it reads out as zero phase in the spectrum. If the phase is to be correct when doing impulse response testing, the impulse in the time domain must be located at this position in the gate interval.

Coefficients

These are used to generate the windows that are constructed from a cosine series. For the Gaussian window, the value of "a" is given instead of a set of coefficients. You can find descriptions of cosine series windows in the *Handbook of Digital Signal Processing Engineering Applications* by Elliot. ISBN 0-12-237075-9.




What do you want to do next?

- [Learn about recognizing aliasing. \(see page 624\)](#)

FlatTop2 Window

This window has the lowest scallop loss of any of the windows. It also has a wider resolution bandwidth but lower side lobe attenuation. Also, it is unique because the time domain shape has negative values.

NOTE. *The FlatTop2 window is useful for high accuracy magnitude measurements for signals that do not require very narrow bandwidth.*

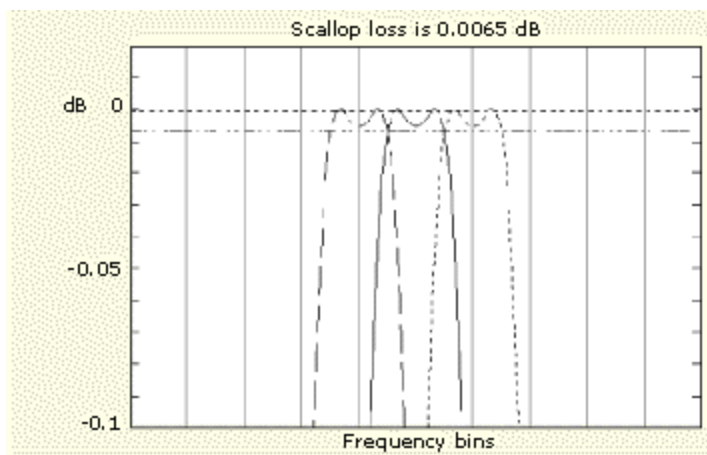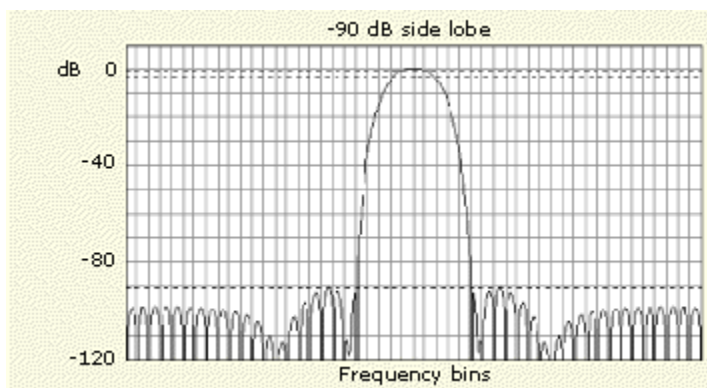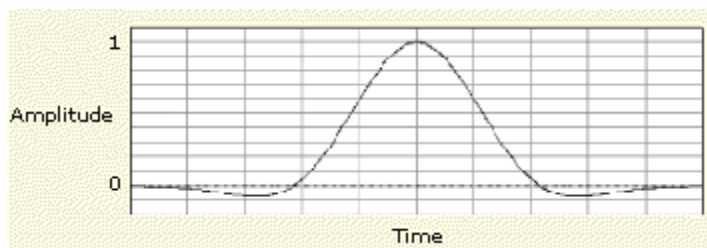



What do you want to do next?

- [Learn about using spectral analyzer windows. \(see page 615\)](#)

Gaussian Window

This is the default window function (see the next figure). It is unique in that the time-domain shape of an exponential Gaussian function transforms into a Gaussian exponential shape in the frequency domain.

NOTE. *This window provides optimal localization in both the time and the frequency domain*

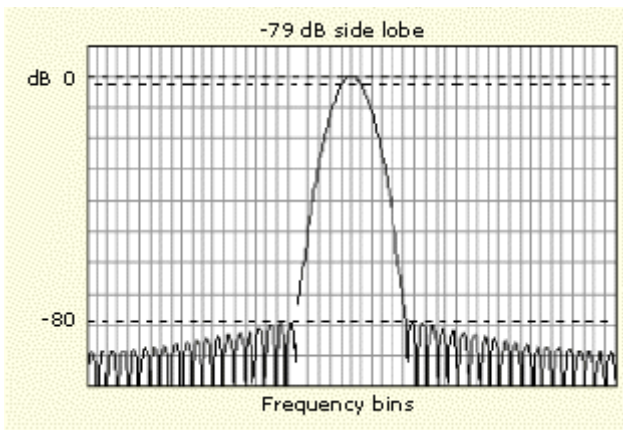
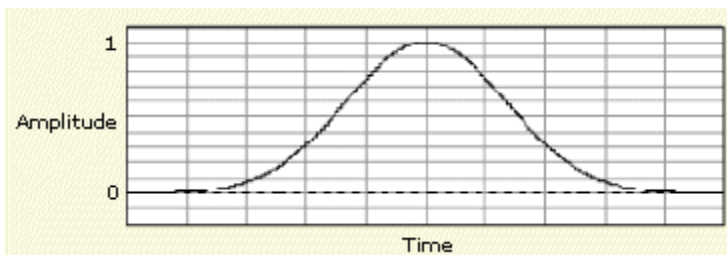


What do you want to do next?

- [Learn about using spectral analyzer windows. \(see page 615\)](#)

Hamming Window

This window is unique in that the time domain shape does not taper all the way to zero at the ends. This makes it a good choice if you wanted to process the real and imaginary parts of the spectrum off line and inverse transform it back to the time domain. Because the data does not taper to zero, you could remove the effect of the window function from the result.

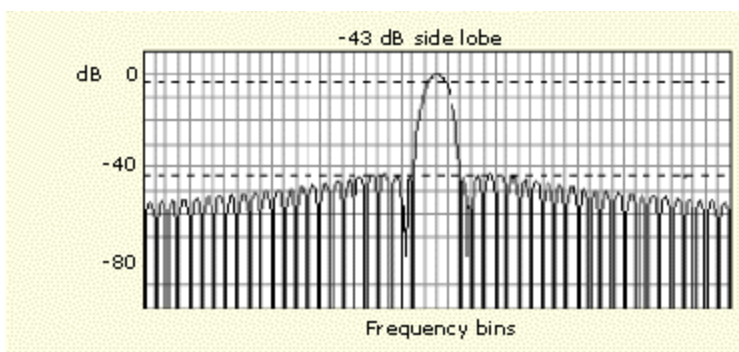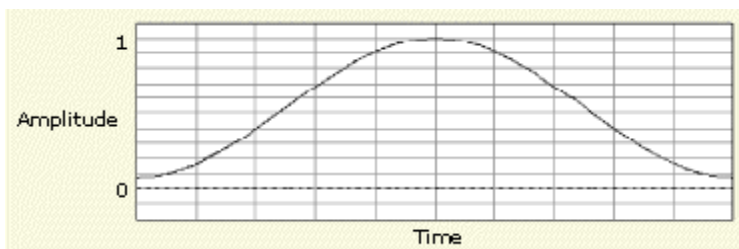

What do you want to do next?



- [Learn about using spectral analyzer windows. \(see page 615\)](#)

Hanning, Kaiser-Bessel, and Blackman-Harris Windows



These windows have various resolution bandwidths and scallop losses (see the figures below). Choose the one that best allows you to view the signal characteristics you are interested in.

NOTE. *The Blackman-Harris window has a low amount of energy leakage compared to the other windows. The Hanning window has the narrowest resolution bandwidth, but higher side lobes.*



Hanning Window

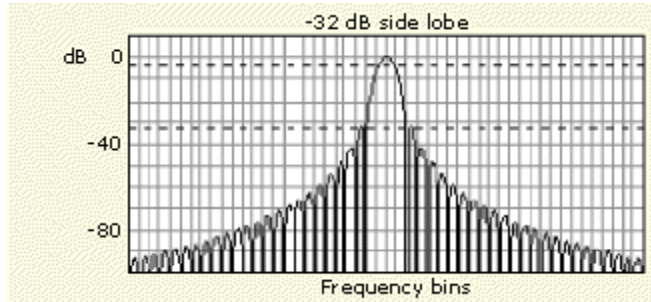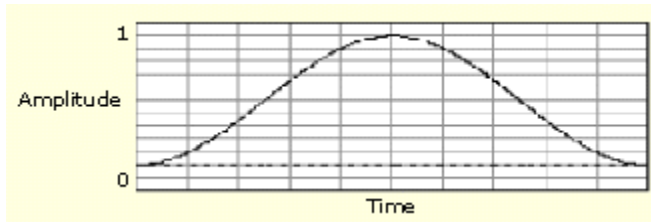

Kaiser-Bessel Window

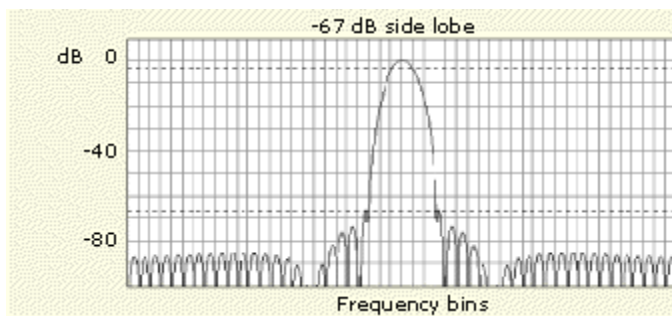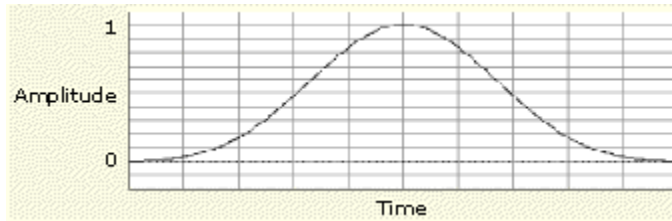

Blackman-Harris Window

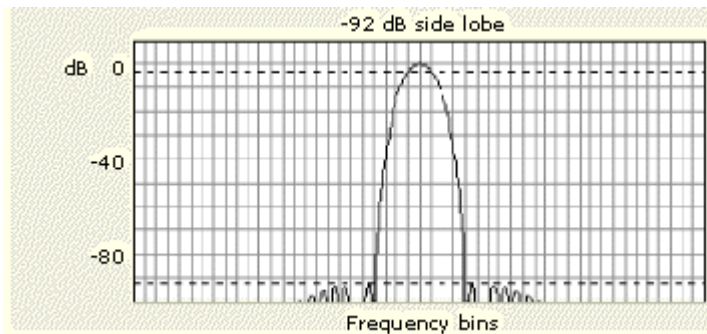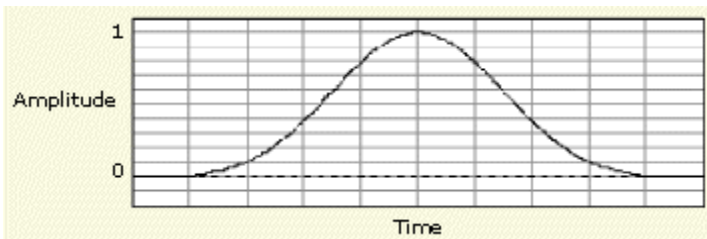


What do you want to do next?


- [Learn about using spectral analyzer windows. \(see page 615\)](#)

Rectangular Window

This window is equal to unity (see the next figure). This means the data samples in the gate are not modified before input to the spectral analyzer.

NOTE. This window has the narrowest resolution bandwidth of any of the windows, but it also has the most spectral leakage and the highest side lobes.

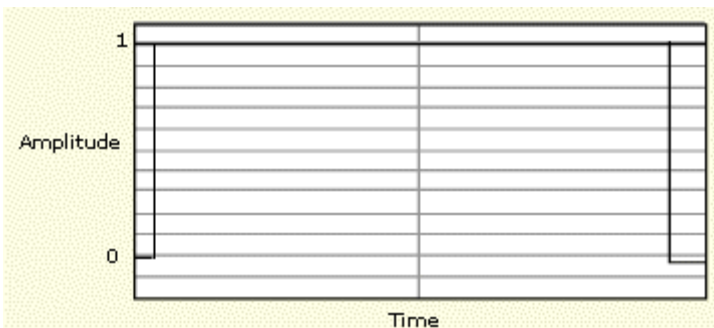

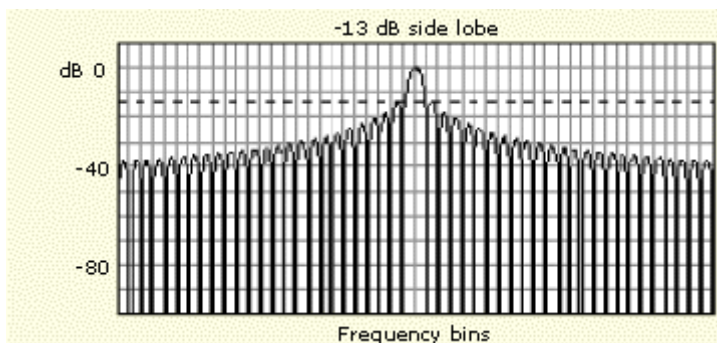

What do you want to do next?


- [Learn about using spectral analyzer windows. \(see page 615\)](#)


Tek-Exponential Window

In the time domain, it is not a symmetrical bell shape as is the case with the other windows. Instead, it is exponential with a peak at the 20% position of the time domain gate. The frequency domain shape is triangular.

NOTE. Use this window for impulse-response testing where the 20% position is the zero phase reference point. More of the acquired data record length is used to capture the impulse response.

Exact details of how to compute its values were published in the article; *Impulse-Response Testing Lets a Single Test Do the Work of Thousands*, by John Pickerd, EDN magazine, April 27, 1995.

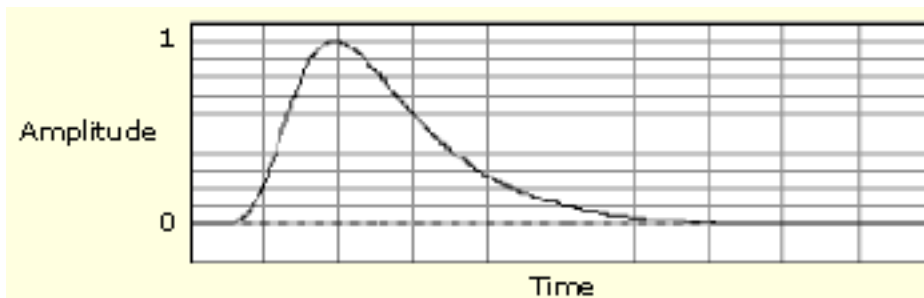

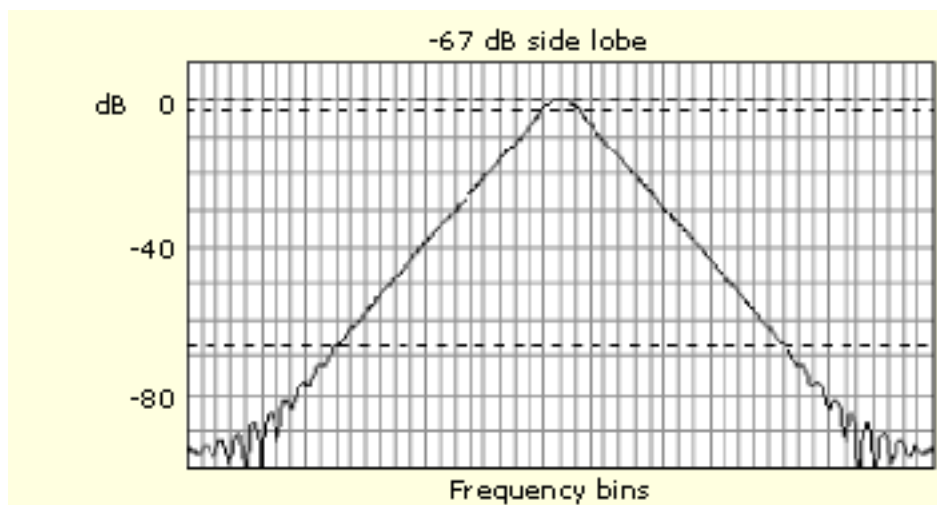

What do you want to do next?

- [Learn about using spectral analyzer windows. \(see page 615\)](#)


Recognizing Aliasing

Aliasing occurs when the input frequency of a signal is greater than one half of the sampling frequency (the sample rate).

Set the sample rate high enough so that the signals in the spectrum appear at their correct frequency as opposed to a lower aliased frequency value. Also, complex signal shapes that have many harmonics in them, such as a triangle or square wave, can appear to be OK in the time domain when in fact many of the harmonics in that signal are aliased.

One way to check for aliasing is to increase the sample rate and observe whether any of the harmonics unwrap to different frequency locations.

Another way to recognize aliasing is to realize that higher order harmonics usually have decreasing magnitudes compared to lower order harmonics. Thus, if you see a series of increasing harmonic magnitude values as frequency increases then you can suspect that they may be aliased. In the spectral math waveform, the actual higher frequency components are under sampled, and therefore they appear as lower frequency aliases that "fold back" around the Nyquist point. (See the next figure.) You may test by increasing the sample rate and observing if aliases unwrap to different frequency positions.

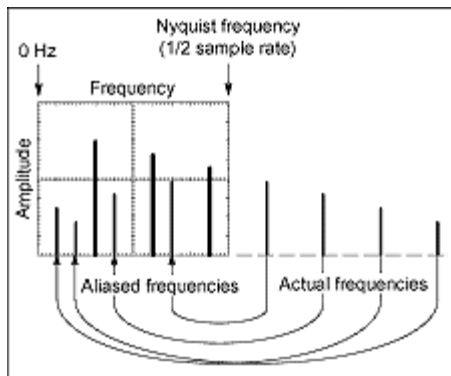

If you have a variable-frequency signal source, another way to observe aliasing is to adjust the frequency slowly while watching the spectral display. If some of the harmonics are aliased, you will see the harmonics decreasing in frequency when they should be increasing or vice versa.

Once you have displayed a spectral math waveform, use cursors to measure its frequency amplitude or phase angle. See [Setting Cursor Sources \(see page 469\)](#) for detailed steps.

You can use automated measurements to measure spectral math waveforms. See [Taking Automatic Measurements \(see page 471\)](#) for step-by-step instructions.

What do you want to do next?

- [Learn about horizontal setup. \(see page 155\)](#)

Mask Key Points

There are a number of mask test key points to be aware of prior to using, editing, or creating a mask.

Mask Testing

Only one mask standard is active at any one time. If you have one mask selected or enabled and then select a new mask, the new mask replaces the previous mask. You cannot test to multiple standards simultaneously.

Autofit and Persistence Interaction

The Autofit function moves the waveform vertically and horizontally in a mask to reduce the number of segment hits within a mask. If persistence is set to infinite or variable, each Autofit waveform movement clears existing persistence data. If Autofit makes frequent waveform movements, there may be little or no displayed waveform persistence data.

Segments and Mask Hits

Each mask can have a maximum of 16 segments. Segments can overlap. The number of mask hits is the sum of all hits in all segments, regardless of whether or not segments overlap. For example, if a waveform crosses over an area where two segments overlap, both segments will count the waveform hit.

Vertices

Each segment can have a maximum of 50 vertices. Vertices are numbered counterclockwise, with vertex one generally located at the bottom left of each segment. The active (selected) vertex is indicated by an X. The instrument automatically assigns numbers to vertices during mask creation or editing.

Mask Margin Tolerance

Mask margin tolerance moves the mask segment boundaries by the specified percentage. Negative margins reduce the size of the segment, making it easier to pass a mask test. Positive numbers make it harder to pass and allow you to perform margin testing on your design. If a user defined mask has more than three segments, turning on mask margins generates an error message. Turning mask margin tolerance off redraws the mask segment margins to their default values, but leaves the numeric value as it is, allowing you to quickly toggle between default and user-set margin values.

Standards and Bandwidth

When the instrument system bandwidth (which includes the instrument, attached probes, and/or cabling) falls into the range of 1.5 to 1.8 (0.8 for optical signals) times the data signal bit rate, the third harmonic of the data signal is significantly attenuated. The instrument displays useful qualitative information, but quantitative rise-time measurements under these conditions may not be accurate.

For example, a FC531E Elec mask has a bit rate of 531.25 Mb/s; 1.5 to 1.8 times this value is a range of 796.5 MHzBW to 955.8 MHzBW. Therefore, you should not use an instrument with less than 1 GHz measurement system for making quantitative rise-time measurements of this standard.

When just the instrument bandwidth falls within 1.5–1.8 (0.8 for optical signals) times the bit rate of a selected mask standard, the instrument displays the message "Consider system bandwidth when testing at this bit rate." in the status area above the graticule.

What do you want to do next?

- [Learn more about eye measurements. \(see page 628\)](#)
- [Learn about communication triggering. \(see page 570\)](#)
- [Go to mask testing setup overview. \(see page 177\)](#)

Serial Mask Testing with Mask Testing

The [Serial Mask Testing option \(see page 177\)](#) provides electrical mask testing on communication standards and communication triggering.

Mask testing consists of two tasks: signal violation detection and pass/fail testing. Signal violation detection lets you test communications signals for time or amplitude violations against a predefined mask. Each mask consists of one or more polygonal regions called segments. The signal waveform data should stay outside of the segments defined by the mask. Any signal data that occurs inside a mask segment is called a mask segment violation or "hit."

You can select from any of the included standard telecommunications masks, or you can define your own custom masks. Selecting a mask automatically sets the instrument communications triggers to properly display most communication signals in the mask.

Pass/Fail testing defines the mask testing parameters, including the number of waveforms to test, how many mask hits are allowed before failing a test, setting a mask margin tolerance value, and what action to perform upon the completion or failure of a test.

Communication triggering enables you to trigger on and display waveforms for industry-standard communications signals. See [Mask Types and Standards \(see page 179\)](#) for a list of the supported standards on which you can trigger.

Automatic communication signal measurements enable you to make automatic measurements on communications signals. See the [Communication Measurement \(see page 244\)](#) tab in the Measurement setup window for the available measurements.

The following are Serial Mask Testing key features:

- Predefined masks for testing or triggering on industry-standard signals, such as ITU-T G.703, ANSI T1.102, Fibre Channel, Ethernet, Video, SONET, Rapid IO, USB, IEEE 1394b, OIF Standards and their subsets
- Autoset, which quickly adjusts the instrument vertical and horizontal controls to display a waveform in a mask
- Autofit, which positions the signal on each acquisition to minimize mask segment hits
- Mask margins, which allow you to adjust the default mask margin tolerances
- Pass/Fail testing to continuously test a specified number of waveforms against a mask
- A mask editor for creating, saving, and recalling user-defined masks
- Waveform database technology to perform mask testing based on waveforms accumulated in a database, rather than a single waveform stored in acquisition memory
- Communications triggers to trigger the instrument on industry-standard communications signals
- Automatic measurements on communications signals

NOTE. *If a standard listed in this manual is not available on your instrument, it is because the configuration or bandwidth of your instrument cannot test that standard.*

Although this oscilloscope is not a calibrated optical reference receiver, you can use it with mask testing to evaluate general optical signal characteristics and wave shape, using an external O/ E converter.


What do you want to do next?

- [Learn more about mask testing. \(see page 625\)](#)
- [Learn more about eye measurements. \(see page 628\)](#)
- [Learn about communication triggering. \(see page 570\)](#)
- [Go to mask testing setup. \(see page 177\)](#)

Levels Used in Taking Eye Measurements

All eye-diagram measurements are based on the power level, the voltage level, or the time locations of edges within each acquisition.

The next figure shows the areas of an eye-diagram used to calculate measurements.

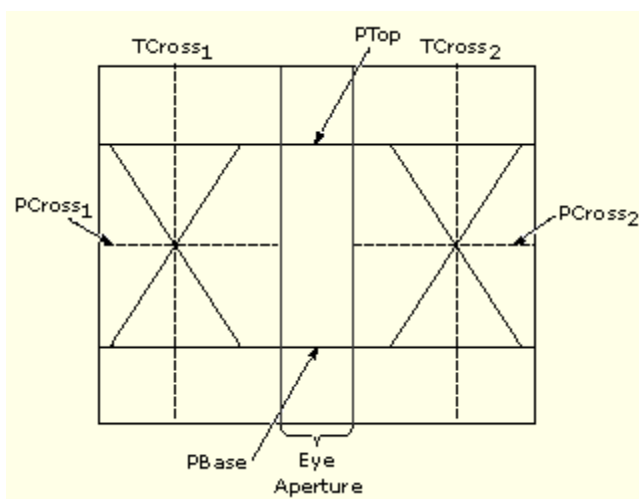

P Values

The **P** values include the mean and standard deviation of the vertical location of **PTop** and **PBase**. These areas are used with a specified sample size to statistically measure the following values*:

- **PTop Mean.** This is the mean value of **PTop**.
- **PTop Sigma.** This is the standard deviation of **PTop**.
- **PBase Mean.** This is the mean value of **PBase** within the Eye Aperture.
- **PBase Sigma.** This is the standard deviation of **PBase** within the Eye Aperture.

* The Eye Aperture defaults to the center 20% of the interval from **TCross₁** to **TCross₂**.

T1 Values

The **T1** values are vertical and horizontal values associated with the left-most crossing point. These areas are used to establish the following values:

- **TCross₁ Mean.** This is the horizontal mean of the left-crossing point at TCross₁.
- **TCross₁ Sigma.** This is the horizontal standard deviation of the left-crossing point at TCross₁.
- **TCross₁ Peak-to-Peak.** This is the horizontal peak-to-peak deviation of the left-crossing point at TCross₁.
- **PCross₁ Mean.** This is the vertical mean of the left-crossing point at PCross₁.

T2 Values

The **T2** values are vertical and horizontal values associated with the right-most crossing point. These areas are used to establish the following directions:

- **TCross₂ Mean.** This is the horizontal mean of the right-crossing point at TCross₂.
- **TCross₂ Sigma.** This is the horizontal standard deviation of the right-crossing point at TCross₂.
- **TCross₂ Peak-to-Peak.** This is the horizontal peak-to-peak deviation of the right-crossing point at TCross₂.

DCD Values

The duty cycle distortion (DCD) values are horizontal values associated with the right-most crossing point at 50% of the eye height. These areas are used to establish DCD_{pk-pk}, the horizontal peak-to-peak deviation of the left-crossing point at half the height of the eye.

What do you want to do next?

- [Learn about communication triggering. \(see page 570\)](#)
- [Go to mask testing setup overview. \(see page 177\)](#)

Saving and Recalling Setups

This instrument can save a number of different instrument setups for later recall, limited only by the space that you have to store the setups.

By saving and recalling different setups, you can switch from setup to setup without having to first manually record your settings and then manually set them. This capability is helpful when you want to:

- Save and recall a setup that optimizes the instrument for displaying and analyzing a certain signal
- Save a series of setups to help automate a procedure through recall of a sequence of saved setups as part of performing the procedure
- Save a setup for sharing with a second instrument

If you do not have an attached keyboard, you can still name setup files. The Save and Recall dialog boxes include a pop-up keyboard that you can use with your mouse or the touch screen to enter the setup path name and file name.

The instrument excludes the following items when saving setups:

- Channel waveforms and reference waveforms. Control settings (scale, position, and so on) are saved but not the waveform data. Upon recall of the setup, the settings are applied, but the data is not restored.
- Math waveforms. Control settings and the math expression are retained but not the waveform data. Upon setup recall, however, the math waveform expressions are applied, but math waveform data is not restored.
- User options stored in the Windows registry. These include all options set in the User Preferences control window.
- If you want to save a waveform in a useful format for other applications, such as a spreadsheet, use the save or save as function (see [Saving and Copying Waveform Data \(see page 631\)](#)).

A few other things to remember when saving and recalling setups:

- Recalling a setup replaces the current setup with the recalled setup. If you do not want to lose your current setup, save the setup file for later recall.
- Saved setups may contain settings inappropriate for waveforms currently in your instrument. For example, if you save a setup that displays a math waveform that is the average of reference waveform 1, when you recall the setup, if the reference is empty, the math and reference waveforms are not displayed.

What do you want to do next?

- [Learn about saving and recalling waveforms. \(see page 630\)](#)
- [Learn about exporting waveform data. \(see page 631\)](#)

Saving and Recalling Waveforms

This instrument can save any number of waveforms, limited only by the space that you have to store them.

By saving a waveform, you can recall it at a later time for comparison, evaluation, and documentation. This is helpful when you want to:

- Recall a waveform for further evaluation or comparison with other waveforms.
- Extend the waveform carrying capacity of the instrument. The instrument supports four reference, four channel, and four math waveforms. If you want more than four reference waveforms, you can save additional references to disk for recall later.

The Reference Setup control window contains a Label field for including comments with your saved waveforms.

If you do not have an attached keyboard, you can still enter comments and name reference waveform files. The Reference Setup control window includes a pop-up keyboard that you can use with your mouse or the touch screen to enter the waveform path name, file name, and comments.

The instrument recalls each waveform into one of the reference waveform locations Ref <1–4>. You cannot recall into a channel or a math waveform.

What do you want to do next?

- [Learn about saving and copying waveform data. \(see page 631\)](#)
- [Learn about saving and recalling setups. \(see page 629\)](#)

Saving and Copying Waveform Data

This instrument supports saving waveform data to a file. The instrument can save waveforms, images, and measurements in several formats. You can also copy waveform data to the Windows clipboard for use with other applications, such as spreadsheets or math analysis applications.

A few things to remember when saving waveform data:

- Waveform data are saved as a series of comma-separated values (CSV), which are amplitudes without units. There is no timing information, but data is placed in the file in sequence from the first sample in the waveform record to the last.
- Because the waveform data are saved as CSV, without timing and scaling information, the instrument does not save these waveforms directly. (It only saves the data.) If you intend to recall a waveform later, save it (see the procedure [Saving A Waveform \(see page 499\)](#)) using the .wfm file type.
- You may also choose to copy a waveform and paste it directly into an application such as Microsoft Word or Excel. If so, select your waveform, and then select Copy in the Edit menu.

File Formats

To make saved files more useful, select a file format usable by your analysis tools:

- Numeric. This creates (.txt) files in a numeric format usable by text and word processors.
- Text. This creates (.txt) files in a text format usable by text and word processors.
- Bitmap. This creates (.bmp) files in a bitmap file format usable by many graphic programs. (Available for screen captures.)
- JPEG. This Creates (.jpg) files in a compressed image format usable by many graphic programs. (Available for screen captures.)
- Spreadsheet. This creates (.csv) files in a format usable by spreadsheets (Excel, Lotus 1-2-3, and Quattro Pro).
- MATLAB. This creates (.dat) files in a format usable by MATLAB.

- Mathcad. This creates (.dat) files in a format usable by MathCad. The MathCad file is an ASCII file, the first five values of which contain the following header information:
 - The first header value holds the record length.
 - The second header value holds time, in seconds, between samples.
 - The third header value holds the trigger position (expressed as an index in the data position).
 - The fourth header value refers to the fractional trigger position.
 - The fifth header value holds the horizontal offset in seconds.

NOTE. *The delimiters are carriage returns.*

What do you want to do next?

- [Learn about saving and recalling setups. \(see page 629\)](#)
- [Learn about saving and recalling waveforms. \(see page 630\)](#)
- [Learn more about CSV text format. \(see page 730\)](#)

ACos

Inserts the text ACOS(into the math expression.

Acquisition Interval

The acquisition interval is the time between sample points. For mathematical purposes, it is the time covered by the waveform record divided by the record length.

Acquisition Window

The acquisition window defines what data are sampled from the input signal to form a waveform record.

Behavior

- The vertical scale and offset controls set the vertical size and vertical center of this window independently for each channel.
- The horizontal scale and position controls set the horizontal size and position for all channels in unison.

Active Probes

Active voltage probes often contain preamplifiers that provide high resistance and low capacitance at the probe tip. Some active voltage probes contain differential amplifiers that provide high Common Mode Rejection Ratio (CMRR).

Active current probes often contain Hall-effect sensors that extend the probe bandwidth down to DC.

Many active probes, especially high frequency probes, can drive a 50 Ω instrument input.

Amplitude

This voltage measurement is the high value minus the low value measured over the entire waveform or gated region:

Amplitude = High – Low

Analog Oscilloscope Sweeps



Area

Area is a voltage-over-time measurement. The measurement is the area over the entire waveform or gated region expressed in volt-seconds. The area above the common reference point is positive while the area below the common reference point is negative.

[Taking Automatic Measurements \(see page 471\)](#)

ASin

Inserts the text ASIN(into the math expression.

ATan

Inserts the text ATAN(into the math expression.

Auto-Increment File Name

1. Select the Auto-increment file name to save numerous similar files without retyping the entire file name each time.
2. Enter a Base file name.
3. Click Save.

For the initial save the default count is 000, but you can overwrite this number if you choose. Your first file is saved as [Basefilename][count].ext, where ext is the file extension. On subsequent saves, the instrument searches for the highest numbered file name and increases the number by one, as in Basefilename001.ext.

For example, if you are saving a series of rise time data files, you can use "Risetime" as the base file name. Your first file is saved as Risetime000.ext, where ext is the file type extension. The next file will be Risetime001.ext, and so on.

TIP. If Count reaches 999, it is suggested that you change the base file name to Basefilename1 (for example, Risetime1) on the next save. Your next file will then be saved as Risetime1000.ext. You will receive a warning message if you are going to overwrite any files with the same name.

Auto Trigger Mode

Auto trigger mode causes the instrument to trigger if a valid trigger event does not occur within a set amount of time.

Auto trigger mode is useful when probing DC signal levels such as power supplies or logic levels that are stuck high or low. It is also useful when looking for activities on signal nodes such as oscillations when you first set up the instrument. The length of time it waits for a trigger event depends on the time base setting.


Auxiliary Trigger Input

The trigger level range for the Auxiliary Input is adjustable from +8 V to -8 V. The maximum input voltage is ± 20 V.

Averages Button

Closes this window and opens the Adjust Math Parameters control window.

A Control Window

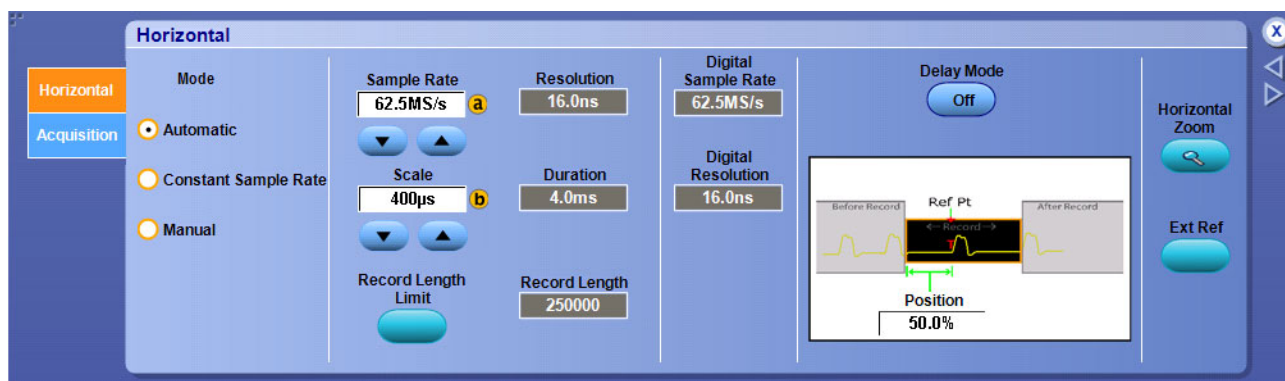

Backing Up User Files

Always back up your user files on a regular basis. Use the Windows Backup tool to back up files stored on the hard disk. The Backup tool is located in the System Tools folder in the Accessories folder.


Use these steps to back up your files:

1. Exit the instrument application by selecting the File menu Exit command.
2. Click the Windows Start button.
3. Select All Programs > Accessories > System Tools > Backup.
4. Use the Backup Wizard to select the items you want to back up and the destination.

B-Event Scan Setup

B-Event Scan is particularly useful for creating overlapped eye diagrams, and applies to all standard Pinpoint Trigger A- and B-Events sequenced by Trig on nth Event in non-FastAcq mode.

The B-Event Scan initializes the Start Event value to 1 and the End Event value to 8. The Start Event must be less than or equal to the End Event value. Advance After, advances the B-Event value after the given number of acquisitions have occurred depending on the selected Advance method (Sequential, Random, and Toggle).

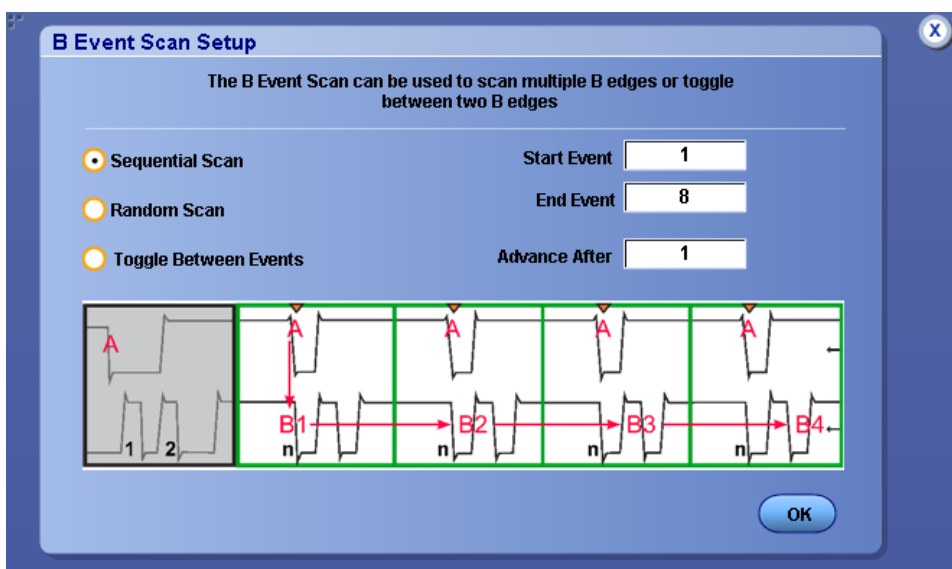

- When set to Sequential, the B-Event value is sequentially incremented after each acquisition completes, until the Start Event reaches the End Event. At this point the B-Event value is set to Start Event value again.
- When set to Random, the B-Event value is set to a random value between the Start Event and End Event values for each set of Advance After acquisitions.
- When set to Toggle, the B-Event value alternates between the Start Event and End Event for each set of Advance After acquisitions.

This process continues and occurs at hardware speed. The range for the B-Event, Start Event, and End Event is from 1 to 2e9.

Burst Width

This timing measurement is the duration of a burst (a series of transient events) and is measured over the entire waveform or gated region.

CAN Bit Rate

1. Click in the Nominal Bit Rate entry box.
2. Use the multipurpose knob to set the bit rate for the trigger.

CAN Format

In the CAN Format drop-down list, specify the format.

CAN Signal Type

In the drop-down Signal Type list, select the type of data to trigger on.

Center Frequency

The center frequency is the frequency at the center of the frequency span. The maximum center frequency is equal to the sample rate divided by two (the Nyquist frequency) minus one half the span. The minimum center frequency is equal to one half of the span.

If the frequency span is set to maximum, then the center frequency will not move. To increase the center frequency beyond the present limits, either reduce the frequency span or increase the sample rate. To decrease the center frequency beyond the present limits, reduce the frequency span.

Channel 1 – 4 Inputs

You can connect up to four probes to the inputs of the instrument. Each vertical input channel has its own vertical control settings. Each probe input channel has its own [TekProbe/TekVPI interface \(see page 365\)](#).

Channels Selector

Specify the Channel <1 – 4> and waveform type (Channel, Math, or Reference) for oscilloscope operations.

- Click Ch and specify a channel to dedicate the controls for use with an input on the front panel.
- Click Math to dedicate the controls for use with the a math waveform.
- Click Ref to dedicate the controls for use with the a reference waveform.
- Shaded buttons Indicate unused or undefined waveforms.



Clear Button

Removes all of the characters from the math expression.

Clear Data control

Access this control from the Edit menu.

Use the Clear Data control to reset waveform, measurement, and histogram data, mask hit data, template violations, persistence, statistics, mask pass/fail test data. The Clear data control only clears the accumulated data; it does not turn off any functions.

Clock Edge

The Clock Edge determines whether the instrument finds the trigger point on the rising edge (left button) or the falling edge (right button) of the clock signal.

Level

Click in the Level entry box and use the multipurpose knob and to set the threshold on which you want to trigger. Different levels are available depending on the code selected:

- The upper level controls the upper level trigger point
- The lower level controls the lower level trigger point
- The clock level sets the clock threshold on which you want to trigger

Communication Trigger Codes and Standards

The communication trigger standards available for an instrument depend on the bandwidth and or the configuration of that instrument. The following tables list the Communication Trigger Codes and Standards available with Mask Testing.

NOTE. *The Comm Trigger is designed to work with communications mask and standard testing. Mask testing automatically uses Communication triggers. You must install the [Serial Communications Mask Testing Option \(see page 177\)](#) on some instruments before you can access the Comm triggers.*

AMI trigger standards

Custom	32Mb 32.064 Mb/s	97Mb 97.728 Mb/s	DS1 1.544 Mb/s
DS1A 2.048 Mb/s	DS1C 3.152 Mb/s	DS2 6.312 Mb/s	DS2 Rate Sym 6.312 Mb/s
DS2 Rate Coax 6.312 Mb/s	DS3 44.736 Mb/s	E1 2.048 Mb/s	E2 8.448 Mb/s
E3 34.368 Mb/s	STS-1 51.84 Mb/s		

B3ZS trigger standards

Custom	DS3 44.736 Mb/s	STS-1 51.84 Mb/s	
--------	-----------------	------------------	--

B6ZS trigger standards

Custom	DS2 6.312 Mb/s	DS2 Rate Sym 6.312 Mb/s	
--------	----------------	-------------------------	--

B8ZS trigger standards

Custom	DS1 1.544 Mb/s	DS1C 3.152 Mb/s	DS2 Rate Coax 6.312 Mb/s
--------	----------------	-----------------	--------------------------

CMI trigger standards

Custom	DS4NA 139.26 Mb/s	E4 139.26 Mb/s
STM1E 155.52 Mb/s	STS-3 155.52 Mb/s	

HDB3 trigger standards

Custom	E1 2.048 Mb/s	E2 8.448 Mb/s
E3 34.368 Mb/s	DS1A 2.048 Mb/s	

MLT3 trigger standards

Custom	100Base-TX 125 Mb/s
--------	---------------------

NRZ trigger standards


Custom	2.5 I Band 2.5 Gb/s	FC133 132.8 Mb/s	FC266 265.6 Mb/s
FC531 531.2 Mb/s	FC1063 1.0625 Gb/s	FC2125E 2.125 Gb/s	G1 ATA 1.5 Gb/s
GB Ethernet 1.25 Gb/s	FS USB 12 Mb/s	HS USB 480 Mb/s	
OC1/STM0 51.84 Mb/s	OC3/STM1 155.5 Mb/s	OC12/STM4 622.1 Mb/s	
OC48/STM16 2.488 Gb/s	OC48-FEC 2.666 Gb/s	S400b 491.5 Mb/s	S800b 983.0 Mb/s
S1600b 1.966 Gb/s	XAUI 3.125 Gb/s	RapidIO 500M 500 Mb/s	RapidIO 750M 750 Mb/s
RapidIO 1.0G 1.0 Gb/s	RapidIO 1.5G 1.5 Gb/s	RapidIO 2.0G 2.0 Gb/s	SFI/SPI-5 2.5G 2.5 Gb/s
SFI/SPI-5 3.1G 3.1 Gb/s	RIO Serial 1G 1.25 Gb/s	RIO Serial 2G 2.5 Gb/s	RIO Serial 3G 3.125 Gb/s
VSR OC192 1.244 Gb/s	TFI-5 2.5G 1.488 Gb/s	TFI-5 3.1G 3.11 Gb/s	Serial 8b/10b 3.125 Gb/s

Communication Trigger Coding

From the Trig menu, select Comm Setup.

Overview

Use these controls to select the coding format for triggering on a communication signal and the standard to use with the coding format.

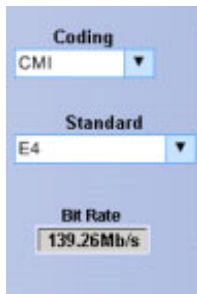

To Use

- In the Coding drop-down list box, select the coding format for triggering the communication signal.
- In the Standard drop-down list box, select the standard to use with the coding format.
- The Standard sets the bit rate.

Behavior

The coding format determines which standards are available as well as other parameters, such as trigger threshold and pulse form. The standard selected determines the bit rate. Changing the bit rate causes the standard to change to your own customized standard.

What do you want to do next?

- [Learn about Communication Trigger Pulse Form. \(see page 642\)](#)
- [Go to the Communication Trigger control window. \(see page 308\)](#)

Comm Trigger Pulse Form

From the Trig menu, select Comm Setup.

Overview

Pulse Form directs the instrument to trigger on a voltage change from the prior bit. This can be positive, negative, or neutral if there was no change.

Depending on the code used, the pulse form can also indicate that triggering is to occur on an eye diagram.



To Use

Click the pulse form you want the instrument to use for triggering:

- 1 triggers the instrument on a positive pulse form.
- 0 triggers the instrument on a neutral pulse form.
- -1 triggers the instrument on a negative pulse form.
- Eye triggers the instrument on an eye diagram.

Behavior

The available pulse forms are determined by which code is used for the signal. For example, the only pulse form available for NRZ codes is eye diagram.


What do you want to do next?

- [Learn about Communication Trigger Coding. \(see page 641\)](#)
- [Go to the Communication Trigger control window. \(see page 308\)](#)

Comm Trigger Source

- Use the Source drop-down list to select the channel for the Comm trigger source.
- Use the Type drop-down list to select the clock source for the trigger.
- Use the Polarity drop-down list to select the polarity of the clock source.

Control Window Handle

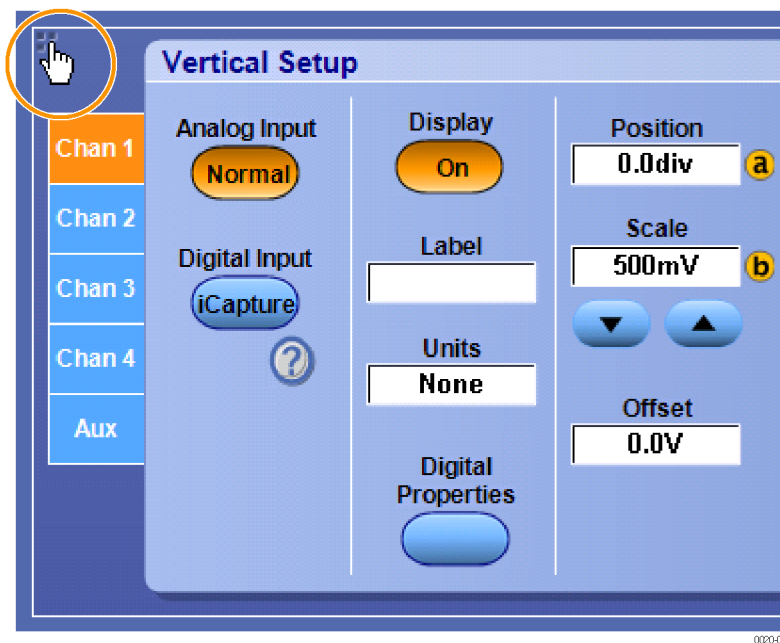

Cos

Inserts the text <COS> into the math expression.

Cosh

Inserts the text <COSH> into the math expression. The COSH function computes the hyperbolic cosine of x.

Crossing Percent

Crossing percent measurement is the eye crossing point expressed as a percentage of eye height.

$$\text{Crossing Percent} = 100 \times [(\text{pCross1Mean} - \text{pBaseMean}) / (\text{pTopMean} - \text{pBaseMean})]$$

Cursors Menu


Use the Cursors menu options to select cursor types, mode, and position, and to turn cursors on and off.

Cursor Sources (XY Display)

From the Cursor menu, select Cursor Setup.

Overview

Use these controls to define the source for both Cursor 1 and Cursor 2 for any cursor type.

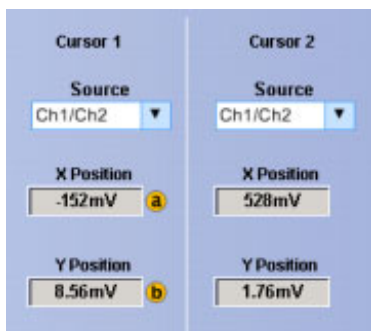

To Use

1. Click the Source drop-down list to select the measurement source for the cursor.
2. Click in a Position entry box and use a multipurpose knob to adjust the position of the cursor.

Behavior

If the cursor type is V Bars or H Bars, setting the Cursor 1 source sets the Cursor 2 source to the same value. To have different sources for Cursor 1 and Cursor 2, set the Cursor 1 source first, and then set the Cursor 2 source.

NOTE. *Only Screen Cursors have both an X and Y Position controls.*

The Multi-Purpose Knobs Adj buttons appear only with Screen cursors. Click the Adj buttons to assign the multipurpose knobs to the X-axis and the Y-axis controls.

What do you want to do next?

- [Learn about cursor types. \(see page 67\)](#)
- [Learn about cursor styles. \(see page 69\)](#)
- [Learn about Cursor Readouts in XY display format. \(see page 69\)](#)

Customizing Color Palettes

1. Click a User palette button in the Display control window, Colors tab.
2. Click the Edit button.
3. Click in the Hue, Saturation, or Lightness entry boxes; then use the multipurpose knobs to adjust the attributes.

Cycle Area

The cycle area is a voltage over time measurement. The measurement is the area over the first cycle in the waveform or the first cycle in the gated region expressed in volt-seconds. The area above the common reference point is positive while the area below the common reference point is negative.

Cycle Mean

This voltage measurement is the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region.

Cycle RMS

This voltage measurement is the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region.

Data Direction


In the Data Direction drop-down list, specify the data direction.

Data Threshold

1. Click in the Data Threshold entry box.
2. Use a multipurpose knob to set the threshold voltage for the trigger.

Dead Time

Dead time is the time that the instrument requires to process an acquisition.

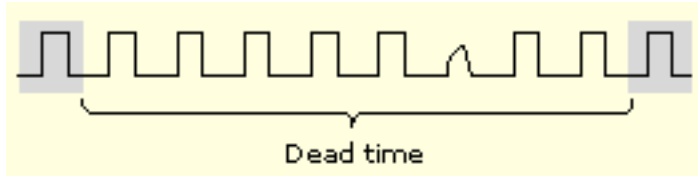

The instrument cannot acquire any new data until the previous data has been processed. If dead time is long, the instrument can miss acquiring infrequent events.

"Dead time" Between Acquisitions



Delay Edges

The Delay Edge buttons determine whether the measurements will be taken on the rising or falling edge of the waveform. After selecting an edge, the graphic in the control window is updated to show the edge from which the measurements will be taken.

Delay

This timing measurement is the time between the mid reference (default 50%) amplitude point of two different waveforms

Trigger Delay

Use the Trig Delay control to trigger the instrument a specified period of time after the A trigger. After the A trigger arms the trigger system, the instrument triggers on the next B trigger event that occurs after the time that you specify with the Trig Delay control.

- Click in the Trig Delay entry box, and then use the multipurpose knob to enter the delay time.

Trigger Events

Use the Trig Event control to trigger the instrument a specified number of events after the A trigger. After the A trigger arms the trigger system, the instrument triggers on the nth B trigger event.

- Click Trig Event, and then use the multipurpose knob to enter the number of B trigger events.
- Click the increment/decrement buttons to enter the number of B trigger events.

Digital Input iCapture


NOTE. *iCapture is available only on MSO70000/C Series instruments.*

The supported instrument uses iCapture to display analog characteristics of up to four signals connected to up to four of the D15-D0 digital channel through a logic probe.

From the Vertical menu, select Vertical Setup.

To Use

- Click the Digital Input iCapture button when you want to display the analog characteristics of a single digital channel.
- Click the Digital Source selection box and select a digital channel to acquire and process as an analog input waveform.

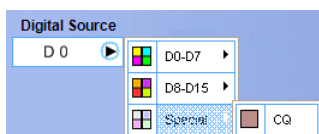

NOTE. *Right-click on the digital source waveform handle in the waveform window to reroute from one analog channel to any of the other three analog channels. For example, right-click on D0 captured on Ch1 and select **iCapture on Ch2** to reroute the source D0 to Ch2.*

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 806\)](#)
- [Learn about the Digital Properties button. \(see page 652\)](#)

Trigger Path Alignment Buttons

NOTE. *This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.*

The exact trigger location is used in alignment process to avoid jitter. To minimize logic trigger errors, trigger adjustment aligns the 16 digital probe trigger paths (excluding the clock) using a specified analog path as a reference source to provide the best trigger alignment possible. You need the Logic Probe Deskew Fixture to deskew the logic probe against one analog probe on supported instruments. The fixture provides an edge source for the instrument to time-align the 16 logic trigger paths from the logic probe tips.

NOTE. *Refer to the Logic Probe Deskew Fixture Instructions, Tektronix part number 071-2613-XX, for information on equipment needed, and procedures to connect and perform the deskew routine.*

To Use

- Calibrate the analog probe connected to the reference channel.
- Click the Align Trigger Path button to start the trigger path alignment routine for the logic probe.
- Click the Clear Trigger Path Alignment button to clear the instrument memory of previously-aligned probe data.

Digital Properties Button

NOTE. *Digital Properties option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.*

From the Vertical menu, select Vertical Setup. From the Math menu, select Math Setup.

To Use

- Click the Digital Properties button when you want to specify the voltage threshold level of the Ch1-Ch4 (live) and M1-M4 (math) channels to use as logic waveforms and to include in a bus.
- Click the Digital Properties button to set the voltage threshold levels in the [Digital Threshold Setup Window](#) (see page 652).



What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 806\)](#)
- [Learn about the Digital Threshold Setup menu. \(see page 652\)](#)

Digital Threshold Setup Window

NOTE. The Digital Threshold Setup option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE installed.


Select the Vertical Setup or the Math Setup menu, and then click the Digital Properties button.

Overview

Use this control window to specify the voltage threshold level of the Ch1-Ch4 (live) and the M1-M4 (math) channels to use as logic waveforms and to include in a bus.

To Use

- Click the Threshold entry box for the desired channel and use the keypad to enter a value or use the multipurpose knobs to select a voltage level.
- Click the OK button.

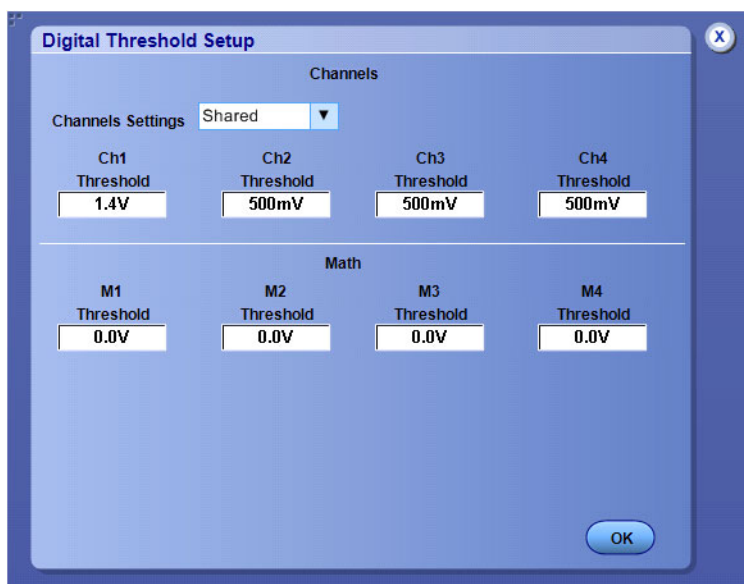

What do you want to do next?

- [Learn about the digital channel setup. \(see page 81\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Digital Menu

NOTE. *The Digital Menu is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE.*

Use the Digital menu options to set parameters for the D15-D0 digital channels, and to set up buses based on analog, math, and digital waveforms from which the instrument can acquire, decode, and display data (or bus forms).

On MSO/DPO5000 Series instruments, you have the option to turn on or turn off the MagniVu feature.

Display Style

From the Display menu, select Display Setup; then open the General tab.

To Use

Click one of the buttons to select the waveform display style.



Behavior

- Vectors displays waveforms with lines drawn between record points.
- Dots displays waveform record points as dots on the screen. Dots are useful when you want to display multivalued waveforms such as [eye diagrams](#). (see page 654)
- Inten Samp (Intensified Samples) shows only the actual samples. When you use intensified samples, you identify the actual sample points in an interpolated waveform.

You can also use the Display menu Display Style submenu to directly access the style options.

NOTE. *The Vectors and Inten Samp selections are not available when using the XY or XYZ Display Formats.*

What do you want to do next?

- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

Eye diagram

The eye diagram is a synchronized display of a data stream that shows signal levels and transition regions, typically over one cycle.

The eye diagram has the appearance of an opened eye. Compared to a normal instrument display, the eye diagram generally appears as an untriggered waveform. This is because on successive cycles the signal is high and then low. The areas of interest are the transition regions and eye opening.


Math Color

From the Display menu, select Colors, or open the Colors tab in the Display control window.

To Use

Click one of the buttons to select the color scheme for math waveforms.

- Click Default to use the default system color for the selected math waveform.
- Click Inherit to use the same color as the waveform the reference function is based on.

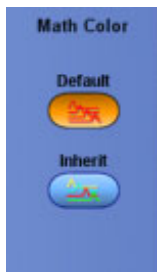

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about using text with screen displays \(see page 140\)](#)

Reference Color

From the Display menu, select Colors, or open the Colors tab in the Display control window.

To Use

Click one of the buttons to select the color scheme for reference waveforms.

- Click Default to use the default system color for the selected reference waveform.
- Click Inherit to use the same color as the original waveform.



What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)

Display Menu

Use Display menu options to change the way that waveforms appear on the instrument. This includes the style, intensity, color, format, text, and persistence. You can also change the graticule type and the items that appear on the display, such as date and time.

Trigger Level Marker

From the Display menu, select Objects, or open the Objects tab in the Display control window.

To Use

Click one of the buttons to select the trigger level indicator.



Behavior

The [trigger level markers \(see page 506\)](#) indicate the voltage level where the trigger or threshold levels of the active waveform occur:

- The Short trigger level marker displays a short arrow on the side of the graticule by the active waveform.
- The Long trigger level marker displays a horizontal line through the active waveform.

NOTE. *The trigger level indicator does not appear on inactive waveforms, reference waveforms, or fast acquisition signals.*

What do you want to do next?

- [Learn about changing the overall display appearance. \(see page 139\)](#)
- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)

Duty Cycle Distortion

Duty cycle distortion is the peak-to-peak time variation of the first eye crossing measured at the MidRef as a percent of the eye period.

$$\text{DCD}(\text{sec}) = 100\% \times \text{TCDp-p} / (\text{TCross2mean} - \text{TCross1mean})$$

Editing a User Mask

Use the Mask Edit Setup to alter a user mask.

1. From the Masks menu, select Mask Edit Setup to display the Mask Edit control window.
2. Under Mask Elements, use the up and down arrows to select the Segment and Vertex you want to edit. The selected segment appears in red and a white X indicates the selected vertex.
3. Click in the Horizontal and or Vertical controls under Mask Value to change the horizontal or vertical values of the mask.
4. Click Save to save your changes to the user mask.

Editor Button

Closes this window and opens the Equation Editor control window so you can edit the math expression.

Math Equation Editor: Operands

From the Math menu, select Equation Editor, or click the Editor button in the Math Setup or Spectral Setup control windows.

To Use

Click an individual button to enter a character or operator into the math expression.



Behavior

The characters are entered into the math expression one at a time.

What do you want to do next?

- [Learn about the Math Setup controls. \(see page 209\)](#)
- [Learn about averaging math waveforms. \(see page 210\)](#)

Edit Menu

Use the Edit menu for copying images, waveforms, or measurements to the clipboard for use in other applications. You can select items from the menu or you can select Copy Setup to fine tune the parameters with the Copy control window before copying items to the clipboard.

You can also use the Edit menu to clear data and [undo the last Autoset \(see page 163\)](#).

E-mail on Trigger Setup

Click Setup to access the E-mail on Event control window where you configure sending e-mail on events.

Enhanced Bandwidth Indicator



Extinction Ratio Percent

Extinction ratio percent is the ratio of eye base to top expressed as a percentage.

This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{Ext Percent} = 100 \times (\text{pTopMean} / \text{pBaseMean})$$

Extinction Ratio

Extinction ratio is the ratio of eye top to base. This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{Ext Ratio} = \text{pTopMean} / \text{pBaseMean}$$

Extinction Ratio Decibel

Extinction ratio decibel is the ratio of eye top to base expressed in decibels.

This measurement is only valid when the acquisition mode is set to WfmDB, FastAcq is enabled, or the measurement is taken on a reference waveform saved in FastAcq mode.

$$\text{Ext dB} = 10 \times \text{Log}(\text{pTopMean} / \text{pBaseMean})$$

Eye Base

Eye Base is the base value used in the extinction ratio measurements.

$$\text{Eye Base} = \text{pBaseMean}$$

Eye diagram

The eye diagram is a synchronized display of a data stream that shows signal levels and transition regions, typically over one cycle.

The eye diagram has the appearance of an opened eye. Compared to a normal instrument display, the eye diagram generally appears as an untriggered waveform. This is because on successive cycles the signal is high and then low. The areas of interest are the transition regions and eye opening.

Eye Height

Eye height is the measurement of the eye height in volts.

$$\text{Eye Height} = (\text{pTopMean} - 3 \times \text{pTopSigma}) - (\text{pBaseMean} + 3 \times \text{pBaseSigma})$$

Eye Top

Eye Top is the top value used in the extinction ratio measurements.

$$\text{Eye Top} = \text{pTopMean}$$

Eye Width

Eye width is the measurement of eye width in seconds.


$$\text{Eye width} = (\text{tCross2Mean} - 3 \times \text{pTopSigma}) - (\text{tCross1Mean} + *tCross1Sigma)$$

E-mail Configuration Dialog Box

From the Utilities menu, highlight E-mail on Event; then Select Setup from the submenu. In the E-mail on Event Setup window, click the Config button.

Overview

Use this dialog box to enter the address of the mail server to use when sending E-mail on events. You must have a server entered in the SMTP Server Address box for your instrument to send e-mail.

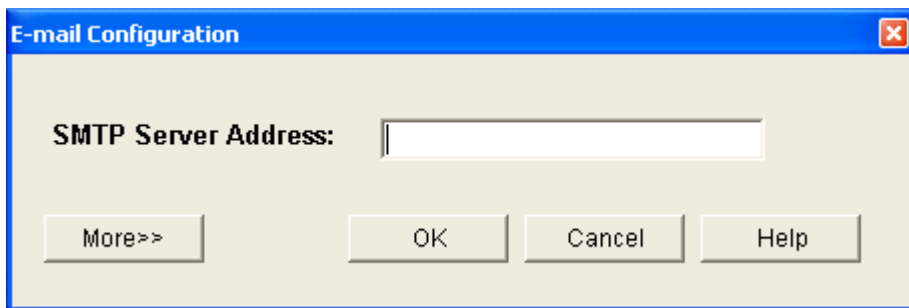

You can customize your e-mail by selecting the number of attempts to make, entering a From address, setting the time out length, entering a login and password if necessary, and entering a host name.



The image shows a dialog box titled "E-mail Configuration" with a blue title bar and a close button (X) in the top right corner. The dialog box has a light beige background and contains several input fields and buttons. The fields are arranged vertically from top to bottom: "SMTP Server Address:" with a text box; a button labeled "<<Less"; "SMTP Port:" with a text box; "Number Attempts to send:" with a text box; "From:" with a text box; "Timeout:" with a text box; "Auth Login:" with a text box; "Auth Password:" with a text box; and "Hostname:" with a text box. At the bottom of the dialog box, there are three buttons: "OK", "Cancel", and "Help".

To Use

- Enter the SMTP server address.
- Click OK if you want to accept the default values.
- Click More>> if you want to customize your e-mail.
- Enter the appropriate information in each box that you need to change from the default.

Behavior

The number you enter in the Number Attempts to Send entry box is the number of times the system will try to send the e-mail if it is not successful on the first try. The default is 1.

Entering an address in the From entry box puts that address in the From field of the e-mail. The default value is the instrument model number. Entering your own address allows the instrument to send you e-mail if there is a problem sending to the recipient.

Entering a number in the Timeout entry box will override the default time out for sending e-mail to the server.

If your mail server requires a login or password, enter the login in the Auth Login entry box and the password in the Auth Password entry box.

Entering a network ID in the Hostname entry box makes the e-mail appear as though it did not come from the instrument.

What do you want to do next?

- [Learn about E-mail on Event Setup. \(see page 426\)](#)

E-mail on Trigger


To send e-mail on a trigger event, click the E-mail on Trigger button to On.

NOTE. *E-mail on Event must be configured to enable E-mail on Trigger (Use the Utilities > E-mail on Event > Setup window).*

Fall Time

This timing measurement is the time required for the falling edge of the first pulse in the waveform or gated region to fall from the high reference value (default = 90%) to the low reference value (default = 10%) of the final value.

FastFrame Acquisitions

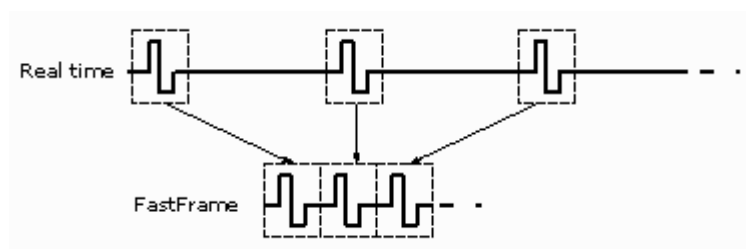

File Menu

Use the File menu for basic file operations such as saving, recalling, and deleting waveforms or setups. You can also use the File menu for standard Windows operations such as printing files and loading the most recent setup.

Force Trigger

Click this button to force the instrument to trigger and complete the current acquisition, regardless of whether any other trigger event occurs.

NOTE. *This command has no effect if the acquisition system is not running.*

Frame

A frame is a segment of the entire data record. When used with FastFrame, each segment contains all of the data of a single acquisition. Each captured event is stored sequentially in its own frame. Frames appear in the order they were captured.

Frequency

This timing measurement is a measure of the first cycle in a waveform or gated region. Frequency is the reciprocal of the period; it is measured in Hertz (Hz) where one Hz is one cycle per second.

Frequency Span

The frequency span is the range of frequencies over which the spectral analysis is performed. The maximum span is from DC to one half of the sample rate (the Nyquist frequency). A smaller frequency span allows a greater range of center-frequency adjustment. If a larger frequency span is desired, increase the sample rate.

Imaginary Number

Inserts the text `SpectralImag()` into the math expression. Select one of the waveforms as an argument to the function. This function creates a waveform that displays only the imaginary part of the FFT.

Magnitude

Inserts the text `SpectralMag()` into the math expression. Select one of the waveforms as an argument to the function. This function creates an FFT magnitude waveform.

Phase

Inserts the text `SpectralPhase()` into the math expression. Select one of the waveforms as an argument to the function. This function creates an FFT phase waveform.

Real Number

Inserts the text `SpectralReal()` into the math expression. Select one of the waveforms as an argument to the function. This function creates a waveform that displays only the real part of the FFT.

Maximum Value

Inserts the text `MAX()` into the math expression. The `MAX` function accumulates over time the maximum value at each point in the vector.

Minimum Value

Inserts the text `MIN()` into the math expression. The `MIN` function accumulates over time the minimum value at each point in the vector.

Getting the Analysis and Connectivity Support Tools

This instrument offers several tools you can install to support data export for use with data-analysis tools.

These tools ship with the Tektronix instrument that this online help supports. You can find them on the product software DVD that ships with this instrument. You can find the Readme file on the CD-ROM that you use to install the analysis and connectivity tools.

For more information:

- For general information and examples on how each of these tools can help you use your instrument, see the *Getting Started with OpenChoice Solutions Manual* with the CD-ROM (020-2513-XX).
- For online information about the VXIplug&play driver, access the driver online help in from the help system of your software development environment in which you install the driver. The driver online help describes each function of the driver and presents these components in a hierarchical outline corresponding to the standard VXIplug&playmodel.
- For further reference information on TekVISA, see the *TekVISA Programming Manual* (071-1101-XX).
- For online information on the TekVISA Excel toolbar, access the online help for the TekVISAExcel Toolbar from the Excel Help menu once you have installed the toolbar.

Ground Terminal

Use this terminal to connect the instrument to the same ground as the unit under test.

Guidelines for Working with Math Waveforms

Use the following guidelines when working with math waveforms:

- Keep math waveforms simple. If the math expression becomes too complex, try separating the expression into more than one math waveform and then combining the waveforms (for example, $\text{Math1} = \text{Math2} + \text{Math4}$).
- Math calculations are not available on digital channels.
- You cannot use math waveforms with Fast Acquisition mode.
- Math waveforms cannot be turned on without a math expression.
- Math waveforms cannot be created from a reference waveform that was saved in Fast Acquisition mode.
- To avoid syntax errors in a math expression, verify the use of operators, parentheses, operands, and the spelling of functions before activating the math waveform.
- When working with reference waveforms, if one or more reference waveforms are used as part of a math waveform, the number of frames in the math waveform is the smallest of all source waveforms (reference, math, or channel waveforms).
- If one or more reference waveforms are used in a math waveform, the record length is equal to the smallest of all the source waveforms (reference, math, or channel waveforms). The math is calculated using the first point from each source, followed by the next point, and so forth. This is true even if the sources have different times between points in the record.

High

The high level measurement is the value used as 100% whenever high reference, mid reference, or low reference values are needed, such as in fall time or rise time measurements. This value can be calculated using either the min/max or histogram method. The min/max method uses the maximum value found. The histogram method uses the most common value found above the midpoint. This value is measured over the entire waveform or gated region.

High Impedance Probes

Most general-purpose probes have high input impedance.

The high input resistance of passive probes (typically 10 M Ω) provides negligible DC loading and provides accurate DC amplitude measurements.

Most passive probes require the instrument input impedance to be 1 M Ω . However, their 8 pF to 12 pF (over 60 pF for 1X) capacitive loading can distort timing and phase measurements.

Use high resistance passive probes for measurements involving the following:


- Device characterization (above 15 V, thermal drift applications)
- Maximum amplitude sensitivity using 1X probe
- Large voltage range (between 15 V and 500 V)
- Qualitative or go/no-go measurements

High Reference


The High Reference defines the high reference level of a waveform; the default level is 90%. This reference level is used with the Low Reference level in the calculation of rise and fall times. To change this level, click the control, and then set the level with the multipurpose knob.

Histogram Box Limits - Horizontal


1. Select a mode:

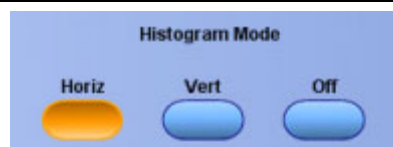

2. Specify the adjustment:

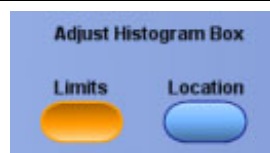


3. Enter limits:

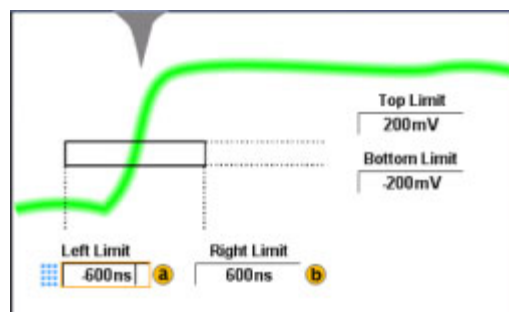


Histogram Box Limits - Vertical


1. Select a mode:

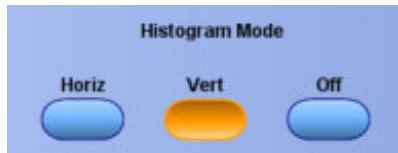

2. Specify the adjustment:

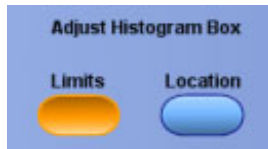

3. Enter limits:

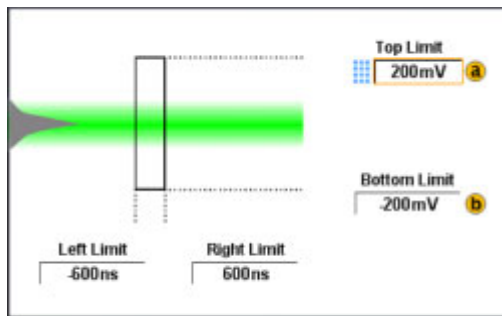


Histogram Box Location - Horizontal


1. Select a mode:



2. Specify the adjustment:

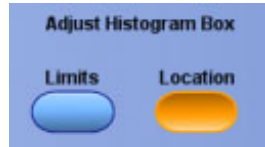


3. Enter limits:

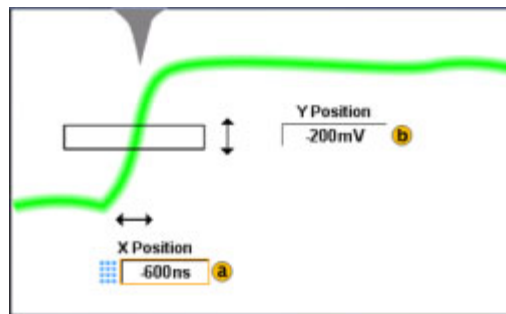


Histogram Box Location - Vertical


1. Select a mode:

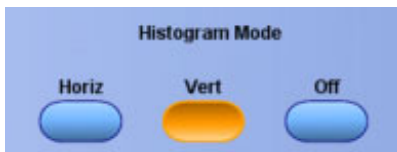

2. Specify the adjustment:

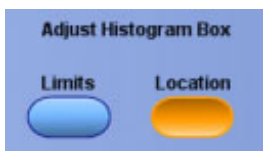

3. Enter limits:

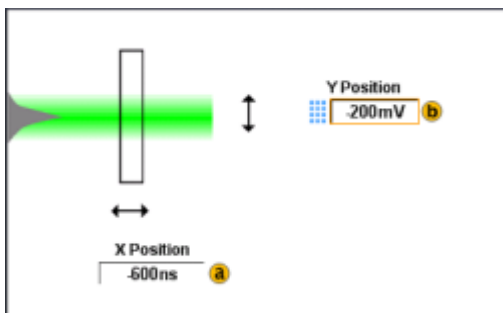

Histogram Mean

Measures the average of all acquired points within or on the histogram box.

Hits in Box

Displays the number of points in or on the histogram box.

Histogram Max

Displays the voltage of the highest nonzero bin in vertical histograms or the time of the right-most nonzero bin in the horizontal histograms.

Mean±1 StdDev

The percentage of points in the histogram that are within one standard deviation of the histogram mean.

Mean±2 StdDev

The percentage of points in the histogram that are within two standard deviations of the histogram mean.

Mean±3 StdDev

The percentage of points in the histogram that are within three standard deviations of the histogram mean.

Histogram Min

Displays the voltage of the lowest nonzero bin in vertical histograms or the time of the left-most nonzero bin in the horizontal histograms.

Peak Hits

Displays the number of points in the largest bin of the histogram.

Pk-Pk

Displays the peak-to-peak value of the histogram.

- Vertical histograms display the "voltage" of the highest nonzero bin minus the "voltage" of the lowest nonzero bin.
- Horizontal histograms display the "time" of the right-most nonzero bin minus the "time" of the left-most nonzero bin.

StdDev (Standard Deviation)

The standard deviation (Root Mean Square deviation) of all acquired points within or on the histogram box.

Waveform Count

Displays the number of waveforms that have contributed to the histogram.

Median

The middle point of the histogram box. Half of all acquired points within or on the histogram box are less than this value and half are greater than this value.

Horizontal/Acquisition Menu

Use the Horizontal/Acquisition menu options to set the horizontal and acquisition parameters for waveforms. This menu also provides access to the Zoom controls, Autoset, and Fast Acquisitions.

On MSO/DPO5000 Series instruments, you have the option to turn on or turn off the MagniVu feature.

Horizontal Delay

Use the Horizontal Delay Mode control to enter the amount of horizontal delay.

1. Click the Horizontal Delay Mode button to set the horizontal delay to on.
2. Click in the Acquisition Delay entry box and use the multipurpose knob to enter a value.

NOTE. *You can also enter a delay value with the front-panel Horizontal Position knob.*

Horizontal Position

Use the Horizontal Position control to move the trigger point within the acquired waveform.

- To acquire waveform data only after the trigger event, set the Horizontal Position control to zero.
- To acquire waveform data leading up to the trigger event, set the Horizontal Position control to any value greater than zero.
- For some setup control windows, you can click in the position control entry box and use the multipurpose to enter a value (in addition to using the front-panel Horizontal Position knob).

Horizontal Position/Scale Control Window: Delay Mode

From the Horiz /Acq menu, select Position/Scale.

Overview

Use the [Horizontal Position/Scale control window \(see page 158\)](#) to set the horizontal delay and the horizontal scale of the displayed waveforms when the horizontal delay is on.

To Use

- When [horizontal delay is off \(see page 158\)](#), the horizontal position control moves the trigger point within the acquired waveform. The horizontal scale control expands or contracts the waveform around the trigger point.
- When [horizontal delay is on \(see page 159\)](#), you can delay the acquisition relative to the trigger event.

For more information on horizontal delay, see [Horizontal Position/Scale Control Window: Horiz Delay On \(see page 159\)](#).

What do you want to do next?


- [Learn more about the Horizontal Position controls. \(see page 676\)](#)

Horizontal Position/Scale Control Window: Position

From the Horiz /Acq menu, select Position/Scale to open the [Horizontal Position/Scale control window \(see page 158\)](#).

Overview

The horizontal position control moves the trigger point within the acquired waveform.

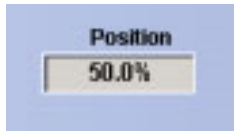

To Use

- Click in the Position entry box and use the multipurpose knob or keypad to change the setting.

Behavior

You can select the amount of data that appears before and after the trigger event. To acquire waveforms leading up to the trigger event, set the horizontal position control to the maximum time setting. To acquire waveforms after the trigger event, set the horizontal position control to the minimum time setting.

The horizontal reference point is shown as a small inverted triangle.

TIP. Use the dedicated front-panel Position knob to change the horizontal position.

What do you want to do next?


- [Learn about the Horizontal Scale control. \(see page 677\)](#)

Horizontal Position/Scale Control Window: Scale

From the Horiz /Acq menu, select Position/Scale to open the [Horizontal Position/Scale control window \(see page 158\)](#).

Overview

The Horizontal Scale control adjusts the time base.

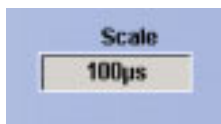

To Use

- Click in the Scale entry box and use the multipurpose knob or keypad to change the setting.

Behavior

The Scale control scales all live displayed waveforms at the same time.

The scale units depend on the waveform type. In most cases the horizontal units will be time. However, the horizontal units can also be frequency.

TIP. Use the dedicated front-panel Horizontal Scale knob to change the horizontal scale.

What do you want to do next?

- [Learn about the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the Acquisition Setup control window. \(see page 159\)](#)

Horizontal Reference Marker



Horizontal Delay Mode

Use the Horizontal Delay Mode button to delay the acquisition relative to the trigger event.

- When Horizontal Delay Mode is On, use the Acquisition Delay control to enter the delay time.
- You can also enter the delay time with the front-panel Horizontal Position knob.


TIP. The Horizontal Delay Mode button functions identically to the Delay Mode button in the Horizontal/Acquisition control window.

Horizontal Position/Scale Control Window: Horiz Delay

From the Horiz /Acq menu, select Position/Scale to open the [Horizontal Position/Scale control window \(see page 159\)](#).

Overview

The Horiz Delay control delays the acquisition relative to the trigger event.

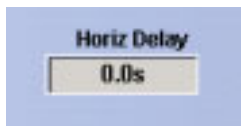

To Use

- Click Delay Mode On or push the front-panel Delay button to activate horizontal delay.
- Click in the Horiz Delay entry box and use the multipurpose knob or keypad to change the setting. You can also use the dedicated Horizontal Position knob on the front panel.

Behavior

The horizontal delay feature is useful when you want to acquire waveform details that are separated from the trigger event by a significant interval of time.

For example, you can trigger the instrument on a sync pulse that occurs once every 10 ms, and then look at the high-speed characteristics that occur 6 ms after the pulse.

TIP. A convenient way to use the horizontal delay is to make quick comparisons between two different points in time. Trigger the instrument on one area of interest and then set the horizontal delay to acquire the other area of interest. You can then toggle the horizontal delay on and off to compare details at the two points in time.


What do you want to do next?

- [Learn more about the Horizontal Position controls. \(see page 676\)](#)

Horizontal Position/Scale Control Window: Scale Delay On

From the Horiz /Acq menu, select Position/Scale to open the [Horizontal Position/Scale control window \(see page 159\)](#).

Overview

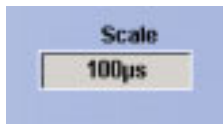

To Use

- Click in the Scale entry box and use the multipurpose knob or keypad to change the setting.

Behavior

Use the Scale control to adjust the time base. This control scales all live displayed waveforms at the same time. When horizontal delay is on, the scale expands or contracts around the horizontal reference point instead of the trigger point.

The scale units depend on the waveform type. In most cases the horizontal units will be time. However, the horizontal units can also be frequency.

TIP. Use the dedicated front-panel Horizontal Scale knob to change the horizontal scale.

What do you want to do next?

- [Learn more about the Horizontal Position controls. \(see page 676\)](#)
- [Learn about the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the Acquisition Setup control window. \(see page 159\)](#)


Acquisition Mode

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the [Acquisition tab \(see page 683\)](#).

The Acquisition Mode controls determine the method of acquisition.

To Use

- If you use Average or Envelope mode, select the number of waveforms for that mode using the multipurpose knob.
- If you use Waveform Database mode, use the multipurpose knob to select the number of samples.

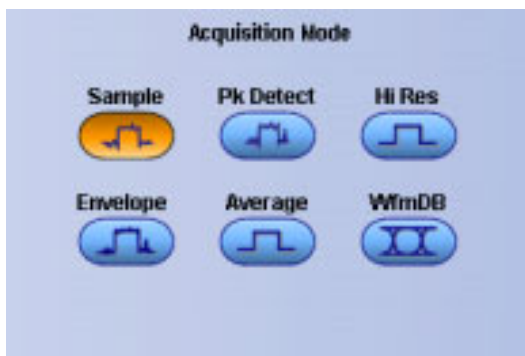

Behavior

A single waveform data point can be made up of several sequentially acquired data points. The waveform data points can also be created from a composite of sampled data taken from multiple acquisitions. The acquisition modes determine how the waveform data points are produced from the sampled data.

Sample. This mode creates a record point by saving one or more samples during each [acquisition interval](#) (see page 173). Sample mode is the default acquisition mode. The instrument does no post processing of acquired samples in this mode.

Pk Detect. Peak Detect mode alternates between saving the highest sample in one acquisition interval and the lowest sample in the next acquisition interval. Peak Detect mode only works with real-time, noninterpolated sampling.

Hi Res. High Resolution mode averages all samples taken during an acquisition interval to create a record point. This average results in a higher-resolution, lower-bandwidth waveform. This mode only works with real-time, noninterpolated sampling.

NOTE. A key advantage of Hi Res mode is its potential for increasing resolution regardless of the input signal. The following table indicates that you can obtain up to 15 significant bits with Hi Res mode. Note that the resolution improvements are limited to speeds slower than 40 ns/div.

Additional resolution bits

2.5 GS/s	8.5 bits	1.1 GHz
1 GS/s	9 bits	440 MHz
250 MS/s	10 bits	110 MHz
50 MS/s	11 bits	22 MHz
10 MS/s	12 bits	4.4 MHz
2.5 MS/s	13 bits	1.1 MHz
1 MS/s	14 bits	440 kHz
250 KS/s	15 bits	110 kHz
25 KS/s	>15 bits	11 kHz
250 S/s	>15 bits	110 Hz


Additional resolution bits

25 S/s	>15 bits	11 Hz
2.5 S/s	>15 bits	1.1 Hz

Envelope. This mode acquires and displays a waveform record that shows the extremes in variations over several acquisitions. The instrument saves the highest and lowest values in two adjacent intervals similar to Peak Detect mode. Unlike Peak Detect mode, the peaks are gathered over many trigger events.

After each trigger event, the instrument acquires data and then compares the minimum and maximum values from the current acquisition with those stored from the previous acquisition. The final display shows the most extreme values for all the acquisitions for each point in the waveform record.

Acquiring and displaying a noisy square wave signal illustrates the difference between the modes. Note how Average mode reduces the noise while Envelope mode captures its extremes:

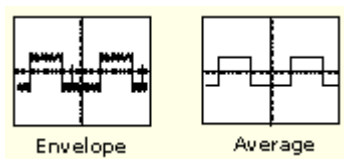

Average. This mode acquires and displays a waveform record that is the average result of several acquisitions. This mode reduces random noise. Use the multipurpose knobs to specify the number of waveforms that you want to average.

WfmDB. Waveform Database mode acquires and displays a waveform that is the accumulation of several acquisitions. In addition to time and amplitude, the waveform displays a count of the number of times a specific sample point has been acquired. The value at each point on the waveform is a counter that reflects the hit intensity. The instrument acquires data after each trigger event using Sample mode. It then determines the location of each sample point and accumulates it with shared data from previous acquisitions. This is the only mode that can be used when doing mask testing with an optical standard. Fast Acq is inhibited in Waveform Database mode.

What do you want to do next?

- [Learn about Fast Acquisitions mode. \(see page 164\)](#)
- [Learn about Roll mode. \(see page 166\)](#)

Horizontal/Acquisition Control Window (Acquisition Tab)

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the Acquisition tab.

Overview

Use the Acquisition tab to set the acquisition parameters for all live waveforms. The Acquisition controls are common to all channels. This means that you cannot acquire in Sample mode on channel 1 while channel 2 acquires in Envelope mode.

For information on the controls, click on the buttons.

- [Acquisition Mode \(see page 680\)](#)
- [Fast Acquisitions \(see page 164\)](#)
- [Roll Mode \(see page 166\)](#)
- [Sampling Modes \(see page 167\)](#)
- [FastFrame Control Windows \(see page 173\)](#)
- [External Signals Control Window \(see page 420\)](#)

Behavior

Acquisition is the process of sampling the analog input signal, digitizing the signal to convert it into digital data, and then assembling the signal information into a waveform record. The instrument creates a digital representation of the input signal by sampling the voltage level of the signal at regular time intervals. The sampled and digitized points are stored in memory along with the corresponding timing information. The instrument uses the digital representation of the signal for display, measurements, or for further processing.

Use the controls on this tab to define the sampling method, the acquisition mode, turn Fast Acquisitions on or off, and activate an external reference.

What do you want to do next?


- [Learn about Acquisition modes. \(see page 680\)](#)

Horizontal Delay and Horizontal Position

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the [Horizontal tab \(see page 155\)](#).

Overview

Use this control to select the amount of data that appears before the trigger event.

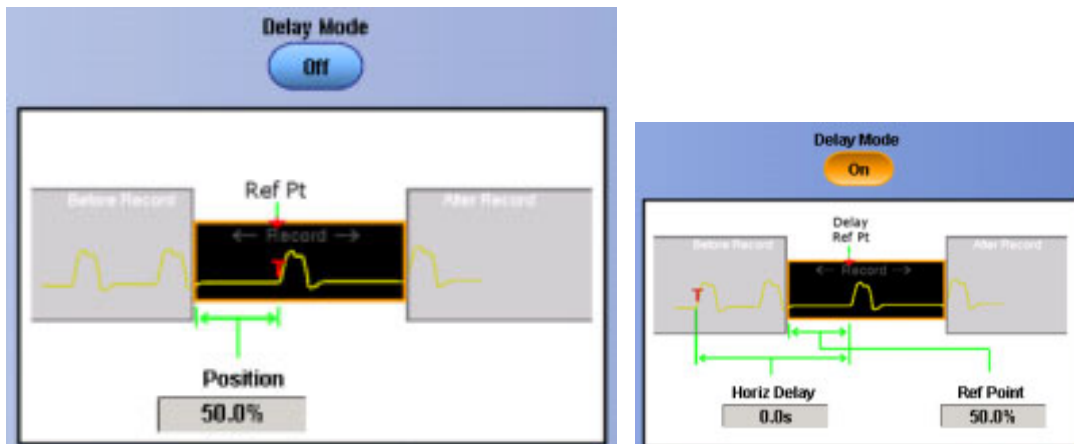

To Use

- Click to toggle Delay Mode Off, and then click in the Position entry box. Use a multipurpose knob or the front-panel Horizontal Position knob to set the horizontal position.
- Click to toggle Delay Mode On, and then click in the Horiz Delay (Horizontal Delay) or Ref Point (Reference Point) entry boxes. Use a front panel multipurpose knob or the keypad to set these values.

Behavior

The Position control moves the trigger point within the acquired waveform.

The Horiz Delay and Ref Point controls only appear when the Delay Mode is On. Horiz Delay enables the instrument to look for a trigger and then wait a specified time before acquiring data. This is useful when you know that the data you are interested in occurs a set time after the trigger.

Use the Ref Point control to specify the amount of pretrigger data. The reference point is represented on the screen by a small inverted triangle.

TIP. Use the dedicated Horizontal Delay button to turn the Horizontal Delay on and off. Or, use the Horiz/Acq menu Delay Mode On command.

You can also toggle the Horizontal Delay on and off to quickly compare signal details at two different areas of interest, one near the trigger location and the other centered at the delay time.

What do you want to do next?

- [Go to the Horizontal Setup control window. \(see page 155\)](#)
- [Return to the Acquisition Setup control window. \(see page 159\)](#)

Horizontal Control Window Readouts

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the [Horizontal tab](#) (see [page 155](#)).


Overview


Use the horizontal readouts, similar to those shown below, to obtain a quick overview of the horizontal settings.

 
NOTE. *You cannot change the Horizontal controls directly from the readouts.*


To Use

The readout values are determined by the Horizontal control settings. The type and number of readouts will change depending on the setup of the horizontal controls.

- Resolution Readout.  This readout displays the time between sample points. In most cases, the acquisition interval is the same as the resolution.

- Sample Rate Readout.  This readout displays the number of acquisition samples per second. The faster the sample rate, the more accurately the instrument can represent fine details in a fast signal.

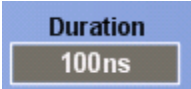- Duration Readout.  This readout displays the time to cross the 10-division screen.

- Record Length Readout.  This readout displays the number of samples that make up the waveform record.

- Digital Record Length.  This readout displays the number of samples that make up the digital waveform record.

NOTE. *Digital Record Length is available only on MSO5000 Series instruments and DPO5000 Series instruments with option MSOE.*

What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 683\)](#)

Horizontal Controls

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the [Horizontal tab \(see page 155\)](#).

 
Overview

Use the Mode controls to adjust the time base.


To Use

Click in a Horizontal Controls entry box to map it to one of the multipurpose knobs; then use the knob to change the value. You can also use the pop-up keypad to enter a value.

Horizontal controls

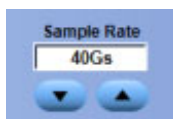


 Use this control to set the [sample rate \(see page 555\)](#) for the waveform record. In general, higher sampling rates produce more accurate measurements.

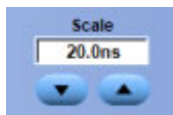

Use this control to adjust the scale of live waveforms, including math waveforms. Scale units depend on the waveform type; in most cases the horizontal units will be time, but they can also be frequency.

TIP. Use the dedicated front-panel Horizontal Scale knob to change the horizontal scale.

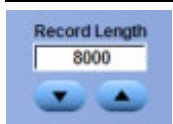

Use this control to define the length of the [waveform record \(see page 556\)](#). The record length is the number of sample points that make up the waveform record.

NOTE. Record lengths of less than 1000 samples are not supported.



Click this button to maximize the updated rate by setting a record length limit in the Set Record Length Limit dialog box. This feature is available in Automatic mode only.

Behavior

When you change the record length, you can choose to hold either the sample rate or the horizontal scale constant. The remaining variables will change in response to the record length changes.

Maximum record length depends on the following:

- The amount of memory.
- The ability to combine the memory length of unused channels.

NOTE. *Hi Res and Avg modes require twice the acquisition memory of other acquisition modes. When you select these modes, the instrument sets the record length accordingly to keep it from running out of memory.*

Delay Mode.

- When Delay Mode is Off the scale expands or contracts around the [trigger point \(see page 556\)](#).
- When Delay Mode is On the scale expands or contracts around the horizontal reference point.

Horizontal Zoom. You can use the [Horizontal Zoom control window \(see page 175\)](#) to change the horizontal scale and position of reference waveforms within the Zoom window(s).


What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 685\)](#)

I2C Addressing Mode

In the Addressing Mode drop-down list, select the bit addressing mode.

Increment/Decrement Buttons

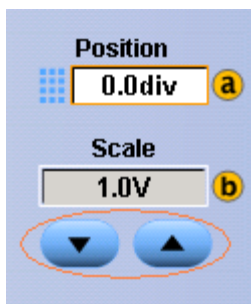

Installing Software

The instrument system and application software is pre-installed at the factory. If you have to reinstall the software for any reason, refer to the instruction manuals that accompanied the product.

Software Release notes

Read the software release notes (README.TXT) on the product software DVD before performing installation procedures. This file contains additional information that supersedes other product documentation.

To view the README.TXT file, start the Windows Notepad accessory and open the file from the product software DVD that came with your instrument.

Accessory Software

The product software DVD contains accessory software and files that you can install on the instrument or on another PC. Refer to the instructions that accompany the DVD for installation information.

Desktop Applications

You can install desktop application software on the instrument. The instrument has been tested with the following software products installed:

- Microsoft Office (Word, Excel, PowerPoint, etc.)
- MathCad
- MATLAB

Other software products may be compatible but have not been tested by Tektronix. If the instrument malfunctions after you install software, uninstall the software and then reinstall the instrument application to restore proper operation.

Before installing other desktop applications, exit the instrument application. To do this, click Exit on the File menu.

Interactions of Roll Mode and Other Instrument Settings

Roll mode can interact with other instrument settings:

- If Roll mode is on and you turn on Fast Acquisitions, Roll mode will be suppressed until you turn Fast Acquisitions off.
- If Roll mode is on, math waveforms and measurements are updated only after acquisition is stopped (when you manually stop an acquisition). If you stop an acquisition before a record is filled, the math waveform or measurements will be calculated on the partial data.
- Roll mode is only valid for real-time acquisition modes such as Sample, Peak Detect, and Hi Res. Roll mode is ignored in Average or Envelope acquisition modes.
- Deskew values are ignored when Roll mode is on.
- If you attempt to save a waveform when Roll mode is on, only the waveform points in the acquisition memory are saved.

IVI Drivers

IVI drivers conform to specifications produced by the IVI Foundation.

Unlike VXI-plugin drivers, IVI drivers provide a standard interface to different classes of instruments, including oscilloscopes and spectrum analyzers.

IVI drivers have the ability to simulate instruments, automatically check ranges, and multithread safety features.

Jitter 6 Sigma

Jitter 6 sigma is six times the RMS value of the edge jitter in the current horizontal units.

$$\text{Jitter 6 sigma} = 6 \times (\text{JitterRMS})$$

Jitter Peak-to-Peak

Jitter p-p is the peak-to-peak value for the edge jitter in the current horizontal units.

$$\text{Jitter PP} = \text{TCross1PP}$$

Jitter Root Mean Square

Jitter RMS is the RMS value of the edge jitter in the current horizontal units.

Jitter RMS = TCross 1sigma

Lock Mask

Lock Mask to Waveform resizes the mask to reflect changes in the horizontal or vertical settings of the instrument.

Logic Pattern

Select the Boolean logic function for the combination of the input channels. The instrument will trigger on a clock edge when the input waveforms match the specified logic pattern.

Logic Pattern Inputs

The instrument input channels represent the data inputs; the channel inputs combine to form a logic pattern.

Each channel can have a value of high (H), low (L), or "don't care" (X):

- A value is considered high if the channel input voltage is greater than the specified threshold voltage.
- A value is considered low if the channel input voltage is less than the specified threshold voltage.
- Use the "don't care" selection for any channels that will not be used as part of the pattern.

Logic Pattern Trigger Criteria

Use the Pattern drop-down list to determine when the instrument should trigger.

- Select True to trigger the instrument when the logic patterns are true.
- Select False to trigger the instrument when the logic patterns are false.

You can also specify that the pattern is true (or false) for a specified amount of time before the instrument triggers. To specify the time:

- Click in the Time entry box.
- Set the time with the multipurpose knob.


NOTE. *The Time control is unavailable when you select True or False.*

Logic Pattern and State Pattern Editor (Bus Tab)

NOTE. *The Logic Pattern and State Pattern Editor (Bus Tab) option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*

Use the controls to set up the Logic Pattern or the Logic State trigger pattern for the instrument to use to detect a bus value.

The maximum pattern size (number of bits) for Logic Pattern or Logic State trigger is 20 bits. The display pattern format is binary, hexadecimal, ASCII, or decimal. The pattern display format can also be symbolic. The binary pattern uses the symbols 0, 1, and X (it is a do not care bit and is not case-sensitive). The hexadecimal pattern uses the symbols 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F, and X. Five hexadecimal characters will convey all 20 digital inputs. The characters show up in the binary, hexadecimal, ASCII, and decimal fields. The non-selected entries are automatically populated with the correct data corresponding to what you enter in the selected entry field. An X is shown in the field when you do not enter enough characters.

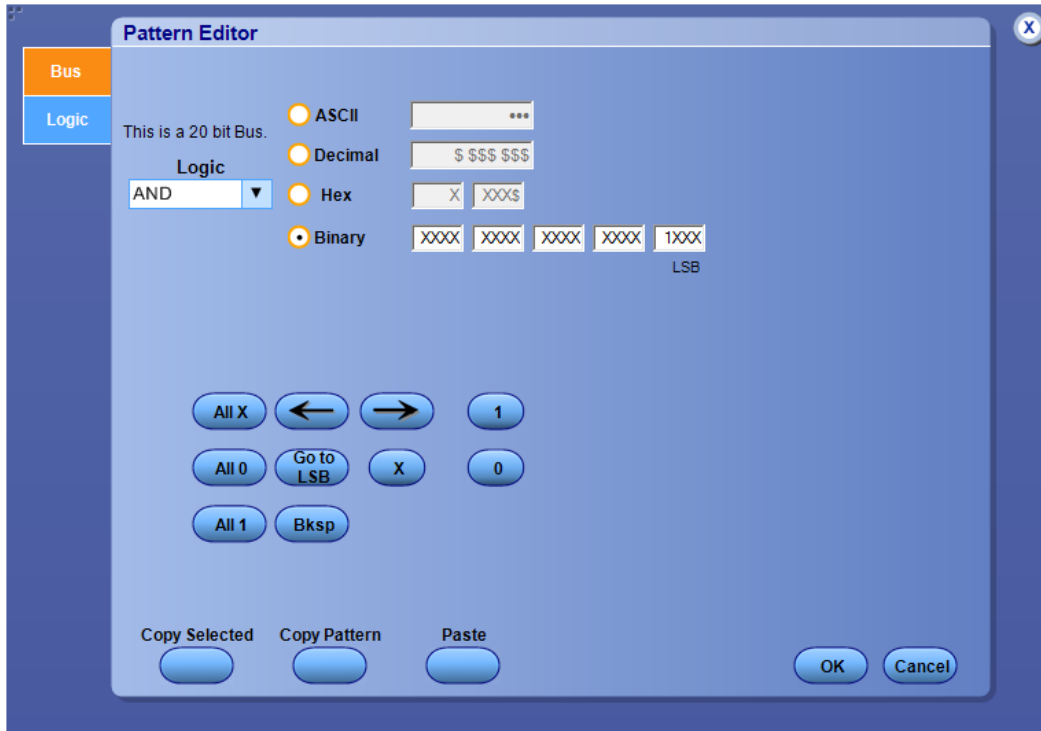


What do you want to do next?

- [Learn how to set the voltage threshold level for channels used as digital waveforms and to define a pattern. \(see page 693\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Logic Pattern and State Pattern Editor (Digital Tab)

NOTE. The Logic Pattern and State Pattern Editor (Logic Tab) option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.

Use the controls to set up the Logic Pattern or the Logic State trigger pattern of the channels the instrument uses as logic waveforms to detect a bus value.

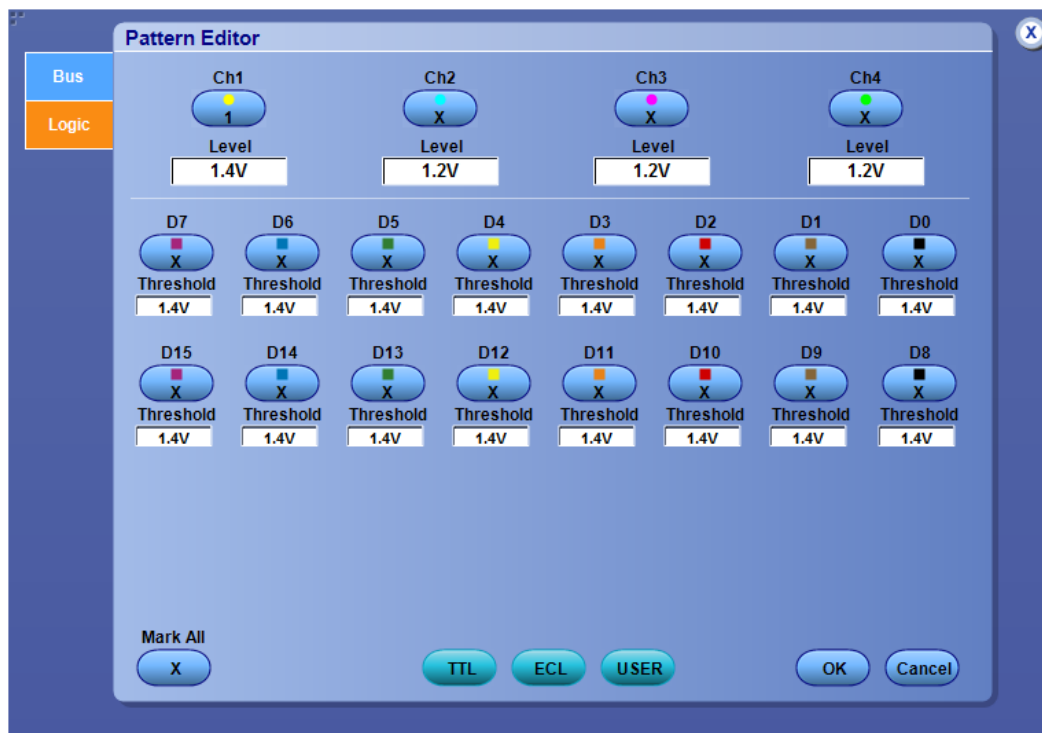

What do you want to do next?

- [Learn how to define a pattern for the instrument to use to detect a bus value. \(see page 691\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Logic Clock Inputs

NOTE. The Logic Clock Inputs option is available only on MSO5000 and MSO70000/C Series instruments and DPO5000 Series instruments with option MSOE.

For the supported instruments, you need to connect one of the channel inputs to a clock signal. The instrument combines all of the channel inputs to form a logic pattern.

The screenshot shows a configuration panel with three sections:

- Clock Source:** A dropdown menu with 'Ch 4' selected.
- Clock Level:** A text input field containing '1.2V'.
- When Clock is:** A dropdown menu with 'POS' selected.

Logic Pattern Format

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

Select the Logic Pattern or Logic State trigger type. You can change the format of the pattern after you define a logic pattern.

The screenshot shows a configuration panel for the Logic Pattern Format:

- A text input field containing '1XXX' with an 'Edit' button to its right.
- Labels 'D15' and 'D0 Ch1-Ch4' positioned below the input field.
- The text 'Maximum number of bits is 20. True if all bits match.' below the labels.
- A 'Format' dropdown menu with 'Binary' selected.

- ASCII causes the instrument to represent the bus pattern value as an ASCII value.
- Decimal causes the instrument to represent the bus pattern value as a decimal value.
- Hex causes the instrument to represent the bus pattern value as a hexadecimal value.
- Binary causes the instrument to represent the bus pattern value as a binary value.


Logic Pattern Setup

NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

Use the controls to set up the Logic Pattern or Logic State trigger pattern. Click the Edit button to access the Pattern Editor dialog box.

NOTE. The Logic Pattern or Logic State trigger setups include the D15-D0 digital channels.

For information on the Pattern Editor dialog box, click the buttons.

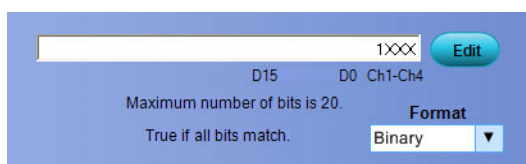

Logic State Inputs

Channels 1, 2, and 3 represent the data inputs. Channel 4 should be connected to the clock signal. The channel inputs combine to form a logic pattern.

Each channel can have a value of high (H), low (L), or "don't care" (X).

- A value is considered high if the channel input voltage is greater than the specified threshold voltage.
- A value is considered low if the channel input voltage is less than the specified threshold voltage.
- Use the "don't care" selection for any channels that will not be used as part of the pattern.

Logic State Trigger Criteria

Use the Trigger When Pattern selection to determine when the instrument should trigger.

- Select True to trigger the instrument when the logic patterns go true.
- Select False to trigger the instrument when the logic patterns go false.

Low

The low level measurement is the value used as 0% whenever high reference, mid reference, or low reference values are needed, such as in fall time or rise time measurements.

This value can be calculated using either the min/max or histogram method. The min/max method uses the minimum value found. The histogram method uses the most common value found below the midpoint. This value is measured over the entire waveform or gated region.

Low Impedance Probes

Most low impedance (Z_o) passive probes measure frequencies or timing measurements more accurately than general-purpose probes, but they take less accurate amplitude measurements. They offer a higher bandwidth to cost ratio.

The low input impedance passive probes must be terminated in a $50\ \Omega$ instrument input. Input capacitance is much lower than high impedance passive probes, typically 1 pF, but input resistance is also lower ($500\ \Omega$ to $5000\ \Omega$ typically). Although that DC loading degrades amplitude accuracy, the lower input capacitance reduces high frequency loading to the circuit under test. That makes low input impedance passive probes ideal for timing and phase measurements when amplitude accuracy is not a major concern. Low input passive impedance probes are useful for measurements up to 40 V.

Low Reference

The Low Reference defines the low reference level of a waveform; the default level is 10%. This reference level is used with the High Reference level in the calculation of rise and fall times. To change this level, click the control and then, set the level with the multipurpose knob.

Mask Autoset Autofit Control

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Setup control window, click the Autoset Config button.

Overview

Use this control to minimize hits.



To Use

Click the Autofit Once button to autofit the waveform after autoset is performed.

Behavior

When Autofit is turned on, the waveform is autofitted once at the end of every autoset. Autoset will take longer but hits will be minimized. Autofit will only move the signal if there are mask hits.

What do you want to do next?


- [Learn about trigger level autoset. \(see page 700\)](#)
- [Learn about vertical autoset. \(see page 701\)](#)
- [Learn about horizontal autoset. \(see page 698\)](#)

Mask Autoset Horizontal Controls

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Setup control window, click the Autoset Config button.

Overview

Use these controls to choose whether to have autoset affect the horizontal scale or position.

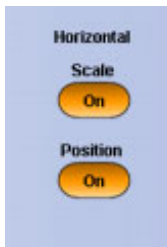

To Use

Click the Scale and Position controls to turn these horizontal control functions on or off.

Behavior

Turning on the Scale or Position horizontal control functions sets up these adjustments to align the signal within the mask when autoset is done.

What do you want to do next?

- [Learn about vertical autoset. \(see page 701\)](#)
- [Learn about trigger level autoset. \(see page 700\)](#)
- [Learn about autofit for autoset. \(see page 697\)](#)

Mask Autoset Mode

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Testing control window, click the Autoset Config button.

Overview

Use these controls to select whether autoset will be done automatically or manually.



To Use

- Click Auto to have autoset done automatically after a standard mask is selected.
- Click Manual to make adjustments manually.

Behavior

If Auto is selected, an autoset is done automatically after a standard mask is selected. The purpose of the manual autoset mode is to adjust everything that can be done without having any waveform data.

What do you want to do next?

- [Learn about trigger level autoset. \(see page 700\)](#)
- [Learn about vertical autoset. \(see page 701\)](#)
- [Learn about horizontal autoset. \(see page 698\)](#)
- [Learn about autofit for autoset. \(see page 697\)](#)

Mask Autoset Trigger Level Control

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Setup control window, click the Autoset Config button.

Overview

Use this control to choose whether to have autoset affect the trigger level.



To Use

Click the Trigger Level button to turn it off or on.

Behavior

When the Trigger Level control is turned on, the trigger levels are adjusted to match the signal when autoset is performed.

What do you want to do next?

- [Learn about autofit for autoset. \(see page 697\)](#)
- [Learn about vertical autoset. \(see page 701\)](#)
- [Learn about horizontal autoset. \(see page 698\)](#)

Mask Autoset Vertical Controls

From the Mask menu, highlight Mask Configure; then select Autoset. From the Mask Setup control window, click the Autoset Config button.

Overview

Use these controls to choose whether to have autoset affect the vertical scale or position. You can also choose whether to have autoset affect DC compensation.



To Use

Click the Scale, Position, and DC Compensation controls to turn these vertical control functions on or off.

Behavior

Turning on the Scale, Position, or DC compensation sets these vertical adjustments up to be performed on an autoset.

What do you want to do next?

- [Learn about horizontal autoset. \(see page 698\)](#)
- [Learn about trigger level autoset. \(see page 700\)](#)
- [Learn about autofit for autoset. \(see page 697\)](#)

Mask Hit Count

Each mask can have a maximum of 16 segments. Segments can overlap. The number of mask hits is the sum of all hits in all segments, regardless of whether or not segments overlap. If a waveform crosses over an area where two segments overlap, both segments will count the waveform hit.

When you set Hit Count to on, the counts will appear in the [Pass/Fail Test Summary \(see page 197\)](#).

Mask Menu

Use the Mask menu commands to setup or edit or a user mask.


Math Arbitrary Filters

This section describes the library of FIR filters that are available for use under the ArbFilt <x>(< fsource waveform>) function in the Tektronix oscilloscope waveform math section. The user may find this under the path: C:\TekScope\Math Arbitrary Filters\<>filename>. The filename of each filter identifies its type as low pass, high pass, etc and also identifies its normalized cutoff frequency or other identifying factors. The precise magnitude characteristics of these filters are shown in the following graphs. These are all linear phase filters.

You can use the [Math Equation Editor \(see page 231\)](#) to set up a waveform filter.

Low Pass Filters

The following graphs show the available set of low pass filters. Their normalized frequency response is shown from 0 to $\frac{1}{2}$ the sample rate. These filters will operate at any sample rate with cutoff frequency scaled as shown below on the graphs. The filters have normalized cutoff frequencies of 0.05, 0.1, 0.15, 0.20, 0.25, 0.3, 0.35, 0.40, and 0.45. Stop band rejection is typically between -50 and -60 dB.

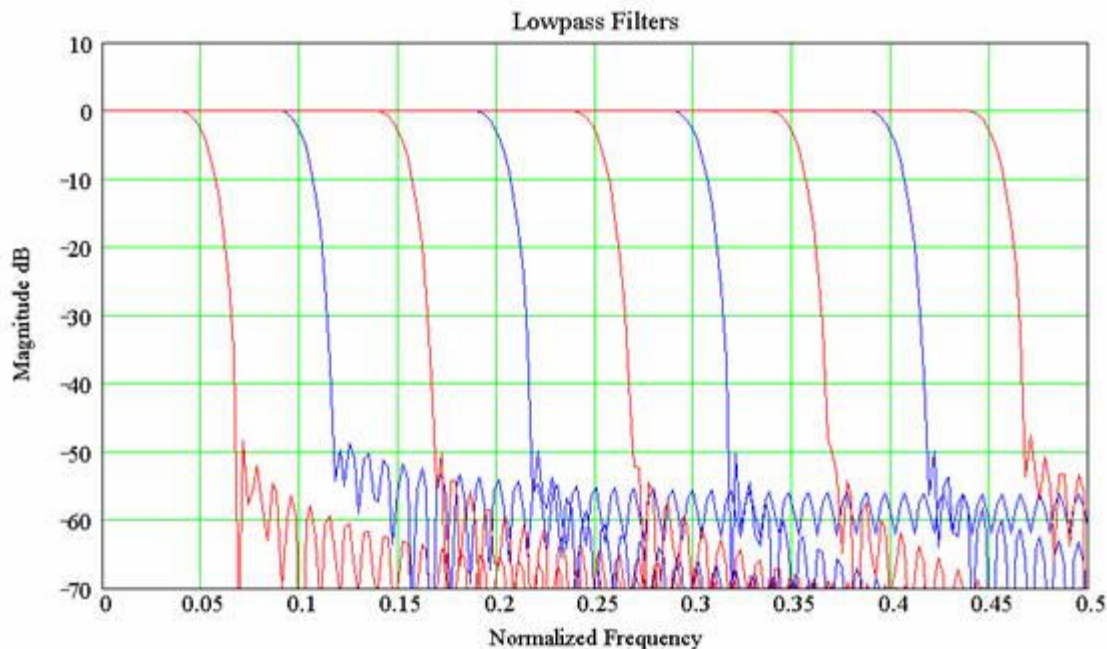


Frequency response of the available low pass filters

The following table lists the available low pass filters:

File name	Normalized cutoff frequency
lowpass_0.05bw.fl	0.05
lowpass_0.10bw.fl	0.10
lowpass_0.15bw.fl	0.15
lowpass_0.20bw.fl	0.20
lowpass_0.25bw.fl	0.25
lowpass_0.30bw.fl	0.30
lowpass_0.35bw.fl	0.35
lowpass_0.40bw.fl	0.40
lowpass_0.45bw.fl	0.45

High Pass Filters

The following graphs show the available set of high pass filters. Their normalized frequency response is shown from 0 to $\frac{1}{2}$ the sample rate. These filters will operate at any sample rate with cutoff frequency scaled as shown below on the graphs. The filters have normalized cutoff frequencies of 0.05, 0.1, 0.15, 0.20, 0.25, 0.3, 0.35, 0.40, and 0.45. Stop band rejection is typically between -50 and -60 dB.

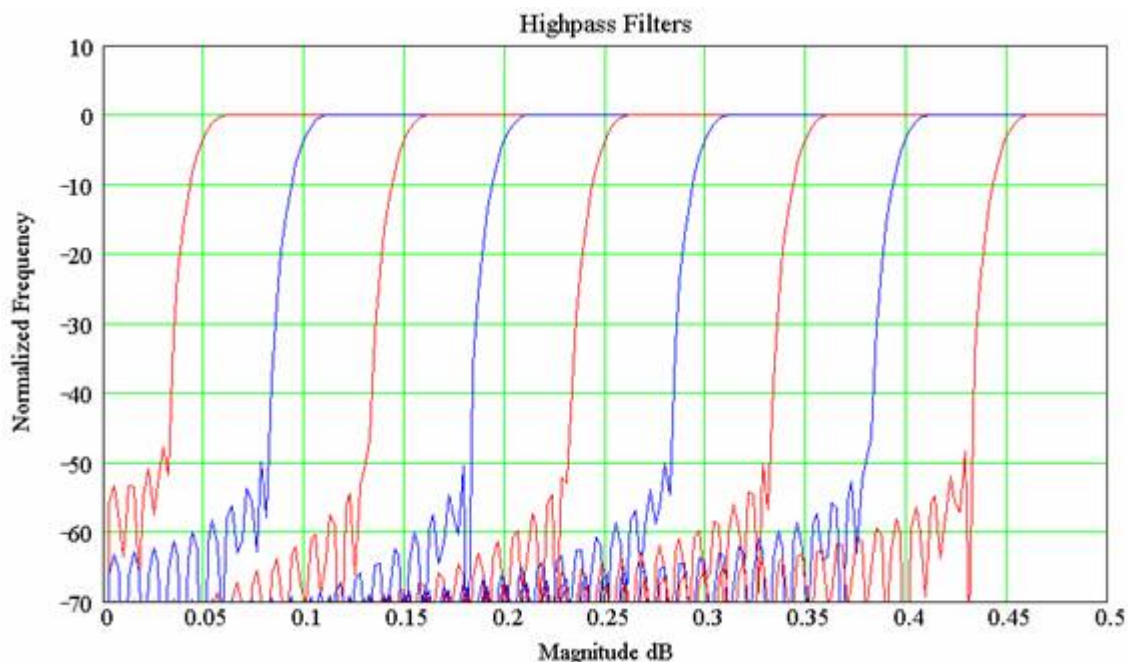


Frequency response of the available high pass filters

The following table lists the available high pass filters:

File name	Normalized cutoff frequency
highpass_0.05bw.flr	0.05
highpass_0.10bw.flr	0.10
highpass_0.15bw.flr	0.15
highpass_0.20bw.flr	0.20
highpass_0.25bw.flr	0.25
highpass_0.30bw.flr	0.30
highpass_0.35bw.flr	0.35
highpass_0.40bw.flr	0.40
highpass_0.45bw.flr	0.45

Band Pass Filters

Each filter has a bandwidth of 0.05 times the sample rate. They will operate at any sample rate. The available center frequencies are 0.05, 0.10, 0.15, 0.20, 0.25, 0.30, 0.35, 0.40, 0.45. Stop band attenuation is approximately -60 dB and pass band ripple is around 1dB.

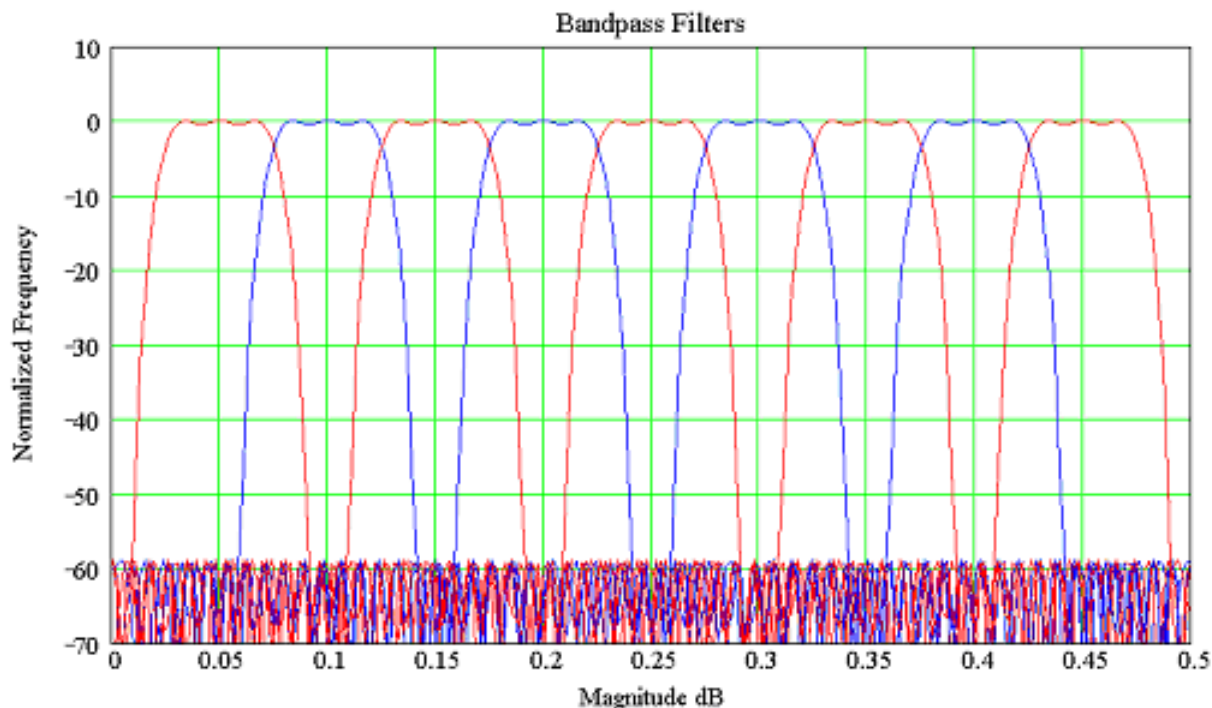


The following table lists the available normalized band pass filters:

File name	Normalized bandwidth	Normalized center frequency
bandpass_0.05bw_0.05center.ftl	0.05	0.05
bandpass_0.05bw_0.10center.ftl	0.05	0.10
bandpass_0.05bw_0.15center.ftl	0.05	0.15
bandpass_0.05bw_0.20center.ftl	0.05	0.20
bandpass_0.05bw_0.25center.ftl	0.05	0.25
bandpass_0.05bw_0.30center.ftl	0.05	0.30
bandpass_0.05bw_0.35center.ftl	0.05	0.35
bandpass_0.05bw_0.40center.ftl	0.05	0.40
bandpass_0.05bw_0.45center.ftl	0.05	0.45

Band Stop Filters

Each filter has a bandwidth of 0.1 times the sample rate. They will operate at any sample rate. The available center frequencies are 0.10, 0.15, 0.20, 0.25, 0.30, 0.35, and 0.40. Stop band attenuation is approximately -110 dB, however, the noise floor of the oscilloscope will not allow for that depth.

With an FFT and long record length, and averaging turned on, one can approach noise floors in the -110 dBm range on an 8-bit oscilloscope. However, the oscilloscope will have some spurious signals above that floor. This is possible because the FFT is an average calculation internally and the averaging function increases the vertical bits of resolution.

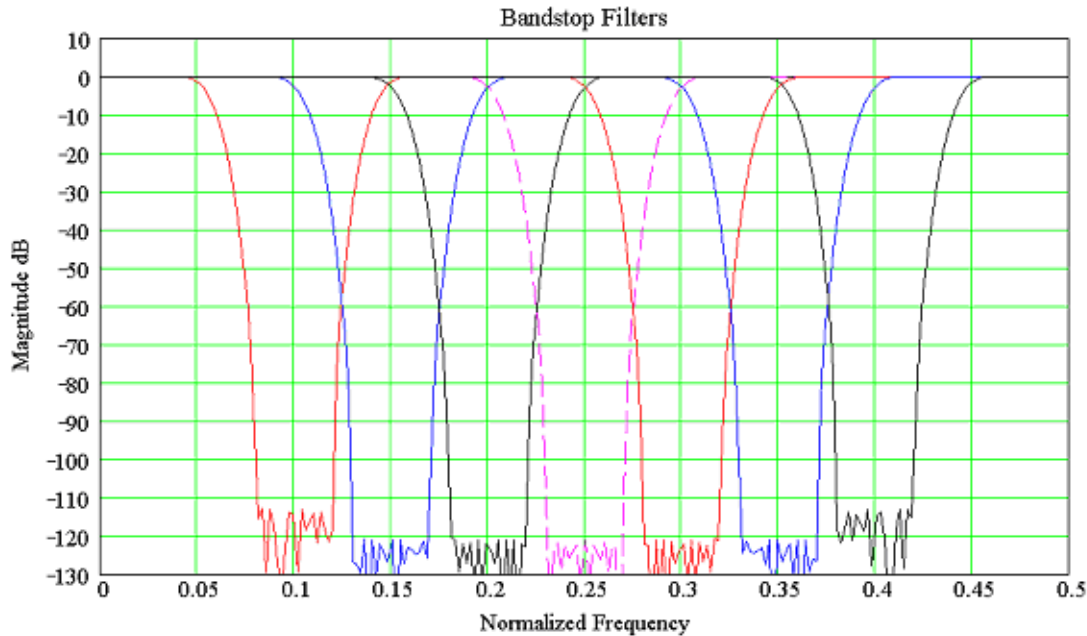

Frequency response of the available band stop filters


The following table lists the available normalized band stop filters:

File name	Normalized bandwidth	Normalized center frequency
bandstop_0.1bw_0.10center.flt	0.1	0.10
bandstop_0.1bw_0.15center.flt	0.1	0.15
bandstop_0.1bw_0.20center.flt	0.1	0.20
bandstop_0.1bw_0.25center.flt	0.1	0.25
bandstop_0.1bw_0.30center.flt	0.1	0.30
bandstop_0.1bw_0.35center.flt	0.1	0.35
bandstop_0.1bw_0.40center.flt	0.1	0.40

Smoothing Filters

These are sometimes called box car filters. They simply average together adjacent samples along the time record. The filter coefficients for these filters are all equal to $1/M$ where M is the length of the filter. The name of the files indicates the length of the smoothing filter.

Smoothing filters are low pass filters with a somewhat less than optimal stop band characteristic. However, they are commonly used to remove high frequency noise from a displayed trace. Take care in using to insure that the pass band of the signal you are filtering is well within the pass band of the filter you choose. That will insure that only noise is removed. Lengths of 3, 5, 10, 20, 50, 100, and 200 are provided in the library. The red trace is for filter length 3, followed by blue trace at 5, followed by magenta trace for 10, and so on.

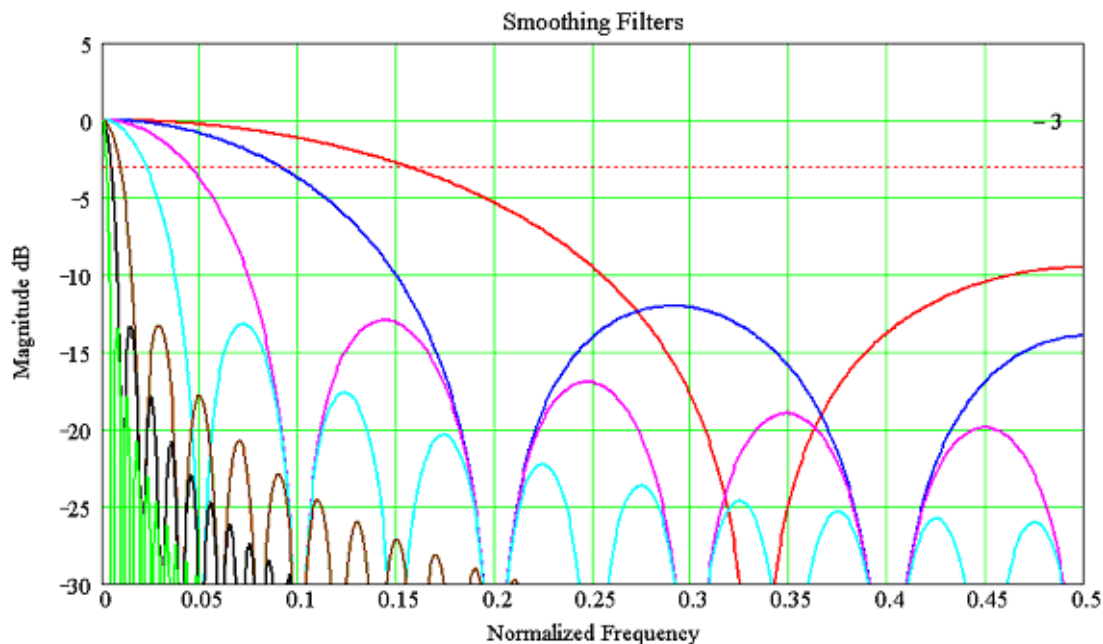


Frequency response of the available smoothing filters

The following table lists the available smoothing filters:

File name	Length	Normalized bandwidth	Stop band attenuation dB
smooth3.ftt	3	0.1558	-9.4
smooth5.ftt	5	0.0903	-12
smooth10.ftt	10	0.0446	-12.9
smooth20.ftt	20	0.0224	-13.2
smooth50.ftt	50	0.00887	-13.2
smooth100.ftt	100	0.0045	-13.2
smooth200.ftt	200	0.0022	-13.2

Hilbert Transform Filter


The ideal Hilbert transform filter has a gain of one at all frequencies and shifts the phase of all frequencies by 90 degrees. This type of filter is one of the types that may be specified in the Remez Exchange algorithm. This filter departs from its desired behavior in the frequency range of 0 to 0.025 times the sample rate and also in the range of about 0.475 to 0.5 times the sample rate. This type of filter can be used to create quadrature signals over a wide frequency range. The filename for this filter is HilbertTransform90PhaseShift.ftt.

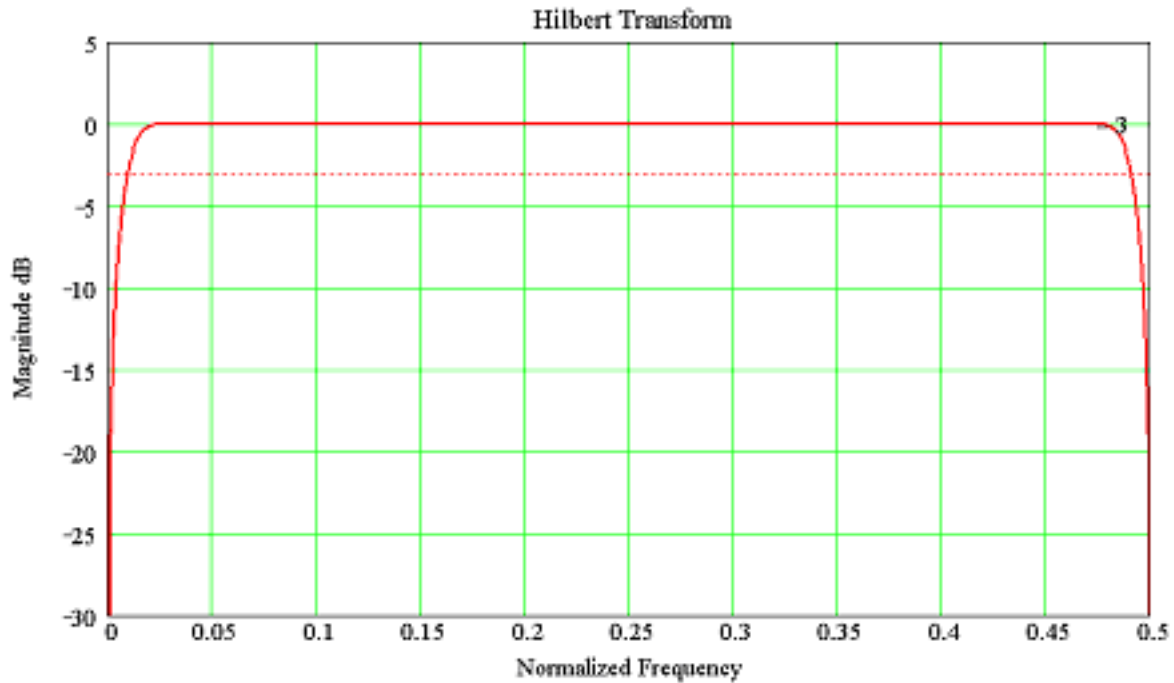

Frequency response of the Hilbert transform filter

Differentiator

The ideal differentiator is a high pass filter that shifts phase by 90 degrees and its' frequency response would be linear from DC to 0.5. Since this is not easily realized, the filter provided in the library makes a good differentiator for the frequency range of DC to 0.45.

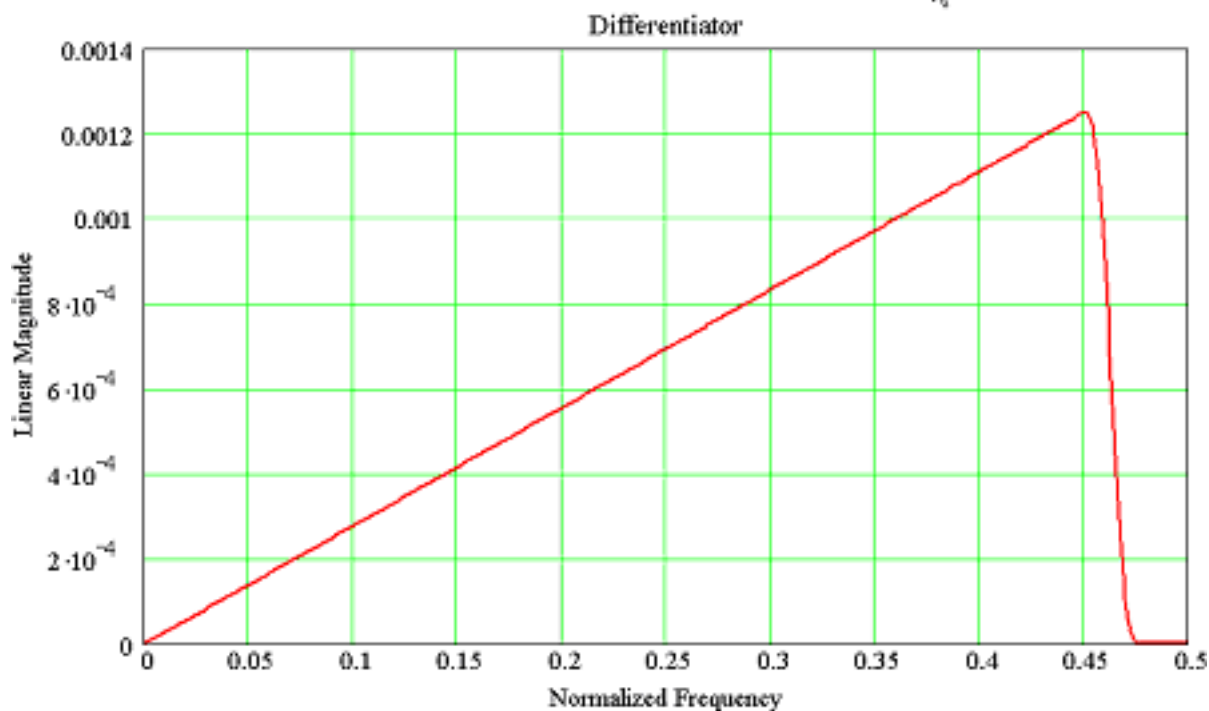

Frequency response of the differentiator filter

This section describes the ASCII file format for storing filters for use in the Tektronix oscilloscope waveform math section. A filter menu function allows the user to specify a disk file name containing the filter. A single file format allows the user to specify a different set of coefficients for each sample rate that the filter operates at. If the desired sample rate is not in the file list, then the filter will not be applied to the data. The file format also allows the user to specify that the set of filter coefficients is normalized. This allows the same set of filter coefficients to operate at all sample rates.

The ASCII file format is specified as follows:

```
# Comments are preceded by # symbol
< sampleRate > coef1, coef2, ..., coefN
< sampleRate > coef1, coef2, ..., coefN
| |
| |
< sampleRate > coef1, coef2, ..., coefN
```

Each set of filter coefficients in a file are specified in one row preceded by the sample rate value at which that set will operate. If the user specifies the @ symbol for the sample rate then the filter will operate at all sample rates. If the @ symbol is specified then there should only be one set of filter coefficients in the file. However, the user may have other rows with sample rates specified and they will be ignored. There will be a separate row for each sample rate the filter is to operate at. Each row may have a different number of coefficients with a maximum of 1000. The file may contain up to 20 rows.

An example of file content for a normalized filter is shown below. This example is the contents of the smooth5.ftt file:

```
@ 0.2, 0.2, 0.2, 0.2, 0.2
```

An example of a filter that is setup to operate at a specific sample rate is given as follows. This is the contents of a file named 200MHz_mult_sample_rates.ftt that is included in the library directory on the oscilloscope.

```
#This is a 4th order Bessel Thompsen low pass filter.
#200MHz bandwidth, will operate at any of the following sample rates:
# 40 GS/s, 20 GS/s, 10 GS/s, 5 GS/s, 2.5 GS/s, 1 GS/s, 500 MS/s
5e8; 1.968e-007,1.008,-0.00978,0.002267,-0.0002208,1.643e-005,-1.397e-
006,1.434e-007
1e9; 9.524e-008,0.3899,0.4877,0.1304,-0.004733,-0.004566,.....
2.5e9; 3.868e-008,0.01885,0.1081,0.1982,0.2284,0.1981,.....
5e9; 1.935e008,0.0007332, 0.009428, 0.02874, 0.05408, 0.07921, .....
1e10; 9.673e-009,3.445e-006,0.0003666,0.001831,0.004714,0.008978,0.01437,0.....
.....
2e10; 4.837e-009, 1.657e-008, 1.723e-006, 4.274e-005, 0.00018334-009, .....
4e10; 2.418e-009, -3.524e-009, 8.284e-009, -1.795e-008,8.613e-007, .....
```

Math Equation Editor: Controls

From the Math menu, select Equation Editor, or click the Editor button in the Math Setup or Spectral Setup control windows.

To Use

- Select a Math <1-4> waveform from the drop-down list.
- Click in the readout field to enter the math expression.
- Click a button to enter its character or operator into the expression.
- Click the Editor button and use the Math Equation Editor controls to insert numerals, math operators, and variables into a math expression.
- Use the [Text Edit Controls \(see page 225\)](#) to move the insertion point (cursor) within the expression.

Behavior

The characters are entered into the math expression one at a time.

What do you want to do next?

- [Learn about the Math Setup controls. \(see page 209\)](#)
- [Learn about averaging math waveforms. \(see page 210\)](#)

Math Equation Editor: Display

From the Math menu, select Equation Editor, or click the Editor button in the Math Setup or Spectral Setup control windows.

To Use

- Click Off/On to turn the math waveform display on and off.
- Click Avgs to open the [Adjust Math Parameters \(see page 210\)](#) control window. Use this window to define the number of times you want to average the selected math waveform.

Behavior

These controls only affect the selected math waveform.

What do you want to do next?

- [Learn about the Equation Editor. \(see page 223\)](#)

Math Menu

Math menu options enable you to perform mathematical operations on waveforms, build algebraic expressions, perform math-on-math operations, analyze histograms, or use advanced spectral analysis.

Math Display and Vertical Controls

From the Math menu, select Math Setup.

To Use

- Click a Math <1-4> tab to identify a math waveform.
- Click in the Math <1-4> = data entry field to enter the math expression or select a [predefined expression \(see page 742\)](#).
- Click Off/On to turn the math waveform display on and off.
- Click Avgs to open the [Adjust Math Parameters \(see page 210\)](#) control window. Use the Math Parameter control window to define the number of times that you want to average the selected math waveform.

- Click in the Vertical Control entry boxes and use the multipurpose knobs to change the vertical position and scale of the selected math waveform.
- Use the Label entry box to attach a meaningful label to the waveform.
- Use the Units to assign custom vertical units for each math waveform.
- Click the Digital Properties button and open the [Digital Threshold Setup \(see page 652\)](#) menu to set the thresholds for each channel or math waveform.

Behavior

These controls only affect the selected math waveform. The Position control increases or decreases the vertical position of the waveform one pixel at a time. The Scale control changes the displayed waveform only; it has no effect on the acquisition hardware.

TIP. *To open the Math Equation Editor, double-click in the math expression field or click the Editor button.*

What do you want to do next?

- [Learn about the Equation Editor. \(see page 223\)](#)

Maximum

This voltage measurement is the maximum amplitude. It is typically the most positive peak voltage and is measured over the entire waveform or gated region.

Mean

This voltage measurement is the arithmetic mean over the entire waveform or gated region.

Histogram Measurements


From the Measure menu, select Measurement Setup; then open the Histog tab.

To Use

Use the Histog tab to select automatic histogram measurements.

1. Select a source with the [Channels Selector](#) (see page 224).
2. Click a Measurements button to add a Histogram measurement to the Measure list:

WfmCt (see page 713)	Median (see page 714)	Pk-Pk (see page 714)	U+ /-1S (see page 715)
Hits in Box (see page 714)	Max (see page 714)	Mean (see page 714)	U+ /-2S (see page 715)
Peak Hits (see page 714)	Min (see page 714)	St Dev (see page 714)	U+ /-2S (see page 715)

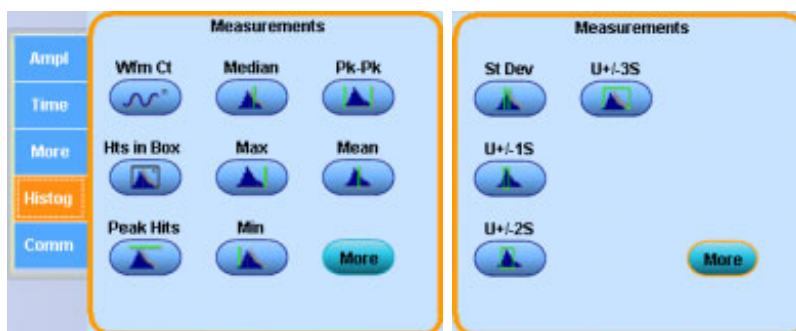

3. Click Display On in the upper-right corner of the [Measurement Setup Control Window](#) (see page 255) to turn the measurement display on and off.

Behavior

Measurements are updated approximately three times a second, or less for long record lengths. Measurements are calculated after each acquisition. You can display up to eight automatic measurements.

TIP. Select the individual measurements directly from the Measure menu Histogram Measurements submenu.

What do you want to do next?

- [Learn about taking amplitude measurements.](#) (see page 236)
- [Learn about taking timing measurements.](#) (see page 239)
- [Learn about other measurements.](#) (see page 247)
- [Learn about communications measurements.](#) (see page 244)
- [Learn more about the Measurements list.](#) (see page 715)
- [Learn more about the Measurement controls.](#) (see page 252)

Waveform Count

Displays the number of waveforms that have contributed to the histogram.

Hits in Box

Displays the number of points in or on the histogram box.

Peak Hits

Displays the number of points in the largest bin of the histogram.

Median

The middle point of the histogram box. Half of all acquired points within or on the histogram box are less than this value and half are greater than this value.

Histogram Max

Displays the voltage of the highest nonzero bin in vertical histograms or the time of the rightmost nonzero bin in the horizontal histograms.

Histogram Min

Displays the voltage of the lowest nonzero bin in vertical histograms or the time of the leftmost nonzero bin in the horizontal histograms.

Pk-Pk

Displays the peak-to-peak value of the histogram.

- Vertical histograms display the "voltage" of the highest nonzero bin minus the "voltage" of the lowest nonzero bin.
- Horizontal histograms display the "time" of the rightmost nonzero bin minus the "time" of the leftmost nonzero bin.

Histogram Mean

Measures the average of all acquired points within or on the histogram box.

StdDev (Standard Deviation)

The standard deviation (Root Mean Square (RMS) deviation) of all acquired points within or on the histogram box.

Mean±1 StdDev
The percentage of points in the histogram that are within one standard deviation of the histogram mean.

Mean±2 StdDev
The percentage of points in the histogram that are within two standard deviations of the histogram mean.

Mean±3 StdDev
The percentage of points in the histogram that are within three standard deviations of the histogram mean.

Measurement List

From the Measure menu, select Measurement Setup.

To Use

- To add a measurement to the list, select the waveform type (Channel, Math, or Reference), and then click one of the Measurements buttons.
- To delete a measurement, select the measurement, and then click Clear Selected.
- To delete all measurements, click Clear All.
- Click Annotations to quickly select a measurement already included in the listed.
- Click Display in the upper-right corner of the control window to turn the measurement displays on and off.



Measure	Source

Behavior

This list contains your selected automatic measurements. You can add up to eight automatic measurements to the list. The measurements appear on the main screen when the Display button is On.

When you click Clear without selecting a measurement, the last measurement in the list is deleted.

TIP. To quickly move the measurements from one channel to another, select all of the measurements in the list (click the first measurement, hold the left mouse button, and drag the mouse to the last measurement), and then select a new channel from the Source control. Similarly, you can change all of the measurements from one type to another if you select all the measurements in the list and click on a single measurement button.

What do you want to do next?

- [Learn more about the Measurement controls. \(see page 252\)](#)
- [Return to the Measurement Setup control window overview. \(see page 234\)](#)

Measurement Menu

Use Measurement menu commands to select from and set up a variety of automatic measurements. Commands are also available on this menu for further in-depth analysis, gating (bounding), statistics, communication, and histograms.

Mid2 Reference

The Mid2 reference defines the middle reference used on the second waveform specified in delay or phase measurements; the default level is 50%. To change this level, click the control, and then set the level with the multipurpose knob.


Mid Reference

The Mid reference defines the middle reference level of a waveform; the default level is 50%. This reference value is primarily used for making measurements between edges such as pulse widths. To change this level, click the control, and then set the level with the multipurpose knob.

Minimum

This voltage measurement is the minimum amplitude. It is typically the most negative peak voltage and is measured over the entire waveform or gated region.

Graphic Indicator

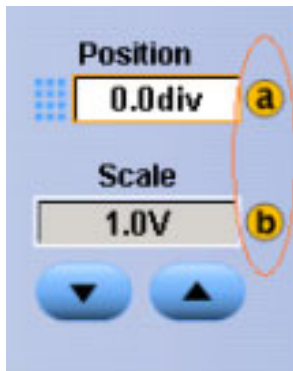

MyScope Menu

Use the MyScope Menu to create a new MyScope control window, open or edit an existing one, display the active MyScope window, or recall recently used ones.

Natural Antilog

1. Inserts the text EXP() into the math expression.
2. Enter an argument to the function.

The natural antilog function raises *e* to the power of the argument.

Negative Duty Cycle

This timing measurement is the ratio of the negative pulse width to the signal period expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) \div \text{Period}) \times 100\%$$

Negative Overshoot

This voltage measurement is measured over the entire waveform or gated region and is expressed as:

$$\text{Negative Overshoot} = (\text{Low} - \text{Minimum}) \times \text{Amplitude} \times 100\%$$

Negative Width Measurement

This timing measurement is the distance (time) between the mid reference (default 50%) amplitude points of a negative pulse.

The measurement is made on the first pulse in the waveform or gated region.

Noise Peak-to-Peak

Noise p-p is the peak-to-peak value of the noise of the top or base of the signal as specified by you.

To ensure accurate noise values, be sure to set the signal type to Eye when measuring an Eye signal.

Noise Pk-Pk = PToppk-pk or PBasepk-pk

Noise Root Mean Square

Noise RMS is the RMS value of the noise of the top or base of the signal as specified by you.

To ensure accurate noise values, be sure to set the signal type to Eye when measuring an Eye signal.

Noise RMS = PTopsigma or PBasesigma

Normal Trigger Mode

Normal trigger mode causes the instrument to wait for a valid trigger event before displaying waveform data. Normal trigger mode is most useful during single-shot acquisitions.

Nyquist Frequency

The highest frequency that any digital oscilloscope can measure without errors is one-half of the sample rate or frequency. This frequency is called the Nyquist frequency.

The FFT waveform displays the input signal frequency components from DC (0 Hz) to the Nyquist frequency.

AutoScroll Control Window

From the Vertical or Horiz /Acq menu, select Zoom Controls; then open the Scroll tab.

Overview

Use the AutoScroll control window to set the scroll speed and lock zoomed areas together.



To Use

- To scroll a single zoomed area, open the Zoom tab and select the zoom area (1–4).
- Open the Scroll tab and click an Auto Scroll arrow button.
- Click in the Scroll Speed entry box, and then use a multipurpose knob to set the scroll speed.
- To scroll multiple zoomed areas simultaneously, click Lock, and then click the zoomed areas (1–4) you want to scroll through. This locks the zoomed areas in their relative horizontal positions.

Behavior

If the zoom areas are unlocked, the Horizontal Position and Factor controls affect only the selected zoom area. The Horizontal Position and Factor will affect all zoom areas that are locked together, such that a change to one zoom area will change the horizontal position and factor of all the locked zoom areas.

What do you want to do next?

- [Learn about the Zoom Setup controls. \(see page 175\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)
- [Return to the Horizontal Setup control window. \(see page 155\)](#)
- [Learn about the Zoom Control window. \(see page 357\)](#)

Cursor Position Control Window: XY Display

From the Cursor menu, select Cursor Position.

Overview

Use the Cursor Position control window to position the cursors with the multipurpose knobs.



To Use

1. Click the Source drop-down list to select the measurement source for the cursor.
2. Click in one of the cursor position entry boxes and use a multipurpose knob to enter the cursor position.

Behavior

The cursor units depend on the cursor type. The cursor position readouts appear on the display graticule. When using the IRE graticule style, amplitude cursor readouts are shown in IRE units.

Cursor position does not change if the cursor source changes or if the waveform is repositioned.

TIP. Use the pop-up keypad or your external keyboard to specify exact numerical cursor coordinates.

What do you want to do next?

- [Learn about the Cursor Setup controls. \(see page 65\)](#)
- [Learn about the cursor types. \(see page 72\)](#)

Display Persistence Controls

From the Display menu, highlight Display Persistence; then select Persistence Controls.

To Use

Click one of the buttons to select the display persistence.

- Click Infinite (persistence) to continuously accumulate record points on the waveform until you change one of the acquisition display settings.
- Click Variable; then click in the Time entry box and use the multipurpose knobs to set the persistence time.
- Click Reset to clear the persistence.
- Click Controls to activate the Persistence Control window.
- Click Setup to open the Display control window.



Behavior

- Use infinite persistence for displaying record points that may occur outside the normal acquisition envelope.
- Use Variable to accumulate record points on the waveform for a specified time interval. Each record point decays independently according to the time interval.
- If you click Off, the waveform record points appear for the current acquisition only.

TIP. Use the Display menu Display Persistence submenu or right-click in the graticule and select Display Persistence from the shortcut menu to directly access the persistence options.

What do you want to do next?


- [Learn about changing the display colors. \(see page 144\)](#)
- [Learn about using text with screen displays. \(see page 140\)](#)
- [Learn about changing the appearance of objects in the display. \(see page 143\)](#)

FastFrame Control Window - Analyze Tab

From the Horiz /Acq menu, select FastFrame; then open the Analyze tab.

Overview

Use the [FastFrame Control Window \(see page 173\)](#) Analyze tab to select the viewing [frame \(see page 724\)](#) (Selected Frame) when FastFrame is turned on. You can also select the reference frame.

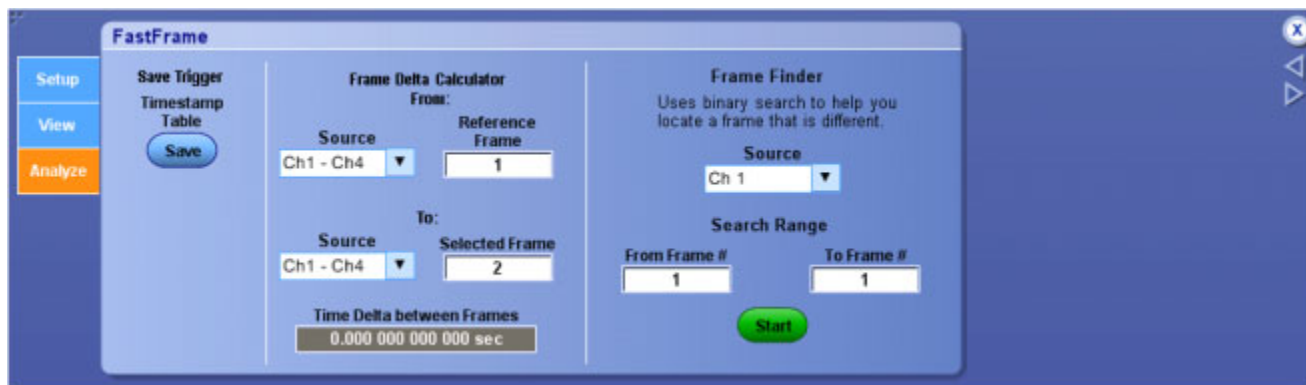

To Use

1. Select the Source channel from the drop-down list, and then use the multipurpose knob to select the Reference Frame.
2. Select the Source channel from the drop-down list, and then use the multipurpose knob to identify the Selected Frame.
3. Click the [Timestamp \(see page 175\)](#) Table Save button to display the Save As dialog box and save FastFrame time stamps in a table format.

Behavior

The Selected Frame displays the frame of interest. The Selected Frame can use any Channel, Math, or Reference waveform as the source waveform. The instrument will display one frame at a time. You can use the Selected Frame control to scroll through all of the frames until you find the frame of interest.

TIP. Use the Reference frame to establish a reference frame when using time stamps. You can view the time stamps by turning on the readouts.

Time Delta between Frames

You can calculate the Time Delta (differences) between Frames and display those differences. These time stamps are displayed in a [format \(see page 724\)](#) that shows the date and time. The Timestamp Table displays the current time stamps and readout information. This table is read-only.

Frame

A frame is a segment of the entire data record. When used with FastFrame, each segment contains all of the data of a single acquisition. Each captured event is stored sequentially in its own frame. The frames appear in the order they were captured.

Time Stamp Readout Format

The Time Stamp readouts are displayed in the following format:

Day/Month/Year/ Hours/Minutes/Seconds/ Milliseconds/Microseconds/Nanoseconds/Picoseconds

Frame Finder

Set up the Frame Finder to search for individual frames; then click Start to initiate the search.

What do you want to do next?


- [Go to the Horizontal Setup control window. \(see page 155\)](#)
- [Return to the Acquisition Setup control window. \(see page 159\)](#)

FastFrame Control Window - Setup Tab

From the Horiz /Acq menu, select FastFrame Setup; then open the Setup tab.

Overview

Use the [FastFrame Control Window \(see page 173\)](#) Setup tab to select the event Duration and Frame Size when FastFrame is turned on.

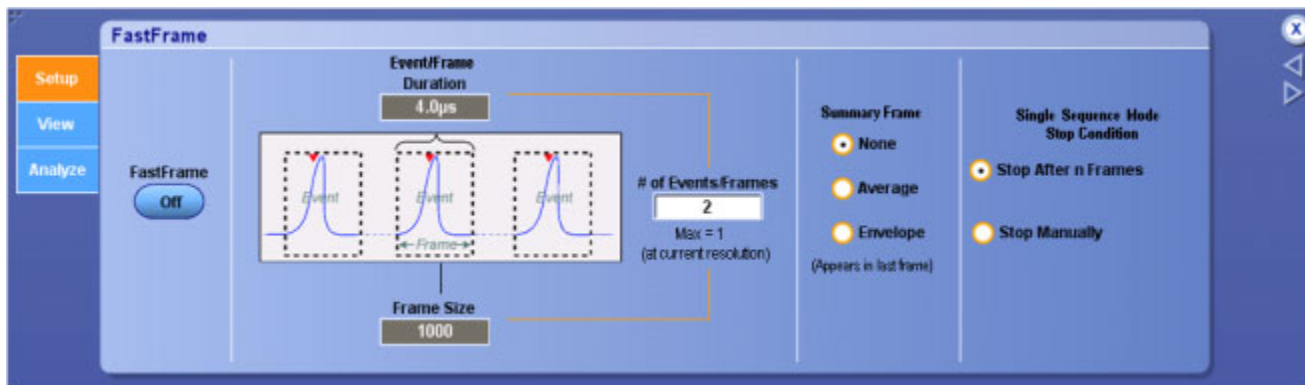

To Use

1. Click the FastFrame button to turn FastFrame mode On or Off.
2. Click in the Event/Frame entry boxes and use the multipurpose knobs to select the Frame Size, Duration, and the Number of Events/Frames.
3. Click a None, Average, or Envelope option button from the Summary Frame list to replace the last frame with one that is the computed, average or envelope, of all frames in the set.
4. Click a Single Sequence Mode Stop Condition option button to define how to stop FastFrame acquisition.
5. Start the acquisition; it is recommended that you use Single acquisition mode rather than Run/Stop mode.

NOTE. *If you change the oscilloscope controls while Fastframe is running, the controls will be returned to the user and the maximum number of frames may not be captured.*

Behavior

The Frame Size is the record length and defines the number of samples in each frame.

The Event/Frame Duration defines the number of frames to store in the acquisition memory of a single channel. The product of the frame size and the event/frame duration is constrained within the available memory. If more frames are needed, the instrument will automatically decrease the record length; if more samples are needed, the instrument will automatically decrease the frame count.

NOTE. *Because of the overhead associated with each frame, the maximum number of frames the instrument can capture (from a given record length) is less than the number theoretically possible.*

What do you want to do next?

- [Learn about the Reference Frame and time stamps. \(see page 723\)](#)


- [Learn some tips for using FastFrame. \(see page 786\)](#)

FastFrame Control Window - View Tab

From the Horiz /Acq menu, select FastFrame; then open the View tab.

Overview

Use the [FastFrame Control Window \(see page 173\)](#) View tab to specify how to view frames when FastFrame is turned On.

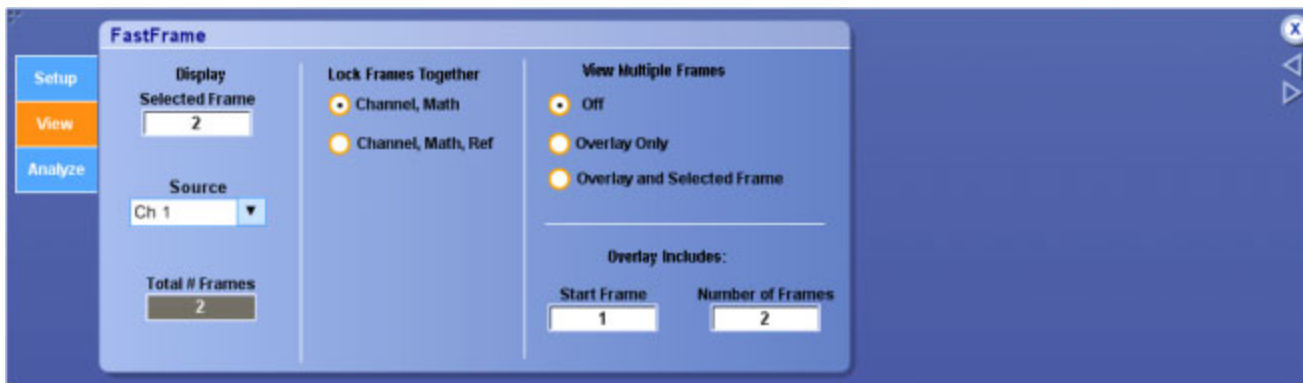

To Use

1. Select the Source channel from the drop-down list, and then use the multipurpose knob to identify the Selected Frame.
2. Click either the Channel, Math or Channel, Math, Ref option buttons to determine which frames you want to lock together.
3. Click a View Multiple Frames option button to toggle this function between Off, Overlay Only, or Overlay and Selected Frame. When Overlay is selected, two additional fields are displayed: Start Frame and Number of Frames. These fields allow you to select a range of frames that are displayed in the color of the Source channel.

NOTE. In Overlay Only, the frames are superimposed over each other. The Selected Frame is displayed in blue unless you are using the Spectral or Temperature palette; then the selected waveform is displayed in the same color as the other frames.

The instrument does not support Overlay and Selected Frame view when the display format is set to XYZ.

TIP. You may find it difficult to distinguish the dark blue Selected Frame if you have previously selected Spectral or Temp for the Color Palette.

Behavior

The Selected Frame displays the frame that you want to view. You can use the MultiView Zoom features of the instrument to magnify the waveform of interest. The Selected Frame can use any Channel, Math, or Reference waveform as the source waveform.

When View Multiple Frames is off, the instrument will display one frame at a time. You can use the Selected Frame control to scroll through all of the frames until you find the frame of interest.

When you click a Lock Frame Together <Channel, Math> option button, the channel and math waveforms are locked together. Adjusting a channel waveform also adjusts a related math waveform. All reference waveforms are locked together, but they are separate from channel and math waveforms.

When you set the Selected Frame Source Ch1 to Frame 3, then the Selected Frame Ch2, Ch3, Ch4, Math1, Math2, Math3 and Math4 are also set to frame 3. When you set the Selected Frame Source Ref1 to Frame 2, then the Selected Frame Ref2, Ref3, and Ref4 are also set to Frame 2.

To lock the reference and all selected frames together, click the Lock Frames Together <Channel, Math, Ref> option button. When these frames are locked, they maintain the same relative distance from each other as you adjust either frame.

When you click the View Multiple Frames <Overlay> button, the Start Frame and the Number of Frames fields are displayed. Use the upper multipurpose knob to enter the Start Frame (first frame) in the frame sequence that you want to view. Use the lower multipurpose knob to enter the total number of frames that you want to view.

For example, if you have 1000 frames and you want to view frames 75 through 100, use the upper multipurpose knob to enter 75 in the Start Frame field and the lower multipurpose knob to enter 26 in the # of Frames field. The result of these settings is that frames 75 through 100 are displayed superimposed over each other in the color of the selected Source, and the current (selected frame) is displayed superimposed in dark blue, unless you are using the Spectral or Temperature color palette.

What do you want to do next?


- [Learn about the reference frame and time stamps. \(see page 723\)](#)
- [Learn some tips for using FastFrame. \(see page 786\)](#)

Waveform Save Options

From the File menu, highlight Save As; then select Waveform from the submenu. In the Save As dialog box, click the Waveform Options button.

Overview

Use the Waveform Save Options dialog box to set the parameters for the waveform you want to save.

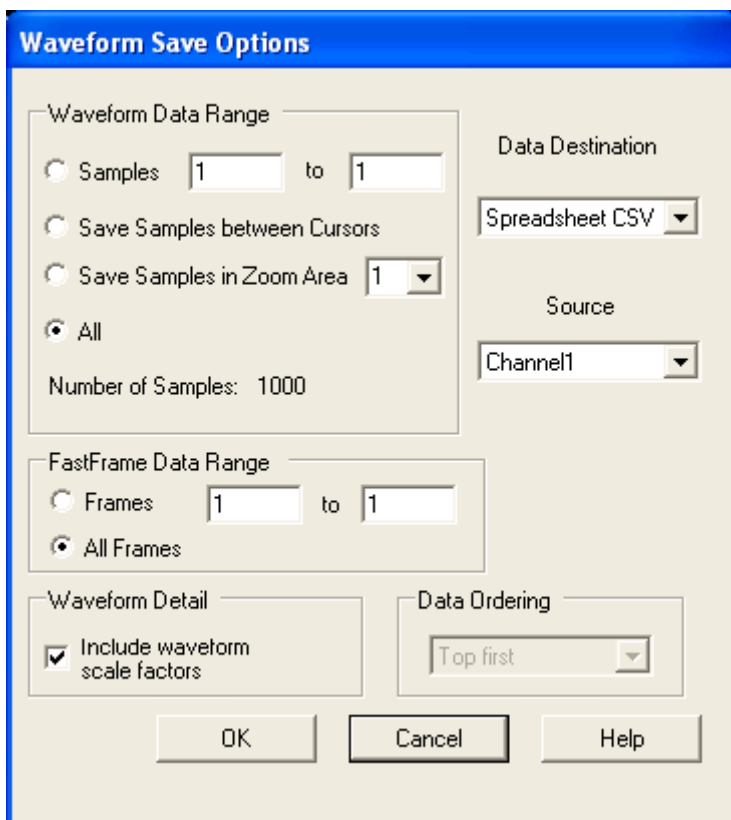

To Use

1. Select the data format (Data destination) for the waveform you want to save:
 - a. Select Spreadsheet (TXT) to include spreadsheet data separated by white space.
 - b. Select Spreadsheet (CSV) to include spreadsheet data separated by commas.
 - c. Select Mathcad or Matlab.
2. Select a valid waveform from the Source list: Channel <1– 4>, Math <1–4>, or Ref <1– 4>.
3. Select the number of samples you want to save under Waveform Data Range:
 - a. Select a range of samples.
 - b. Select only the Samples between Cursors. If you select Samples between Cursors, you can use the multipurpose knobs to adjust the positions if the cursors are already active. If they are not, the cursors are activated in their most recent positions.
 - c. Select only Samples in Zoom Area.
 - d. Select All samples.
4. If the waveform is a FastFrame waveform, specify the FastFrame Data Range.

5. Click the Include waveform scale factors check box if you want to include waveform details like header information (record length, sample interval, trigger point information, and so on). If you only want to include the waveform voltage values, clear the selection.
6. If you are saving Fast Acquisition data, select the Data Ordering from the drop-down list.
7. Click OK to return to the [Save As dialog box \(see page 411\)](#), where you can assign your own file name and save the waveforms to a specified folder. By default, the file is saved to the C:\TekScope\waveforms folder. If the information is saved as a CSV file, then the file is saved to the C:\TekScope\data folder by default.

Behavior

The waveform data is saved as numeric values. The data destination you select here is the file type selection used in the Save As dialog box. Use the Save As dialog box to finalize the selections and to save the waveform to a file.

What do you want to do next?

- [Learn about saving waveforms. \(see page 411\)](#)
- [Learn more about CSV text format. \(see page 730\)](#)

CSV Text Format

In the Tektronix oscilloscope, you can save the waveform data generated in CSV format. You can import this waveform data into an Microsoft Excel spreadsheet for analysis. The waveform data occupies five columns in the spreadsheet.

NOTE. *Do not enter math formulas or other data in the first 3 columns. Data in the first 3 columns is deleted if you paste new waveform data into the spreadsheet.*

The first column is the name of the parameter (such as Record Length, Sample Interval, Trigger Point, and Trigger Time), the second column is the value of the parameter, the third column is the unit associated with each of the parameters, the fourth column is the time of the waveform sample relative to the trigger point, and the fifth column is the value of the sampled waveform that was converted from the oscilloscope's internal digitizing levels.

$\text{time} = \text{sample interval} * (\text{index} - \text{trigger point})$

Where:

sample interval = the Sample Interval from column two

index = the sample number of the sample being calculated

trigger point = the sample number of the Trigger Point

The information in the first to fourth columns is generated only if you select the Include waveform scale factors option and when you paste or export data.

 
Deselect the Include waveform scale factors option when you want to analyze and/or plot the data for several waveforms captured with the same setup on a given instrument. The values in the first to fourth columns are same for all the waveforms. So you need to export these columns only once.

Mask Test Controls Window

From the Mask menu, select Mask Controls. You can also click the Controls button in the Mask Testing - Pass/Fail Setup or Mask Testing - Pass/Fail Results control windows.

Overview

Use this control window to run a test and view the results. You can also reset or start the test and return to the Mask Setup control window from this control window.

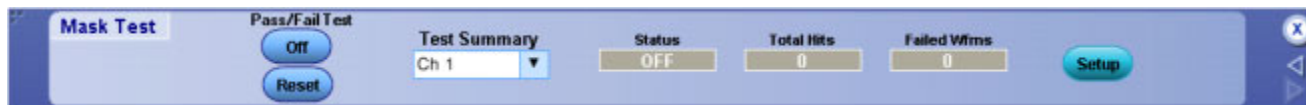

To Use

- Click On/Off to start and stop the test.
- Click Reset to reset the test.
- Click the drop-down arrow in the Test Summary field to select a different source. Status, Total Hits, and Failed Wfms are read only fields.
- Click Setup to return to the Mask Setup control window.

Behavior

This control window allows a mask test to run on a full screen and still provide access to the start, stop and reset functions. In addition, you can see the test summary for each input selected.

What do you want to do next?


- [Learn about test summary. \(see page 197\)](#)
- [Learn about hits per segment. \(see page 199\)](#)
- [Learn about test results. \(see page 196\)](#)

Delay Measurement Setup

From the Measure menu highlight Time; then select Delay from the submenu, or open the Time tab in the Measurement Setup control window and click the Delay button under Measurements.

Overview

Use the Delay Measurement control window to set up the instrument to measure the delay between two waveforms.

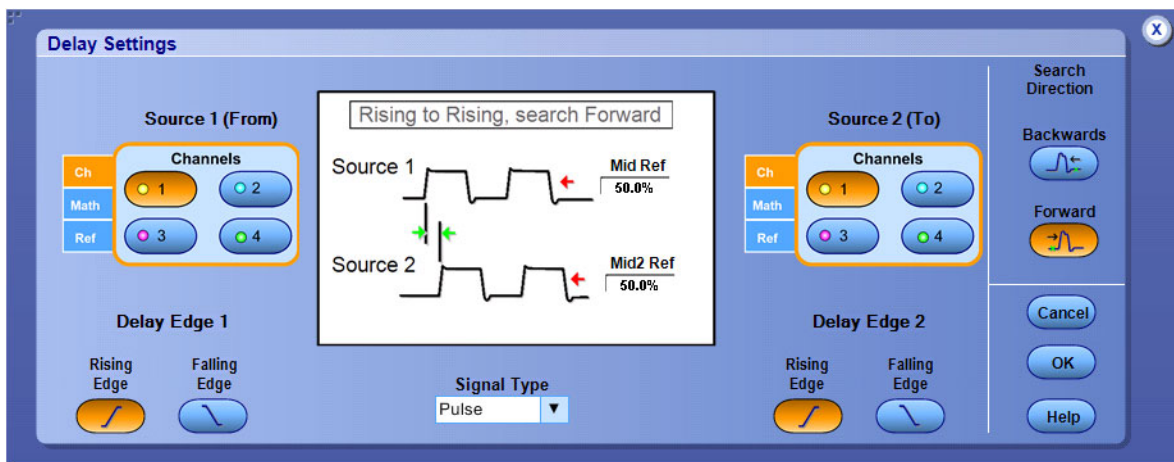

To Use

1. Select the source waveforms from the [Channels Selector](#) (see page 224).
2. Use the other controls in the control window to select the [Delay Edges](#) (see page 733), [Mid Reference point](#) (see page 734), [Mid2 Reference point](#) (see page 253), and to specify the Search Direction.
3. Click OK to add the measurement to the measurement list, or click Cancel to cancel the measurement and return to the Measurement control window.

Behavior

This timing measurement is the time between the mid reference crossing of two different waveforms, or the gated region of the waveforms.

The graphic in the control window shows the points on the waveforms from which the delay measurement will be taken. The graphic is updated each time you change the control settings. The Delay direction controls only apply to Source 2. When you click Forward, the instrument starts searching for the desired edge at the beginning of the record. When you click Backwards, the instrument starts searching for the desired edge from the end of the record. If the edge for Source 1 is before the edge for Source 2, then the delay is greater than zero. Otherwise the delay is less than zero.

What do you want to do next?

- [Learn about taking amplitude measurements.](#) (see page 236)
- [Learn about taking histogram measurements.](#) (see page 255)
- [Learn about other measurements.](#) (see page 247)
- [Learn about taking communications measurements.](#) (see page 244)

- [Learn more about the Measurements List.](#) (see page 715)

Delay Edges


The Delay Edge buttons determine whether the measurements will be taken on the rising or falling edge of the waveform. After selecting an edge, the graphic in the control window is updated to show the edge from which the measurements will be taken.

Phase Measurement Setup

From the Measure menu highlight More; then select Phase from the submenu. You can also open the More tab in the Measurement Setup control window, and then click the Phase button under Measurements

Overview

Use the Phase Measurement Setup control window to set up the instrument to take phase measurements.

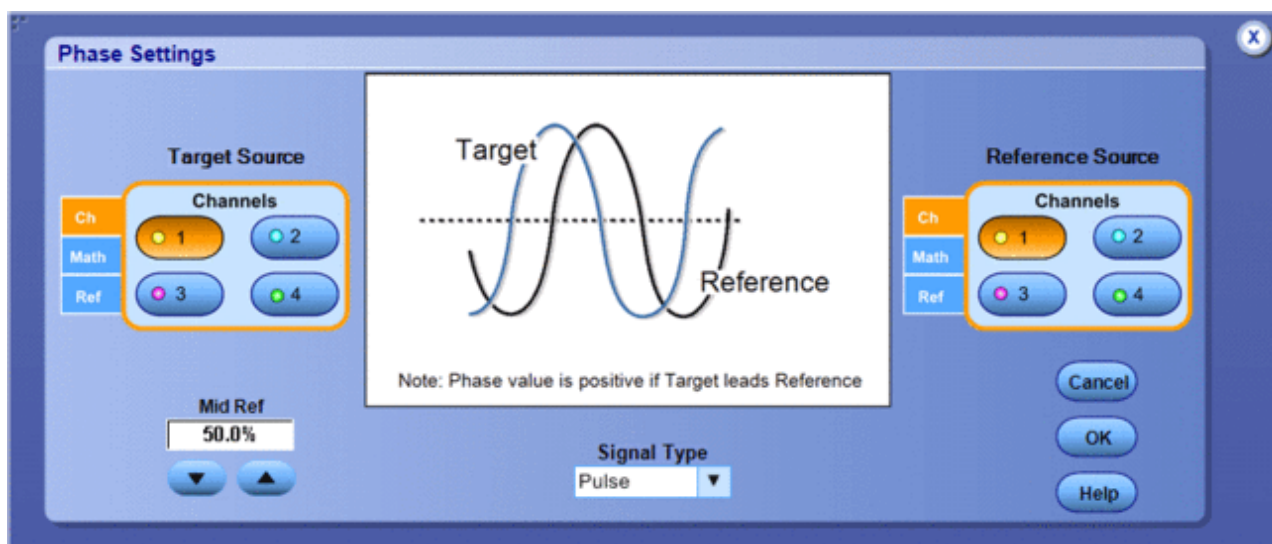

To Use

1. Use the [Channels Selector](#) (see page 224) to select the target and reference source waveforms.
2. Then use the [Mid Reference](#) (see page 734) control to specify the voltage reference point in the waveform.
3. Click OK to add the measurement to the measurement list or click to cancel the measurement and return to the Measurement Setup control window.

Behavior

This measurement is the amount of time one waveform leads or lags another waveform. Phase is expressed in degrees, where 360° comprise one waveform cycle. The measurement is taken at the voltage level specified by the Mid Reference control.

What do you want to do next?

- [Learn about taking amplitude measurements. \(see page 236\)](#)
- [Learn about taking timing measurements. \(see page 239\)](#)
- [Learn about taking histogram measurements. \(see page 255\)](#)
- [Learn about taking communications measurements. \(see page 244\)](#)
- [Learn more about the Measurements List. \(see page 715\)](#)

Mid Reference

The Mid reference defines the middle reference level of a waveform; the default level is 50%. This reference value is primarily used for making measurements between edges such as pulse widths. To change this level, click the control, and then set the level with the multipurpose knob.

MyScope Controls

Click one of links below to access detailed information on the controls in each category:

- [File \(see page 407\)](#)
- [Edit \(see page 387\)](#)
- [Vertical \(see page 355\)](#)
- [Horizontal \(see page 155\)](#)
- [Trigger \(see page 289\)](#)
- [Display \(see page 139\)](#)
- [Cursors \(see page 65\)](#)
- [Measure \(see page 234\)](#)
- [Mask \(see page 177\)](#)
- [Math \(see page 209\)](#)
- [Utilities \(see page 787\)](#)

NOTE. *Some MyScope controls operate differently than the identical control in the user interface.*

What do you want to do next?


- [Learn about the MyScope Setup and Edit control windows. \(see page 283\)](#)

Timestamp Save Options

From the File menu, highlight Save As; then select Timestamp Table from the submenu. In the Save As dialog box, click the Timestamp Options button.

Overview

Use the Timestamp Save Options dialog box to set the parameters for the time stamp you want to save.

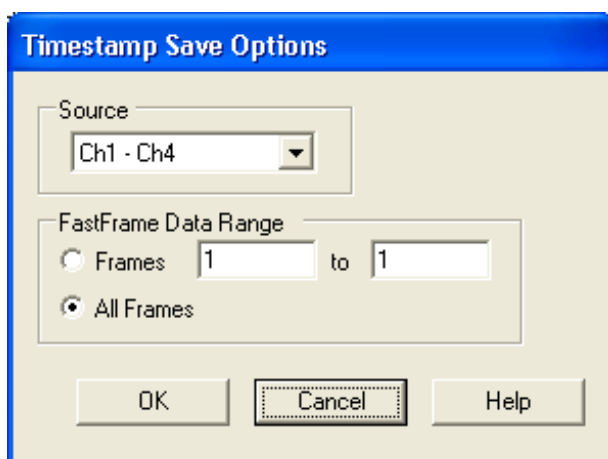

To Use

1. Select the data Source for the time stamp you want to save.
2. Set the FastFrame Data Range for the time stamp.
3. Click OK to return to the Save As dialog box, where you can assign your own file name and save the time stamp to the specified folder. By default, the file is saved to the C:\TekScope\data folder.

Behavior

The time stamp table data is saved as a .txt file.

Graticule Size Control Window

From the Vertical or Horiz/Acq menus, highlight Zoom Graticule Size; then select Size from the submenu.

To Use

- Click one of the Graticule Size buttons to set the proportion of the display area for the acquisition window and zoom window.
- Click Setup to access the Zoom Setup control window.



Behavior

Click the 50-50 button to allocate half of the available display for the zoomed graticule and half of the available display for the acquisition window. Click 80-20 to allocate 80% of the available display for the zoomed graticule and 20% for the acquisition window. Click Full to use the entire display for the zoomed graticule.

What do you want to do next?

- [Learn about the Zoom Setup controls. \(see page 175\)](#)
- [Go to the Zoom Setup control window. \(see page 736\)](#)

Termination/Coupling Control Window

From the Vertical menu, select Termination or Coupling.

Overview

Use the Termination control window to select channel input resistance or probe coupling parameters.

For information on the controls, click the buttons.



NOTE. This online help documents features and options available for several instrument models. Your instrument may not have every feature discussed in this online help.


To Use

- The correct input termination is set automatically when you attach a probe with a TekProbe or TekVPI interface. For other probes, you must set the input termination manually.
- Select the input coupling for the signal from the attached probe to the instrument.

What do you want to do next?

- [Learn more about the Bandwidth controls. \(see page 368\)](#)

Using Offset to Avoid Clipping Signals

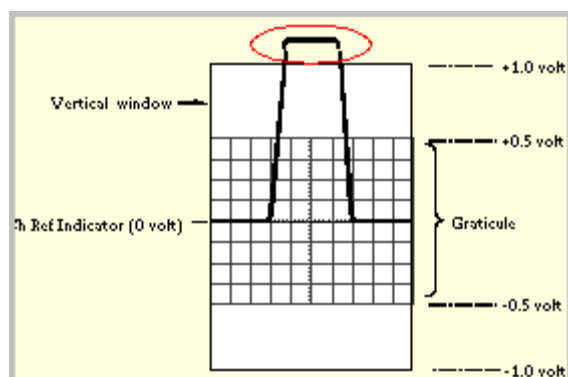


Clipping

The circled portion of the incoming waveform is clipped, and therefore, is not acquired.

The clipped portion cannot be processed or displayed.

Offset can move the acquisition window vertically relative to the incoming waveform.

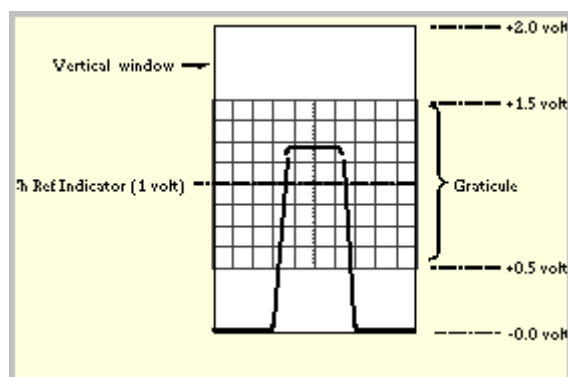

Offset removes clipping

By setting an offset to vertically shift the acquisition positive relative to the waveform, the clipped portion can be acquired.

The On-Screen MultiView Zoom Menu Item

	Zoom 1 On
	Zoom 2 On
	Zoom 3 On
	Zoom 4 On
	Histogram Vertical
	Histogram Horizontal
	Measurement Gating ▶
	Zoom Off
	Histogram Off
	Measurement Gating Off
	Cancel

Peak to Peak

This voltage measurement is the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region.

Period

This measurement is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

Phase

This timing measurement is the amount of time that one waveform leads or lags another waveform. The measurement is expressed in degrees where 360° comprise one waveform cycle.


Trigger Polarity

Select the polarity from the drop-down list.


- Click Positive to trigger on a positive-going pulse.
- Click Negative to trigger on a negative-going pulse.
- Click Either to trigger the instrument on either polarity.

Pop-up Keypad


1. Click in a data entry box.

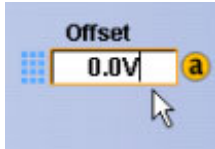

2. Click on the keypad icon.

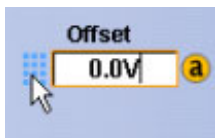

3. Use the pop-up keypad to enter data.

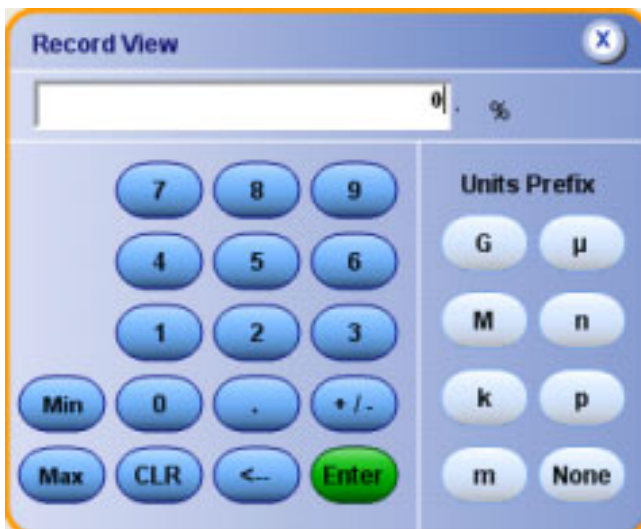

4. Click the Enter button.

Positive Duty Cycle

This timing measurement is the ratio of the positive pulse width to the signal period expressed as a percentage.

The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive width}) \div \text{Period}) \times 100\%$$

Positive Overshoot

This voltage measurement is measured over the entire waveform or gated region.

$$\text{Positive overshoot} = (\text{Maximum} - \text{High}) \times \text{Amplitude} \times 100\%$$

Positive Width

This timing measurement is the distance (time) between the mid reference (default 50%) amplitude points of a positive pulse.


The measurement is made on the first pulse in the waveform or gated region.

Posttrigger Data

The data acquired and displayed after the trigger event. You can set the amount of pretrigger data with the Horizontal Position control.

On / Standby Switch

Use this button to power the instrument on or to set the instrument to standby.

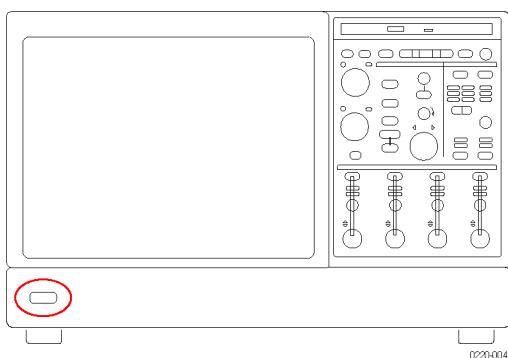

Before shutting down, it is recommended that you first exit the instrument application and any other active Windows applications to avoid error messages on shutdown or the next power on.

TIP. To exit the instrument application and shut down in one step, select Shutdown in the File menu.

Predefined Functions

From the Math menu, select Math Setup.

To Use

Click a button to use one of the predefined math expressions to create the math waveform based on live (channel) waveforms. If the channels are active, you can access each expression directly from the Math menu.

Behavior

These buttons provide common predefined math expressions.

- Click Ch1-Ch2 and Ch3-Ch4 to create math waveforms that are the difference between two input waveforms. Use these functions to view differential signals.
- Click Ch1*Ch2 or Ch3*Ch4 to create math waveforms that are the product of the two input waveforms. For example, you can obtain a power waveform by multiplying a voltage waveform by a current waveform.
- Click Spectral Mag to create a spectral magnitude waveform.
- Click Spectral Phase to create a spectral phase waveform.

The math waveform is based on the last active waveform on the screen. A spectral waveform is created from a channel waveform; you cannot create a spectral waveform from math or reference waveforms.

TIP. Use the [Equation Editor \(see page 223\)](#) to manually create and edit math waveforms.

What do you want to do next?

- [Learn about the Equation Editor. \(see page 223\)](#)

Pretrigger Data

The data points of the waveform acquired and displayed before the trigger event. You can set the amount of pretrigger data with the Horizontal Position control.

Probe Calibration Output

Use the Probe Calibration output to calibrate or deskew passive or active voltage probes.


Probe Calibration Restrictions

Some probes cannot be calibrated or compensated. This might be because the probes have an attenuation factor greater than 20X. You will get an error message if you try to compensate such a probe.


The instrument cannot compensate for probes that may have gain and/or offset errors that are too great (>2% or >50 mV offset). If these errors are within the specified limits of your probe, you may want to use another probe. If the errors are outside the limits, have your probe checked by service personnel.

Probe calibration is not recommended for the P5050 passive probe. This probe typically has little gain and offset error, and therefore, the performance improvement after a probe calibration is not worth the time needed to do the probe calibration.

Probe Compensation

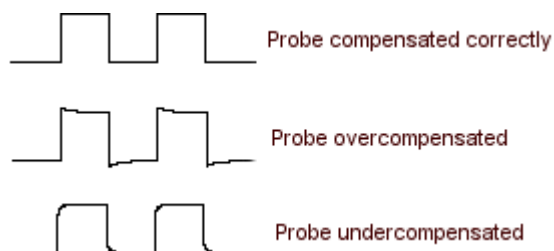

Probe Compensation Adjustment

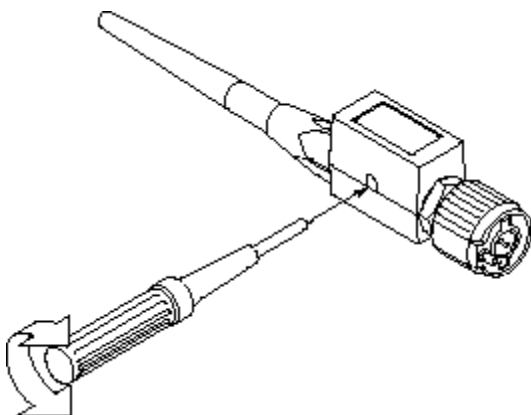

Probe Compensation Output

Use the Probe Compensation output to compensate or deskew passive or active voltage probes.

Quality Factor

Quality factor is the ratio of eye size to noise.

$$\text{Quality Factor} = (P_{\text{Topmean}} - P_{\text{Basemean}}) / (P_{\text{Topsigma}} + P_{\text{Basesigma}})$$

Recalling a Template Waveform

Use this procedure to recall a template waveform to a reference location.

1. From the File menu click Recall.
2. Under Recall What: click Waveform, and then select the waveform you want to recall.
3. Select Ref <1–4> from the Destination drop-down list.
4. Click Recall.

Recalling Masks

Use the Mask Edit Setup control window to recall a mask.

1. From the Mask menu, select Mask Edit Setup.
2. In the Mask Edit control window, click the Recall button.
3. In the Recall dialog box, click User Mask; then select the mask you want to recall.
4. Click Recall to recall the mask.


NOTE. *The default folder for saving masks is C:\TekScope\Masks. If you saved masks in a different folder, click the Look in drop-down list to find the folder where your masks are saved.*

Horizontal Modes

From the Horiz /Acq menu, select Horizontal/Acquisition Setup; then open the [Horizontal tab \(see page 155\)](#).

Overview

The instrument has three horizontal modes. The default mode is Automatic; the default record length limit is 200,000 points.

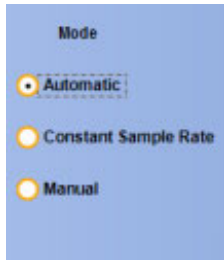

To Use

Select the mode that works best for your application.

Horizontal mode


Automatic. Use this mode to set the Scale and Sample Rate; the record length is a dependent variable. If the current time-per-division scale has a record length equal to the record length limit, changing the time-per-division to a larger value will decrease the sample rate to the next available setting. If the current record length is less than the record length limit, the record length can exceed the record length limit by one record length setting. If the sampling mode is real time, and the sample rate is at the real-time limit, attempting to increase the sample rate has no effect.

To set the Record Length Limit, click the Advanced button and enter the limit in the Set Record Length Limit dialog box. You can use the buttons or keypad. The instrument will keep the set record length near this limit to produce the best sequence of reduction in sample rate, as the time-per-division is increased.

Record length limiting takes place when you change the time-per-division setting. You can use the Sample Rate control to temporarily exceed the record length limit by any amount. The default maximum limit depends on the instrument model and record length option you purchased.


TIP. You can use the front panel Horizontal Resolution knob to change the sample rate in Automatic mode.

NOTE. The instrument supports Mask testing in Automatic mode only.

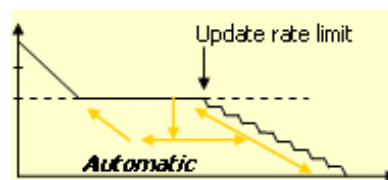


Constant Sample Rate. Use this mode to set the Sample Rate and Scale; the record length is a dependent variable. For ≥ 4 GHz instrument models, the default sample rate supports bandwidth filter operation. The maximum record length for your instrument depends on instrument model and record length option.

TIP. You can use the front panel Horizontal Resolution knob to change the sample rate in Constant Sample Mode.

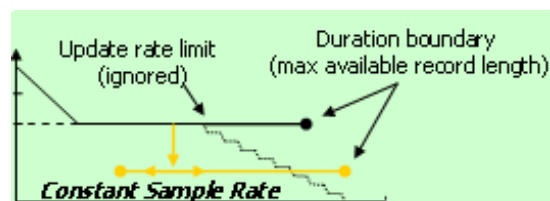

Manual. Use this mode to set the Sample Rate and Record Length; the horizontal scale is a dependent variable calculated from the sample rate and record length.

TIP. You can use the front panel Horizontal Scale knob to change the record length in Manual mode.

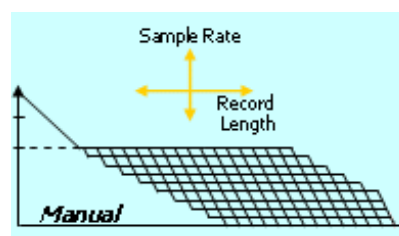

Behavior

Sample rate, scale, and record length are interactive in all modes. If you increase the scale, the sample rate must decrease if either the maximum record length or the record length limit you set is reached.

Automatic and Constant Sample Rate modes are identical, with the exception that in Constant Sample Rate mode the user cannot set the record length limit. In both cases, the instrument maintains the sample rate constant as set specified by the user.

NOTE. *Manual mode uses the maximum record length available for the instrument you purchased.*

What do you want to do next?

- [Learn more about the Horizontal Setup controls. \(see page 686\)](#)

Reference Point

Use the Ref Point control to define the horizontal reference point within the acquired waveform. The horizontal reference point determines the location within the acquired data where the scale controls will expand or contract the waveform.

- When Horizontal Delay is On, the reference point is the trigger point plus the Horizontal Delay time.
- When the horizontal delay is Off, the reference point is the trigger point.

Resolution Bandwidth

The resolution bandwidth controls the bandwidth of the spectral analyzer filters. You can adjust the resolution bandwidth in units of hertz. The resolution bandwidth is measured at the -3 dB points on each side of the peak spectral lobe of the filter.

Resolution bandwidth is inversely proportional to the gate duration in the time domain. Changing the gate duration changes the resolution bandwidth. Changing the spectral analyzer window function also changes the resolution bandwidth but will not affect the gate duration.

To decrease the resolution bandwidth beyond the present limits, increase the time domain gate duration. If this is insufficient, increase the record length and then increase the gate duration again. You can also try the rectangular or Hamming window to maximize the frequency resolution (minimize resolution bandwidth).

Rise Time

This timing measurement is the time required for the leading edge of the first pulse in the waveform or gated region to rise from the low reference value (default = 10%) to the high reference value (default = 90%) of the final value.

RMS

This voltage measurement is the true Root Mean Square voltage over the entire waveform or gated region.

RS-232 Baud Rate

Click in the Baud Rate entry box and use the multipurpose knob to set the baud rate for the trigger.

RS-232 Data Parity

In the Data Parity drop-down list, select the parity for the trigger.

Upper and Lower Threshold Values

The upper and lower threshold levels define the voltage limits of a runt pulse.

- To set the upper threshold, click in the Upper Level entry box, and then use the multipurpose knob to set the voltage level.
- To set the lower threshold, click in the Lower Level entry box, and then use the other multipurpose knob to set the voltage level.

Runt Trigger Criteria

- Select Occurs from the Runt drop-down list to trigger on any runt.
- Select Wider from the Runt drop-down list to trigger on a runt pulse of a minimum width; click in the Width entry box and use the multipurpose knob to set the minimum pulse width.
- Select Logic from the Trigger if Runt drop-down list to trigger on a logic-qualified runt pulse. When the instrument detects that a runt has occurred, it checks the logical state of two other available channels and triggers only if their conditions are met. Each channel can have a value of high (H), low (L), or "don't care" (X). A value is considered high if the channel input voltage is greater than the specified threshold voltage; a value is considered low if the channel input voltage is less than the specified threshold voltage.
- Use the X "don't care" selection for any channels that will not be used as part of the pattern.

Saving Masks

Use the Mask Edit Setup control window to save a mask:

1. From the Mask menu, select Mask Edit Setup.
2. In the Mask Edit control window, click Save.
3. In the Save As dialog box, select User Mask. You may need to click More to access the User Mask selection.
4. Enter a file name in the Name box. If you do not have a keyboard attached, click the keyboard icon to use the pop-up keyboard to enter the file name.
5. Click Save to save the mask. The default folder for saving masks is `C:\TekScope\Masks`. If you want to save the mask in a different folder, click the Save in drop-down list, and then click a folder to select it.

Scallop Loss


Scallop loss is the difference between the actual magnitude and the computed magnitude of a signal that is halfway between two frequency bins in the spectral output data. Scallop loss is only noticeable when the spectral analyzer is not using zero-fill such as when it is set to full span.

If zero-fill is in use, frequency domain interpolation occurs and there is minimal scallop loss. Zero-fill cannot be directly controlled; it is affected by changing settings of resolution bandwidth or gate width. When in use, a minimum of 20% of the FFT input is always zero, effectively removing scallop loss error by interpolating in the frequency domain.

NOTE. For most settings, descriptions of amplitude accuracy due to scallop loss (as discussed in other publications) do not apply to this oscilloscope when used as a spectral analyzer because of zero-fill. Full span is the most likely setting where scallop loss might occur.

Scan Controls

These controls are available for the Custom video format. Interlaced and Progressive are the only available Scan Types.

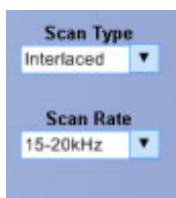

The Scan Rate enables you to trigger on nonbroadcast video signals that have unique scan rates. Select the scan rate range that includes your signal: 15-20 kHz, 20-25 kHz, 25-35 kHz, 35-50 kHz, or 50-65 kHz.

Selecting a Spectral Window

A spectral window determines what the filter shape of the spectral analyzer will be in the frequency domain. It may be described by a mathematical function that is multiplied point-by-point times the input data to the spectral analyzer.

The following spectral windows are available with the instrument:

- Rectangular
- Hamming

- Hanning
- Kaiser-Bessel
- Blackman Harris
- Gaussian
- Tek Exponential
- Flattop2

The windows are listed in the order of their ability to resolve frequencies (resolution bandwidth). You can easily observe the shape of a window in the frequency domain by feeding a sine wave into the instrument and setting the center frequency of the spectral analyzer to the same frequency. Then reduce the resolution bandwidth to spread out the lobe horizontally. You can then select different window functions and observe their shape.

Window Attributes

- In the time domain, windows are typically bell shaped and go to zero at the ends of the record. For cases where you may be doing impulse response testing, the impulse should be centered at the zero phase reference point (for most windows, this is the 50% position of the gate and 20% for the Tek Exponential window).
- Different window functions affect the resolution bandwidth of the spectral analyzer.
- Various window shapes affect the [scallop loss \(see page 752\)](#).
- The shape of the frequency domain lobe is determined by the window function. Some windows have better resolution bandwidth, but they do so at the expense of side lobe attenuation and energy [leakage \(see page 753\)](#) into adjacent bins. For example, a rectangular window typically spills energy into many bins showing signals that don't exist; but it has the best frequency resolution. If you are using a window where leakage is occurring, you may want to use spectral gating to reduce the amplitude errors when measuring a given frequency.

Scallop Loss

Scallop loss is the difference between the actual magnitude and the computed magnitude of a signal that is halfway between two frequency bins in the spectral output data. Scallop loss is only noticeable when the spectral analyzer is not using zero-fill such as when it is set to full span.

If zero-fill is in use, frequency domain interpolation occurs and there is minimal scallop loss. Zero-fill cannot be directly controlled; it is affected by changing settings of resolution bandwidth or gate width. When in use, a minimum of 20% of the FFT input is always zero, effectively removing scallop loss error by interpolating in the frequency domain.

NOTE. For most settings, descriptions of amplitude accuracy due to scallop loss (as discussed in other publications) do not apply to this oscilloscope when used as a spectral analyzer because of zero-fill. Full span is the most likely setting where scallop loss might occur.

Leakage

Leakage results when the time domain waveform used to create the FFT function is periodic but contains a noninteger number of waveform cycles. When the record contains a fraction of a cycle, there are discontinuities at the ends of the record.

These discontinuities cause energy from each discrete frequency to leak over on to adjacent frequencies. This results in amplitude errors when measuring any given frequency. Different windows have different leakage characteristics.

Selected Waveform versus Deselected Waveform



The waveform handle indicates if a waveform is selected or deselected.

The waveform handle is outlined in the same color as the graticule when the waveform is selected. The waveform handle is outlined in black when a waveform is deselected.


Sequence Triggering (Horizontal Delay On)

From the Trig menu, select A - B Trigger Sequence; then open the A -> B Seq tab.

Overview

Select the A-B Seq tab to use the A Event (main) trigger with the B Event trigger to capture complex data.

For information on the controls, click the buttons.

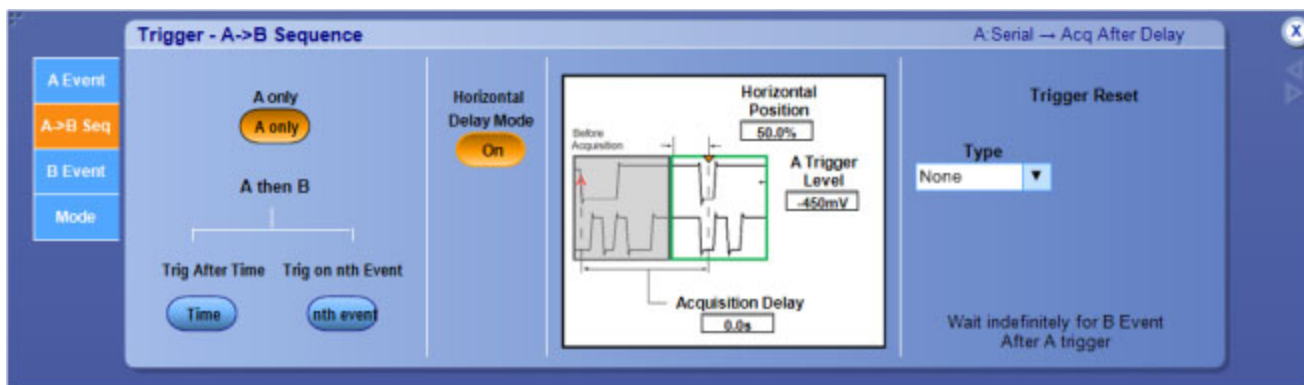

Behavior

Select A - B Trigger Sequence to use the A Event (main) trigger with the B Event trigger to capture complex data. The A Event trigger arms the trigger system. The instrument then triggers on the B Event trigger defined by events or time. You can also set up the instrument to delay the B Event Trigger by a specified time period by turning Horizontal Delay Mode on.

When you click on the trigger window controls, the [trigger graphic \(see page 290\)](#) shows the trigger sequence.

What do you want to do next?

- [Learn about the A Event trigger types. \(see page 290\)](#)
- [Learn about B Event triggers. \(see page 347\)](#)
- [Learn about Trigger Mode and Holdoff. \(see page 348\)](#)
- [Return to the Trigger Setup control window. \(see page 289\)](#)

Serial Bit Rate

From the Trig menu, select Serial Pattern Setup.

To Use

To change the bit rate of the serial bus on the display, double-click the Bit Rate entry box, and use the keypad or the multipurpose knob to enter a new bit rate.

Behavior

The Standard you select determines the bit rate range. Adjusting the bit rate will change the standard to Custom.

Serial Clock Source

From the Trig menu, select Serial Pattern Setup.

To Use

- In the Clk Src drop-down list, select the clock source for the trigger. The instrument makes one attempt to recover the clock from the data.

Behavior

If you are using R Clk as the clock source, and the clock recovery system does not lock to the input signal, the input signal may be missing or the trigger level may be incorrect. In such an event, correct the problem and push the Level control Set 50% knob, to force the instrument to make another attempt at recovering the clock.

Serial Coding Standard

From the Trig menu, select Serial Pattern Setup.

To Use

- In the Coding drop-down list, select the coding standard for the trigger.

Behavior

The standard sets the bit rate. Changing the bit rate causes the standard to change to your own customized standard.

Serial Data Format

From the Trig menu, Select Serial Pattern Setup.

To Use

- In the Format drop-down list, select the data format, Binary or Hex, depending on how you want to view the data.

Serial Data Source

From the Trig menu, select Serial Pattern Setup.

To Use

- In the Data Src drop-down list, select the data source for the trigger.

Behavior

Depending on which clock source you use, the Clk Polarity and Clk Level controls appear. Use these controls to set the clock polarity and clock level threshold.

Serial Data Standard

From the Trig menu, select Serial Pattern Setup.

To Use

- In the Standard drop-down list, select the data standard for the trigger.

Serial Mask Testing Option

- Install Option MTM on DPO7000 Series instruments.

NOTE. *Install Option MTM on MSO/DPO5000 Series instruments.*


- Install Option MTH on DPO70000/B/C, DSA70000/B/C, and MSO70000/C Series instruments.

Serial Pattern Data Editor

From the Trig menu, select RS-232, Serial, or SPI Setup and then click the Edit button.

To Use

1. Select either the Binary or Hex format option.
2. Use the editor controls to define the pattern to trigger on:
 - Use the alpha - numeric buttons to insert a character in the text box.
 - Click the Home button to place the cursor at the right most position of the text box.
 - Click the Left arrow button to move the cursor one space to the left.
 - Click the Bksp button to delete one character at a time from left to right.
 - Click the Right arrow button to move one space to the right.
 - Click the Clear button to clear the text box.
3. Click Enter to complete the edit.

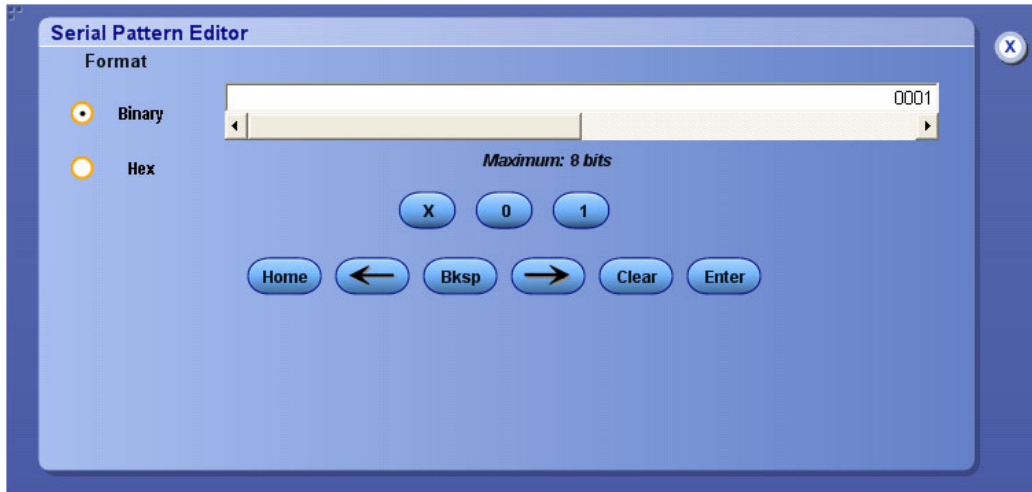

Behavior

If you select the hexadecimal format and the binary pattern cannot be displayed in hexadecimal format, then the serial pattern data will display a question mark (?) instead of an alpha - numeric character.

Clicking the X, 0, or 1 button inserts that character to the left of the cursor in the text box.

What do you want to do next?

- [Learn more about other trigger types. \(see page 290\)](#)
- [Go to the Serial Trigger control window. \(see page 319\)](#)

Serial Trigger On

From the Trig menu, select Serial Pattern Setup.

To Use

Use these controls to define a NRZ pattern for the instrument to trigger on.

Pattern

1. In the Format drop-down list box, select Binary or Hex.
2. Click the Edit button and use the Serial Pattern Editor to define the pattern.
3. Click Enter.

Lock

Lock automatically finds and locks on to a long repeating pseudo-random bit sequence (PRBS). Pattern Lock enables the instrument to take samples at specific locations in a data stream to define the trigger.

1. Click in the Bit Pattern Length entry box and use the multipurpose knobs to define the bit length of a pattern to search for.
2. Click in the Shift Amount entry box and use the multipurpose knobs to define the number of bits to shift from the zero bit position of the initial lock.
3. Click the left or right arrows to increment from bit zero by the Shift Amount to redefine the pattern to be used as the trigger.

Setting up for FastFrame Operation

Follow these steps to use FastFrame mode:

1. Set up the Trigger control window to trigger on the signal of interest.
2. Adjust the horizontal and vertical controls to display a waveform without any clipping.
3. Adjust the Resolution controls to set the number of samples you want to acquire with each acquisition.
4. From the Horiz/Acq menu select FastFrame Setup.
5. Configure the number of frames (Frame Count) you want to capture.
6. Touch the FastFrame button to turn on the FastFrame mode.
7. After the acquisition is complete, select the frame that you want to view under the Frame Viewing section.

Setup and Hold Time

Setup time is the amount of time that data has to be stable after crossing the threshold level prior to a clock edge.

1. Click in the Setup Time entry box.
2. Use the multipurpose knob to set the time.

Hold time is the amount of time that data has to be stable before crossing the threshold level after a clock edge.

1. Click in the Hold Time entry box.
2. Use the multipurpose knob to set the time.

Set to 50% with Comm Triggers

Push the front-panel Level knob.

Overview

The Set to 50% control sets the trigger threshold to 50% for some Comm triggers, and to a high of 75% with a low of 25% for others.

Behavior

When either AMI or MLT-3 code is selected with Comm triggers the Set 50% control measures peak-to-peak level and sets an upper threshold value at 75% and a lower threshold value at 25%. Other codes work exactly the same as Edge, Width, Glitch, and Timeout triggers; the threshold is set to 50%.

Clock Source Channel

Use the Clock Source drop-down list to select the input channel that is connected to the clock signal.

Clock Threshold Level

To set the clock threshold voltage level:

1. Click in the Clock Level or Threshold entry box.
2. Use the multipurpose knob to set the voltage level.

Data Source Channel

Use the Source drop-down list to select the input channel that is connected to the data signal.

Data Threshold Level

To set the data threshold voltage level:

1. Click in the Data Level entry box.
2. Use the multipurpose knob to set the data voltage level.

Setup and Hold Times

Use the Setup Time and the Hold Time controls to specify the setup and hold limits.

1. Click in a data entry box.
2. Use the multipurpose knobs to set the limits.

Signal Path Compensation Status

The following table lists the possible calibration status messages for signal path compensation and the recommended action.

Status	Meaning and recommended action
Pass	The instrument had warmed up for 20 minutes, there were no failures during the signal path compensation procedure, and the current operating temperature is within 5 °C (9 °F) of the operating temperature when the previous signal path compensation was run.
Fail	One or more failures occurred during the signal path compensation procedure. Contact your local Tektronix service representative for further action.
Temp	The operating temperature is not within 5 °C (9 °F) of the previous signal path compensation.
Warmup	The instrument has not warmed up for 20 minutes. Wait for the instrument to warm up for at least 20 minutes before running the signal path compensation procedure.

Signal to Noise Ratio

S/N ratio is the ratio of the signal amplitude to the noise of the top or base of the signal as specified by you.

$$S/N \text{ Ratio} = (P_{\text{top}} - P_{\text{base}}) / (P_{\text{Top}\sigma} \text{ or } P_{\text{Base}\sigma})$$

Sin

Inserts the text SIN(into the math expression.

SinH

Inserts the text SINH(into the math expression.

Leakage

Leakage results when the time domain waveform used to create the FFT function is periodic but contains a noninteger number of waveform cycles. When the record contains a fraction of a cycle, there are discontinuities at the ends of the record.

These discontinuities cause energy from each discrete frequency to leak over on to adjacent frequencies. This results in amplitude errors when measuring any given frequency. Different windows have different leakage characteristics.

Spectral Controls: Equation Editor

From the Math menu, select Equation Editor, or click the Editor button in the Math Setup or Spectral Setup control windows.

To Use

- Select a Math <1-4> waveform from the drop-down list.
- Click in the readout field to enter the math expression.
- Click a button to enter its character or operator into the expression.
- Click the [Editor \(see page 223\)](#) button and use the Math Equation Editor controls to insert numerals, math operators, and variables into a math expression.
- Use the [Text Edit Controls \(see page 225\)](#) to move the insertion point (cursor) within the expression.

Behavior

These controls only affect the selected math waveform.

What do you want to do next?

- [Learn about the Equation Editor. \(see page 223\)](#)

Spectral Create/Edit Tab

From the Math menu, select Advanced Spectral, or click Advanced in the Math Setup control window; then open the Create/Edit tab.

To Use

Use these controls to insert spectral analysis functions into the math expression.

1. Click one of the buttons to insert a function into the math expression.

[Magnitude \(see page 229\)](#)


[Phase \(see page 250\)](#)

[Real \(see page 229\)](#)

[Imaginary \(see page 229\)](#)

[Average \(see page 764\)](#)

2. Use the [Channels Selector \(see page 224\)](#) to select one of the input channel waveforms to create the Math waveform.
3. Click Avgs to open the [Adjust Math Parameters \(see page 210\)](#) control window. Use this window to define the number of times you want to average the selected math waveform.

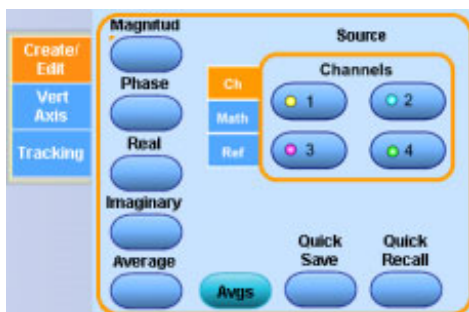

What do you want to do next?

- [Learn about the Math Setup controls. \(see page 209\)](#)
- [Learn about setting up the instrument for spectral magnitude waveforms. \(see page 768\)](#)

Average


Inserts the text AVG() into the math expression. Enter an argument to the function. The average function produces the average of the argument.

Spectral Tracking Tab

From the Math menu, select Advanced Spectral; then open the Tracking tab.

To Use

Use these controls to lock two math waveforms together. This is useful when you want to generate both a magnitude waveform and a phase waveform from the same source.

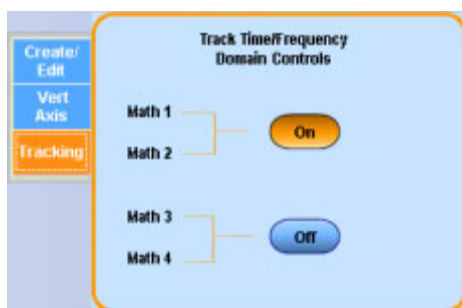

Behavior

When you lock the spectral controls together, any changes you make to one math waveform are also made to the other math waveform.

You can only lock Math1 with Math2 and Math3 with Math4.

Locking is useful, for example, when Math1 is the spectral magnitude and Math2 is the spectral phase of the same signal. Locking forces the magnitude and phase waveforms to track if you change the spectral controls.

What do you want to do next?

- [Learn about the Math Setup controls. \(see page 209\)](#)

Spectral Vertical Axis Tab

From the Math menu, select Advanced Spectral; then open the Vert Axis tab.


To Use

Use these controls to specify the vertical scale for advanced spectral waveforms. The available selections will vary depending on the settings you make in the Create/Edit tab.

Magnitude Scale

Use these controls to specify the vertical scale for magnitude waveforms.

- Click one of the Scale buttons to specify the vertical units as linear (V, A, W), dBm (1mW into 50 Ω), or dB (logarithmic).
- Click in an entry box and use the multipurpose knobs to set the reference Level at the top of the screen.
- Use the Level Offset control to position the waveform with respect to the 0 dB reference level without changing the reference level at the top of the screen.

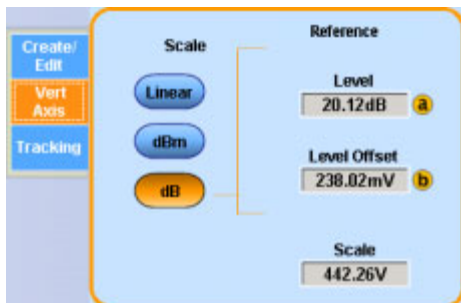

NOTE. The reference level offset is used to calculate the log magnitude in dB. Adjusting the reference level positions the waveform with respect to the top of the screen but does not change the position of the waveform with respect to the ground reference marker.

Changing the reference level offset moves the waveform with respect to its ground reference marker.

Phase Scale

Use these controls to specify the vertical scale for spectral phase waveforms.

Click one of the Scale buttons to specify the vertical units in degrees, radians, or as group delay.

- Group delay unwraps and differentiates the phase. All phase values out of the spectral transformation are between p and $-p$ even though the actual phase value may be outside this range.
- Click Unwrap to work on a continuous phase function to unwrap the phase value and show the true range. The phase unwrap begins with a phase value obtained at the first spectral sample after DC.
- Click in the suppression Threshold entry box and use the multipurpose to set the level. Suppression prevents random noise from making the display unusable. Any spectral points with magnitudes less than the threshold will have phase values set to zero (degrees or radians). To set a dB level for the suppression threshold, select dB scale from the magnitude tab, and then set a horizontal bar cursor to the level on the magnitude spectrum. Read the dB value from the cursor and use the multipurpose knob to enter the value as the suppression threshold.



Linear Scale

Click in an entry box and use a multipurpose knob to specify the position and scale for a linear display.



What do you want to do next?

- [Learn about locking math waveforms together. \(see page 765\)](#)
- [Learn about the Math Setup controls. \(see page 209\)](#)


Vertical Controls

From the Math menu, select Basic Spectral or click Basic in the Math Setup control window.

To Use

Use these controls to specify the vertical scale for magnitude and phase waveforms.

- Click either the Magnitude or Phase button.
- Click one of the Vertical Control buttons to specify the vertical units.
- Click in an entry box and use the multipurpose knobs to adjust the level, scale, position, or offset on screen.
- For Magnitude waveforms, use the Reference Level Offset control to position the waveform with respect to the 0 dB reference level without changing the reference level at the top of the screen.

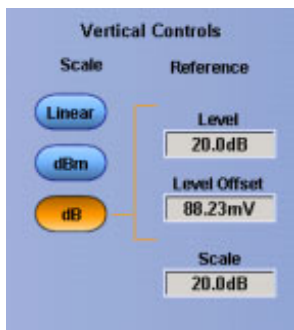

Behavior

The reference level offset is used to calculate the log magnitude in dB. Adjusting the reference level positions the waveform with respect to the top of the screen but does not change the position of the waveform with respect to the ground reference marker.

Changing the reference level offset moves the waveform with respect to its ground reference marker.

What do you want to do next?

- [Learn about setting up the instrument for spectral phase waveforms. \(see page 765\)](#)
- [Learn about the Math Setup controls. \(see page 209\)](#)

SPI Bus Trigger Polarity

The SS, MISO, and MOSI Active controls allow you to select when the enable is active.

- Select (H) High or (L) Low from the drop-down menu.

The SCLK Active control provides compensation for inverted signals or synchronization on the falling edge of the clock.

- Select Rising or Falling from the drop-down menu.

SPI Bus Trigger Threshold

1. Click in the SS Threshold or SCLK Threshold entry boxes.
2. Use the multipurpose knobs to set the threshold voltage levels for the trigger.

SPI Data Source

In the drop-down list box, specify the MISO and or MOSI data source.

Supported ADEs

TekVISA supports these Application Development Environments:

- Microsoft C/C++
- Microsoft Visual Basic
- LabVIEW graphics software using the G language
- MATLAB analysis software


Tan

Inserts the text TAN(into the math expression.

Tanh

Inserts the text TANH(into the math expression.

Fast Acquisition

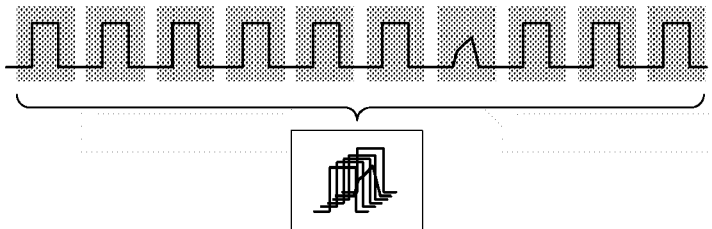

TekProbe/TekVPI Interfaces

These interfaces enable the instrument to sense information about the probe such as the serial number and other unique identification information. It also allows the instrument to provide power directly to the probe.

With this information, the instrument can automatically set up its requirements to match the characteristics of the probe, such as termination and attenuation.

TekVISA

TekVISA is a library of industry-standard compliant software components, organized according to the standard VISA model established by the VXIplug&play Systems Alliance. Use TekVISA in software to write interoperable instrument drivers to handle communicating between software applications and your oscilloscope. TekVISA offers the following features and benefits:

- Provides end users with a consistent methodology for using instrument drivers from a variety of vendors
- Provides programmers with language interface libraries for use with multiple application development environments, such as Microsoft C /C++, Microsoft Visual Basic, LabVIEW graphics software using the G language, and MATLAB analysis software.
- Provides a configuration utility for setting up additional VISA resources
- Allows software installation and connectivity on any number of PCs

TekVISA Excel Toolbar

The TekVISA Excel Toolbar allows direct, fast transfer of instrument measurements or captured waveforms to an Excel 97 and/or Excel 2000 worksheets. Transfer is via a toolbar that is integrated into Excel, implemented using the TekVISA ActiveX Control (TVC) and the Visual BASIC for Applications macro editor built into Excel.

Source code for the toolbar is accessible through Excel's built-in VBA editor for use as a learning tool for using the TekVISA ActiveX Control, or to cut-and-paste selected components to new VB applications.

TekVISA ActiveX Control (TVC)

The TekVISA Control (TVC) uses Microsoft Windows ActiveX control technology to simplify access from Microsoft Office and Visual BASIC applications to TekVISA and the underlying instrument.

This is accomplished by providing support for key TekVISA features within an ActiveX control object that is compatible with Excel's Visual BASIC for Applications, Visual BASIC 6.0, and other popular programming environments for Microsoft Windows.

Text Edit Controls

Use the following controls to edit the Math expression.



Moves the text insertion point to the left of the first character in the expression.



Moves the text insertion point one character to the left.



Moves the text insertion point one character to the right.



Deletes the character to the left of the insertion point.



Moves the text insertion point to the right of the last character in the expression.



Clears the entire math expression.


The Front-Panel MultiView Zoom Button



The Multipurpose Knobs



The following screen appears on MSO/DPO5000 Series instruments:

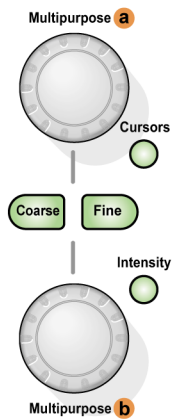

Report Generator

Report Generator, an Microsoft Windows application, lets you create custom reports for displaying your oscilloscope data.

Report Generator enables you to generate and print reports directly from the oscilloscope, enhancing your application capabilities by simplifying the process of creating and maintaining reports.

Timeout Trigger Criteria

- Click Stays High to trigger the instrument when the pulse is high for the specified time.
- Click Stays Low to trigger the instrument when the pulse is low for the specified time.
- Click Either to trigger the instrument if the signal has not crossed the threshold value for the specified time.

Time-Out Value

The time-out value determines when the instrument will trigger.

1. Click in the Timer entry box.
2. Use the multipurpose knob to set the time-out value.

Average

Inserts the text `AVG()` into the math expression. Enter an argument to the function. This function produces the average of the argument.

Smallest Integer

Inserts the text `CEIL(` into the math expression.

The `CEIL` function takes the smallest integer $>$ the expression.

Derivative

Inserts the text `DIFF()` into the math expression. Enter an argument to the function.

The derivative function produces the derivative of the argument.

Absolute Value

Inserts the text `FABS()` into the math expression. The `FABS` function takes the absolute value of the expression.

Largest Integer

Inserts the text `FLOOR()` into the math expression. The `FLOOR` function takes the largest integer $<$ the expression.

Integral

Inserts the text `INTG()` into the math expression. Enter an argument to the function.
The integral function produces the integral of the argument.

Invert

Inserts the text `INV()` into the math expression. Enter an argument to the function.
The invert function inverts the argument within the parentheses.

Base 10 Logarithm

Inserts the text `LOG()` into the math expression. Enter an argument to the function.
The log function produces the base 10 logarithm of the argument.

Natural Logarithm

1. Inserts the text LN() into the math expression.
2. Enter an argument to the function.

The LN function produces the natural logarithm of the argument.

Square Root

Inserts the text SQRT() into the math expression. Enter an argument to the function.

The square root function produces the square root of the argument.

Time Stamps

Time stamps are a convenient way of measuring the time between triggers when using FastFrame.

Time Stamp Readout Format

The Time Stamp readouts are displayed in the following format:

Day/Month/Year/ Hours/Minutes/Seconds/ Milliseconds/Microseconds/Nanoseconds/Picoseconds

Upper and Lower Threshold Levels

Use the upper and lower threshold levels to measure the transition time as shown in the trigger graphic.

1. Click in the Upper Level entry box and use the multipurpose knob to set the voltage level.
2. Click in the Lower Level entry box and use the other multipurpose knob to set the voltage level.

Transition Time Trigger Criteria

1. Click in the Time entry box and use the multipurpose knob to set the target transition time.
2. Click in the Transition entry box.
 - <. Triggers the instrument when the transition time is less than the specified time.
 - Greater Than. Triggers the instrument when the transition time is greater than the specified time.

Trigger Coupling

The trigger coupling determines what part of the signal is passed to the trigger circuitry. All trigger types except edge triggering use DC coupling only. Edge triggering can use all available coupling choices.

- **DC**. This coupling passes all input signals to the trigger circuitry.
- **AC**. This coupling passes the input signals above 60 Hz to the trigger circuitry.
- **HF Reject**. This coupling attenuates signals above 50 kHz before passing the signal to the trigger circuitry.
- **LF Rej**. This coupling attenuates signals below 80 kHz before passing the signal to the trigger circuitry.
- **Noise Rej**. This coupling provides stable triggering by increasing the trigger hysteresis. Increased hysteresis reduces the trigger sensitivity to noise but may require greater signal amplitude.

Glitch Width

These controls specify the action of the glitch width criteria. The trigger graphic displays the criteria you have selected.

1. Click in the Width entry box and set the width with the multipurpose knob.
2. Use the Glitch Width drop-down list box to specify the action:
 - Less Than. Triggers the instrument only on glitches narrower than the specified width
 - Greater Than. Triggers the instrument only on pulses wider than the specified width.

Trigger Graphic

The trigger graphic displays a visual indicator of the trigger criteria. Depending on the trigger type, the instrument will update the graphic as you define the trigger parameters.

Trigger Graticule

All graticule types are available for selection from the drop-down list. The IRE graticule is normally used with the NTSC signals, and the mV graticule is normally used with all other video signals.

Trigger Holdoff

After a trigger event, the instrument will not accept another trigger event until after the holdoff value is exceeded. Holdoff is usually specified in units of time, but other units may be used.

Trigger Holdoff: Auto

When the Trigger Holdoff is set to Auto, the instrument automatically calculates the trigger holdoff time. It is normally equal to five times the current Horizontal Scale setting.

After a trigger event, the instrument will not accept another trigger event until after the holdoff value is exceeded. Holdoff is usually specified in units of time, but other units may be used.

Trigger Holdoff: Random

When Trigger Holdoff is set to Random, the instrument delays the trigger a random amount of time between triggers. This means that successive acquisitions are unrelated to the previous trigger signal.

Trigger Holdoff: Time

After a trigger event, the instrument will not accept another trigger event until after the holdoff value is exceeded. Holdoff is usually specified in units of time, but other units can be used.

When the Trigger Holdoff is set to Time, you can manually adjust the value with the multipurpose knob. Use this option when the signal that you want to trigger on has several possible trigger points. Use the Trigger Holdoff control to delay the trigger system for a specified amount of time between triggers so that you can obtain a stable display.

Trigger Level

The trigger level determines the voltage level where the trigger point occurs.

To Use

- Adjust the trigger level with the front-panel Trigger Level knob.
- Click in the Level entry box in a Trigger control window and use the multipurpose knob to adjust the level.

Trigger Menu

Use the Trigger menu to set up the instrument to trigger on live waveforms. Several different types of triggering are available.

Trigger On

Select a value from the Trigger On drop-down list to specify where the trigger will occur on the video signal. The Trigger On drop-down list contains the options Field, All Lines, and Line #.

- If you select Field, use the drop-down list to select Odd, Even, or All.
- If you select Line #, click in entry field and use the multipurpose knob to set the line number. Line numbers wrap when their limits are reached. The range of line numbers depends on the chosen Format.

NOTE. *If you select the NTSC format, use the multipurpose knob to first scroll through all of the odd lines, and then the even lines.*

Trigger On Bus

In the Trigger On drop-down menu, select the type of data to trigger on. The available selections are different for each bus type.

Trigger Polarity

The Polarity buttons set the glitch polarity.

- Click Pos to trigger on a positive-going pulse.
- Click Neg to trigger on a negative-going pulse.
- Click Either to trigger on positive or negative glitches.

Trigger Qualification


You can qualify some trigger types by the logical state of other channels or by a bus pattern for MSO70000/C Series instruments.

- Click Occurs to trigger the instrument only when the defined trigger type occurs. No qualification occurs.
- Click Logic to trigger the instrument when the defined trigger type occurs and the logic input conditions occur.
- Click Occurs And to trigger the instrument when the defined trigger type occurs and the bus pattern occurs on the selected bus.

Trigger Occurs And Qualification Pattern Editor

NOTE. This online help supports many oscilloscope models from Tektronix. This feature is only available on some models.

For the supported instruments, use the controls to set up the Occurs And pattern for the instrument to qualify the following triggers: Glitch, Runt, Setup/Hold, Timeout, Transition, Width, and Window.

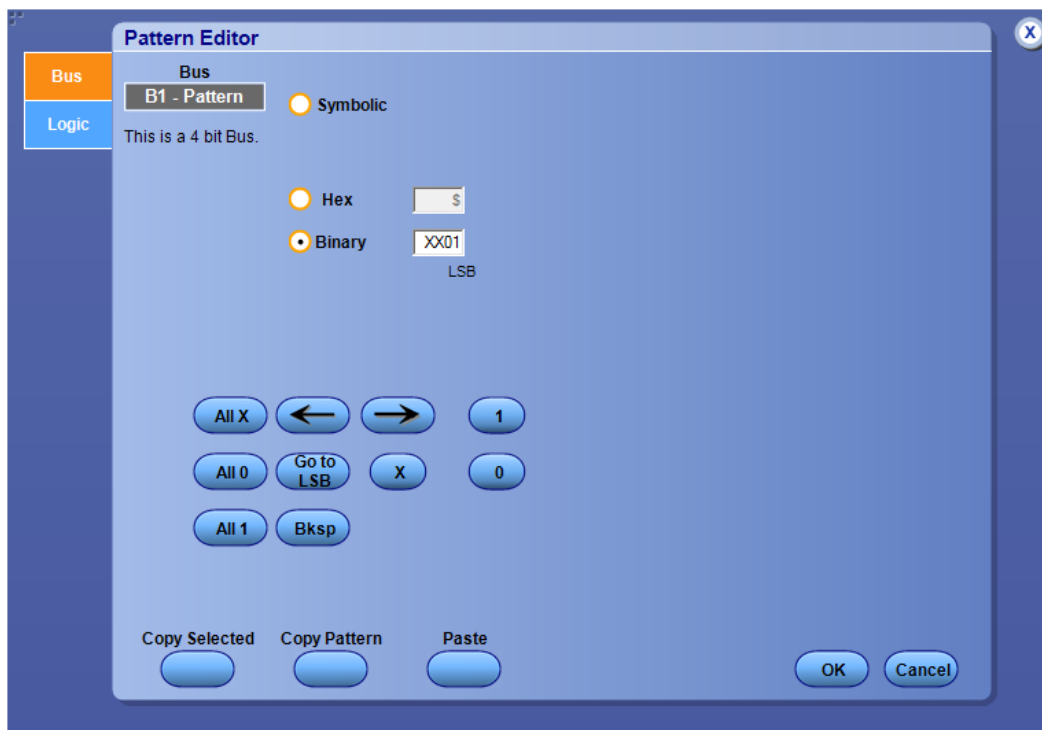

What do you want to do next?

- [Learn how to set the voltage threshold level for channels used as digital waveforms. \(see page 120\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Trigger Reset

1. In Trigger Reset Type drop-down menu, select a condition for a trigger reset.
2. Use the drop-down menus to set up Time, Transition, State, Source, or Threshold conditions for the specified reset.

Trigger Settings (Shared - Independent)

This feature determines how the instrument applies trigger levels to the input channels:

- **Shared.** Sets the trigger level in common across all input channels. Changing the trigger level of one channel changes the trigger levels of all input channels to the same level.
- **Independent.** Allows you to set a unique trigger level for each input channel. Changing the trigger level on one channel does not affect the trigger level setting of the other input channels.

Trigger Slope

The trigger slope determines whether the instrument finds the trigger point on the rising edge, falling edge, or both edges of the signal.

Trigger Source


The trigger source determines the source of the trigger signal. The input channels are the most commonly used trigger sources and are available for all trigger types.

NOTE. *You have the option to add user-defined label for analog, reference, bus, and digital sources.*

Trigger Summary

In the upper-right corner of the setup window, the trigger summary provides a one-line summary of the trigger setups. Use this summary to get an overview of the trigger setups without having to look through all of the trigger tabs.

Trigger T Marker

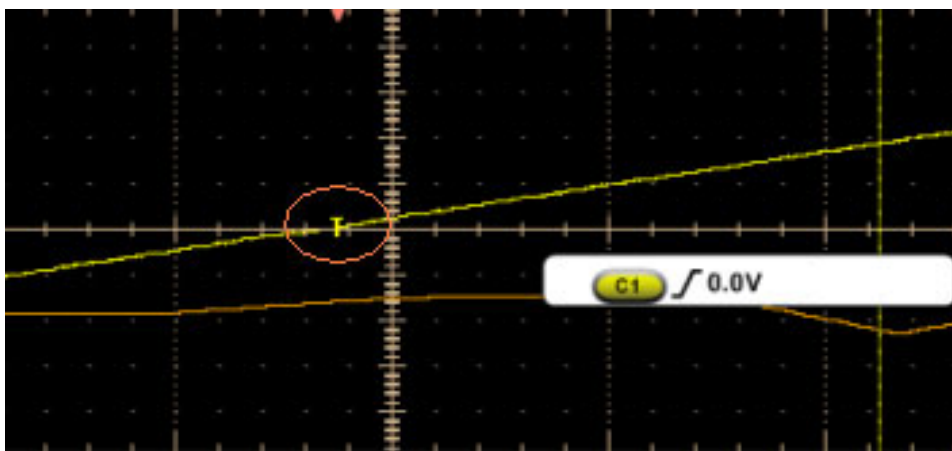

Window Event Trigger

To qualify the trigger for Window triggering, select from these drop-down list selections:

- **Enter Window.** Triggers the instrument when the signal enters the window as defined by the threshold levels.
- **Exit Window.** Triggers the instrument when the signal leaves the window as defined by the threshold levels.
- **Inside > t.** Triggers the instrument when the signal leaves the window, defined by the threshold levels, after remaining inside the window longer than the time specified by Width:
 - Click POS to trigger on waveforms with a positive polarity exiting the window.
 - Click NEG to trigger on waveforms with a negative polarity exiting the window.
 - Click EITHER to trigger on either polarity.
- **Outside > t.** Triggers the instrument when the signal reenters the window, defined by the threshold levels, after remaining outside the window longer than the time specified by Width.

Trigger Width Limits

To trigger on a pulse width outside a range of limits:

1. Select Outside from the Pulse Width drop-down list.
2. Set the Upper Limit and Lower Limit with the multipurpose knobs.

To trigger on a pulse width within a range of limits:


1. Select Inside from the Trig When drop-down list and
2. Set Upper Limit and Lower Limit with the multipurpose knobs or pop-up keypad.

Trigger Polarity

The polarity buttons define the polarity of the pulse width.

- Click Pos to trigger on a positive-going pulse.
- Click Neg to trigger on a negative-going pulse.

Typical DSO Acquisitions

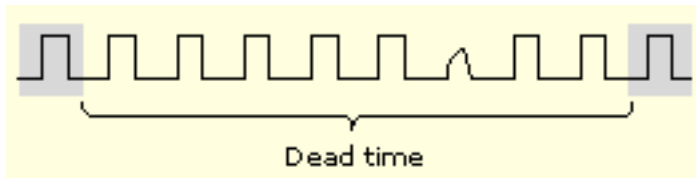

Using FastFrame Acquisitions

Consider the following operating characteristics when using FastFrame :

- You can push Run/Stop to terminate a FastFrame sequence. If any frames were acquired, they are displayed. If no frames were acquired, the previous FastFrame waveform is displayed.
- Because FastFrame introduces additional processing time into the operation cycle of acquire, process, and display, it is best to use Single Sequence Acquisition (see Acquire menu, Stop After menu). With Single Sequence selected, you will see the current acquisition sequence; otherwise, the display lags the current sequence by one sequence. You can also see the current sequence by pushing the Run/Stop button to stop the acquisition.
- FastFrame greatly reduces the minimum trigger holdoff time, enabling you to acquire and store records at rates of up to 225,000 captures per second (until the number of frames requested has been acquired). FastAcq mode also provides exceptionally fast acquisition rates. Both modes have advantages. FastFrame preserves the actual data associated with each trigger event for further analysis or visual inspection, but only acquires at the fast rate for short bursts of time. FastAcq mode combines the data from all trigger events into a single pixel map, but can acquire at exceptionally fast rates continuously, not just for short bursts.
- In single sequence acquisition mode, statistics are calculated using all frames in the current acquisition except for Average and Envelope frames. If the currently selected frame is the Average or Envelope Frame, measurements are taken on the frame but statistics are still based on all frames excluding the Average and Envelope frames. Statistics reset with each new single sequence acquisition.
- On a reference waveform, statistics are derived from all frames in that reference waveform when FastFrame is on. If FastFrame is off, the statistics reflect only the first frame that is displayed.

Using Print Screen

If you have an attached keyboard you can use the Print Screen (Prt Sc) key to copy the screen contents to the Windows clipboard. This bitmap does not include the waveforms or graticule. The waveforms and graticule are displayed by the graphics adapter outside of normal Windows mechanisms.

To Use

To capture the instrument screen with its graticule and waveforms, use the Edit menu Copy command after selecting Image in the Copy Setup menu, or to build a bitmap file, select the File menu Save As command. Click Options under Screen Capture, and then select Full Screen under View. For additional information, see [Save As Dialog Box: Screen Captures. \(see page 407\)](#)

You can display the current date and time on screen so that they appear on hard copies you print. To do this, toggle the Display Date/Time button On from the Display Setup control window Objects tab. If you need to reset the date and time for any reason, right-click the date and time and then select Set Date/Time.

Behavior

Pressing the Print Screen key on an attached keyboard copies the screen image minus the waveform and graticule to the Windows clipboard. Using the Edit menu Copy command copies the screen image with the waveform and graticule.

Analyze Menu

The Analyze menu provides access to search and place marks on acquired waveforms. It also provides access to tools for DDR analysis and other applications that are installed on your instrument.

Utilities Menu

The Utilities menu provides access to utilities used by the instrument such as instrument calibration, instrument diagnostics, and user preferences. All utilities are accessible from the menu bar only. None of the utilities are directly accessible from the front panel controls or from the toolbar.

Vertical Menu

Use the Vertical menu options to set vertical parameters for waveforms. This menu also provides access to the Zoom controls and the probe calibration, deskew, and attenuation functions.

Position/Offset Control Window: Position

From the Vertical menu, select Position/Scale.

Overview

Use the Position control to set the vertical position of the selected waveform.



To Use

- Click in the Position entry box to map it to one of the multipurpose knobs; then use the knob to move the waveform.
- You can also use the up-down arrows to change the value.

Behavior

The Position control moves the vertical position of the waveform 0.2 divisions (0.02 divisions with FINE control). Increasing the position value moves the waveform up, and decreasing the position value moves the waveform down.

The Position control differs from the Offset control; for information on the Offset control for channel waveforms refer to the [Vertical Offset Control Window \(see page 361\)](#).

TIP. Several alternatives are available for adjusting the position of a waveform:

- Use the dedicated knob on the front panel for the selected waveform.
- Enter a value with the on-screen pop-up keypad.
- Use an attached keyboard to type a value directly into the position field.

What do you want to do next?


- [Learn more about offsetting channel waveforms. \(see page 361\)](#)
- [Learn more about the Vertical controls. \(see page 361\)](#)
- [Learn more about the Waveform controls. \(see page 361\)](#)
- [Learn more about the Vertical Scale controls. \(see page 789\)](#)

Position/Offset Control Window: Scale

From the Vertical menu, select Position/Scale.

Overview

Use the Scale control to set the vertical scale value of the selected waveform.

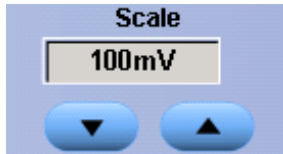

To Use

- Click in the Scale entry box to map it to one of the multipurpose knobs; then use the knob to move the waveform.
- You can also use the up-down arrows to change the value.

Behavior

Each waveform has its own vertical scale parameter. For a signal with constant amplitude, increasing the scale causes the waveform to appear smaller. Decreasing the scale causes the waveform to appear larger.

The scale affects all waveforms, but affects channel waveforms differently:

- For channel waveforms, the scale setting controls the vertical size of the [acquisition window \(see page 55\)](#) as well as the display scale. The range and resolution of the scale value depends on the attached probes and any other external factors you may have specified.
- For reference or math waveforms, the scale setting controls the display only. Scaling these waveforms has no affect on the acquisition hardware.
- Use the dedicated knob on the front panel for the selected waveform.
- Enter a value with the on-screen pop-up keypad.
- Use an attached keyboard to type a value directly into the position field.

What do you want to do next?


- [Learn more about the Vertical controls. \(see page 361\)](#)
- [Learn more about the Waveform controls. \(see page 361\)](#)

Bandwidth

From the Vertical menu, select Vertical Setup.

Overview

Use the following controls (similar to the example shown below) to set the bandwidth and filter unwanted high-frequency noise from the waveform. You can also use the [Bandwidth Enhancement Controls \(see page 368\)](#) to normalize the bandwidths between selected channels.

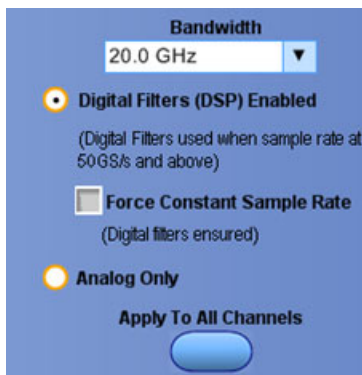

To Use

Click the appropriate option buttons and use the drop-down list box to specify the bandwidth you want to acquire. The available selections and controls will vary depending on the instrument model and probe you are using.

Behavior

Bandwidth refers to the range of frequencies the instrument can acquire and display accurately with less than 3 dB attenuation. Each input channel has its own bandwidth selection.

To take accurate measurements, the input frequency should be much less than the rated bandwidth of the instrument. A good rule to follow is to ensure the bandwidth of the instrument system is three to five times the bandwidth of the signal that you want to measure.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 810\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)

Bus Pattern Condition

NOTE. *The Bus Pattern Condition option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*

For the supported instruments, use the control to select how many occurrences of the pattern to detect before the instrument triggers.

Bus Selection

NOTE. *The Bus Selection option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*

For the supported instruments, use the control to select the Bus on which to trigger from the list of bus setups.

Bus Time Condition

NOTE. *The Bus Time Condition option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MOSE.*

For the supported instruments, click the Time entry box and enter a value with the keypad or use the multipurpose knobs to select a value.

Trigger Logic State Condition


For various trigger types, in the Trigger if Logic State drop-down list, select True to trigger the instrument when the logic patterns are true. Select False to trigger the instrument when the logic patterns are false.

Bus Pattern Setup

NOTE. *The Bus Pattern Setup option is available only on MSO5000 and MSO70000/C Series instruments and on DPO5000 Series instruments with option MSOE.*


For the supported instruments, use the controls to set up the Parallel Bus parameters. Click the Edit button to access the Pattern Editor dialog box.

For information on the Pattern Editor dialog box, click the buttons.

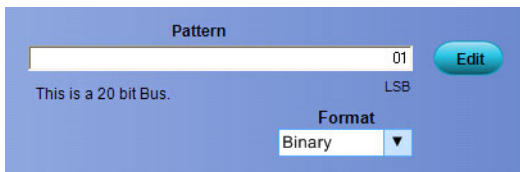


Bus Pattern Editor (Bus Tab)

When you select a parallel bus and click the Edit button, use the Pattern Editor controls to set up the bus trigger pattern for the instrument to use to detect a specific parallel bus value.

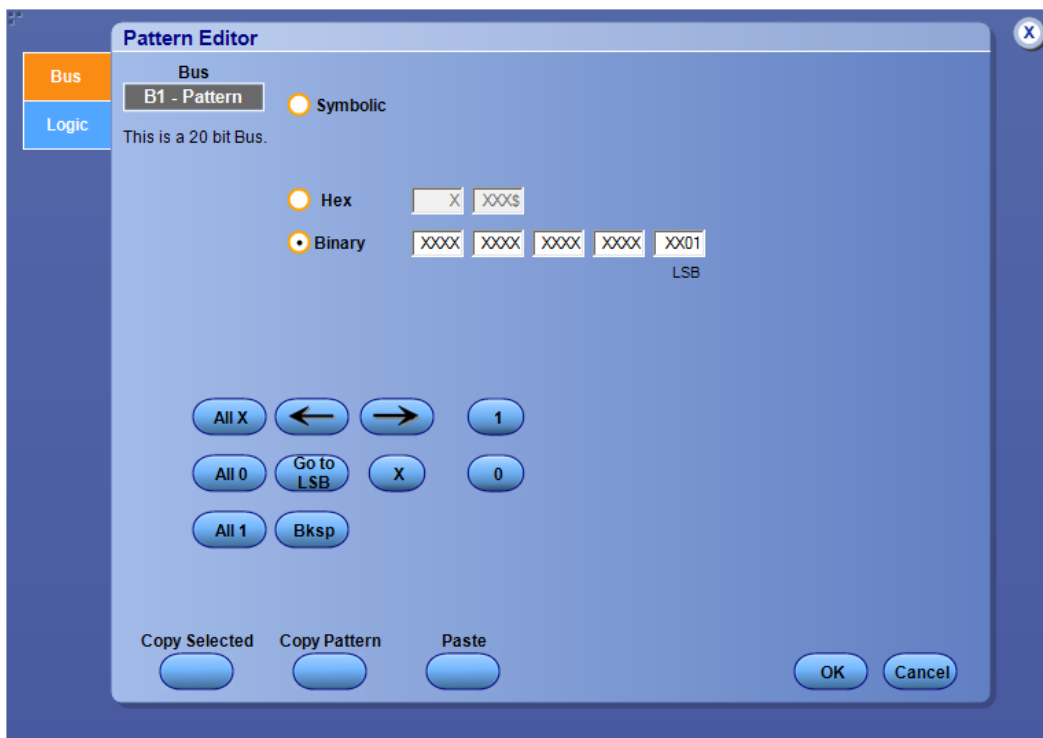

When you select a serial bus and click the Edit button, use the Pattern Editor controls to set up the bus trigger pattern for a serial bus value. For example, the Data (SPI bus), or the Address, Data, or Address and Data (I2C bus) bus values.

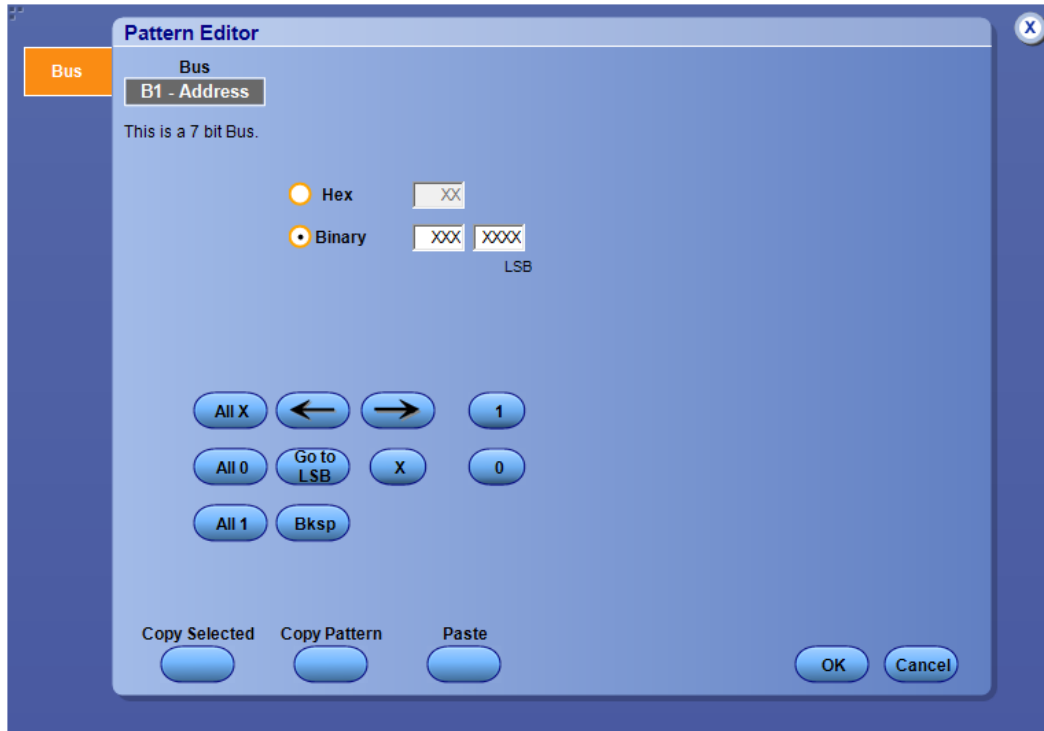

What do you want to do next?


- [Learn how to set the voltage threshold level for logic waveforms and to define a pattern. \(see page 799\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Bus Pattern Editor (Bus Tab)


Use the Pattern Editor controls to set up the bus trigger pattern for the instrument as follows:

For parallel bus

Select the parallel bus and click Edit button.

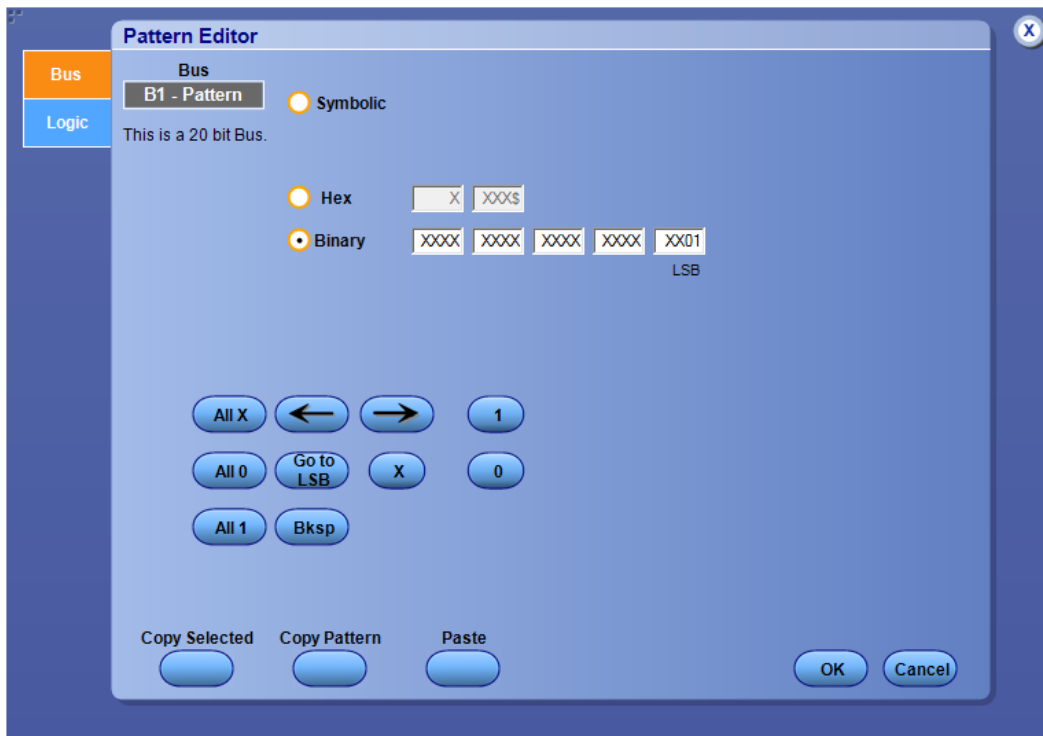


Select a bus and click Edit button.

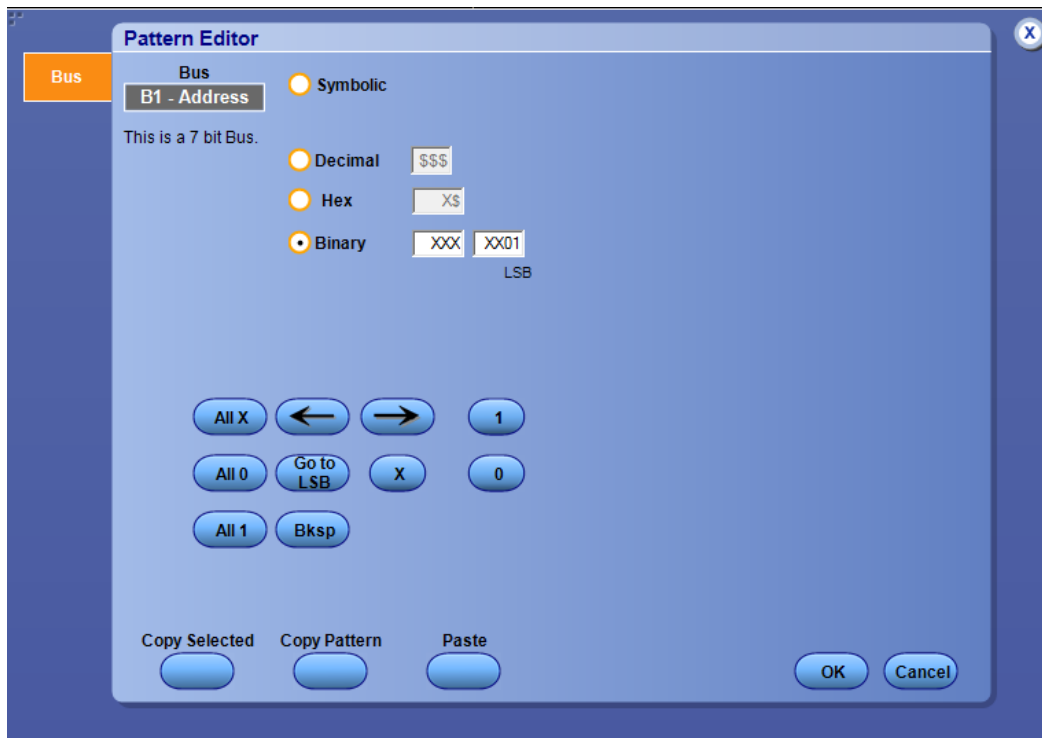

For serial bus


Select a bus SPI (with Trigger On set to Data), RS232 (with Trigger On set to Data), I2C (with Trigger On set to Data), or USB (with Trigger On set to Special Packet, Special Type set to SPLIT 1000, and select Hub

Address or Port Address) and click Edit button. The Bus field would display the text depending on the type of bus selected (address, data, hub, or port). For example for data bus (B1), the field would display B1Data.

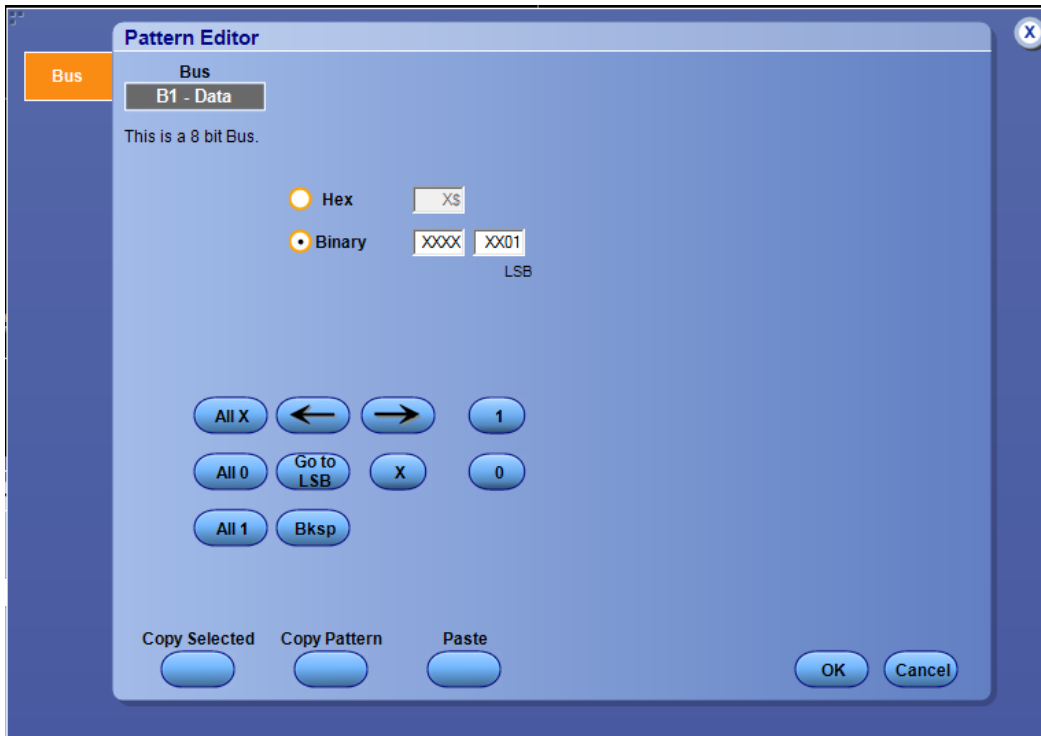

Select a bus I2C (with Trigger On set to Address or Addr+Data) or USB (with Trigger On set to Token Address Packet or Data Packet) and click the Edit button. The Bus field would display the text depending

on the type of bus selected (address, data, hub, or port). For example for data bus (B1), the field would display B1Data.

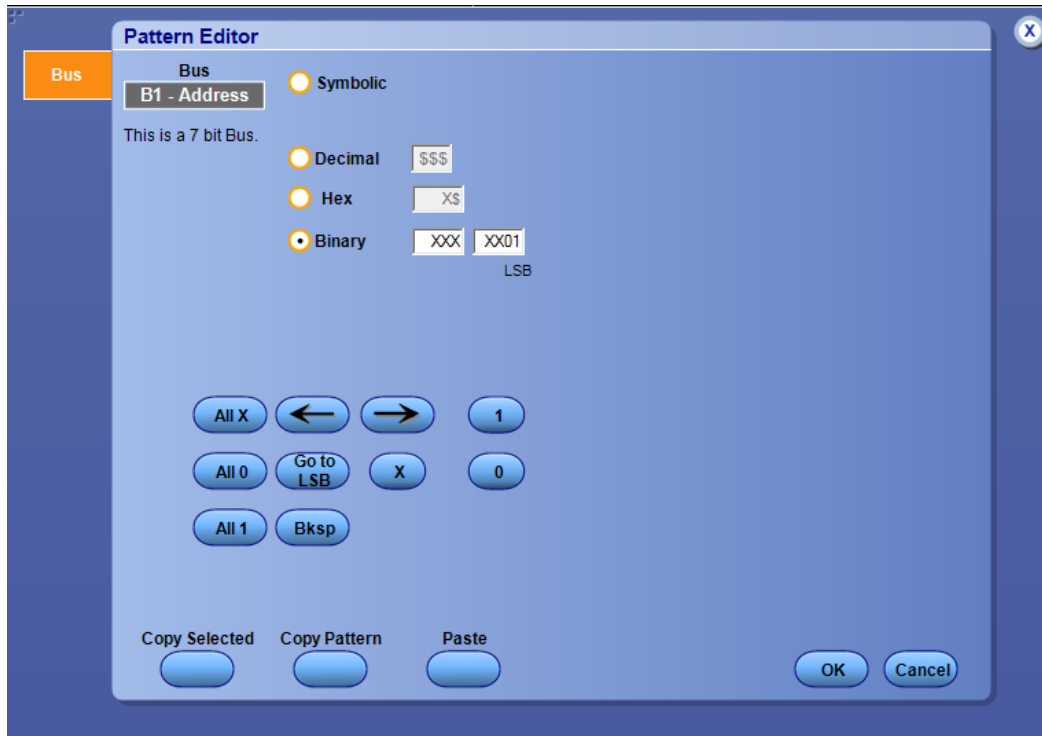

What do you want to do next?

- [Learn how to set the voltage threshold level for logic waveforms and to define a pattern. \(see page 799\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Bus Pattern Editor (Logic Tab on MSO Series)

Use the controls to set the bus trigger pattern of the channels the instrument uses as logic waveforms to detect a parallel or serial bus value. Click a channel button to select the value for that channel: 0, 1, or X. For convenience, you can also change the voltage reference level threshold values.




What do you want to do next?

- [Learn how to define a pattern for a bus. \(see page 793\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Bus Pattern Editor (Logic Tab on MSO/DPO5000 Series)

Use the controls to set the bus trigger pattern of the channels the instrument uses as logic waveforms to detect a parallel or serial bus value. Click a channel button to select the value for that channel: 0, 1, or X. For convenience, you can also change the voltage reference level threshold values.

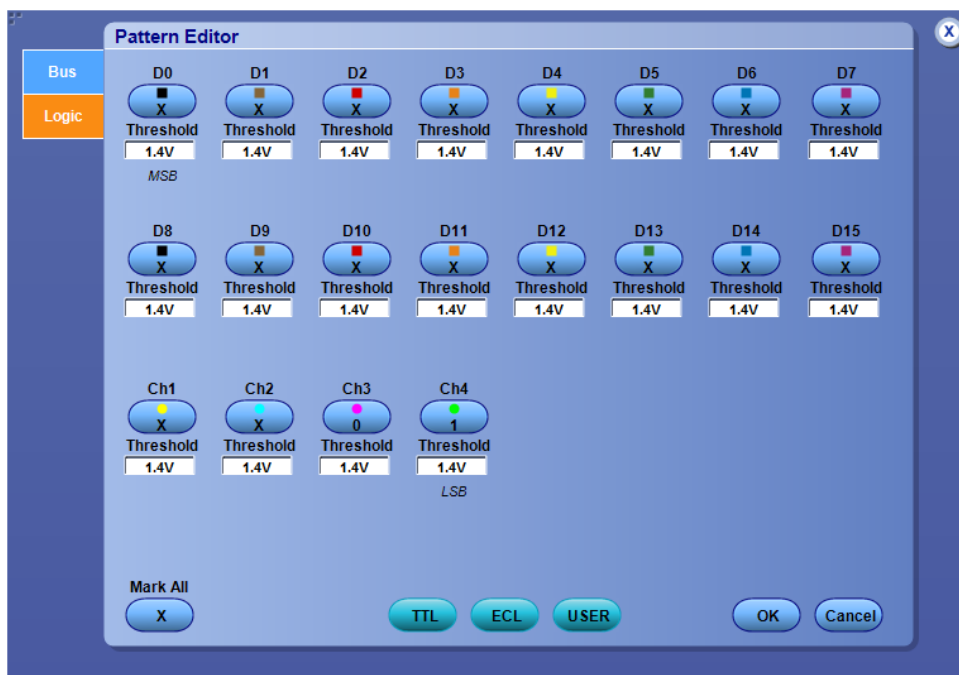


What do you want to do next?

- [Learn how to define a pattern for a bus. \(see page 793\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Bus Pattern Format

For MSO70000/C Series instruments, from the Trigger menu, select the Bus trigger type. You can change the format of the bus pattern after you define a pattern.

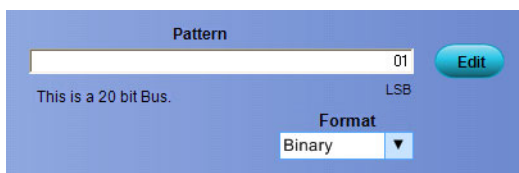

- Hex causes the instrument to display the bus pattern as a hexadecimal value.
- Binary causes the instrument to display the bus pattern as a binary value.
- Decimal causes the instrument to display the bus pattern as a decimal value.

Bus Trigger On Selections

For MSO Series instruments, select the type of data to trigger on. The available selections in the Trigger On drop-down list are different for each serial bus.

Trigger Logic Thresholds Setup


NOTE. This online help file supports many oscilloscope models from Tektronix. This feature is only available on some models.

For the supported instruments, from the Trigger menu, select the Bus, the Logic Pattern, or the Logic State trigger. Click the Logic Thresholds button to access the Threshold Setup dialog box.

Overview


Use the controls to set up the Threshold Setup parameters for a Pattern or a State trigger.

NOTE. When you select a Pattern or a State trigger as the B Event, digital channels are not available.

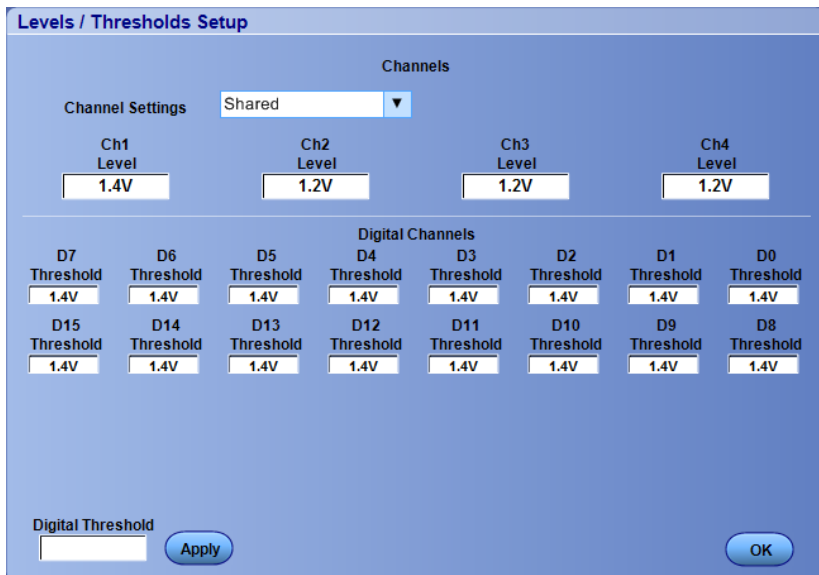

The instrument displays a different Threshold Setup dialog box for each type of bus defined: parallel or serial types.

This is an example of the Threshold Setup dialog box when you select a parallel bus in the Bus list of the Trigger menu.

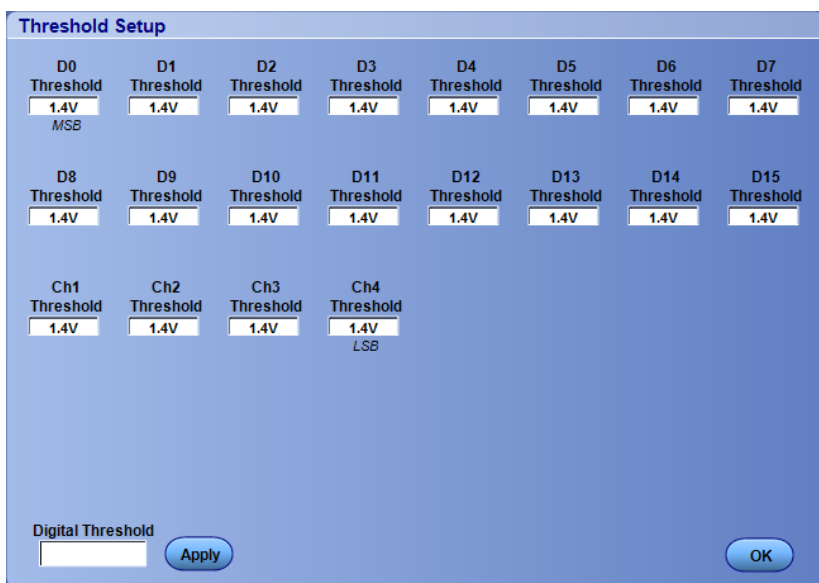


This is an example of the Threshold Setup dialog box for a 4-bit parallel bus.

The dialog box is titled "Threshold Setup" and has a blue background. It contains four threshold settings for bits D0, D1, D2, and D3. Each setting consists of a label "D0 Threshold", "D1 Threshold", "D2 Threshold", or "D3 Threshold" above a text input field containing "1.4V". Below the D0 and D3 inputs are the labels "MSB" and "LSB" respectively. At the bottom left, there is a "Digital Threshold" label above an empty text input field. To the right of this field are two buttons: "Apply" and "OK".


This is an example of the Threshold Setup dialog box for an I2C serial bus.

The dialog box is titled "Threshold Setup" and has a blue background. It contains two threshold settings for SCLK and SDA. The SCLK setting consists of the label "SCLK" above "D0 Threshold" and a text input field containing "1.4V". The SDA setting consists of the label "SDA" above "D1 Threshold" and a text input field containing "1.4V". At the bottom left, there is a "Digital Threshold" label above an empty text input field. To the right of this field are two buttons: "Apply" and "OK".


This is an example of the Threshold Setup dialog box for an SPI serial bus.

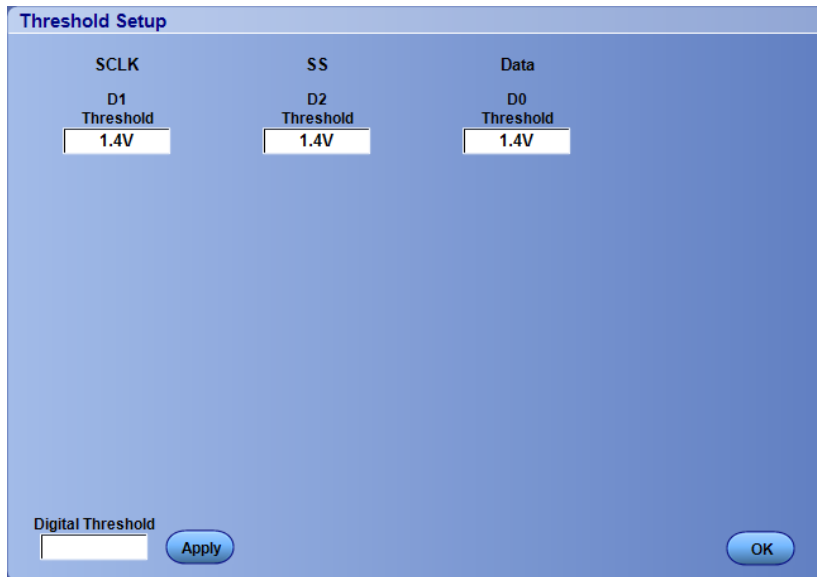

This is an example of the Threshold Setup dialog box for an RS232 serial bus.

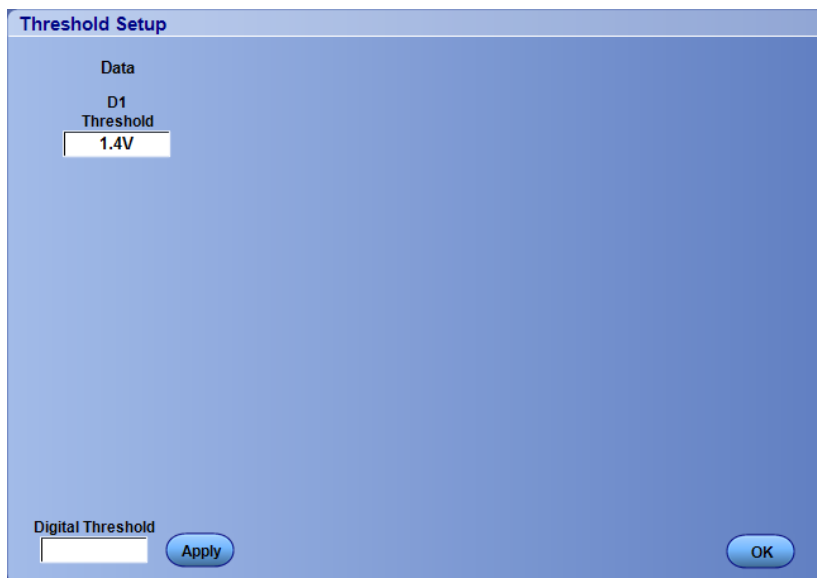

This is an example of the Threshold Setup dialog box for an USB serial bus.

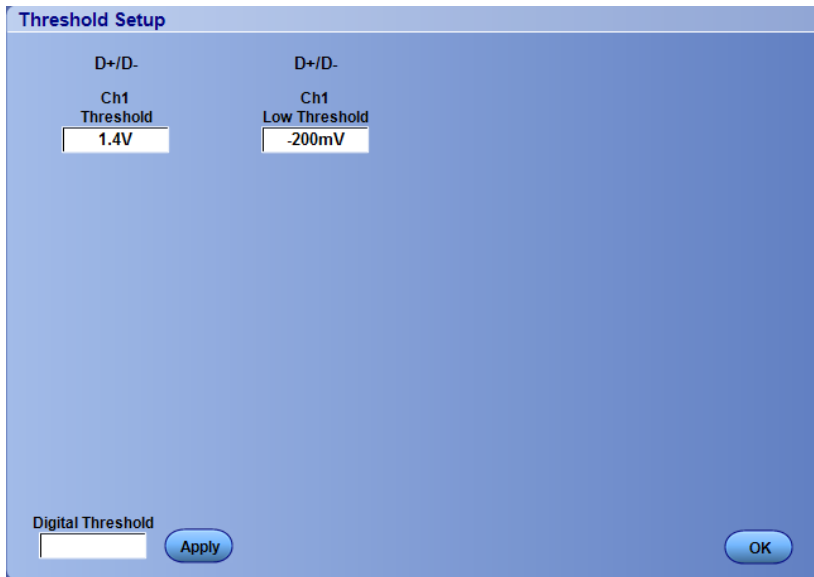

What do you want to do next?

- [Learn about the Global Threshold field. \(see page 87\)](#)
- [Learn about bus setups. \(see page 89\)](#)

Coupling Setup

From the Vertical menu, select Vertical Setup.


Overview

Use the Coupling controls to couple the signal from the attached probe to the instrument.

For <4 GHz oscilloscopes, the following selections are available:



For ≥ 4 GHz oscilloscopes, the following selections are available:

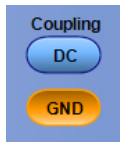

To Use

- Select DC to display waveforms with AC and DC components.
- Select AC to display waveforms with AC components.
- Select GND to display a zero-volt waveform. Use this selection to establish the ground reference point on the display.

NOTE. *The 50 Ω channel input termination becomes an open circuit when you select GND coupling.*

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 790\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)

Display On/Off

From the Vertical menu, select Vertical Setup.

To Use

1. Click Display to turn the channel waveform display on and off.
2. [Assign a label to the waveform \(see page 361\)](#) with the pop-up keyboard to make it easier to identify on the screen.
3. Set the units of vertical scale in the Units text box.



Behavior

The tab selector on the side of the Vertical Setup control window identifies the channel waveform source. The Display button, the label, and units apply only to the selected waveform.

Each waveform (channel, math, or reference) has its own Display button, label, and units. If you do not enter a label for the selected waveform, the label will be left blank. You can position the label anywhere on the graticule by clicking and dragging it to the desired location.

Any displayed channel waveform can be turned off without impacting any math functions, measurements, or histograms done on that waveform. You may want to turn some waveform displays off to make the remaining waveforms easier to view and analyze.

TIP. Use the dedicated front-panel Ch <1 - 4> buttons to turn the channel waveforms on or off.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 807\)](#)

Offset

From the Vertical menu, select Vertical Setup.

To Use

Use the Offset controls to set the value of the selected Channel vertical offset. This shifts the vertical [acquisition window \(see page 55\)](#) to match the waveform data you want to acquire.

1. Click a channel tab to select the vertical input channel.
2. Click in the Offset entry box and use a multipurpose knob to set the offset value.



Behavior

Use the Offset control to eliminate [clipping the waveform \(see page 363\)](#). The offset control affects the vertical acquisition window by subtracting a DC bias from the waveform. This moves the level at the vertical center of the acquisition window of the selected channel. Visualize offset as scrolling the acquisition window toward the top of a large signal for increased offset values and scrolling toward the bottom for decreased offset values.

The offset control affects the waveform display by defining the channel reference indicator to match the offset rather than the ground level. The offset affects only channel waveforms as compared to the position control that affects all waveforms, including math and reference waveforms.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 810\)](#)


Vertical Position/Scale

From the Vertical menu, select Vertical Setup.

To Use

Use the Position control to set the vertical position of the waveform and the Scale control to set the vertical scale.

3. Click a Chan <1–4> tab to select the waveform on screen.
4. Click in the Position entry box and use the multipurpose knobs to adjust the position of the waveform.
5. Click in the Scale entry box and use the multipurpose knobs to adjust the vertical sensitivity.

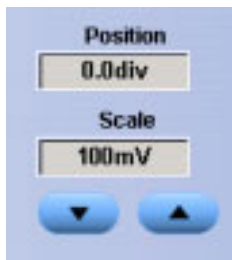

TIP. You can also use the dedicated Position and Scale knobs on the front panel to control the position and scale of the selected waveform.

Behavior

Each waveform has its own vertical Position control. The control increases or decreases the vertical position of the waveform 0.2 divisions (0.02 divisions using the [Fine knob \(see page 809\)](#)). Increasing the position value of the waveform moves the waveform up, and decreasing the position moves the waveform down.

Each waveform also has its own vertical Scale control. For a signal with a constant amplitude, increasing the scale causes the waveform to appear smaller. Decreasing the scale causes the waveform to appear larger.

For channel waveforms, the scale setting controls the vertical size of the [acquisition window \(see page 55\)](#) as well as the display scale. The range and resolution of the scale value depends on the attached probes and any other external factors that you may have specified.

NOTE. The vertical system [bandwidth \(\$B_w\$ \) readout \(see page 809\)](#) will display the probe tip bandwidth if the tip is limiting the bandwidth of the selected channel. See [User Interface Map \(see page 33\)](#) for the location of the readouts.

What do you want to do next?


- [Continue to learn about the Vertical Setup controls. \(see page 807\)](#)

Multipurpose Knobs

The multipurpose knobs can be used to set screen interface parameters. To use, click a control on the screen to map it to the multipurpose knob(s).



On MSO/DPO5000 Series instruments

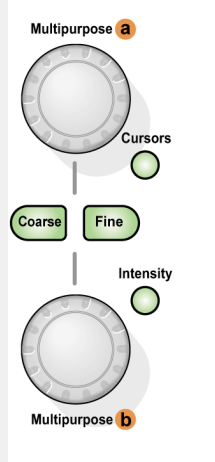

You can undo any mapping by right-clicking the multipurpose knob(s) and selecting Deassign Multipurpose Knobs, or from the Utilities menu, select the Deassign Multipurpose Knobs command. The mapping is deassigned until you perform that function again.

Turn the knob(s) or scroll with the mouse wheel until the desired selection appears in the readout mapped to the knob. Push the FINE button, or click the mouse wheel to use the knob to make small changes, for example, to add another decimal place for greater accuracy.

When no control windows are open and cursors are turned on, the multipurpose knobs control the cursor positions.

NOTE. These knobs are automatically mapped when certain functions are performed, for example, when the MultiView Zoom button is pushed.

Bandwidth Readout (B_W)




Nominal system bandwidth consists of a combination of factors including, but not limited to, probe bandwidth, probe tip bandwidth, and bandwidth selections made in the Vertical Setup Control Window.

Probe Controls

From the Vertical menu, select Vertical Setup.

Overview

The Probe controls provide access to the Probe Setup, Calibration, Deskew, and Attenuation control windows.

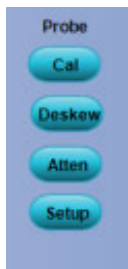

To Use

Click the Probe buttons to display the Probe Setup control windows:

- Use [Setup \(see page 374\)](#) to configure the attached probe type. The setup will vary depending on the individual probe you connect.
- Use [Cal \(see page 376\)](#) to check the status of the attached probe and to compensate the entire signal path from the probe tip to the digitized signal.
- Use [Deskew \(see page 379\)](#) to compensate the vertical channels for propagation delays of different length probes.
- Use [Atten \(see page 380\)](#) to change the default attenuation or gain for the selected probe channel.

What do you want to do next?

- [Learn more about the Attenuation controls. \(see page 380\)](#)
- [Learn more about the Deskew controls. \(see page 379\)](#)
- [Learn more about the Probe Calibration controls. \(see page 372\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)

Termination

From the Vertical menu, select Vertical Setup.

To Use

Use the Termination controls to select the channel input resistance:

For <4 GHz oscilloscopes:

- Select 1 M Ω for use with [high impedance passive probes \(see page 365\)](#).
- Select 50 Ω for use with most [active probes \(see page 365\)](#) and [low impedance \(Zo\) probes \(see page 812\)](#).



For ≥ 4 GHz oscilloscopes, Termination is fixed at 50 Ω .



Behavior

The correct termination is set automatically when you attach a probe with a [TekProbe/TekVPI interface \(see page 365\)](#) to the instrument. However, you may have to set the termination manually if you use a probe without a TekProbe Interface.

Consider the following when using 50 Ω termination with any channel:

- AC coupling is not available with 50 Ω termination.
- The instrument reduces the maximum vertical scale setting for the channel with a X10 probe attached, since the amplitudes appropriate for the higher settings would overload the 50 Ω input.
- The instrument switches to 50 Ω and disables AC coupling (and switches coupling to DC if AC is selected) if you connect an active probe. The active probes also reduce the maximum vertical scale setting as described above. This behavior results in 50 Ω , nonalternating current coupling, which is appropriate for active probes.

What do you want to do next?

- [Continue to learn about the Vertical Setup controls. \(see page 805\)](#)
- [Return to the Vertical Setup control window overview. \(see page 355\)](#)

Low Impedance Probes

Most low impedance (Z_o) passive probes measure frequencies or timing measurements more accurately than general-purpose probes, but they take less accurate amplitude measurements. They offer a higher bandwidth to cost ratio.

The low input impedance passive probes must be terminated in a 50 Ω instrument input. Input capacitance is much lower than high impedance passive probes, typically 1 pF, but input resistance is also lower (500 Ω to 5000 Ω typically). Although that DC loading degrades amplitude accuracy, the lower input capacitance reduces high frequency loading to the circuit under test. That makes low input impedance passive probes ideal for timing and phase measurements when amplitude accuracy is not a major concern. Low input passive impedance probes are useful for measurements up to 40 V.

Video Trigger Autose

Autose automatically sets the video trigger controls for the selected format and optimizes the vertical sensitivity and time per division for viewing video lines and fields. These controls do not appear if you select the Custom format.

- Click Lines or Fields to optimize the settings.

Video Trigger Format

Select one of the predefined video signal formats from the drop-down list:

- 525i/NTSC
- 625i/PAL
- SECAM
- Bilevel
- Trilevel
- 1080i/60
- 1080i/50
- 480p/60
- 576p/50
- 720p/30
- 720p/50
- 720p/60
- 875i/60
- 1080/24sF
- 1080p/24
- 1080p/25
- 1080p/30
- 1080p/50
- 1080p/60

Video Trigger Holdoff

1. Click in the Holdoff field.
2. Specify Holdoff By Time or By Fields.
3. Use the multipurpose knob to change the value.

If you are setting a Custom format, only the By Time control is available.

Video Trigger Polarity

Select either Normal or Inverted polarity.

- Normal. This polarity generally triggers on the negative polarity, since the sync pulse leading edge is negative for most standard formats.
- Inverted. Use this polarity when probing circuitry that inverts the video signal.

VXI 11.2 LAN Server

The VXI 11.2 LAN Server provides software connectivity between your instrument and remote PCs over an Ethernet LAN. This tool is a client-side component built-in with TekVISA on each remote PC, you must install another copy of TekVISA to make use of its client-side component.

The VXI-11 standard specifies a protocol for communication with devices over a network via a network instrument server. This protocol uses the ONC/RPC (Open Network Computing/Remote Procedure Call) standard that, in turn, is based on TCP/IP.

VXI Plug-and-Play Instrument Driver

The VXIplug&play instrument driver is a collection of software components, organized according to the standard VXIplug&play model established by the VXIplug&play Systems Alliance. Use this VXIplug&play instrument driver to simplify programming tasks when using the following software development environments:

- LabWindows/CVI
- LabVIEW
- MATLAB
- Visual C++ 6.0
- Visual Basic 6.0
- HP-VEE

Waveform Handle



Waveform Label



Working with Your Oscilloscope

The following topics describe features of your Tektronix oscilloscope. Even if you are an experienced user, you may want to browse through these topics to learn new ways of doing familiar tasks.

Basic Operations

- [Using the Instrument Interface \(see page 28\)](#)
- [Changing Control Settings \(see page 35\)](#)
- [Moving and Docking Control Windows \(see page 38\)](#)
- [Controlling from within the Graticule Area \(see page 39\)](#)
- [Initializing the Instrument \(see page 41\)](#)
- [Choosing and Connecting Probes \(see page 42\)](#)
- [Creating your Own Control Windows \(see page 41\)](#)

Waveform Operations

- [Using Time Bases and Triggering \(see page 42\)](#)
- [Looking at Waveform Details \(see page 43\)](#)
- [Using Fast Acquisition and DPO \(see page 45\)](#)
- [Using Logic Waveforms MSO Series \(see page 47\)](#)
- [Using Waveform Math \(see page 48\)](#)
- [Using Spectral Analysis \(see page 48\)](#)
- [Characterizing a Signal \(see page 49\)](#)
- [Adding Application-Specific Measurements \(see page 49\)](#)

Windows Environment

- [Connecting to a Network \(see page 23\)](#)
- [Printing a Hard Copy \(see page 26\)](#)
- [Using Other PC Applications \(see page 27\)](#)
- [Using a Second Monitor \(see page 27\)](#)
- [Connecting to Other Instruments \(see page 28\)](#)
- [Access Shortcut Menus with Right-click \(see page 40\)](#)

Window Trigger Levels

The upper and lower threshold levels define the voltage limits of the window.

To adjust the upper threshold level:

1. Click the Upper Level entry box.
2. Use the multipurpose knob to set the voltage level.

To adjust the lower threshold level:

1. Click the Lower Level entry box.
2. Use the other multipurpose knob to set the voltage level.

XY Format Pairs

When you use the XY display format, channel and reference waveforms are assigned to the axis indicated in the following tables.

XY Pair	X Axis	Y Axis
Ch 1 and Ch 2	Ch 1	Ch 2
Ch 3 and Ch 4	Ch 3	Ch 4
Ref 1 and Ref 2	Ref 1	Ref 2
Ref 3 and Ref 4	Ref 3	Ref 4

If you only display one source when you enter the XY format, the instrument automatically turns on the other source waveform to complete the XY pair.

NOTE. *You cannot display math waveforms in XY format. You cannot display logic waveforms in XY or XYZ format.*

Index

Symbols and Numbers

3 dB BW in bins, 615

A

A event trigger types, 290
 Absolute value, 775
 AC line voltage, 560
 Accessories, 6
 ACos, 632
 Acquire data, 544
 Acquire samples, 542
 Acquired waveform, 547
 Acquisition, 680
 channels, 543
 control window, 171
 dead time, 647
 hardware, 553
 Incompatible features, 552
 Interval, 632
 modes, 680
 preview, 586
 run/stop button, 59
 setting modes, 449
 setup control window, 159
 single button, 59
 starting and stopping, 59
 status lights, 59
 system, 541
 window, 361
 Active probes, 6
 Add sources
 parallel bus, 118
 Adjust, 210
 Advanced trigger button, 56
 Aliasing, 624
 recognizing, 624
 Amplitude measurements, 72
 Analog, 28
 oscilloscopes, 45
 signal, 159
 simulating, 532
 Analog channel, 448
 Analog signal
 digital threshold, 652
 setting up, 448
 Analysis tools, 18
 Annotation, 433
 Anomalies and bus analysis, 459
 Application software
 packages, 49
 Applications, 16
 Arbitrary filters, math, 702
 ASin, 634
 ATan, 634
 Attenuation, 49
 Audio port, 61
 Auto trigger mode, 634
 Auto-increment file name, 498
 Autofit, 183
 masks, 185
 Automatic measurements, 471
 Autoscroll, 720
 Autoset, 161
 autoset considerations, 553
 button, 60
 horizontal mask controls, 698
 input conditioning, 544
 mask alignment controls, 185
 mask autoset mode, 699
 mask configuration
 control, 182
 undo, 163
 vertical mask controls, 701
 Autoset preferences, 163
 AUX OUT connector, 28
 AUX TRIG OUT, 61
 Auxiliary input connector, 51
 Auxiliary trigger, 560
 Averaging, 542
 acquisition mode, 680
 math waveforms, 481

B

B event trigger, 347
 Backing up user files, 635

Bandwidth, 790
 control window, 368
 enhancement, 545
 readout, 809
 Bit order
 parallel bus, 121
 Blackman-Harris window, 620
 defined, 620
 Browse to a bus, 132
 Bus
 analyzing anomalies, 459
 configuring, 459
 I2C serial trigger, 297
 parallel trigger, 296
 RS-232 serial trigger, 300
 setting up, 454
 SPI serial trigger, 299
 troubleshooting, 464
 USB serial trigger, 302
 Bus channels
 threshold level setup, 120
 Bus clear, 92
 Bus decode method, 127
 Bus display, 92
 Bus display components, 127
 Bus label, 92
 Bus list, 90
 Bus location, 132
 Bus menu options
 bus display, 92
 bus label, 92
 bus list, 90
 bus position, 94
 clear bus, 92
 configure, 124
 decode method for parallel
 buses, 127
 decode method for serial, 129
 display bus components for
 parallel buses, 127
 I2C serial bus setup, 94
 MIPI CSI-2 serial bus
 setup, 101

- parallel bus and clock
 - polarity, 124
 - parallel bus and clock source, 123
 - parallel bus and remove a channel, 122
 - parallel bus bit order, 121
 - parallel bus setup, 116
 - parallel bus source, 118
 - parallel bus thresholds, 120
 - RS-232 serial bus bit rate, 114
 - RS-232 serial bus data bits, 112
 - RS-232 serial bus direction, 111
 - RS-232 serial bus parity, 113
 - RS-232 serial bus setup, 98
 - serial bus channel input, 104
 - serial bus channel threshold, 109
 - serial bus channel type, 103
 - serial bus input, 107
 - serial bus signal type, 106
 - serial bus speed, 105
 - serial bus threshold high, 108 setup, 89
 - SPI serial bus direction, 110
 - SPI serial bus setup, 96
 - SPI serial bus word size, 115
 - symbol table for parallel buses, 129
 - USB serial bus setup, 97
 - Bus pattern editor
 - bus tab, 792
 - digital tab to set thresholds, 799
 - logic tab to set thresholds, 798
 - Bus pattern editor (DPO/MSO5000 Series)
 - bus tab, 793
 - Bus position, 94
 - Bus symbol file format, 130
 - Bus symbol table, 129
 - Bus trigger
 - defined, 569
 - Bus triggering, 527
- C**
- Calibration, 445
 - instrument, 423
 - probe, 445
 - CAN bus, 307
 - bit rate, 637
 - Capturing the screen, 392
 - CD-RW, 61
 - Center frequency, 637
 - control, 607
 - Changing cursor positions, 76
 - Channel display size
 - digital inputs, 86
 - Channel position
 - digital inputs, 84
 - Channel selector, 638
 - Channel threshold
 - digital inputs, 83
 - Channel waveform
 - digital threshold, 652
 - Checking trigger status, 504
 - Clear bus, 92
 - Clear data control, 638
 - Clipping, 547
 - Clipping waveforms, 807
 - Clock polarity
 - parallel bus, 124
 - Clock source
 - parallel bus, 123
 - Coefficients, 615
 - Coherent gain, 615
 - Color palette, 532
 - black and white, 407
 - color, 407
 - custom, 645
 - gray scale, 387
 - gray-scale, 407
 - monochrome gray, 532
 - monochrome green, 45
 - normal, 152
 - spectral, 152
 - temperature, 152
 - COM 1 and COM 2 ports, 61
 - Comm trigger control window, 308
 - Comm trigger pulse form, 642
 - Comm triggering, 570
 - Communication mask
 - triggering, 526
 - Communication trigger, 569
 - defined, 569
 - Communication trigger codes and standards option, 639
 - Comparing data, 503
 - Compensation, 447
 - probe, 447
 - signal path, 445
 - Components for display of parallel buses, 127
 - Configure e-mail, 662
 - Configure mask, 181
 - Connect, 543
 - signal, 543
 - Connecting probes, 42
 - Connecting to a system under test
 - logic probe, 82
 - Connection, 543
 - signal and probes, 543
 - Connectivity tools, 18
 - Connectors, 28
 - Audio port, 61
 - AUX TRIG OUT, 61
 - CH3 OUT, 61
 - COM 1, 61
 - COM 2, 61
 - DVI-I, 61
 - EXT REF, 61
 - front panel, 51
 - GPIO, 61
 - LAN, 61
 - parallel port, 61
 - PS-2 keyboard, 61
 - rear panel, 28
 - REF OUT, 61
 - serial port, 61
 - side panel, 61
 - signal out, 61
 - USB, 61
 - video port, 61
 - Continuous mask testing, 196
 - Control, 602
 - frequency domain, 602
 - gating, 602
 - time domain, 602
 - Control window handle, 38

- Control windows, 177
 - acquisition mode, 171
 - adjust parameters, 210
 - advanced math setup, 209
 - attenuation, 380
 - autoset undo, 163
 - AUX OUT configuration, 420
 - bandwidth, 368
 - bus configuration, 124
 - bus setup, 89
 - copy setup: images, 387
 - copy setup: measurements, 390
 - copy setup: waveforms, 388
 - coupling, 366
 - cursor position, 71
 - cursor setup, 65
 - cursor type setup, 67
 - deskew, 379
 - deskew/attenuation, 367
 - digital channels setup, 88
 - digital setup, 81
 - display on-off, 359
 - display setup, 139
 - docking, 38
 - edge trigger, 310
 - equation editor, 223
 - gating, 253
 - glitch trigger, 311
 - GPIB configuration, 418
 - histogram, 256
 - horizontal & acquisition setup, 155
 - horizontal position/scale, 158
 - instrument calibration, 423
 - instrument diagnostics, 424
 - label, 361
 - logic pattern trigger, 315
 - logic state trigger, 325
 - mark, 263
 - mask setup, 177
 - measurement setup, 234
 - measurement statistics, 250
 - moving, 38
 - page setup dialog box, 393
 - position-scale, 359
 - probe calibration, 372
 - recall instrument setup, 399
 - reference levels, 252
 - reference waveform, 397
 - resolution, 171
 - run/stop, 165
 - runt trigger, 317
 - save instrument setup, 403
 - search and mark, 276
 - setup and hold trigger, 320
 - spectral setup, 212
 - termination, 736
 - text properties, 142
 - timeout trigger, 325
 - transition time trigger, 327
 - trigger mode, 293
 - trigger mode & holdoff, 348
 - trigger setup, 289
 - user preferences: keypad defaults, 430
 - user preferences: prompt before action, 430
 - vertical acquisition, 547
 - vertical offset, 361
 - vertical setup, 355
 - video trigger, 329
 - waveform display, 359
 - waveform label, 361
 - width trigger, 331
 - window trigger, 332
 - zoom, 175
 - Controls
 - search and mark, 276
 - Copy setup control window, 387
 - images, 387
 - measurements, 390
 - waveforms, 388
 - copying, 392
 - images, 27
 - measurements, 392
 - screen, 27
 - waveforms, 388
 - Copying waveform data, 500
 - Cos, 644
 - Cosh, 644
 - Coupling, 546
 - control window, 366
 - controls, 805
 - Creating, 467
 - create math waveforms, 595
 - custom control windows, 41
 - math waveforms, 600
 - spectral Waveforms, 491
 - user masks, 489
 - CSV Text Format, 730
 - Cursor, 470
 - button, 65
 - function, 592
 - horizontal, 72
 - limitations, 76
 - measurements, 470
 - modes, 65
 - paired, 67
 - position control window, 71
 - XY display, 721
 - readouts, 74
 - screen, 75
 - setup control window, 65
 - split, 67
 - type control window, 67
 - units, 71
 - vertical, 73
 - waveform, 592
 - Cursor measurements, 475
 - sources, 68
 - styles, 69
 - units, 76
 - XY Display Format, 79
 - Cursor Sources
 - XY display, 644
 - YT display, 68
 - Cursors menu options, 644
 - controls, 67
 - mode, 76
 - on/off button, 65
 - position, 71
 - setup, 65
 - type, 67
 - Custom control window, 283
 - editing, 467
 - Custom controls, 734
 - Customer feedback, 18
 - Customer support, 16
 - Customize color, 532
 - Customizing color palettes, 645
- ## D
- D15-D0 digital channels setup, 88

- D15-D0 tab
 - probe setup, 375
 - Date, 417
 - dB, 609
 - dBm, 609
 - DC offset, 601
 - Dead time, 164
 - Deassign multipurpose knobs, 429
 - Decode bus values as symbols, 129
 - Decode method for parallel buses, 127
 - symbol file format, 130
 - Default settings for histograms, 529
 - Default setup button, 60
 - Defining a spectral math waveform, 492
 - Delay button, 56
 - Delay measurement, 731
 - setup, 731
 - Delay mode, 676
 - Delayed trigger, 568
 - Delete, 401
 - setups, 401
 - waveforms, 401
 - Deskew, 164
 - control window, 379
 - interaction with fast acquisition, 379
 - procedure, 810
 - Diagnostics, 424
 - Digital channel, 87
 - setting up, 453
 - Digital channel D7-D0
 - turn off, 85
 - Digital channel display size, 86
 - Digital channel position, 84
 - Digital channel threshold, 83
 - Digital channels D7-D0
 - turn on, 85
 - Digital channels setup tabs, 88
 - Digital Menu, 653
 - Digital menu options
 - channel position, 83
 - channel threshold, 83
 - digital channels setup tabs, 88
 - display size, 86
 - global threshold, 87
 - setup, 81
 - Digital oscilloscopes, 45
 - Digital probe *See* logic probe
 - Digital Properties button, 651
 - Digital signal
 - setting up, 453
 - Digital signal acquisition system, 541
 - Digital signals
 - analog characteristics, 453
 - connecting a logic probe, 82
 - Digital threshold setup, 652
 - Digital waveform
 - setting up, 453
 - Digital waveforms
 - analog characteristics, 453
 - Digitals
 - saving, 413
 - Digitizer, 553
 - Disk drive signals, 49
 - Display, 181
 - format, 139
 - XY format, 146
 - XYZ format, 146
 - YT format, 146
 - Display bus, 92
 - Display elements, 583
 - customizing, 583
 - Display format, 583
 - Display format XY, 817
 - Display menu objects, 583
 - Display menu options, 656
 - appearance, 139
 - colors, 144
 - date & time, 143
 - format, 146
 - graticule, 151
 - objects, 143
 - palette, 152
 - persistence, 145
 - remote, 154
 - screen text, 140
 - setup, 143
 - style, 653
 - waveform interpolation, 149
 - Display palette, 532
 - Display remote, 154
 - Display resolution, 1
 - Display style, 583
 - Displayed waveform, 547
 - Displaying waveforms, 529
 - Displays, 359
 - appearance, 539
 - color palette, 144
 - colors, 655
 - contrast, 539
 - control window, 359
 - intensity, 149
 - objects, 143
 - on/off, 806
 - persistence, 145
 - persistence control window, 722
 - screen objects, 143
 - screen text, 140
 - setup control window, 140
 - styles, 653
 - trigger marker, 656
 - waveform Display control window, 359
 - XY format, 653
 - XYZ format, 653
 - Dockable windows, 536
 - Documentation, 16
 - Dots, 653
 - DPO, 45
 - DSP memory, 542
 - Dual display, 22
 - DVD/CD-RW, 61
 - DVI-I port, 61
- ## E
- E-mail configuration dialog box, 662
 - E-mail on, 490
 - event, 490
 - limit test failure, 426
 - mask test failure, 426
 - trigger, 426
 - E-mail on event control window, 426
 - E-mail on event setup window, 428
 - Edge button, 56

- Edge trigger control window, 310
 - Edit custom window, 287
 - Edit mask, 202
 - Edit menu, 659
 - Edit menu options, 659
 - clear data, 638
 - copy, 392
 - copy setup, 388
 - select for copy, 392
 - Undo last autoset, 163
 - Edit MyScope, 287
 - Editing a user defined mask, 487
 - Editing a user mask, 658
 - Editing MyScope control windows, 467
 - Eliminating aliases, 222
 - Enabling a network connection, 538
 - Enhance Bandwidth, 368
 - Envelope mode, 680
 - Enveloping, 542
 - Equation editor, 480
 - as an option, 48
 - control window, 223
 - edit controls, 659
 - spectral analysis, 223
 - using, 480
 - Equivalent time mode, 167
 - Equivalent time sampling, 558
 - Event table
 - saving, 280
 - Exiting the application, 538
 - Exporting, 631
 - files, 407
 - images, 407
 - measurements, 405
 - waveforms, 727
 - EXT REF, 61
 - External reference, 420
 - External signals control window, 420
 - external trigger, 51
 - Eye aperture, 628
 - Eye diagram, 628
 - eye diagrams, 653
- F**
- failure log, 196
 - fast acquisition, 45
 - turning on and off, 450
 - Fast acquisition, 164
 - FastAcq button, 60
 - FastFrame
 - analyze, 723
 - overview, 173
 - setup, 724
 - view, 726
 - FastFrames, 668
 - Feedback, 18
 - FFT, 216
 - creating waveforms, 764
 - display, 218
 - features, 216
 - locking waveforms, 765
 - magnitude waveforms, 764
 - phase waveforms, 765
 - process, 218
 - window characteristics, 220
 - windows, 219
 - File, 631
 - File menu options, 665
 - display on/off, 359
 - exit, 538
 - export setup, 405
 - instrument setup, 399
 - label, 361
 - page setup, 393
 - position/scale, 359
 - print, 395
 - print preview, 395
 - recall default setup, 399
 - recall wfm, 397
 - run application, 436
 - save wfm, 397
 - shutdown, 742
 - Filters, 790
 - Fine button, 788
 - Fixed license, 440
 - Flattop2 window, 618
 - defined, 618
 - Floating license, 438
 - Frequency domain, 615
 - controls, 607
 - setup, 492
 - Front Panel, 506
 - autoset, 60
 - channel buttons, 55
 - connectors, 51
 - controls, 54
 - cursors, 60
 - default setup, 41
 - fast acquisition, 164
 - intensity, 45
 - pan, 54
 - pause, 54
 - play, 54
 - position, 55
 - print, 60
 - scale, 55
 - termination, 810
 - touch screen, 423
 - triggering from, 506
 - zoom, 54
 - Functional model of instrument, 541
- G**
- Gating, 606
 - a localized measurement, 474
 - controls, 253
 - in frequency domain, 607
 - in zoom window, 253
 - position, 606
 - with cursors, 73
 - Gaussian window, 619
 - definition, 619
 - Glitch trigger, 571
 - control window, 311
 - Glitch triggering, 513
 - Global threshold digital inputs, 87
 - GPIB, 420
 - address, 418
 - controller, 61
 - GPIB configuration control window, 418
 - programming, 536
 - Graticule, 151
 - and cursors, 74
 - controlling within the graticule area, 39
 - display elements, 581
 - exporting, 407
 - labels, 361

- styles, 151
 - zoom, 43
 - Graticule size, 586
 - Graticule split, 586
 - Graticule style, 583
 - Graticule zoom control
 - window, 736
 - Group delay, 610
- ## H
- H Bar cursors, 72
 - Hamming window, 620
 - defined, 620
 - Hanning window, 620
 - defined, 620
 - Hardware, 553
 - acquisition, 553
 - hardware applications, 536
 - adding, 536
 - removing, 536
 - harmonics, 624
 - Help
 - about tekscope, 21
 - Hi Res mode, 680
 - high input impedance probes, 669
 - High/low method, 590
 - histogram, 49
 - Histogram
 - automated measurements, 528
 - control window, 256
 - interaction with fast acquisition, 164
 - measurements, 256
 - reference level
 - considerations, 252
 - vertical, 528
 - Histogram counting, 529
 - Histogram mode, 590
 - Histograms, 594
 - saving, 402
 - Hits, 199
 - holdoff, 294
 - Horiz/Acq menu options, 675
 - acquisition mode, 171
 - autoset, 161
 - delay mode on, 683
 - equivalent time, 167
 - fast acquisitions, 164
 - horizontal/acquisition
 - setup, 155
 - position/scale, 158
 - resolution, 171
 - roll mode auto, 166
 - run/stop, 165
 - zoom controls, 357
 - zoom graticule, 175
 - zoom lock, 175
 - zoom setup, 175
 - Horizontal acquisition, 550
 - bar cursors, 72
 - control window readouts, 685
 - delay, 678
 - delay off, 577
 - delay on, 578
 - interrelated parameters, 550
 - parameters, 550
 - position, 550
 - position & scale control
 - window, 679
 - position controls, 158
 - reference, 581
 - reference point, 589
 - scale controls, 56
 - scale setting, 544
 - setup control window, 157
 - trigger position, 567
 - window, 547
 - Horizontal position, 676
- ## I
- I2C
 - definition, 89
 - I2C bus
 - setting up, 456
 - I2C Bus, 312
 - I2C serial bus
 - setup, 94
 - trigger, 297
 - Impulse-response testing, 623
 - using the phase controls, 610
 - Incompatible acquisition
 - features, 552
 - Independent cursor mode, 76
 - Independent triggers, 783
- ## Indicator
- trigger correction, 349
- ## Initializing the oscilloscope, 41
- ## Ink saver, 26
- ## Input, 546
- resistance, 546
 - termination, 546
- ## Input amplifier, 553
- ## Input channel, 541
- acquisition hardware, 553
 - conditioning, 544
 - trigger sources, 560
- ## Input signal, 448
- setting up, 448
- ## Installing options, 436
- ## Installing software, 688
- ## Instrument calibration, 423
- calibration control
 - window, 423
 - signal path compensation, 423
- ## Instrument diagnostics control window, 424
- ## Instrument setups, 534
- deleting, 535
 - recalling or restoring, 399
 - saving, 534
- ## Intensified samples, 653
- ## Intensity knob, 45
- ## Interaction of acquisition features, 552
- ## Interface, 28
- ## Interleaving, 558
- affects on sample rate, 558
- ## Interpolation, 558
- ## J
- Jitter, 49
 - analysis, 244
- ## K
- Kaiser-Bessel window, 620
 - defined, 620
 - Key features, 1
 - Keyboard, 27
 - connecting, 61
 - pop-up, 35

- use to change control settings, 35
- L**
- Label
 - bus, 454
- Label a bus, 92
- Labels, 815
- LAN, 61
- LAN server status control
 - window, 420
- Level, 566
- Level knob, 56
- Line style cursor, 69
- Linear interpolation, 558
- Linear magnitude, 609
- List of bus setups, 90
- Localizing a measurement, 474
- Lock mask, 181
- Logic clock input for a
 - trigger, 694
- Logic pattern format for a
 - trigger, 694
- Logic pattern setup for a
 - trigger, 695
- Logic probe
 - connecting to a system under test, 82
- Logic trigger pattern editor
 - bus tab, 691
 - digital tab, 693
- Logic triggers, 519
 - logic pattern control window, 315
 - logic state control window, 325
 - runt control window, 317
- Logic waveform
 - digital threshold, 652
- Logic waveforms
 - analog characteristics of digital signals, 453
- Low input impedance probes, 55
- LSB order
 - parallel bus, 121
- M**
- Magnitude controls, 609
- Magnitude scale, 492
- magnitude waveforms, 768
- MagniVu, 135
- manuals, 16
- Margin tolerance, 625
- Mark
 - clear, 264
 - set, 263
- Markers, 39
 - cursor, 65
 - enhanced bandwidth, 660
 - horizontal reference, 39
 - trigger level, 39
- Mask alignment controls, 185
- Mask autoselect, 626
 - autofit control, 697
 - automatic mode, 699
 - horizontal control, 698
 - trigger level control, 700
 - vertical control, 701
- Mask configuration, 625
 - autofit controls, 183
 - autoset controls, 182
 - display control, 181
 - display controls, 181
- Mask editing, 487
 - from a defined mask, 487
 - setup window, 186
- Mask hits, 625
 - per segment, 199
- Mask margin, 625
 - controls, 188
- Mask pass/fail, 177
 - define source/tolerance, 187
 - set test notification, 189
 - view results, 196
- Mask polarity, 195
- Mask segments, 199
- Mask setup, 200
 - mask sources control window, 187
 - mask testing control window, 177
- Mask test, 626
 - controls, 731
 - repeat test, 196
- set limits, 204
 - set pass/fail parameters, 192
 - start or reset, 200
 - summary, 197
- Mask testing, 626
 - communication trigger, 569
 - overview, 625
- Mask tolerance, 188
- Mask type, 179
 - set polarity, 177
 - set standard, 177
 - standards, 179
- Math equation, 595
 - create waveform, 481
 - expression syntax, 600
 - operations on time base, 588
 - predefined expressions, 742
- Math equation editor, 223
 - arbitrary filters, 702
 - display functions, 711
 - edit functions, 710
 - filter functions, 231
 - measurement functions, 230
 - spectral functions, 228
 - time functions, 225
 - variables functions, 230
- Math menu options, 711
 - Ch1 * Ch2, 742
 - Ch1 - Ch2, 742
 - Ch3 * Ch4, 742
 - Ch3 - Ch4, 742
 - digital properties, 651
 - display On/Off, 359
 - position and scale, 359
 - set averages, 210
 - setup and control, 209
 - spectral setup, 212
- Math setup control window, 209
- Math variables control
 - window, 210
- Math waveform, 48
 - averaging, 210
 - color, 655
 - create, 480
 - defining, 475
 - differentiation, 597
 - digital threshold, 651
 - entering functions, 225

- FFT functions, 228
 - guidelines, 668
 - interactions, 595
 - label, 361
 - offset, 601
 - position, 601
 - properties, 711
 - scale, 601
 - sources, 599
 - spectral, 496
 - using predefined
 - expressions, 479
 - variables, 230
 - Maximum signal level, 546
 - Mean, 49
 - Measure amplitude, 72
 - Measurement, 474
 - annotation, 433
 - gating, 474
 - localizing, 474
 - snapshot, 233
 - Measurement menu options, 716
 - amplitude measurements, 236
 - display statistics, 250
 - gating control window, 253
 - histogram measurements, 255
 - more tab, 247
 - reference levels, 252
 - reset histograms, 256
 - setup control window, 234
 - time measurements, 239
 - waveform histograms, 256
 - Measurement readouts, 235
 - Measurement Save Options, 428
 - Measurement setups, 733
 - delay, 731
 - phase, 733
 - Measurements, 473
 - amplitude, 236
 - automatic, 471
 - communication, 242
 - control window, 234
 - cursor, 470
 - gating, 253
 - histogram, 255
 - horizontal, 75
 - horizontal parameters, 73
 - interaction with fast
 - acquisition, 164
 - list, 230
 - mean, 250
 - miscellaneous, 247
 - reference levels, 252
 - standard deviation, 250
 - statistics, 250
 - statistics control window, 250
 - time, 239
 - using in math waveforms, 230
 - vertical, 74
 - Menu bar mode, 29
 - Min-max mode, 590
 - Minimizing the display, 538
 - Minimum value, 666
 - MIPI CSI-2 bus
 - setting up, 458
 - MIPI CSI-2 serial bus
 - setup, 101
 - MIPI DSI-1, 100
 - MIPI DSI-1 bus
 - setting up, 457
 - Model numbers, 1
 - Monitor, 27
 - Mouse, 61
 - connecting, 61
 - Moving control windows, 38
 - MSB order
 - parallel bus, 121
 - Multipurpose knobs, 35
 - MultiScope Trigger, 350
 - Multizoom, 531
 - using, 531
 - MyScope controls, 284
 - MyScope setup window, 283
- N**
- Negative pulse testing, 195
 - Network connections, 23
 - New features, 816
 - New tab, 283
 - Nyquist frequency, 149
 - Nyquist point, 624
- O**
- Occurs And trigger
 - qualification, 782
 - Offset, 601
 - control, 807
 - math offset and position, 601
 - On/standby switch, 742
 - Open bus, 132
 - Open custom window, 287
 - Open MyScope window, 287
 - Options, 11
 - installation, 436
 - MTM, 626
 - Options waveforms, 727
 - Order of bits
 - parallel bus, 121
 - Overview, 541
 - functional, 541
 - process, 542
- P**
- P value, 628
 - Page setup dialog box, 393
 - Paired cursors, 74
 - Parallel bus
 - add sources, 118
 - bit order, 121
 - clock polarity, 124
 - clock source, 123
 - decode method, 127
 - display bus components, 127
 - remove a channel, 122
 - setting up, 454
 - setup for a clocked
 - acquisition, 117
 - setup for an unclocked
 - acquisition, 116
 - symbol file format for
 - decoding, 130
 - symbol table for
 - decoding, 129
 - threshold level setup, 120
 - trigger, 296
 - troubleshooting, 461
 - Parallel bus options, 123
 - Parallel port, 61
 - Pass/fail mask test, 189

- Pattern editor for a bus
 - Bus setup control window, 792
 - Pattern editor for a bus (DPO/MSO5000 Series)
 - Bus setup control window, 793
 - Pattern editor for digital tab threshold setup, 799
 - Pattern editor for logic tab threshold setup, 798
 - Pattern editor for Occurs And trigger qualification, 782
 - Pattern editor to trigger on a bus
 - Logic Pattern setup control window, 691
 - Logic State setup control window, 691
 - Pattern editor to trigger on digital inputs
 - Logic Pattern setup control window, 693
 - Logic State setup control window, 693
 - Pattern trigger, 571
 - control window, 314
 - triggering on a pattern, 517
 - PDF documents, 16
 - Peak detect mode, 680
 - Performance verification, 16
 - Persistence, 583
 - Persistence control window, 722
 - Phase controls, 610
 - Phase measurement, 247
 - setup, 733
 - Phase reference position, 610
 - Phase scale, 492
 - Phase unwrap, 610
 - Phase waveform, 48
 - pop-up, 34
 - keyboard, 35
 - keypad, 35
 - Position, 601
 - Position a bus, 94
 - Position control, 547
 - Position correction, trigger, 349
 - Position knob, 56
 - Position/scale control
 - window, 359
 - position, 788
 - scale, 789
 - Positive pulse testing, 195
 - Posttrigger, 567
 - Posttrigger data, 289
 - Power down, 539
 - Power on, 742
 - Predefined math expressions, 742
 - Preferences, 430
 - keypad defaults, 430
 - prompts, 430
 - trigger level presets, 430
 - user, 430
 - Presets, 430
 - Pretrigger, 567
 - Pretrigger data, 289
 - Preview acquisition, 586
 - Print, 787
 - button, 60
 - Printer, 395
 - external, 26
 - internal, 26
 - page setup, 393
 - selecting, 393
 - Printing, 395
 - button, 395
 - capturing the screen, 392
 - color palette, 26
 - copying, 392
 - dialog box, 395
 - Ink saver, 26
 - page setup dialog box, 393
 - preview, 393
 - the screen, 392
 - to a printer, 395
 - Probe calibration procedure, 445
 - active probes, 445
 - passive probes, 446
 - restrictions, 743
 - Probe compensation, 42
 - adjusting probes for compensation, 744
 - low frequency probes, 744
 - Probe controls, 810
 - Probe setup, 372
 - calibration, 376
 - control window, 374
 - D15-D0 tab, 375
 - status, 384
 - tip selection window, 378
 - Probe tip selection, 378
 - Probes, 42
 - attenuation, 810
 - connecting, 42
 - deskew, 372
 - termination, 55
 - types, 42
 - Probes and signal connection, 543
 - Process overview, 542
 - Product description, 1
 - Product feedback, 18
 - Product software, 6
 - Programmer guide PDF, 16
 - Programming, 536
 - Prompts, 430
 - Pulse form, 642
 - Pulse timeout triggering, 516
 - Pulse triggers, 290
 - Pulse width trigger, 331
 - Pulse width triggering, 515
- ## Q
- Quitting the application, 538
- ## R
- RBW, 607
 - Readouts, 236
 - Recall dialog box instrument setups, 399
 - Recall instrument setup control window, 399
 - Recall user mask, 203
 - Recalling, 745
 - masks, 745
 - Setups, 629
 - template, 745
 - Waveforms, 630
 - Recalling a template waveform, 745
 - Recalling a user mask from disk, 489
 - Recalling masks, 745

- recalling saved files, 398
 - instrument setups, 534
 - reference waveforms, 398
- Recalling waveforms, 630
- Recommended accessories, 6
- Record, 556
 - Waveform, 556
- Record length, 556
- Rectangular window, 622
 - defined, 622
- REF OUT, 61
- Reference color, 656
- Reference colors, 583
- Reference level, 609
- Reference level offset, 609
- Reference levels control window, 397
- Reference levels method, 590
- Reference waveform controls, 397
- Reference waveforms, 497
- Remote Desktop Connection, 154
- Remote Operation, 154
- Remove a channel
 - parallel bus, 122
- Reset, 638
- Resolution, 222
- Resolution bandwidth, 607
- Resolution control window, 171
- Resolution knob, 56
- Return floating license, 441
- Right-click, 40
- Roll mode, 166
 - interactions with other settings, 689
 - setting up, 503
- RS-232, 316
 - setting up, 456
- RS-232 serial bus
 - bit rate, 114
 - data bits, 112
 - direction, 111
 - parity, 113
 - setup, 98
 - trigger, 300
- Run/stop button, 59
- Run/stop control, 542
- Run/stop control window, 165
- Runt pulse triggering, 513
- Runt trigger, 317
 - control window, 317
 - definition, 572
- S**
- Sample density, 558
- Sample interval, 550
- Sample mode, 680
- Sample rate and user preference, 550
- Sampling, 555
 - defined, 555
 - modes, 167
- Save As dialog box, 631
 - digitals, 413
 - histogram, 402
 - instrument setup, 403
 - measurement, 405
 - screen capture, 407
 - timestamp, 414
 - user mask, 410
 - waveform, 411
- Save custom window, 286
- Save Event Table, 280
- Save MyScope window, 286
- Save template, 205
- Saving, 629
 - masks, 750
 - setups, 629
 - waveforms, 630
- Saving a screen capture, 502
- Saving a user mask to disk, 488
- Saving a waveform, 499
- Saving and copying waveform data, 631
- Saving masks, 750
- Saving measurements, 475
- Scale controls, 686
 - math, 601
 - positioning, 547
- Scallop loss, 615
- Screen capture dialog box, 407
- Screen elements, 33
 - control window, 142
 - cursors, 75
 - display text, 140
 - objects control window, 143
- Search
 - configure, 268
 - controls, 276
 - count results, 274
 - parameters, 270
 - place marks automatically, 270
 - select type, 264
 - show marks, 274
 - stop, 275
 - timing results, 273
- Second monitor, 536
- Selecting the sound source, 194
- Sequential triggering, 577
 - A event only, 511
 - after a delay, 339
 - B event, 512
 - B event scan, 344
 - triggering on a sequence, 510
 - with horizontal delay on, 754
- Serial bus
 - analyzing anomalies, 459
 - I2C trigger, 297
 - RS-232 trigger, 300
 - SPI trigger, 299
 - troubleshooting, 464
 - USB trigger, 302
- Serial bus channel input setup, 104
- Serial bus channel threshold setup, 109
- Serial bus channel type setup, 103
- Serial bus input setup, 107
- Serial bus options, 105
- Serial bus signal type setup, 106
- Serial bus speed setup, 105
- Serial bus threshold high setup, 108
- Serial mask testing, 626
- Serial mask testing option, 757
- Serial pattern data editor, 757
- Serial port, 61
- Service manual, 16
- Set to 50%, 760

- Setting acquisition modes, 449
 - Setting cursor sources, 469
 - Setting the horizontal scale, 544
 - Setting the vertical scale, 544
 - setting time and date, 417
 - Setting up digital waveforms, 453
 - Setting up mask testing, 482
 - Setting up roll mode, 503
 - Setting up signal input, 448
 - Setup and hold trigger, 572
 - control window, 320
 - Setup window, 508
 - triggering from, 508
 - Setup/hold violations
 - triggering, 521
 - Setups, 629
 - recalling, 629
 - saving, 629
 - Shared triggers, 783
 - Shortcuts, 40
 - Shutting down the
 - oscilloscope, 539
 - Side lobe, 615
 - Side panel connectors, 61
 - Signal characterization, 49
 - Signal connection, 543
 - Signal input, 448
 - Signal path compensation
 - procedure, 372
 - Signal processing and
 - transformation, 541
 - Sin, 763
 - Sin(x)/x interpolation, 558
 - Single button, 59
 - SinH, 763
 - Slope, 566
 - trigger, 566
 - SMTP server address, 662
 - Snapshot, 233
 - Software, 6
 - adding applications, 536
 - analysis and connectivity
 - support, 18
 - analysis and connectivity
 - tools, 667
 - installation, 688
 - Source, 187
 - cursor, 469
 - masks, 187
 - Sources, 599
 - math waveforms, 599
 - Sources for automatic
 - measurements, 590
 - Span, 607
 - Specifications, 16
 - Spectral analysis, 751
 - spectrum analyzer
 - controls, 48
 - time domain gating, 221
 - Spectral analyzer windows, 615
 - Blackman-Harris, 615
 - Gaussian, 615
 - Hamming, 615
 - Hanning, 615
 - Kaiser-Bessel, 615
 - Rectangular, 615
 - Tek Exponential, 615
 - using, 615
 - Spectral averaging, 602
 - Spectral math controls, 603
 - frequency, 603
 - gate, 603
 - magnitude, 603
 - phase, 603
 - time, 603
 - Spectral math waveforms, 602
 - example, 496
 - frequency domain, 602
 - gating, 602
 - overview, 602
 - set up, 492
 - time domain, 602
 - Spectral setups
 - control window
 - advanced, 212
 - basic, 211
 - frequency, 213
 - gating, 215
 - Spectral waveforms, 212
 - creating, 491
 - features, 216
 - overview, 216
 - SPI bus, 322
 - setting up, 455
 - SPI serial bus
 - direction, 116
 - setup, 96
 - trigger, 299
 - word size, 115
 - Split cursors, 74
 - Standard deviation, 49
 - Starting an acquisition, 59
 - State trigger, 574
 - control window, 324
 - State trigger pattern editor
 - bus tab, 691
 - digital tab, 693
 - Status, 504
 - trigger, 504
 - Stopping an acquisition, 59
 - Support
 - information, 16
 - tools, 667
 - Suppression threshold, 610
 - Symbol file format
 - parallel buses, 130
 - Symbol table file, 132
 - Symbol table for parallel
 - buses, 129
 - Syntax, 600
 - math waveform
 - expression, 600
- ## T
- Taking automatic measure-
 - ments, 471
 - Tan, 770
 - Tanh, 770
 - Technical support, 16
 - Tek exponential window, 623
 - defined, 623
 - TekLink, 350
 - Tekprobe interface, 770
 - TekProbe interface, 42
 - TekSecure erase, 417
 - TekVisa, 771
 - Template, 745
 - recall, 745
 - saving, 205
 - Termination, 810
 - and coupling, 736
 - termination control
 - window, 736
 - Test notification, 189

- Test results, 196
- Test summary, 197
- Text properties control
 - window, 142
- Thermal printer, 395
- Threshold setup for a trigger, 800
- Thresholds setup
 - parallel bus, 120
 - Pattern Editor bus tab, 798
- Time and date, 417
- Time base system, 541
- Time bases, 42
- Time controls, 604
 - duration, 604
 - resolution, 604
- Time domain, 492
 - setup, 492
- Time domain controls, 604
- Time domain gating, 221
- Time duration, 550
- Time measurements, 239
- Time stamps, 723
- Timeout trigger, 575
 - timeout trigger control window, 325
- Tolerance, 188
- Toolbar mode, 30
- Touch screen, 22
 - button, 53
 - calibrate, 423
- Tracking cursor mode, 76
- Transition time trigger, 327
 - definition, 575
 - setup, 520
- Trigger, 561
 - bus pattern condition, 791
 - bus pattern condition (MSO/DPO5000 and MSO70000/C Series), 791
 - bus pattern editor, 792
 - bus pattern editor (DPO/MSO5000 Series), 793
 - bus selection, 791
 - bus time condition, 791
 - codes, 639
 - concepts, 558
 - considerations, 550
 - coupling, 566
 - delayed, 568
 - digital tab of the pattern editor, 799
 - event, 558
 - holdoff, 565
 - indicator, 349
 - level marker, 583
 - logic clock input, 694
 - logic pattern editor, 691
 - logic pattern format, 694
 - logic pattern setup, 695
 - logic state condition, 791
 - logic tab of the pattern editor, 798
 - modes, 564
 - MultiScope, 350
 - Occurs And pattern editor, 782
 - parallel bus pattern, 791
 - pattern editor, 693
 - point, 556
 - position, 567
 - position correction, 349
 - setup window, 508
 - slope and level, 566
 - sources, 560
 - standards, 639
 - state pattern editor, 691
 - status, 504
 - system, 541
 - threshold, 760
 - threshold setup, 800
 - transition time, 575
 - types, 561
- Trigger controls, 56
 - advanced button, 56
 - edge button, 56
 - level knob, 56
 - mode, 56
 - slope, 56
 - source, 56
- Trigger menu options, 780
 - A event setup, 290
 - A-B sequence, 754
 - B event setup, 347
 - CAN setup, 307
 - comm setup, 308
 - edge setup, 310
 - glitch setup, 311
 - holdoff, 348
 - I2C serial bus setup, 298
 - I2C setup, 312
 - logic pattern, 315
 - logic state, 325
 - mode, 293
 - parallel bus setup, 296
 - quick select, 290
 - RS-232 serial bus setup, 300
 - RS-232 setup, 316
 - run/stop, 165
 - runt setup, 317
 - serial pattern setup, 319
 - setup/hold setup, 320
 - SPI serial bus setup, 299
 - SPI setup, 322
 - timeout setup, 325
 - transition setup, 327
 - USB serial bus setup, 302
 - video setup, 329
 - width setup, 331
 - window setup, 332
- Triggering, 542
 - a glitch, 513
 - a pattern, 517
 - a pulse width, 515
 - a runt pulse, 513
 - a sequence, 510
 - a video signal, 525
 - advanced, 568
 - bus, 527
 - communication mask, 526
 - coupling, 566
 - from front panel, 506
 - from trigger setup window, 508
 - holdoff, 565
 - logic state, 519
 - modes, 564
 - overview, 558
 - pulse timeout, 516
 - setup/hold violations, 521
 - sources, 560
 - transition time, 520
 - triggering on, 510

- types, 561
 - window threshold violations, 524
 - Triggers, 561
 - bus, 561
 - communication, 570
 - coupling, 777
 - edge, 561
 - external, 51
 - glitch, 561
 - holdoff, 348
 - holdoff control window, 294
 - level, 293
 - level marker, 656
 - logic, 561
 - markers, 656
 - menu options, 289
 - mode, 348
 - mode control window, 293
 - out signal, 420
 - pattern, 561
 - posttrigger data, 289
 - pretrigger data, 289
 - pulse, 561
 - runt, 561
 - sequential, 511
 - serial, 561
 - setup control window, 289
 - setup/hold, 561
 - shared/independent, 783
 - state, 561
 - timeout, 561
 - transition, 561
 - types, 290
 - video, 561
 - width, 561
 - window, 561
 - Troubleshooting
 - autoset, 553
 - bus anomalies, 459
 - parallel bus, 461
 - serial bus, 464
 - support information, 16
 - Windows interface, 22
 - Turn off power, 539
 - Turning fast acquisition on and off, 450
 - Type of mask, 482
- U**
- Upgrades, 11
 - USB bus
 - setting up, 457
 - USB serial bus
 - setup, 97
 - trigger, 302
 - USB Serial Bus
 - Trigger on Data Packet, 302
 - Trigger on Error, 303
 - Trigger on Handshake Packet, 303
 - Trigger on Special Packet, 303
 - Trigger on Token (Address) Packet, 303
 - User color palette, 532
 - User color palettes, 645
 - user interface, 34
 - User interface, 33
 - User mask, 485
 - creating, 485
 - editing, 487
 - saving, 488
 - User mask edit, 202
 - User mask setup, 200
 - User preferences control window, 430
 - prompts, 430
 - readouts, 431
 - trigger level presets, 430
 - Using Fast Acquisitions, 450
 - Using mask testing, 490
 - Using math waveforms, 475
 - Using MyScope control windows, 284
 - Using zoom, 590
 - Using zoom with waveforms, 531
 - Utilities menu, 787
 - Utilities menu options, 787
 - autoset preferences, 163
 - deassign multipurpose knobs, 429
 - external signals, 420
 - GPIO configuration, 418
 - instrument calibration, 423
 - instrument diagnostics, 424
 - option installation, 441
 - set time & date, 417
 - TekSecure erase, 417
 - user preferences, 430
- V**
- V Bar cursors, 67
 - Variable List, 230
 - Variables control window, 210
 - vectors, 653
 - Vertical acquisition, 547
 - Vertical acquisition window, 547
 - vertical controls
 - Multiview Zoom button, 60
 - offset, 361
 - position, 55
 - scale, 807
 - V Bar cursors, 73
 - vertical bar cursors, 73
 - vertical offset control window, 361
 - Vertical controls, 355
 - vertical setup control window, 355
 - aux tab, 371
 - Vertical menu options, 787
 - attenuation, 380
 - bandwidth, 368
 - coupling, 366
 - deskew, 379
 - digital channels, 375
 - digital properties, 651
 - display on/off, 806
 - label, 361
 - offset, 361
 - position/scale, 807
 - probe cal, 384
 - termination, 736
 - vertical setup, 355
 - zoom controls, 357
 - zoom graticule, 175
 - zoom setup, 175
 - Vertical offset, 547
 - vertical scale, 544
 - setting, 544
 - Vertices, 625
 - Video port, 61
 - Video signal triggering, 525

- video trigger, 575
 - control window, 329
 - signal types, 329
- View Bus Packet, 129
- Voltage threshold levels
 - parallel bus, 120
- Volts per division, 546
 - maximum, 546
- VXI LAN server, 420

W

- Waveform differentiation, 597
- Waveform display, 586
- Waveform display control
 - window, 359
- Waveform integration, 601
- Waveform intensity, 583
- Waveform interpolation, 583
- Waveform Label control
 - window, 361
- Waveform options dialog
 - box, 727
- Waveform record, 556
- Waveforms, 668
 - averaging, 210
 - clipping, 807
 - colors, 655

- display, 359
- displaying, 529
- handle, 39
- histogram, 256
- intensity, 149
- interpolation, 149
- label, 361
- math, 223
- position, 359
- recalling and restoring, 499
- reference, 656
- saving, 411
- scale, 359
- spectral magnitude, 491
- spectral phase, 216
- WfmDB mode, 680
- Width trigger, 576
 - defined, 576
- Width trigger control
 - window, 331
- Window bin width, 607
- Window threshold violations
 - triggering, 524
- Window trigger, 332
 - defined, 576
 - window trigger control
 - window, 332

- Windows, 536
 - dockable, 536
- Windows interface, 22
- Working with your oscilloscope, 816

X

- X style cursor, 69
- XY cursors, 68
- XY format, 146
- XYZ format, 146

Y

- YT format, 146

Z

- Zero phase reference, 615
- Zoom, 149
 - button, 60
 - control window, 357
 - graticule, 43
 - setup window, 175
 - using, 531