

# Service Manual



## A6907 & A6909 High Voltage Isolators 071-0465-00

### **Warning**

The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to the Safety Summary prior to performing service.



Copyright © Sony/Tektronix Corporation. 1994. All rights reserved.

Copyright © Tektronix, Inc. 1994. All rights reserved.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

Printed in Japan.

Sony/Tektronix Corporation, P.O. Box 5209, Tokyo Int'l, Tokyo 100-31 Japan

Tektronix, Inc., P.O. Box 1000, Wilsonville, OR 97070-1000

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

## WARRANTY

Tektronix warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, with shipping charges prepaid. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; or c) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

**THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THIS PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.**



# Table of Contents

	<b>General Safety Summary</b> .....	<b>vii</b>
	<b>Service Safty Summary</b> .....	<b>ix</b>
<b>Getting Started</b>		
	<b>Product Description</b> .....	<b>1-1</b>
	<b>Options And Accessories</b> .....	<b>1-3</b>
	Options .....	1-3
	Accessories .....	1-4
	<b>Installation</b> .....	<b>1-5</b>
	Power Source .....	1-5
	Line Fuse .....	1-5
	Power Cord .....	1-6
	Connecting the Probe .....	1-6
	Connecting Output Cables .....	1-6
	<b>Functional Check</b> .....	<b>1-9</b>
	Turning On Power .....	1-9
	Self-Calibration .....	1-10
<b>Operating Basics</b>		
	<b>Functional Overview</b> .....	<b>2-1</b>
	Isolator Front Panel .....	2-1
	Isolator Rear Panel .....	2-3
	Isolator Scale Factor .....	2-4
	<b>Special Probes</b> .....	<b>2-5</b>
	Voltage Probe .....	2-5
	Common Lead Length .....	2-7
	A620 Current Probe .....	2-8
<b>Reference</b>		
	<b>Reference Introduction</b> .....	<b>3-1</b>
	<b>Manual Adjustments</b> .....	<b>3-3</b>
	Adjusting Offset Values .....	3-3
	Adjusting Gain Values .....	3-3
	<b>GPIB Programming</b> .....	<b>3-5</b>
	GPIB Requirements .....	3-6
	Setting the GPIB Parameters .....	3-6
	Other Documents You Will Need .....	3-7
	GPIB Interface Functions .....	3-7
	Interface Messages .....	3-8
	Remote, Local and Lockout .....	3-8
	<b>Syntax</b> .....	<b>3-11</b>
	Command Configuration .....	3-11
	Header .....	3-12

Arguments .....	3-12
Delimiters .....	3-13
Short Form .....	3-13
Linking Commands .....	3-14
<b>Command Groups .....</b>	<b>3-15</b>
Channel Control .....	3-15
Calibration and Testing .....	3-16
Status and Events .....	3-16
Synchronization .....	3-17
System .....	3-17
<b>Commands .....</b>	<b>3-19</b>
<b>Status and Events .....</b>	<b>3-31</b>
Registers .....	3-31
Status Registers .....	3-31
Enable Registers .....	3-33
Queues .....	3-35
Status and Event Processing Sequence .....	3-36
Messages .....	3-37
Synchronizing Execution .....	3-38

## Specifications

Warranted Electrical Characteristics .....	4-1
Typical Electrical Characteristics .....	4-2
Mechanical Characteristics .....	4-4
Environmental Characteristics .....	4-4
Certifications and Compliances .....	4-5

## Theory of Operation

Power .....	5-1
Signal .....	5-2
Control and Calibration .....	5-2

## Performance Verification

Prerequisites .....	6-1
Required Equipment .....	6-2
Preparation .....	6-3
Adjustment Location .....	6-3
ON/STBY button function check .....	6-4
Factory Calibration .....	6-5
Offset and Gain Check .....	6-8
Total Harmonic Distortion Check .....	6-11
Noise Check .....	6-13
Low-Frequency Pulse Response (Flatness) Check .....	6-15
Rise Time and Aberration Check .....	6-17
Bandwidth Check .....	6-19

## Adjustment Procedures

Requirements for Performance .....	7-1
Required Equipment .....	7-2

Preparation .....	7-3
Assembly Locations .....	7-3
E/O Adjustment Locations .....	7-3
+15 V and -15V Adjustment .....	7-4
Offset and Gain Adjustments .....	7-6
Low-Frequency Response Adjustment .....	7-9
High-Frequency Response Adjustment .....	7-11

## Maintenance

<b>Service Strategy .....</b>	<b>8-1</b>
<b>Inspection and Cleaning .....</b>	<b>8-3</b>
Cleaning .....	8-3
Isolator Inspection .....	8-3
<b>Removal and Replacement .....</b>	<b>8-5</b>
Line Cord .....	8-5
Cabinet .....	8-6
Front-Panel Assembly .....	8-7
E/O-O/E Module .....	8-8
A40 CPU Board .....	8-10
Rear Panel Assembly .....	8-11
A50 Distributor Board .....	8-12
U10 and U20 Power Supplies .....	8-13
A30 Floating Power Supply .....	8-15
<b>Troubleshooting Procedures .....</b>	<b>8-17</b>
<b>After Repair Adjustments .....</b>	<b>8-19</b>
Withstand-Voltage Check .....	8-19
<b>Repackaging Instructions .....</b>	<b>8-21</b>

## Diagrams .

## Replaceable Parts

Parts Ordering Information .....	10-1
Using the Replaceable Parts List .....	10-2

# List of Figures

Figure 1–1: Isolator Setup .....	1–7
Figure 2–1: Isolator Front Panel .....	2–1
Figure 2–2: Isolator Rear Panel .....	2–3
Figure 2–3: Special Voltage Probe and Accessories .....	2–5
Figure 2–4: Waveform Distortion from Common Lead Length .....	2–7
Figure 2–5: Common Lead Equivalent Circuit .....	2–7
Figure 2–6: A620 Current Probe .....	2–8
Figure 3–1: Typical Stacked GPIB Connectors .....	3–5
Figure 3–2: Typical GPIB Network Configurations .....	3–6
Figure 3–3: The Status Byte Register (SBR) .....	3–31
Figure 3–4: The Standard Event Status Register (SESR) .....	3–32
Figure 3–5: The Device Event Status Enable Register (DESER) .....	3–34
Figure 3–6: The Event Status Enable Register (ESER) .....	3–34
Figure 3–7: The Service Request Enable Register (SRER) .....	3–34
Figure 3–8: Status and Event Processing Sequence .....	3–36
Figure 4–1: Frequency Derating for the Maximum Normal Mode Voltage ....	4–3
Figure 4–2: Frequency Derating for the Maximum Common Mode Voltage ...	4–3
Figure 6–1: Electrical-to-Optical (E/O) Isolator Adjustment Locations .....	6–3
Figure 6–2: Factory Calibration Test Setup .....	6–5
Figure 6–3: Factory Calibration Test Setup .....	6–6
Figure 6–4: DC Offset and Gain Test Setup .....	6–8
Figure 6–5: DC Offset and Gain Test Setup .....	6–9
Figure 6–6: Total Harmonic Distortion Test Setup .....	6–11
Figure 6–7: Noise Check Setup .....	6–13
Figure 6–8: Low-Frequency Pulse Response Check Setup .....	6–15
Figure 6–9: Rise Time and Aberrations Check Setup .....	6–18
Figure 6–10: Bandwidth Check Setup .....	6–19
Figure 7–1: Electrical-to-Optical (E/O) Isolator Adjustment Locations .....	7–3
Figure 7–2: A40 Test Point Locations .....	7–4
Figure 7–3: Power Supply Adjustment Location .....	7–5
Figure 7–4: DC Offset and Gain Test Setup .....	7–6
Figure 7–5: DC Offset and Gain Test Setup .....	7–8
Figure 7–5: Positive DC Gain Test Setup .....	7–7
Figure 7–6: Low-Frequency Response Adjustment Setup .....	7–9
Figure 7–7: High-Frequency Response Adjustment Setup .....	7–11
Figure 8–1: Line Cord Removal .....	8–5
Figure 8–2: Cabinet Removal .....	8–6
Figure 8–3: Front-Panel Assembly Removal .....	8–7
Figure 8–4: E/O-O/E Module Removal .....	8–8
Figure 8–5: Input Connector Sleeve Removal .....	8–9
Figure 8–6: Separating the E/O and O/E Converters .....	8–9
Figure 8–7: A40 CPU Board Removal .....	8–10



Figure 8–8: Rear-Panel Assembly Removal (A6907) .....	8–11
Figure 8–9: Rear Panel Assembly Removal (A6909) .....	8–12
Figure 8–10: A50 Distributor Board Removal .....	8–13
Figure 8–11: Power Supply Assembly Removal (A6907) .....	8–14
Figure 8–12: Power Supply Assembly Removal (A6909) .....	8–14
Figure 8–13: A30 Floating Power Supply Removal (A6907) .....	8–15
Figure 8–14: A30 Floating Power Supply Removal (A6909) .....	8–16
Figure 8–15: Troubleshooting Tree .....	8–18
Figure 8–16: Floating Voltage Check Setup .....	8–19
Figure 9–1: A6907 Block Diagram .....	9–1
Figure 9–2: A6907 Interconnect Diagram .....	9–2
Figure 9–3: A6909 Block Diagram .....	9–3
Figure 9–4: A6909 Interconnect Diagram .....	9–4
Figure 10–1: A6907 and A6909 Replaceable Parts .....	10–3

## List of Tables

Table 1–1: Optional Power Cords .....	1–3
Table 1–2: Isolator Error Codes .....	1–9
Table 2–1: Isolator Scale Factors .....	2–4
Table 3–1: GPIB Functions .....	3–7
Table 3–2: BNF Symbols and Meanings .....	3–11
Table 3–3: Header Configuration Types .....	3–12
Table 3–4: Numeric Expressions .....	3–13
Table 3–5: Channel Control .....	3–15
Table 3–6: Calibration and Testing .....	3–16
Table 3–7: Status and Events .....	3–16
Table 3–8: Synchronization .....	3–17
Table 3–9: System Commands .....	3–17
Table 3–10: SRB Bit Functions .....	3–32
Table 3–11: SESR Bit Functions .....	3–32
Table 3–12: Normal Status .....	3–37
Table 3–13: Command Errors .....	3–37
Table 3–14: Execution Errors .....	3–38
Table 3–15: Internal Errors .....	3–38
Table 3–16: System Events .....	3–38
Table 4–1: Warranted Electrical Characteristics .....	4–1
Table 4–2: Typical Electrical Characteristics .....	4–2
Table 4–3: Mechanical Characteristics .....	4–4
Table 4–4: Environmental Characteristics .....	4–4
Table 4–5: Certifications and Compliances .....	4–5
Table 6–1: Required Test Equipment .....	6–2
Table 6–2: Isolator Offset and Gain Check .....	6–10
Table 7–1: Test Equipment, Fixtures, and Supplies .....	7–2
Table 8–1: Withstand-Voltage Required Equipment .....	8–19

# General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it.

*Only qualified personnel should perform service procedures.*

While using this product, you may need to access other parts of the system. Read the *General Safety Summary* in other system manuals for warnings and cautions related to operating the system.

## Injury Precautions

- |   |  |
|---|--|
| <b>Use Proper Power Cord</b>                  | To avoid fire hazard, use only the power cord specified for this product.  |
| <b>Avoid Electric Overload</b>                | To avoid electric shock or fire hazard, do not apply a voltage to a terminal that is outside the range specified for that terminal.  |
| <b>Ground the Product</b>                     | This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded. |
| <b>Do Not Operate in Wet/Damp Conditions</b>  | To avoid electric shock, do not operate this product in wet or damp conditions.  |
| <b>Do Not Operate in Explosive Atmosphere</b> | To avoid injury or fire hazard, do not operate this product in an explosive atmosphere.  |

## Product Damage Precautions

- |   |   |
|---|---|
| <b>Use Proper Power Source</b>                | Do not operate this product from a power source that applies more than the voltage specified.     |
| <b>Do Not Operate With Suspected Failures</b> | If you suspect there is damage to this product, have it inspected by qualified service personnel. |

## Safety Terms and Symbols

### Terms in This Manual

These terms may appear in this manual:



---

**WARNING.** Warning statements identify conditions or practices that could result in injury or loss of life.

---



---

**CAUTION.** Caution statements identify conditions or practices that could result in damage to this product or other property.

---

### Terms on the Product

These terms may appear on the product:

DANGER indicates an injury hazard immediately accessible as you read the marking.

WARNING indicates an injury hazard not immediately accessible as you read the marking.

CAUTION indicates a hazard to property including the product.

### Symbols on the Product

The following symbols may appear on the product:



DANGER  
High Voltage



Protective Ground  
(Earth) Terminal



ATTENTION  
Refer to  
Manual



Double  
Insulated

## Certifications and Compliances

### CSA Certified Power Cords

CSA Certification includes the products and power cords appropriate for use in the North America power network. All other power cords supplied are approved for the country of use.

# Service Safety Summary

Only qualified personnel should perform service procedures. Read this *Service Safety Summary* and the *General Safety Summary* before performing any service procedures.

## **Do Not Service Alone**

Do not perform internal service or adjustments of this product unless another person capable of rendering first aid and resuscitation is present.

## **Disconnect Power**

To avoid electric shock, disconnect the main power by means of the power cord or, if provided, the power switch.

## **Use Care When Servicing With Power On**

Dangerous voltages or currents may exist in this product. Disconnect power, remove battery (if applicable), and disconnect test leads before removing protective panels, soldering, or replacing components.

To avoid electric shock, do not touch exposed connections.





# Getting Started





## Product Description

The A6907 and A6909 High Voltage Isolators connect “floating” (not referenced to ground) signals to an oscilloscope or digitizer for measurement. Optical couplers, insulated transformers, and plastic barriers are used for extremely high isolation between channels and the chassis, and from channel to channel.

Signals measured between the tip and common connections of the special probes are fully isolated from ground and other channels. The maximum rated voltage between the probe tip and probe common (normal mode voltage) is 850 V (DC + peak AC). The maximum rated voltage between the probe common and chassis ground (common mode voltage) is also 850 V (DC + peak AC).

The electrical-to-optical (E/O) converter isolates the signal and converts it to an optical analogue. The optical-to-electrical (O/E) converter demodulates the optical signal to an electrical signal whose common mode elements have been rejected. The E/O converter uses a unique low-contact DC to DC converter as a power source to provide a high degree of isolation.

The A6907 and A6909 satisfy the UL1244, CSA 231, and IEC1010-1 safety standards for floating measurements. The A6907 and A6909 have the following special features:

- DC to 60 MHz bandwidth
- Self-calibration function for accurate measurements
- Portable configuration
- Excellent linearity and low interference
- External control through GPIB interface standard on the A6907 (option 10 on the A6909)
- 20 kV/ $\mu$ s slew rate



# Options And Accessories





Several options and accessories are available for your isolator. Please review this listing to select the items that best suit your application.

## Options

The following options are available for the A6907 and A6909:

- Option 10 includes the GPIB interface on the A6909.
- Options A1–A3, A5. Besides the standard North American, 110 V, 60 Hz power cord, Tektronix will ship any of four alternate power cords with the isolator when ordered by the customer.

**Table 1-1: Optional Power Cords**

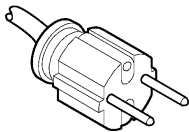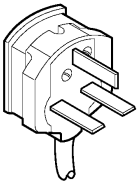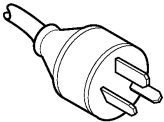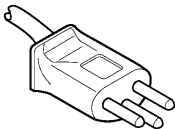Plug Configuration	Normal Usage	Option Number
	Europe 230 V	A1
	United Kingdom 230 V	A2
	Australia 230 V	A3
	Switzerland 230 V	A5

## Accessories

The following standard and optional accessories are available for the A6907 and A6909. Refer to the *Replaceable Parts* section for current part numbers.

### Standard Accessories

The A6907 and A6909 come with the following standard accessories:

- Power cord
- Fuses (2.5 Amp, 250V, fast blow)
- 50 $\Omega$  BNC cable set (4 cables with A6907, 2 cables with A6909)
- Special probes (4 with A6907, 2 with A6909)
- Instruction Manual

### Optional Accessories

The following optional accessories are available for the A6907 and A6909:

- 50 $\Omega$  BNC feedthrough termination
- GPIB cable
- A620 current probe

# Installation

The isolator must be connected to line power before you can configure it for measurements. Please read this portion carefully to avoid equipment damage or personal injury.

## Power Source

The A6907 and A6909 can be used with AC power at frequencies from 50 Hz to 60 Hz and at voltages from 100 V to 240 V.

## Line Fuse

Make sure that the proper line fuse has been installed before connecting the isolator to the power source.



---

**CAUTION.** *The isolator may be damaged if the wrong line fuse is installed.*

---

Check the fuse holder located beneath the input power connector:

1. Disconnect all power and signal connections to the isolator.
2. Use a small straight-slot screwdriver to pry the cap out of fuse holder.
3. Verify proper fuse value:

Standard (115 V): 2.5 A, 250 V, fast-blow

Options A1, A2, A3 & A5 (230 V): 2.5 A, 250 V, slow-blow

For the correct part number of each fuse, refer to *Replaceable Parts* on page 10–8.

4. Install the proper fuse and reinstall the fuse holder cap.

## Power Cord



---

**WARNING.** *In order to prevent electrical shock, only plug the power cord into grounded three-wire outlets. Do not defeat the ground connection on the plug.*

---

The A6907 and A6909 power cords are three-wire grounded cords. The metal portions on the outside of the isolator are connected to the power-source ground by means of the ground wire in the power cord and plug.

## Connecting the Probe



---

**WARNING.** *In order to prevent electrical shock, do not substitute any other style of probe for the special probes provided with the isolator. The provided probes are specially insulated for high voltage measurements.*

---

Do not make connections to a circuit before connecting the probe to the isolator. Firmly push the probe connector into the channel input on the front panel of the isolator. Refer to Figure 1–1.

For information on probe accessories and probing techniques, refer to the *Special Probe* section starting on page 2–5.


## Connecting Output Cables

Use the 50  $\Omega$  BNC cables included with the instrument to connect the isolator to an oscilloscope or digitizer. Refer to Figure 1–1.

---

**NOTE.** *The input impedance of the connected oscilloscope must be 50 $\Omega$ . If your oscilloscope does not provide a 50 $\Omega$  termination, attach an optional 50 $\Omega$  feedthrough termination between the BNC cable and the oscilloscope input connector. Unterminated channels will report the error code E06 during self-calibration.*

---

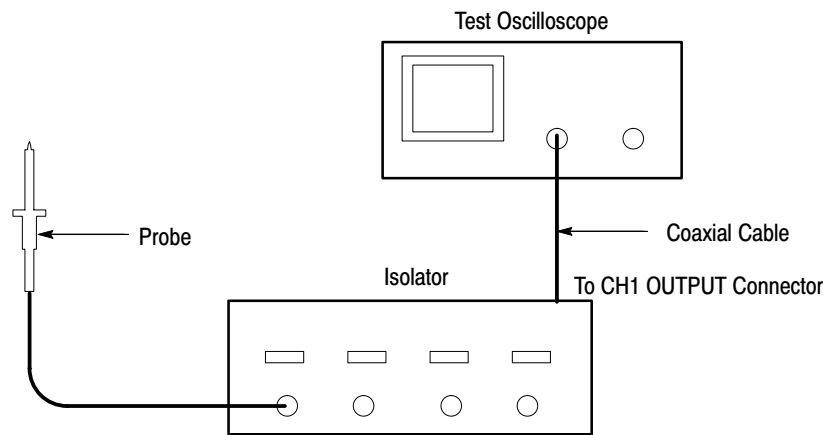

**Figure 1-1: Isolator Setup**

Set the oscilloscope input attenuators to 100 mV/division.





# Functional Check

After line power is connected to the isolator, perform a functional check to test normal system operation. To ensure proper operation of your isolator, follow these steps:

## Turning On Power

Set the **POWER** switch on the rear panel to the ON position. This enables the STBY/ON control on the front panel.

Press the **STBY/ON** button on the front panel. The isolator will automatically begin the self-test procedure.

If the results of the self-test are normal, the channel display settings revert to the values that were effective when the power was last turned off. If there is a self-test error, an error code will appear on all of the channel indicators. See Table 1–2.

**Table 1–2: Isolator Error Codes**

Error Code	Description
E01	ROM checksum error
E02	RAM read/write error
E03	EEPROM checksum error
E04	EEPROM read/write error

If an error code is displayed, contact your local Tektronix Field Office for assistance.

## Self-Calibration

---

**NOTE.** *In order to ensure the accuracy of measurements, self-calibration should be performed just before taking measurements.*

---

The A6907 and A6909 are equipped with a self-calibration function that automatically calibrates the offset and gain for each channel for maximum accuracy. After the isolator has been warmed up for 20 minutes, use the following procedure to perform the self-calibration:

1. Make sure that each channel output is terminated into 50  $\Omega$ .
2. Set the oscilloscope input attenuators to 100 mV/division.
3. Press the **CAL** button on the front panel. Self-calibration will begin and the gain and offset values for each channel will be calibrated. If self-calibration completes without error, the values shown on the indicators will return to normal.

---

**NOTE.** *If error code EO6 appears after self-calibration, it may be because a 50  $\Omega$  load is not connected to the channel output. If a load is properly connected but the error code is still displayed, contact your local Tektronix Field Office.*

---

If you need to enter custom offset or gain values, refer to the *Manual Adjustments* section starting on page 3–3.



# **Operating Basics**



# Functional Overview

This section describes the controls, indicators and connectors on the A6907 and A6909. Figures 2-1 and 2-2 show the A6907; the A6909 does not have channels 3 and 4.

## Isolator Front Panel



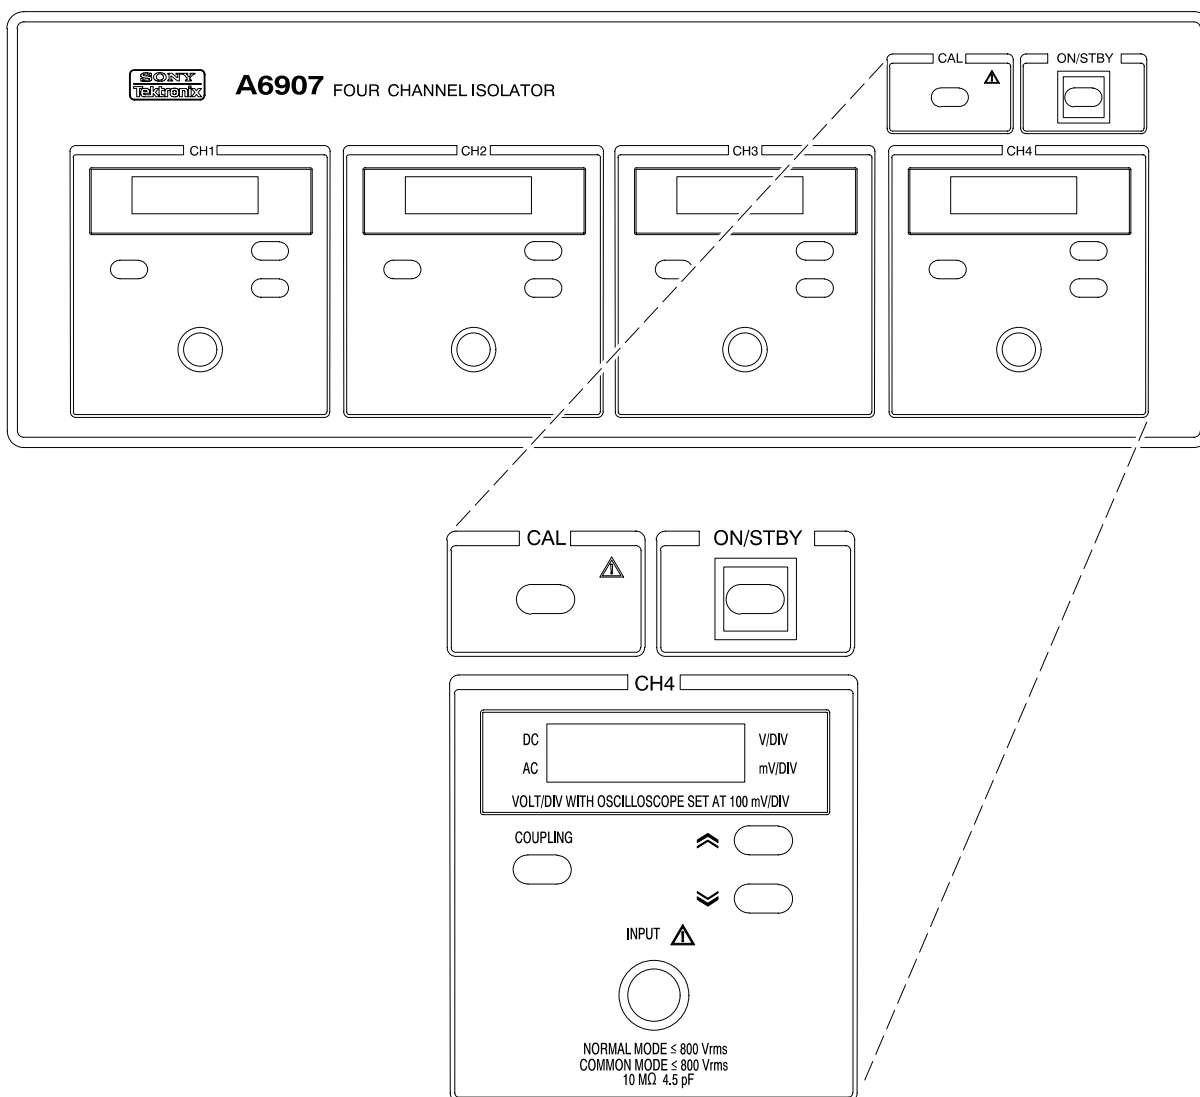


Figure 2-1: Isolator Front Panel

**Isolator Front Panel Controls and Connections**

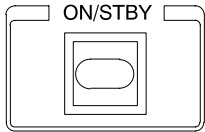

**ON/STBY.** Pressing the ON/STBY button toggles the isolator between the ON and STANDBY modes. The POWER switch on the rear panel must be in the ON position in order to enable the ON/STBY button. See page 2-3 for more details.

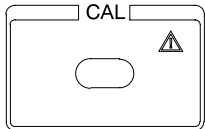

**CAL.** Pressing the CAL button starts a self-calibration process. The CAL process should be run before making any measurements. Also, the oscilloscope input should be set to 100 mV/division for the output scale factor to be accurate.

See page 1-10 for a description of the self-calibration process.

 


**COUPLING.** Pressing the COUPLING button toggles the isolator between DC and AC input coupling.

DC Coupling – All frequency components included in the input signal are passed to the attenuator.


AC Coupling – DC signal components are blocked. The input signal first passes through a capacitor before being coupled to the attenuator.

The coupling status is shown on the left side of the channel display. This button also provides manual adjustment of the offset and gain values. See *Manual Adjustments* on page 3-3 for more details.




**SCALE.** Pressing the up and down SCALE buttons adjusts the attenuator scale for each channel on the isolator. The isolator attenuator scale can be set to any value between 100 mV and 200 V per division in 1-2-5 increments. The value shown on the channel indicator is the value when the oscilloscope connected to the isolator is set to 100 mV per division.

 These buttons are also used during manual adjustment of the offset and gain. See *Manual Adjustments* on page 3-3 for more details.



**CHANNEL DISPLAY.** The channel display indicates channel coupling and scale factor. The display also shows error codes in the event of an error in the self-test or self-calibration processes.

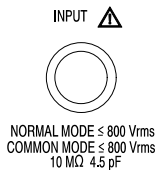

**INPUT.** The INPUT connection is where the probe is connected to the isolator.

Do not attempt to substitute any other style probes for the ones that are provided with the isolator. The provided probes are specially insulated and using substitute probes may cause an electrical safety hazard.



**WARNING.** To avoid the risk of electrical shock, do not connect any other probes than those shipped with the isolator.

## Isolator Rear Panel


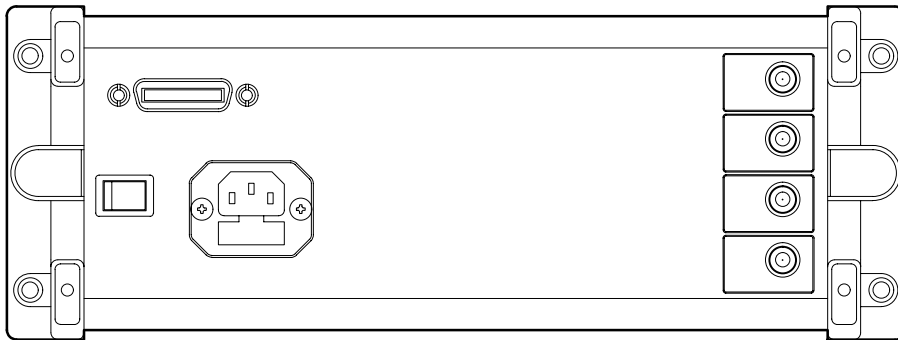



Figure 2-2: Isolator Rear Panel

### Isolator Rear Panel Controls and Connections

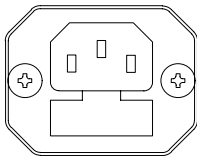


**INPUT POWER.** The input power connection provides a connection for the power cord and contains the input power fuse.

 For a list of the available power cords, refer to the *Options* section on page 1-3.




 **POWER ON/OFF.** This is the main power switch for the instrument. It must be set to the ON position to enable the STANDBY/ON key on the front panel.



**OUTPUT.** Each channel in the isolator has a 50 Ω output BNC connection. In order for the isolator to successfully complete the self-calibration, all of the channels must each be terminated into a 50 Ω load. *If the error code EO6 appears after self-calibration, it may be because the channel is not terminated into a 50 Ω load.*

If your oscilloscope does not provide a 50 Ω input termination, a 50 Ω feedthrough termination may be ordered as an optional accessory. Also, the oscilloscope input should be set to 100 mV/division for the output scale factor to be accurate.

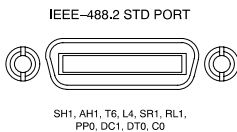

**IEEE-488.2 STD PORT.** This is a General Purpose Interface Buss (GPIB) connector. The GPIB function is standard on the A6907 and may be ordered as option 10 with the A6909.

For more information on GPIB operation, refer to the *GPIB Programming* section starting on page 3-5.

## Isolator Scale Factor

The voltage scale-factor displayed on the front-panel of the isolator is valid only when the oscilloscope is set to 100 mV/division. If you must set the oscilloscope at other than 100 mV/division, refer to Table 2–1 to calculate the new scale-factor.

---

**NOTE.** *The performance characteristics of the isolator are not warranted if the oscilloscope is not set to 100 mV/division.*

---

**Table 2–1: Isolator Scale Factors**

Oscilloscope Setting	Isolator Scale Multiplier
100 mV	× 1
200 mV	× 2
500 mV	× 5
1 V	× 10
2 V	× 20
5 V	× 50
10 V	× 100
20 V	× 200
50 V	× 500
100 V	× 1000
200 V	× 2000

For example, if the isolator is set at 20 Volts/division, and the oscilloscope is set at 1 Volt/division (scale multiplier = 10), the displayed waveform will be at 200 Volts/division ( $20 \times 10 = 200$ ).



# Special Probes

The isolator is supplied with special voltage probes for immediate use. An optional current probe may be ordered for current measurements.




**WARNING.** Do not use a special probe if the probe head or leads are damaged. It may present an electrical safety hazard resulting in injury or death.

## Voltage Probe

The special voltage probe is provided with the following accessories: retractable hook tip, IC lead protection shroud, probe common leads, and cable-marker rings (see Figure 2-3).

**NOTE.** The probe included with the isolator as a standard accessory is intended for use with the isolator only. The balun on the cable provides shielding from large  $dv/dt$  fields. Do not use the special probe with other instruments.

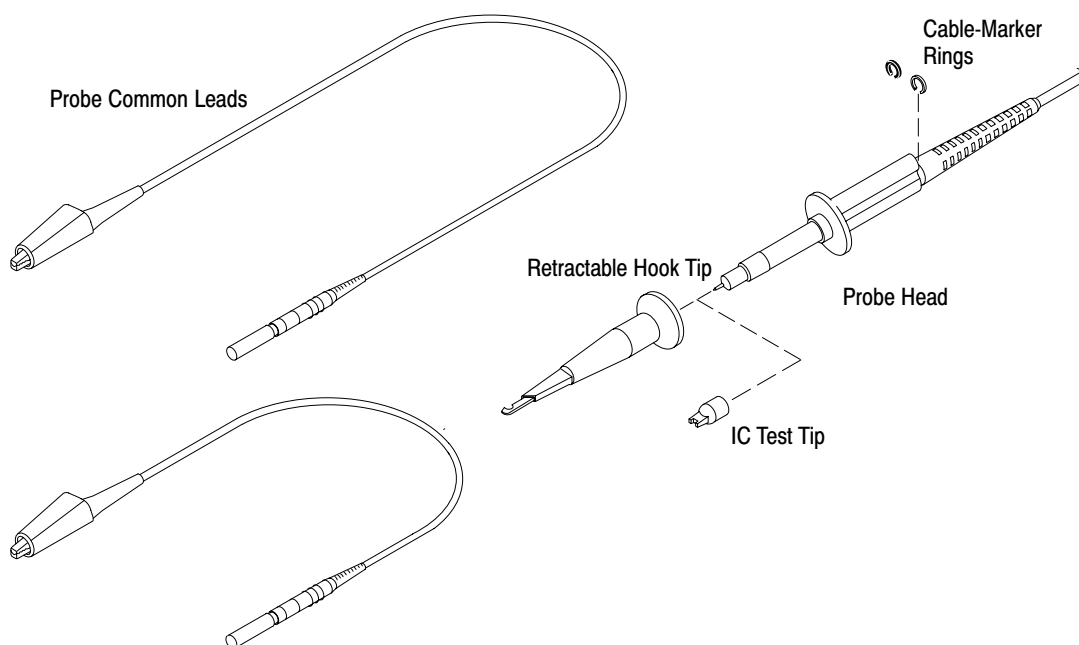

**Figure 2-3: Special Voltage Probe and Accessories**

Use the sharp tip of the probe to make contact with terminals covered with solder resist or oxide. Handle the probe carefully to prevent damage to other objects or personal injury.

Use the retractable hook tip to connect the probe to the circuit (typically a component lead or test point connection) for “hands-free” measurements.

---

**NOTE.** *When removing the hook tip from the probe, the probe may come loose from the probe cable. If this happens, the signals will not be passed from the probe to the isolator. When reconnecting the probe to the probe cable, make sure that the cable is securely inserted into the probe.*

---

When probing ICs, remove the retractable hook tip from the probe and attach the IC test tip to the tip of the probe. The tip of the probe will stick out from the IC test tip, but the probe tip will not come in contact with and short out an adjacent IC lead.

Connect the common lead to the reference point in the circuit. Because of the high capacitance of the common lead circuit, do not connect the common lead to high-impedance sections of the circuit. The additional capacitive loading may cause circuit damage. Connect the common lead to low-impedance sections of the circuit.



---


**WARNING.** *In order to prevent electrical shock, do not attach the standard common lead to energized circuits above 42 V (60 VDC + peak AC). Use the optional industrial lead set for connecting to energized circuits above 42 V.*

---

## Common Lead Length


Always use as short a common lead as possible between the probe head and circuit common when you are probing a circuit.

The series inductance added by the probe tip and common lead can result in a resonant circuit; this circuit may cause parasitic “ringing” within the bandwidth of your oscilloscope. Refer to Figure 2–4.

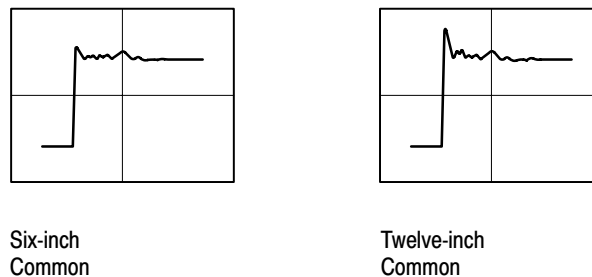

**Figure 2–4: Waveform Distortion from Common Lead Length**

When you touch your probe tip to a circuit element, you are introducing a new resistance, capacitance, and inductance into the circuit. Refer to Figure 2–5.

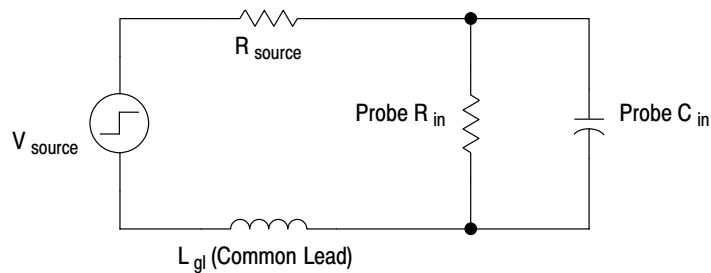

**Figure 2–5: Common Lead Equivalent Circuit**

Ringling and rise time degradation can be masked if the frequency content of the signal degradation is beyond the bandwidth of the oscilloscope.

You can determine if ground lead effects may be a problem in your application if you know the self-inductance ( $L$ ) and capacitance ( $C$ ) of your probe and common lead. Calculate the approximate resonant frequency ( $f_0$ ) at which this parasitic circuit will resonate with the following formula:

$$f_0 = \frac{1}{2\pi\sqrt{LC}}$$

The preceding equation shows that reducing the common lead inductance will raise the resonant frequency. If your measurements are affected by ringing, your goal is to lower the inductance of your common path until the resulting resonant frequency is well above the frequency of your measurements.

## A620 Current Probe


The Tektronix A620 current probe enables the display of current waveforms up to 1000 amps when used with the isolator and an oscilloscope. The A620 is used where the display and measurement of distorted current waveforms and harmonics is required.



---

**WARNING.** To avoid the risk of electrical shock, do not use the A620 in circuits operating at greater than 440 VAC (650 VDC + peak AC). Refer to the A620 Instructions for operating and safety information.

---

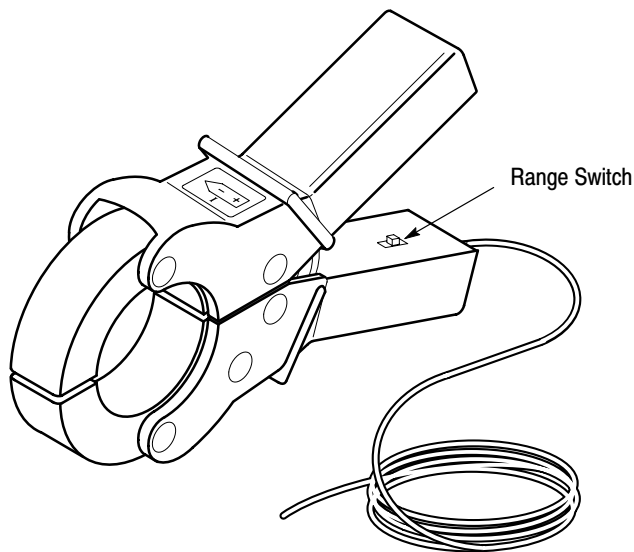

**Figure 2-6: A620 Current Probe**

The A620 has three operating ranges, these ranges must be scaled to the operating characteristics of the isolator using the formula below:

$$\text{Current / division} = \frac{\text{Isolator V/division}}{\text{A620 Range Switch}}$$

---

**NOTE.** *The oscilloscope vertical input must be set to 100 mv/division when using the scale conversion formula.*

---

For example: If the isolator is set at 10 V/div. and the probe is set to 10 mV/A, then the displayed current per division will be 1000 A/division.

$$\text{Current/division} = \frac{10 \text{ V/division}}{10 \text{ mV/Amp}} = 1000 \text{ A/division}$$





# Reference





# Reference Introduction

The *Reference* section contains information on adjusting and operating the isolator. We have organized this section to provide basic information first, and information for experienced users at the end. This section contains the following information:

## Manual Adjustments

After the calibration routine is completed, you may want to make adjustments to the offset and gain factors. This section provides detailed instructions for this process.

## GPIB Programming

This section describes the set up and fundamental theory of controller operation of the isolator.

## Syntax

This section describes the syntax or grammar of the commands that the controller will pass to the isolator.

## Command Groups

This section lists the commands in groups according to the nature of their functions, and includes brief definitions and examples of the commands.

## Commands

This section list the commands in alphabetical order and provides a detailed description of their definitions and operation.

## Status and Events

This section lists detailed information on the processor registers for the advanced user or programmer.



# Manual Adjustments

The self-calibration process ensures a high degree of accuracy for offset and gain values; however, the isolator also has a function for manual fine-adjustment of offset and gain values. This function may be used to eliminate an offset included in the input signal or to match the amplitude to that of a reference signal.

## Adjusting Offset Values

Follow this procedure to change the channel offset value:

1. Press the **COUPLING** and down **SCALE** buttons simultaneously for the channel to which you wish to apply an offset value. The mode changes to the offset adjustment mode and an offset value (55 to 255) appears on the indicator.
2. Use the up and down **SCALE** buttons to set the offset value.
3. Once again, press the **COUPLING** and down **SCALE** buttons simultaneously. The channel reverts to the normal operating mode.

## Adjusting Gain Values

Follow this procedure to change the channel gain value:

1. Press the **COUPLING** and up **SCALE** buttons simultaneously for the channel whose gain you wish to adjust. The mode will change to the gain adjustment mode and a gain value (55 to 255) appears on the indicator.
2. Use the up and down **SCALE** buttons to set the gain value.
3. Once again, press the **COUPLING** and up **SCALE** buttons simultaneously. The channel reverts to the normal operating mode.

---

**NOTE.** *The V/DIV LED or mV/DIV LED on the indicator blinks to indicate that a channel is not calibrated when you have adjusted the offset or gain manually. To delete the values you have set manually, perform self-calibration again.*

---




## GPIB Programming

You can use a computer to control the A6907 isolator and make measurements. (You can also control the A6909 with option 10 installed.) With an oscilloscope that also can be programmed, the computer and isolator can form a complete, automated measurement system.

Your computer, also known as the controller, must be capable of operating on a GPIB bus that conforms to IEEE Std 488.1–1987. GPIB cards are available to provide this capability for personal computers.

Attach an IEEE Std 488.1–1987 GPIB cable (see *Optional Accessories* in the *Replaceable Parts* section) between the GPIB connector and your controller. Figure 3–1 also shows how cables can be stacked together if you do not have a multiple connection cable. You can stack a second cable on either the isolator connector or the controller connector, to similarly connect your oscilloscope.

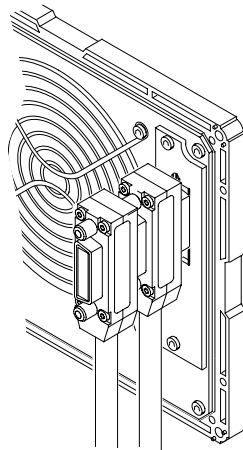


**Figure 3–1: Typical Stacked GPIB Connectors**

## GPIB Requirements

Observe these rules when you use your isolator with a GPIB network:

- Assign a unique device address to each device on the bus. No two devices can share the same device address.
- Do not connect more than 15 devices to the bus.
- Connect one device for every 2 meters (6 feet) of cable used.
- Do not use more than 20 meters (65 feet) of cable for the entire bus.
- Turn on at least two-thirds of the devices on the network while using the network.
- Connect the devices on the network in a star or linear configuration as shown in Figure 3–2. Do not use loop or parallel configurations.

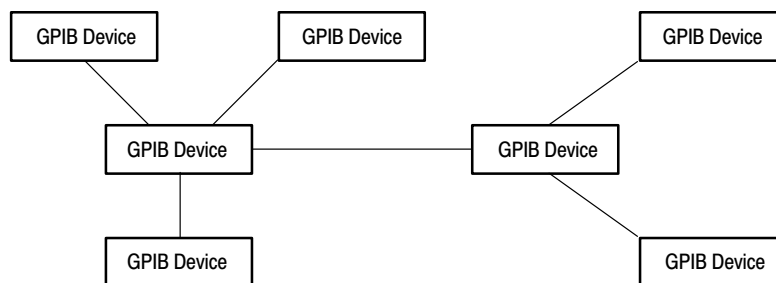

**Figure 3–2: Typical GPIB Network Configurations**

## Setting the GPIB Parameters

You must set the GPIB parameters of the isolator to match the configuration of the bus and controller.

### Setting the Bus Address

Use the following procedure to set the bus address on the isolator. The default value for bus address set at the factory is 1.

1. Simultaneously press the **CH1 COUPLING** key and the **CH2 down SCALE** key on the front panel. The current address setting will appear on the CH1 indicator.
2. Use the **CH1 up** and **down SCALE** keys to set the value as desired.
3. Once again, press the **CH1 COUPLING** key and the **CH2 down SCALE** key simultaneously. The value you have set will be registered as the address and the isolator will revert to normal operation.

The bus address can be set to any value between 0 and 31. Setting a value of 31 will cause the isolator to be logically separated from the GPIB interface. As a result, it will not respond to any GPIB address and will be unable to receive or transmit.

**Message Terminators**

The isolator accepts a line feed (LF) character simultaneous with the EOI as the end of a series of received bytes. It also transmits an LF with the EOI at the end of a series of transmitted bytes.

**Other Documents You Will Need**

To completely understand and implement a GPIB system, you will need the documentation that supports your controller. If you are using a personal computer with a GPIB card, you will need the documentation for both the PC and the GPIB card.

**GPIB Interface Functions**

The GPIB interface on this instrument satisfies the IEEE 488.2-1987 standard. Commands are compatible with Tektronix codes and format standards, making it possible to connect with other GPIB units through the bus. Table 3-1 shows the subsets for the GPIB interface on the isolator.

**Table 3-1: GPIB Functions**

Function Name	Subset	Note
Source Handshake	SH1	Complete capability
Acceptor Handshake	AH1	Complete capability
Talker	T6	Basic Talker, Serial Poll, Unaddress if MLA
Listener	L4	Basic Listener, Unaddress if MTA
Service Request	SR1	Complete capability
Remote/Local	RL1	Complete capability
Parallel Poll	PP0	No capability
Device Clear	DC1	Complete capability
Device Trigger	DT0	No capability
Controller	C0	No capability
Drivers	E2	Three-state

## Interface Messages

Interface messages are used by the controller to manage the talker/listener designation and other bus control operations. This section describes the function of the interface messages and how the isolator operates when it receives an interface message from the controller.

### **My Listen Address and My Talk Address (MLA and MTA)**

The MLA and MTA messages are used to designate the instrument as a listener and a talker. When the ATN line is TRUE, the instrument will become a talker when it receives an MTA message. When the ATN line is no longer true, the instrument will begin source handshaking and data transmission. When the ATN line is true and the instrument receives an MLA message, it becomes a listener and is able to receive the data sent from the talker.

### **Go To Local (GTL)**

When the isolator receives a GTL message, it changes to LOCAL status.

### **Device Clear (DCL)**

This message initializes the communication status between the instrument and the controller. When it receives a DCL message, the instrument will clear all I/O messages and unexecuted control settings. This will also clear all errors and all Report Waiting events other than the Power On event. Also, when a DCL message is received, the SRQ will be cleared if an SRQ has been sent for any other reason than Power On.

### **Selected Device Clear (SDC)**

This message is the same as the DCL message. However, only instruments addressed as listeners will respond to an SDC message.

### **Local Lockout (LLO)**

When the instrument receives an LLO message in REMOTE status, it will become impossible to control the isolator using the keys on the front panel. If an LLO message is received in LOCAL status, control using the keys on the front panel will become ineffective when the instrument has been changed to REMOTE status.

### **Serial Poll Enable and Disable (SPE/SPD)**

The instrument addressed as the talker transmits a serial poll status byte in response to the Serial Poll Enable (SPE) message. The Serial Poll Disable (SPD) message returns the instrument to normal status.

### **Unlisten and Untalk (UNL and UNT)**

The UNL message releases all instruments on the bus from their addressed listener status. The UNT message releases all instruments on the bus from their addressed talker status.

### **Interface Clear (IFC)**

When an IFC message is received, the instrument status becomes the same as if both UNL and UNT messages had been received.



## Remote, Local and Lockout

The instrument is normally set to one of the following three control conditions:

**LOCAL** When the power to the instrument is turned on, it is placed in LOCAL control. In LOCAL, the isolator is operated using the keys on the front panel. When an MLA message is received in LOCAL, the control changes to REMOTE.

**REMOTE** In REMOTE, the isolator can be controlled using programs from a controller. When a command is given using the front panel controls while in REMOTE, the instrument control will change to LOCAL.

**LOCKOUT** The isolator control changes to REMOTE LOCKOUT or LOCAL LOCKOUT status when the ATN line is true and an LLO message is received.

In LOCAL LOCKOUT control the instrument is operated using the controls on the front panel the same as in LOCAL control. At this time, if the REN and ATN lines are both true, the receipt of an MLA message will change control to REMOTE LOCKOUT instead of REMOTE.

Front panel control of the isolator is not possible in REMOTE LOCKOUT control. Also, it is not possible to use the front panel controls to change back to LOCAL status. REMOTE LOCKOUT control will be canceled when the REN line is no longer true.



# Syntax

The isolator is equipped with a set of commands for remote control from an external controller. This section describes how to use these commands to create programs for controlling the instrument.

In explaining these commands, this manual will use the following symbols:

**Table 3-2: BNF Symbols and Meanings**

Symbol	Meaning
< >	Indicates a defined element
: :=	Indicates that the left member is defined as shown by the right member
	Delimits Exclusive OR elements
{ }	Delimits a group of elements one of which must be selected
[ ]	Delimits an optional element (may be omitted)
. . .	Indicates that the previous element is repeated

## Command Configuration

There are two types of commands: configuration commands and query commands. In this manual, we will refer to these as commands and queries. Commands are used to set and change values on the instrument and to execute specific operations. Queries are used to obtain information on instrument status.

Commands have the following configuration:

[:] <header> [<space><argument>]

In several cases, the same format is used for both commands and queries. This is done by putting a question mark (?) after the header of a command to turn it into a query.

## Header

Each command requires at least a header. Headers can be divided into six types according to their configuration:

**Table 3–3: Header Configuration Types**

Header Type	Configuration
Simple command header	A header made up of a single header mnemonic. Example: DESE HEADER
Simple query header	A header made up of a single header mnemonic plus a question mark (?) Example: ALLEV? EVENT?
Compound command header	A header made up of several header mnemonics separated by colons (:) Example: CH1:COUPLING CH1:GAIN
Compound query header	A header made up of several header mnemonics separated by colons (:) with a question mark at the end (?) Example: CH1:OFFSET?
Common command header	A header made up of a header mnemonic preceded by an asterisk (*) Example: *RST?  <i><b>NOTE:</b> Commands that include asterisks (*) are those defined by IEEE Std. 488.2. These commands can be used on all instruments with GPIB systems that support the IEEE Std 488.2.</i>
Common query header	A header made up of a header mnemonic preceded by an asterisk (*), with a question mark at the end (?) Example: *IDN?

## Arguments

Arguments are placed at the end of the header to specify the command function. The isolator uses two types of arguments: decimal data and character string data.

### Decimal Data

Three types of decimal data can be used: NR1, NR2 and NR3 as specified in ANSI/IEEE Std 488.2-1987 (see Table 3–4). When any one of these three can be used, it is noted as NRf.

**Table 3-4: Numeric Expressions**

Type	Format	Example
NR1	Integer	1, +3, -2, +10, -20
NR2	Fixed Decimal Point	1.2, +23.5, -0.15
NR3	Floating Decimal Point	1E+2, +3.36E-2, -1.02E+3

### Character String Data

Character string data is also called literal or string data. Character strings are enclosed in quotation marks.

```
"[<character string>]"
```

Example: "This is string constant."

When the character string has quotation marks, add one more quotation mark to each quotation mark as shown below:

Example: To make the phrase Serial Number "J310000" into a character string, enter the following:

```
"Serial Number ""J310000"""
```

### Delimiters

The grammatical elements making up program message units are delimited (differentiated) with colons, semicolons, white spaces and commas.

- Colon (:). Used to join the header mnemonics in a compound command header.
- White Space (.). Used to delimit the header and argument. Normally the space character (ASCII code 32) is used as the white space, but ASCII code characters 0 to 9 and 11 to 31 can be used as well.
- Comma (,). Used to separate arguments when there is more than one argument in a single header.
- Semicolon (;). Used to link multiple commands. See the "Linking Commands" item.

### Short Form

In order to make it easier to create programs and reduce the time required for bus communication, it is possible to omit some of the characters in the header and argument. In the description of commands in this manual, characters which

absolutely must be present are shown in CAPITAL letters; characters which may be deleted are shown in small letters. For example, for the “VERBose?” command any of the three versions shown may be used:

```
VERBOSE?  
VERBOS?  
VERBO?
```

## Linking Commands

The semicolon (;) can be used to link commands, making it possible to include several commands in a single program message. The isolator executes linked commands in the order in which they are received.

When linking commands, it is necessary to obey the following rules:

1. Except for the first one, headers that are completely different are separated using semicolons and the colon that comes before the command. For example, to link the SELFCAL command and the CH1:SCALE 100.0E-3 command, you would write the following:

```
SELFCAL;:CH1:SCALE 100E-3
```

2. When linking commands that are identical except for the mnemonic at the end of the header, parts of the second command can be eliminated along with the colon at the beginning. For example, to link the CH1:SCALE 1.0E-0 command with the CH1: COUPLING AC command, you would write the following:

```
CH1:SCALE 1.0E-0;COUPLING AC
```

The same operation will be performed if the command is written out in its entirety.

```
CH1:SCALE 1.0E-0;:CH1:COUPLING AC
```

3. Do not place a colon in front of a command that begins with an asterisk (\*).

```
CH1:COUPLING AC;*CAL?
```

# Command Groups

This section describes the commands in general categories. Commands to the A6907 and A6909 can be generally divided into five groups:

- Channel control
- Calibration and testing
- Status and events
- Synchronization
- System

Items followed by question marks are queries; items without question marks are commands. Some items in this section have a question mark in parentheses (?) in the command header section; this indicates that the item can be both a command and a query.

## Channel Control

These items control the range, input coupling, offset and gain values for each channel.

**Table 3-5: Channel Control**

Header	Description
CH<x>?	Range, input coupling or other query
CH<x>:CAL?	Query regarding calibration status
CH<x>:COUPling (?)	Input coupling setting
CH<x>:GAIIn (?)	Gain setting
CH<x>:OFFSet (?)	Offset setting
CH<x>:SCALE (?)	Range setting

## Calibration and Testing

These items are used to execute the instrument's built-in self-calibration and self-test routines.

**Table 3-6: Calibration and Testing**

Header	Description
*CAL?	Executes self-calibration
SELFcal (?)	Executes self-calibration
*TST?	Executes self-test

## Status and Events

These items set and query the status and events reporting system in order to check the status of the instrument and control the occurrence of events. For details on the status and event reporting system, see the *Status and Events* section beginning on page 3-31.

**Table 3-7: Status and Events**

Header	Description
ALLEv?	Dequeues all events from event queue
*CLS	Clears Standard Event Status Register (SESR)
DESE (?)	Sets and queries DESER
*ESE (?)	Sets and queries ESER
*ESR?	Queries SESR setting
EVENT?	Dequeues event from event queue
EVMsg?	Dequeues event from event queue
EVQty?	Queries the number of events in the event queue
*SRE (?)	Sets SRER
*STB?	Queries SBR setting



## Synchronization

These commands are used for synchronous control of command execution when it is necessary to wait for all actions to finish before executing the next command. For a detailed explanation of how these commands are used, see *Synchronizing Execution* on page 3–38.

**Table 3–8: Synchronization**

Header		Description
*OPC	(?)	Operation finished
*WAI		Waiting for command execution

## System

These items are used to control the handling of the header in the response message, to query ID or setting data, or to initialize the instrument.

**Table 3–9: System Commands**

Header		Description
HEADer	(?)	Control header in response message
ID?		Queries instrument ID data
*IDN?		Queries instrument ID data
*LRN?		Queries setting data
*RST		Initializes instrument
SET?		Queries setting data
VERBose	(?)	Control header in response message



# Commands

This section defines and discusses each command in detail.

## ALLEv?

This query retrieves the event messages corresponding to all of the event codes in the event queue. For more information on event codes and event messages, see *Messages* on page 3–37.

**Syntax** ALLEv?

**Returns** The following is a sample response to ALLEv?  
:ALLEV 100,"Command Error",200,"Execution Error"

## \*CAL?

This query executes self-calibration and returns the result.

**Syntax** \*CAL?

**Returns** <NR1>

Here <NR1> is one of the following:

- 0 – Self-calibration was completed without error.
- 100 – An error was detected in the channel 1 offset calibration.
- 110 – An error was detected in the channel 1 gain calibration.
- 200 – An error was detected in the channel 2 offset calibration.
- 210 – An error was detected in the channel 2 gain calibration.
- 300 – An error was detected in the channel 3 offset calibration.
- 310 – An error was detected in the channel 3 gain calibration.
- 400 – An error was detected in the channel 4 offset calibration.
- 410 – An error was detected in the channel 4 gain calibration.

## CH<x>?

This query returns the settings for range and coupling and the offset and gain parameters for the designated channel.

**Syntax** CH<x>? Here <x> indicates the channel of the A6907 (1, 2, 3 or 4) or the channel of the A6909 (1 or 2).

**Returns** The following is a sample response to :CH1?  
:CH1:SCLE 100.0E-3;COUPLING DC;OFFSET 123;GAIN 117

## CH<x>:CAL?

This query returns whether or not the designated channel has been calibrated. If it has been calibrated, a value of “1” is returned. If it has not been calibrated, a value of “0” is returned.

**Syntax** CH<x>:CAL?  
Here <X> indicates the channel (1, 2, 3 or 4).

**Returns** The following is a sample response to :CH1:CAL?  
:CH1:CAL 1  
In this case, channel 1 has been calibrated.

## CH<x>:COUPLing (?)

The CH<x>:COUPLing command sets the coupling value for the designated channel. The CH<x>:COUPLing? query returns the coupling status of the designated channel.

**Syntax** CH<x>:COUPLing {AC|DC}  
CH<x>:COUPLing?

Here <x> indicates the channel (1, 2, 3 or 4).

**Arguments** 0 or AC: Coupling is set to AC.  
1 or DC: Coupling is set to DC.

**Returns** The following is a sample response to the query :CH1:COUPLING?  
:CH1:COUPLING DC

## CH<x>:GAIIn (?)

The CH<x>:GAIIn command sets the gain value for the designated channel. The CH<x>:GAIIn? query returns the gain status of the designated channel.

**Syntax** CH<x>:GAIIn <NR1>  
CH<x>:GAIIn?

Here <x> indicates the channel (1, 2, 3 or 4).

**Arguments** <NR1> is an integer from 55 to 255.

## CH<x>:OFFSet (?)

The CH<x>:OFFSet command sets the offset value for the designated channel. The CH<x>:OFFSet? query returns the offset status of the designated channel.

**Syntax** CH<x>:OFFSet <NR1>  
CH<x>:OFFSet?

Here <x> indicates the channel (1, 2, 3 or 4).

**Arguments** <NR1> is an integer from 55 to 255.

## CH<x>:SCALE (?)

The CH<x>:SCALE command sets the range for the designated channel. The CH<x>:SCALE? query returns the range of the designated channel.

**Syntax** CH<x>:SCALE <NR3>  
CH<x>:SCALE?

Here <x> indicates the channel (1, 2, 3 or 4).

**Arguments** <NR3> indicates the range; the unit is Volt/div. On the isolator, the range can be set to any value between 200 V/div and 100 mV/div.

**Examples** In the following example, the range for channel 1 will be set to 100 mV/div.

```
:CH1:SCALE 100.0E-3
```

The following is a sample response to the query :CH2:SCALE?.

```
CH2:SCALE 5.0E+0
```

## \*CLS

This command clears the Standard Event Status Register (SESR) used by the status/event reporting system. See page 3–32 for more information on the SESR.

**Syntax** \*CLS

## DESE(?)

The DESE command sets the bit of the Device Event Status Enable Register (DESER) used by the status/event reporting system. The DESE? query returns the contents of the DESER value. See page 3–33 for more information on the DESER.

**Syntax** DESE <NR1>  
DESE?

**Arguments** <NR1> can be set to a decimal value between 0 and 255. The corresponding binary value is set for DESER. When the power to the instrument is turned on, all bits in DESER are set.

**Examples** In the following example, DESER will be set to 177 (10110001). In such cases, each of the bits PON, CME, EXE and OPC will be set.

```
:DESE 177
```

The following is a sample response to the query DESE?. In this example, DESER is set to 10110000.

```
:DESE 176
```

## \*ESE (?)

The \*ESE command sets the bit of the Event Status Enable Register (ESER) used by the status/event reporting system. The \*ESE? query returns the contents of the ESER. For more information on the ESER, see page 3–34.

**Syntax** \*ESE <NR1>  
\*ESE?

**Arguments** <NR1> can be set to a decimal value between 0 and 255. The corresponding binary value is set for ESER. When the power to the instrument is turned on, all bits in ESER are reset.

**Examples** In the following example, ESER will be set to 209 (11010001). In such cases, each of the bits PON, URQ, EXE and OPC will be set.

```
*ESE 209
```

The following is a sample response to the query \*ESE?. In this example, ESER is set to 11010000.

```
208
```

## \*ESR?

This query returns the contents of the Standard Event Status Register (SESR) used by the status/event reporting system. See page 3–32 for more information on the SESR.

**Syntax** \*ESR?

**Examples** The following is a sample response to the query \*ESR?. In this example, SESR is set to 10110101.

```
181
```

## EVENT?

This query retrieves the code for the oldest event of the retrievable events in the event queue. For more information on event codes, see *Messages* on page 3–37.

**Syntax** EVENT?

**Returns** The following is a sample response to EVENT?  
:EVENT 100

## EVMsg?

This query retrieves the code for the oldest event of the retrievable events in the event queue, as well as the message corresponding to that code. For more information on event codes, see *Messages* on page 3–37.

**Syntax** EVMsg?

**Returns** The following is a sample response to EVMsg?  
:EVMSG 100,"Command Error"

## EVQty?

This query returns the number of events in the event queue.

**Syntax** EVQty?

**Returns** The following is a sample response to EVQty?  
:EVQTY 4

## HEADer (?)

The HEADer command specifies whether to include or omit the header from the response to all queries with the exception of IEEE Std 488.2 common commands. The HEADer? query returns whether or not the response message includes a header.

**Syntax** HEADer {0|1|OFF|ON}  
HEADer?

**Arguments** 0 or OFF – Header is omitted from response  
1 or ON – Header is included in response

**Examples** In this example, the header is included in the response:



:HEADER ON

The following is a sample response to the HEADer? query:

:HEADER 1

In this example, the header is included in the response.

## ID?

This query returns the instrument ID information.

**Syntax** ID?

**Returns** ID SONY\_TEK/<Model>,CF:91.1 FV:<Firmware version no.>

**Examples** ID SONY\_TEK/A6907,CF:91.1 FV:1.00

## \*IDN?

This query returns the instrument ID information.

**Syntax** \*IDN?

**Returns** SONY/TEK,<Model>,<Serial no.>,CF:91.1CN FV:<Firmware version no.>

**Examples** SONY/TEK,A6907,0,CF:91.1CN FV:1.00

## \*LRN?

This query returns the setting data for the instrument.

**Syntax** \*LRN?

**Returns** The following is a sample response to \*LRN?

```
:CH1:SCALE 100.0E-3;COUPLING DC;OFFSET 132;GAIN 115
:CH2:SCALE 200.0E-3;COUPLING DC;OFFSET 121;GAIN 104
:CH3:SCALE 500.0E-3;COUPLING AC;OFFSET 137;GAIN 134
:CH4:SCALE 100.0E-3;COUPLING DC;OFFSET 135;GAIN 129
:HEADER 1;;VERBOSE 1
```

---

**NOTE.** The \*LRN? query always returns a string including the header, regardless of the HEADER setting. When a short form response has been set using the VERBOSE command, a shortened form of the header is returned.

---

## \*OPC (?)

The \*OPC command sets the Standard Event Status Register (SESR) bit 0 (OPC bit) as soon as all pending operations have been completed. The \*OPC? query returns a value of ASCII character “1” as soon as all pending operations have been completed.

**Syntax** \*OPC  
\*OPC?

**Examples** The \*OPC command can be used to synchronize instrument operation and application programs. For the method used to accomplish this, see *Synchronizing Execution* on page 3–38.

## \*RST

This command initializes the instrument.

**Syntax** \*RST

## SELFcal (?)

The SELFcal command executes the self-calibration routine. The SELFcal? query returns the results of self-calibration.

**Syntax** SELFcal  
SELFcal?

**Returns** <NR1>

Here <NR1> is one of the following:

- 0 – Self-calibration was completed without error.
- 100 – An error was detected in the channel 1 offset calibration.
- 110 – An error was detected in the channel 1 gain calibration.
- 200 – An error was detected in the channel 2 offset calibration.
- 210 – An error was detected in the channel 2 gain calibration.
- 300 – An error was detected in the channel 3 offset calibration.
- 310 – An error was detected in the channel 3 gain calibration.
- 400 – An error was detected in the channel 4 offset calibration.
- 410 – An error was detected in the channel 4 gain calibration.

## SET?

This query returns data on instrument settings. This is the same as the operation performed by the \*LRN? query.

**Syntax** SET?

**Returns** The following is a sample response to SET?

```
:CH1:SCALE 100.0E-3;COUPLING DC;OFFSET 132;GAIN 115
:CH2:SCALE 200.0E-3;COUPLING DC;OFFSET 121;GAIN 104
:CH3:SCALE 500.0E-3;COUPLING AC;OFFSET 137;GAIN 134
:CH4:SCALE 100.0E-3;COUPLING DC;OFFSET 135;GAIN 129
:HEADER 1;:VERBOSE 1
```

## \*SRE (?)

The \*SRE command sets the bit of the Service Request Enable Register (SRER) used by the status/event reporting system. However, SRER bit 6 is always set to 0. The \*SRE? query returns the contents of the SRER. For more information on the SRER, see page 3–34.

**Syntax** \*SRE <NR1>  
\*SRE?

**Arguments** <NR1> can be set to a decimal value between 0 and 255. The corresponding binary value is set for SRER. When the power to the instrument is turned on, all bits in SRER are reset.

**Examples** In the following example, SRER will be set to 48 (00110000). In this example, the ESB and MAV bits are set.

\*SRE 48

The following is a sample response to the query \*SRE?. In this example, ESER is set to 00100000.

32

## \*STB?

This query returns the contents of the Status Byte Register (SBR) used by the status/event reporting system. The SBR bit 6 is interpreted as the MSS (Master Status Summary) bit. For more information on the SBR, see page 3–31.

**Syntax** \*STB?

**Examples** The following is a sample response to the query \*STB?. In this example, SBR is set to 01100000.

96

## \*TST?

This query executes self-test and returns the result.

**Syntax** \*TST?

**Returns** <NR1>

Here <NR1> is one of the following:

- 0 – Self-calibration was completed without error.
- 100 – A ROM checksum error has been detected.
- 200 – A RAM read/write error has been detected.
- 300 – A EPROM read/write error has been detected.

## VERBose (?)

The VERBose command determines whether or not the shortened form of the header is included in the response to a query.

**Syntax** VERBose {0|1|OFF|ON}  
VERBose?

**Arguments** 0 or OFF – Shortened form of the header is used  
1 or ON – Complete form of the header is used

**Examples** In the following example, the complete (unshortened) form of the header is designated for the response to a query.

```
:VERBOSE ON
```

The following is a sample response to the :VERBOSE? query.

```
:VERBOSE 1
```

In this example, the complete (unshortened) form of the header is used in the response to a query.

## \*WAI

This command stops the execution of other commands and queries until all pending operations have been completed.

**Syntax** \*WAI

**Examples** The \*WAI command can be used to synchronize instrument operation and application programs. For the method used to accomplish this, see *Synchronizing Execution* on page 3–38.



# Status and Events

The GPIB interface on the isolator includes a status and event reporting system which informs the user of crucial events that occur on the instrument. The isolator is equipped with four registers and one queue that conform to IEEE Std 488.2-1987, as well as one register and one queue that conform to Tektronix specifications. This section will discuss these registers and queues along with status and event processing.

## Registers

There are two main types of registers:


- **Status Registers:** stores data relating to instrument status. This register is set by the isolator.
- **Enable Registers:** determines whether to set events that occur on the instrument to the appropriate bit in the status registers and event queues. This type of register can be set by the user.

## Status Registers

There are two types of status registers: the Status Byte Register (SBR) and the Standard Event Status Register (SESR). Each of the bits in these status registers is used to record specific types of events, such as execution errors and service requests. When an event occurs, the corresponding bit is set to 1. Therefore, by reading the contents of these registers, it is possible to find out what type of event has occurred.

### Status Byte Register (SBR)

The SBR is made up of 8 bits. Bits 4, 5 and 6 are defined in accordance with IEEE Std 488.2-1987 (see Table 3-10). These bits are used to monitor the output queue, SESR and service requests, respectively. Bits 0 – 3 and 7 are user-definable bits. On the isolator, however, these bits are not used, so they are permanently set to 0.

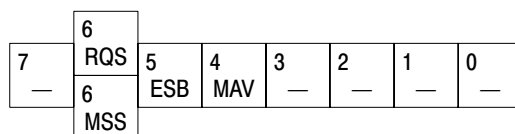

**Figure 3-3: The Status Byte Register (SBR)**

**Table 3-10: SRB Bit Functions**

Bit	Function
7	Not used.
6	RQS (Request Service)/MSS (Master Status Summary). When the instrument is accessed using the GPIB serial poll command, this bit is called the Request Service (RQS) bit and indicates to the controller that a service request has occurred (in other words, that the GPIB bus SRQ line is LOW). The RQS bit is cleared when serial poll ends.  When the instrument is accessed using the *STB? query, this bit is called the Master Status Summary (MSS) bit and indicates that the instrument has issued a service request for one or more reasons. The MSS bit is never cleared to 0 by the *STB? query.
5	Event Status Bit (ESB). This bit indicates whether or not a new event has occurred after the previous Standard Event Status Register (SESR) has been cleared or after an event readout has been performed.
4	Message Available Bit (MAV). This bit indicates that a message has been placed in the output queue and can be retrieved.
3 - 0	Not used.

**Standard Event Status Register (SESR)**

The SESR is made up of 8 bits. Each bit records the occurrence of a different type of event, as shown in Figure 3-4 and Table 3-11.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

**Figure 3-4: The Standard Event Status Register (SESR)**

**Table 3-11: SESR Bit Functions**

Bit	Function
7	Power On (PON). Indicates that the power to the instrument is on.
6	User Request (URQ). Indicates that the instrument has generated an event requesting something from the user, or that a cautionary event has occurred. This bit is not used on the isolator.
5	Command Error (CME). Indicates that a command error has occurred while parsing by the command parser was in progress.



**Table 3-11: SESR Bit Functions (Cont.)**

Bit	Function
4	<p>Execution Error (EXE). Indicates that an error occurred during the execution of a command. Execution errors occur for one of the following reasons:</p> <ul style="list-style-type: none"> <li>■ When a value designated in the argument is outside the allowable range of the instrument, or is in conflict with the capabilities of the instrument</li> <li>■ When the command could not be executed properly because the conditions for execution differed from those essentially required</li> </ul>
3	Device-Specific Error (DDE). An instrument error has been detected.
2	<p>Query Error (QYE). Indicates that a query error has been detected by the output queue controller. Query errors occur for one of the following reasons:</p> <ul style="list-style-type: none"> <li>■ An attempt was made to retrieve messages from the output queue, despite the fact that the output queue is empty or in pending status.</li> <li>■ The output queue messages have been cleared despite the fact that they have not been retrieved.</li> </ul>
1	Request Control (RQC). Indicates that the instrument has asked the controller to give up control over the bus. Not used on the isolator.
0	Operation Complete (OPC). This bit is set with the results of the execution of the *OPC command. It indicates that all pending operations have been completed.

## Enable Registers

There are three types of enable registers: the Device Event Status Enable Register (DESER), the Event Status Enable Register (ESER) and the Service Request Enable Register (SRER).

Each bit in these enable registers corresponds to a bit on the controlling status register. By setting and resetting the bits in the enable register, the user can determine whether or not events that occur will be registered to the status register and queue.

### Device Event Status Enable Register (DESER)

The DESER is made up of bits defined exactly the same as bits 0 through 7 in the SESR. This register designates which events are registered to the SESR and event queue and which are ignored.

In order to set events to the SESR and the event queue, the DESER bits corresponding to those events are set. When events are to be ignored, the SESR bits corresponding to those events are reset.

Use the DESE command to set the bits of the DESER. Use the DESE? query to read the contents of the DESER.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

**Figure 3-5: The Device Event Status Enable Register (DESER)**

**Event Status Enable Register (ESER)**

The ESER is made up of bits defined exactly the same as bits 0 through 7 in the SESR. This register is used by the user to designate whether the SBR ESB bit should be set when an event has occurred and whether the corresponding SESR bit has been set.

To set the SBR ESB bit (when the SESR bit has been set), set the ESER bit corresponding to that event. To prevent the ESB bit from being set, reset the ESER bit corresponding to that event.

Use the \*ESE command to set the bits of the ESER. Use the \*ESE? query to read the contents of the ESER.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

**Figure 3-6: The Event Status Enable Register (ESER)**

**Service Request Enable Register (SRER)**

The SRER controls bit 6 of the SBR. Setting this register causes the SBR RQS bit to be set when the corresponding SBR bit is set, generating a service request (SRQ).

The generation of a service request involves changing the SRQ line to LOW and making a service request to the controller. The result is that a status byte for which an RQS has been set is returned in response to serial polling by the controller.

Use the \*SRE command to set the bits of the SRER. Use the \*SRE? query to read the contents of the SRER. Bit 6 must normally be set to 0.

7	6	5	4	3	2	1	0
—	—	ESB	MAV	—	—	—	—

**Figure 3-7: The Service Request Enable Register (SRER)**

## Queues

There are two types of queues in the status reporting system used on the isolator: output queues and event queues.

### Output Queue

The output queue is a FIFO queue and holds response messages to queries, where they await retrieval. When there are messages in the queue, the SBR MAV bit is set.

The output queue will be emptied each time a command or query is received, so the controller must read the output queue before the next command or query is issued. If this is not done, an error will occur and the output queue will be emptied; however, the operation will proceed even if an error occurs.

### Event Queue

The event queue is a FIFO queue and stores up to 10 events that have occurred on the instrument. If more than 10 events occur, event 10 will be replaced with event code 350 (“Queue Overflow”).

To retrieve events, set the \*ESR? query to synchronize operations and then use the ALLEv?, EVENT?, or EVMsg? queries to retrieve the events. A detailed explanation of this process follows.


First, issue an \*ESR? query to read the contents of the SESR. Reading the SESR contents will clear the SESR, and simultaneously it will become possible to retrieve events from the event queue. Then use one of the following queries to retrieve events:

- ALLEv? Retrieves all retrievable events and returns their event codes and message texts.
- EVENT? Retrieves the event code for only the oldest event.
- EVMsg? Retrieves the event code and message text for only the oldest event.

When a new event occurs before events have been retrieved, the SESR bit corresponding to that event is set and the event is placed in the event queue. However, only the events that have been made retrievable by the \*ESR? query can be retrieved. When yet another \*ESR? query is issued before the retrievable events have been retrieved, all of these retrievable events will be deleted. In their place, the next group of events (those that were received after the first \*ESR? query was issued) will become retrievable.

## Status and Event Processing Sequence

Figure 3–8 shows an outline of the sequence for status and event processing.

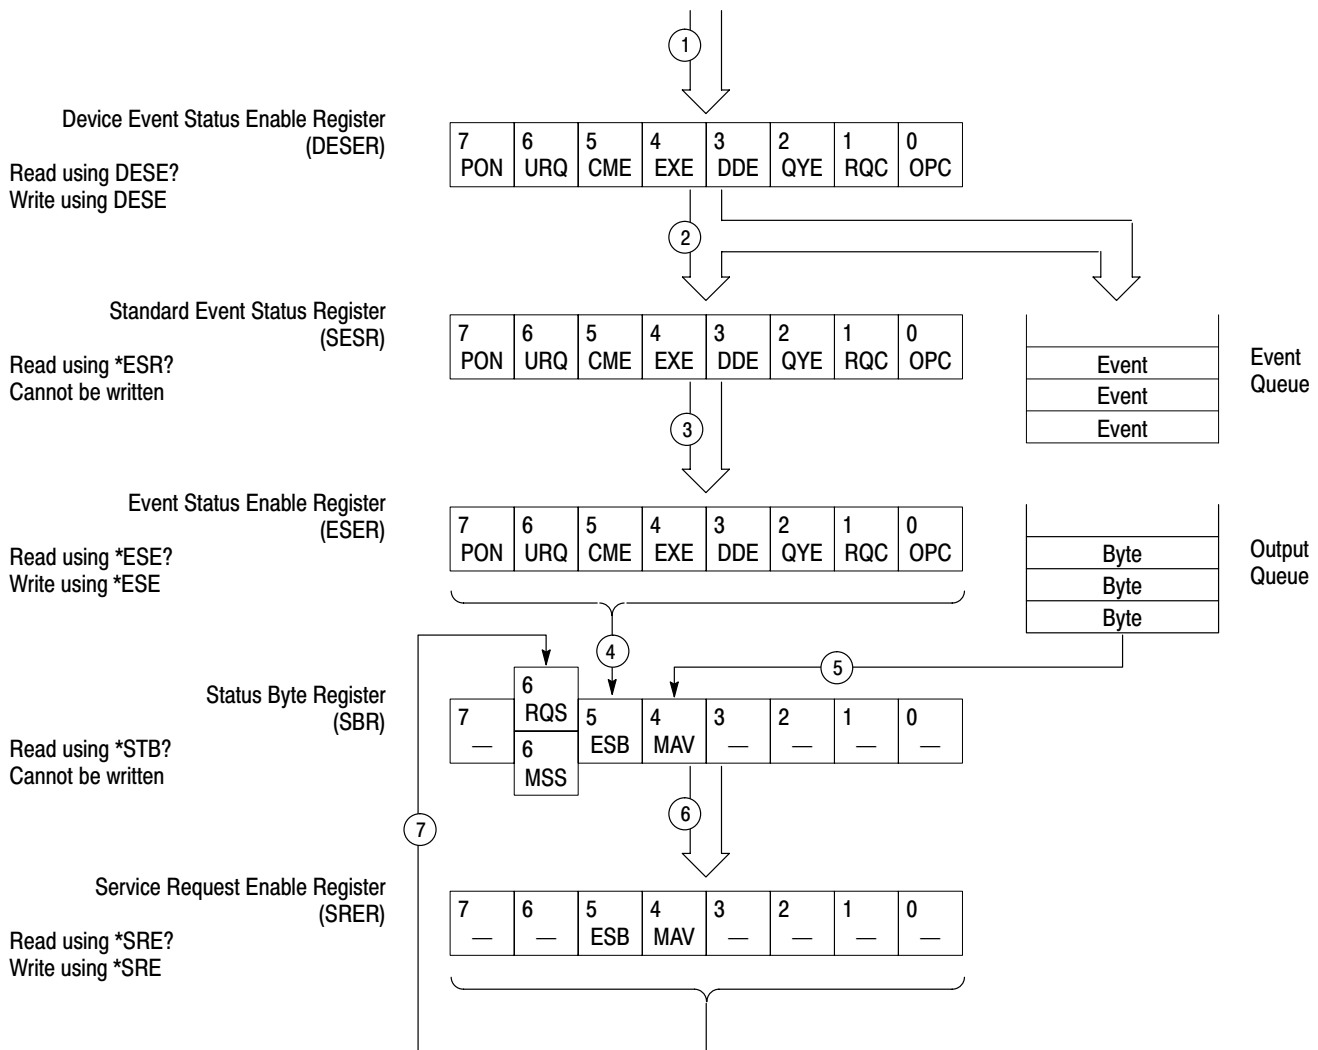

**Figure 3–8: Status and Event Processing Sequence**

When an event occurs, first of all the contents of the DESER are investigated. If a DESER bit corresponding to an event has been set, the SESR bit corresponding to that event is set as well, and the event is placed in the event queue. Likewise, if a bit corresponding to that event in the ESER has been set, the SBR ESB bit is set as well.

When a message has been sent to the output queue, the SBR MAV bit is set.

When one of the bits in the SBR and the corresponding SRER bit has been set, the SBR MSS bit is set and a service request is generated.

## Messages

Tables 3–12 through 3–16 show the codes and messages used in the status and event reporting system on the isolator.

Event codes and messages can be obtained by using the queries EVMsg? and ALLEv?. These are returned in the following format:

```
<event code>,"<event message>"
```

The EVENT? query returns only the event code. When using these commands, you will need to synchronize their operation with the \*ESR? query.

Table 3–12 shows the messages for normal status (when there are no events). There are no corresponding SESR bits in this case.

**Table 3–12: Normal Status**

Code	Message
0	No events to report – queue empty
1	No events to report – new events pending *ESR?

Table 3–13 shows the messages generated when there is a syntax error in the command.

**Table 3–13: Command Errors**

Code	Message
100	Command error
102	Syntax error
104	Data type error
108	Parameter not allowed

Table 3–14 shows the messages generated when an error is detected while a command is being executed.

**Table 3–14: Execution Errors**

<b>Code</b>	<b>Message</b>
200	Execution error
222	Data out of range

Table 3–15 shows the messages generated when an internal instrument error is detected. When this type of error occurs, it may be due to a hardware problem.

**Table 3–15: Internal Errors**

<b>Code</b>	<b>Message</b>
300	Device-specific error
330	Self-test failed
350	Queue overflow (DDE bit is not set)

Table 3–16 shows the messages for system events. This type of message is generated when the instrument changes to a certain status.

**Table 3–16: System Events**

<b>Code</b>	<b>Message</b>
401	Power on
402	Operation complete
410	Query INTERRUPTED
420	Query UNTERMINATED
440	Query UNTERMINATED after indefinite response

## Synchronizing Execution

Almost all GPIB commands are executed in the order in which they are sent from the controller, and the execution of each command is completed in a short period of time. However, some commands require a longer period of time to complete execution. These commands are designed so that the next command to be sent is executed without waiting for the previous command to be completed. In some cases, a process executed by another command must first be completed before these commands can be executed; in other cases, these commands must be completed before the next command is executed.

The execution of the commands shown below must be synchronized with the execution of other commands. When these commands are executed at the same time as other commands, the results of all commands executed in the same time will be irregular.

```
*CAL?
*RST
*TST?
SELFcal
```

To synchronize execution, use the following commands:

```
*OPC
*OPC?
*WAI
```

### Using the \*WAI Command

The \*WAI command can be used to easily synchronize execution. Simply send the \*WAI command and then send the next command. In the following example, self-calibration will be executed and then the range will be changed.

```
SELFcal;*WAI;;CH1:SCALE10.0E+0
```

Or

```
SELFcal
*WAI
:CH1:SCALE 10.0E+0
```

### Using the \*OPC Command

The \*OPC command sets the SESR OPC bit when all pending operations have been completed. It is possible to synchronize execution by using this command together with the serial poll or service request functions.

Enable the corresponding status register

```
:DESE 1
*ESE 1
*SRE 0 (when using serial poll)
```

Or

```
*SRE 32 (when using service request)
```

Start self-calibration.

```
SELFcal
```

Wait until self-calibration has finished.

\*OPC

(Wait while serial poll is 0, or wait for a service request to be generated)

Change the range.

:CH1:SCALE 10.0E+0

### Using the \*OPC? Query

The \*OPC? query writes an ASCII code “1” to the output queue when all pending operations have been completed. Synchronization can be performed using the following procedure:

Start self-calibration.

SELFcal

Wait until self-calibration has finished.

\*OPC?

(Waits for a “1” to be written to the output queue. In the event that the system is waiting for data to be retrieved from the output queue, a “time out” may occur before the data is written to the output queue.)

Change the range.

:CH1:SCALE 10.0E+0





# Specifications



# Specifications

The following electrical characteristics are valid when the instrument has been adjusted at an ambient temperature between +20° C and +30° C, has had a warm-up period of at least 20 minutes, and is operating at an ambient temperature between 0° C to +50° C.

## Warranted Electrical Characteristics

Table 4–1 lists the guaranteed isolator characteristics:

**Table 4–1: Warranted Electrical Characteristics**

Sensitivity	100 mV/div to 200 V/div in a 1-2-5 sequence with oscilloscope set to 100mV/div
Input Impedance	10 M $\Omega$ , 4.5 pF $\pm$ 0.5 pF
Maximum Input Voltage, Probe Tip to Probe Common	850 V (DC + peak AC) or 600 V (AC <sub>RMS</sub> ); derate at 20 dB/decade from 3 MHz to 60 MHz
Maximum Common Mode Input Voltage, Probe Common to Chassis	850 V (DC + peak AC) or 600 V (AC <sub>RMS</sub> ); derate at 20 dB/decade from 500 kHz to 60 MHz
Maximum Input Voltage, Between Channels	1700 V (DC + peak AC) or 1200 V (AC <sub>RMS</sub> )
Maximum Common Mode Slew Rate	20 kV/ $\mu$ s
Bandwidth (-3 dB)	
100 mV/div and 200 mV/div	DC to 50 MHz
500 mV/div to 200 V/div	DC to 60 MHz
Pulse Waveform Flatness	$\pm$ 3%, 1 kHz and 10 kHz
Rise Time	
100 mV/div and 200 mV/div	$\leq$ 7.0 ns
500 mV/div to 200 V/div	$\leq$ 5.8 ns
Aberrations	8%p-p within first 40 ns
Output Impedance	50 $\Omega$
Offset Accuracy	$\pm$ 20 mV (when changes in ambient temperature are no greater than 3° C and self-calibration has been performed)

**Table 4–1: Warranted Electrical Characteristics (Cont.)**


DC Gain Accuracy	$\pm 3\%$ of full scale (when changes in ambient temperature are no greater than $3^{\circ}\text{C}$ and self-calibration has been performed)
Isolation Between Channels	
Normal Mode	90 dB (DC to 10 MHz)
Common Mode	70 dB (DC to 10 MHz)
Overdrive Recovery Time	<200ns to 3% of full scale (when input voltage of 5 V has been applied at 500 mV/DIV)
Power Requirements	100 to 240 VAC, 50 to 60 Hz
Power Consumption, Maximum	
A6907	48 W
A6909	28 W
Fuse Rating	2.5 A, 250 V fast blow

## Typical Electrical Characteristics


Table 4–2 lists typical electrical characteristics that are provided for the user's convenience. These characteristics have no tolerances and are not guaranteed.

**Table 4–2: Typical Electrical Characteristics**

DC Linearity	$\pm 2\%$ , typical at $25^{\circ}\text{C}$
Common Mode Rejection Ratio	
1 MHz	55 dB (100 mV/div) 40 dB (1 V/div)
10 MHz	55 dB (100 mV/div) 40 dB (1 V/div)
Output Noise Level, DC to 100 MHz	
100 mV/div	2.5 mV <sub>RMS</sub>
200 mV/div	1.5 mV <sub>RMS</sub>
500 mV/div to 200 V/div	1.1 mV <sub>RMS</sub>
Total Harmonic Distortion, 1 kHz Sine Wave	2% at 1 V <sub>p-p</sub> output
Maximum Output Voltage	$\pm 500\text{ mV}$ with $50\ \Omega$ load
Skew Between Channels	2 ns
Common to Chassis Capacitance	80 pF, typical

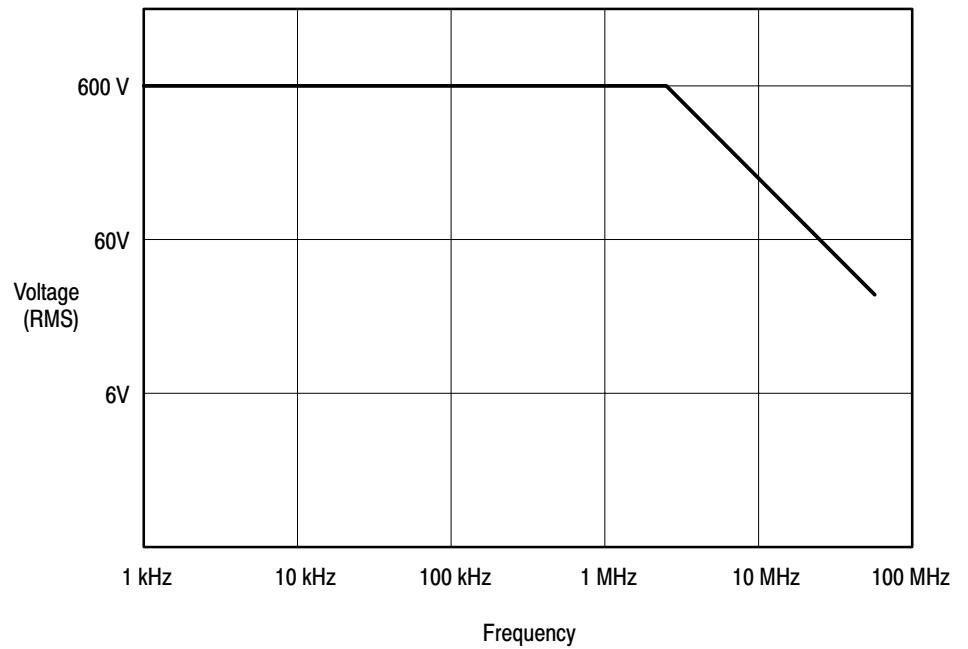

**Figure 4-1: Frequency Derating for the Maximum Normal Mode Voltage**

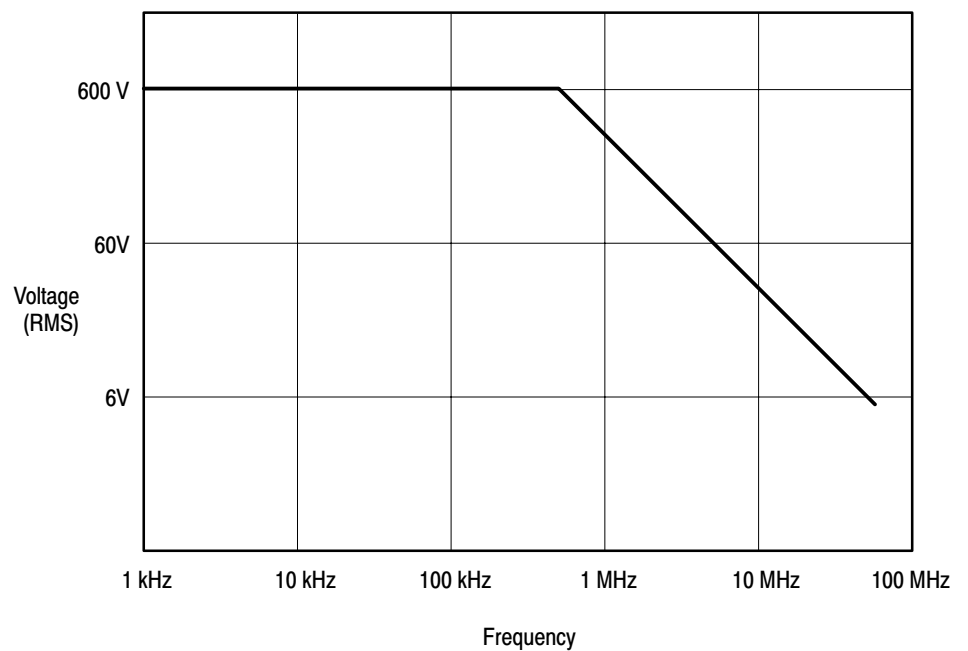

**Figure 4-2: Frequency Derating for the Maximum Common Mode Voltage**

## Mechanical Characteristics

Table 4–3 list the mechanical characteristics that define the form and fit of the isolators.

**Table 4–3: Mechanical Characteristics**

Weight	6.4 kg
Dimensions	
Height (with feet)	120 mm
Width	327 mm
Depth	450 mm

## Environmental Characteristics

Table 4–4 lists guaranteed operating and storage conditions for the isolators.

**Table 4–4: Environmental Characteristics**

Temperature	
Operating	0° C to +50° C
Non-operating	-25° C to +70° C
Humidity	
Operating and Non-operating	Stored at 95% to 97% relative humidity for five cycles (120 hours) from 30° C to 50° C.
Altitude	
Operating	To 4.5 km (15,000 feet)
Non-operating	To 15 km (50,000 feet)
Vibration	
Operating	0.31 g <sub>RMS</sub> , from 5 to 500 Hz, 10 minutes each axis
Non-operating	2.46 g <sub>RMS</sub> , from 5 to 500 Hz, 10 minutes each axis
Shock	
Non-operating	50 g, half sine, 11 ms duration, three shocks on each face, for a total of 18 shocks.
Packaged Product Vibration and Shock	Meets Tektronix Std 062-2858-00, Rev B.

## Certifications and Compliances

**Table 4-5: Certifications and Compliances**

EC Declaration of Conformity – EMC	Meets intent of Directive 89/336/EEC for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:
	EN 50081-1 Emissions: EN 55011                      Class A Radiated and Conducted Emissions
	EN 50082-1 Immunity: IEC 801-2                    Electrostatic Discharge Immunity IEC 801-3                    RF Electromagnetic Field Immunity IEC 801-4                    Electrical Fast Transient/Burst Immunity
EC Declaration of Conformity – Low Voltage	Compliance was demonstrated to the following specification as listed in the Official Journal of the European Communities:
	Low Voltage Directive 73/23/EEC EN 61010-1:1993                Safety requirements for electrical equipment for measurement, control, and laboratory use
	HD401S1                         Safety requirements for electronic apparatus







# **Theory of Operation**



# Theory of Operation

The isolator consists of three major circuit sections: power, signal, and control and calibration. This chapter discusses the operation and relationships of each of these sections.

## Power

The isolator has ground-referenced and floating power supplies to support instrument control and signal conversion. The isolation integrity of the floating power supplies is critical to the safe operation of the isolator.

### **A50 Distribution Board**

The A50 controls AC and DC power distribution throughout the isolator. The assembly is controlled by the front panel ON/STBY switch and applies DC power to the floating power supplies when placed in the ON condition. The assembly also contains a lithium battery that provides back up power for memory functions, and a +5 volt regulator for front panel power.

### **U10 and U20 15 Volt Supplies**

U10 and U20 are 15 volt power supplies in a bipolar configuration. AC power is routed to the supplies from the A50 assembly that distributes the DC output of the supplies. The DC supplies are powered on when the the rear panel POWER switch is placed in the ON position.

### **A30 Floating Power Supply**

The A30 floating power supply converts the  $\pm 15$  volts from the A50 to an isolated  $\pm 15$  volts to power the electrical to optical (E/O) converters. The A30 uses a 500 kHz oscillator and transformer assembly to transfer the power while electrically isolating it. The secondary potential is full-wave rectified and filtered before being passed on to the E/O converter where it is regulated. The typical output voltage is an isolated  $\pm 9$  VDC.

## Signal

The A6907 and A6909 electrically isolate the input signal by coupling an analogue of it through an internal optical link.

### Electrical to Optical (E/O)

A signal acquired between the probe tip and the “common” lead is routed to the electrical-to-optical (E/O) converter. The signal is scaled by the attenuator and then used to amplitude modulate an LED. The LED is mounted on top of the converter and illuminates a receiver photodetector in the optical-to-electrical (O/E) converter. All of the circuits within the isolator are isolated from other channels and are floating in respect to ground.

### Optical to Electrical (O/E)

The optical-to-electrical converter receives the modulated light beam from the E/O converter and demodulates it into an electrical signal.

## Control and Calibration

The front panel provides control and display for each channel. The front panel microprocessor controls the power-on sequence as well as calibration and operation. The front panel also supports a GPIB processor (if installed).

The front-panel assembly receives power from the A50 assembly. +5 V from the lithium battery is provided for memory backup power, as well as  $\pm 15$  V and +5 V for processor operation.

Signals controlling the attenuator range, input coupling and calibration are isolated by an optical isolator located in the E/O converter.

Calibration references are derived from the power supplies on the E/O converter module. When the CAL button is pressed, the system balances and calibrates the gain of each channel by applying an appropriate voltage to the input of the attenuator and by measuring the output of the O/E converter. This eliminates any drift in the LED, photodetector or amplifier in each channel.



# **Performance Verification**



# Performance Verification

This section contains procedures for checking that the isolator performs as warranted.

## Prerequisites

To ensure the validity of these performance check procedures, the test environment must meet these qualifications:

- The cabinet must be in place.
- You must perform and pass the self-calibration routine.
- You must perform **every verification items in the specific order** which is described in this section.
- The isolator must have been last adjusted at an ambient temperature between +20° C and +30° C, must have been operating for a warm-up period of at least 20 minutes, and must be operating at an ambient temperature between 0° C and +50° C.
- All probes must be fitted with 6-inch common leads.

## Required Equipment

Table 6–1 lists all the test equipment required to do the performance check procedure. Test equipment specifications described are the minimum necessary to provide accurate results. For test equipment operation information, refer to the appropriate test equipment instruction manual.

**Table 6–1: Required Test Equipment**

Description	Minimum Requirements	Example	Purpose
Oscilloscope	Bandwidth: 350 MHz	Tektronix TDS460	Various Tests
Digital Multimeter	4 <sup>1</sup> / <sub>2</sub> Digit; DCV range: ±20 V; DCV accuracy: 0.1%;	Tektronix DM2510	Factory Calibration Checking Offset and Gain
DC Calibration Generator	Variable amplitude: ±100 V; Accuracy: 0.2%	Fluke 5700A	Factory Calibration Checking Offset and Gain
Calibration Generator	Fast-rise signal level: 100 mV to 1 V; Repetition rate: 100 kHz; Rise time: 1 ns or less; Flatness: ±2%	Tegam PG506A	Checking LF Pulse Response Checking Rise Time and Aberration
Distortion Analyzer	Frequency: 1kHz Input Level: 0.3V RMS Distortion: 0.1%	Tegam AA5001	Distortion Check
Low Distortion LF Generator	Frequency: 1kHz Input Level: 10V RMS Open Distortion: 0.1%	Tegam SG5010	Checking LF Pulse Response Distortion Check
Leveled Sine Wave Generator	Frequency: 50kHz to 80MHz Output Level: 600mVp-p to 3Vp-p	Tegam SG503	Bandwidth Check
50 Ω Coaxial Cable	50 Ω, 43 in, male-to-male BNC connectors	Tektronix part number 012-0057-01	Signal connection
50 Ω Termination	Impedance 50 Ω; connectors: female BNC input, male BNC output	Tektronix part number 011-0049-01	Signal termination
Dual-Banana Connector	Female BNC to dual banana	Tektronix part number 103-0090-00	Signal connection
BNC-to-Dual-Binding Post	Male BNC to dual binding post	Tektronix part number 103-0035-00	Signal connection
BNC-to-Terminal Adapter	Male BNC to dual terminal	Tektronix part number 103-0035-00	Signal connection
Adjustment Tool	Small flat blade, narrow tip	Tektronix part number 003-1364-01	Internal Adjustment



## Preparation


Perform the initial setup in preparation for the adjustment procedures.

### Procedure

1. Warm up the test equipment. Connect the test equipment to AC power and allow a 20 minute warm-up period before beginning the procedures.
2. Warm up the isolator. Connect the isolator to AC power and allow a 20 minute warm-up period before beginning the procedures.

## Adjustment Locations

Adjustment locations are shown in Figure 6-1.

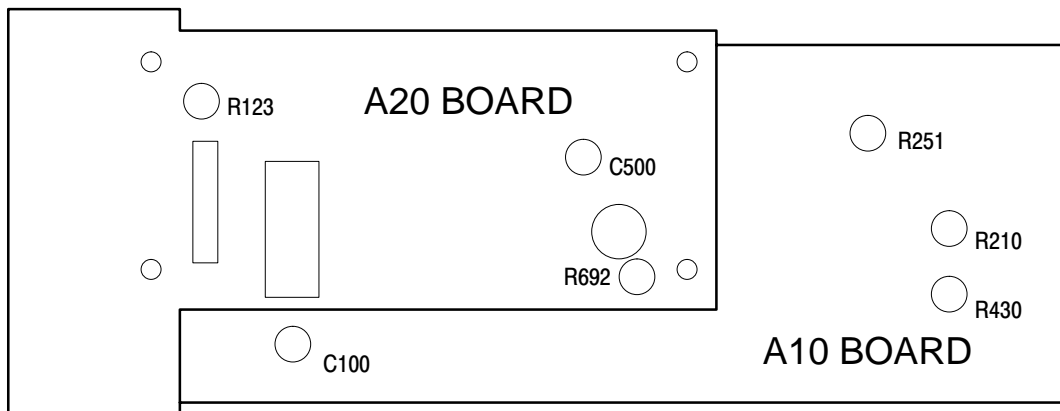

**Figure 6-1: Electrical-to-Optical (E/O) Isolator Adjustment Locations**

## **ON/STBY button function Check**

### **Required Equipment**

none

### **Procedure**

1. Check that the LED on the isolator lighted.
2. Turn off the power switch on the isolator rear panel.
3. Turn on the power switch on the isolator rear panel.
4. Check that the LED on the isolator lighted.
5. Press the ON/STBY button on the isolator.
6. Check that the LED on the isolator turns off.
7. Press the ON/STBY button on the isolator.
8. Check that the LED on the isolator lighted.
9. If the LED acts properly while procedure 1 through, please contact your local Tektronix Field Office.

## Factory Calibration

### Required Equipment

- Digital Multimeter
- DC Calibration Generator
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination(4)
- Dual Banana to BNC Adapter
- Adjustment Tool

### Procedure

1. Press the **CH1 down** and **CAL** buttons on the isolator at the same time to initialize the EEPROM.
2. Assemble the test setup as shown in Figure 6–2.


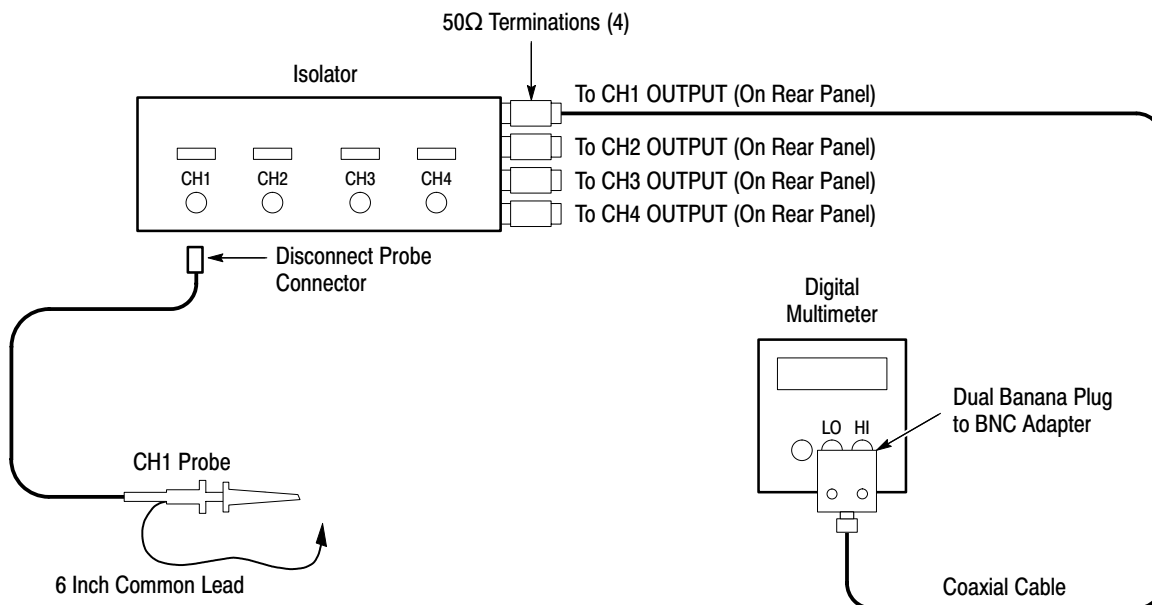


Figure 6–2: Factory Calibration Test Setup

3. Set the **CH1 VOLTS/DIV** control on the isolator to 1V.
4. Check that the multimeter reading is  $\pm 20$  mV of zero.

5. Repeat step 3 through 4 for all channels.
6. Assemble the test setup as shown in Figure 6-3.

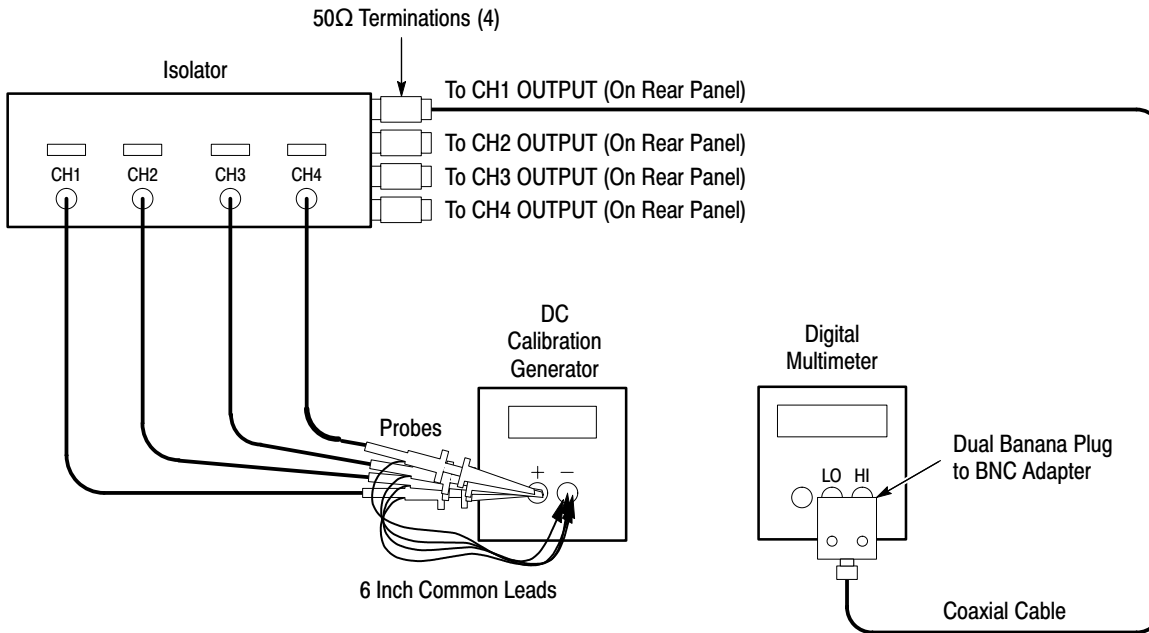

**Figure 6-3: Factory Calibration Test Setup**

7. Set the **CH1 VOLTS/DIV** control on the isolator to 1V and the **CH1 COUPLING** to DC.
8. Set the output of the DC calibration generator to 5V.
9. Adjust the **R251** on the A10 board so that the multimeter reading is within  $500\text{mV} \pm 20\text{ mV}$ .
10. Repeat step 1 through 9 for all channels.
11. Press the **CH1 down** and the **CAL** buttons on the isolator at the same time to initialize the EEPROM.
12. Set the output of the DC calibration generator to 0V.
13. Press the **CH2 down** and the **CAL** buttons on the isolator at the same time to start the factory calibration mode.
14. Check that the no "Exx" sign is displayed on the isolator.
15. Set the output of the DC calibration generator to 8V and press the **CAL** button when the LED on the isolator displays "8".

16. Set the output of the DC calibration generator to 4V and press the CAL button when the LED on the isolator displays "4".
17. Set the output of the DC calibration generator to 2V and press the CAL button when the LED on the isolator displays "2".
18. Set the output of the DC calibration generator to 800mV and press the CAL button when the LED on the isolator displays "800".
19. Set the output of the DC calibration generator to 400mV and press the CAL button when the LED on the isolator displays "400".
20. Set the **CH1 VOLTS/DIV** control on the isolator to 200V.
21. Set the output of the DC calibration generator to -850V.
22. Adjust the **R692** on the A20 board so that the multimeter reading is within  $-425\text{ mV} \pm 26\text{ mV}$ .
23. Set the output of the DC calibration generator to -2.5V.
24. Set the **CH1 VOLTS/DIV** control on the isolator to 500mV.
25. Check that the multimeter reading is  $500\text{mV} \pm 30\text{ mV}$ .
26. Set the **CH1 VOLTS/DIV** control on the isolator to 2V.
27. Set the output of the DC calibration generator to -10V.
28. Check that the multimeter reading is  $500\text{mV} \pm 30\text{ mV}$ .
29. Repeat step 20 through 28 for all channels.
30. Disassemble the test setup.


## Offset and Gain Check

### Required Equipment

- Digital Multimeter
- DC Calibration Generator
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination(4)
- Dual-Banana Connector
- Rubber hummer


### Setup

1. Turn off the isolator and then turn on.
2. Assemble the test setup as shown in Figure 6–4.

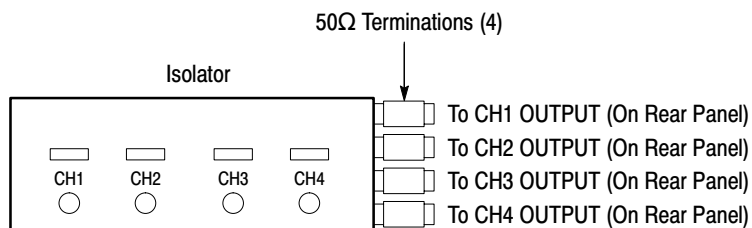

**Figure 6–4: DC Offset and Gain Test Setup**

3. Check that the LED on the isolator blinks.
4. Press the **CAL** button on the isolator and check that the no error code is displayed on the LED on the isolator.
5. Check that LED on the isolator lights.
6. Assemble the test setup as shown in Figure 6–5.

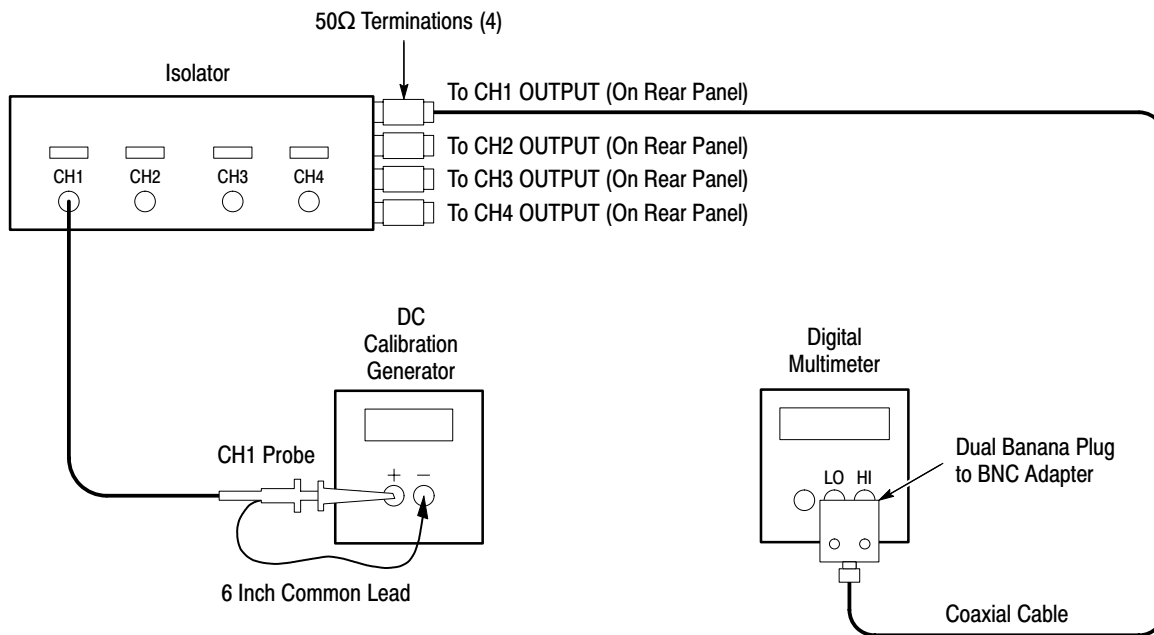

**Figure 6-5: DC Offset and Gain Test Setup**

7. Set the output control on the DC calibration generator to 0V.
8. Set the **CH1 VOLTS/DIV** control on the isolator to 100 mV.
9. Check that the multimeter reading is  $\pm 20\text{mV}$  when apply impact with the rubber hammer.
10. Repeat the step 9 procedure for every **CH1 VOLTS/DIV** control setting of the isolator.
11. Set the **CH1 VOLTS/DIV** control on the isolator to 100 mV and the **CH1 COUPLING** to DC.
12. Set the output control on the DC calibration generator to 500mV.
13. Check that the multimeter reading is  $500\text{mV} \pm 30\text{ mV}$ .
14. Repeat steps 7 through 13 using the CH1 VOLTS/DIV and DC calibration generator settings as shown in Table 6-2.

**Table 6-2: Isolator Offset and Gain Check**

<b>VOLTS/DIV Setting</b>	<b>DC Calibration Generator Voltage</b>	<b>Multimeter reading range</b>
100 mV	500 mV	500mV $\pm$ 30mV
200 mV	1 V	500mV $\pm$ 30mV
500 mV	2.5 V	500mV $\pm$ 30mV
1 V	5 V	500mV $\pm$ 30mV
2 V	10 V	500mV $\pm$ 30mV
5 V	25 V	500mV $\pm$ 30mV
10 V	50 V	500mV $\pm$ 30mV
20 V	100 V	500mV $\pm$ 30mV
50 V	250 V	500mV $\pm$ 30mV
100 V	500 V	500mV $\pm$ 30mV
200 V	850 V	425mV $\pm$ 26mV

15. Repeat steps 1 through 14 for all channels.
16. Disassemble the setup.



## Total Harmonic Distortion Check

### Required Equipment

- Low Distortion LF Generator
- Distortion Analyzer
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination(4)
- Dual-Banana Connector(2)
- BNC-to-Dual Binding Post

### Setup

1. Assemble the test setup as shown in Figure 6-6.

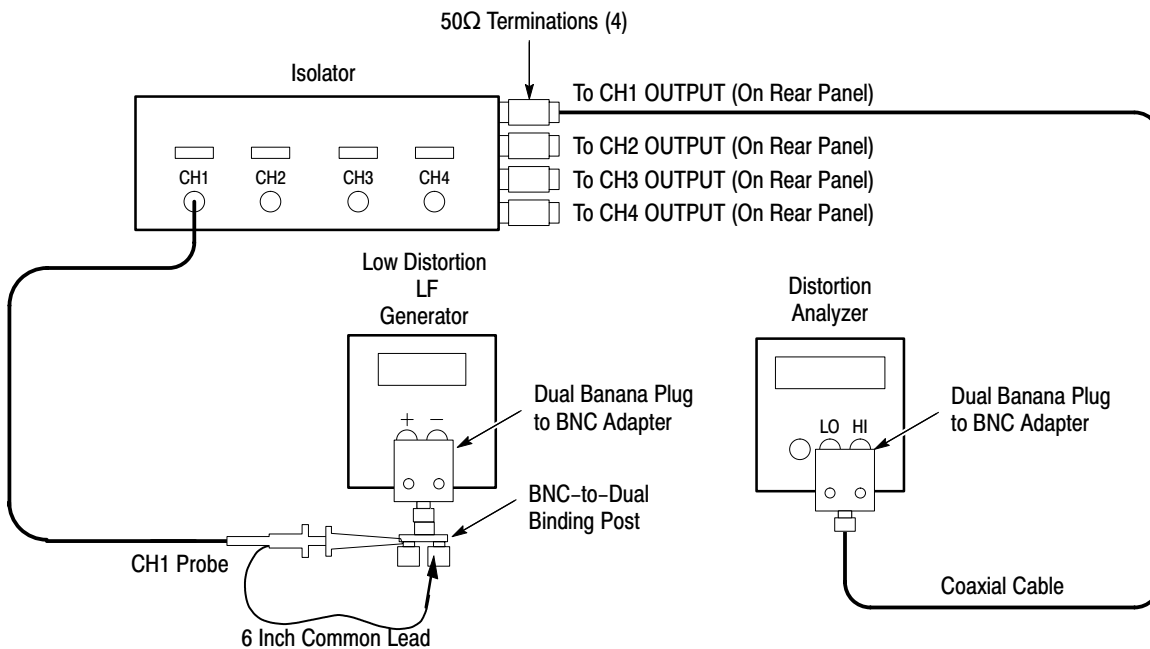


Figure 6-6: Total Harmonic Distortion Test Setup

2. Set the low distortion LF generator output frequency control to 1kHz and output control to ON.
3. Set the **CH1 VOLTS/DIV** control on the isolator to 1V.

4. Set the distortion analyzer **Input Range** control to AUTO and **Function** control to Level Volts.
5. Adjust low distortion LF generator output control so that the distortion analyzer reading is 354mVrms (1V p-p).
6. Set the **Function** control on the distortion analyzer to THD+N.
7. Check that the distortion analyzer reading is 2% or less.
8. Repeat steps 1 through 7 for all channels.
9. Disassemble the setup.

## Noise Check

### Required Equipment

- Oscilloscope
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Termination
- BNC-to-Terminal Adapter

### Setup

1. Assemble the test setup as shown in Figure 6-7.

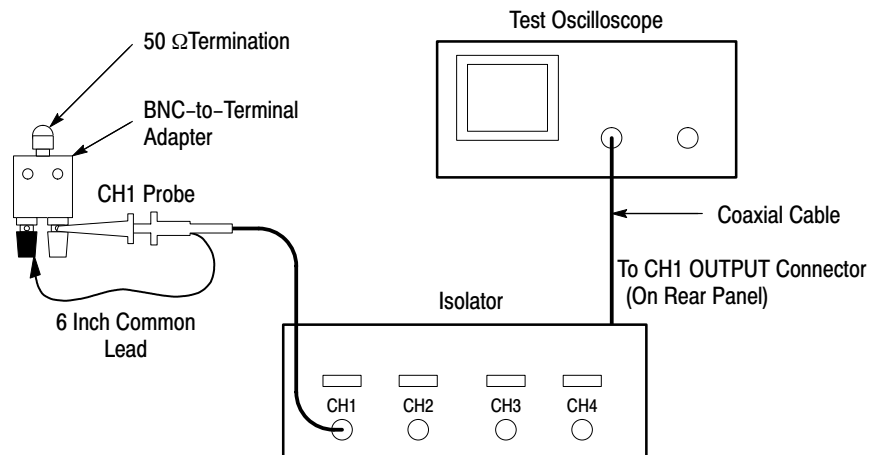


Figure 6-7: Noise Check Setup

2. Set up the oscilloscope as follows:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120pts
MAIN SIZE(Time/Div)	1 $\mu$ s/div
CH1 VERT SIZE	5mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 COUPLING	AC
CH1 BAND LIMIT	100MHz
MEASUREMENT	RMS,MEAN

3. Set the **CH1 VOLTS/DIV** control on the isolator to 100mV.

4. Press the **ENHANCED ACCURACY** button on the oscilloscope if the oscilloscope reading of mean voltage is 200  $\mu$ V or more.
5. Check that the RMS reading of the oscilloscope is less than 2.5mV.
6. Set the **CH1 VOLTS/DIV** control on the isolator to 200mV.
7. Check that the RMS reading of the oscilloscope is less than 1.5mV.
8. Set the **CH1 VOLTS/DIV** control on the isolator to 500mV.
9. Check that the RMS reading of the oscilloscope is less than 1.1mV.
10. Repeat steps 1 through 9 for all channels.
11. Disassemble the setup.


## Low-Frequency Pulse Response (Flatness) Check

### Required Equipment

- Oscilloscope
- Calibration Generator
- BNC-to-Terminal Adapter
- 50  $\Omega$  Coaxial Cable

### Setup

1. Assemble the test setup as shown in Figure 6–8.

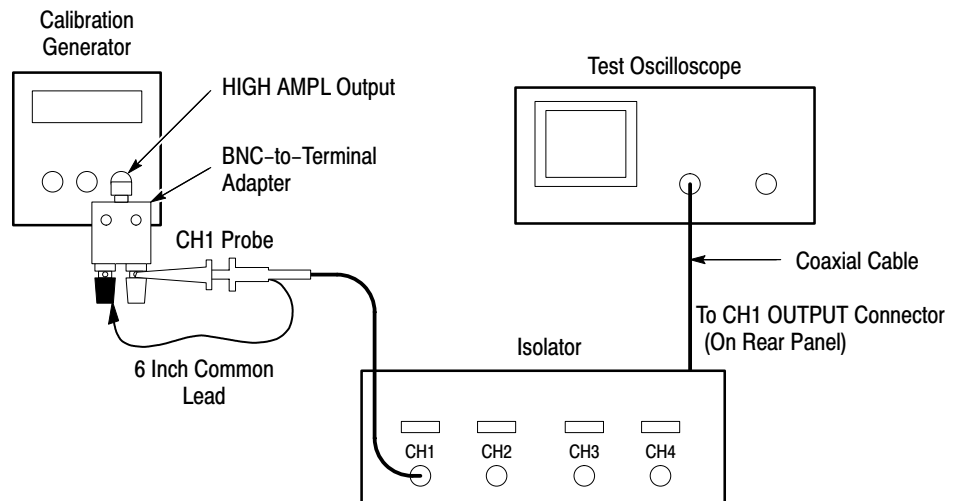

**Figure 6–8: Low-Frequency Pulse Response Check Setup**

2. Configure the oscilloscope:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120pts
MAIN SIZE(Time/Div)	100 $\mu$ s/div
CH1 VERT SIZE	50 mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 COUPLING	DC
CH1 BAND LIMIT	350MHz

3. Configure the isolator:

MODE  
PERIOD

HIGH AMPL  
1kHz

### Procedure

1. Set the **CH1 VOLTS/DIV** control on the isolator to 1 V.
2. Adjust the **AMPLITUDE** control on the generator for five divisions of display on the oscilloscope.
3. Adjust the **C100** on the A10 board so that the flatness of the pulse is the best.
4. Set the **CH1 VOLTS/DIV** control on the isolator to 20 V.
5. Adjust the **AMPLITUDE** control on the generator for four divisions of display on the oscilloscope.
6. Check with the oscilloscope cursor that the pulse ( exclude 1 $\mu$ s from the rising edge) flatness is within the  $\pm 2.8\%$ .
7. Repeat steps 1 through 6 for all channels.
8. Disassemble the test setup.

## Rise Time and Aberration Check

### Required Equipment

- Oscilloscope
- Calibration Generator
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination
- BNC-to-Terminal Adapter

### Setup

1. Assemble the test setup as shown in Figure 6-9.

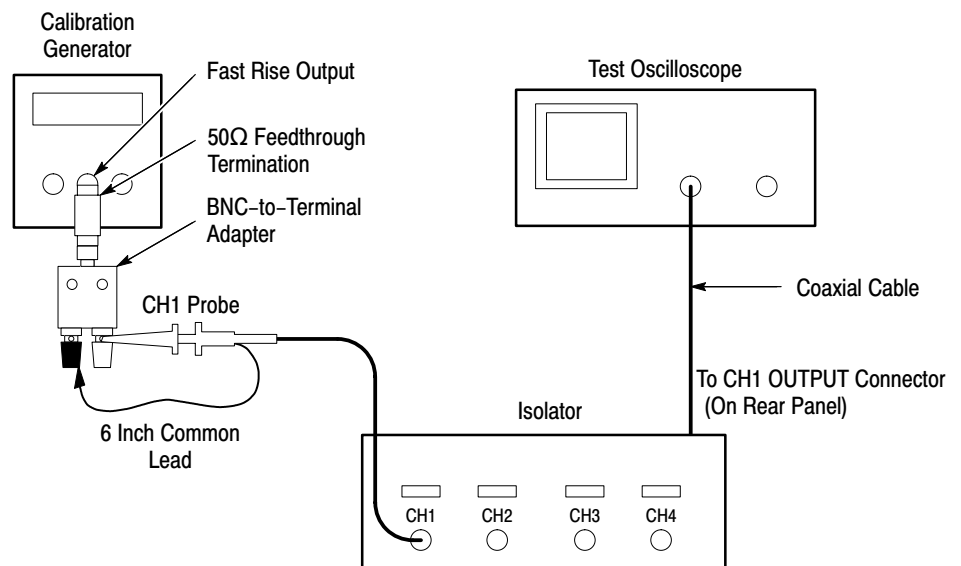


Figure 6-9: Rise Time and Aberrations Check Setup

2. Set up the oscilloscope as follows:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120pts
MAIN SIZE(Time/Div)	10 ns/div
CH1 VERT SIZE	50 mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 AVERAGE N	ON
CH1 BAND LIMIT	350MHz
MEASUREMENT	RISE

3. Set up the calibration generator as follows:

MODE	FAST RISE
PERIOD	100kHz
PULSE AMPLITUDE	MAX

### Procedure

1. Set the **CH1 VOLTS/DIV** control on the isolator to 500 mV.
2. Check that the rise time is within 5.8ns.
3. Check with the oscilloscope cursor mode that the aberrations are within 16mV p-p.
4. Repeat steps 1 through 2 for all channels.
5. Set the **CH1 VOLTS/DIV** control on the isolator to 100 mV.
6. Adjust the **AMPLITUDE** control on the calibration generator for five divisions (500mV) of display on the oscilloscope.
7. Check that the rise time is within 7ns.
8. Check with the oscilloscope cursor mode that the aberrations are within 40mV p-p.
9. Confirm that no defect of electric contact occurred when give slight impact on the probe head and the connector.
10. Repeat steps 6 through 9 for all channels.
11. Disassemble the test setup.



## Bandwidth Check

### Required Equipment

- Oscilloscope
- Leveled Sine Wave Generator
- 50  $\Omega$  Coaxial Cable
- BNC-to-Terminal Adapter

### Setup

1. Assemble the test setup as shown in Figure 6–10.

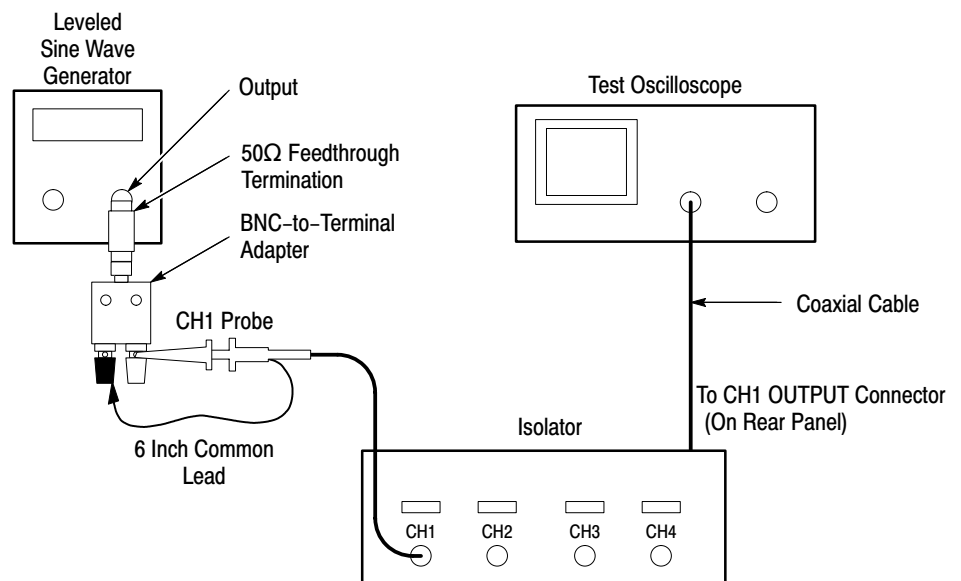


Figure 6–10: Bandwidth Check Setup

2. Configure the oscilloscope:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120pts
MAIN SIZE(Time/Div)	10 ns/div
CH1 VERT SIZE	100 mV
CH1 VERTICAL IMPEDANCE	50 Ω
CH1 AVERAGE N	ON
CH1 BAND LIMIT	350MHz
MEASUREMENT	RISE

**Procedure**

1. Set the **CH1 VOLTS/DIV** control on the isolator to 100mV and the coupling control to AC.
2. Set the leveled sine wave generator to a reference frequency of 50 kHz.
3. Adjust the **OUTPUT AMPLITUDE** control on the leveled sine wave generator so that the measured amplitude is 600 mVp-p.
4. Increase the **FREQUENCY** control on the leveled sine wave generator until the measured amplitude is 420 mVp-p.
5. Check that the leveled sine wave generator output frequency is greater than 50MHz.
6. Repeat steps 1 through 5 for all channels.
7. Set the **CH1 VOLTS/DIV** control on the isolator to 500mV.
8. Set the leveled sine wave generator to a reference frequency of 50 kHz.
9. Adjust the **OUTPUT AMPLITUDE** control on the leveled sine wave generator so that the measured amplitude is 600 mVp-p.
10. Increase the **FREQUENCY** control on the leveled sine wave generator until the measured amplitude is 420 mVp-p.
11. Check that the leveled sine wave generator output frequency is greater than 60MHz.
12. Repeat steps 7 through 11 for all channels.
13. Disassemble the test setup.



# **Adjustment Procedures**



# Adjustment Procedures

This section contains information needed to adjust your isolator.

**Purpose** These procedures return the isolator to conformance with the warranted characteristics. The adjustments can also be used to optimize the performance of the isolator.

**Description** The adjustment procedures are divided into three parts:

- Required Equipment
- Setup
- Procedure

Do not skip any procedure, or perform any steps out of order.

**Adjustment Interval** Perform the adjustments every 2000 hours of operation, or once a year if the isolator is used infrequently.

## Requirements for Performance

Before starting the procedures, you must meet to these requirements.

**Personnel** These procedures should be performed only by trained service technicians.

**Warm-up Period** This isolator requires a 20 minute warm-up time in a 20° C to 30° C environment before it is adjusted. Adjustments done before the operating temperature has stabilized may cause errors in performance.

**Access to Adjustment** To access the adjustment points you must remove the cabinets. Refer to the Remove and Replace section starting on page 8–5 for detailed instructions.

**Test Equipment** The equipment list in this section lists all test equipment required to adjust the isolator.

## Required Equipment

We recommend the following equipment for making adjustments to the isolator. If the recommended equipment is not available, you may need to modify the procedures for your equipment.

**Table 7-1: Test Equipment, Fixtures, and Supplies**

Description	Minimum Requirements	Example	Purpose
Oscilloscope	Bandwidth: 350 MHz	Tektronix TDS460	Frequency Response Adjustment
Digital Multimeter	4.5 Digit; DCV range: $\pm 20$ V; DCV accuracy: 0.1%; DCV input resistance: 10 M $\Omega$	Tektronix DM2510	Voltage measurement
DC Calibration Generator	Variable amplitude: $\pm 100$ V; Accuracy: 0.2%	Fluke 5700A	Gain Adjustment
Calibration Generator	Fast-rise signal level: 100 mV to 1 V; Repetition rate: 100kHz; Rise time: 1 ns or less; Flatness: $\pm 2\%$ High-amplitude signal level: 5 V Repetition rate: 1 kHz	Tegam PG506A	Frequency Response Adjustment
LF Generator	Frequency: 1kHz Input Level: 10V RMS Open Distortion: 0.1%	Tegam SG5010	Offset Adjustment Distortion Check
50 $\Omega$ Coaxial Cable	50 $\Omega$ , 43 in, male-to-male BNC connectors	Tektronix part number 012-0057-01	Signal connection
50 $\Omega$ Termination (4 required)	Impedance 50 $\Omega$ ; connectors: female BNC input, male BNC output	Tektronix part number 011-0049-01	Signal termination
Dual-Banana Connector	Female BNC to dual banana	Tektronix part number 103-0090-00	Signal connection
BNC-to-Dual-Binding Post	Male BNC to dual binding post	Tektronix part number 103-0035-00	Signal connection
BNC-to-Terminal Adapter	Male BNC to dual terminal	Tektronix part number 103-0035-00	Signal connection
Adjustment Tool	Small flat blade, narrow tip	Tektronix part number 003-1364-01	Internal Adjustment
Screwdriver Handle	Accepts Torx tip	Tektronix part number 003-0293-00	Case disassembly
Torx Tip	T-15	Tektronix part number 003-0966-00	Case disassembly

## Preparation

Perform the initial setup in preparation for the adjustment procedures.

### Procedure


1. Warm up the test equipment. Connect the test equipment to AC power and allow a 20 minute warm-up period before beginning the procedures.
2. Warm up the isolator. Connect the isolator to AC power and allow a 20 minute warm-up period before beginning the procedures.

## Assembly Locations

Refer to Figure 10–1 on page 10–3 for the location of assemblies.

## E/O Adjustment Locations

Adjustment locations are shown in Figure 7–1.

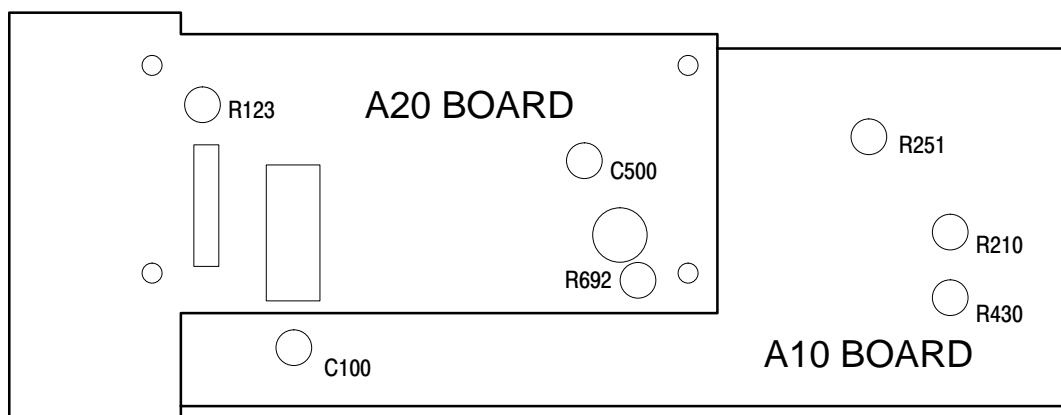

**Figure 7–1: Electrical-to-Optical (E/O) Isolator Adjustment Locations**

## +15 V and -15V Adjustment


This procedure adjusts the U10 and U20 power supplies that provide regulated power to the isolator. Refer to Figure 10–1 on page 10–3 for the locations of the U10 and U20 power supplies.

### Required Equipment

- Digital Multimeter
- Adjustment Tool

### Procedure


1. Set the multimeter mode to DC voltage.
2. Connect the positive lead of the multimeter to **TP600** on the A40 CPU board and connect the negative lead to the chassis of the isolator. See Figure 7–2.

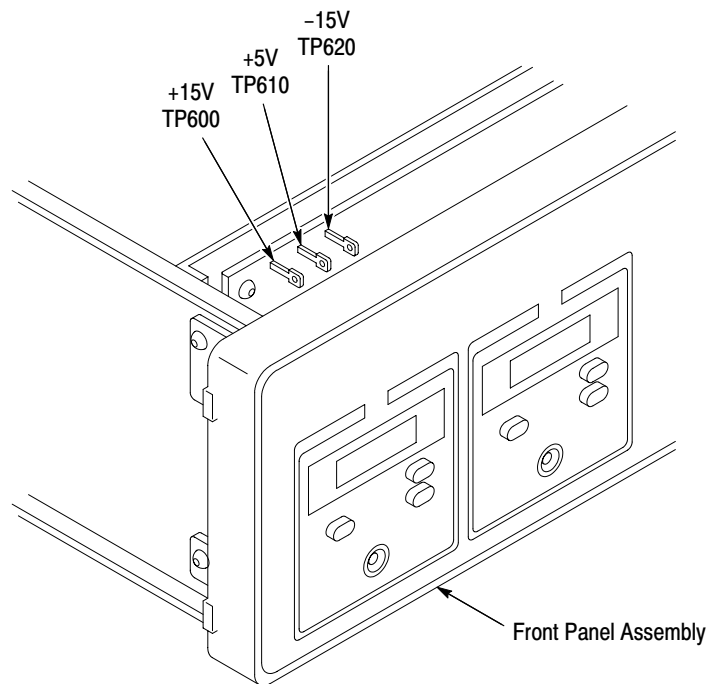

**Figure 7-2: A40 Test Point Locations**

3. Adjust **R63** on the U10 power supply so that the multimeter reading is  $15.3\text{ V} \pm 0.1\text{ V}$ . See Figure 7–3.



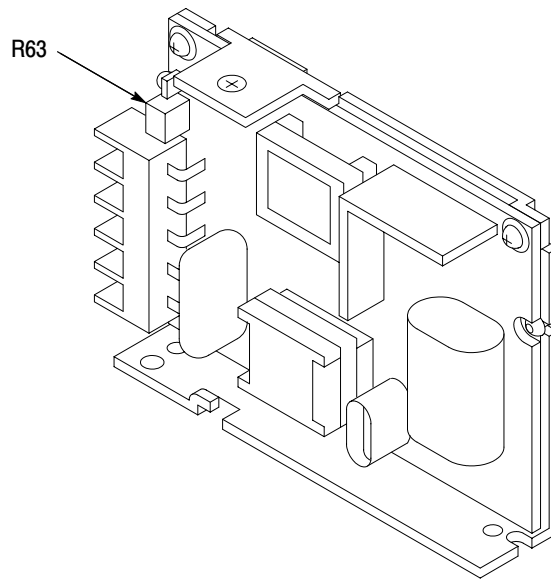

**Figure 7-3: Power Supply Adjustment Location**

4. Move the positive lead of the multimeter to **TP620** on the A40 CPU board.
5. Adjust **R63** on the U20 power supply so that the multimeter reading is  $-15.3\text{ V} \pm 0.1\text{ V}$ .
6. Disconnect the multimeter leads from the isolator.

## Offset and Gain Adjustments

This procedure adjusts the offset and gain of each channel for linear operation.

### Required Equipment

- Oscilloscope
- Digital Multimeter
- LF Generator
- DC Calibration Generator
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination (4)
- BNC-to-Terminal Adapter
- Dual Banana to BNC Adapter
- BNC-to-Dual Binding Post
- Adjustment Tool

### Setup

1. Assemble the test setup as shown in Figure 7-4.

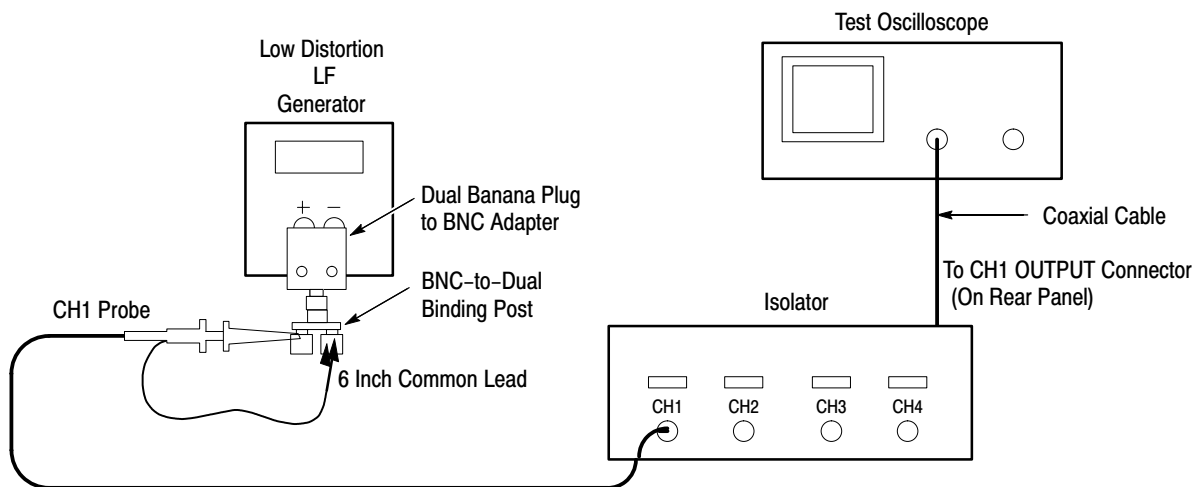


Figure 7-4: DC Offset and Gain Test Setup

2. Set the **R123** on the A20 board to the center position.
3. Configure the oscilloscope:

Vertical Coupling	AC
Vertical Scale	500mV/div

### Procedure


1. Press the **CH1 down** and **CAL** buttons on the isolator at the same time to initialize the EEPROM. Wait until **VOLTS/DIV** display blinks.
2. Press the **ON/STBY** button twice to set the isolator status to **STBY** and to **ON**.
3. Connect the **CH1 OUTPUT** of the isolator to the input of the Oscilloscope with the 50  $\Omega$  coaxial cable.
4. Set the **CH1 VOLTS/DIV** control on the isolator to 2V/div.
5. Set up the oscilloscope as follows.

MENUS	WAVEFORM
VERTICAL MODE	CH1
CH1 VERT SIZE	500mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 COUPLING	AC

6. Set the LF generator frequency control to 1kHz.
7. Increase the level of the output signal of the LF generator so that the shape of the waveform is clipped.
8. Adjust the **R430** on the A10 board to maximize the clipped waveform.
9. Check the clipped waveform as follows.

Shape	Symmetrical Sine
Voltage ( Center )	0V
Voltage ( p-p )	about 1.4V

10. Repeat steps 1 through 9 for all channels.
11. Change the test setup as shown in Figure 7-5.

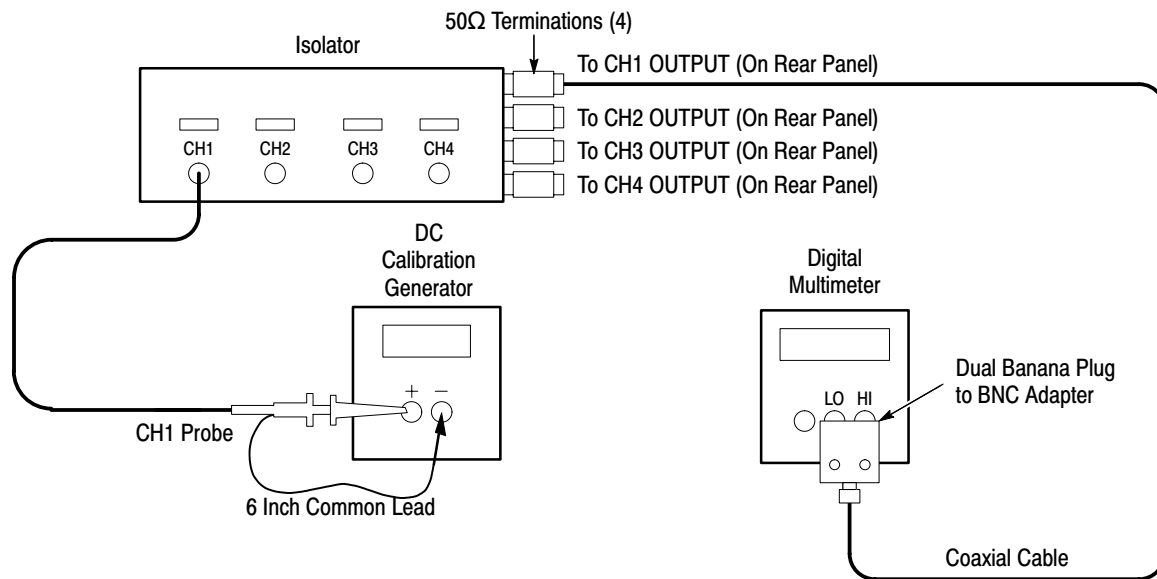

**Figure 7-5: DC Offset and Gain Test Setup**

12. Set the output of the DC Calibration Generator to 0V.
13. Set the multimeter mode control to DCV.
14. Set the **CH1 VOLTS/DIV** control on the isolator to 1V/div and the **CH1 COUPLING** control to DC.
15. Adjust **R123** on the A20 board so that the multimeter reading is  $0 \text{ mV} \pm 20 \text{ mV}$ .
16. Set the **CH1 VOLTS/DIV** control on the isolator to 200 mV.
17. Adjust **R210** in the A10 board so that the multimeter reading is  $0 \text{ mV} \pm 20 \text{ mV}$ .
18. Set the **CH1 VOLTS/DIV** control on the isolator to 1 V.
19. Adjust **R123** on the A20 board so that the multimeter reading is  $0 \text{ mV} \pm 20 \text{ mV}$ .
20. Set the output of the DC Calibration Generator to 5V.
21. Adjust **R251** in the A10 board so that the multimeter reading is  $500 \text{ mV} \pm 20 \text{ mV}$ .
22. Repeat steps 12 through 21 for all channels.
23. Disassemble the test setup.
24. Perform every procedure written in the "Performance Verification" section of this manual to confirm the accurate adjustment.

## Low-Frequency Response Adjustment


This procedure compensates the low frequency response characteristic of the isolator.

### Required Equipment

- Oscilloscope
- Calibration Generator
- 50  $\Omega$  Coaxial Cable
- BNC-to-Terminal Adapter
- Adjustment Tool

### Setup

1. Set up the isolator and test equipment as shown in Figure 7-6.

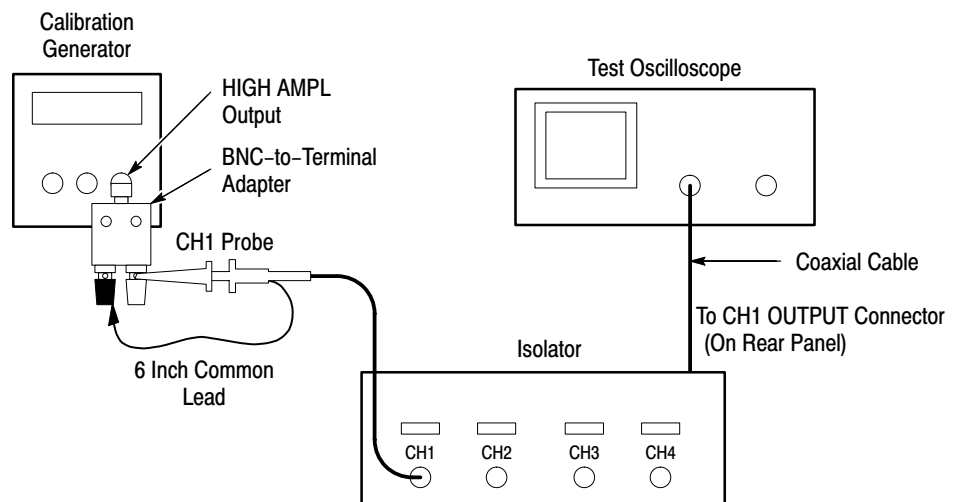

**Figure 7-6: Low-Frequency Response Adjustment Setup**

2. Configure the oscilloscope:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120 pts
MAIN SIZE(Time/div)	100 $\mu$ s/div
CH1 VERT SIZE	100mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 BAND LIMIT	350MHz
CH1 COUPLING	DC

3. Set the output of the generator for a high-amplitude signal with a 1 ms period.

### Procedure

1. Set the **CH1 VOLTS/DIV** control on the isolator to 1V.
2. Set the **AMPLITUDE** control on the calibration generator for five divisions of display on the oscilloscope.
3. Adjust **C100** on the A10 board so that the waveform displayed on the oscilloscope is flat-topped.
4. Repeat steps 1 through 3 for all channels.
5. Disassemble the test setup.
6. Perform every procedure written in the "Performance Verification" section of this manual to confirm the accurate adjustment.


## High-Frequency Response Adjustment

### Required Equipment

- Oscilloscope
- Calibration Generator
- 50  $\Omega$  Coaxial Cable
- 50  $\Omega$  Feedthrough Termination
- BNC-to-Terminal Adapter
- Adjustment Tool

### Setup

1. Set up the isolator and test equipment as shown in Figure 7-7.

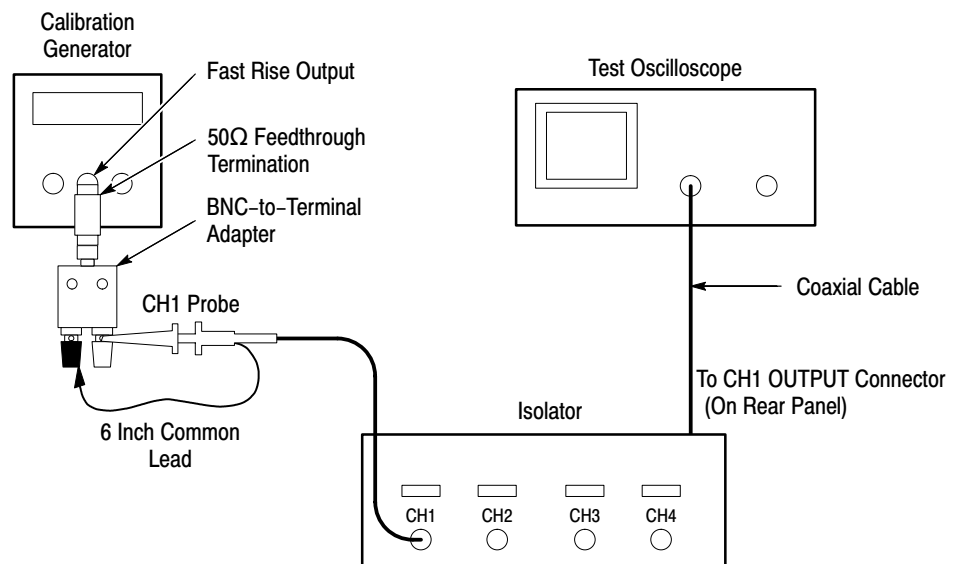

**Figure 7-7: High-Frequency Response Adjustment Setup**

2. Configure the oscilloscope:

MENUS	WAVEFORM
VERTICAL MODE	CH1
HORIZONTAL DATA	5120 pts
MAIN SIZE(Time/div)	10 ns/div
CH1 VERT SIZE	50mV
CH1 VERTICAL IMPEDANCE	50 $\Omega$
CH1 BAND LIMIT	350MHz
CH1 COUPLING	AC

3. Set the calibration generator for a fast-rise output with a 10  $\mu$ s period.

### Procedure

1. Set the **CH1 VOLTS/DIV** control on the isolator to 500 mV.
2. Set the **AMPLITUDE** control on the calibration generator so that the peak to peak voltage of the waveform is 200mV ( four divisions of display on the oscilloscope).
3. Adjust **C500** on the A20 board so that the waveform aberration displayed on the oscilloscope is 10mV $\pm$  2mV p-p.
4. Set the oscilloscope **MAIN SIZE(Time/div)** control to 1  $\mu$ s/div.
5. Check that the waveform aberration displayed on the oscilloscope is 12 mV p-p or less.
6. Confirm that no defective electric contact exist when apply light vibration to the probe manually.
7. Repeat steps 1 through 6 for all channels.
8. Disassemble the test setup.
9. Perform every procedure written in the "Performance Verification" section of this manual to confirm the accurate adjustment.





# Maintenance



## Service Strategy

The isolator is serviceable by the customer to the module level. The *Replaceable Parts* section contains a complete list of modules.

The isolator and probes should be cleaned and inspected on a routine basis.

Complete disassembly instructions are in the *Removal and Replacement* section.

Step-by-step fault isolation instructions are in the *Troubleshooting* section.

Required checks that must be performed after repair are listed in the *After Repair Adjustments* section.

Repackaging instructions are provided if you need to ship the isolator by commercial carrier.



# Inspection and Cleaning

The isolator and probes should be periodically cleaned and inspected for damage.

## Cleaning

To prevent damage to isolator insulation materials, avoid using chemicals that contain benzine, benzene, toluene, xylene, acetone, or similar solvents.

Do not immerse the probe or use abrasive cleaners.

Dirt may be removed with a soft cloth dampened with a mild detergent and water solution, or isopropyl alcohol.

## Isolator Inspection

Disassemble the isolator and inspect the electrical-to-optical converter and floating power supply for cracks or signs of arcing.

The isolator withstand-voltage check should be performed if damage is suspected.

Check the probe head and cable thoroughly for cracks, breaks in the insulation, or signs of arcing. Do not use a probe that has damaged insulation.




# Removal and Replacement

## Line Cord

1. Remove the line-cord retaining clamp by removing the holding screw.
2. Unplug the line cord from its receptacle.

To reinstall the line cord, reverse these instructions.

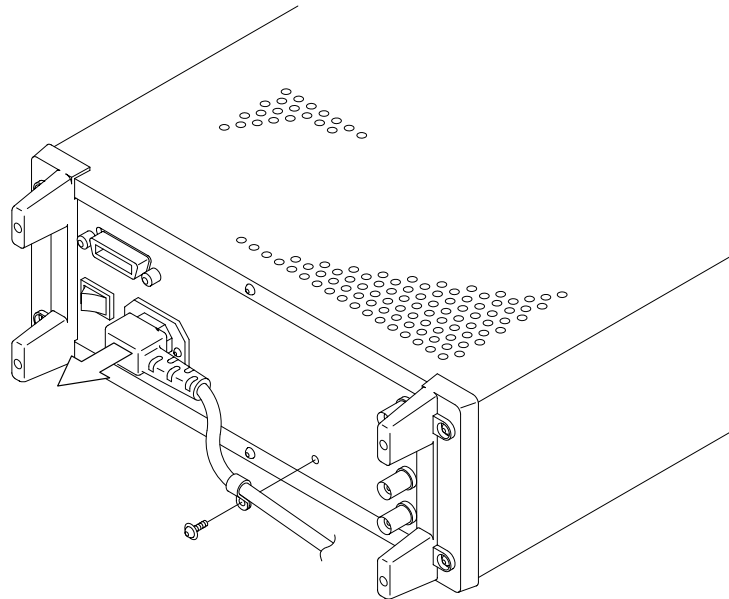


**Figure 8-1: Line Cord Removal**

## Cabinet

1. Unplug the line cord from its receptacle at the rear panel.
2. Remove the four screws from the rear-panel feet.
3. Remove the two screws from the top-center and bottom-center of the rear panel.
4. Slide the cabinet off the instrument.

To reinstall the cabinet, reverse these instructions.

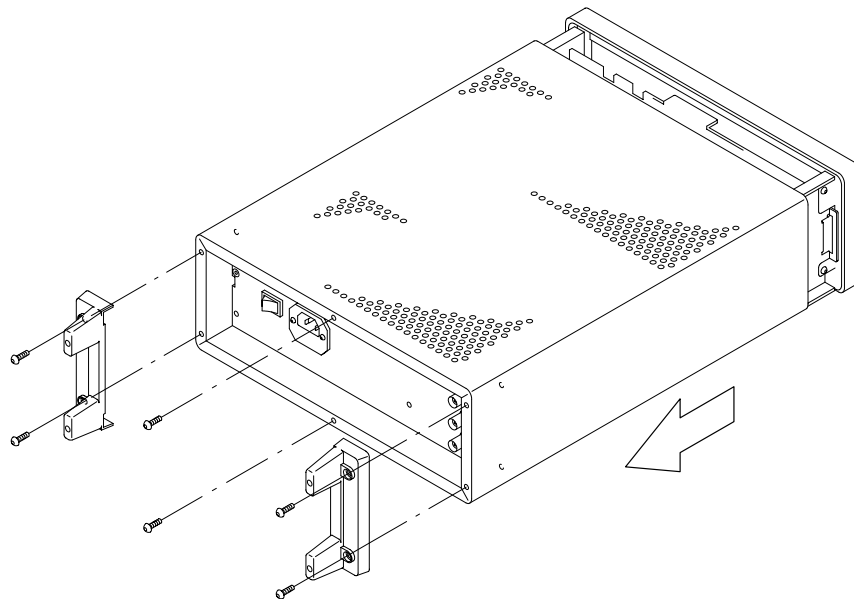


**Figure 8-2: Cabinet Removal**



## Front-Panel Assembly

1. Remove the cabinet (see page 8-6).
2. Remove the two screws located on both the right and left front sides of the main chassis.
3. Pull the front-panel assembly forward slightly.
4. Disconnect the three ribbon interconnect cables at J4100, J4110, and J4120 of the A40 CPU board.
5. Remove the front-panel assembly.


To reinstall the front-panel assembly, reverse these instructions.

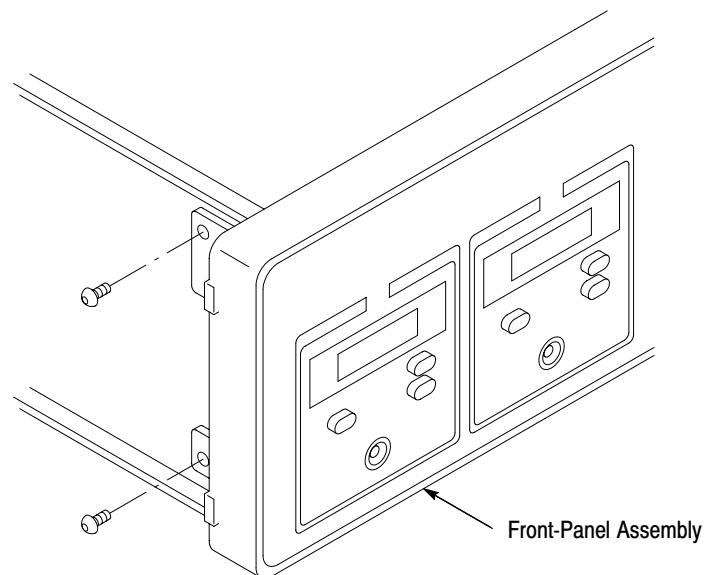

**Figure 8-3: Front-Panel Assembly Removal**


## E/O-O/E Module

1. Remove the cabinet (see page 8–6).
2. Remove the four screws holding the E/O-O-E Module to the main chassis.
3. Disconnect the interconnect cable at J1201, J1202, J1203, or J1204 of the A30 Floating Power Supply board.
4. Disconnect the interconnect cable at J200 of the E/O-O/E module.
5. Disconnect the ribbon interconnect cable at J210 of the E/O-O/E module.
6. Lift up the module and disconnect the ribbon interconnect cable at J110 of the module.

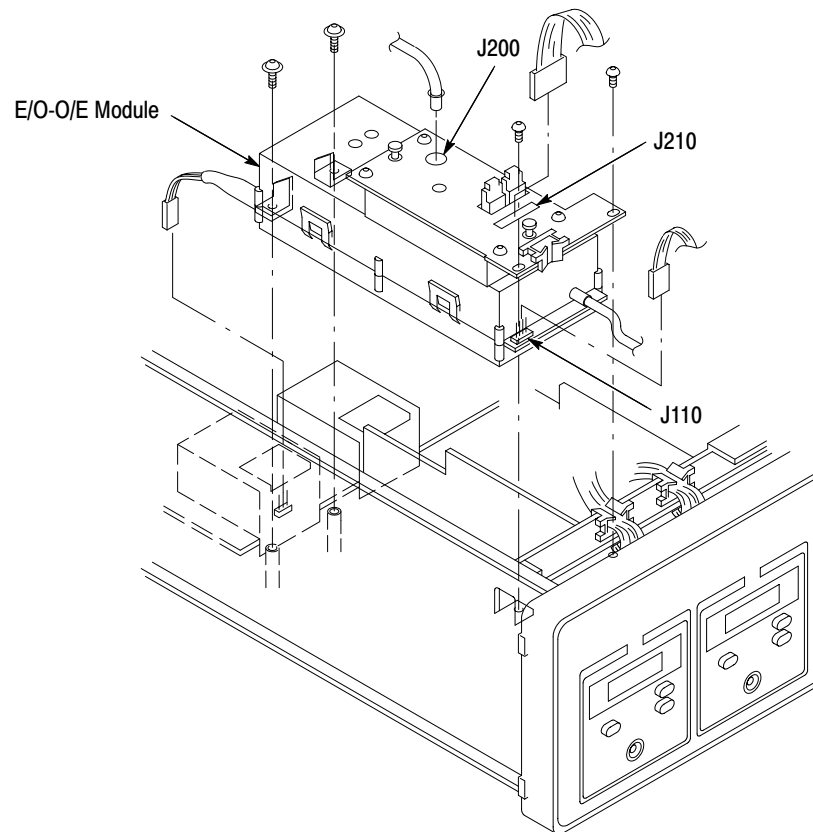


**Figure 8-4: E/O-O/E Module Removal**

7. Remove the sleeve that covers the input connector (see Figure 8–5) using long-nose pliers.

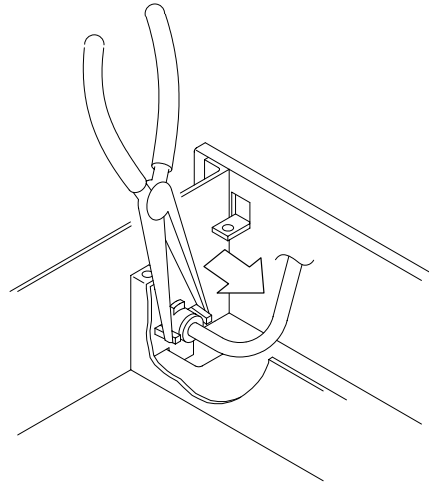

**Figure 8-5: Input Connector Sleeve Removal**

8. Remove the module.
9. To separate the E/O and O/E converters, gently pull the snap pins free and lift the O/E converter off the O/E converter as shown in Figure 8-6.

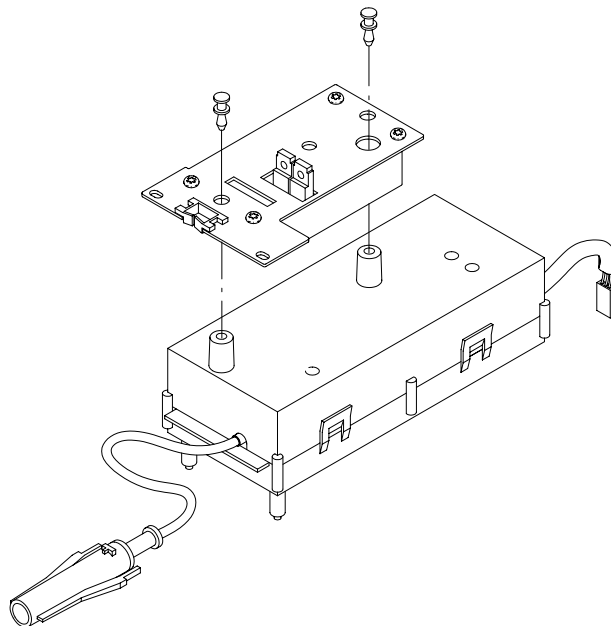


**Figure 8-6: Separating the E/O and O/E Converters**

To reinstall the module, reverse these instructions.

## A40 CPU Board

1. Remove the cabinet (see page 8-6).
2. Remove the front-panel assembly (see page 8-7).
3. Remove all the E/O-O/E modules (see page 8-8).
4. Disconnect the two ribbon interconnect cables at J4000 and J4010 of the A40 CPU board.
5. Remove the three screws holding the A40 CPU Board to the main chassis.
6. Lift the A40 CPU board up slightly, then pull it toward the front to completely remove it.

To reinstall the A40 CPU board, reverse these instructions.

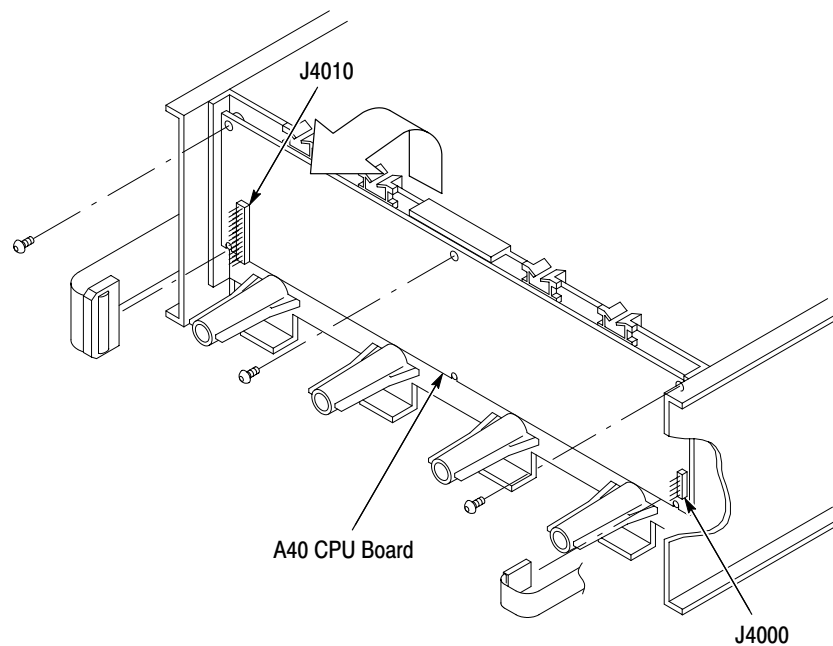


**Figure 8-7: A40 CPU Board Removal**


## Rear Panel Assembly

1. Remove the cabinet (see page 8-6).
2. Remove the IEEE-488.2 STD PORT connector (for A6909, only with Option 10) by removing the two spacer posts.
3. Remove the four (for A6907) or two (for A6909) screws holding the rear-panel assembly to the main chassis.
4. Disconnect the interconnect cables at the output connectors of the rear-panel assembly.
5. Disconnect the interconnect cables at the J5100 of the A50 Distributor board, and then remove the rear-panel assembly.

To reinstall the rear-panel assembly, reverse these instructions.

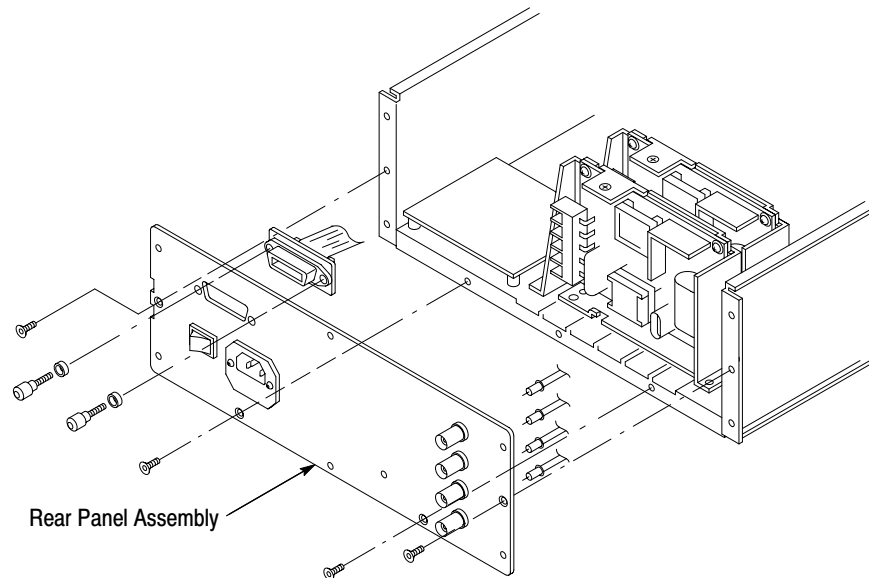

**Figure 8-8: Rear-Panel Assembly Removal (A6907)**

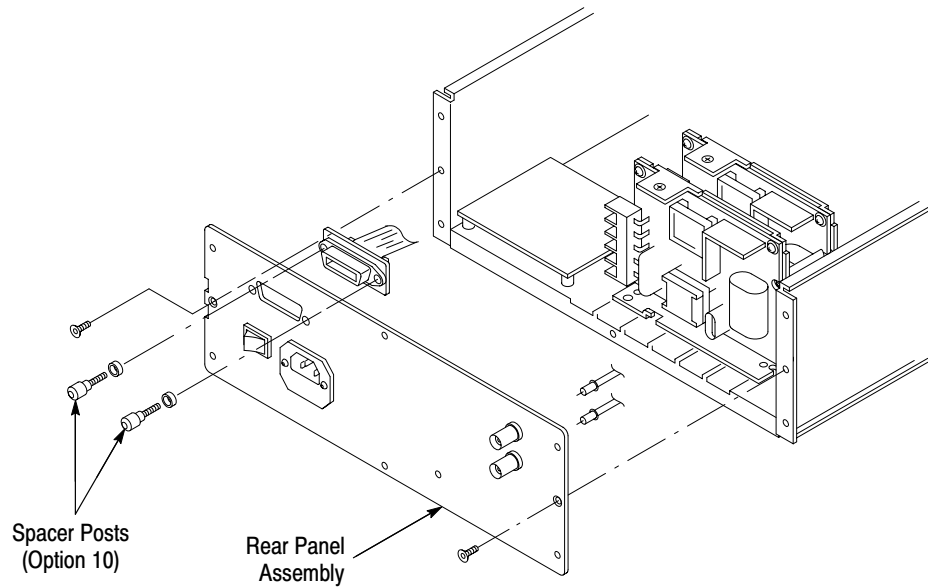


**Figure 8-9: Rear Panel Assembly Removal (A6909)**

## **A50 Distributor Board**

1. Remove the cabinet (see page 8-6).
2. Remove the rear-panel assembly (see page 8-11).
3. Disconnect the two ribbon interconnect cables at J3000 and J4000 of the A50 Distributor board.
4. Disconnect the four interconnect cables at J5001, J5002, J5011, and J5012 of the A50 Distributor board.
5. Remove the four screws holding the A50 Distributor board to the main chassis.
6. Lift the A50 Distributor board up and away from the main chassis to completely remove it.

To reinstall the A50 distributor board, reverse these instructions.

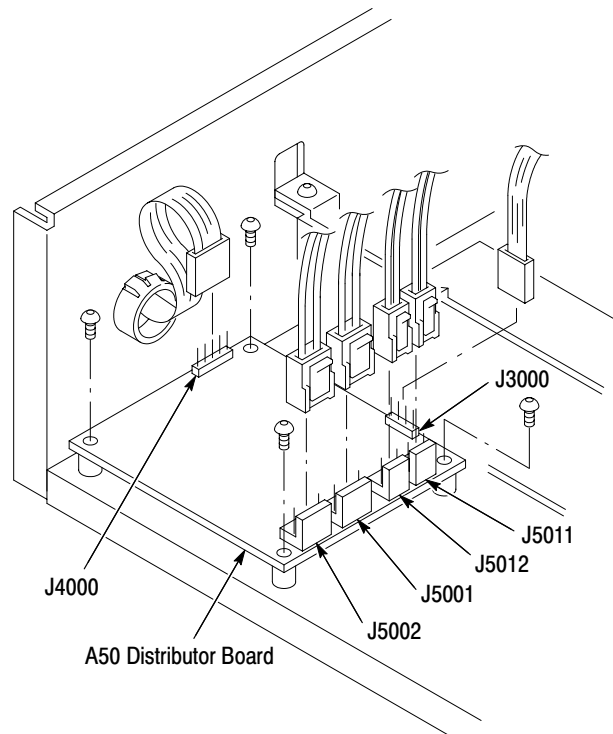


**Figure 8-10: A50 Distributor Board Removal**


## U10 and U20 Power Supplies

1. Remove the cabinet (see page 8-6).
2. Disconnect the wires connected to the power-supply terminal strip.
3. Remove the screws holding the supplies to the main chassis. See Figures 8-11 and 8-12.
4. Lift the supplies up and away from the main chassis to completely remove them.

To reinstall the supplies, reverse these instructions.

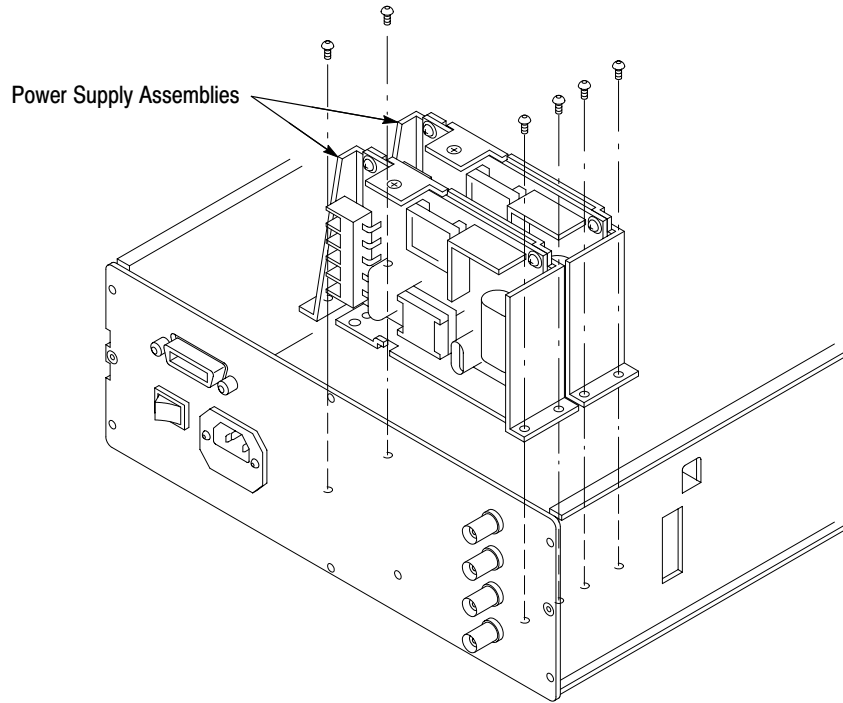

**Figure 8-11: Power Supply Assembly Removal (A6907)**

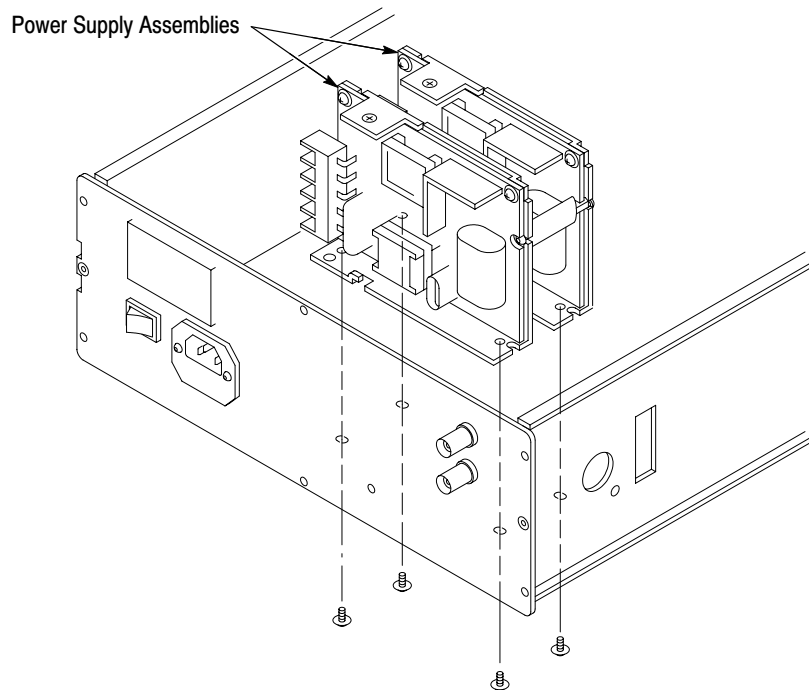

**Figure 8-12: Power Supply Assembly Removal (A6909)**



## A30 Floating Power Supply

1. Remove the cabinet (see page 8–6).
2. Disconnect the ribbon interconnect cable at J3000 of the A30 Floating Power Supply.
3. Disconnect the four or two interconnect cables at J1201, J1202, J1203 (A6907 only), and J1204 (A6907 only) of the power supply.
4. Remove the five screws holding the power supply to the main chassis.
5. Lift the power supply up and away from the main chassis to completely remove it.

To reinstall the power supply, reverse these instructions.


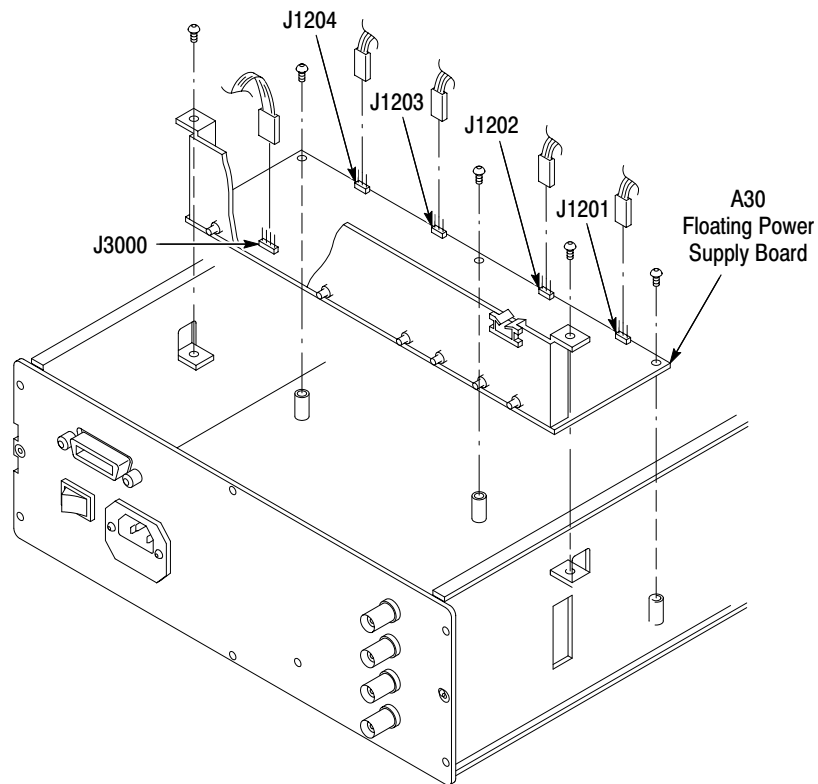


Figure 8–13: A30 Floating Power Supply Removal (A6907)



**Figure 8-14: A30 Floating Power Supply Removal (A6909)**

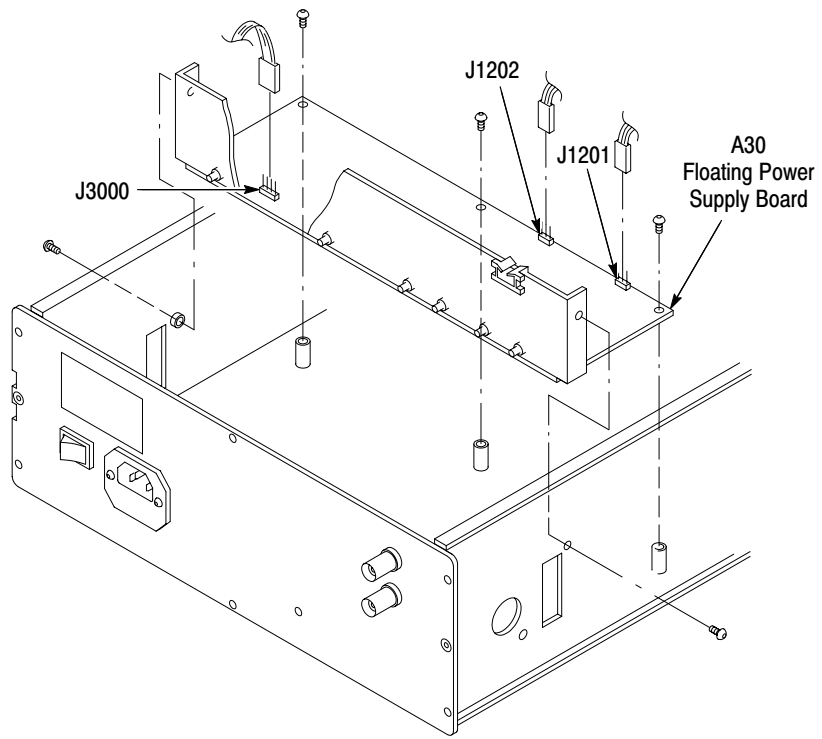

## Troubleshooting Procedures

Refer to the troubleshooting tree on page 8–18 for directions to isolate failures.

Test points can be located by using the illustrations in the *Removal and Replacement* section .

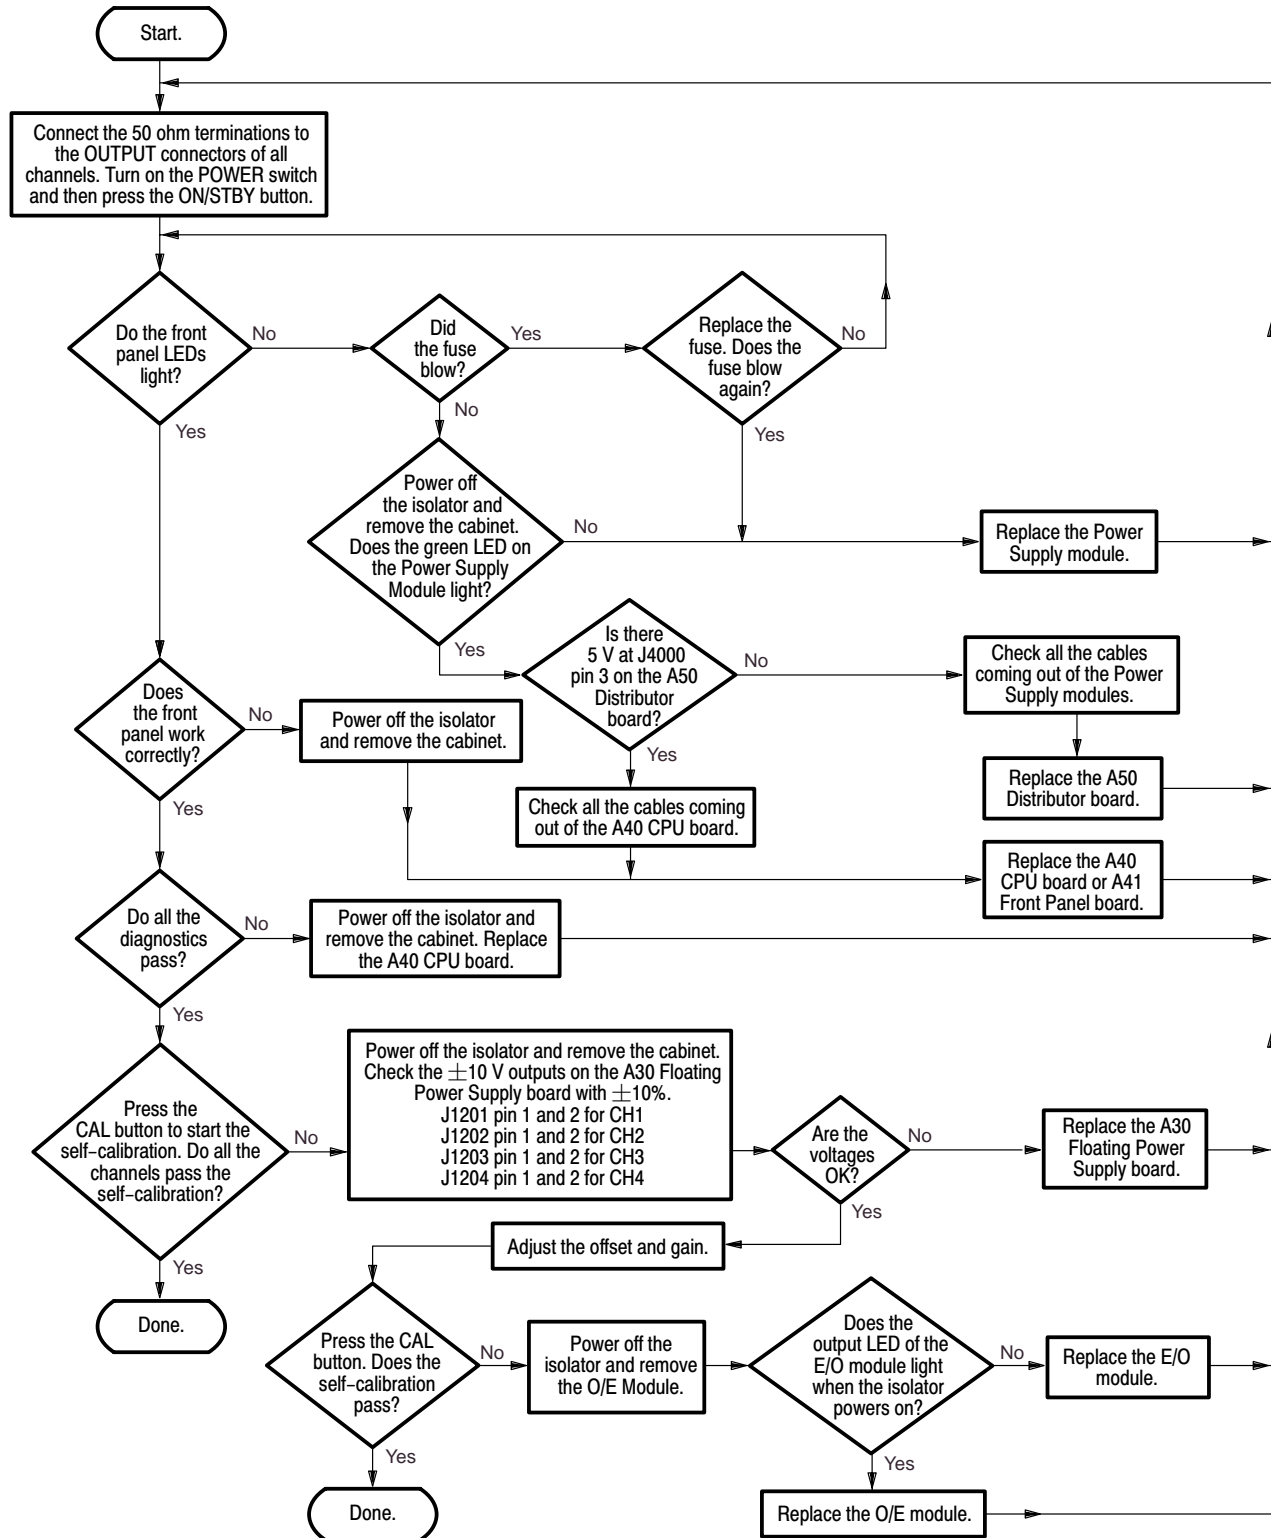


Figure 8-15: Troubleshooting Tree

# After Repair Adjustments

The isolator withstand-voltage check must be performed after all repairs to validate the warranted input voltage specification.


## Withstand-Voltage Check

Table 8–1 lists all the test equipment required to do the withstand-voltage check procedure. Test equipment specifications described are the minimum necessary to provide accurate results. For test equipment operation information, refer to the appropriate test equipment instruction manual.

**Table 8–1: Withstand-Voltage Required Equipment**

Withstanding Voltage Tester	Output Voltage: 2.2 kV <sub>RMS</sub>	Rod-L M100AV-2.8-40 Instek GPT515AD	Checking Floating Withstanding Voltage
High Voltage Test Fixture		Tektronix part number 067-0253-00	Checking Floating Withstanding Voltage

1. Assemble the test setup as shown in Figure 8–16.

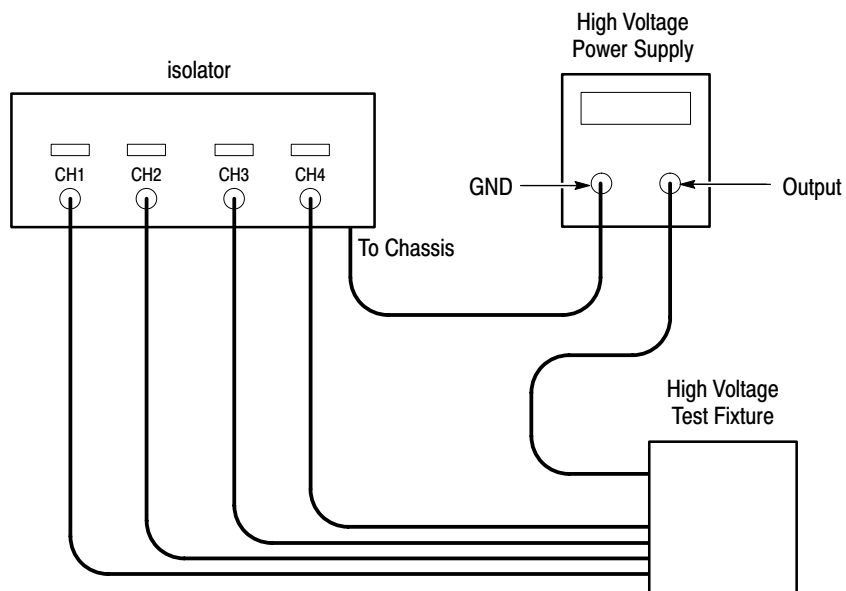

**Figure 8–16: Floating Voltage Check Setup**

2. Connect all of the isolator channels to the high voltage test fixture.
3. Connect the red plug of the high voltage test fixture to the output connector on the high voltage power supply.
4. Connect the **GND** connector of the high voltage power supply to the chassis of the isolator.



---

**WARNING.** *To avoid electrical shock, do not touch the test fixture cables during the withstand-voltage check.*

---

5. Set up the high voltage power supply:

Cutoff Current	10 mA
Timer	60 second
Test Voltage control	CCW

6. Set the test voltage of the withstanding voltage tester to 2.2 kV.
7. Start the test timer.
8. Check that the test passes. (Current does not exceed 10 mA during the 60 second duration.)
9. Disassemble the test setup.
  - a. Disconnect the connections from the high voltage test fixture.
  - b. Disconnect the ground connection lead from the chassis of the isolator.

## Repackaging Instructions

The isolator should be packed in the original packaging when it is shipped by commercial carrier. The cartons and packaging material your instrument was shipped in should be saved.

If the original packaging is unfit for use or not available, package the instrument as follows:

1. Use a corrugated cardboard shipping carton having inside dimensions at least six inches greater than the instrument dimensions.
2. If the instrument is to be shipped to a Tektronix Service Center for service or repair, attach a tag to the instrument showing the following: owner of the instrument (with address), the name of a person at your firm who can be contacted, complete instrument type and serial number, and a description of the service required.
3. Wrap the instrument with polyethylene sheeting or the equivalent to protect the outside finish and prevent entry of packing materials into the instrument.
4. Cushion the instrument on all sides by tightly packing three inches of dunnage or urethane foam between the carton and the instrument.
5. Seal the carton with shipping tape or with an industrial stapler.
6. Write the address of the Tektronix Service Center and your return address on the carton in one or more prominent locations.







# Diagrams



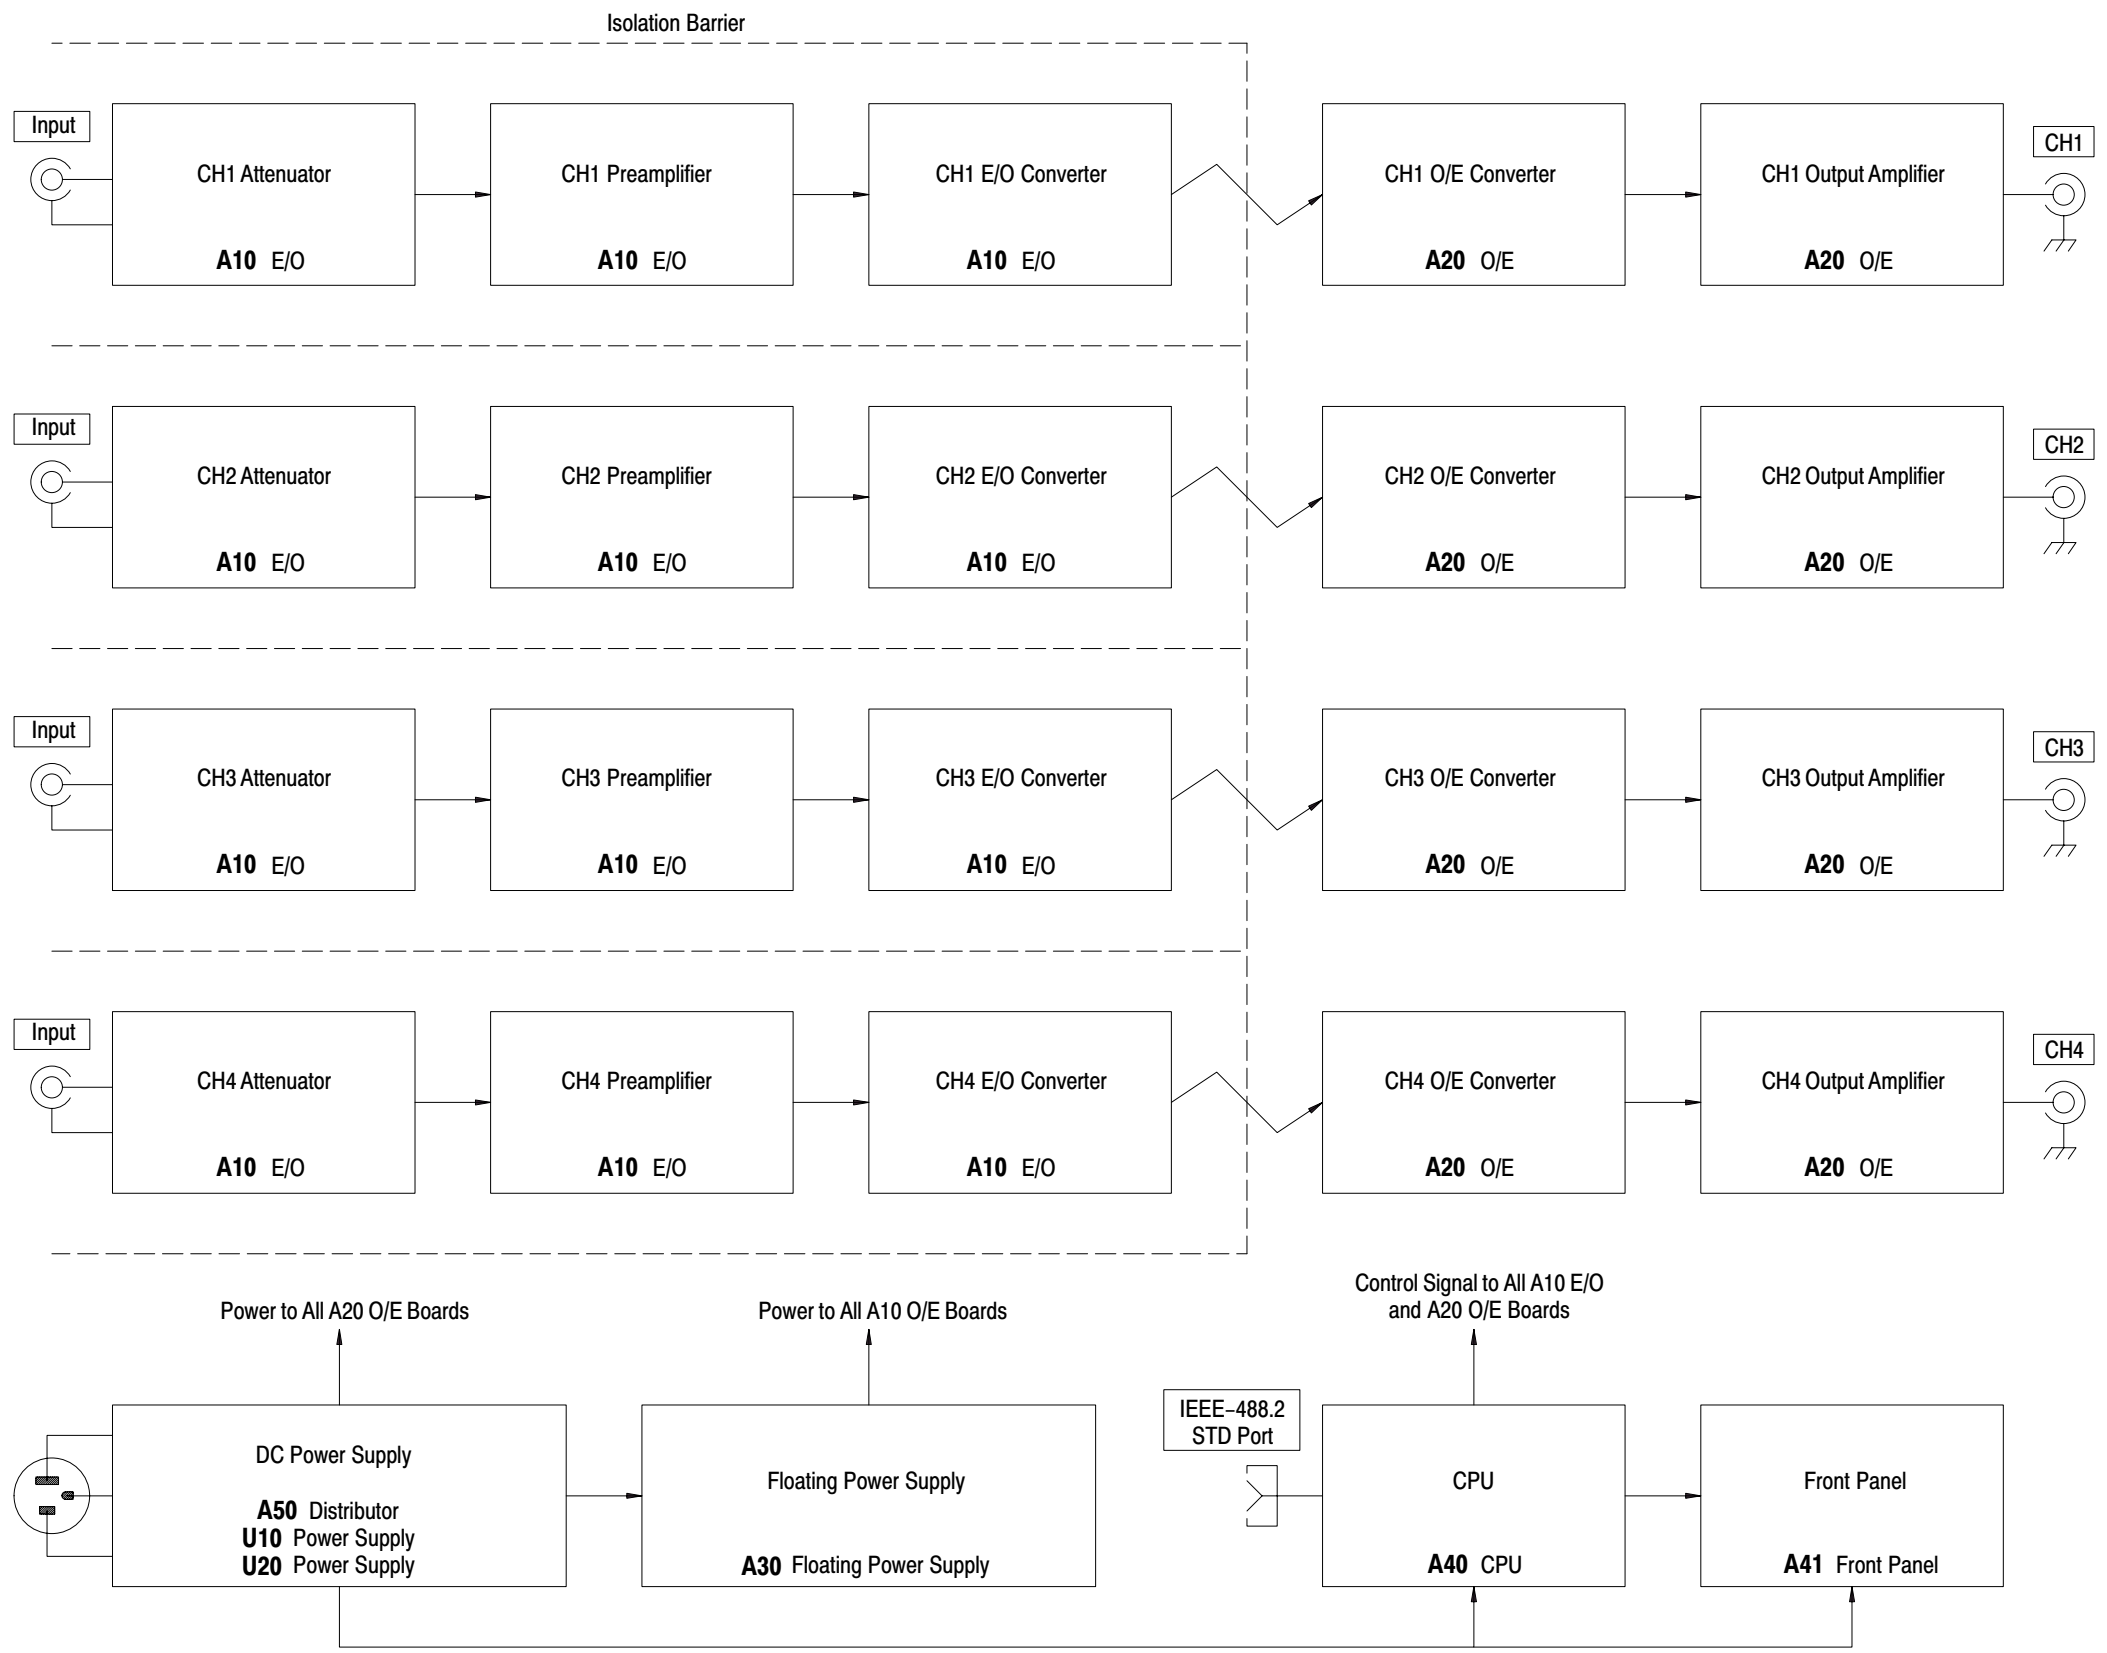


Figure 9-1: A6907 Block Diagram

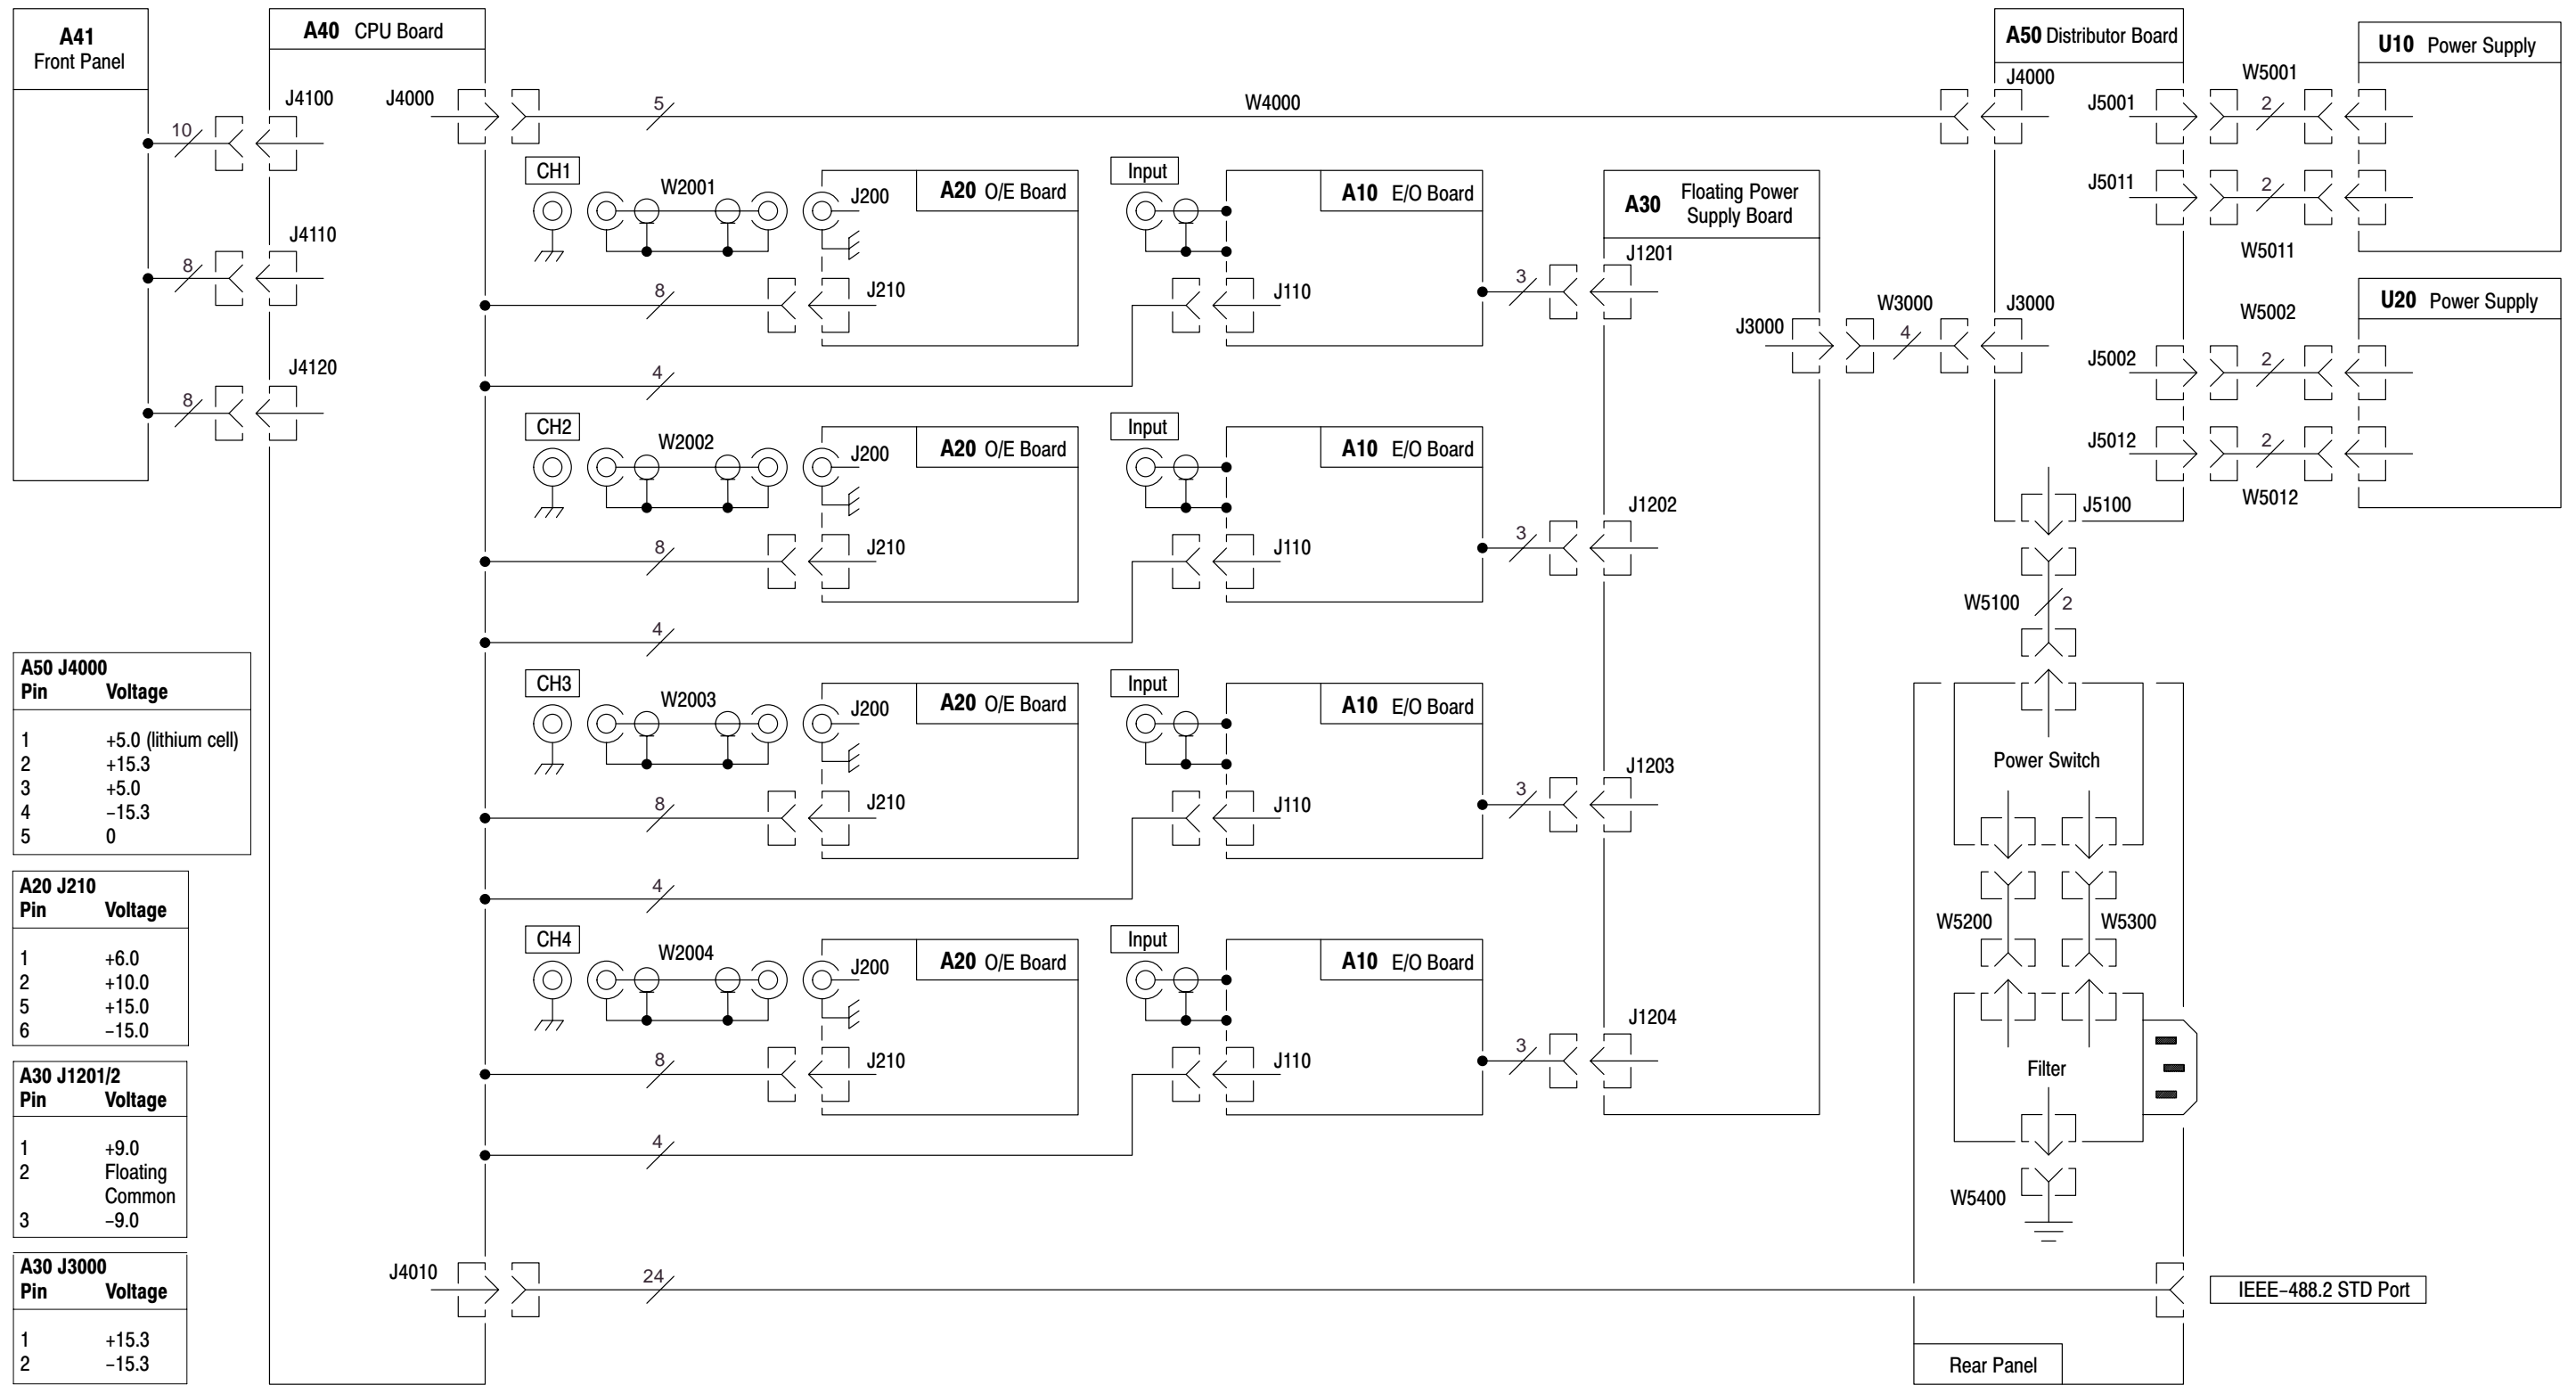


Figure 9-2: A6907 Interconnect Diagram

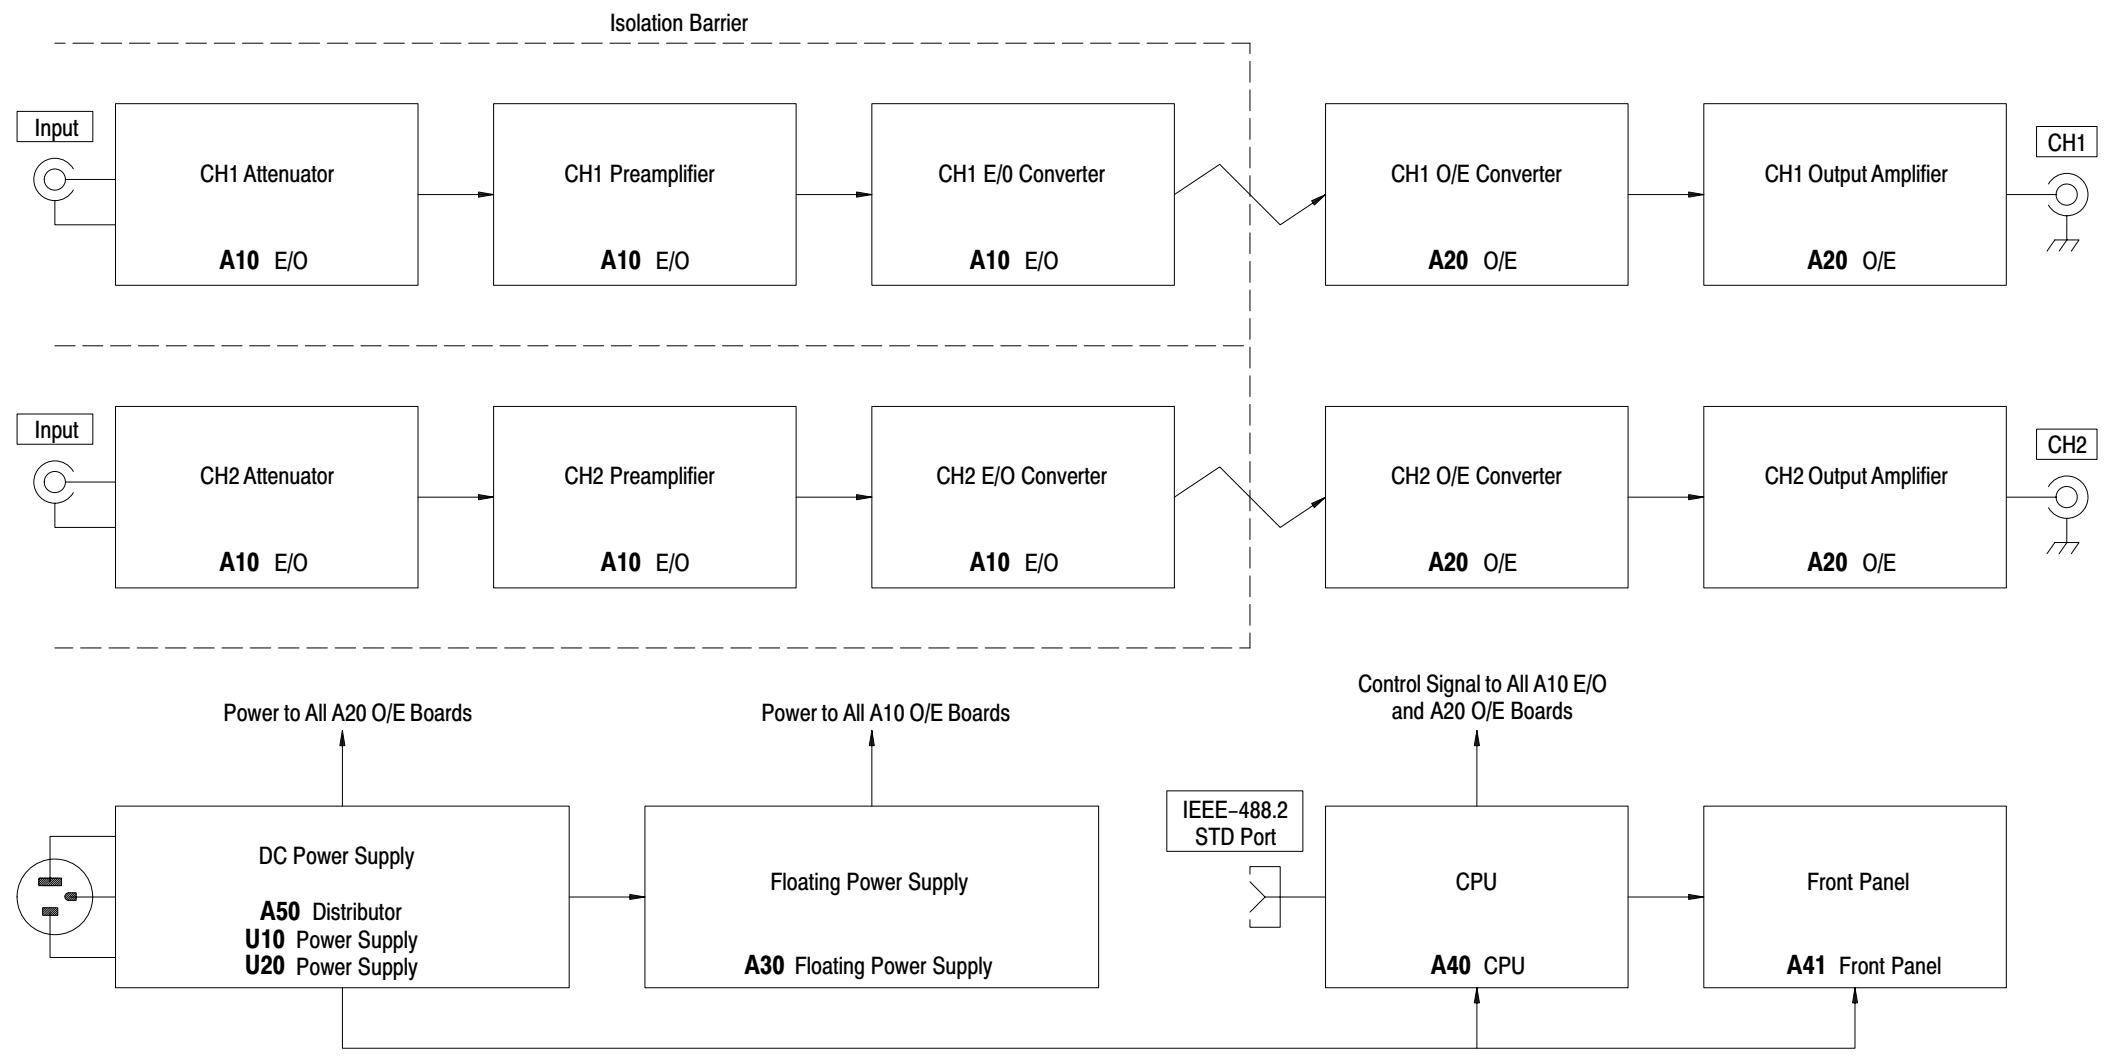


Figure 9-3: A6909 Block Diagram

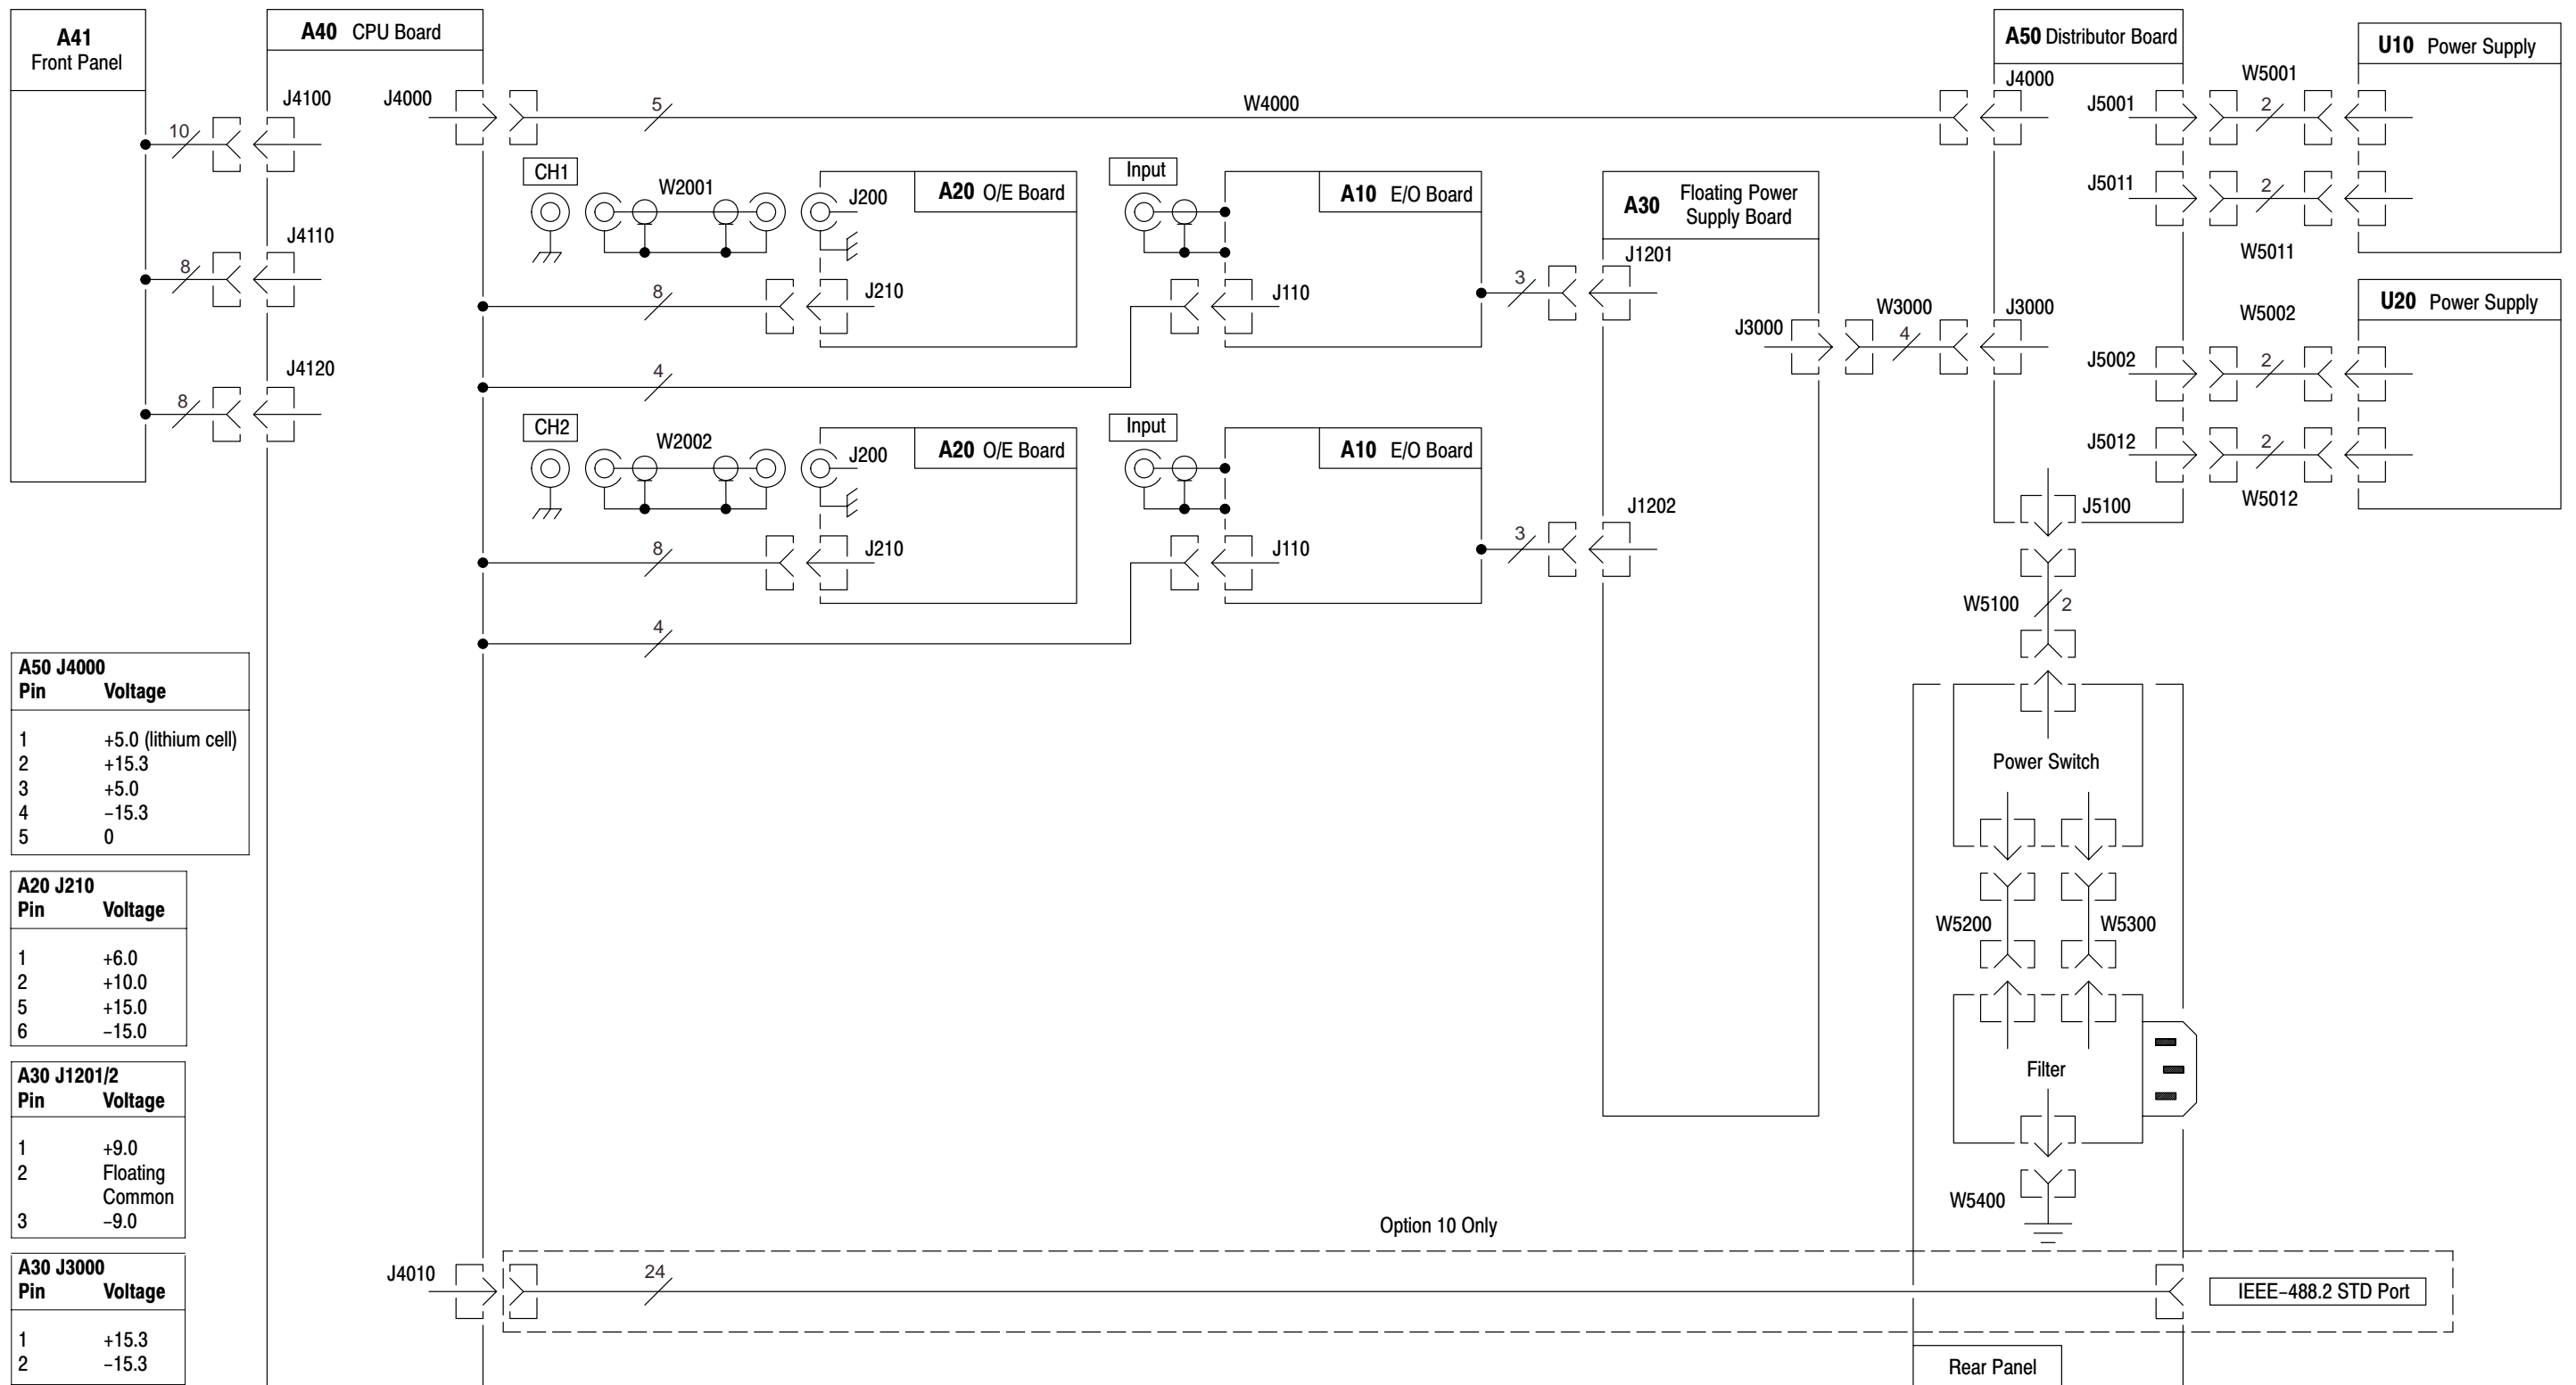


Figure 9-4: A6909 Interconnect Diagram



# **Replaceable Parts**





# Replaceable Parts

This section contains a list of the replaceable modules for the A6907 and A6909. Use this list to identify and order replacement parts.

## Parts Ordering Information

Replacement parts are available through your local Tektronix field office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available and to give you the benefit of the latest circuit improvements. Therefore, when ordering parts, it is important to include the following information in your order.

- Part number
- Instrument type or model number
- Instrument serial number
- Instrument modification number, if applicable

If you order a part that has been replaced with a different or improved part, your local Tektronix field office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

## Using the Replaceable Parts List

This section contains a list of the mechanical and/or electrical components that are replaceable for the A6907 and A6909. Use this list to identify and order replacement parts. The following table describes each column in the parts list.

### Parts List Column Descriptions

Column	Column Name	Description
1	Figure & Index Number	Items in this section are referenced by figure and index numbers to the exploded view illustration.
2	Tektronix Part Number	Use this part number when ordering replacement parts from Tektronix.
3 and 4	Serial Number	Column three indicates the serial number at which the part was first used. Column four indicates the serial number at which the part was discontinued. No entries in this column indicates the part is used in all serial numbers.
5	Qty	This indicates the quantity of parts used.
6	Name & Description	An item name is separated from the description by a colon (:). Because of space limitations, an item name may sometimes appear as incomplete. Use the U.S. Federal Catalog handbook H6-1 for further item name identification.
7	Mfr. Code	This indicates the code of the manufacturer of the part.
8	Mfr. Part Number	This indicates the manufacturer's or vendor's part number.

**Abbreviations**      Abbreviations conform to American National Standard ANSI Y1.1-1972.

**Mfr. Code to Manufacturer Cross Index**      The table titled Manufacturers Cross Index shows codes, names, and addresses of manufacturers or vendors of components listed in the parts list.

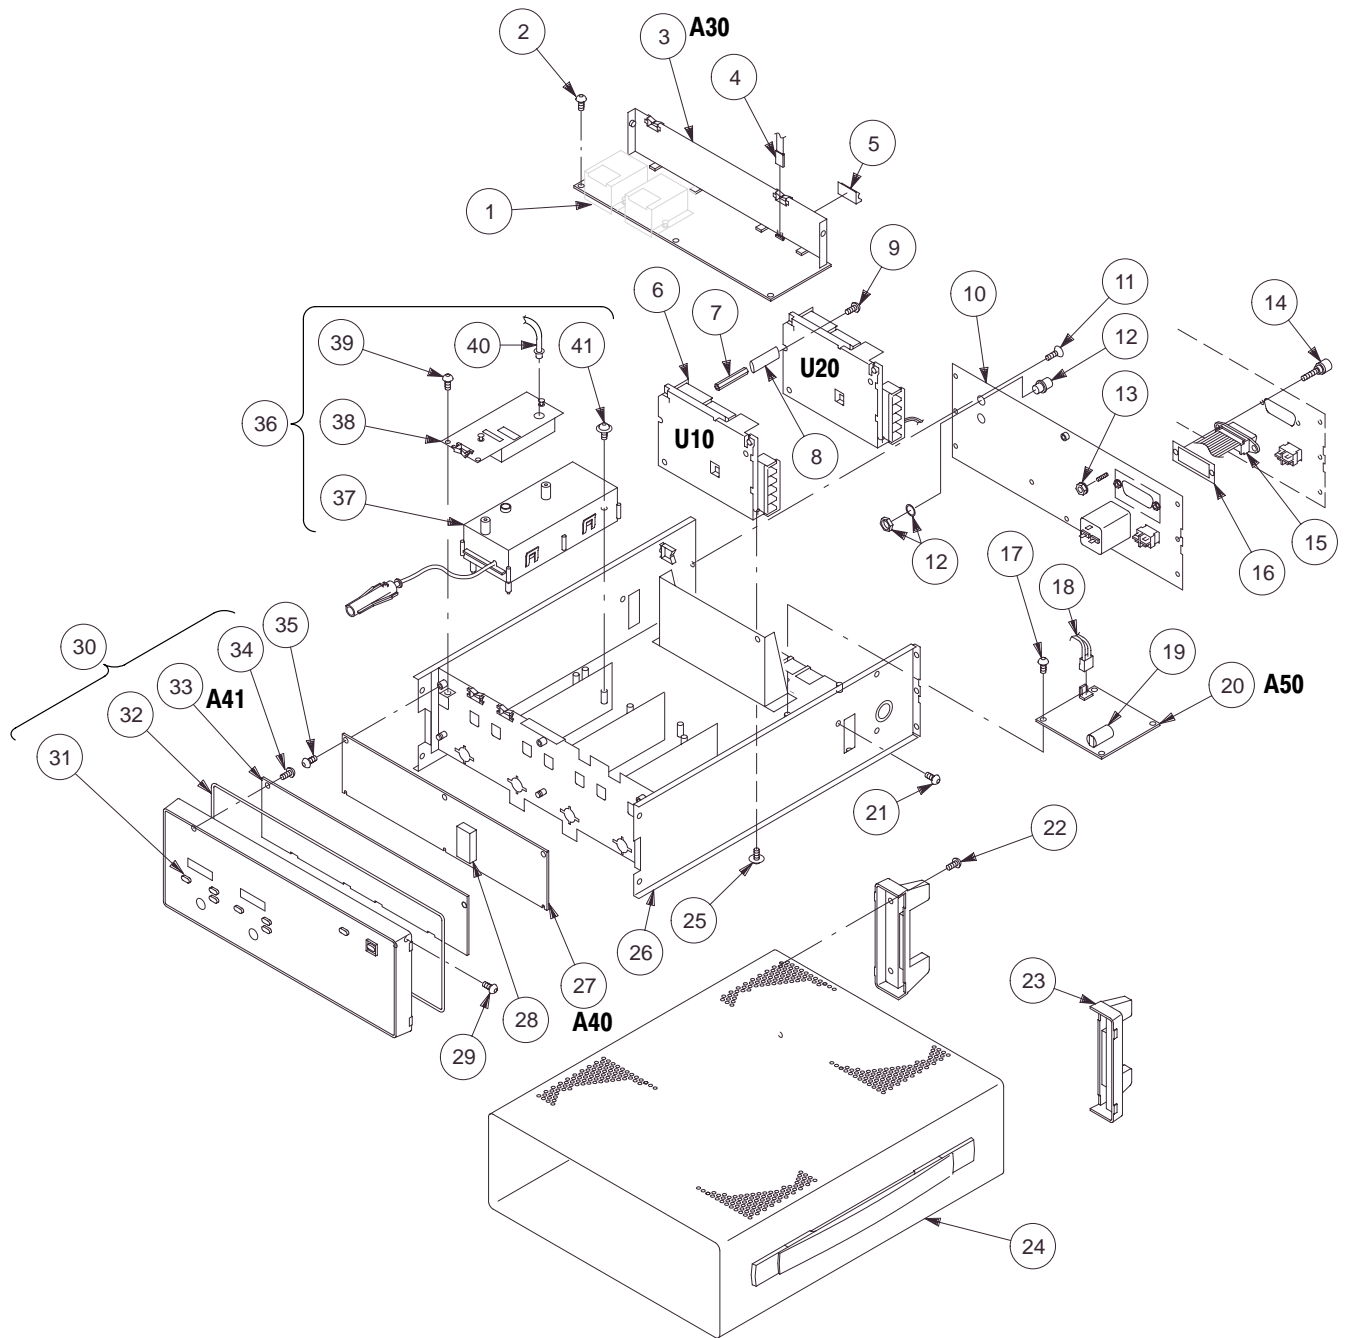


Figure 10-1: A6907 and A6909 Replaceable Parts

## Replaceable Parts

Fig. & Index No.	Tektronix Part No.	Serial No.		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
		Effective	Dscont				
10-1-1	342-0994-00	J300101	J300237	4	INSULATOR,PLATE:FPS BD,PC,W/FASTENER (A6907 ONLY)	80009	342099400
	342-0994-00	J300101	J300168	2	INSULATOR,PLATE:FPS BD,PC,W/FASTENER (A6909 ONLY)	80009	342099400
-2	213-0882-00	J300101	J300237	3	SCREW,TPG,TR:6-32 X 0.437,PNH,STL,CDPL, TYPE TT,T-15 TORX DR (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0732-00	J300238		3	SCR,ASSEM WSHR:6-32 X 0.75,PNH,STL,CD PL,TORX T15 (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0732-00			3	SCR,ASSEM WSHR:6-32 X 0.75,PNH,STL,CD PL,TORX T15 (A6909 ONLY)	0KB01	ORDER BY DESC
-3	671-3030-00	J300101	J300237	1	CIRCUIT BD ASSY:FLOATING POWER SUPPLY (A30-A6907 ONLY)	80009	671303000
	671-3490-00	J300238		1	CIRCUIT BD ASSY:FLOATING POWER SUPPLY (A30-A6907 ONLY)	80009	671303001
	671-3277-00	J300101	J300168	1	CKT BD ASSY:FLOATING PWR SUPPLY (A30-A6909 ONLY)	80009	671327700
	671-3491-00	J300169		1	CKT BD ASSY:FLOATING PWR SUPPLY (A30-A6909 ONLY)	80009	671327701
-4	198-5813-00			1	WIRE SET,ELEC: (W3000 & W4000)	80009	198581300
-5	343-1569-00			4	CLAMP,CABLE:NYLON (A6907 ONLY)	80009	343156900
	343-1569-00			4	CLAMP,CABLE:NYLON (OPTION 10-A6909 ONLY)	80009	343156900
-6	650-3114-00	J300101	J300237	2	PWR SPLY ASSY:A6907,W/BRACKET (U10 & U20-A6907 ONLY)	80009	650311400
	119-4667-00	J300238		2	POWER SUPPLY:IN 85-264VAC,OUT + 15V/1.7A (U10 & U20-A6907 ONLY)	80009	119466700
	119-4667-00			2	POWER SUPPLY:IN 85-264VAC,OUT + 15V/1.7A (U10 & U20-A6909 ONLY)	80009	119466700
-7	129-1419-00			1	SPACER,POST:40MM L,6-32 INT BOTH ENDS, BRS,6.3MM HEX	80009	129141900
-8	162-0532-00			1	INSUL SLVG,ELEC:HT SHRINK,0.375 ID POLYOLEFIN,BLK,0.022 THK W	06090	VERSAFIT
-9	211-0722-00			2	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR	0KB01	ORDER BY DESC
-10	614-0923-00			1	REAR PNL ASSY:W/FILTER & PWR SWITCH (A6907 ONLY)	80009	614092300
	614-0930-00			1	REAR PANEL ASSY: (A6909 ONLY)	80009	614093000
-11	211-0718-00			2	SCREW,MACHINE:6-32 X 0.312,FLH100, STL,CDPL,T-10 TORX DR	0KB01	ORDER BY DESC
-12	131-1315-01			4	CONN,RF JACK:BNC/PNL,;50 OHM,FEMALE, STR,PELTOLA/REAR PNL,SILVER/BRIGHT ALLOY,0.576 MLGX 0.366 TERMN,0.375-32 THD,D-FLAT (A6907 ONLY)	24931	28JR306-1
	131-1315-01			2	CONN,RF JACK:BNC/PNL,;50 OHM,FEMALE, STR,PELTOLA/REAR PNL,SILVER/BRIGHT ALLOY,0.576 MLGX 0.366 TERMN,0.375-32 THD,D-FLAT (A6909 ONLY)	24931	28JR306-1
-13	210-0457-00			1	NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL	TK0435	ORDER BY DESC

Fig. & Index No.	Tektronix Part No.	Serial No.		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
		Effective	Dscont				
-14	214-4606-00	J300101	J300237	2	SCREW ASSY:GPIB CONN,W/WASHER & HEX NUT (A6907 ONLY)	80009	214460600
	214-4681-00	J300238		2	HARDWARE KIT:JACKSCREW, SET OF 2 (A6907 ONLY)	80009	214468100
	214-4681-00			2	HARDWARE KIT:JACKSCREW, SET OF 2 (OPTION 10-A6909 ONLY)	80009	214468100
-15	174-3220-00	J300101	J300237	1	CA ASSY,SP:24,28 AWG,750MM L,FLAT (A6907 ONLY)	80009	174322000
	174-3220-01	J300238		1	CA SSSY,SP,ELEC:24,28AWG,750MM L,FLAT (A6907 ONLY)	80009	174322001
	174-3220-01			1	CA SSSY,SP,ELEC:24,28AWG,750MM L,FLAT (OPTION 10-A6909 ONLY)	80009	174322001
-16	220-0194-00			1	NUT,PLATE:STL (A6907 ONLY)	80009	220019400
	220-0194-00			1	NUT,PLATE:STL (OPTION 10-A6909 ONLY)	80009	220019400
-17	211-0722-00			4	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR	0KB01	ORDER BY DESC
-18	198-5815-00			1	WIRE SET,ELEC: (W5011,5012,5001,5002,5400,5200,5300,5100)	80009	198581500
-19	146-0093-00			1	BATTERY,DRY:3V,650MAH,LITHIUM	TK0191	146-0093-00
-20	671-3033-01	J300101	J300120	1	CIRCUIT BD ASSY: DISTRIBUTOR (A50-A6907 ONLY)	80009	671303301
	671-3033-02	J300121		1	CKT BD ASSY:POWER DISTRIBUTOR (A50-A6907 ONLY)	80009	671303302
	671-3033-02			1	CKT BD ASSY:POWER DISTRIBUTOR (A50-A6909 ONLY)	80009	671303302
-21	211-0722-00			2	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR	0KB01	ORDER BY DESC
-22	213-0882-00	J300101	J300237	6	SCREW,TPG,TR:6-32 X 0.437,PNH,STL, CDPL,TYPE TT,T-15 TORX DR (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0720-01	J300238		6	SCREW,MACHINE:6-32 X 0.50,PNH,STL,TORX, T-15 WITH SLOT (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0720-01			6	SCREW,MACHINE:6-32 X 0.50,PNH,STL,TORX T-15 WITH SLOT (A6909 ONLY)	0KB01	ORDER BY DESC
-23	348-1400-00			2	FOOT,REAR:A6907,POLYCARBONATE	80009	348140000
-24	390-1136-00			1	CABINET ASSY:A6907,W/FOOT & HANDLE	80009	390113600
-25	213-0882-00	J300101	J300237	4	SCREW,TPG,TR:6-32 X 0.437,PNH,STL, CDPL,TYPE TT,T-15 TORX DR (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0871-00	J300238		4	SCREW,MACHINE:M3 X 6MM L,PNH STL, ZN PL,CROSS REC,W/FLAT & LOCK WASHER (A6907 ONLY)	80009	211087100
	211-0871-00			4	SCREW,MACHINE:M3 X 6MM L,PNH STL,ZN PL,CROSS REC,W/FLAT & LOCK WASHER (A6909 ONLY)	80009	211087100

## Replaceable Parts

Fig. & Index No.	Tektronix Part No.	Serial No.		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
		Effective	Dscont				
-26	441-2047-00	J300101	J300237	1	CHASSIS ASSY:MAIN,AL (A6907 ONLY)	80009	441204700
	441-2070-00	J300238		1	CHASSIS,ASSY:MAIN,STL (A6907 ONLY)	80009	441207000
	441-2070-00			1	CHASSIS,ASSY:MAIN,STL (A6909 ONLY)	80009	441207000
-27	671-3031-01			1	CIRCUIT BD ASSY: CPU (A40-A6907 ONLY)	80009	671303101
	671-3278-00			1	CKT BD ASSY:CPU (A40-A6909 ONLY)	80009	671327800
	671-3326-00			1	CKT BD ASSY:CPU (A40-A6909 OPTION 10 ONLY)	80009	671332600
-28	160-9906-00	J300101	J300237	1	IC, MEMORY:CMOS, EPROM;65536 X 8, 200NS,MBM27C512-20,DIP28.6 (A40U120-A6907 ONLY)	80009	160990600
	160-9906-01	J300238		1	IC, MEMORY:CMOS, EPROM;64K X 8,PRGM (A40U120-A6907 ONLY)	80009	160990601
	163-0006-00			1	IC, MEMORY:CMOS, EPROM;64K X 8,PRGM (MBM27C512-20),200NS (A40U120-A6909 ONLY)	80009	163000600
-29	211-0722-00			4	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR	0KB01	ORDER BY DESC
-30	614-0922-00			1	FRONT PNL ASSY: (A6907 ONLY)	80009	614092200
	614-0931-00			1	FRNT PANEL ASSY: (A6909 ONLY)	80009	614093100
-31	366-0753-00			14	PUSH BUTTON:SMOKE TAN,ABS (A6907 ONLY)	80009	366075300
	366-0753-00			8	PUSH BUTTON:SMOKE TAN,ABS (A6909 ONLY)	80009	366075300
-32	348-1433-00			1	GASKET:SHLD GASKET,ELEC,MESH TYPE,2.5MM OD,SI SPONGE CORE	80009	348143300
-33	671-3032-00			1	CIRCUIT BD ASSY:FRONT PANEL (A41-A6907 ONLY)	80009	671303200
	671-3391-00			1	CKT BD ASSY:FRONT PANEL (A41-A6909 ONLY)	80009	671339100
-34	211-0325-00			3	SCR,ASSEM WSHR:4-40 X 0.250,PNH,STL, CDPL,T-9 TORX DR,MACHINE	0KB01	ORDER BY DESC
-35	211-0722-00			3	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR	0KB01	ORDER BY DESC
-36	650-3355-00			4	E/O-O/E MODULE: (A6907 ONLY)	80009	650335500
	650-3355-00			2	E/O-O/E MODULE: (A6909 ONLY)	80009	650335500
-37	650-3223-00			1	E/O MODULE:	80009	650322300
-38	650-3354-00			1	O/E MODULE:	80009	650335400

Fig. & Index No.	Tektronix Part No.	Serial No.		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
		Effective	Dscont				
-39	211-0722-00			8	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0722-00			4	SCREW,MACHINE:6-32 X 0.250,PNH,STL, CDPL,T-15 TORX DR (A6909 ONLY)	0KB01	ORDER BY DESC
-40	198-5814-00	J300101	J300237	1	WIRE SET,ELEC: (W2001 & W2004-A6907 ONLY)	80009	198581400
	198-5814-01	J300238		1	WIRE SET,ELEC: (W2001 & W2004-A6907 ONLY)	80009	198581401
	198-5825-00	J300101	J300168	1	WIRE SET,ELEC: (W2001 & W2002-A6909 ONLY)	80009	198582500
	198-5825-01	J300169		1	WIRE SET,ELEC: (W2001 & W2002-A6909 ONLY)	80009	198582501
-41	211-0720-01	J300101	J300237	8	SCREW,MACHINE:6-32 X 0.50,PNH,STL,TORX T-15 WITH SLOT (A6907 ONLY)	0KB01	211-0720-01
	211-0732-00	J300238		8	SCR,ASSEM WSHR:6-32 X 0.75,PNH,STL,CD PL,TORX T15 (A6907 ONLY)	0KB01	ORDER BY DESC
	211-0732-00			4	SCR,ASSEM WSHR:6-32 X 0.75,PNH,STL,CD PL,TORX T15 (A6909 ONLY)	0KB01	ORDER BY DESC

## Replaceable Parts

Fig. & Index No.	Tektronix Part No.	Serial No. Effective	Dscont	Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
<b>STANDARD ACCESSORIES</b>							
	010-0576-00			4	PROBE,VOLTAGE:W/CORE & CASE (A6907 ONLY)	80009	010057600
	010-0576-00			2	PROBE,VOLTAGE:W/CORE & CASE (A6909 ONLY)	80009	010057600
	020-1908-00			1	ACCESSORY,PKG	80009	020190800
	196-3422-00			1	LEAD,ELECTRICAL:23 AWG,6.000 L,BLACK PVC	80009	196342200
	206-0427-00			1	PROBE,HEAD	80009	206042700
	161-0230-01			1	CABLE ASSY,PWR,;3,18 AWG,92 L,SVT,TAN, 60 DEG C,MC-6-3C/G X RTANG BME,10A/125V (STANDARD ONLY)	TK2432	ORDER BY DESC
	161-0104-06			1	CA ASSY,PWR:3,1.0MM SQ,250V/10A,2.5 METER,RTANG,IEC320,RCPT (OPTION A1 EUROPEAN)	S3109	198-010
	161-0104-07			1	CA ASSY,PWR:3,1.0MM SQ,240V/10A,2.5 METER,RTANG,IEC320,RCPT X 13A (OPTION A2 UNITED KINGDOM)	S3109	ORDER BY DESC
	161-0104-05			1	CA ASSY,PWR:3,1.0MM SQ,250V/10A,2.5 METER,RTANG,IEC320,RCPT (OPTION A3 AUSTRALIAN)	S3109	198-010
	161-0167-00			1	CA ASSY,PWR:3,0.75MM SQ,250V/10A,2.5 METER, RTANG,IEC320,RCPT (OPTION A5 SWITZERLAND)	S3109	ORDER BY DESC
	159-0359-00			1	FUSE,CARTRIDGE:DIN,2.5A,250V,FAST BLOW (STANDARD ONLY)	80009	159035900
	159-0367-00			1	FUSE,CARTRIDGE:DIN,2.5A,250V,TIME LAG,IEC (OPTIONS A1,A2,A3 & A5 ONLY)	80009	159036700
	012-1452-00			1	CABLE ASSY,RF:50 OHM COAX,1100MM L,4 EA SET (A6907 ONLY)	80009	012145200
	012-1475-00	J300101	J300237	1	CABLE ASSY,RF:50 OHM COAX,1100MM L, BROWN (A6907 ONLY)	80009	012147500
	012-1476-00	J300238		1	CABLE,ASSY,RF:50 OHM COAX,1100MM L,RED (A6907 ONLY)	80009	012147600
	012-1477-00	J300238		1	CABLE ASSY,RF:50 OHM COAX,1100MM L,ORANGE (A6907 ONLY)	80009	012147700
	012-1478-00	J300238		1	CABLE ASSY,RF:50 OHM COAX,1100MM L,YELLOW (A6907 ONLY)	80009	012147800
	012-0057-01	J300238		1	CABLE ASSY,RF:50 OHM COAX,43 L,BNC,MALE (A6909 ONLY)	80009	012005701
	012-1475-00	J300101	J300168	1	CABLE ASSY,RF:50 OHM COAX,1100MM L,BROWN (A6909 ONLY)	80009	012147500
	012-1476-00	J300169		1	CABLE ASSY,RF:50 OHM COAX,1100MM L,RED (A6909 ONLY)	80009	012147600
	343-1286-00	J300169		1	CLAMP,CABLE:6.8 ID,NYLON	64537	T132DS
	211-0729-00			1	SCR,ASSEM WSHR:6-32 X 0.437,PH,STL,CD PL POZ	TK0435	ORDER BY DESC
	070-9094-05			1	MANUAL,TECH:INSTRUCTION,A6907/A6909	80009	070909405
<b>OPTIONAL ACCESSORIES</b>							
	012-0991-00			1	CABLE,INTCON:SHLD CMPST,GPIB;CRC,12 TW PR,2225264,28 AWG,2 METER,DUAL SHIELD,24 POS, 0.085 C	22526	81190-020
	011-0049-01			1	TR,RIBBON,FEEDTHRU,BOTH ENDS TERMN, COAXIAL:50 OHM,2W,BNC64537	64537	T132DS
	A620			1	CURRENT PROBE:	80009	A620
	012-1392-00			1	LEADSET:(1) SIGNAL,(1) GROUND	80009	012139200



### CROSS INDEX – MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip Code
S3109	FELLER	72 Veronica Ave Unit 4	Summerset NJ 08873
TK0435	LEWIS SCREW CO	4300 S RACINE AVE	CHICAGO IL 60609–3320
TK1499	AMLAN INC	97 THORNWOOD RD	STAMFORD CT 06903–2617
TK2432	UNION ELECTRIC	15/F #1, FU–SHING N. ROAD	TAIPEI, TAIWAN ROC
0KB01	STAUFFER SUPPLY	810 SE SHERMAN	PORTLAND OR 97214
06090	RAYCHEM CORP	300 CONSTITUTION DRIVE	MENLO PARK CA 94025–1111
2W733	COOPER INDUSTRIES INC BELDEN DIVISION	2200 US HIGHWAY 27 SOUTH PO BOX 1980	RICHMOND IN 47375–0010
22526	BERG ELECTRONICS INC (DUPONT)	857 OLD TRAIL RD	ETTERS PA 17319
24931	SPECIALTY CONNECTOR CO INC	2100 EARLYWOOD DR PO BOX 547	FRANKLIN IN 46131
64537	KDI/TRIANGLE ELECTRONICS	60 S JEFFERSON ROAD	WHIPPANY, NJ 07981
80009	TEKTRONIX INC	14150 SW KARL BRAUN DR PO BOX 500	BEAVERTON OR 97077–0001

