

Technical Reference



MTS 200 Series MPEG Test System Hardware Installation and Specifications Compaq Proliant 1600 Platform 071-0261-00

This document supports MPEG Test System
Software version 2.5 and later.

Warning

The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to all safety summaries prior to performing service.



Copyright © Tektronix, Inc. All rights reserved.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

Printed in the U.S.A.

Tektronix, Inc., P.O. Box 1000, Wilsonville, OR 97070-1000

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

WARRANTY

Tektronix warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, with shipping charges prepaid. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; or c) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THIS PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Table of Contents

	General Safety Summary	iii
	Preface	v
Getting Started		
	Unpacking the Test System	1
	Installing the Test System	2
	Connecting the Data Store System Input and Outputs	8
	Connecting the Real-Time Analyzer Input and Outputs	12
	First Time Operation	14
Functional Check		
	Data Store System	17
	Real-Time Analyzer	24
Specifications		
	Data Store System Electrical Characteristics	33
	Real-Time Analyzer Electrical Characteristics	45
	System Characteristics	47
Repackaging		
	Obtaining Replacement Packaging	51
	Repackaging the Test System	51

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified.

Only qualified personnel should perform service procedures.

While using this product, you may need to access other parts of the system. Read the *General Safety Summary* in other system manuals for warnings and cautions related to operating the system.

To Avoid Fire or Personal Injury

Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.

Ground the Product. This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Do Not Operate Without Covers. Do not operate this product with covers or panels removed.

Use Proper Fuse. Use only the fuse type and rating specified for this product.

Do Not Operate With Suspected Failures. If you suspect there is damage to this product, have it inspected by qualified service personnel.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Provide Proper Ventilation. Refer to the manual's installation instructions for details on installing the product so it has proper ventilation.

Symbols and Terms

Terms in this Manual. These terms may appear in this manual:



WARNING. Warning statements identify conditions or practices that could result in injury or loss of life.



CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

Terms on the Product. These terms may appear on the product:

DANGER indicates an injury hazard immediately accessible as you read the marking.

WARNING indicates an injury hazard not immediately accessible as you read the marking.

CAUTION indicates a hazard to property including the product.

Symbols on the Product. The following symbols may appear on the product:



CAUTION
Refer to Manual



WARNING
High Voltage



Protective Ground
(Earth) Terminal

Battery Recycling

This product contains a Nickel Cadmium (NiCd) battery, which must be recycled or disposed of properly. For the location of a local battery recycler in the U.S. or Canada, please contact:

RBRC
Rechargeable Battery Recycling Corp.
P.O. Box 141870
Gainesville, Florida 32614

(800) BATTERY
(800) 227-7379
www.rbrc.com

Preface

This manual provides installation and first-time operating instructions for Compaq Proliant 1600 based MTS 200 Series MPEG Test Systems, serial numbers B090000 and above, software version 2.5.

The individual sections of this manual provide specific information on the following topics:

- The *Installation* section contains basic instructions on how to install and operate the test system.
- The *Functional Check* section contains procedures to verify the test system is functioning properly.
- The *Specifications* section lists the electrical characteristics of the Data Store system, the Real-Time Analyzer, and the overall environmental and physical characteristics of the test system.
- The *Repackaging* section contains instructions on how to repackage the test system for shipping in the event service is required.

For information on using MTS 200 Series software to monitor, analyze, and generate MPEG-2 and DVB data streams, refer to the following manuals:

- *MTS 200 Series Read This First* document, which contains the latest information about test system features and bugs and is included with all test systems.
- *MPEG Test System Deferred-Time Applications User Manual*, provided with MTS 210 and MTS 215 test systems.
- *Real-Time Analyzer User Manual*, provided with MTS 205 and MTS 215 test systems.
- *MPEG Audio Stream Analyzer User Manual*, provided with Option ES.
- *MPEG Video Stream Analyzer User Manual*, also provided with Option ES.

For additional information about test system maintenance and repair, refer to the optional *MPEG Test System Service Manual*. Contact your nearest Tektronix representative or field office for ordering information.

For additional information about the Windows NT Workstation operating system, refer to the Microsoft documentation provided with the test system.

For additional information about the Compaq Proliant computer, refer to the Compaq documentation provided with the test system.

Contacting Tektronix

Product Support	<p>For application-oriented questions about a Tektronix measurement product, call toll free in North America: 1-800-TEK-WIDE (1-800-835-9433 ext. 2400) 6:00 a.m. – 5:00 p.m. Pacific time</p> <p>Or contact us by e-mail: tm_app_supp@tek.com</p> <p>For product support outside of North America, contact your local Tektronix distributor or sales office. You can also call 1-503-627-2400 between 14:00 and 01:00 UTC (GMT).</p>
Service Support	<p>Contact your local Tektronix distributor or sales office. Or visit our web site for a listing of worldwide service locations.</p> <p>http://www.tek.com</p>
For other information	<p>In North America: 1-800-TEK-WIDE (1-800-835-9433) An operator will direct your call.</p>
To write us	<p>Tektronix, Inc. P.O. Box 1000 Wilsonville, OR 97070-1000</p>

Getting Started

This section contains set up and first time operating instructions for MTS 200 Series MPEG Test Systems. For information on generating and analyzing MPEG test streams, refer to the systems applications manuals. See page v for a list of the available manuals.

Unpacking the Test System

Table 1 lists the individual components of each MTS 200 Series test system. Verify that your system is configured properly. All components are shipped in the test system computer box, except for the monitor which shipped in its own container. If a component is missing, notify your Tektronix office or representative for a replacement.

NOTE. Save the original shipping box and all internal packaging; you must use the original box and packaging when returning your test system to Tektronix. In the event shipping is required for upgrade or repair, refer to the repackaging instructions beginning on page 51.

Table 1: MTS 200 Series test systems and standard accessories

Component	MTS 205	MTS 210 ¹	MTS 215
Compaq Proliant 1600 computer	•	•	•
with Data Store System installed		•	•
with Real-Time Analyzer circuit board installed	•		•
with VGA Video board installed	•	•	•
Tektronix 17 inch monitor, video cable, and manuals	•	•	•
Keyboard and mouse	•	•	•
Software Key (Sentinel SuperPro)	•	•	•
<i>MPEG Test System Software Version 2.5 Read This First Manual</i> , Tektronix part number 071-0237-0X	•	•	•
<i>MPEG Test System Deferred-Time Applications User Manual</i> , Tektronix part number 071-0078-0X		•	•
<i>Real-Time Analyzer User Manual</i> , Tektronix part number 071-0076-0X	•		•
<i>MTS 200 Series MPEG Test System Hardware Installation and Specifications Technical Reference</i> , Tektronix part number 071-0261-0X (this document)	•	•	•

Table 1: MTS 200 Series test systems and standard accessories (Cont.)

Component	MTS 205	MTS 210 ¹	MTS 215
MTS 200 Series Version 2.5 Installation Software CD ROM (backup disk), 063-3110-0X	●	●	●
MPEG-2 Elementary Streams CD ROM, 063-1914-0X		●	●
Windows NT Emergency repair disk, 063-2971-0X	●	●	●
Power cords, one each, system computer and monitor	●	●	●
SMB-to-BNC adaptors: three with 50 Ω cables, three with 75 Ω cables		●	●
One shielded 9-conductor cable ²		●	●
One shielded 25-conductor cable, 1 ft length ²			●
One shielded 25-conductor cable, 6 ft length ²	●	●	●
Compaq documentation and software backup disks	●	●	●
Windows NT software and documentation package	●	●	●

1 Includes Options 1A, 1G, and AG.

2 Use this cable to meet EMI requirements.

Installing the Test System

Installing the MTS 200 Series MPEG Test System involves selecting an installation site, attaching the computer tower feet and front door, and installing the input and output cabling. Once you have unpacked each item, assembling the test system requires only a few minutes.

Selecting an Installation Site

Before assembling the test system, select an appropriate installation site. As specified by Compaq, a good installation site includes the following features:

- Sturdy and level surface
- Adequate ventilation: at least 3.0 inches (7.6 cm) clearance at the front and rear of the system computer, additional rear clearance required for input and output connections
- Proper air conditioning
- Dedicated and properly grounded power circuit
- No heavy electrical equipment nearby
- Static electricity protection

Assembling the Test System



Following site selection, assemble the test system as described below.

WARNING. The test system weighs in excess of 65 lb (29.5 kg). Use caution when lifting or moving the test system.

1. Install the computer tower feet.
 - a. Carefully turn the computer over on its top.
 - b. Locate the computer feet in the shipping container.
 - c. For each of the four feet, insert the tabs into the mounting slots in the computer base as shown in Figure 1.
 - d. Insert a mounting screw through each foot into the computer base.
 - e. Tighten the mounting screw to secure each foot. Use a T-15 TORX tip screwdriver.
 - f. Turn the computer upright onto its feet.

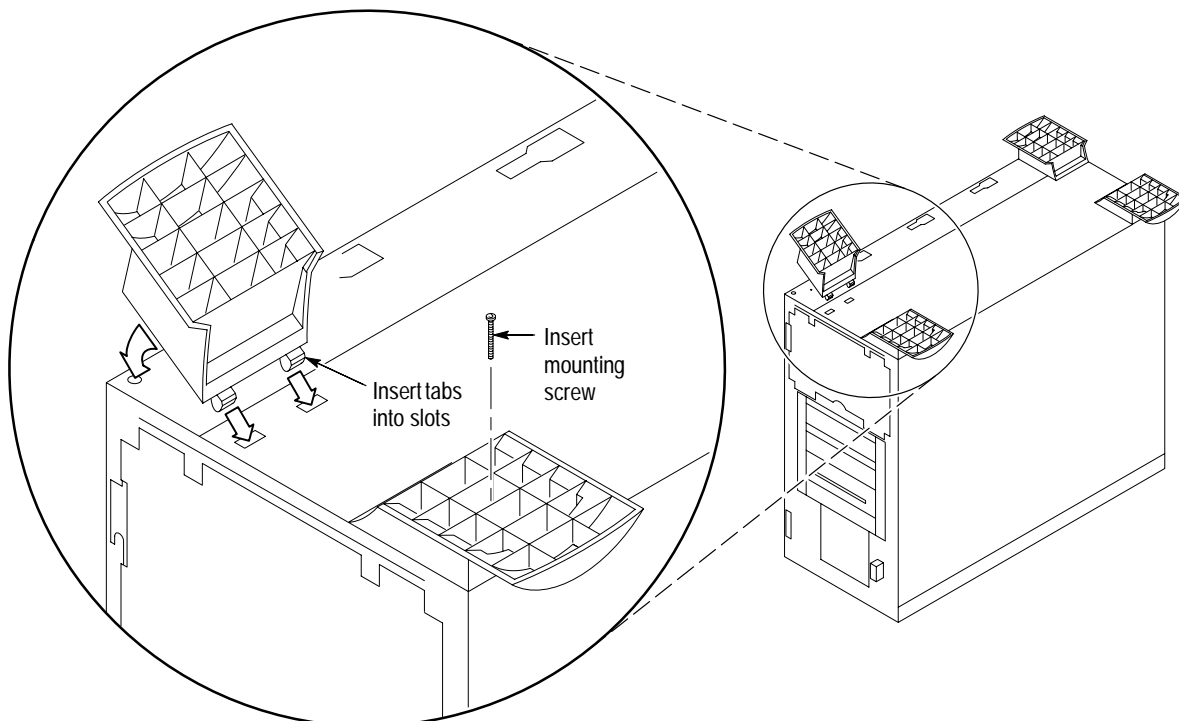


Figure 1: Installing the computer feet

2. Install the computer front door.
 - a. Locate the computer front door. On the right side of the door, insert the door hinges into the hinge slots in the computer chassis. See Figure 2.
 - b. Align both bottom hinge pins with the pin holes in the computer chassis.
 - c. Lower the hinge pins into the hinge pin holes and close the door.

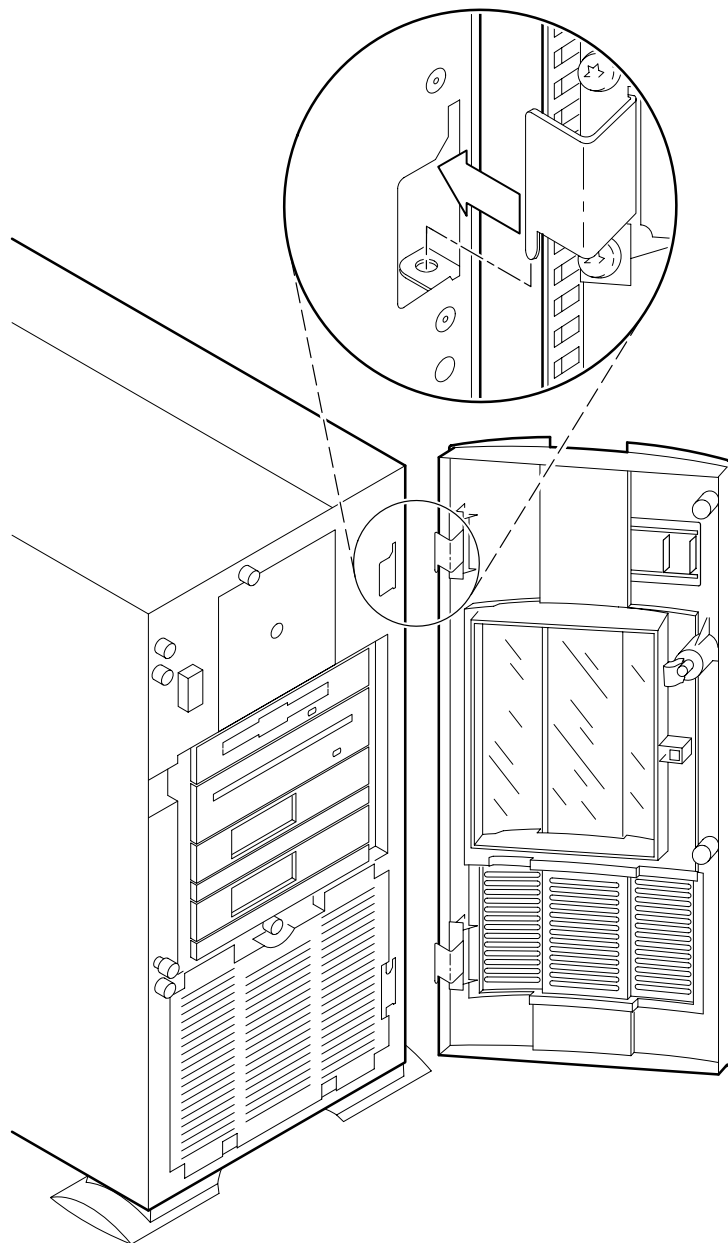


Figure 2: Installing the computer front door

3. Connect the keyboard to the rear panel keyboard port. See Figure 4.
4. Connect the mouse to the rear panel mouse port. See Figure 4.
5. Connect the monitor cable to the rear panel video port on the VGA graphics card. The graphics card occupies expansion slot 6 as shown in Figure 4. Do not use the Compaq built in video port; the built in video port is disabled.
6. Verify that the Software Key is installed on the rear panel Parallel port (the Software Key should already be installed); see Figure 4 for port location. MTS 200 Series software applications will not run without the Software Key installed; do not remove or misplace the Software Key.

To use the Parallel port with the Software Key installed, attach any parallel port cables directly to the Software Key. The Software Key does not interfere with parallel communications.

NOTE. To run MTS 200 Series applications, you must install the Software Key on the computer Parallel port. If you return the test system to a Tektronix Service Center for upgrade or repair, include the Software Key.

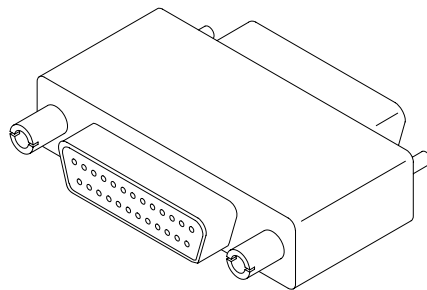


Figure 3: Software Key

7. If you intend to connect the MTS 200 Series MPEG Test System to a network, do so now. The Proliant 1600 system computer has both AUI and RJ45 ethernet ports. Neither ethernet port requires termination.
8. Connect the computer and monitor to a power source. Refer to *Supplying Power* on page 6.

NOTE. Although the MTS 200 Series MPEG Test System is based on a standard computer platform, do not install unauthorized expansion cards or use the test system for purposes other than those recommended by Tektronix. Doing so can cause your system to operate in an unexpected manner.

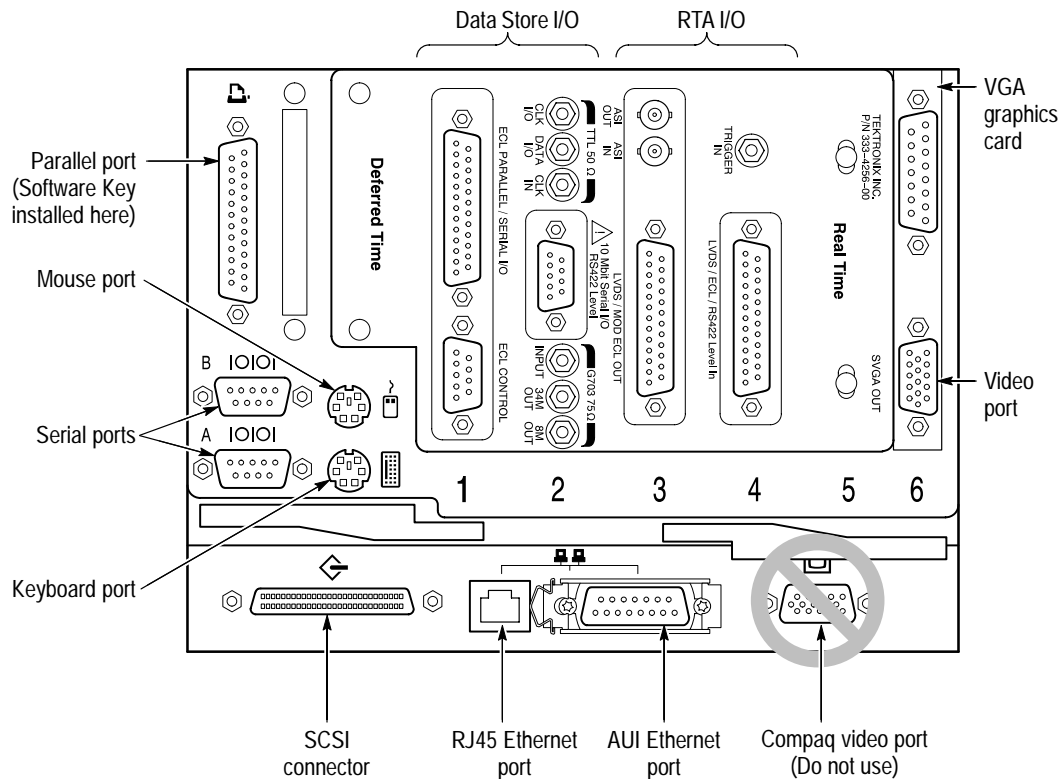


Figure 4: Computer rear view showing input and output connectors

Supplying Power

The MTS 200 Series system computer and monitor are designed to operate from a single-phase power source having one of its current carrying conductors at or near earth ground (the neutral conductor). Power sources that have both current carrying conductors live with respect to ground, such as phase-to-phase or multiphase systems, are not recommended. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation.



WARNING. The test system is designed for connection to an earth-grounded AC outlet. To avoid risk of electrical shock or equipment damage, do not disable the grounding plug.

Mains Voltage Range. You can power the test system computer and monitor from mains that supply between 100 VAC and 230 VAC without setting a voltage selection switch.






Mains Frequency. The test system computer and monitor operate on either 50 Hz or 60 Hz line frequencies.



CAUTION. To prevent damage, protect the system computer from power fluctuations and temporary interruptions with a regulating uninterruptible power supply (UPS). This device protects the hardware from damage caused by power surges and voltage spikes. In addition, it allows the system to operate temporarily during a power failure.

Power Cord Options. Unless a specific power cord option is ordered, the system computer and monitor come standard with a power cord for North American 60 Hz, 115 VAC supplies. Table 2 lists the power cord options.

Table 2: Power cord identification

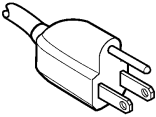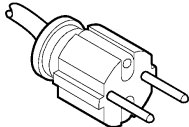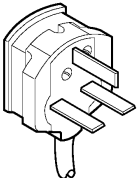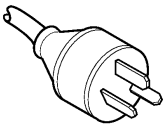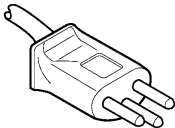Plug configuration	Normal usage	Option number
	North America 125 V/15A Plug NEMA 5-15P	Standard
	Europe 230 V	A1
	United Kingdom 230 V	A2
	Australia 230 V	A3
	Switzerland 230 V	A5

Connecting the Data Store System Input and Outputs

The Data Store system is an integral part of the MTS 210 and MTS 215; it enables transport stream capture and output at up to 60 Mbits/s.

Figure 5 shows the Data Store System input and output (I/O) connectors on the computer rear panel. A detailed description of each connector follows the illustration. For I/O port specifications, refer to the *Specifications* section beginning on page 33.

Use the I/O ports that best suit your operating environment and signal sources. To receive ASI input, use the optional D6002 DVB-PI adaptor. (Contact your Tektronix representative for ordering information.)

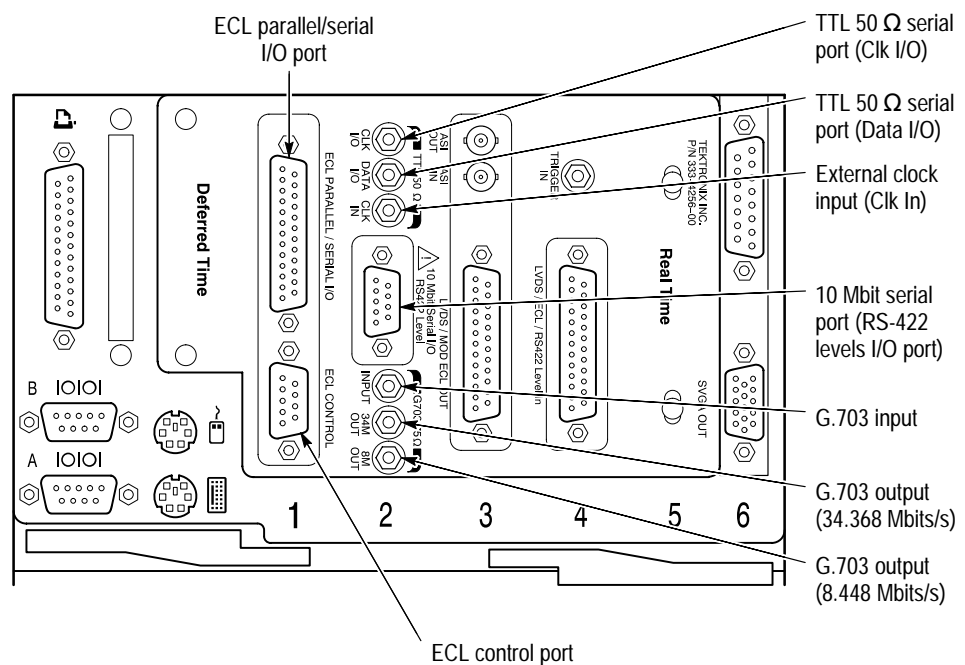


Figure 5: Data Store input and output ports (computer rear)

ECL Parallel/Serial I/O Port

The ECL Parallel/Serial I/O port receives and transmits MPEG-2 transport streams at ECL levels. The port is differential, bidirectional, and operates independently or in conjunction with the ECL Control port. The port transmits or receives either parallel or serial data depending on the Data Store Administrator application settings.

ECL Operating Modes. If the ECL Parallel/Serial I/O port is used independently of the ECL Control port, there are three basic operating modes:

- Slave acquisition mode. Captures input signals using the ECL Parallel/Serial I/O port clock signal as the timing source.
- Master generation mode. Outputs signals using the test system internal clock as the timing source.
- Master generation with external clock mode. Outputs signals using the external clock input (Clk In) as the timing source.

Using the ECL Parallel/Serial I/O port in conjunction with the ECL Control port provides the following additional operating modes:

- Master acquisition mode. Captures input signals using control signals from the ECL Control port to drive the signal source.
- Master acquisition with external clock mode. Same as above, but uses a timing signal from the external clock input (Clk In) as the timing source.
- Slave generation mode. Outputs signals using the ECL Control port inputs as the timing source.

NOTE. A “Master” generates the data transmission clock. A “Slave” returns an external clock as the source.

Pinouts. For pinouts of the ECL Parallel/Serial I/O port, see Tables 8 and 9 beginning on page 39.

ECL Control Port

Using the ECL Control port is optional. This bidirectional differential control port adds flexibility to the ECL Parallel and Serial Ports, providing three control signals and two more operating modes. For a pinout of the ECL Control port, see Table 10 on page 41.

G.703 Output (8.448 and 34.368 Mbit/s) and G.703 Input

The G.703 serial interface complies with the electrical characteristics of ITU-T Recommendation G.703 (HDB3 code) for 8.448 Mbit/s and 34.368 Mbit/s.

The G.703 port operates in the following modes:

- Acquisition mode. Locks to incoming the signal and is self clocking.
- Generation (internal clock source) MODE. Uses an internal clock source.

The G.703 serial interface uses three Data Store circuit-board mounted SMB connectors. One connector is a dedicated input for both bit rates. The other two

connectors are dedicated outputs, one for the 34.368 Mbit/s output and the other for the 8.443 Mbit/s output. To reduce spurious emissions, connect only the output being used.

10 Mbit Serial Port (RS-422 Levels I/O Port)

The 10 Mbit Serial port transmits and receives MPEG transport signals and includes bidirectional clocks and data pairs. The maximum operating frequency is 10 Mbit/sec. The port uses RS-422 voltage levels with a line-to-line input termination of 110 Ω . For a pinout of the 10MBit Serial port, see Table 14 on page 43.

The 10 Mbit Serial port uses the following signals:

- Data In and Data Out (MPEG serial bit streams).
- Clock In and Clock Out (continuous data transmission).

The 10 Mbit Serial port operates in the following modes:

- Acquisition mode. Captures an input signal using an external timing reference.
- Internal generation mode. Generates an output signal using the MTS 200 Series MPEG Test System internal clock as the timing reference.
- External generation mode. Generates an output signal using the Clock input as the timing reference.

Clock Input

The Clk In connector provides an optional timing input for the ECL Serial, ECL Parallel, TTL, and 10 Mbit Serial outputs. The input operates at a maximum frequency of 45 MHz.

TTL 50 Ω Serial Port (Data & Clock I/O)

The TTL 50 Ω Serial Port consists of dedicated clock and data inputs that transmit and receive at TTL levels. The Data signal is a serial bitstream that uses a continuous data transmission clock. The maximum operating frequency is 45 Mbits/s.

The TTL 50 Ω Serial Port operates in the following modes:

- Acquire mode. Captures an input signal.
- Internal Generation mode. Generates a signal locked to the internal clock.
- External Generation mode. Generates a signal locked to an external reference supplied by the Clock Input.

Data Store I/O Cables and Mating Connectors

The MTS 200 Series MPEG Test System includes adapters to connect the Data Store SMB connectors to standard BNC connectors. You may also need to

acquire or assemble other signal-connecting cables and adapters to install the test system in your facility.

Cable Lengths. Maximum cable length is a function of data rate, cable type, and ambient environment as summarized in Table 3. In general, low data rates tolerate long cable lengths better than high data rates. Low loss coaxial cable and low capacitance properly pair-twisted cable support longer transmission paths than do miniature coaxial cable or ribbon cable. Induced RF noise can further limit usable cable length.

The only test system ports designed for data transmission are the G.703 I/O ports. All other ports are intended for short-range interconnects. With most ports, you must control cable delay matching to maintain clock-to-data timing margins or data integrity will suffer.

Table 3: Estimated maximum cable lengths

Port	Rate, Mbits/s	Maximum length	Cable type	Comments
G.703	8.448	275 meters	Belden 8281	4 dB atten at 4.224 MHz
G.703	34.368	125 meters	Belden 8281	4 dB atten at 17.18 MHz
10 MBit (RS422)	1	100 meters	24 AWG unshielded twisted pair	Ref. ANSI/TIA/EIA-422-B-1994
10 MBit (RS422)	10	15 meters	24 AWG unshielded twisted pair	Ref. ANSI/TIA/EIA-422-B-1994
TTL	10	50 meters	RG58 type	Calculated Value
TTL	50	25 meters	RG58 type	Calculated Value
ECL Parallel	1	50 meters	Belden 8112	Calculated Value
ECL Serial	45	5 meters	Belden 8112	Calculated Value

Adapters. The MTS 200 Series MPEG Test System includes six SMB-to-BNC adapter cables. Three of the adapter cables match the impedance of the G.703 75 Ω inputs and outputs. The other three match the impedance of the TTL 50 Ω Serial Port (CLK I/O, DATA I/O, and CLK IN).

NOTE. Do not leave SMB-to-BNC adapter cables on unused G.703 outputs. Doing so can cause the test system to exceed EMC emission requirements.

Connecting the Real-Time Analyzer (RTA) Input and Outputs

MTS 205 and MTS 215 test systems include the Real-Time Analyzer. Figure 6 shows the Real-Time Analyzer input and output (I/O) connectors on the computer rear panel. A detailed description of each connector follows the illustration. For I/O port specifications, refer to the *Specifications* section beginning on page 45.

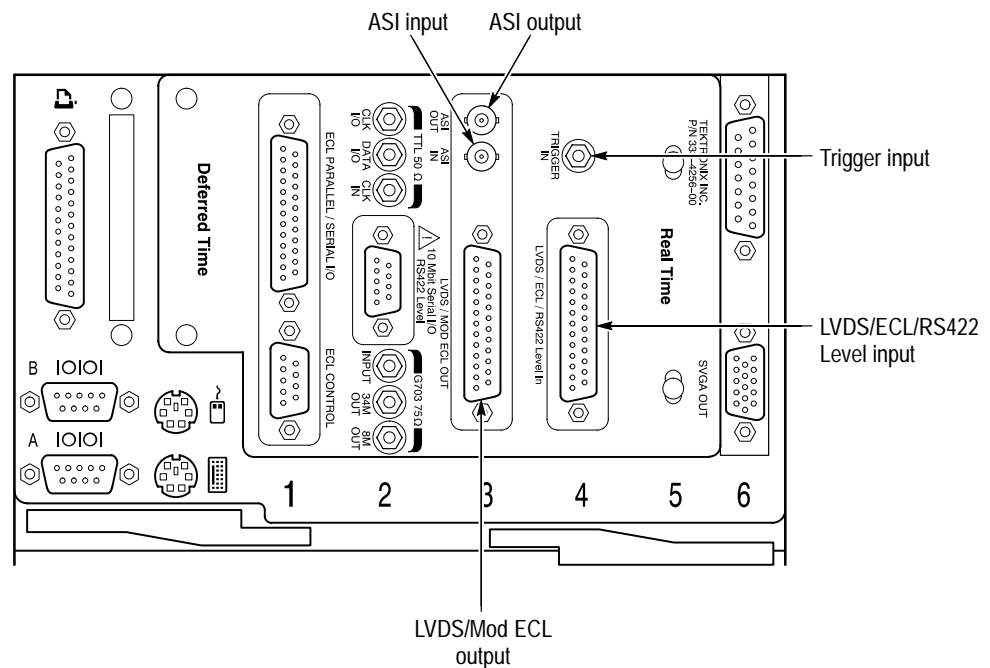


Figure 6: Real-Time Analyzer input and output ports (computer rear)

Input You must provide input to the Real-Time Analyzer to monitor an MPEG-2 or DVB bitsream. The RTA accepts LVDS or ECL parallel input or ASI serial input. In the standard configuration, either LVDS or ECL parallel input is accepted as the default. If you provide serial input, you must change the software configuration before monitoring an input data stream. To change the software configuration, refer to *Monitoring an Input Stream* in the *Operating Basics* section of the *MTS 200 Series Real-Time Analyzer User Manual*.

Output to the Data Store System (MTS 215 only)

To capture and save portions of the input bitstream on the Data Store disks, connect the parallel RTA output to the parallel Data Store input as shown in Figure 7. Use the 25-conductor straight-through shielded cable provided with the test system. From the Settings/Hardware Configuration menu, select **Modified ECL**. For further details, see *Capturing Input Streams* in the *Operating Basics* section of the *MTS 200 Series Real-Time Analyzer User Manual*.

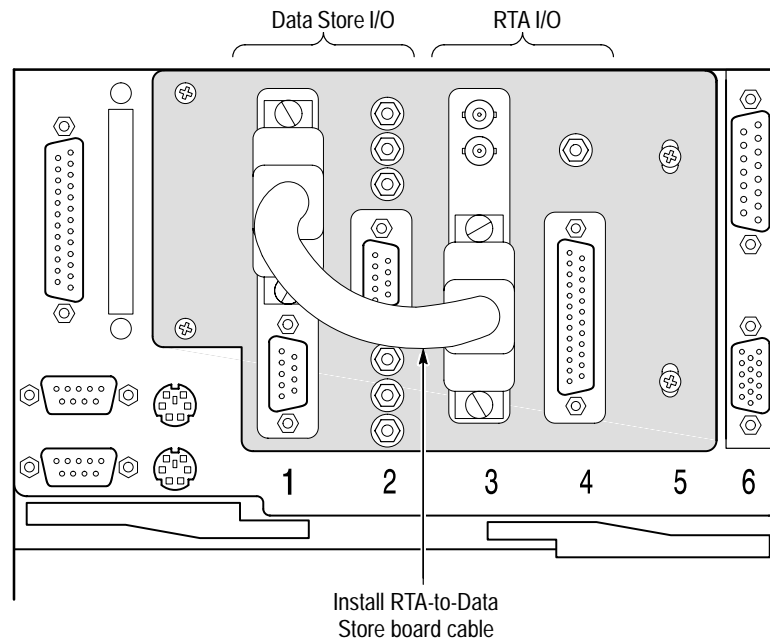


Figure 7: RTA output to Data Store input connection

Output to Other Equipment

The Real-Time Analyzer can output all or part of the input stream through parallel and serial (ASI) connectors.

Parallel Output. Real-Time Analyzer parallel output is active only when the RTA is running and analysis is occurring. The output level can be either LVDS or modified ECL; refer to Table 18 on page 46 for parallel output characteristics.

Parallel output can be filtered by the Real-Time Analyzer software. For complete information, refer to the *MTS 200 Series Real-Time Analyzer User Manual*.

Serial (ASI) Output. With data input through the ASI connector, the serial output is continuously active. With a parallel input, the serial output is disabled when Data Storage through the parallel output occurs.

The Serial output stream is always equivalent to the input stream and is not affected by selections made on the Filtering Configuration tab of the Real-Time Analyzer **Settings** window.

Refer to Table 20 on page 46 for serial output characteristics.

Trigger Input

The trigger input accepts a TTL level (0 to +5 V) signal you can use to control capture of the Real-Time Analyzer input stream to the Data Store system (MTS 215 only). You can configure the system to start/stop data capture on either the rising edge (low to high transition) or the falling edge (high to low transition) of the trigger signal. Refer to the *Real-Time Analyzer User Manual* for further information.

First Time Operation

To power on the computer following installation, slide the power switch cover plate to the right and press the power switch.

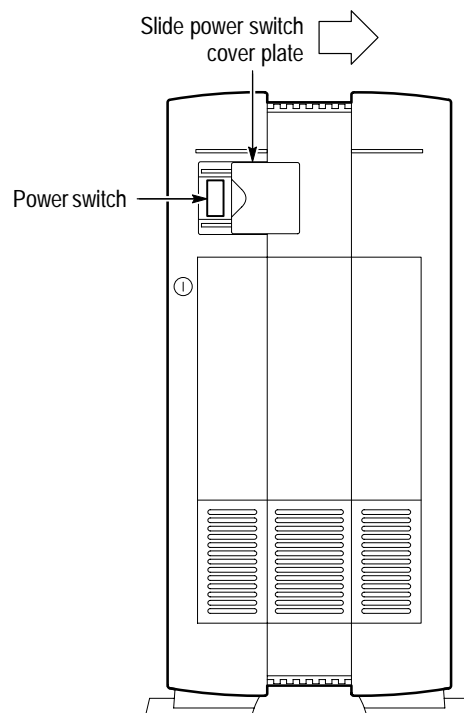


Figure 8: Computer power switch

The Windows NT initialization process takes up to two minutes. Under normal circumstances, no action is required until the **Begin Logon** message appears.

(For further information on the Windows NT initialization process, see the Windows NT documentation included with the test system.) When the **Begin Logon** message appears, simultaneously press the **CTRL + ALT + DELETE** keys to open the **Logon Information** dialog box.

Logging On

To log on to the test system, enter **MTS100** in the **User name** box, leave the **Password** box blank, and press **ENTER** (these are the default values set at the factory). Use this logon for most of your work.

There are two other logons and passwords available. The first is **guest** with no password. This level has only limited access to files and applications. The second level is **administrator** with **MPEG2** as the password. This user has administrator privileges. You must use this logon when performing all software upgrades.




CAUTION. *The administrator user logon includes all privileges. If you are connected to a network, you may have special privileges within the network. Do not use this logon to perform normal operations.*

Changing the Passwords. You can change passwords at this time. See the Windows NT documentation for instructions. If you change any password, be sure to create a new emergency repair disk as explained in the *Software Repair* appendix of the *MTS 200 Series Real-Time Analyzer User Manual*.

Starting MTS 200 Series Applications

When logon is complete, the **Tektronix MPEG Test System** program group window appears as shown below. Double-click the appropriate application icon to begin your analysis.

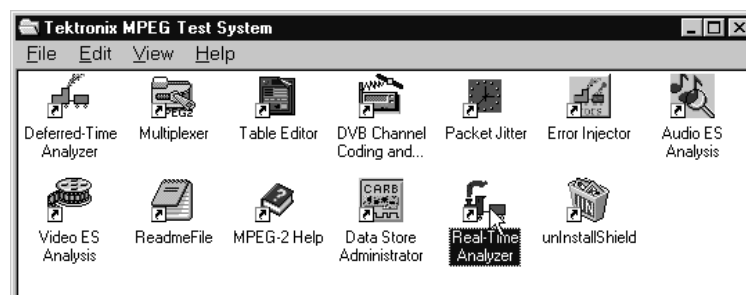

NOTE. *The above example shows the MTS 215 program group. The MTS 205 and MTS 210 test system program groups do not contain all application icons.*

Exiting MTS 200 Series Applications

To exit an MTS 200 Series application, select **Exit/Quit** from the File menu or click the close button in the upper-right corner of the application window.




The current configuration is preserved and used the next time you run the application.

Shutting Down the Computer

To avoid loss of data and possible problems during subsequent Windows NT initialization, always shut down Windows NT before switching the computer power off. To shut down Windows NT, select **Shut Down** from the Start menu.



In the **Shut Down Windows** dialog box, select **Shut down the computer?** and then click **Yes**. After a few seconds, the **Shutdown Computer** window appears with the message "It is now safe to turn off your computer." You can now power off the computer.

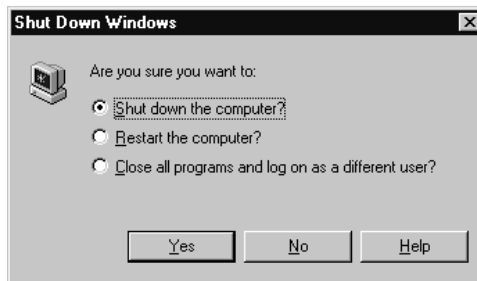

CAUTION. Do not switch computer power off before the message "It is now safe to turn off your computer" appears. Doing so can result in lost data and difficulty in restarting Windows NT.

Functional Check

Use the procedures in this section to check the basic operation of the MTS 200 Series Data Store System and Real-Time Analyzer. These procedures check instrument functionality only; specifications are not verified. To verify system performance to warranted specifications, refer to the Performance Verification section of the *Tektronix MPEG Test System Compaq Proliant Platform Service Manual*, Tektronix part number 071-0152-0X.

Data Store System

Use the following procedure to check the Data Store System basic function. You need an oscilloscope, two BNC terminators, and the standard accessories adapter cables to perform this procedure.

Procedures to check the Real-Time Analyzer basic function begin on page 24.

Test Equipment

Table 4 lists the test equipment needed to perform the Data Store System functional check.

Table 4: Test equipment

Description	Minimum requirements	Example
Oscilloscope	Capable of measuring 6 V amplitude and 1.4 ns rise time	
Adapter cable, 50 Ω	SMB-to-BNC	Tektronix part number 174-3578-0X
Adapter cable, 75 Ω	SMB-to-BNC	Tektronix part number 174-3579-0X
Terminator, 50 Ω	BNC feedthrough	Tektronix part number 011-0049-0X
Terminator, 75 Ω	BNC feedthrough	Tektronix part number 011-0103-0X

- Procedure**
1. Connect the test equipment as shown in Figure 9.
 2. Power up and logon to the test system. Follow the instructions on page 14.


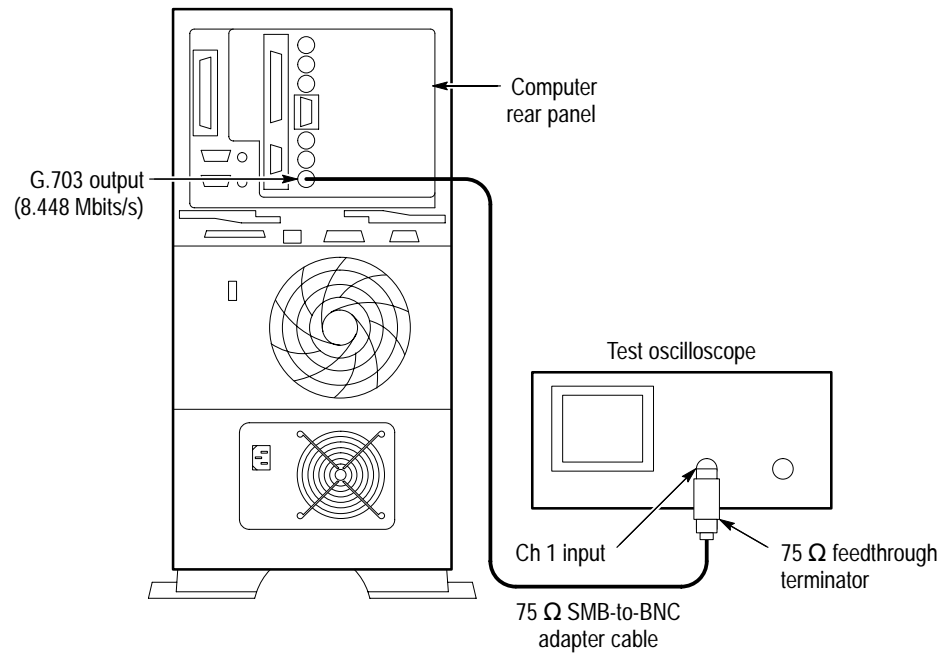


Figure 9: Initial connections for the Data Store functional check

3. Once you have correctly logged on, double-click the **Tektronix MPEG T...** icon in the main window.
4. Double-click the **Data Store Administrator** icon in the **Tektronix MPEG Test System** program window to start the application.

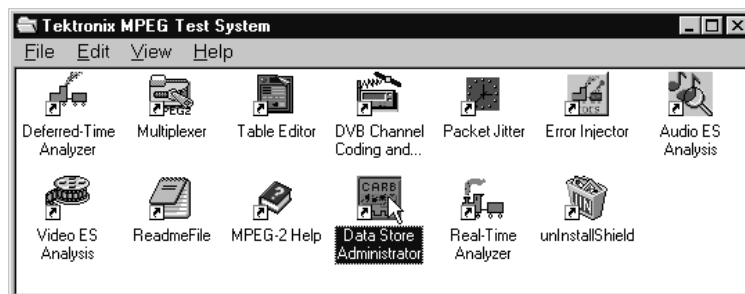

5. Set up the Data Store Administrator as follows:
 - a. Click the **G** (Generate) toolbar button.

- b. In the resulting **GENERATION** dialog box, select any valid Data Store file as the Source.
 - c. Select the **Loop** option.
 - d. In the **Interface** section of the dialog box, make the following selections:
 - Protocol = Master.
 - Port = G703
 - Output clock = 8.448 Mbits.
 - e. Click **Start**.
6. Trigger the oscilloscope.
 7. Verify a waveform frequency of approximately 4.224 MHz, an amplitude of approximately 5 volts, and a rise time of approximately 4 ns. See Figure 10 for the location of the measurement points in the waveform.
 8. Move the output cable to the G.703 34.368 M output as shown in Figure 10.

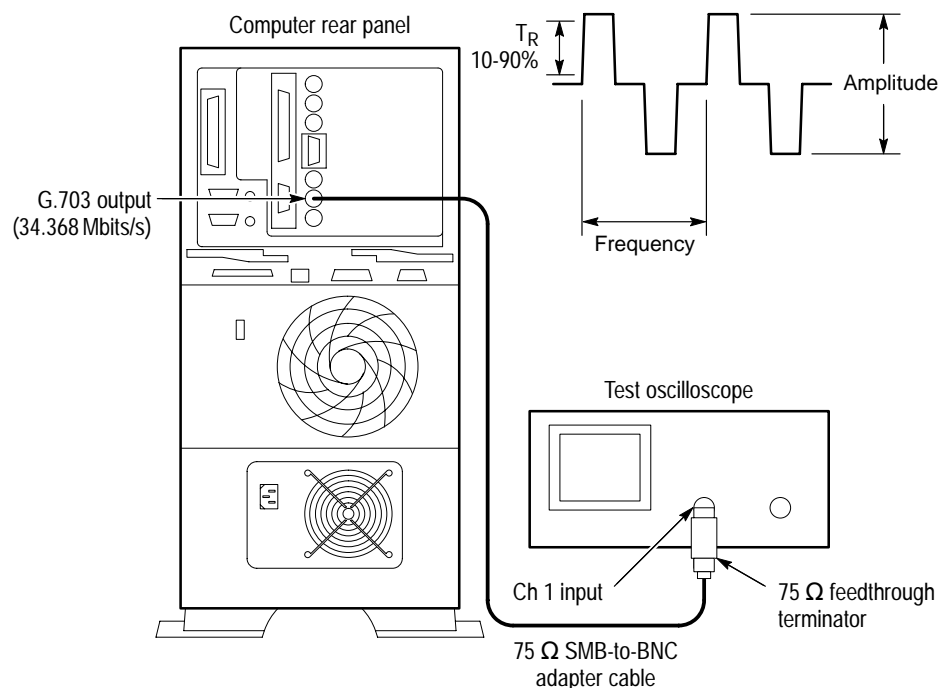


Figure 10: Setup for measuring the G.703 34.368 Mbit/s output

9. Set up the Data Store Administrator as follows:
 - a. Click the **Stop** (red hand) toolbar button.
 - b. Click the **G** (Generate) toolbar button.
 - c. In the resulting **GENERATION** dialog box, select any valid Data Store file as the Source.
 - d. Select the **Loop** option.
 - e. In the **Interface** section of the dialog box, make the following selections:
 - Protocol = Master.
 - Port = G703
 - Output clock = 34.368 Mbits
 - f. Click **Start**.
10. Trigger the oscilloscope.
11. Verify a waveform frequency of approximately 17.2 MHz, a peak-to-peak amplitude of approximately 2.3 volts, and a rise time of approximately 4 ns. See Figure 10.
12. Remove the 75 Ω SMB-to-BNC adapter cable from the oscilloscope and the test system G703 34.368 M Out connector.
13. Connect a 50 Ω SMB-to-BNC adapter cable from the TTL 50 Ω Clock I/O Port, through a 50 Ω feedthrough terminator, to the oscilloscope input. See Figure 11.

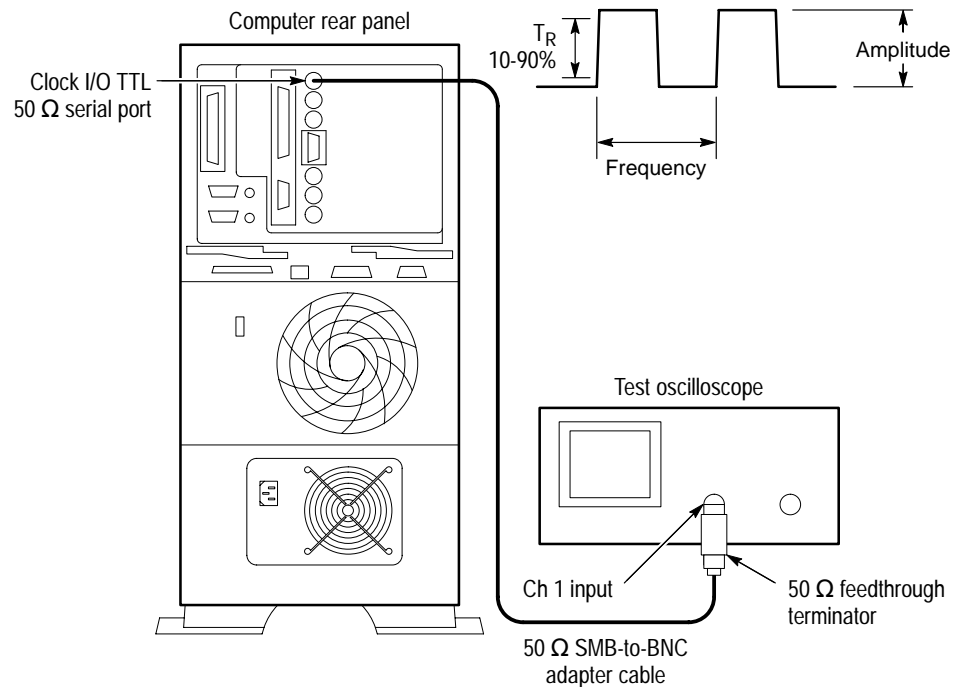


Figure 11: Setup for measuring the TTL 50 ohm clock I/O port

14. Set up the test system as follows:

- a. Click the **Stop** (red hand) toolbar button.
- b. Click the **G** (Generate) toolbar button.
- c. In the resulting **GENERATION** dialog box, select any valid Data Store file as the Source.
- d. Select the **Loop** option.
- e. In the **Interface** section of the dialog box, make the following selections:
 - Protocol = Master
 - Port = TTL
 - Output clock = PLL
 - Frequency = 1,000,000 Bits/s
- f. Click **Start**.

15. Trigger the oscilloscope.
16. Verify a waveform frequency of approximately 1 MHz, an amplitude of approximately 3.0 volts, and a rise time of approximately 2.0 ns. See Figure 11.
17. Move the test system output cable to the TTL 50 Ω Data I/O Port. See Figure 12.

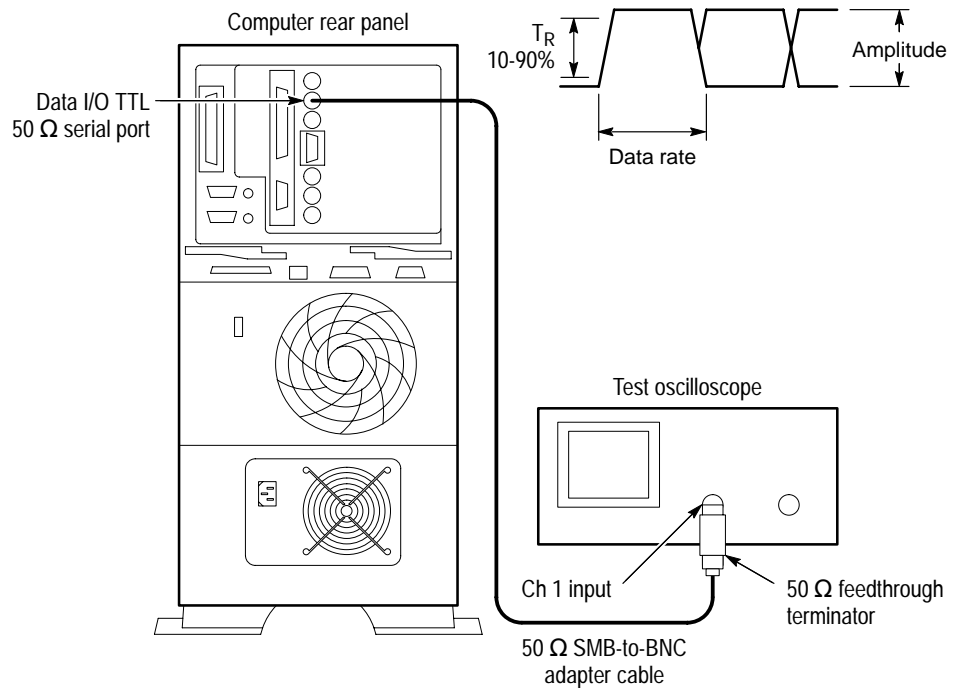


Figure 12: Setup for measuring the TTL 50 ohm data I/O port

18. Set up the test system as follows:
 - a. Click **Start**.
 - b. Click the **Stop** (red hand) toolbar button.
 - c. Click the **G** (Generate) toolbar button.
 - d. In the resulting **GENERATION** dialog box, select any valid Data Store file as the Source.
 - e. Select the **Loop** option.

f. In the **Interface** section of the dialog box, make the following selections:

- Protocol = Master
- Port = TTL
- Output clock = PLL
- Frequency = 45,000,000 Bits/s

g. Click **Start**.

19. Trigger the oscilloscope on the plus slope.

20. Verify a waveform amplitude of approximately 3.0 volts, a data rate of 45 MHz, and a rise time of approximately 2.0 ns. See Figure 12.

21. Move the test system output cable to the TTL 50 Ω Clock I/O Port as shown in Figure 11.

22. Trigger the oscilloscope.

23. Verify a waveform amplitude of approximately 3.0 volts, frequency of 45 MHz, and rise time of approximately 2.0 ns. See Figure 11.

24. In the Data Store Administrator, click the **Stop** (red hand) toolbar button.

This completes the Data Store System functional check.

Real-Time Analyzer

Use the following procedure to check the MTS 200 Series Real-Time Analyzer basic function. To perform this procedure on an MTS 205, you need an additional test system such as an MTS 210, MTS 215, or another MPEG-2 signal source.

Overview and Preparation

To check the function of the Real-Time Analyzer, use the Multiplexer application to create a transport stream file, output that file with the Data Store Administrator, and confirm that the Real-Time Analyzer shows a correct Program Allocation view of the stream.

To check an MTS 215, connect the parallel Data Store output to the parallel RTA input (if not already installed) as shown in Figure 13. Use the 25-conductor straight-through shielded cable provided with the test system (Tektronix part number 174-3799-0X). You can then generate and receive the test stream with a single instrument.

To check an MTS 205 you need an external test stream source, such as a Tektronix MPEG Test System MTS 100, MTS 210, or MTS 215, that can multiplex and generate the appropriate output stream. Connect the source machine Data Store output to the RTA input of the MTS 205; then use the source machine to create and output the test stream.


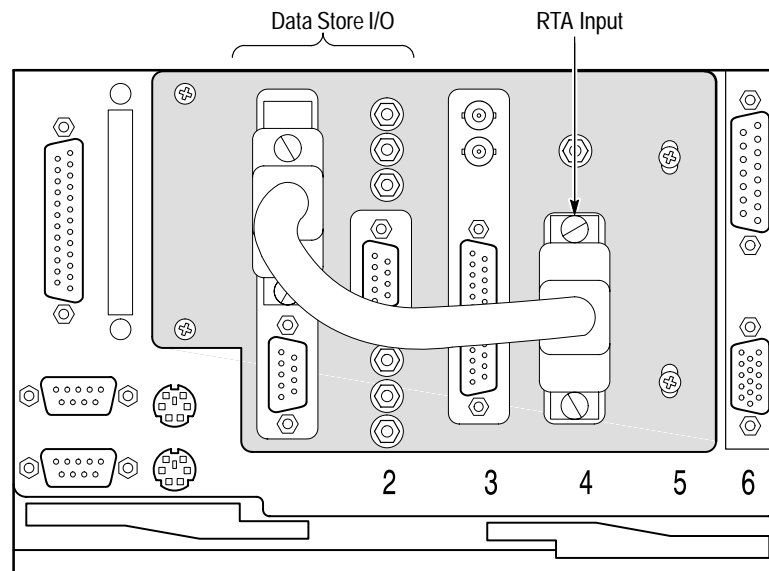


Figure 13: Connecting the MTS 215 parallel Data Store output to the parallel RTA input


Create a Transport Stream

Create a transport stream and save it on the Data Store disks with the following procedure.


1. Power up and logon to the test system. See the instructions on page 14.
2. Once you have correctly logged on, double-click the **Tektronix MPEG T...** icon in the main window.
3. Double-click the **Multiplexer** icon in the Tektronix MPEG Test System program group to start the application.

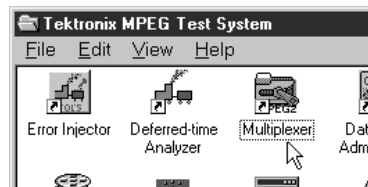


4. Choose **New** from the Multiplexer File menu to open the **New configuration file** window.

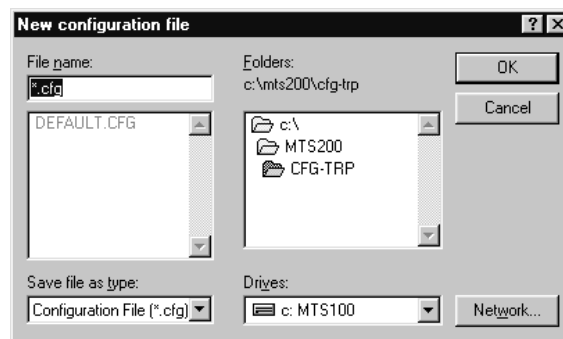

5. Enter **test** in the **File Name** text box (the *.cfg extension is added automatically) and click **OK**. The Multiplexer application displays the default configuration hierarchy.

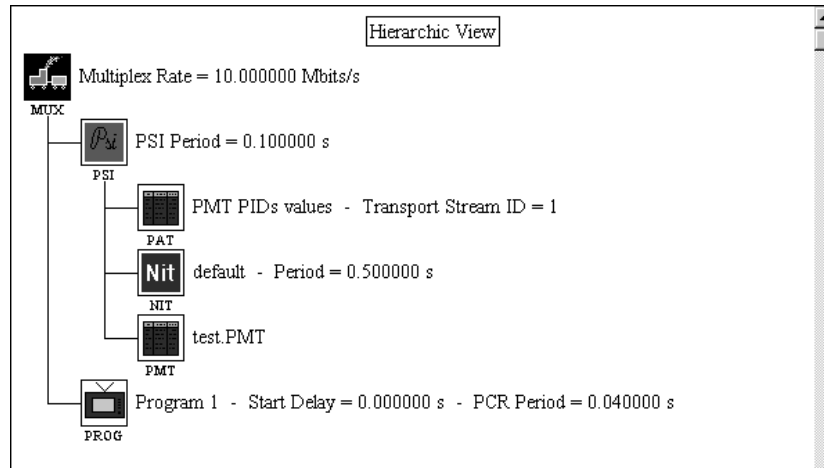

6. Click the **Add (+)** toolbar button to add a second program (PROG) icon to the hierarchy.
7. Double-click the **MUX** (multiplex) icon and select **Oscillator 34.368 MHz** in the resulting **Multiplex Parameters** window.

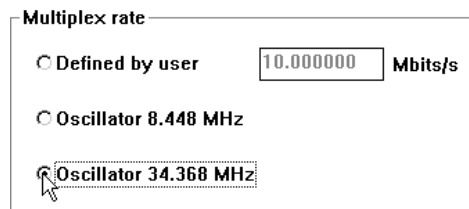


8. Click **OK** to close the **Multiplex Parameters** window.
9. Select (highlight) the **Program1** icon and then click the **Add (+)** toolbar button.

- Click **OK** in the resulting **Stream to add** window to add a video stream icon to the program hierarchy.




- Click the **Add** button again and select **Audio** in the **Stream to add** window; then click **OK** to add an audio stream icon to the first program hierarchy.

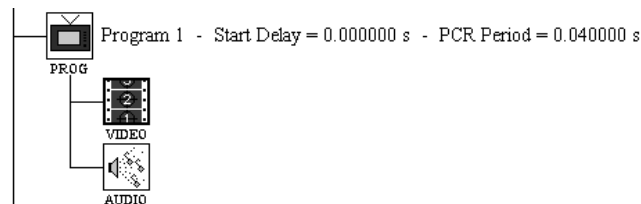

- Double-click the program **1 VIDEO** icon; a **Video Stream** window opens.
- Click the **Browse** button and then enter **525\mobl_060.mp2** in the **File name** box of the resulting **Video Stream Selection** window.
- Click **OK** to select the file and close the selection window; click **OK** again to close the **Video Stream** window.
- Double-click the program **1 AUDIO** icon; an **Audio Stream** window opens.
- Click the **Browse** button and select the file **15KZ_192.MP2** from the resulting **Audio Stream Selection** window.

17. Click **OK** to first close the **Audio Stream Selection** window and then the **Audio Stream** window. The program 1 hierarchy should now show the selected video and audio files.

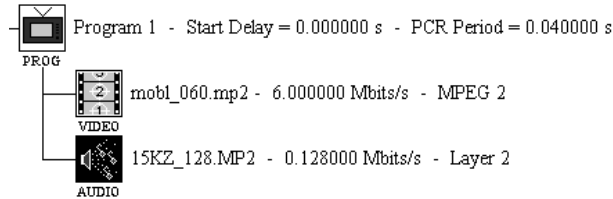


18. Use the above procedure (steps 9 through 17) to add a video stream and audio stream to program 2. Attach the video stream **625mobl_060.mp2** to the VIDEO icon and attach the audio stream **15KZ_256.mp2** to the AUDIO icon.
19. Select **Go** from the Multiplex menu and enter **c:\test.trp** in the **File name** box of the resulting **Multiplex Output File** window. Click **OK** to begin multiplexing the test.trp file.
20. When the process is complete, click **OK** in the resulting **Information dialog** box and then exit the Multiplexer application (select **Exit** from the File menu).


Output the Stream

Configure the Data Store system and output test.trp with the following procedure.

1. Double-click the **Data Store Administrator** icon in the Tektronix MPEG Test System program group to start the Data Store Administrator application.
2. Click the **W** command button to open the **File Write to CARB** dialog box.
3. Browse to and select **c:\test.trp** to write to the Data Store disks. By default, the <CARB file name> is test.trp.

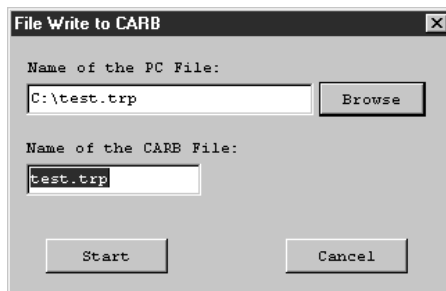

4. Click **Start** to copy the file from the system disk to the Data Store disks; then click **OK** when prompted to acknowledge transfer completion.
5. Select (highlight) **test.trp**, which is the last file listed in the SINGLE SHOT PARTITION portion of the **File information** list.
6. Click the **G** toolbar button to open the **GENERATION** window.
7. Make the following selections and settings as necessary:
 - Loop selected
 - Board file = test.trp
 - Protocol = Master
 - Port = // ECL
 - Output clock = PLL
 - Frequency = 34,368,000 Bits/s
 - Control signals selected
 - Nr useful bytes = 188
 - Stuffing byte (hexa) = FF
 - Synchro. signal size (bytes) = 1

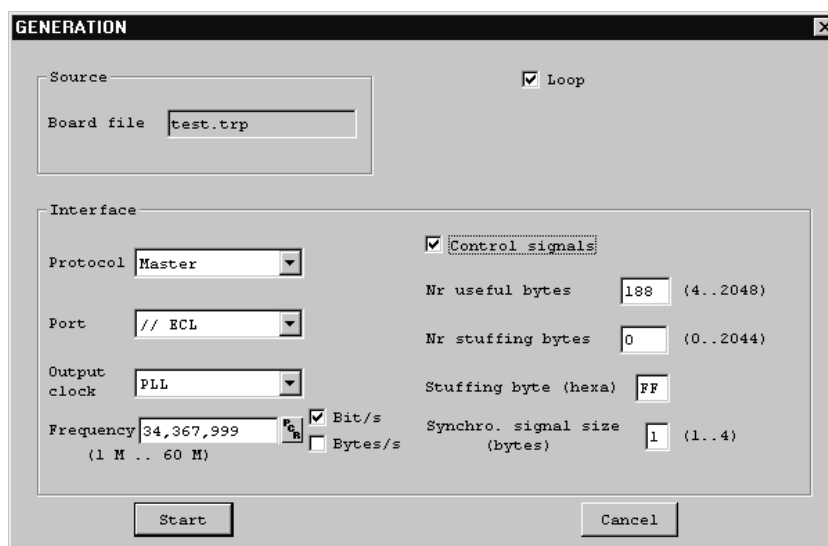


8. Click **Start** to begin generating test.trp.
9. Minimize the Data Store Administrator application.

Analyze the Stream

Start the Real-Time Analyzer application and confirm it correctly identifies the contents of test.trp.

1. Double-click the **Real-Time Analyzer** icon in the Tektronix MPEG Test System program group to start the RTA.
2. Select **Restore standard** from the RTA Configuration menu; then click **OK** in the resulting dialog box to confirm your choice.
3. Click the **Start** (green traffic light) toolbar button to begin analysis.
4. Press **F10**. After a second or two, the application window should resemble the following screen capture.

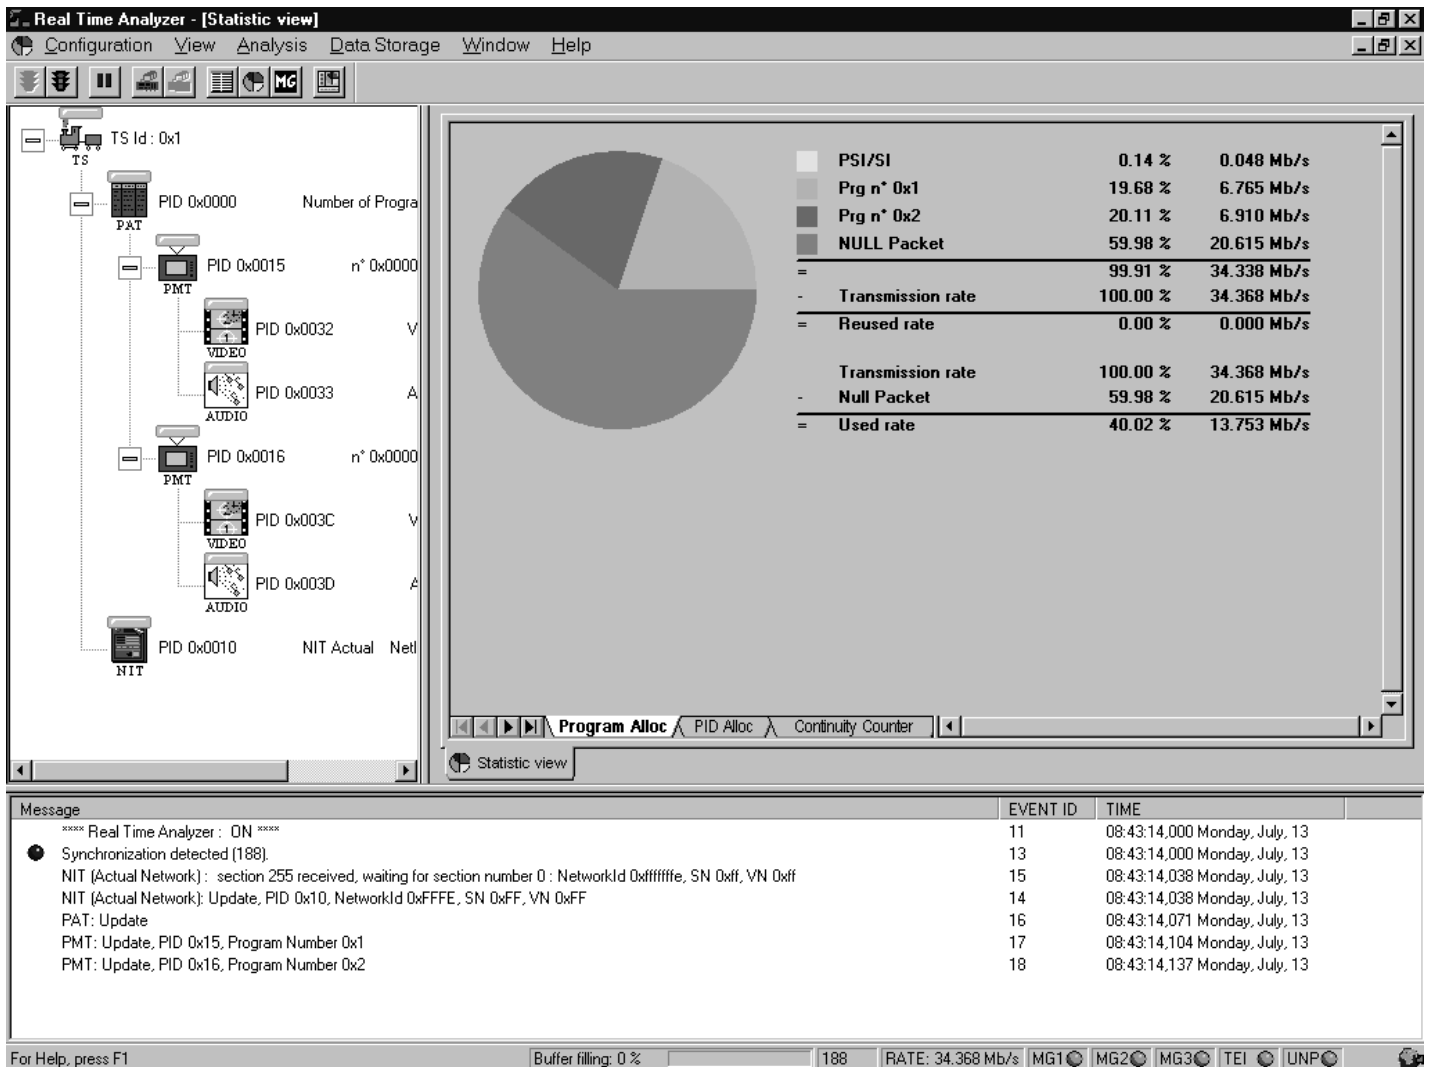

5. Confirm that the Program Allocation pie chart correctly shows two program slices. (The PSI slice is too small to display.)
6. Confirm that additional error messages appear when the end of the file is reached, approximately once every 15 seconds.
7. Confirm, after the Data Store system completes at least one loop, that the program 1 transport rate settles at approximately 6.78 Mbits/s, or almost 20% of the transmission rate.

If the analyzer successfully checks test.trp, proper function of the Real-Time Analyzer is confirmed. If the program allocation display does not show the pie chart or report transmission rates correctly, switch the test system off and verify that the RTA board is firmly seated in the EISA bus connector (slot 4 of the computer card cage).

After a successful functional check, exit the Real-Time Analyzer and the Data Store Administrator, delete test.trp from the c:\ (root) directory, and shut down the computer.

Specifications

This section lists the electrical, environmental, and physical specifications of the MTS 200 Series MPEG Test System. All specifications are guaranteed unless labeled “typical.” Typical specifications are provided for your convenience and are not guaranteed. Electrical characteristics apply to systems operating within the environmental conditions specified in Table 23 on page 48.

To verify Data Store system performance, use the procedures in the performance verification section of the *MPEG Test System Service Manual*, an optional accessory. Contact your Tekronix representative for ordering information.

Data Store System Electrical Characteristics

Tables 5 through 15 list the electrical characteristics of the MTS 200 Series MPEG Test System Data Store I/O and control ports.

Table 5: G.703 — 8.448 MHz

Characteristic	Description	Supplemental information
Standards conformance		ITU-CCITT G.703, G.823
Connector		SMB
Line encoding		HDB3
Serial bit rate	8.448 Mbits/s ± 10 ppm	
Generation/acquisition test	Error free	Tested with a 10 Mbyte file (within the constraints of synchronization)
Input voltage levels		Standard level within 0 to 4 dB cable attenuation at one-half clock
Standard		Mark from 2.033 V to 2.607 V Space from -0.237 to $+0.237$ V
Return loss (75 Ω)		211 kHz to 422 kHz: 12 dB 422 kHz to 8.448 MHz: 18 dB 8.448 to 12.672 MHz: 14 dB
Connector		Male SMB shared with 34.36 Mbit input
Jitter tolerance		20 Hz to 400 Hz: 177 ns peak-to-peak 3 kHz to 400 kHz: 23.6 ns peak-to-peak 400 Hz to 3 kHz: log prorated
Output		
Pulse width		59 ns nominal
Pulse “mark” amplitude	2.37 V ± 0.237 V	
No-pulse “space” voltage	0 ± 0.237 V	

Table 5: G.703 — 8.448 MHz (cont.)

Characteristic	Description	Supplemental information
Pulse shape		Conforms to 8.448 MHz Pulse Mask G.703 Figure 16, as shown in Figure 14 below.
Required receiver termination		75 Ω nominal resistive
Jitter		15 ns peak-to-peak with a 20 Hz lower cutoff and a 400 kHz upper cut-off filter 5 ns peak-to-peak with a 3 kHz lower cutoff and a 400 kHz upper cut-off filter Allows a cascade of ten different regenerators before system limit is reached
Connector		Male SMB
Return loss		211 kHz to 422 kHz: 12 dB 422 kHz to 8.448 MHz: 18 dB 8.448 to 12.672 MHz: 14 dB

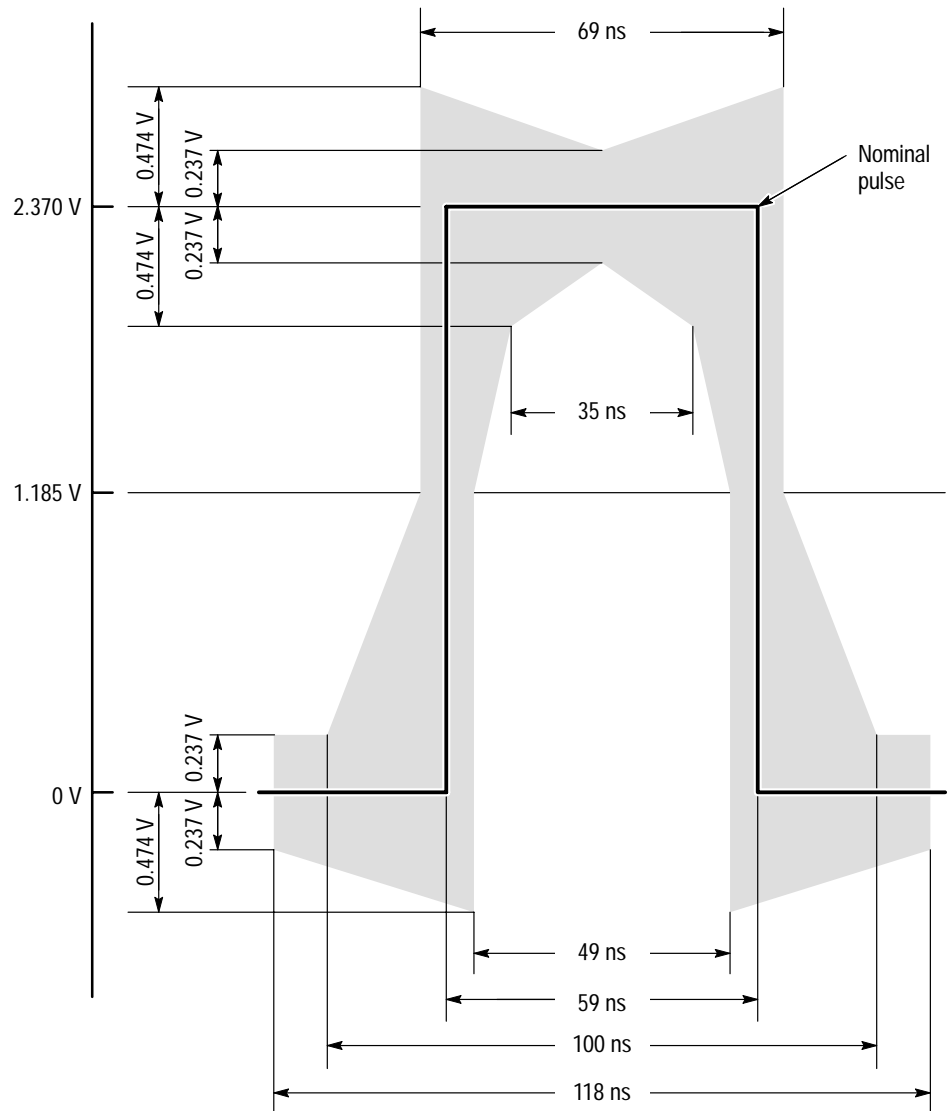


Figure 14: Pulse specification for G.703 8.448 MHz pulse

Table 6: G.703 — 34.368 MHz

Characteristic	Description	Supplemental information
Standards conformance		ITU-CCITT G.703, G.823
Connector		SMB
Line encoding		HDB3
Generation/acquisition test	Error free	Tested with a 10 Mbyte file (within the constraints of synchronization)
Serial bit rate	34.368 Mbits/s \pm 20 ppm	
Input voltage levels		Standard level within 0 to 4 dB cable attenuation at 1/2 clock
Standard		Mark from 0.9 V to 1.1 V Space from -0.1 V to +0.1 V
Return loss (75 Ω)		860 kHz to 1.72 MHz: 12 dB 1.72 MHz to 34.368 MHz: 18 dB 34.368 to 51.55 MHz: 14 dB
Connector		Male SMB (shared with the 8 Mbit input)
Jitter tolerance		100 Hz to 1 kHz: 43.7 ns peak-to-peak 10 kHz to 800 kHz: 4.37 ns peak-to-peak 1 kHz to 10 kHz: log prorated
Output		
Pulse width		14.5 ns nominal
Pulse mark amplitude	1.0 V \pm 0.1 V	
No-pulse space voltage	0 \pm 0.1 V	
Pulse shape		Conforms to 34.368 MHz Pulse Mask G.703 Figure 17, as shown in Figure 15 below.
Required receiver termination		75 Ω nominal resistive
Jitter		10 ns peak-to-peak with a 100 Hz lower cutoff and a 800 kHz upper cut-off filter 2.45 ns peak-to-peak with a 10 kHz lower cutoff and a 800 kHz upper cut-off filter Allows a cascade of ten different regenerators before system limit is reached
Return loss		860 kHz to 1.72 MHz: 12 dB 1.72 MHz to 34.368 MHz: 18 dB 34.368 MHz to 51.55 MHz: 14 dB

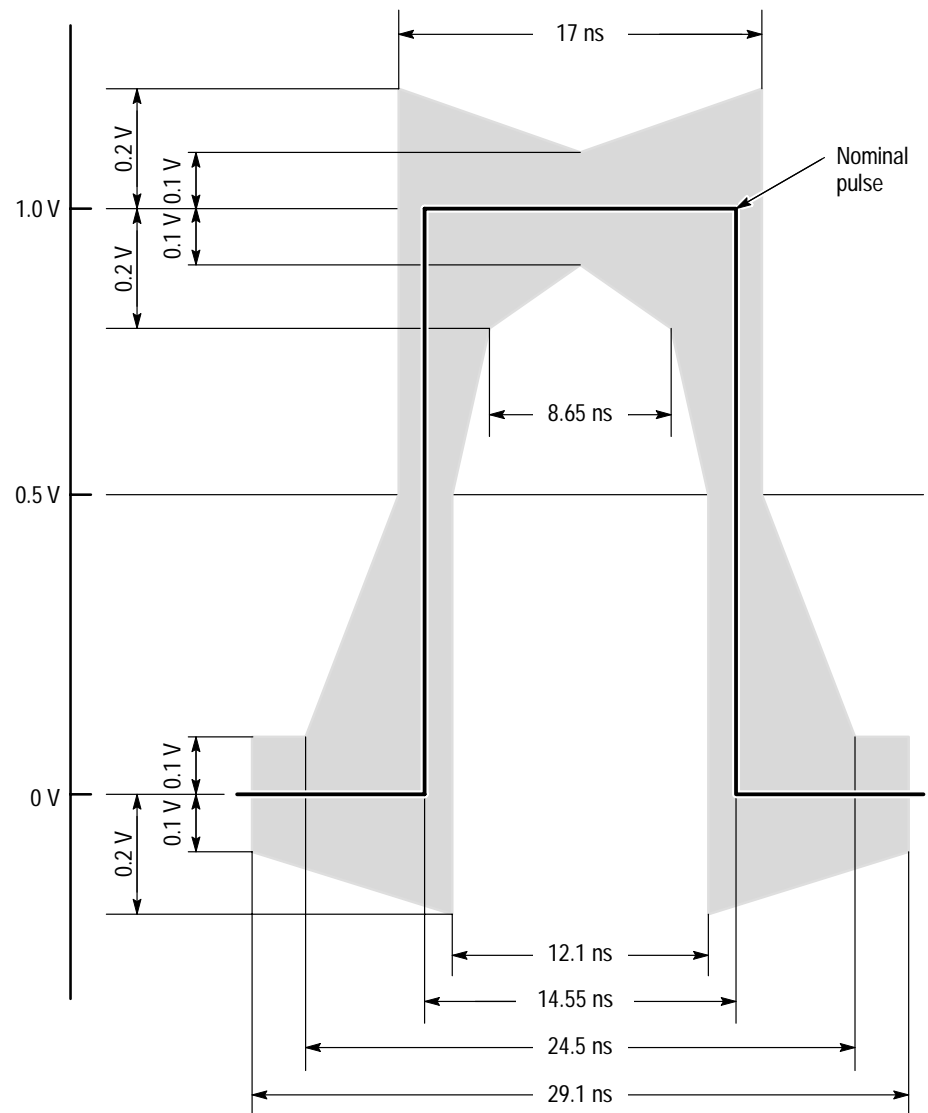


Figure 15: Pulse specification for G.703 34.368 MHz

Table 7: ECL Parallel and Serial I/O and control ports

Characteristic	Description	Supplemental information
Connectors		Parallel Data: D-25, see Table 8. Serial Data: D-25, see Table 9. Flow Control: D-9, see Table 10.
Generation/acquisition test Master/slave Slave/master (w/control)	All error free	Tested with a 10 Mbyte file at maximum data rates (within the constraints of synchronization)
Digital format		Binary, positive logic
Input		
Maximum data rate		Serial: 55 Mbits/s Parallel: 7.5 Mbytes/s
Minimum data rate		Clock Rate: 1 MHz Serial: 1 Mbits/s Parallel: 125 Kbytes/s
Signal level amplitude		Differential ECL compliant with the ECL 100K levels
Time reference		Rising edge of the clock
Output		
Maximum data rate		Serial: 55 Mbits/s Parallel: 7.5 Mbytes/s
Minimum data rate		Clock rate: 1 MHz Serial: 1 Mbits/s Parallel: 125 Kbytes/s
Clock-to-data timing		Data changes within 5 ns of falling clock edge
Signal level amplitude		Differential ECL compliant with the ECL 100K levels
Required receiver termination		110 Ω line to line

Table 8: ECL Parallel data pinout

ECL parallel pinout	Pin	Function	Pin	Function
	1	DCLK	14	$\overline{\text{DCLK}}$
	2	Ground	15	Ground
	3	DATA 7	16	$\overline{\text{DATA 7}}$
	4	DATA 6	17	$\overline{\text{DATA 6}}$
	5	DATA 5	18	$\overline{\text{DATA 5}}$
	6	DATA 4	19	$\overline{\text{DATA 4}}$
	7	DATA 3	20	$\overline{\text{DATA 3}}$
	8	DATA 2	21	$\overline{\text{DATA 2}}$
	9	DATA 1	22	$\overline{\text{DATA 1}}$
	10	DATA 0	23	$\overline{\text{DATA 0}}$
	11	DVALID	24	$\overline{\text{DVALID}}$
	12	PSYNC	25	$\overline{\text{PSYNC}}$
	13	Shield		

Asserted Low differential signal.

Table 9: ECL Serial data pinout

ECL serial pinout	Pin	Function
	1	DCLK
	2	Ground
	3 thru 9	Not managed
	10	DATA 0
	11	DVALID
	12	PSYNC
	13	Shield
	14	$\overline{\text{DCLK}}$
	15	Ground
	16 thru 22	Not managed
	23	$\overline{\text{DATA 0}}$
	24	$\overline{\text{DVALID}}$
	25	PSYNC

Asserted Low differential signal.

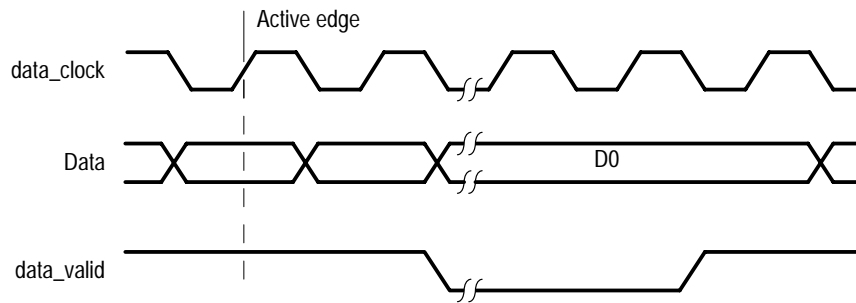
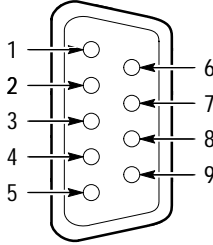


Figure 16: ECL Serial timing

Table 10: ECL Control data pinout

ECL control pinout	Pin	Function
	1	CHCLK (channel clock)
	2	Ground
	3	CHSYNC (channel sync)
	4	CHCLKEN (channel clock enable)
	5	Shield
	6	$\overline{\text{CHCLK}}$ (channel clock)
	7	Ground
	8	$\overline{\text{CHSYNC}}$ (channel sync)
	9	$\overline{\text{CHCLKEN}}$ (channel clock enable)

Asserted Low differential signal.

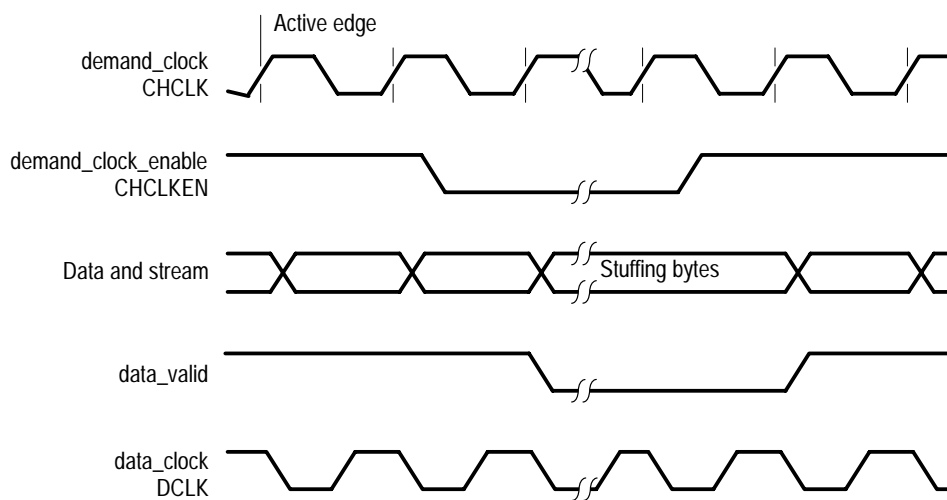


Figure 17: ECL Control timing

Table 11: TTL 50 Ω Data and Clock I/O ports

Characteristic	Description	Supplemental information
Connectors		Male SMB
Rise & fall times		Between 2 ns and 6.5 ns
Output signal swing into 50 Ω	Low < 0.3 V High > 2.65 V	
Digital format		Binary, positive logic
Maximum data rate		45 Mbits/s
Minimum data rate		1 Mbits/s
Generation/acquisition test	Error free	Tested with a 10 Mbyte file at maximum data rates (within the constraints of the stop/start bits)
Input termination		50 Ω nominal resistive
Timing diagram		DATA signal is stable on the leading edge of the clock signal. See Figure 18.
Clock-to-data timing		Data changes within 5 ns of falling clock edge
Input signal level amplitude		TTL Low: < 0.8 V TTL High: > 2.0 V

Table 12: TTL 50 Ω Clock In port

Characteristic	Description	Supplemental information
Clock port voltage levels		TTL Low: < 0.8 V TTL High: > 2.0 V
Termination		50 Ω, nominally resistive
Range		125 kHz to 45 MHz

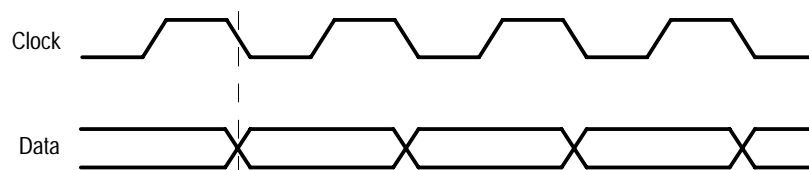
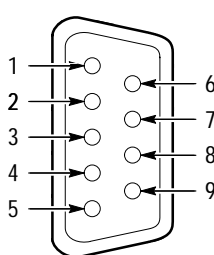


Figure 18: Timing for TTL50 Ω and separate clock input

Table 13: 10 Mbit Serial I/O RS422 Level port

Characteristic	Description	Supplemental information
Connector		9-pin subminiature D-type (see Table 14).
10 Mbit serial voltage levels		Differential outputs measured single-ended
Input		Low: < 0.5 V differential High: > 2.5 V differential
Output		Low: < 0.5 V High: > 2.5 V
Common mode range		±5 Volts
10 Mbit serial rise and fall times		Between 2 ns and 12 ns
Maximum data rate		10 Mbits/s
Minimum data rate		1 Mbits/s
Clock-to-data timing		Data changes within 10 ns of falling clock edge
Generation/acquisition test	Error free	Tested with a 10 Mbyte file at maximum data rates (within the constraints of the stop/start bits)

Table 14: 10 Mbit Serial data pinout

10 Mbit serial pinout	Pin	Function
	1	DATA IN
	2	CLK IN
	3	DATA OUT
	4	CLK OUT
	5	Ground
	6	$\overline{\text{DATA IN}}$
	7	$\overline{\text{CLK IN}}$
	8	$\overline{\text{DATA OUT}}$
	9	$\overline{\text{CLK OUT}}$

Asserted Low differential signal.

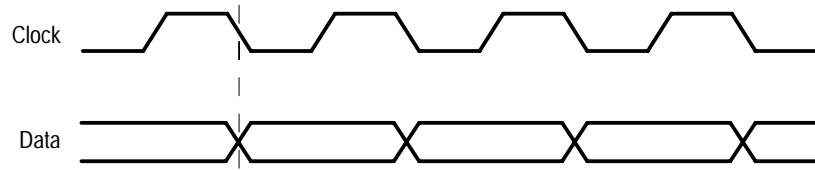


Figure 19: 10 Mbit Serial timing

Table 15: Phase Lock Loop (general)

Characteristic	Description	Supplemental information
Range		125 kHz to 60 MHz
Resolution		1 Hz
Jitter	0.2 UI peak-to-peak over a 1000 UI delay	
Settling time		3 seconds after frequency change
Frequency Accuracy		10 ppm \pm resolution

Real-Time Analyzer Electrical Characteristics

Tables 16 through 20 list the electrical characteristics of the Real-Time Analyzer I/O ports.

Table 16: LVDS/ECL/RS422 Level In port

Characteristic	Description	Supplemental information
Connector	D-25	Pinout as shown in Table 17
Input data rate	60 Mbits/s maximum, 1 Mbits/s minimum	
Signal amplitude, typical	2.0 V _{p-p} maximum, 100 mV _{p-p} minimum	
Signal common mode range, typical	-1.8 V to +2.5 V	
Termination, nominal	100 ohms resistive	Line to line
Timing reference	Rising edge of clock	
Clock-to-data timing	Data must be stable to ± 5 ns of the rising clock edge	

Table 17: LVDS/ECL/RS422 parallel data pinout

Parallel input pinout	Pin	Function	Pin	Function
	1	DCLK	14	DCLK
	2	Ground	15	Ground
	3	DATA 7	16	DATA 7
	4	DATA 6	17	DATA 6
	5	DATA 5	18	DATA 5
	6	DATA 4	19	DATA 4
	7	DATA 3	20	DATA 3
	8	DATA 2	21	DATA 2
	9	DATA 1	22	DATA 1
	10	DATA 0	23	DATA 0
	11	DVALID	24	DVALID
	12	PSYNC	25	PSYNC
	13	Shield		

Asserted Low differential signal.

Table 18: LVDS/MOD ECL Out port (parallel)

Characteristic	Description	Supplemental information
Connector	D25	Pinout as shown in Table 17
Signal amplitude	Selectable by software to LVDS or modified ECL levels	
LVDS	454 mV _{p-p} maximum, 247 mV _{p-p} minimum	100 ohm line-to-line termination
Modified ECL	454 mV _{p-p} maximum, 247 mV _{p-p} minimum	100 ohm line-to-line termination Modified Differential ECL is less than the typical 100K ECL level of ≈ 700 mV _{p-p} .
Common mode voltage		
LVDS output, typical	0.85 V	
Modified ECL output	-1.80 V maximum, -1.50 V minimum	

Table 19: ASI In port

Characteristic	Description	Supplemental information
Connector	BNC	
Input bit rate		270 Mbits/s \pm 100 ppm
Transport stream	60 Mbits/s max	Content of bit rate
Signal amplitude, typical	800 mV _{p-p} maximum, 200 mV _{p-p} minimum	
Termination, nominal	75 ohms	
Return loss, typical	-17 dB minimum	27 MHz to 270 MHz
Data formats	Accepts both burst and packet modes	

Table 20: ASI Out port

Characteristic	Description	Supplemental information
Connector	BNC	
Output bit rate		270 Mbits/s \pm 100 ppm
Signal amplitude	880 mV _{p-p} maximum, 500 mV _{p-p} minimum	Into a 75 Ω load
Rise and fall times, typical	1.2 ns maximum	20% to 80%

Table 21: PCR analysis accuracy

Characteristic	Description
Frequency Offset readout	
Accuracy	± 3.0 ppm
Drift, typical	± 1 ppm per year
Jitter readout and graphical display accuracy, typical	
Parallel input	± 30 ns peak
ASI input	± 60 ns peak

System Characteristics

Tables 22 through 25 list general characteristics of the MTS 200 Series MPEG Test System.

Table 22: Power requirements

Characteristic	Description	Supplemental information
Line voltage		100 VAC to 240 VAC
Line frequency		50 Hz / 60 Hz
Rated input current		6 A to 3 A
Power consumption ³		160 W nominal

³ Without monitor.

Table 23: Environmental characteristics

Characteristic	Supplemental information
Temperature	
Nonoperating	-20° C (-4° F) to +60° C (140° F), maximum rate of change 20° C (36° F) per hour
Operating	+10° C (50° F) to +35° C (95° F), maximum rate of change 10° C (18° F) per hour
Altitude	
Nonoperating	0 to 30,000 ft (9144 m)
Maximum operating	0 to 6,562 ft (2000 m)
Humidity	
Maximum operating	80% for temperatures up to +31° C (88° F), decreasing linearly to 66% at +35° C (95° F)
Nonoperating	5% to 90% humidity, noncondensing

Table 24: Physical characteristics

Characteristic	Supplemental information
Dimensions ⁴	
Height	17.92 inch (45.52 cm)
Width	8.83 inch (22.43 cm)
Depth	22.67 inch (57.58 cm)
Net weight	65 lb (29.54 kg) without accessories
Shipping weight	104 lb (47.17 kg) with all accessories except monitor. Monitor is shipped separately.

⁴ Does not include monitor, keyboard, mouse, or feet.

Table 25: Certifications and compliances

Category	Standard
EC declaration of conformity	<p>Meets intent of Directive 89/336/EEC for Electromagnetic Compatibility and Low Voltage Directive 73/23/EEC for Product Safety.</p> <p>Compliance demonstrated to the following specifications as listed in the Official Journal of the European Communities:</p> <p>EN 50081-1 Emissions: EN 55011 Class A Radiated and Conducted Emissions</p> <p>EN 50082-1 Immunity: IEC 801-2 Electrostatic Discharge Immunity IEC 801-3 Radiated RF Electromagnetic Field Immunity IEC 801-4 Electrical Fast Transient/Burst Immunity</p> <p>Conditional Statements: 1) Using high quality shielded cables, including those supplied as standard accessories.</p> <p>Low Voltage directive 73/23/EEC, amended by 93/68/EEC: EN 60950 Safety of Information Technology Equipment, Including Electrical Business Equipment</p>
Australia declaration of conformity	<p>Complies with electromagnetic compatibility standards as required under the Radio Communications Act.</p> <p>Compliance to: AS/NZS 2064.1/2 Industrial, Scientific, and Medical Equipment: 1992 (demonstrated with compliance to EN55011 class A)</p>
Safety class	Class I grounded product

Repackaging

The original MTS 200 Series MPEG Test System packaging materials provide maximum protection during shipping. If you return the test system to Tektronix for upgrade or repair, use the original packaging materials to avoid damage.

NOTE. Use the original shipping containers to return test system components to Tektronix service centers. Tektronix cannot honor warranties for components damaged during shipping. To minimize the risk of shipping damage, purchase replacement packaging materials if necessary.

Obtaining Replacement Packaging

You can order replacement packaging materials from Tektronix; Table 26 on page 53 lists the available items. Contact your nearest Tektronix office or representative to obtain new packaging materials.

Repackaging the Test System

Figure 20 provides repackaging details for the test system computer. To prevent damage to the packaging materials, remove the computer front door panel and feet before packing. Do not repack the computer keyboard, mouse, feet, or front door panel when shipping the test system to a Tektronix Service Center. For the test system to function properly during servicing, remember to return the Software Key.

NOTE. Include the Software Key when returning the test system to a Tektronix service center.

Removing the Computer Front Door

1. Open the computer front door completely.
2. Lift up the door to disengage the right-side hinge pins from the hinge-pin holes in the computer chassis. Refer to Figure 2 on page 4 for additional details.
3. Remove the door.

Removing the Computer Feet

1. Carefully turn the computer over onto its top.
2. Use a T-15 TORX tip screwdriver to remove each computer foot mounting screw. Refer to Figure 1 on page 3 for additional details.
3. Lift up and remove each foot.

Packing the Computer

Assemble the test system in the packaging materials as shown below.

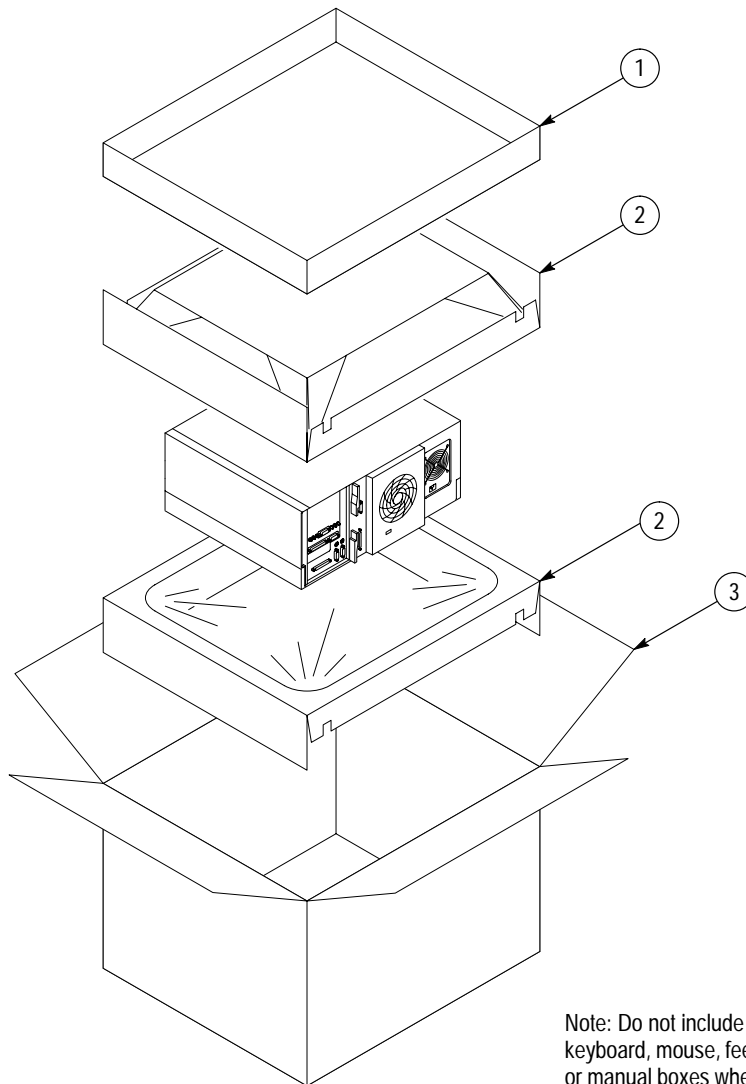


Figure 20: Packing the test system computer

Table 26: Packaging materials

Figure index	Quantity	Tektronix part number	Item description
1	1	004-4912-0X	Top cushion
2	2	004-4913-0X	Support inserts, top and bottom
3	1	004-4914-0X	Shipping container

Packing the Monitor

To repackage the monitor for servicing, follow the instructions in the monitor user manual. Use the original shipping materials.

