

9444 033 10007

Digital storage oscilloscope PM3310

Instruction manual/Gerätehandbuch/Notice d'emploi et d'entretien

9499 443 02202

810515/01



PHILIPS

- Tab 1. Operating Manual**
- Tab 2. Bedienungs Anleitung**
- Tab 3. Notice d'Emploi**
- Tab 4. Service Manual**
- Tab 5. Modifications**
- Tab 6. Circuit Descriptions**
- Tab 7. Dismantling the Instrument**
- Tab 8. Checking and Adjusting**
- Tab 9. Corrective Maintenance**
- Tab 10. Introduction to Microprocessors**
- Tab 11. Explanation of used Symbols**
- Tab 12. Parts Lists**

Additional Diagrams

I.E.C. Bus Operating Manual

CONTENTS

1.	GENERAL INFORMATION	6
1.1.	Introduction	6
1.2.	Characteristics	7
1.3.	Accessories	13
1.4.	Accessory information	14
1.5.	Principle of operation	31
2.	INSTALLATION INSTRUCTIONS	33
2.1.	Important safety instructions	33
2.2.	Removing and fitting the front cover	33
2.3.	Position of the instrument	33
2.4.	Mains voltage setting and fuse	34
2.5.	Earthing	35
3.	OPERATING INSTRUCTIONS	36
3.1.	General information	36
3.2.	Switching on and power-up routine	36
3.3.	Explanation of controls and sockets	37
3.4.	Detailed operating information	53
4.	BRIEF CHECKING PROCEDURE	61
4.1.	General information	61
4.2.	Preliminary settings of the controls	61
4.3.	Checking procedure	61
5.	PREVENTIVE MAINTENANCE	64
5.1.	General information	64
5.2.	Cleaning the Nextel suede coating	64
5.3.	Removing the bezel and contrast plate	64
5.4.	Recalibration	64

CONTENTS

6.	CIRCUIT DESCRIPTIONS	6-5
6.1.	Blockdiagram description	6-5
6.1.1.	Acquisition	6-5
6.1.1.1.	The vertical channels	6-14
6.1.1.2.	The analog to digital converter	6-14
6.1.1.3.	Trigger and delay	6-16
6.1.1.4.	The sampling system	6-16
6.1.1.5.	The time-base system	6-17
6.1.1.6.	The acquisition control	6-17
6.1.2.	Display system	6-18
6.1.2.1.	Memories	6-18
6.1.2.2.	Dot join and plot	6-18
6.1.2.3.	Vertical final amplifier	6-19
6.1.2.4.	Horizontal final amplifier	6-19
6.1.2.5.	C.R.T. section	6-19
6.1.2.6.	Alphanumeric display	6-20
6.1.3.	Microprocessor	6-20
6.1.4.	Power supply	6-23
6.2.	Unit descriptions	6-23
6.2.1.	Front side unit A1	6-23
6.2.2.	Front unit A2	6-25
6.2.3.	Motherboard unit A3	6-44
6.2.4.	Microprocessor unit A4	6-45
6.2.5.	Spare unit A5	6-60
6.2.6.	RAM unit A6	6-61
6.2.7.	Buffer unit A7	6-72
6.2.8.	Conversion unit A8	6-82
6.2.9.	ACL unit A9	6-92
6.2.10.	CCD logic unit A10	6-110
6.2.11.	P ² CCD unit A11	6-122
6.2.12.	Time-base unit A12	6-135
6.2.13.	Delay trigger unit A13	6-147
6.2.14.	IEC unit A14	6-156
6.2.15.	DC power unit A15	6-157
6.2.16.	AC power unit A16	6-166
6.2.17.	Rear side unit A17	6-174
6.2.18.	Delay line unit A18	6-175
6.2.19.	CRT socket A19	6-176
6.2.20.	Final ampl. unit A20	6-178
6.2.21.	Amplifier unit A21	6-188
6.2.22.	Trigger unit A22	6-211
6.2.23.	EHT unit A23	6-231

7.	DISMANTLING THE INSTRUMENT	7-1
7.1.	Warnings	7-1
7.2.	Removing the covers	7-2
7.3.	Access to parts for checking and adjusting procedure	7-3
8.	CHECKING AND ADJUSTING	8-1
8.1.	General information	8-1
8.1.1.	Recommended test equipment	8-2
8.1.2.	Preliminary settings	8-3
8.2.	Survey of adjusting elements	8-4
8.3.	Checking and adjusting procedure	8-8
8.3.1.	Power supply	8-8
8.3.2.	Cathode - ray - tube circuit	8-9
8.3.3.	Pre adjustment P ² CCD circuit	8-12
8.3.4.	Balance adjustments	8-13
8.3.5.	Final amplifier adjustments	8-15
8.3.6.	Vertical channels	8-17
8.3.7.	Time coefficient adjustments	8-20
8.3.8.	Triggering	8-21
8.3.9.	X-Y mode	8-24
8.3.10.	Range indication	8-24
8.3.11.	Plotter outputs	8-24
8.3.12.	Periodic and random deviations	8-24
8.3.13.	Effect of mains voltage variations	8-24
8.4.	Interactions	8-25
9.	CORRECTIVE MAINTENANCE	9-1
9.1.	Replacements	9-1
9.1.1.	Replacing single knobs	9-1
9.1.2.	Replacing double knobs	9-1
9.1.3.	Replacing carrying handle	9-2
9.1.4.	Removing the cabinet plates and the screen bezel	9-3
9.1.5.	Replacing the plug - in units	9-4
9.1.6.	Replacing the P ² CCD unit A11	9-5
9.1.7.	Replacing the front unit A2	9-5
9.1.8.	Replacing the LEVEL control	9-7
9.1.9.	Replacing the trigger mode switch	9-7
9.1.10.	Replacing the C.R.T.	9-7
9.1.11.	Replacing the delay line unit A18	9-8
9.1.12.	Removing the rear plate together with the AC POWER UNIT A16	9-8
9.1.13.	Removing the DC POWER UNIT A15	9-8
9.1.14.	Removing the mains filter	9-8
9.1.15.	Removing the EHT unit A23	9-8
9.1.16.	Removing the vertical amplifier unit A21	9-8
9.1.17.	Removing the trigger unit A22	9-8
9.2.	Soldering techniques	9-9
9.3.	Handling MOS devices	9-10
9.4.	Special tools	9-11
9.5.	Recalibration after repair	9-12
9.6.	Instrument repackaging	9-12
9.7.	Trouble shooting	9-13

9.7.1.	Introduction	9-13
9.7.2.	Power-up routine	9-13
9.7.3.	Trouble shooting aids	9-15
9.7.4.	Service faultfinding software routines	9-15
9.7.5.	Trouble shooting hints	
10.	INTRODUCTION TO MICROPROCESSOR'S	10-1
10.1.	A brief encounter	10-1
10.2.	Coming to terms	10-1
10.3.	System features	10-4
11.	EXPLANATION OF USED SYMBOLS	11-1
12.	PARTS LISTS (Subject to alteration without notice)	12-1
12.1.	Mechanical parts	12-2
12.2.	Electrical parts	12-8
13.	ADDITIONAL DIAGRAMS	13-2