

# FIELD REPLACEABLE UNIT DOCUMENTATION

**Satellite™**

**1700 Series**

---

## GENERAL INFORMATION

**Tools Required for Proper  
Disassembly and Reassembly:**

1. Phillips Screwdriver (Size 1)
2. Flat head screwdriver (5mm)
3. Hex driver (5mm)
4. Case Separator
5. ESD Wrist Strap
6. ESD mats
7. Tweezers

Before attempting any of the following procedures, make sure that the main battery and AC adaptor is not connected to the unit and the environment in which you are working on is protected from Electro-Static Discharge(ESD).

Download Free Service Manual at <http://printer1.blogspot.com>

---

**TOSHIBA**  
**Tough Enough for Today's World**

# FIELD REPLACEABLE UNIT DOCUMENTATION

## **Satellite<sup>TM</sup>** **1700Series**

---

### **TABLE OF CONTENTS:**

- 1. BATTERY PACK REMOVAL**
- 2. OPTIONAL PC CARD REMOVAL**
- 3. MEMORY MODULE REMOVAL**
- 4. KEYBOARD REMOVAL**
- 5. TOP COVER REMOVAL**
- 6. HDD REMOVAL**
- 7. FDD REMOVAL**
- 8. SYSTEM BOARD REMOVAL**
- 9. CD-ROM DRIVE REMOVAL**
- 10. MODEM MODULE REMOVAL**
- 11. COOLING MODULE REMOVAL**
- 12. CPU REMOVAL**
- 13. LED BOARD REMOVAL**
- 14. HINGE BRACKET REMOVAL**
- 15. AUDIO BOARD REMOVAL**
- 16. AUDIO/MEMBRANE SWITCH REMOVAL**
- 17. 12.1" DISPLAY MASK REMOVAL**
- 18. FL INVERTER AND 12.1" LCD REMOVAL**
- 19. 13.3" DISPLAY MASK REMOVAL**
- 20. FL INVERTER AND 13.3" LCD REMOVAL**

Download Free Service Manual at <http://printer1.blogspot.com>


---

**TOSHIBA**  
**Tough Enough for Today's World.**

# FIELD REPLACEABLE UNIT DOCUMENTATION

## Satellite™ 1700Series

### BATTERY PACK REMOVAL

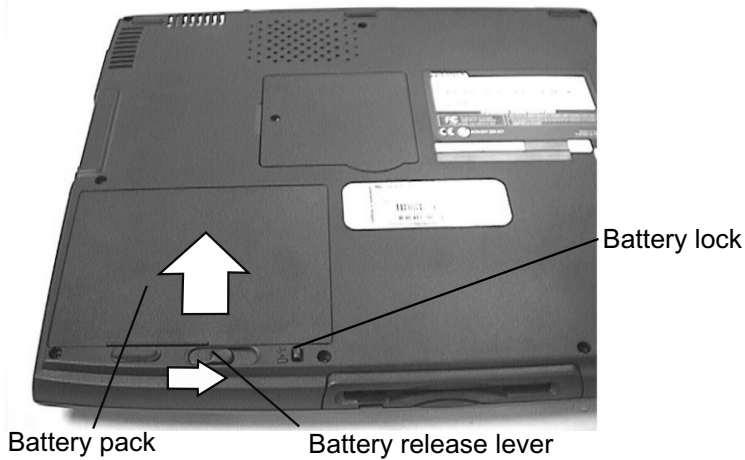


1. Turn the computer upside down as shown.
2. Press the **battery lock** and slide the **battery release lever** to the right and lift out the battery.

### OPTIONAL PC CARD REMOVAL




1. Pull out the **eject button** of the PC card to be removed.
  2. Press the **eject button** and remove the **PC card**.
- NOTE:** Before removing any PCMCIA device, make sure it is "STOPPED" in the PC Card Manager.

### MEMORY MODULE REMOVAL

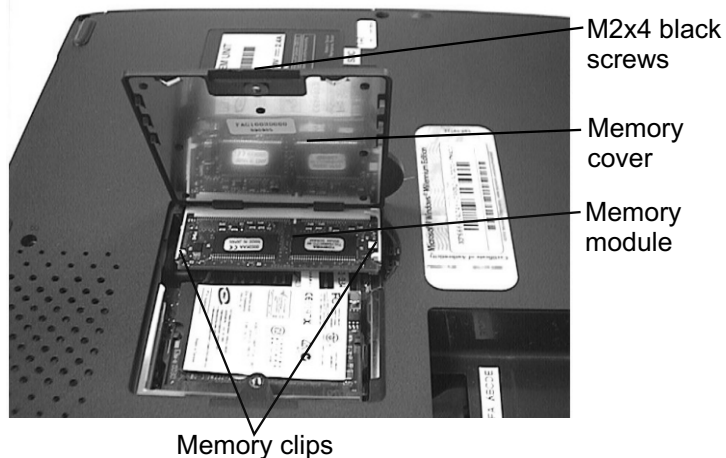

1. Turn the computer upside down.
2. Remove **two M2x4 black screws** and remove the **memory cover**.
3. Push the **memory clips** outward and pull the **memory module** out of the connector on a 30 degree angle.

### KEYBOARD REMOVAL

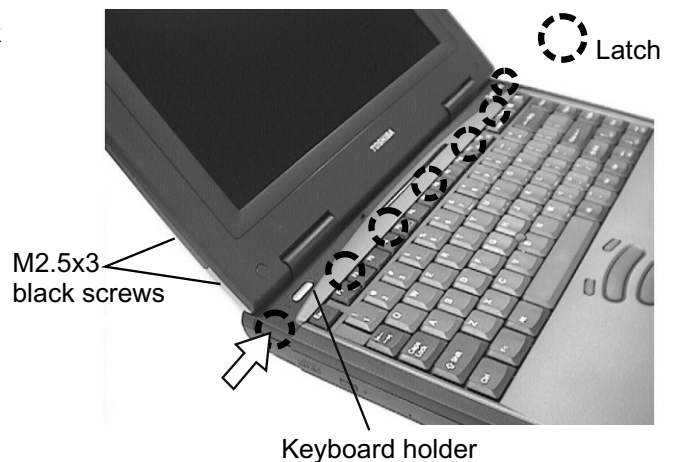

1. Open the display panel.
2. Remove **two M2.5x3 black screws** securing the keyboard holder.
3. Unlatch the **keyboard holder** at the top of keyboard starting from the left side.

Download Free Service Manual at <http://printer1.blogspot.com>



# TOSHIBA

Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION

## Satellite™ 1700Series


### KEYBOARD REMOVAL

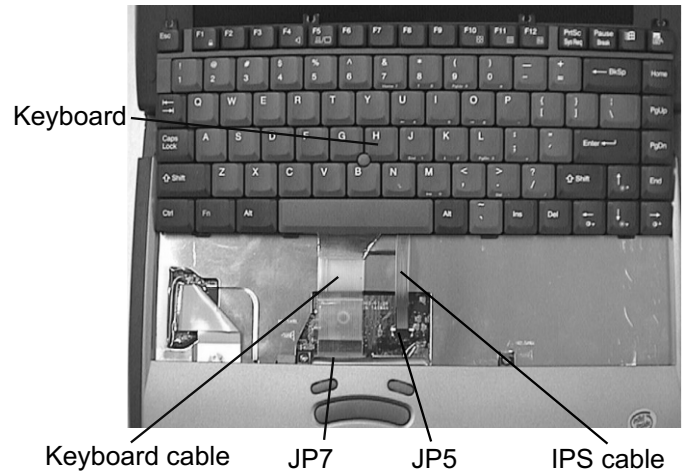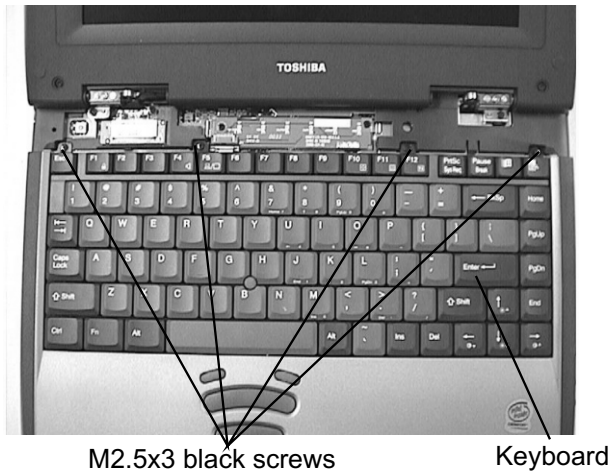


4. Remove **four M2x4 black screws** securing the keyboard.

5. Set the **keyboard** as shown above.  
6. Disconnect the **keyboard cable** from **JP7** and **IPS cable** from **JP5**.  
7. Lift out the **keyboard**.

### TOP COVER REMOVAL

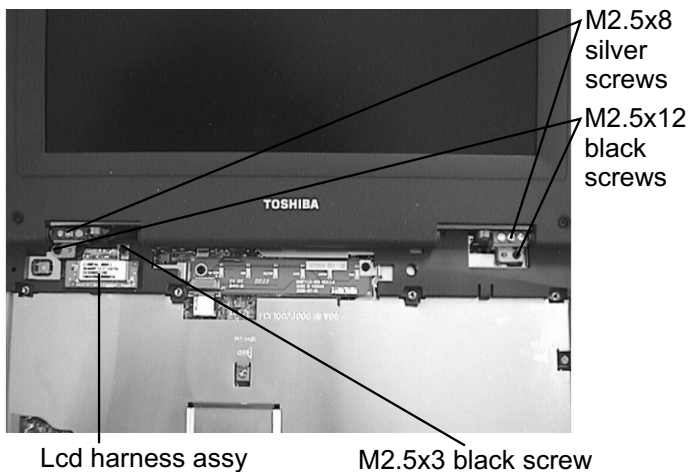

1. Remove **two M2.5x8 silver screws** and **M2.5x12 black screws** securing the LCD assembly.  
2. Remove **one M2.5x3 black screw** securing the LCD harness assembly.  
3. Disconnect the **LCD harness assembly** from the system board.

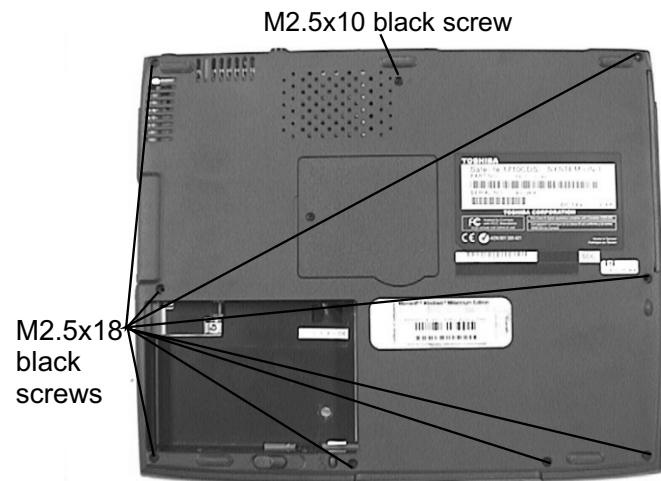

4. Remove **eight M2.5x18 black screws** and **one M2.5x10 black screw** securing the bottom cover.

Download Free Service Manual at <http://printer1.blogspot.com>


# TOSHIBA

Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### TOP COVER REMOVAL

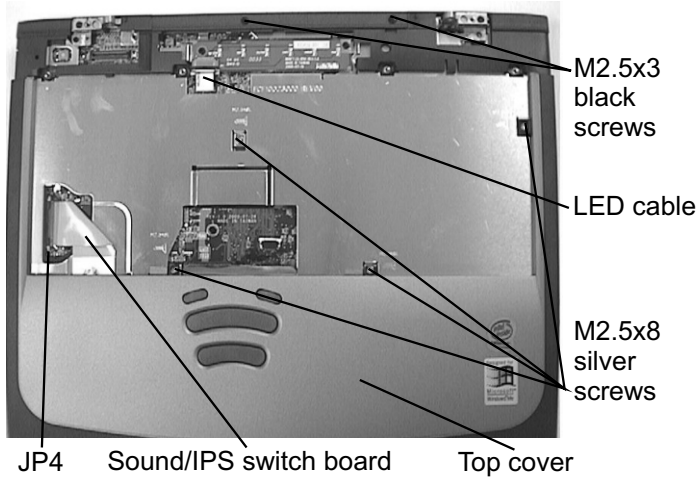


5. Disconnect the **sound/IPS switch board** from JP4 on the system board.
6. Disconnect the **LED board cable** from the LED board.
7. Remove **four M2.5x8 silver screws** and **two M2.5x3 black screw** securing the top cover assembly.
8. Remove the top cover.

### HDD REMOVAL

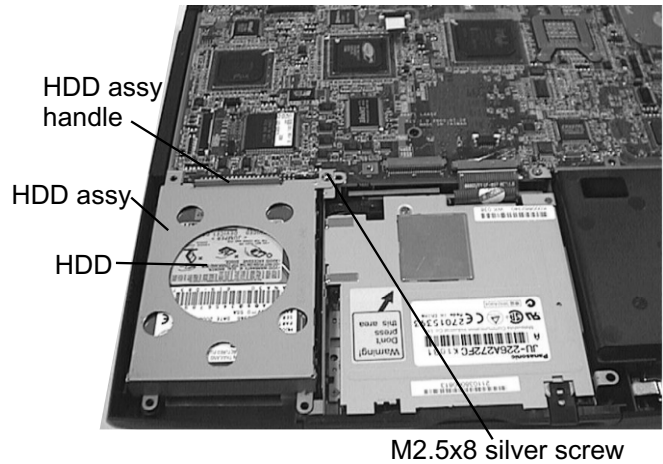


1. Remove **one M2.5x8 silver screw** securing the HDD assembly.
2. Grasp the **HDD assembly handle** and pull it in the direction of the arrow.
3. Lift out the **HDD assembly**.

### HDD REMOVAL

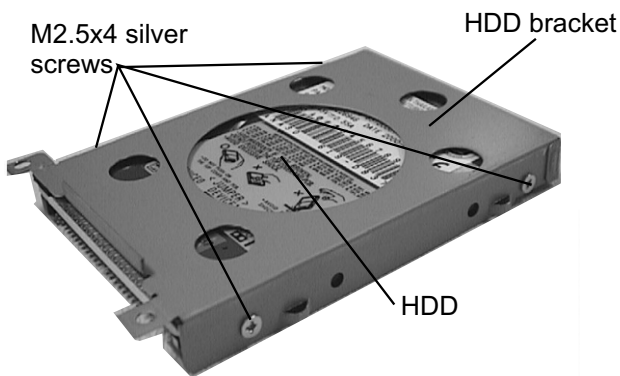

4. Remove **four M2.5x3 silver screws** securing the HDD bracket.
5. Remove the **HDD** from the **HDD bracket**.

### FDD REMOVAL

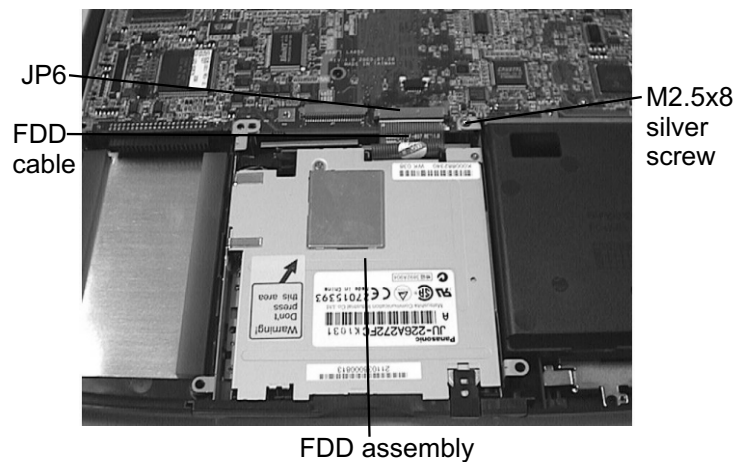

1. Remove **one M2.5x8 silver screw** securing the FDD assembly.
2. Disconnect the **FDD cable** from **JP6**.
3. Lift out the **FDD assembly**.

Download Free Service Manual at <http://printer1.blogspot.com>


# TOSHIBA

Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### FDD REMOVAL

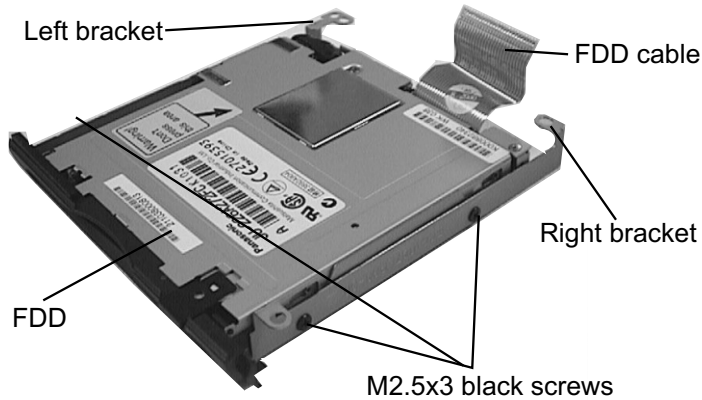


1. Remove **three M2.5x3 black screws** securing the left and right brackets.
2. Lift out the **FDD** and remove the **FDD cable**.

### SYSTEM BOARD REMOVAL

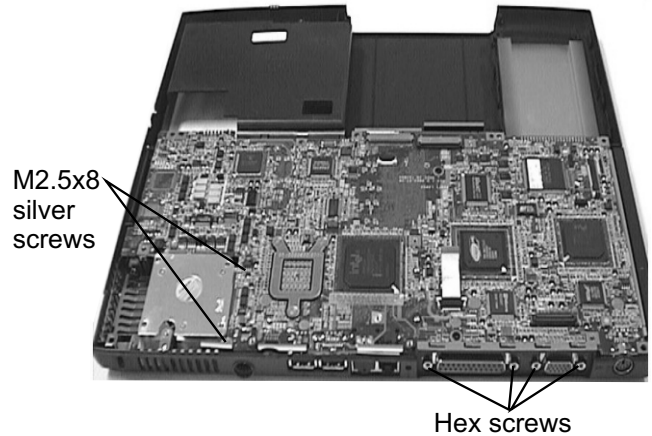


1. Remove **four hex screws** at the rear of the computer.
2. Remove **two M2.5x8 silver screws** near the cooling module.

### SYSTEM BOARD REMOVAL

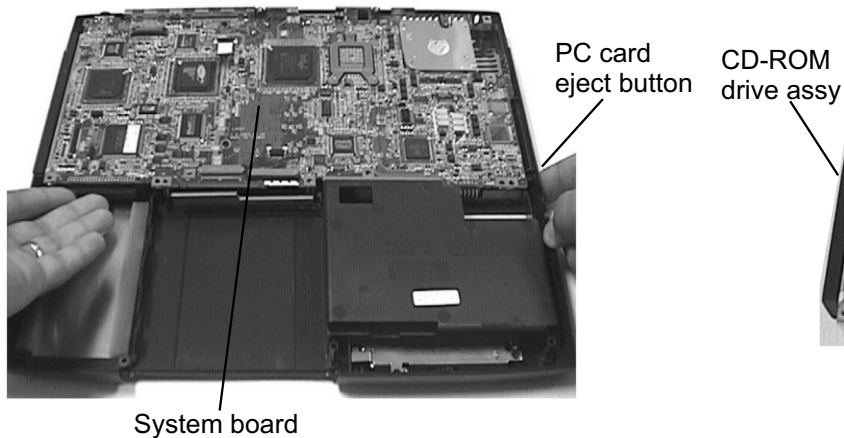

3. Push the **PC Card eject button** and lift out the system board as shown above.

### CD-ROM DRIVE REMOVAL

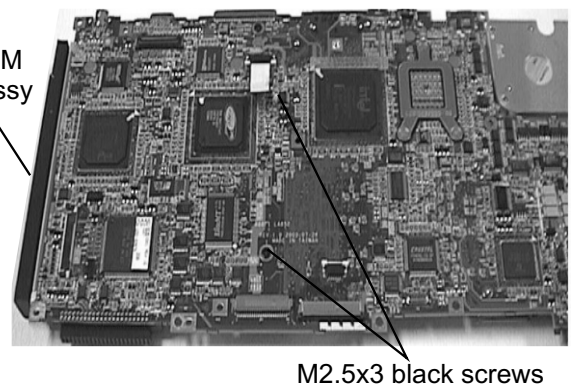

1. Remove **two M2.5x3 black screws** securing the CD-ROM drive assembly.
2. Slide the **CD-ROM drive assembly** to the left to disconnect from system board.
3. Remove all the CD-ROM brackets.

Download Free Service Manual at <http://printer1.blogspot.com>


# TOSHIBA

Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### MODEM MODULE REMOVAL

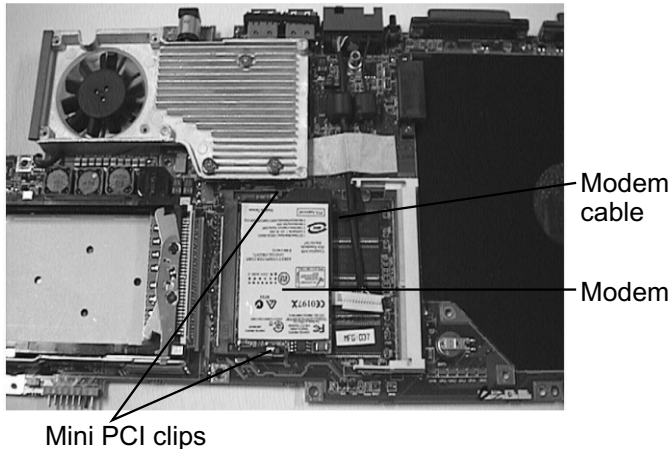


1. Disconnect the **modem cable** from the modem board.
2. Spread the **mini PCI clips** securing the modem board and remove **the modem board** on a 30 degree angle.

### COOLING MODULE REMOVAL

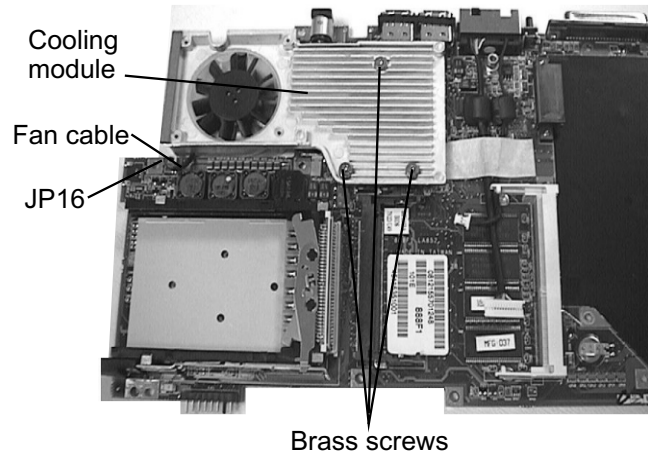

1. Disconnect the **fan cable** from **JP16** on the system board.
2. Remove **three brass screws** securing the cooling module.
3. Lift out the **cooling module**.


### CPU REMOVAL

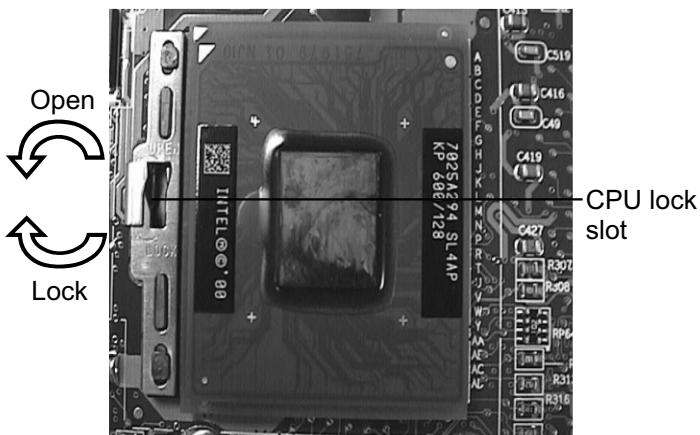

1. Using a 5mm flat head screw driver, insert the screwdriver into the CPU lock slot and turn it counterclockwise.

**NOTE:** In order to properly lock the CPU, a 5mm flat head screwdriver must be used.

### LED BOARD REMOVAL

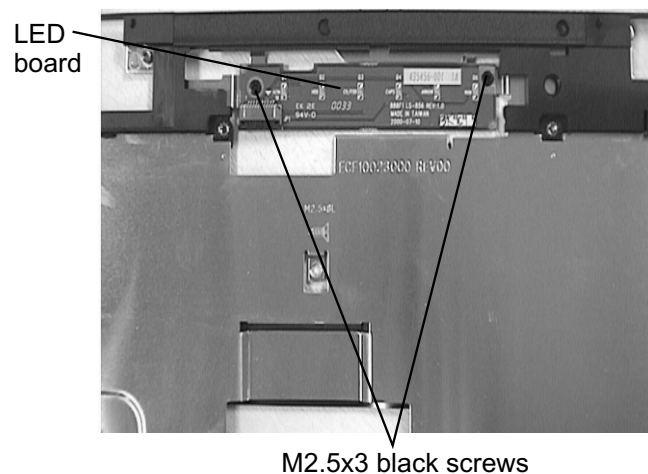

1. Remove **two M2.5x3 black screws** securing the LED board.
2. Lift out the **LED board**.

Download Free Service Manual at <http://printer1.blogspot.com>


# TOSHIBA

Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### HINGE BRACKET REMOVAL

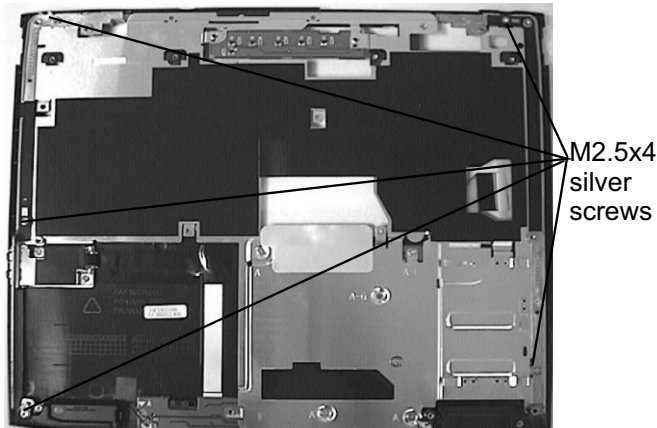


1. Remove **five M2.5x4 silver screws** securing hinge bracket.
2. Lift out the **hinge bracket**.

### AUDIO BOARD REMOVAL

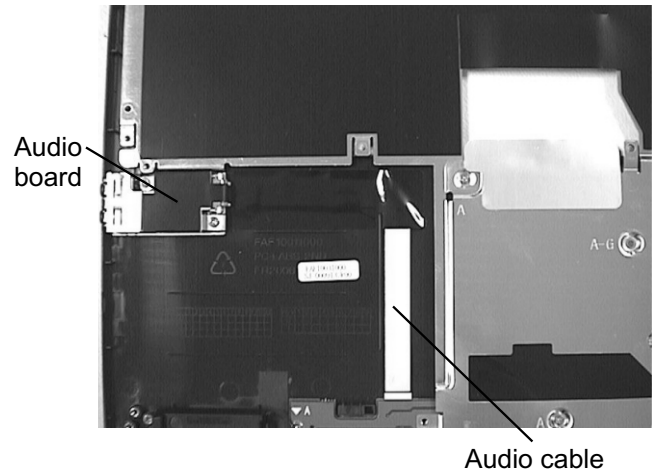


1. Disconnect the **audio cable** from the audio board.
2. Remove **two M2.5x4 silver screws** securing the audio board.
3. Lift out the **Audio board**.

### AUDIO/MEMBRANE SWITCH REMOVAL

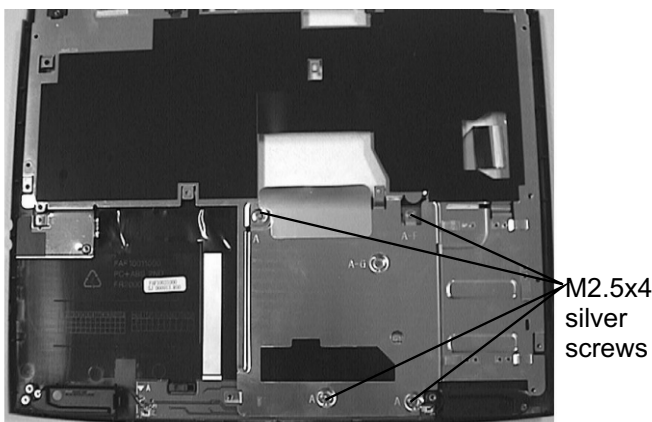

1. Remove **four M2.5x4 silver screws** securing the metal plate.
2. Lift out the **metal plate**

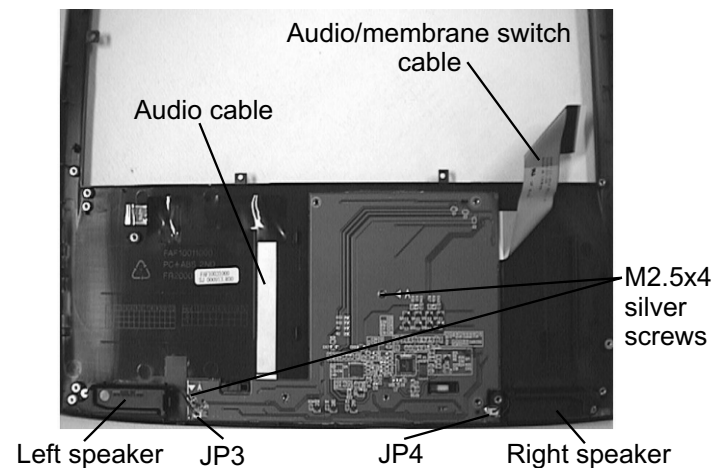

1. Remove **two M2.5x4 silver screws** securing the audio/membrane switch board.
2. Disconnect the **left and right speakers** from **JP3 and JP4**.
3. Disconnect the **audio** and the **audio/membrane switch cables**.

Download Free Service Manual at <http://printer1.blogspot.com>

# TOSHIBA


Tough Enough for Today's World



# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### 12.1" DISPLAY MASK REMOVAL

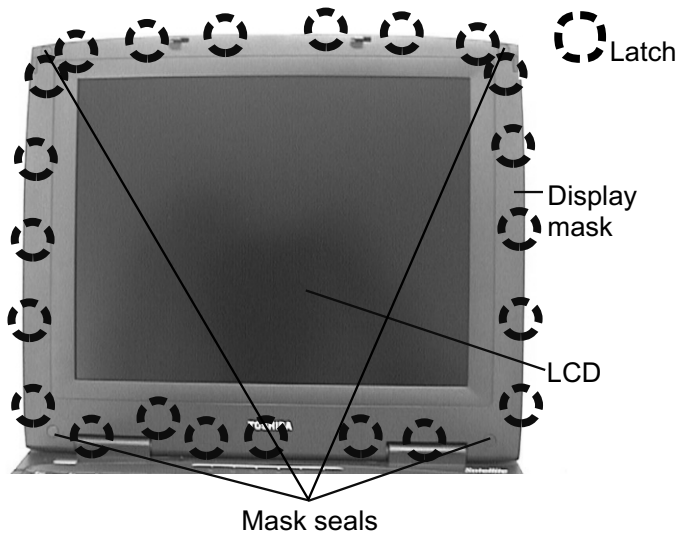

1. Remove **four mask seals** at each corner of the display assembly.
2. Remove **four M2.5x5 brass screws** securing the display mask.
3. There are **22 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

### FL INVERTER AND 12.1" LCD REMOVAL

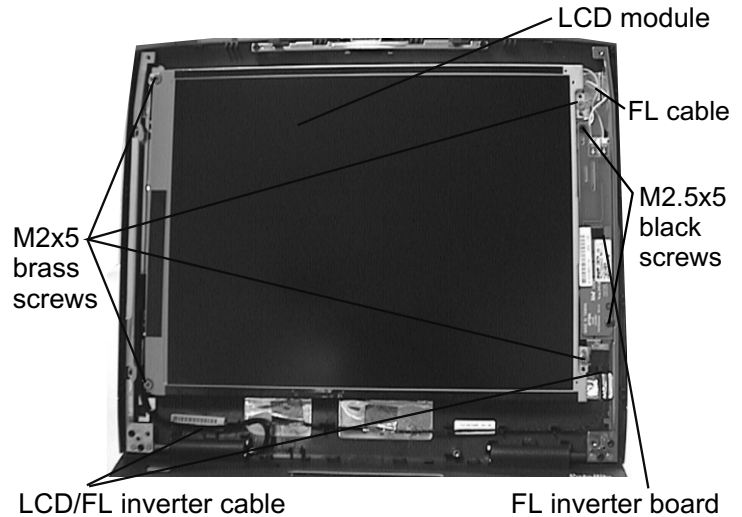

1. Remove **two M2.5x5 black screw** securing FL inverter board.
2. Carefully lift up the **FL inverter board** and disconnect the **LCD/FL inverter cable** from **CN1** and the **FL cable** from **CN2**.
3. Remove **four M3X6 brass screws** securing the **LCD module**.
4. Carefully rotate the **LCD module** from right to left of the LCD cover.
5. Disconnect the **LCD/FL inverter cable** from the LCD module and remove the **LCD** from the computer.


Download Free Service Manual at <http://printer1.blogspot.com>

**TOSHIBA**  
Tough Enough for Today's World

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™ 1700Series

### 13.3" DISPLAY MASK REMOVAL

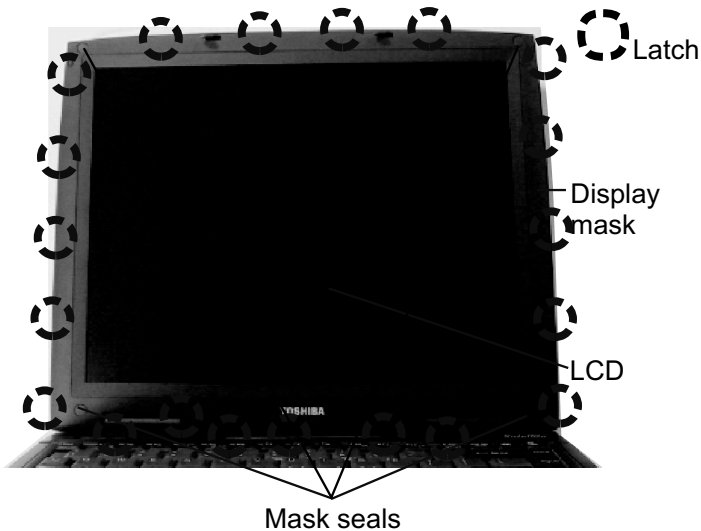

1. Remove **four mask seals** at each corner of the display assembly.
2. Remove **four M2.5x5 black screws** securing the display mask.
3. There are **22 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

### FL INVERTER AND 13.3" LCD REMOVAL

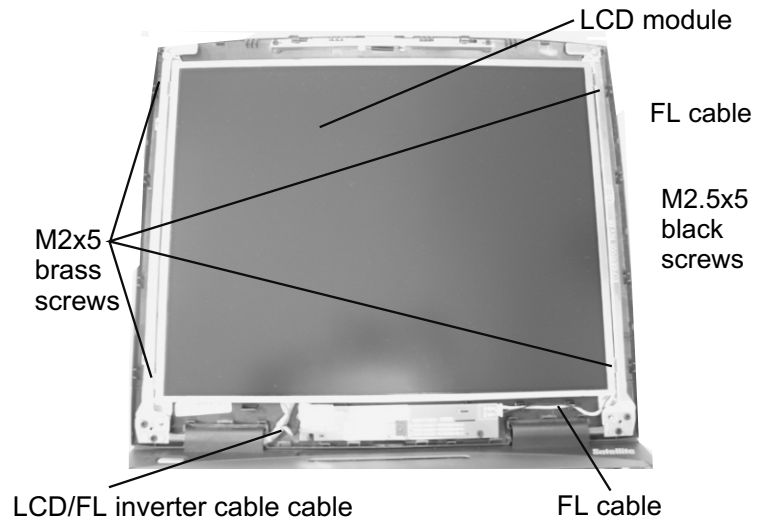

1. Remove **one M2.5x5 black screw** securing FL inverter board.
2. Carefully lift up the **FL inverter board** and disconnect the **LCD/FL inverter cable** from **CN1** and the **FL cable** from **CN2**.
3. Remove **four M2x2 black screws** securing the **LCD module**.
4. Carefully rotate the **LCD module** from right to left of the LCD cover.
5. Disconnect the **LCD/FL inverter cable** from the LCD module and remove the **LCD** from the computer.

Download Free Service Manual at <http://printer1.blogspot.com>

# TOSHIBA

**Tough Enough for Today's World**