

**Toshiba Personal Computer**  
**Satellite M300**  
**Satellite Pro M300**  
**Maintenance Manual**

**TOSHIBA CORPORATION**

File Number 960-Q08

## **Copyright**

© 2003 by Toshiba Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written permission of Toshiba. No patent liability is assumed with respect to the use of the information contained herein.

Toshiba Personal Computer Harrison 10S10SG Maintenance Manual

First edition Feb 2008

## **Disclaimer**

The information presented in this manual has been reviewed and validated for accuracy. The included set of instructions and descriptions are accurate for the Satellite M300 and Satellite Pro M300 series at the time of this manual's production. However, succeeding computers and manuals are subject to change without notice. Therefore, Toshiba assumes no liability for damages incurred directly or indirectly from errors, omissions, or discrepancies between any succeeding product and this manual.

## **Trademarks**

Intel, Intel SpeedStep, Pentium and Celeron are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries/regions.

Windows and Microsoft are registered trademarks of Microsoft Corporation.

Photo CD is a trademark of Eastman Kodak.

i Link is a trademark of Sony Corporation.

TruSurround XT, Trubass, Dialog Clarity, SRS and (●)symbol are trademarks of SRS Labs, Inc.

TruSurround XT technology is incorporated under license from SRS Labs, Inc.

Other trademarks and registered trademarks not listed above may be used in this manual.

---

## Preface

---

This maintenance manual describes how to perform hardware service maintenance for the Toshiba Personal Computer Satellite M300 and Satellite Pro M300 Series.

The procedures described in this manual are intended to help service technicians isolate faulty Field Replaceable Units (FRUs) and replace them in the field.

### SAFETY PRECAUTIONS

Four types of messages are used in this manual to bring important information to your attention. Each of these messages will be italicized and identified as shown below.

***DANGER:*** “*Danger*” indicates the existence of a hazard that could result in death or serious bodily injury, if the safety instruction is not observed.

***WARNING:*** “*Warning*” indicates the existence of a hazard that could result in bodily injury, if the safety instruction is not observed.

***CAUTION:*** “*Caution*” indicates the existence of a hazard that could result in property damage, if the safety instruction is not observed.

***NOTE:*** “*Note*” contains general information that relates to your safe maintenance service.

Improper repair of the computer may result in safety hazards. Toshiba requires service technicians and authorized dealers or service providers to ensure the following safety precautions are adhered to strictly.

- Be sure to fasten screws securely with the right screwdriver. If a screw is not fully fastened, it could come loose, creating a danger of a short circuit, which could cause overheating, smoke or fire.
- If you replace the battery pack or RTC battery, be sure to use only the same model battery or an equivalent battery recommended by Toshiba. Installation of the wrong battery can cause the battery to explode.

The manual is divided into the following parts:

- Chapter 1      Hardware Overview describes the Satellite M300 and Satellite Pro M300 system unit and each FRU.
- Chapter 2      Troubleshooting Procedures explains how to diagnose and resolve FRU problems.
- Chapter 3      Test and Diagnostics describes how to perform test and diagnostic operations for maintenance service.
- Chapter 4      Replacement Procedures describes the removal and replacement of the FRUs.
- Appendices    The appendices describe the following:
  - Handling the LCD Module
  - Board layout
  - Pin assignments
  - Keyboard scan/character codes
  - Key layout
  - Wiring diagrams
  - BIOS Rewrite Procedures
  - EC/KBC Rewrite Procedures
  - Reliability

## Conventions

This manual uses the following formats to describe, identify, and highlight terms and operating procedures.

### *Acronyms*

On the first appearance and whenever necessary for clarification acronyms are enclosed in parentheses following their definition. For example:

Read Only Memory (ROM)

### *Keys*

Keys are used in the text to describe many operations. The key top symbol as it appears on the keyboard is printed in **boldface** type.

### *Key operation*

Some operations require you to simultaneously use two or more keys. We identify such operations by the key top symbols separated by a plus (+) sign. For example, **Ctrl + Pause (Break)** means you must hold down **Ctrl** and at the same time press **Pause (Break)**. If three keys are used, hold down the first two and at the same time press the third.

### *User input*

Text that you are instructed to type in is shown in the boldface type below:

**DISKCOPY A: B:**

### *The display*

Text generated by the computer that appears on its display is presented in the typeface below:

```
Format complete  
System transferred
```

---

# Table of Contents

---

## Chapter 1 Hardware Overview

1.1	Features .....	1
1.2	System Block Diagram .....	5
1.3	2.5-inch Hard Disk Drive.....	9
1.4	Optical Drive.....	12
	1.4.1DVD-ROM & CD-R/RW Drive .....	12
	1.4.2DVD Super Multi Drive .....	14
1.5	Keyboard.....	17
1.6	TFT Color Display .....	18
	1.6.1LCD Module .....	18
	1.6.2CCFL Invertor Board.....	21
1.7	Power Supply .....	22
1.8	Batteries .....	23
	1.8.1Main Battery .....	23
	1.8.2Battery Charging Control.....	24
	1.8.3RTC battery.....	25
1.9	AC Adapter .....	26

## Chapter 2 Troubleshooting Procedures

2.1	Troubleshooting .....	1
2.2	Troubleshooting Flowchart.....	3
2.3	Power Supply Troubleshooting .....	7
	Procedure 1      Power Status Check .....	7
	Procedure 2      Error Code Check .....	9
	Procedure 3      Connection Check.....	10
	Procedure 4      Charging Check .....	10
	Procedure 5      Replacement Check .....	12

2.4	System Board Troubleshooting.....	13
	Procedure 1    Message Check .....	14
	Procedure 2    Debugging Port Check .....	16
	Procedure 3    Diagnostic Test Program Execution Check .....	21
	Procedure 4    Replacement Check .....	21
2.5	USB FDD Troubleshooting .....	21
	Procedure 1    FDD Head Cleaning Check .....	22
	Procedure 2    Diagnostic Test Program Execution Check .....	23
	Procedure 3    Connector Check and Replacement Check.....	24
2.6	2.5” HDD Troubleshooting.....	26
	Procedure 1    Partition Check.....	26
	Procedure 2    Message Check .....	27
	Procedure 3    Format Check.....	28
	Procedure 4    Diagnostic Test Program Execution Check .....	29
	Procedure 5    Connector Check and Replacement Check.....	30
2.7	Keyboard Troubleshooting .....	31
	Procedure 1    Diagnostic Test Program Execution Check .....	31
	Procedure 2    Connector Check and Replacement Check.....	32
2.8	Touch pad Troubleshooting .....	33
	Procedure 1    Diagnostic Test Program Execution Check .....	33
	Procedure 2    Connector Check and Replacement Check.....	34

2.9	Display Troubleshooting.....	35
	Procedure 1    External Monitor Check.....	35
	Procedure 2    Diagnostic Test Program Execution Check .....	35
	Procedure 3    Connector and Cable Check .....	36
	Procedure 4    Replacement Check .....	37
2.10	Optical Disk Drive Troubleshooting.....	38
	Procedure 1    Diagnostic Test Program Execution Check .....	38
	Procedure 2    Connector Check and Replacement Check.....	38
2.11	Modem Troubleshooting.....	39
	Procedure 1    Diagnostic Test Program Execution Check .....	40
	Procedure 2    Connector Check and Replacement Check.....	42
2.12	LAN Troubleshooting.....	42
	Procedure 1    Diagnostic Test Program Execution Check .....	42
	Procedure 2    Connector Check and Replacement Check.....	42
2.13	Wireless LAN Troubleshooting.....	43
	Procedure 1    Transmitting-Receiving Check .....	43
	Procedure 2    Antennas' Connection Check .....	44
	Procedure 3    Replacement Check .....	45
2.14	Sound Troubleshooting.....	46
	Procedure 1    Connector Check.....	46
	Procedure 2    Replacement Check .....	47
2.15	Fingerprint Troubleshooting.....	48
	Procedure 1    Diagnostic Test Program Execution Check .....	48
	Procedure 2    Connector Check and Replacement Check.....	48
2.17	Bluetooth Troubleshooting .....	49
	Procedure 1    Diagnostic Test Program Execution Check .....	49
	Procedure 2    Connector Check and Replacement Check.....	49

### **Chapter 3 Test Program for Field**

3.1	Tests and Diagnostics Software Overview .....	3-3
3.2	Executing the Diagnostic Test .....	3-4
3.3	Subtest names.....	3-8



3.4	System Test.....	3-11
3.5	Memory Test.....	3-13
3.6	Keyboard Test.....	3-16
3.7	Display Test .....	3-19
3.8	Floppy Disk Test.....	3-34
3.9	Hard Disk Test .....	3-36
3.10	Real Time Clock Test .....	3-39
3.11	Cache Memory Test.....	3-41
3.12	High Resolution Display Test.....	3-43
3.13	Multimedia Test.....	3-49
3.14	MEMORY2 Test.....	3-50
3.15	Error Codes and Error Status Names .....	3-52
3.16	Running Test.....	3-54
3.17	DMI INFORMATION.....	3-55
	3.17.1    Check DMI Information.....	3-55
	3.17.2    Write DMI Information.....	3-55
3.18	Log Utilities .....	3-57
	3.18.1..... Operations.....	3-57
3.19	System Configuration .....	3-59
3.20	Running Test Edit Item.....	3-60
	3.20.1..... Function Description.....	3-60
	3.20.2    Operation Description.....	3-60
3.21	Common Tests an Operation .....	3-62
	3.21.1..... How to operate a window .....	3-62
	3.21.2..... How to Stop the Test Program .....	3-62
	3.21.3..... Test Status Screen .....	3-62

3.21.4 .....	Test Stop Display.....	3-64
3.21.5	How to enter data .....	3-64

## Chapter 4 Replacement Procedures

4.1	Overview.....	4-1
	Safety Precautions.....	4-2
	Before You Begin .....	4-3
	Disassembly Procedure.....	4-4
	Assembly Procedure .....	4-5
	Tools and Equipment .....	4-5
	Screw Tightening Torque .....	4-6
	Grip Color.....	4-6
	Screw Notation.....	4-7
4.2	Battery pack .....	4-8
4.3	PC card.....	4-10
4.4	HDD.....	4-12
4.5	Wireless LAN card .....	4-16
4.6	Memory module.....	4-19
4.7	Keyboard.....	4-22
4.8	Optical disk drive.....	4-25
4.9	Display assembly .....	4-28
4.10	Cover assembly.....	4-34
4.11	Touch pad.....	4-38
4.12	Audio board .....	4-39
4.13	Lan board .....	4-40
4.14	System board.....	4-44
4.15	CPU.....	4-47
4.16	LCD unit / FL inverter .....	4-50
4.17	Application for grease(Denka FCR-AS) on North Bridge.....	4-55

## Appendices

Appendix A	Handling the LCD Module .....	A-1
Appendix B	Board Layout .....	B-1
Appendix C	Pin Assignments.....	C-1
Appendix D	Keyboard Scan/Character Codes .....	D-1
Appendix E	Key Layout.....	E-1
Appendix F	Wiring Diagrams.....	F-1
Appendix G	BIOS Rewrite Procedures .....	G-1
Appendix H	EC/KBC Rewrite Procedures.....	H-1
Appendix I	Reliability.....	I-1

---

# Chapter 1

## Hardware Overview

---

1.1	Features .....	1
1.2	System Block Diagram .....	5
1.3	2.5-inch Hard Disk Drive.....	9
1.4	Optical Drive.....	12
	1.4.1    DVD-ROM & CD-R/RW Drive .....	12
	1.4.2    DVD Super Multi Drive.....	14
1.5	Keyboard.....	17
1.6	TFT Color Display.....	18
	1.6.1    LCD Module .....	18
	1.6.2.....CCFL Invertor Board.....	21
1.7	Power Supply .....	22
1.8	Batteries .....	23
	1.8.1    Main Battery.....	23
	1.8.2    Battery Charging Control .....	24
	1.8.3    RTC battery .....	25
1.9	AC Adapter .....	26

**Figures**

Figure 1-1	Front of the computer.....	4
Figure 1-2	System block diagram.....	5
Figure 1-3	2.5-inch HDD.....	9
Figure 1-4	DVD-ROM & CD-R/RW drive .....	12
Figure 1-5	DVD Super Muti drive.....	14
Figure 1-6	Keyboard.....	17
Figure 1-7	LCD module.....	18

**Tables**

Table 1-1	2.5-inch HDD dimensions .....	9
Table 1-2	2.5-inch HDD specifications.....	10
Table 1-3	DVD-ROM & CD-R/RW drive outline dimensions.....	12
Table 1-4	DVD-ROM & CD-R/RW drive specifications .....	13
Table 1-5	DVD Super Multi drive outline dimensions .....	14
Table 1-6	DVD Super Multi drive specifications .....	15
Table 1-7	LCD module specifications.....	20
Table 1-8	FL inverter board specifications .....	22
Table 1-9	Power supply output rating .....	23
Table 1-10	Battery specifications.....	24
Table 1-11	Time required for charges of main battery .....	25
Table 1-12	Data preservation time .....	25
Table 1-13	Time required for charges of RTC battery.....	26
Table 1-14	AC adapter specifications .....	27

Features

## 1.1 Features

The Satellite M300 (Intel Platform) series are 2 spindle PCs running

Intel® Celeron® Processor 540 or higher.

Intel® Core™ 2 Duo Processor (667MHz) T5450 or higher.

Intel® Core™ 2 Duo Processor (800MHz) T8100 or higher.

The features are listed below.

### θ Microprocessor

Microprocessor that is used will be different by the model.

It supports processors as follows

#### Intel Core 2 Duo

FSB : 667 MHz

T5450(1.67GHz)

T5550(1.83GHz)

T5750(2.0GHz)

FSB: 800MHz

T8100(2.1GHz)

T8300(2.4GHz)

T9300(2.5GHz)

T9500(2.6GHz)

#### Intel Celeron

FSB : 533MHz

M540 (1.86GHz)

M550 (2.0GHz)

M560(2.13GHz)

### θ Memory

Two DDRII SO-DIMM (667/800MHz specification compliant) up to **2GB for GL960** can be upgraded through Memory Module Slot. Maximum upgradeable system memory may depend on the model

θ VRAM

**Shared with System RAM for Intel GM965/GL960**

θ HDD

120GB, 160GB, 200GB, 250GB, 320GB internal drives. 2.5 inch x 9.5mm height.

θ USB FDD (Option)

Toshiba external USB FDD for option

θ Display

LCD (CCFL)

14.1-inch, 1,280 (H) x 800 (V) WXGA 262,144 colors + CCFL, High-brightness, CSV, amorphous silicon TFT color display.

CRT

Supported via a RGB connector.

θ Keyboard

Toshiba Standard keyboard with 86-88 keys (desktop-style), Support Windows keys & Application keys. (Toshiba standard layout) Standard pitch, 2.5mm travel length. Multi-langue support.

θ Optical devices

A Combo drive or DVD Super Multi or HD-DVD Rom drive is equipped.

θ Battery

The RTC battery is equipped inside the computer.  
It is good with no external power source for 1month on average.



The main battery is a detachable lithium ion battery.

3 cell Li-Ion 10.8v/1800mAh

6 cell Li-Ion 10.8v/4800mAh

9 cell Li-Ion 10.8v/7200mAh

θ USB (Universal Serial Bus)

3 USB ports are provided. The ports comply with the USB2.0 standard, which enables data transfer speeds 40 times faster than USB1.1 standard. USB1.1 is also supported.

θ Sound system

Internal stereo speaker, Internal MIC (Option) external monaural microphone connector, stereo headphone connector.

θ Wireless LAN

The wireless LAN is equipped on the mini card slot.

θ LAN/MODEM

Connectors for LAN and Modem are separately mounted.

θ 1394

One 1394 port is equipped.

θ Multiple Digital Media Card Slot

XD/MS/MS pro/SD/MMC are supported

θ Bluetooth

USB Bluetooth Module (BTO) V2.1 & EDR(Enhanced Data Rate) equipped

θ Security

Kensington Lock,

Fingerprint –Enhanced Lock is also equipped.

HDD Password

3D Accelerometer for HDD

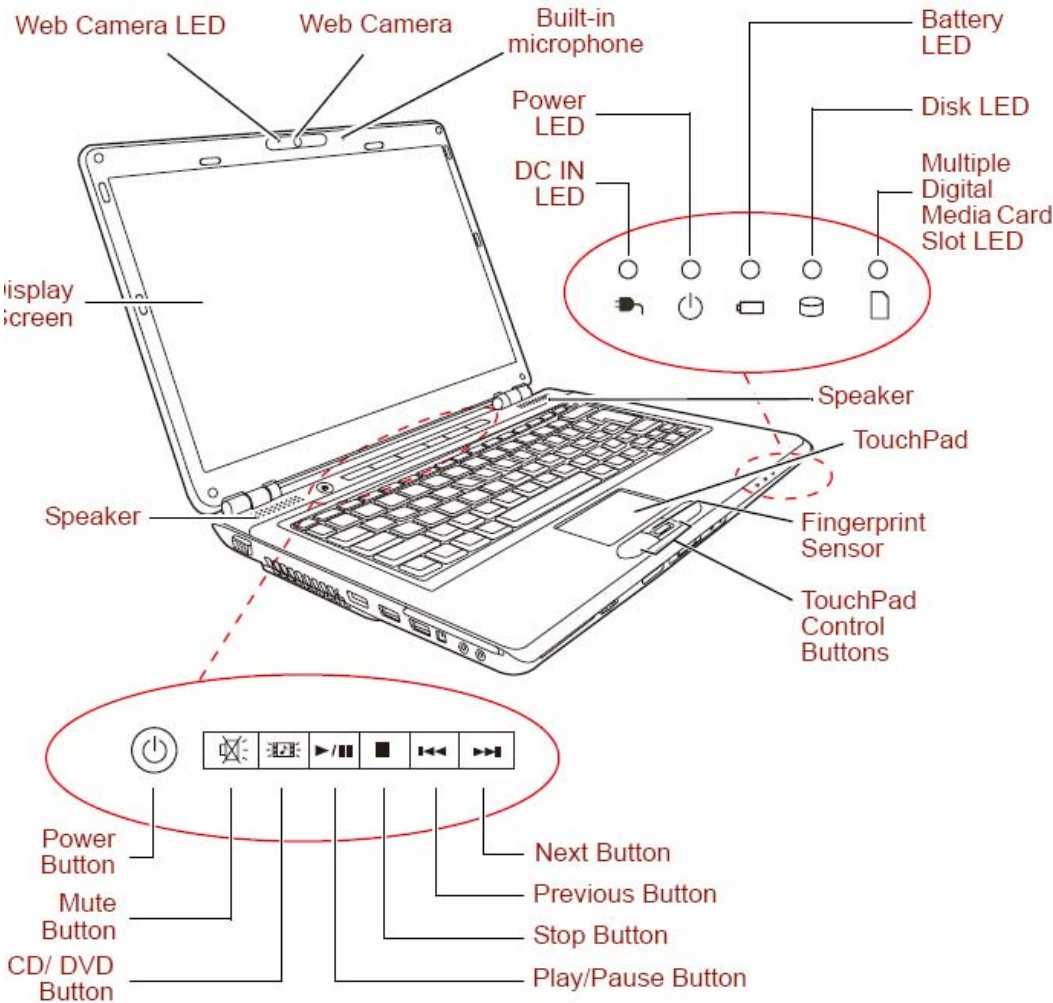


Figure 1-1 Front of the computer

## 1.2 System Block Diagram

Figure 1-2 shows the system block diagram.

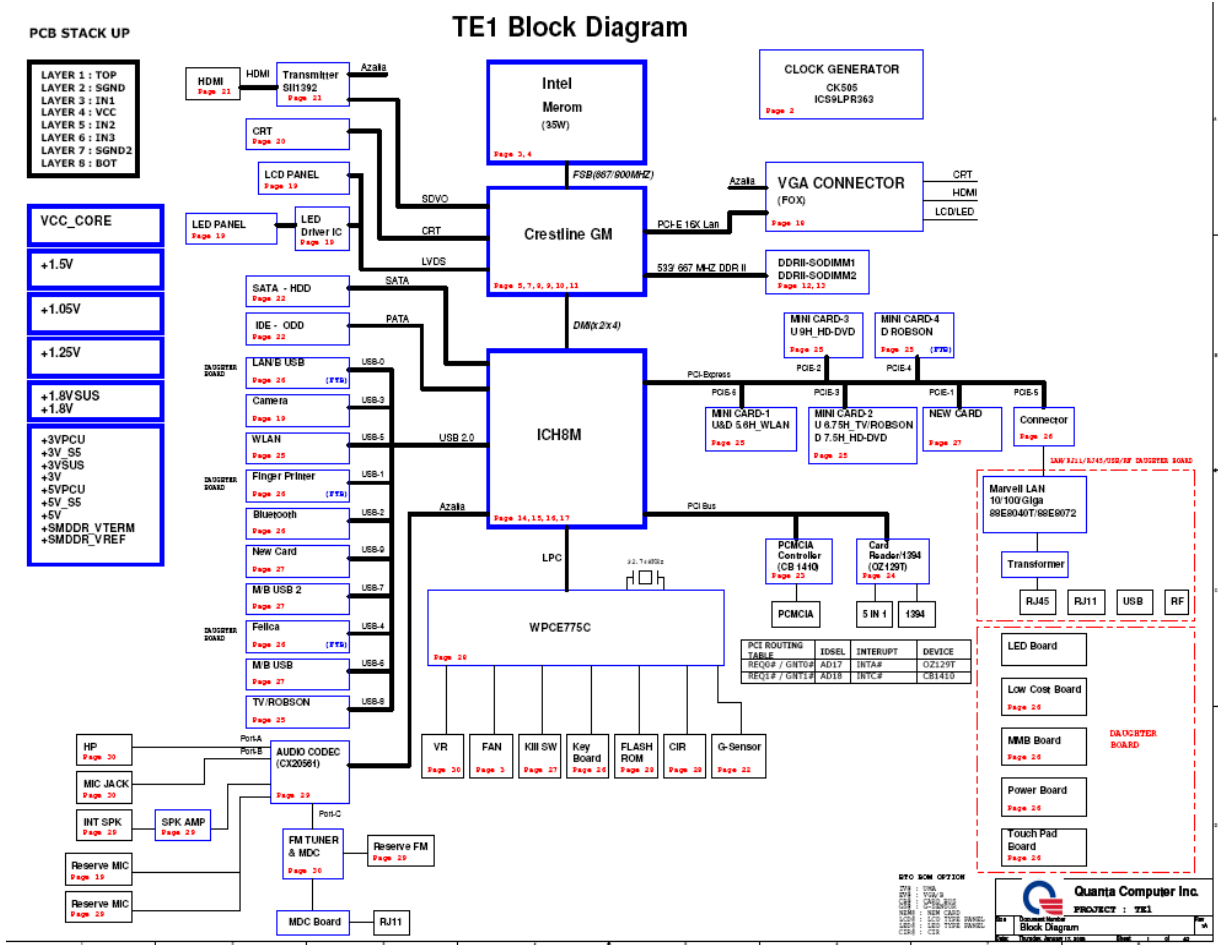


Figure 1-2 System block diagram for Intel Platform

The PC contains the following components.

θ CPU

**Intel Core 2 Duo**

FSB : 667 MHz	T5450(1.67GHz)
	T5550(1.83GHz)
	T5750(2.0GHz)

FSB: 800MHz	T8100(2.1GHz)
-------------	---------------

	T8300(2.4GHz)
--	---------------

	T9300(2.5GHz)
--	---------------

	T9500(2.6GHz)
--	---------------

**Intel Celeron**

FSB : 533MHz	M540 (1.86GHz)
	M550 (2.0GHz)

	M560(2.13GHz)
--	---------------

θ Memory

Two memory slots capable of accepting DDRII-SDRAM 512MB,1GB or 2GB memory modules for a maximum of 2GB for GL960

- 200-pin SO-DIMM
- 1.8V operation
- PC2 5300 support/PC2

θ BIOS ROM (Flash memory)

- 8Mbit

θ Chipset (Santa Rosa Platform)

This gate array has the following elements and functions.

- North Bridge (Intel GM965/GL960)

- Merom-M processor System Bus support
  - DRAM Controller : DDRII 533/667 support
  - DMI
  - 1299-ball 35 x 35mm Mirco FC-BGA Package
- South Bridge (Intel 82801HBM ICH8-M)
    - Direct Media Interface (DMI)
    - PCI Express
    - Serial ATA (SATA) Controller
    - PCI Interface
    - IDE Interface
    - Low Pin count (LPC) interface
    - Serial Peripheral Interface (SPI)
    - DMA controller
    - Advanced Programmable Interrupt Controller (APIC)
    - USB Controllers
    - Gigabit Ethernet Controller
    - RTC
    - GPIO
    - Enhanced Power Management
    - SMBus 2.0
    - High Definition Audio Controller
    - 676-pin 31mmx31mm mBGA Package
- θ PC card controller (CB1410, ENE Technology INC.)
- PCI Interface (PCI Rev. 2.2)
  - PC Card Controller
- θ Other main system chips
- Clock Generator (Santa Rosa Platform: ICS9LPRS365BGLF)

- EC/KBC –[W/CIR(Winbond WPCE775CA0DG)] –[WO/CIR(Winbond WPCE775LA0DG)]
- HD Audio (CONEXANT CX20561-12Z)
- Audio AMP (GMT G1441R51U)
- Card Reader controller (O2 OZ129TN)
- 10/100 LAN controller (Marvell 88E8040T-A0-NNC1C000)
- Giga LAN controller (Marvell 88E8072-B1-NNC1C000)

θ Mini Card

Wireless LAN card (BTO)

2.4 GHz DSSS/OFDM LAN card is equipped. Conformity with IEEE 802.11b/g and IEEE 802.11a/b/g.. Transfer speed maximum is 54Mbit/sec. supports 128bit WEP.

θ MODEM (Conexant x 1)

Supported by on board Modem + DAA daughter card.

Data and FAX transmission is available.

Supports ITU-TV.90.

The transfer speed of data receiving is 56kbps, of data sending is 33.6kbps and of FAX is 14.4kbps. Actual speed depends on the quality of the line used.

Connected to telephone line through RJ11 MOD

θ Blue tooth

Mini USB Bluetooth Module (BTO) V2.1.

### 1.3 2.5-inch Hard Disk Drive

A compact, high-capacity HDD with a height of 9.5mm. Contains a 2.5-inch magnetic disk and magnetic heads.

Figure 1-3 shows a view of the 2.5-inch HDD and Tables 1-1 and 1-2 list the specifications.

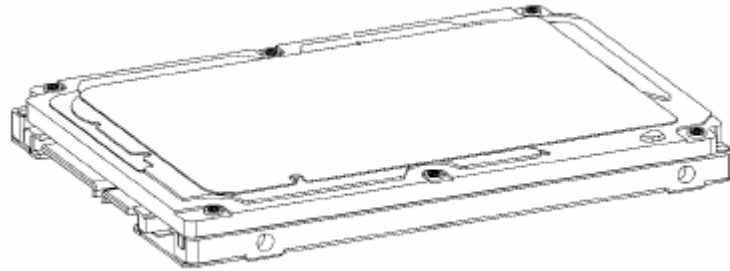


Figure 1-3 2.5-inch HDD

Table 1-1 2.5-inch HDD dimensions

Parameter		Standard value				
		TOSHIBA MK1246GSX	TOSHIBA MK1646GSX	TOSHIBA MK2046GSX	TOSHIBA MK2546GSX	TOSHIBA MK3252GSX
Outline Dimensions	Width (mm)	69.8				
	Height (mm)	9.5				
	Depth (mm)	100.0				
	Weight (g)	98	102	102	102	102

Parameter		Standard value			
		Fujitsu MHY2120BH	Fujitsu MHY2160BH	Fujitsu MHY2200BH	Fujitsu MHY2250BH
Outline Dimensions	Width (mm)	100			
	Height (mm)	9.5			
	Depth (mm)	70			
	Weight (g)	96	101	101	101

Parameter		Standard value			
		Hitachi HTS542512k9SA00	Hitachi HTS542516k9SA00	Hitachi HTS542520K9SA00	Hitachi HTS542525k9SA00
Outline Dimensions	Width (mm)	69.85 +/- 0.25			
	Height (mm)	9.5 +/- 0.2			
	Depth (mm)	100.2 +/- 0.25			
	Weight (g)	95 max	102 max	102 max	102 max

Table 1-2 2.5-inch HDD specifications

Parameter	Specification				
	TOSHIBA MK1246GSX	TOSHIBA MK1646GSX	TOSHIBA MK2046GSX	TOSHIBA MK2546GSX	TOSHIBA MK3252GSX
storage size(formatted)	120GB	160GB	200GB	250GB	320GB
Speed (RPM)	5400				
Data transfer Rate - To/From Media - T0/From Host	730Mbits Media 300MBytes Host			794Mbits Media 3GBytes Host	
bus transfer rate (MB/s)	ATA8/SATA 2.6				
Average random seek time (read) (ms)	12ms				
Power-on-to- ready (sec)	3.5 sec<typical> 9.5 sec <Max>				

Parameter	Specification			
	Fujitsu MHY2120BH	Fujitsu MHY2160BH	Fujitsu MHY2200BH	Fujitsu MHY2250BH
storage size(formatted)	120GB	160GB	200GB	250GB
Speed (RPM)	5400			
Data transfer Rate - To/From Media - T0/From Host	84.6MB/s 1.5Gbps(150MB/s)			
bus transfer rate	1.5Gbps(150MB/s)			



(MB/s)	
Average random seek time (read) (ms)	12.0ms/14.0ms
Power-on-to-ready	4.0s

Parameter	Specification			
	Hitachi HTS542516k9SA00	Hitachi HTS542520K9SA00	Hitachi HTS542525k9SA00	Hitachi HTS542525k9SA00
storage size(formatted)	120GB	160GB	200GB	250GB
Speed (RPM)	5400			
Data transfer Rate - To/From Media - T0/From Host	665 (Mb/s), (max)			
bus transfer rate (MB/s)	150 (MB/s)			
Average random seek time (read) (ms)	11 ms			
Power-on-to-ready (sec)	3.5 sec			

## 1.4 Optical Drive

### 1.4.1 DVD-ROM & CD-R/RW Drive

The DVD-ROM & CD-R/RW drive accommodates either 12 cm (4.72-inch) or 8 cm (3.15-inch) CD/DVD-ROM and CD-R/RW. It is a high-performance drive that reads DVD at maximum 8-speed and CD at maximum 24-speed.

The DVD-ROM & CD-R/RW drive is shown in Figure 1-4. The dimensions and specifications of the DVD-ROM & CD-R/RW drive are described in Table 1-3, Table 1-4.

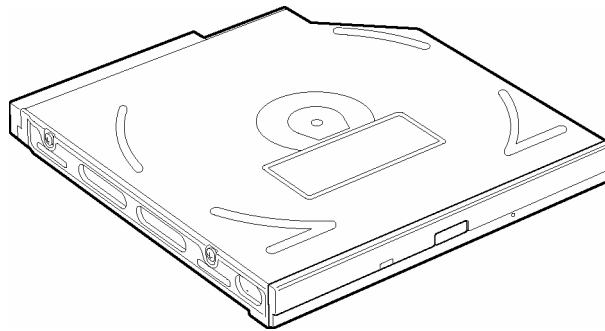


Figure 1-4 DVD-ROM & CD-R/RW drive

Table 1-3 DVD-ROM & CD-R/RW drive outline dimensions

Parameter		Standard value
Outline dimension	Maker	TEAC DW-224E-VT7
	Width (mm)	127.7
	Height (mm)	12.7
	Depth (mm)	126.1
	Mass (g)	173 or less

Table 1-4 DVD-ROM & CD-R/RW drive specifications (1/3)

Parameter		Drive Specification
		TEAC DW-224E-VT7
Data transfer speed	Read (KB/s)	1,545 to 3,600(KB/s) CD-ROM model 4,469 to 10,816(KB/s) DVD-ROM
	Write	CD-R:24x CAV, 16x CAV, 10x CLV, 4x CLV MS CD-RW:4x CLV HS CD-RW:10x CAV, 10x CLV, 4x CLV US CD-RW:24x CAV, 10x CLV US+ CD-RW:Not supported
	ATAPI interface (MB/s)	Programmed I/O 16.7MB/sec max(Mode 0 to 4) Multi-word DMA 16.7MB/sec max(Mode 0 to 2) Ultra DMA 33.3MB/sec max
Access time (ms) (Random)	CD-ROM	90msc
	DVD-ROM	110msc
Buffer memory		2MB
Supported disk format	CD	CD-DA CD-ROM (MODE1, MODE2) CD-ROM XA MODE2 (Form1, Form2) Photo CD (Single/Multi-session) CD-I Video-CD CD-Extra (CD-Plus) CD-Text
	DVD	DVD-ROM DVD-Video DVD-R (Single/Multi-border) DVD-R DL (Single/Multi-border) DVD-RW (Single/Multi-border) DVD+R (Single/Multi-session) DVD+R DL (Single/Multi-session) DVD+RW (Single/Multi-session) DVD-ROM (4.7GB, 2.6GB)

### 1.4.2 DVD Super Multi Drive

The DVD Super Multi drive accommodates either 12 cm (4.72-inch) or 8 cm (3.15-inch) CD/DVD-ROM, CD-R/RW, DVD±R/±RW and DVD-RAM. It is a high-performance drive that reads DVD-ROM at maximum 8-speed and CD at maximum 24-speed. Write speed of DVD±R/±RW and DVD-RAM is different depending on the drive.

The DVD Super Multi drive is shown in Figure 1-5. The dimensions and specifications of the DVD Super Multi drive are described in Table 1-5, Table 1-8.

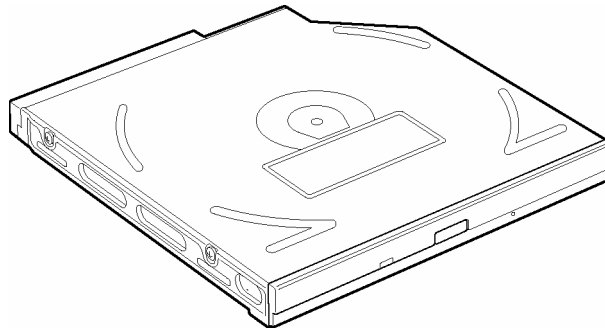


Figure 1-5 DVD Super Multi drive

Table 1-5 DVD Super Multi drive outline dimensions

Parameter		Standard Value			
Outline dimension	Maker	TST TS-L632H	TST TS-L632P	PNR DVR-KD08TBT	PNR DVR-KD08TBL
	Width (mm)	122.4	122.4	128	128
	Height (mm)	12.7	12.7	12.7	12.7
	Depth (mm)	126	126	134	134
	Mass (g)	104	104	176.2	176.2

Table 1-6 DVD Super Multi drive specifications (1/4)

Parameter		Drive Specification			
		TST	TST	PNR	PNR
		TS-L632H	TS-L632P	DVR-KD08TBT	DVR-KD08TBL
Data transfer speed	Read (KB/s)	CD-ROM 3600 KB/s CD-R 3600 KB/s CD-RW 3600 KB/s DVD-ROM(L) 10800 KB/s DVD+/-R Dual8100KB/s DVD-RAM 6750 KB/s	CD-ROM 3600 KB/s CD-R 3600 KB/s CD-RW 3600 KB/s DVD-ROM(SL) 10800 KB/s DVD+/-R Dual 8100 KB/s DVD-RAM 6750 KB/s	CDInner 1,545 Outer 3,600 (10.3-24XCAV mode over16 Block Transfer)DVD(single Layer)Inner 4,455 Outer 10,800 (3.3X-8X CAV mode Over16 Block Transfer)DVD-RM Inner 4,155 Outer 6,925  (3X-5XZone-CLV mode Over16 Block Transfer)	CDInner 1,545 Outer 3,600 (10.3-24X CAV mode over16 Block Transfer)DVD(single Layer)Inner 4,455 Outer 10,800 (3.3X-8X CAV mode Over16 Block Transfer)DVD-RAM Inner 4,155 Outer 6,925 (3X-5XZone-CLV mode Over16 Block Transfer)
	Write	CD-R 3600 KB/s MS CD-RW 600 KB/s HS CD-RW 1500 KB/s US CD-RW 2400 KB/s US+ CD-RW Not Support DVD+R/-R 10800 KB/s	CD-R 3600 KB/s MS CD-RW 600 KB/s HS CD-RW 1500 KB/s US CD-RW 2400 KB/s US+ CD-RW Not Support DVD+R/-R 10800 KB/s	CDInner 1,500 Outer 3,600 (24x Zone-CLV CD-R write)DVD-RInner 2,700Outer 10,800 (8X Zone-CLV write)DVD+R Inner 3,240Outer 10,800(8X Zone-CLV write)DVD-RAM Inner 4,155Outer 6,925 (3X-5X Zone-CLV write)	CDInner 1,500 Outer 3,600 (24x Zone-CLV CD-R write) DVD-R Inner 2,700 Outer 10,800 (8X Zone-CLV write) DVD+R Inner 3,240 Outer 10,800 (8X Zone-CLV write) DVD-RAM Inner 4,155 Outer 6,925 (3X-5X Zone-CLV write)
	ATAPI interface (MB/s)	MAX 33.2MB/s	MAX 33.2MB/s	16.6(PIO Mode4/MultiwordDMA Mode2) 33.3(UltraDMAMode2)	16.6(PIO Mode4/MultiwordDMA Mode2) 33.3(UltraDMA Mode2)
Access time (ms) (Random)	CD-ROM	130 ms	130 ms	Ave.140(CD-ROM Mode1Disc is used)	Ave.140(CD-ROM Mode 1 Disc is used)
	DVD-ROM	130 ms	130 ms	Ave.150 (DVD-ROM Single	Ave.150 (DVD-ROM Single

				Layer Disc is used)	Layer Disc is use
		2 M	2 M	2 Mbytes	2 Mbytes
Buffer memory					
Supported disk format	CD	650MB CD-ROMR(Rad Only) 80mm CD(Horizontal Mount only) 800/700/650 CD-Recordable (Read & Write) 700/650 MB CD-Rewritable (Read & Write) 700/650MB High Speed CD-Rewritable (Read & Write) 700/650 MB Ultra Speed CD-Rewritable (Read & Write) Ultra+ Speed CD-Rewritable (Read Only)	650MB CD-ROMR(Read Only) 80mm CD(Horizontal Mount only) 800/700/650 CD-Recordable (Read & Write) 700/650 MB CD-Rewritable (Read & Write) 700/650MB High Speed CD-Rewritable (Read & Write) 700/650 MB Ultra Speed CD-Rewritable (Read & Write) Ultra+ Speed CD-Rewritable (Read Only)	CD-ROM Mode1 CD-ROM XA Mode2 (form1, form2) Photo CD ( single and multiple session) Video CD CD-DA CD-Extra Mixed-CD CD-Text CD-R CD-RW(Supports AM2) HSCD-RW(Supports AM2) USCD-RW(Supports AM2) US+CD-RW(Supports AM2)(*Read only)	CD-ROM Mode1 CD-ROM XA Mode2 (form1, form2) Photo CD ( single and multiple session) Video CD CD-DA CD-Extra Mixed-CD CD-Text CD-R CD-RW(Supports AM2) HSCD-RW(Supports AM2) USCD-RW(Supports AM2) US+CD-RW(Supports AM2)(*Read only)
	DVD	5/9/10/18 G DVD-Single/Dual (PTP, OTP) (Read Only) 4.7G DVD+-R/RW (Read & Write) DVD+-R Dual (Read & Write) DVD-RAM (Read & Write)80mm DVD	5/9/10/18 G DVD-Single/Dual (PTP, OTP) (Read Only) 4.7G DVD+-R/RW (Read & Write) DVD+-R Dual (Read & Write) DVD-RAM (Read & Write) 80mm DVD	DVD (DVD-5; Single layer, Single side 4.7Gbytes) DVD (DVD-9; Dual layer, Single	DVD (DVD-5; Single layer, Single side 4.7Gbytes) DVD (DVD-9; Dual layer, Single

## 1.5 Keyboard

The Harrison10S/10SG keyboard has two different kinds of placement, one is for JP style and the other is for US/UK style.

Figure 1-6 is a view of the keyboard for US/UK style

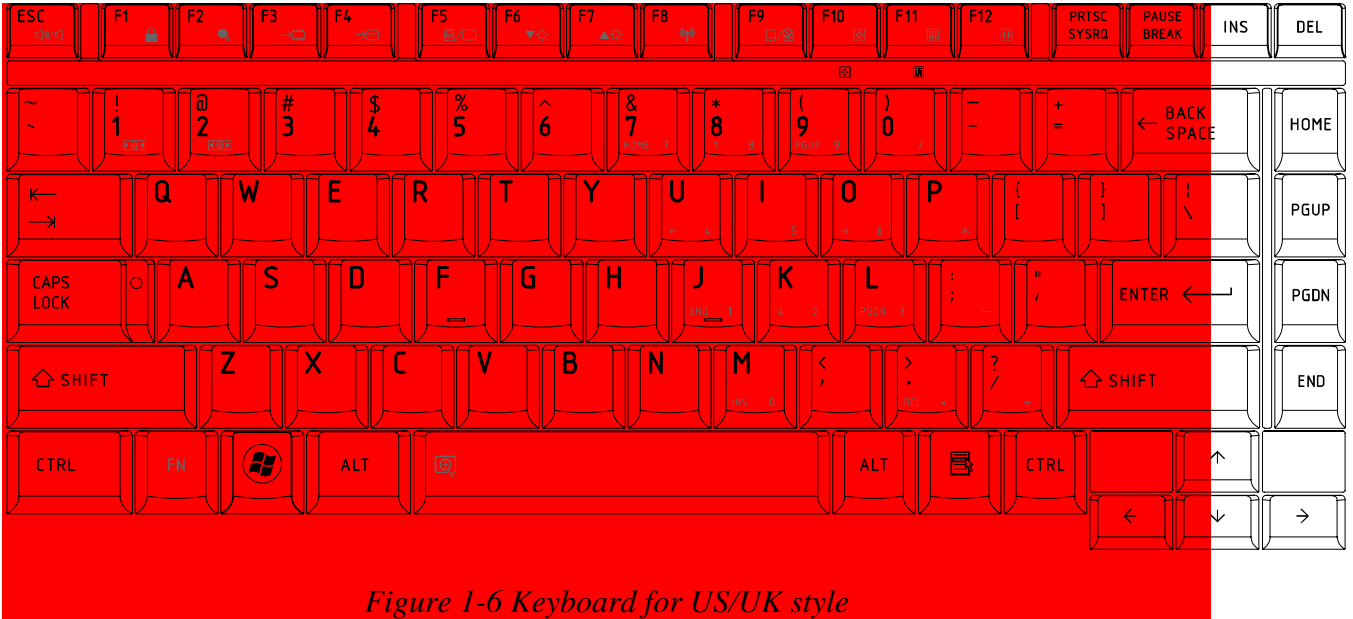


Figure 1-6 Keyboard for US/UK style

Figure 1-7 is a view of the keyboard for JP style

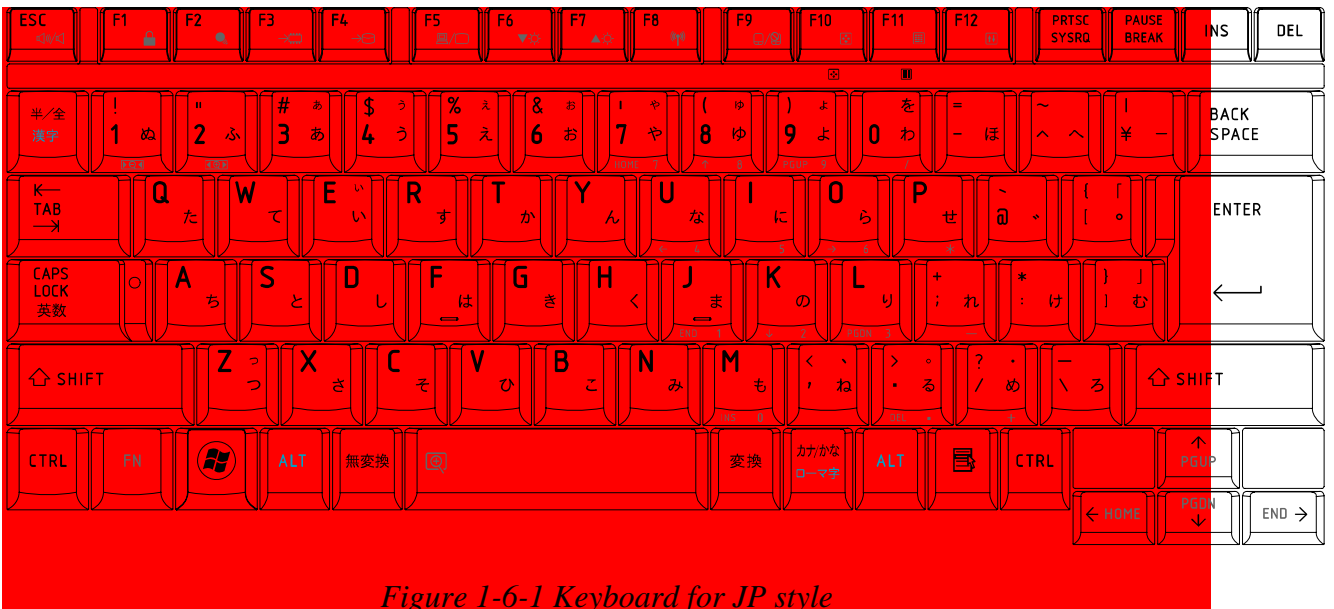


Figure 1-6-1 Keyboard for JP style

See Appendix E for details of the keyboard layout.



## 1.6 TFT Color Display

The Satellite M300 Panel has 1 model, CCFL backlight.

### 1.6.1 LCD Module with CCFL Backlight

Figure 1-7 ~ 1-10 shows a view of the LCD module and Table 1-7 lists the specifications.

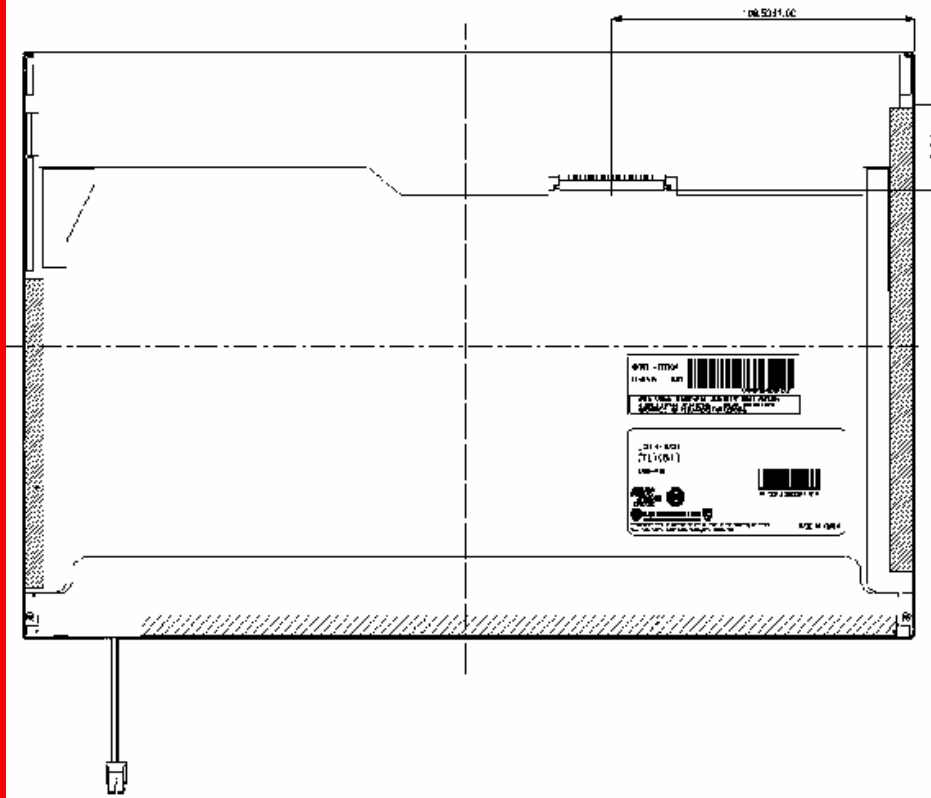


Figure 1-7 LG-Philips LCD Module

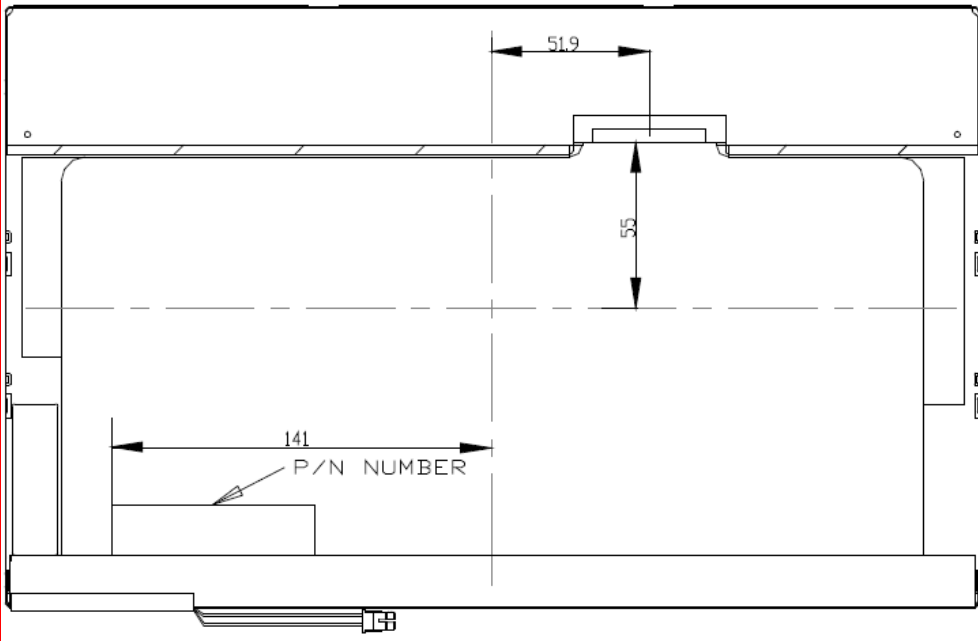


Figure 1-8 AUO LCD Module

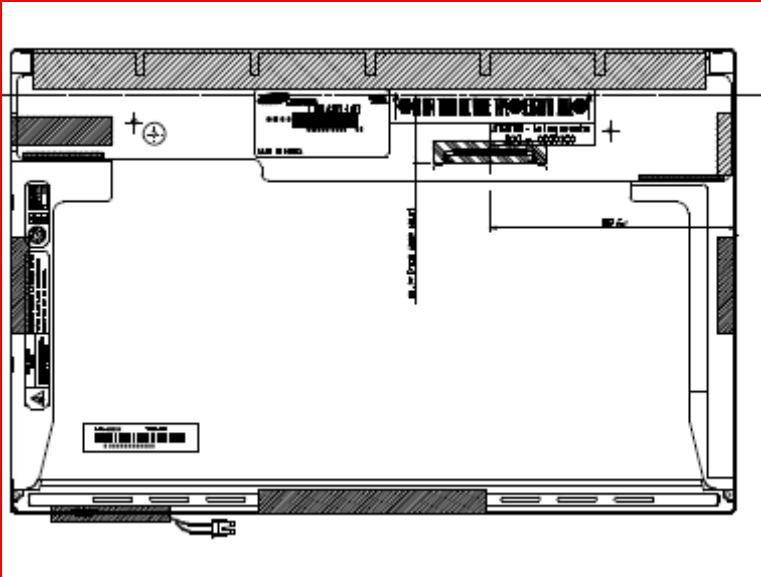


Figure 1-9 Samsung LCD Module

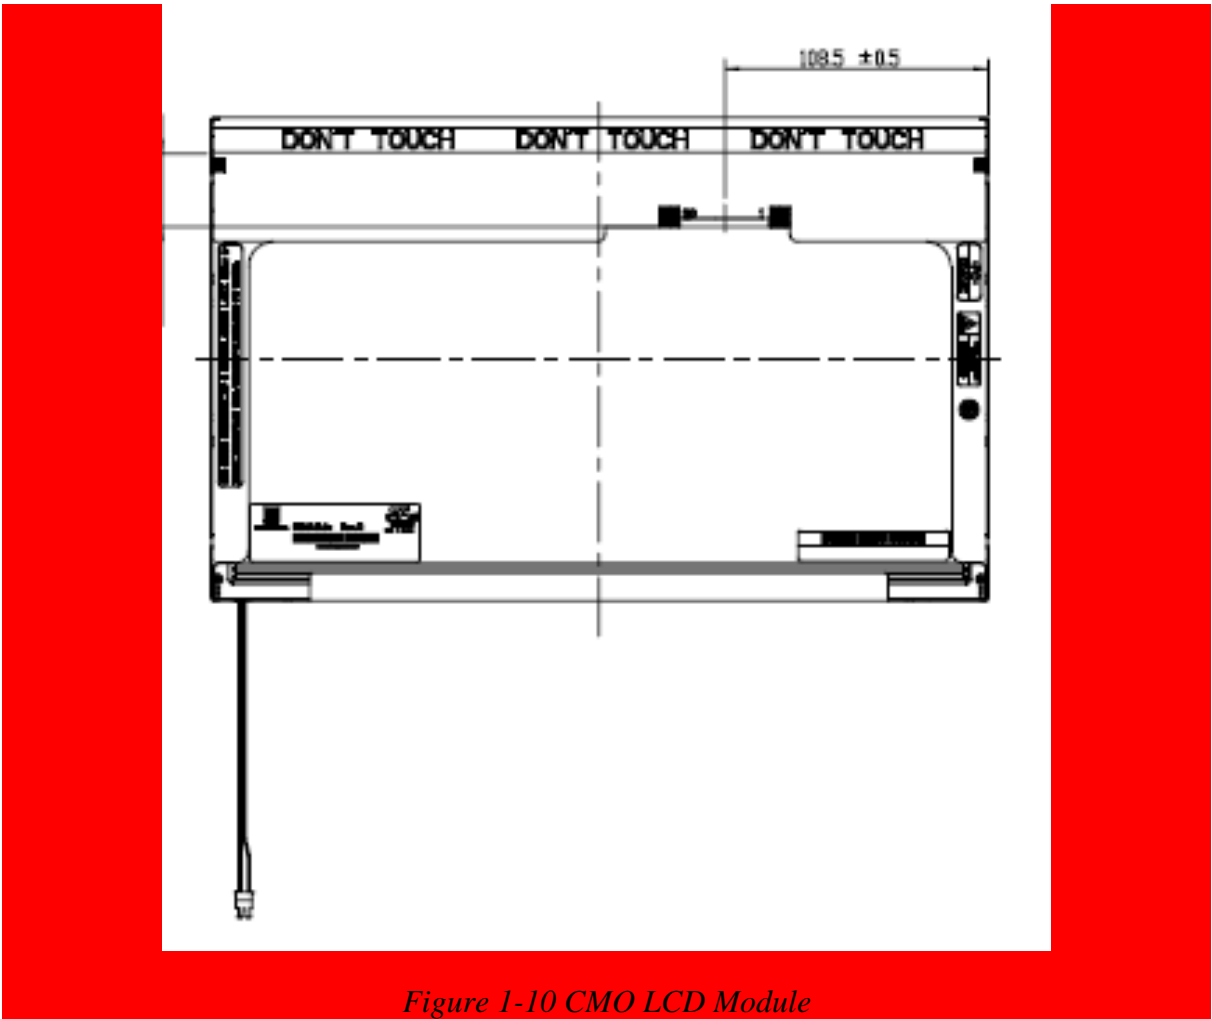


Figure 1-10 CMO LCD Module

Table 1-7 LCD module specifications

Item	Specifications(WXGA)			
	LG LP141WX3- TLN1	AUO B141EW04 V4	Samsung LTN141AT03- 401	CMO N141I3-L02
Number of Dots	1,280x 800			
Dot spacing (mm)	0.237(H)× 0.237(V)			

## 1.6.2 CCFL Inverter Board

Table 1-10 lists the FL inverter board specifications.

*Table 1-8 FL inverter board specifications*

Item		Specifications			
		Foxconn T18I095.00	Delta DAC-08N035 AF	SUMIDA TWS-449-308	TDK TBD485NR
Input	Voltage (V)	8~20	8~20	8~20	8~20
	Power (W)	7.5W	7.5W	7.5W	7.5W
Output	Voltage (Vrms)	612~945	612~945	612~945	612~945
	Current (f=55KHz)(mA <sub>rms</sub> )	2.3±0.4 ~ 6.5±0.3			

## 1.7 Power Rails

Table 1-9 lists the power rail output specifications of Santa Rosa platform.

*Table 1-9 Santa Rosa Power supply output rating*

Name	Power supply ( Yes/No )			
	Voltage [V]	Power OFF Suspend mode	Power OFF Boot mode	No Battery
+5VPCU	5	Yes	Yes	No
+5V_S5	5	Yes	No	No
+5V	5	No	No	No
+5VSATA	5	No	No	No
USBPWR	5	No	No	No
+5V_TP	5	No	No	No
VCCRTC	3.3	Yes	Yes	Yes
TH_FAN_POWER	3.1~5	No	No	No
+3VPCU	3.3	Yes	Yes	No
+3V_S5	3.3	Yes	No	No
+3VSUS	3.3	Yes	No	No
+3V	3.3	No	No	No
CCD_POWER	3.3	No	No	No
+5V_Felica	5	No	No	No
VCC_XD	3.3	No	No	No
+1.8VSUS	1.8	Yes	No	No
+1.8V	1.8	No	No	No
+1.5V	1.5	No	No	No
+1.25V	1.25	No	No	No
+1.05V	1.05	No	No	No
+SMDDR_VREF	0.9	Yes	No	No
+SMDDR_VTERM	0.9	No	No	No
VCC_CORE	0.55~1.575	No	No	No

## 1.8 Batteries

The PC has the following two batteries.

- θ Main battery
- θ Real time clock (RTC) battery

Table 1-10 lists the specifications for these two batteries.

*Table 1-10 Battery specifications*

Battery Name		Battery Element	Output Voltage	Capacity
Main battery	Sanyo 3 cell	Lithium ion	10.8v	1800mAh
	Sanyo 6 Cells		10.8v	3700mAh
	Sanyo 6 cells		10.8v	4800mAh
	Sanyo 9 cell		10.8v	7200mAh
Real time clock (RTC) battery	VARTA ML1220	Lithium ion	3V	16mAh

### 1.8.1 Main Battery

The main battery is the primary power supply for the computer when the AC adapter is not connected. In Standby, the main battery maintains the current status of the computer.

1.8.2 Battery Charging Control

Battery charging is controlled by a power supply microprocessor. The power supply microprocessor controls power supply and detects a full charge when the AC adaptor and battery are connected to the computer.

Ø Battery Charge

When the AC adapter is connected, normal charging is used while the system is turned on and quick charge is used while the system is turned off. Refer to the following Table 1-11.

Table 1-11 Time required for charges of main battery

Condition	Charging Time
Power On Charge	About 12 hours-
Power Off Charge	About 4 hours

Charge is stopped in the following cases.

- 1. The main battery is fully charged
- 2. The main battery is removed
- 3. Main battery or AC adapter voltage is abnormal
- 4. Charging current is abnormal

Ø Data preservation time

When turning off the power in being charged fully, the preservation time is as following Table 1-12.

Table 1-12 Data preservation time

Condition	preservation time	
Standby	About 3 days	
Hibernation	About 1 month	
Battery Pack	3 cell	Approximately 1.5 days(sleep mode)
	6 cell	Approximately 3 days(sleep mode)
	9 cell	Approximately 5 days(sleep mode)
Approximately 1 month(shutdown mode, All type of battery pack		

### 1.8.3 RTC Battery

The RTC battery provides the power supply to maintain the date, time, and other system information in memory.

Table 1-13 lists the Time required for charges of RTC battery and data preservation time.

*Table 1-13 Time required for charges of RTC battery*

<b>Condition</b>	<b>Time</b>
Power ON (Lights Power LED)	About 24 hours
Data preservation tome (Full-charged)	About a month



## 1.9 AC Adapter

The AC adapter is used to charge the battery.

Table 1-14 lists the AC adapter specifications.

*Table 1-14 AC adapter specifications*

Parameter	Specification	
With Led	<b>DELTA/ LITE-ON</b>	<b>DELTA/ LITE-ON</b>
Power	90W	75W
Input voltage	AC 100V/240V	AC 100V/240V
Input frequency	50Hz/60Hz	
Input current	$\leq 1.5A$	$\leq 1.5A$
Output voltage	DC 19V	
Output current	4.74A	3.95A

---

# **Chapter 2**

## **Troubleshooting Procedures**

---

2.1	Troubleshooting .....	1
2.2	Troubleshooting Flowchart.....	3
2.3	Power Supply Troubleshooting.....	7
	Procedure 1    Power Status Check .....	7
	Procedure 2    Error Code Check .....	9
	Procedure 3    Connection Check.....	10
	Procedure 4    Charging Check .....	10
	Procedure 5    Replacement Check .....	12
2.4	System Board Troubleshooting.....	13
	Procedure 1    Message Check .....	14
	Procedure 2    Debugging Port Check.....	16
	Procedure 3    Diagnostic Test Program Execution Check .....	21
	Procedure 4    Replacement Check .....	21
2.5	USB FDD Troubleshooting .....	22
	Procedure 1    FDD Head Cleaning Check .....	22
	Procedure 2    Diagnostic Test Program Execution Check .....	23
	Procedure 3    Connector Check and Replacement Check.....	24
2.6	2.5” HDD Troubleshooting.....	26
	Procedure 1    Partition Check.....	26
	Procedure 2    Message Check .....	27
	Procedure 3    Format Check.....	28
	Procedure 4    Diagnostic Test Program Execution Check .....	29
	Procedure 5    Connector Check and Replacement Check.....	30
2.7	Keyboard Troubleshooting .....	31
	Procedure 1    Diagnostic Test Program Execution Check .....	31
	Procedure 2    Connector Check and Replacement Check.....	32
2.8	Touch pad Troubleshooting .....	33
	Procedure 1    Diagnostic Test Program Execution Check .....	33
	Procedure 2    Connector Check and Replacement Check.....	34

2.9	Display Troubleshooting.....	35
	Procedure 1    External Monitor Check.....	35
	Procedure 2    Diagnostic Test Program Execution Check .....	35
	Procedure 3    Connector and Cable Check.....	36
	Procedure 4    Replacement Check .....	37
2.10	Optical Disk Drive Troubleshooting.....	38
	Procedure 1    Diagnostic Test Program Execution Check .....	38
	Procedure 2    Connector Check and Replacement Check.....	38
2.11	Modem Troubleshooting.....	39
	Procedure 1    Diagnostic Test Program Execution Check .....	40
	Procedure 2    Connector Check and Replacement Check.....	41
2.12	LAN Troubleshooting.....	42
	Procedure 1    Diagnostic Test Program Execution Check .....	42
	Procedure 2    Connector Check and Replacement Check.....	42
2.13	Wireless LAN Troubleshooting.....	43
	Procedure 1    Transmitting-Receiving Check .....	43
	Procedure 2    Antennas' Connection Check .....	44
	Procedure 3    Replacement Check .....	45
2.14	Sound Troubleshooting.....	46
	Procedure 1    Connector Check.....	46
	Procedure 2    Replacement Check .....	47
2.15	Fingerprint Troubleshooting .....	48
	Procedure 1    Diagnostic Test Program Execution Check .....	48
	Procedure 2    Connector Check and Replacement Check.....	48
2.17	Bluetooth Troubleshooting .....	49
	Procedure 1    Diagnostic Test Program Execution Check .....	49
	Procedure 2    Connector Check and Replacement Check.....	49

### 2.1 Troubleshooting

Chapter 2 describes how to determine which Field Replaceable Unit (FRU) in the computer is causing the computer to malfunction.

The FRUs covered are:

- |                 |                       |                        |
|-----------------|-----------------------|------------------------|
| 1. Power supply | 6. Touch pad          | 11. Wireless LAN       |
| 2. System Board | 7. Display            | 12. Sound              |
| 3. USB FDD      | 8. Optical Disk Drive | 13. Finger Print Board |
| 4. 2.5" HDD     | 9. Modem              | 14. Bluetooth          |
| 5. Keyboard     | 10. LAN               |                        |

The Test Program operations are described in Chapter 3. Detailed replacement procedures are described in Chapter 4.

**NOTE:** *After replacing the system board or CPU, it is necessary to execute the subtest 01 initial configuration of the 3.3 Setting of the hardware configuration in Chapter 3. Also update with the latest BIOS as described in Appendix G "BIOS Rewrite Procedures"*

*After replacing the LCD, update with the latest EC/KBC as described in Appendix H "EC/KBC Rewrite Procedures" to set the SVP parameter.*

The implement for the Diagnostics procedures is referred to Chapter 3. Also, following implements are necessary:


1. Phillips screwdrivers (For replacement procedures)
2. Implements for debugging port check
  - Toshiba MS-DOS system FD
  - RS-232C cross cable
  - Test board with debug port test cable
  - PC for displaying debug port test result

## 2 Troubleshooting Procedures

---

There are following two types of connections in the figure of board and module connection in and after 2.3 Power Supply Troubleshooting.

- (1) Cable connection is described in the figure as line.
  - (2) Pin connection is described in the figure as arrow.
- <e.g.> Connection of modem

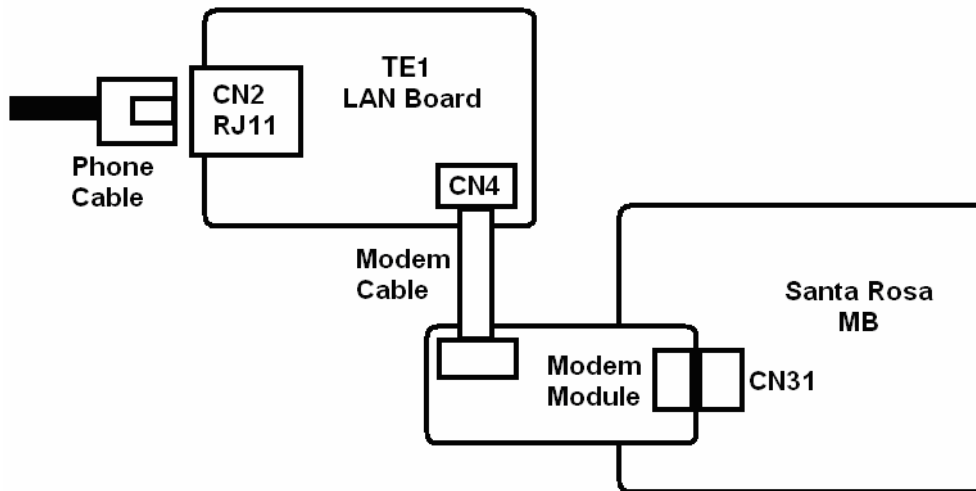

### **2.2 Troubleshooting Flowchart**

Use the flowchart in Figure 2-1 as a guide for determining which troubleshooting procedures to execute. Before going through the flowchart steps, verify the following:

- Ask him or her to enter the password if a password is registered.
- Verify with the customer that Toshiba Windows is installed on the hard disk. Non-Windows operating systems can cause the computer to malfunction.
- Make sure all optional equipment is removed from the computer.

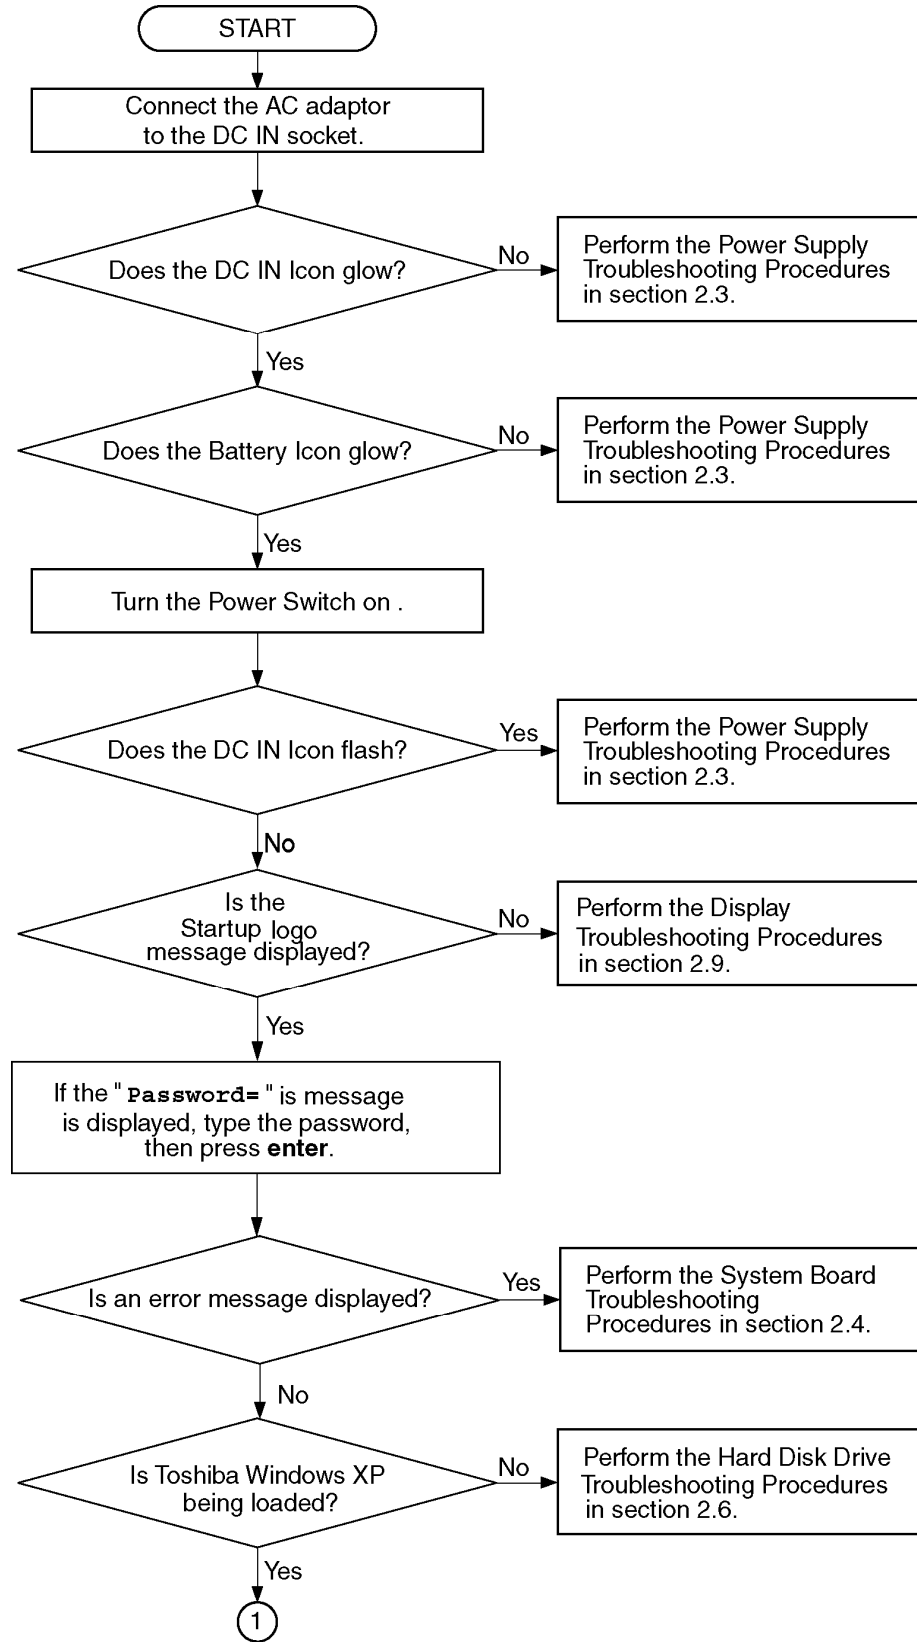


Figure 2-1 Troubleshooting flowchart (1/2)



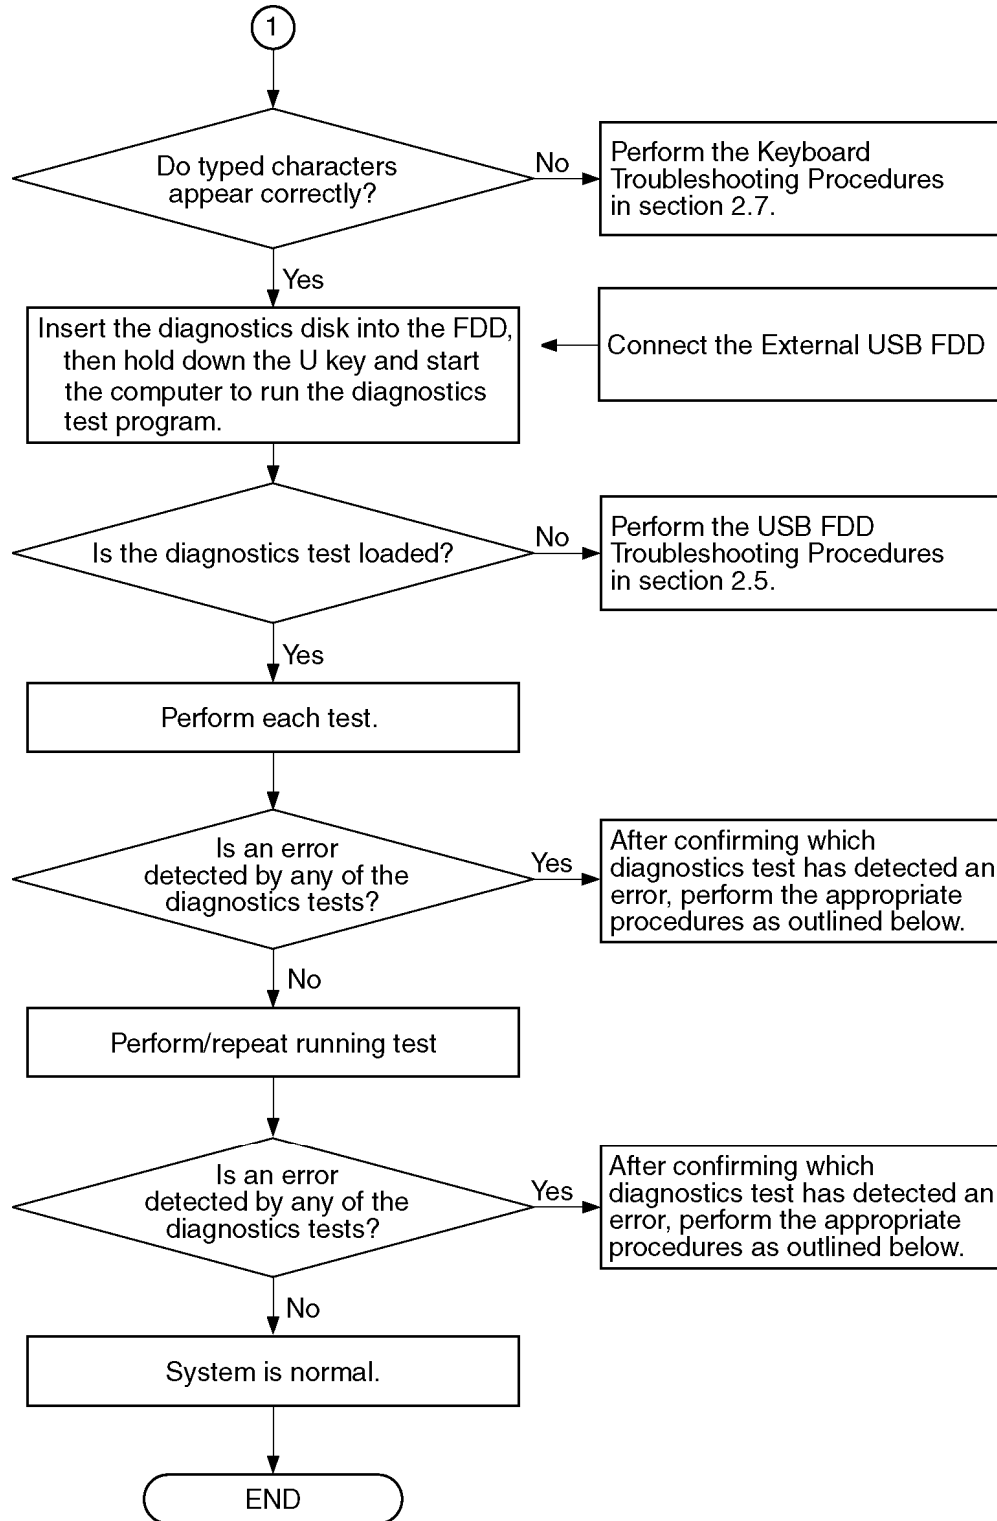


Figure 2-1 Troubleshooting flowchart (2/2)

## ***2 Troubleshooting Procedures***

---

If the diagnostics program cannot detect an error, the problem may be intermittent. The Test program should be executed several times to isolate the problem. Check the Log Utilities function to confirm which diagnostic test detected an error(s), and then perform the appropriate troubleshooting procedures as follows:

1. If an error is detected on the system test, memory test, display test, CD-ROM/DVD-ROM test, expansion test, real timer test, sound test or Modem/LAN/Bluetooth /IEEE1394 test, perform the System Board Troubleshooting Procedures in Section 2.4.
2. If an error is detected on the floppy disk test, perform the USB FDD Troubleshooting Procedures in Section 2.5.
3. If an error is detected on the hard disk test, perform the HDD Troubleshooting Procedures in Section 2.6.
4. If an error is found on the keyboard test (DIAGNOSTICS TEST) and pressed key display test (ONLY ONE TEST), perform the Keyboard Troubleshooting Procedures in Section 2.7.
5. If an error is found on the touch pad test (ONLY ONE TEST), perform the touch pad Troubleshooting Procedures in Section 2.8.
6. If an error is detected on the display test, perform the Display Troubleshooting Procedures in Section 2.9.
7. If an error is detected on the CD-ROM/DVD-ROM test, perform the Optical Disk Drive Troubleshooting Procedures in Section 2.10.
8. If an error is detected on the modem test, perform the Modem Troubleshooting Procedures in Section 2.11.
9. If an error is detected on the LAN test, perform the LAN Troubleshooting Procedures in Section 2.12.
10. If an error is detected on the wireless LAN test, perform the Wireless LAN Troubleshooting Procedures in Section 2.13.
11. If an error is detected on the sound test, perform the Sound Troubleshooting Procedures in Section 2.14.
12. If an error is detected on the VGA daughter card test, perform the VGA Troubleshooting Procedures in Section 2.15.
13. If an error is detected on the fingerprint test, perform the fingerprint Troubleshooting Procedures in Section 2.16.
14. If an error is detected on the Bluetooth test, perform the Bluetooth Troubleshooting Procedures in Section 2.17.

## 2.3 Power Supply Troubleshooting

The power supply controller controls many functions and components. To determine if the power supply is functioning properly, start with Procedure 1 and continue with the other Procedures as instructed. The procedures described in this section are:

- Procedure 1: Power Status Check
- Procedure 2: Error Code Check
- Procedure 3: Connection Check
- Procedure 4: Charging Check
- Procedure 5: Replacement Check

### Procedure 1 Power Status Check

The following LED indicates the power supply status:

- Battery LED
- DC IN LED

The Power Supply control displays the power supply status with the Battery LED and the DC IN LED as listed in the tables below.

*Table 2-1 Battery icon*

Battery icon	Power supply status
Lights orange	Battery is charged and the external DC is input. It has no relation with ON/OFF of the system power.
Lights blue or white	Battery is fully charged and the external DC is input. It has no relation with ON/OFF of the system power.
Blinks orange (even intervals)	The battery level is low while the system power is ON.
Blinks orange once (at being switched on)	The system is driven by only a battery and the battery level is low.
Doesn't light	Any condition other than those above.

Table 2-2 DC IN icon

DC IN icon	Power supply status
Lights blue or white	DC power is being supplied from the AC adapter.
Blinks orange	Power supply malfunction <sup>*1</sup>
Doesn't light	Any condition other than those above.

\*1 when the power supply controller detects a malfunction, the DC IN icon blinks orange. It shows an error code.

When the icon is blinking, perform the following procedure.

1. Remove the battery pack and the AC adapter.
2. Re-attach the battery pack and the AC adapter.

If the icon is still blinking after the operation above, check the followings:

Check 1 If the DC IN icon blinks orange, go to Procedure 2.

Check 2 If the DC IN icon does not light, go to Procedure 3.

Check 3 If the battery icon does not light orange or green, go to Procedure 4.

**NOTE:** Use a supplied AC adapter.

### Procedure 2 Error Code Check

The following table lists the error codes and error status names.

Device Name	Error Code	Error Status Name
(Common)	FF	Data Compare Error
Memory	2	Protected Mode Not Changed
	??	Other Error
FDD	1	Bad Command Error
	2	Address Mark Not Found
	3	Write Protected
	4	Record Not Found
	6	Media Change Line Error
	8	DMA Overrun Error
	9	DMA Boundary Error
	0C	Select Media Error
	10	CRC Error
	20	FDC Error


## 2 Troubleshooting Procedures

---

	40	Seek Error
	80	Time Out Error
	??	Other Error
HDD	1	Bad Command Error
	2	Bad Address Mark Error
	4	Record Not Found
	5	HDC Not Reset Error
	7	Drive Not Initialized
	9	DMA Boundary Error
	0A	Bad Sector
	0B	Bad Track Error
	10	ECC Error
	11	ECC Recover Enabled
	20	HDC Error
	40	Seek Error
	80	Time Out Error
	AA	Drive Not Ready
HDD	BB	Undefined Error
	CC	Write Fault
	E0	Status Error
	F0	No Sense Error
	??	Other Error
Cache Memory	2	Protect Mode Error
	3	Caching Error
	??	Other Error
Multimedia	1	Write Error
	0F	Invalid Drive
	15	Drive Not Ready
	??	Other Error

### Procedure 3 Connection Check

The wiring diagram related to the power supply is shown below:

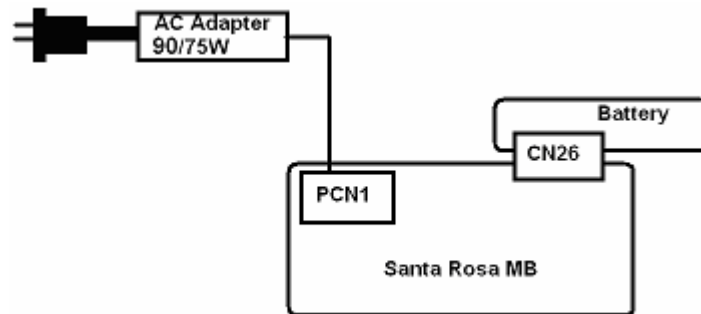

Any of the connectors may be disconnected. Perform Check 1.

**Check 1** Make sure the AC adapter and the AC power cord is firmly plugged into the DC IN connector PCN1 and wall outlet. If these cables are connected firmly, go to Check 2.

**Check 2** Replace the AC adapter and the AC power cord with new ones.

- If the DC IN icon does not light, go to Procedure 5.
- If the battery icon does not light, go to Check 3.

**Check 3** Make sure the battery pack is installed in the computer correctly. If the battery is properly installed and the battery icon still does not light, go to Procedure 4.

### Procedure 4 Charging Check

Check if the power supply controller charges the battery pack properly. Perform the following procedures:

**Check 1** Make sure the AC adapter is firmly plugged into the DC IN socket (W8800).

**Check 2** Make sure the battery pack is properly installed. If it is properly installed, go to Check 3.

**Check 3** The battery pack may be completely discharged. Wait a few minutes to charge the battery pack while connecting the battery pack and the AC adapter. If the battery pack is still not charged, go to Check 4.

**Check 4** The battery's temperature is too high or low. Leave the battery for a while to adjust it in the right temperature. If the battery pack is still not charged, go to Check 5.

## ***2 Troubleshooting Procedures***

---

Check 5    Replace the battery pack with a new one. If the battery pack is still not charged, go to Procedure 5.

### **Procedure 5 Replacement Check**

The power is supplied to the system board by the AC adapter. If either the AC adapter or the system board was damaged, perform the following Checks.

To disassemble the computer, follow the steps described in Chapter 4, *Replacement Procedures*.

When AC adapter is connected;

Check 1 AC adapter may be faulty. Replace the AC adapter with a new one. If the problem still occurs, perform Check 2.

Check 2 System board may be faulty. Replace the system board with a new one.

When AC adapter is not connected ;  
(When driving with battery pack)

Check 1 Battery pack may be faulty. Replace it with a new one. If the problem still occurs, perform Check 2.

Check 2 System board may be faulty. Replace it with a new one.



## **2.4 System Board Troubleshooting**

This section describes how to determine whether the system board is malfunctioning or not. Start with Procedure 1 and continue with the other procedures as instructed. The procedures described in this section are:

Procedure 1: Message Check

Procedure 2: Debugging Port Check

Procedure 3: Diagnostic Test Program Execution Check

Procedure 4: Replacement Check

### Procedure 1 Message Check

When the power is turned on, the system performs the Power On Self Test (POST) installed in the BIOS ROM. The POST tests each IC on the system board and initializes it.

- If an error message is shown on the display, perform Check 1.
- If there is no error message, go to Procedure 2.
- If MS-DOS or Windows XP is properly loaded, go to Procedure 4.

**Check 1** If one of the following error messages is displayed on the screen, press the **F1** key as the message instructs. These errors occur when the system configuration preserved in the RTC memory (CMOS type memory) is not the same as the actual configuration or when the data is lost.

If you press the **F1** key as the message instructs, the SETUP screen appears to set the system configuration. If error message (b) appears often when the power is turned on, replace the RTC battery. If any other error message is displayed, perform Check 2.

- (a)       \*\*\* Bad HDD type \*\*\*  
Check system. Then press [F1] key .....
- (b)       \*\*\* Bad RTC battery \*\*\*  
Check system. Then press [F1] key .....
- (c)       \*\*\* Bad configuration \*\*\*  
Check system. Then press [F1] key .....
- (d)       \*\*\* Bad memory size \*\*\*  
Check system. Then press [F1] key .....
- (e)       \*\*\* Bad time function \*\*\*  
Check system. Then press [F1] key .....
- (f)       \*\*\* Bad check sum (CMOS) \*\*\*  
Check system. Then press [F1] key .....
- (g)       \*\*\* Bad check sum (ROM) \*\*\*  
Check system. Then press [F1] key .....

**Check 2** If the following error message is displayed on the screen, press any key as the message instructs.

The following error message appears when data stored in RAM under the resume function is lost because the battery has become discharged or the system board is damaged. Go to Procedure 3.

```
WARNING: RESUME FAILURE.  
PRESS ANY KEY TO CONTINUE.
```

If any other error message displays, perform Check 3.

## ***2 Troubleshooting Procedures***

---

Check 3 The IRT checks the system board. When the IRT detects an error, the system stops or an error message appears.

If one of the following error messages (1) through (17), (24) or (25) is displayed, go to Procedure 4.

If error message (18) is displayed, go to the Keyboard Troubleshooting Procedures.

If error message (19), (20) or (21) is displayed, go to the 2.5" HDD Troubleshooting Procedures.

If error message (22) or (23) is displayed, go to the USB FDD Troubleshooting Procedures.

- (1) PIT ERROR
- (2) MEMORY REFRESH ERROR
- (3) TIMER CH.2 OUT ERROR
- (4) CMOS CHECKSUM ERROR
- (5) CMOS BAD BATTERY ERROR
- (6) FIRST 64KB MEMORY ERROR
- (7) FIRST 64KB MEMORY PARITY ERROR
- (8) VRAM ERROR
- (9) SYSTEM MEMORY ERROR
- (10) SYSTEM MEMORY PARITY ERROR
- (11) EXTENDED MEMORY ERROR
- (12) EXTENDED MEMORY PARITY ERROR
- (13) DMA PAGE REGISTER ERROR
- (14) DMAC #1 ERROR
- (15) DMAC #2 ERROR
- (16) PIC #1 ERROR
- (17) PIC #2 ERROR
- (18) KBC ERROR
- (19) HDC ERROR
- (20) HDD #0 ERROR
- (21) HDD #1 ERROR
- (22) NO FDD ERROR
- (23) FDC ERROR
- (24) TIMER INTERRUPT ERROR
- (25) RTC UPDATE ERROR

### Procedure 2 Debugging Port Check

Check the MiniPCI Debug board. The tool for debug port test is shown below.

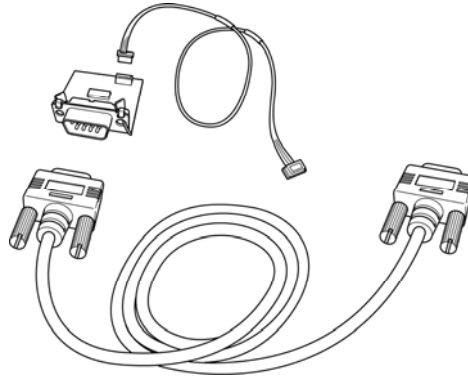


Figure 2-2 A set of tool for debug port test

The test procedures are follows:

1. Replace Mini PCI debug port with Wireless LAN card, check LED in the Mini PCI debug board

The following is a list of the Test Point codes written to port 80h at the start of each routine, the beep codes issued for terminal errors, and a description of the POST routine. Unless otherwise noted, these codes are valid for Phoenix BIOS 4.0 Release 6.0.

NOTE: The following routines are sorted by their test point numbers were assigned in the BIOS code. Their actual order as executed during POST can Be quite different.

#### Code Beeps POST Routine Description

02h	Verify Real Mode
03h	Disable Non-Maskable Interrupt (NMI)
04h	Get CPU type
06h	Initialize system hardware
08h	Initialize chipset with initial POST values
09h	Set IN POST flag
0Ah	Initialize CPU registers
0Bh	Enable CPU cache
0Ch	Initialize caches to initial POST values
0Eh	Initialize I/O component
0Fh	Initialize the local bus IDE
10h	Initialize Power Management
11h	Load alternate registers with initial POST values
12h	Restore CPU control word during warm boot
13h	Initialize PCI Bus Mastering devices

### Code Beeps POST Routine Description

14h	Initialize keyboard controller
16h1-2-2-3	BIOS ROM checksum
17h	Initialize cache before memory autosize
18h	8254 timer initialization
1Ah	8237 DMA controller initialization
1Ch	Reset Programmable Interrupt Controller
20h1-3-1-1	Test DRAM refresh
22h1-3-1-3	Test 8742 Keyboard Controller
24h	Set ES segment register to 4 GB
26h	Enable A20 line
28h	Autosize DRAM
29h	Initialize POST Memory Manager
2Ah	Clear 512 KB base RAM
2Ch1-3-4-1	RAM failure on address line xxxx*
2Eh1-3-4-3	RAM failure on data bits xxxx* of low byte of memory bus
2Fh	Enable cache before system BIOS shadow
30h1-4-1-1	RAM failure on data bits xxxx* of high byte of memory bus
32h	Test CPU bus-clock frequency
33h	Initialize Phoenix Dispatch Manager
36h	Warm start shut down
38h	Shadow system BIOS ROM
3Ah	Autosize cache
3Ch	Advanced configuration of chipset registers
3Dh	Load alternate registers with CMOS values
42h	Initialize interrupt vectors
45h	POST device initialization
46h2-1-2-3	Check ROM copyright notice
48h	Check video configuration against CMOS
49h	Initialize PCI bus and devices
4Ah	Initialize all video adapters in system
4Bh	QuietBoot start (optional)
4Ch	Shadow video BIOS ROM
4Eh	Display BIOS copyright notice
50h	Display CPU type and speed
51h	Initialize EISA board
52h	Test keyboard
54h	Set key click if enabled
58h2-2-3-1	Test for unexpected interrupts
59h	Initialize POST display service
5Ah	Display prompt "Press F2 to enter SETUP"
5Bh	Disable CPU cache
5Ch	Test RAM between 512 and 640 KB
60h	Test extended memory
62h	Test extended memory address lines
64h	Jump to UserPatch1

## ***2 Troubleshooting Procedures***

---

66h	Configure advanced cache registers
67h	Initialize Multi Processor APIC
68h	Enable external and CPU caches
69h	Setup System Management Mode (SMM) area
6Ah	Display external L2 cache size
6Bh	Load custom defaults (optional)
6Ch	Display shadow-area message
6Eh	Display possible high address for UMB recovery
70h	Display error messages
72h	Check for configuration errors
76h	Check for keyboard errors
7Ch	Set up hardware interrupt vectors
7Eh	Initialize coprocessor if present
80h	Disable onboard Super I/O ports and IRQs
81h	Late POST device initialization
82h	Detect and install external RS232 ports
83h	Configure non-MCD IDE controllers
84h	Detect and install external parallel ports
85h	Initialize PC-compatible PnP ISA devices
86h	Re-initialize onboard I/O ports.
87h	Configure Motheboard Configurable Devices (optional)
88h	Initialize BIOS Data Area
89h	Enable Non-Maskable Interrupts (NMIs)
8Ah	Initialize Extended BIOS Data Area
8Bh	Test and initialize PS/2 mouse
8Ch	Initialize floppy controller (optional)
8Fh	Determine number of ATA drives (optional)
90h	Initialize hard-disk controllers
91h	Initialize local-bus hard-disk controllers
92h	Jump to UserPatch2
93h	Build MPTABLE for multi-processor boards
95h	Install CD ROM for boot
96h	Clear huge ES segment register
97h	Fixup Multi Processor table
98h1-2	Search for option ROMs. One long, two short beeps on checksum failure
99h	Check for SMART Drive (optional)
9Ah	Shadow option ROMs
9Ch	Set up Power Management
9Dh	Initialize security engine (optional)
9Eh	Enable hardware interrupts
9Fh	Determine number of ATA and SCSI drives
A0h	Set time of day
A2h	Check key lock
A4h	Initialize Typematic rate
A8h	Erase F2 prompt

### **Code Beeps POST Routine Description**

## ***2 Troubleshooting Procedures***

---

AAh	Scan for F2 key stroke
ACh	Enter SETUP
A Eh	Clear Boot flag
B0h	Check for errors
B2h	POST done - prepare to boot operating system
B4h	One short beep before boot
B5h	Terminate QuietBoot (optional)
B6h	Check password (optional)
B9h	Prepare Boot
Bah	Initialize DMI parameters
BBh	Initialize PnP Option ROMs
BCh	Clear parity checkers
BDh	Display MultiBoot menu
BEh	Clear screen (optional)
BFh	Check virus and backup reminders
C0h	Try to boot with INT 19
C1h	Initialize POST Error Manager (PEM)
C2h	Initialize error logging
C3h	Initialize error display function
C4h	Initialize system error handler
C5h	PnPnd dual CMOS (optional)
C6h	Initialize notebook docking (optional)
C7h	Initialize notebook docking late
C8h	Force check (optional)
C9h	Extended checksum (optional)
D2h	Unknown interrupt

### **Code Beeps For Boot Block in Flash ROM**

E0h	Initialize the chipset
-----	------------------------

## ***2 Troubleshooting Procedures***

---

E1h	Initialize the bridge
E2h	Initialize the CPU
E3h	Initialize system timer
E4h	Initialize system I/O
E5h	Check force recovery boot
E6h	Checksum BIOS ROM
E7h	Go to BIOS
E8h	Set Huge Segment
E9h	Initialize Multi Processor
EAh	Initialize OEM special code
EBh	Initialize PIC and DMA
ECh	Initialize Memory type
EDh	Initialize Memory size
EEh	Shadow Boot Block
EFh	System memory test
F0h	Initialize interrupt vectors
F1h	Initialize Run Time Clock
F2h	Initialize video
F3h	Initialize System Management Mode
F4h	1 Output one beep before boot
F5h	Boot to Mini DOS
F6h	Clear Huge Segment
F7h	Boot to Full DOS



### Procedure 3 Diagnostic Test Program Execution Check

Execute the following tests from the Diagnostic Test Menu. These tests check the system board. Refer to Chapter 3, *Tests and Diagnostic*, for more information on how to perform these tests.

1. System test
2. Memory test
3. Keyboard test
4. Display test
5. Floppy Disk test
6. VGA test
7. VGA Memory test
8. Hard Disk test
9. CPU Temperature test
10. Main Battery test
11. BIOS test
12. CD-ROM/DVD-ROM test
13. System Status LED test
14. Wireless LAN test
15. LAN/Modem/Sound test
16. UUID test-DMI Information (Write DMI)

If an error is detected during these tests, go to Procedure 4.

### Procedure 4 Replacement Check

System board may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and replace system board with a new one.

### **2.5 USB FDD Troubleshooting**

To check whether the USB FDD is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: FDD Head Cleaning Check

Procedure 2: Diagnostic Test Program Execution Check

Procedure 3: Connector Check and Replacement Check

#### **Procedure 1 FDD Head Cleaning Check**

FDD head cleaning is one option available in the Diagnostic Program.

After connecting USB FDD, insert the Diagnostics Disk in the floppy disk drive. Turn on the computer and run the test. And then clean the FDD heads using the cleaning kit. If the FDD still does not function properly after cleaning, go to Procedure 2.

Detailed operation is given in Chapter 3, *Tests and Diagnostics*.

If the test program cannot be executed on the computer, go to Procedure 3.

### Procedure 2 Diagnostic Test Program Execution Check

Insert the Diagnostics Disk in the USB FDD, turn on the computer and run the test. Refer to Chapter 3, *Tests and Diagnostics*, for more information about the diagnostics test procedures.

Make sure the floppy disk is formatted correctly and that the write protect tab is disabled. Floppy disk drive test error codes and their status names are listed in Table 2-7. If any other errors occur while executing the FDD diagnostics test, go to Check 1.

Table 2-7 FDD error code and status

Code	Status
01h	Bad command
02h	Address mark not found
03h	Write protected
04h	Record not found
06h	Media replaced
08h	DMA overrun error
09h	DMA boundary error
10h	CRC error
20h	FDC error
40h	Seek error
60h	FDD not drive
80h	Time out error (Not ready)
EEh	Write buffer error
FFh	Data compare error

Check 1 If the following message is displayed, disable the write protect tab on the floppy disk by sliding the write protect tab to “write enable”. If any other message appears, perform Check 2.


Write protected

Check 2 Make sure the floppy disk is formatted correctly. If it is, go to Procedure 3.

### Procedure 3 Connector Check and Replacement Check

USB FDD is connected to USB port on system board and US board. US board is also connected to system board by cable. The connection of cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and perform the following checks.

USB FDD can be connected to the following 4 ports on system board.

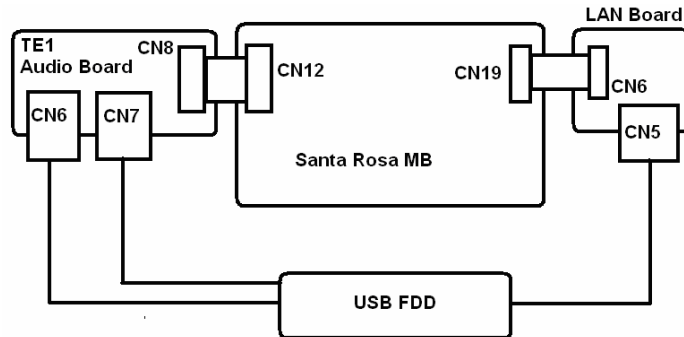

Check 1 Make sure USB FDD is firmly connected to USB port. If the connection is loose, connect firmly and repeat Procedure 2. If the problem still occurs, go to Check 2.

**NOTE:** When checking the connection, be sure to check it with care for the followings.

1. Cable can not be disconnected from the connector.
2. Cable is connected straight to the connector.
3. Cable is connected all the way seated in the connector.
4. Cable can not be broken.

## ***2 Troubleshooting Procedures***

---

Check 2 USB FDD may be faulty. Replace it with a new one. If the problem still occurs, perform Check 3.

Check 3 Connect USB FDD to each port embedded on system board.

If it does not work properly when connected to CN12, CN19, CN20 or all ports, perform Check 4.

Check 4 System board may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*.

### 2.6 2.5" HDD Troubleshooting

To check if 2.5" HDD is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Partition Check

Procedure 2: Message Check

Procedure 3: Format Check

Procedure 4: Diagnostic Test Program Execution Check

Procedure 5: Connector Check and Replacement Check

**CAUTION:** *The contents of the hard disk will be erased when the 2.5" HDD troubleshooting procedures are executed. Transfer the contents of the hard disk to floppy disks or other storage drive(s). For the backup, refer to the User's Manual.*

#### Procedure 1 Partition Check

Insert the Toshiba MS-DOS system disk and start the computer. Perform the following checks:

- Check 1 Input **C:** and press **Enter**. If you cannot change to drive C, go to Check 2. If you can change to drive C, go to Procedure 2.
- Check 2 Input **FDISK** and press **Enter**. Choose Display Partition Information from the FDISK menu. If drive C is listed in the Display Partition Information, go to Check 3. If drive C is not listed, return to the FDISK menu and choose the option to create a DOS partition or a logical DOS drive on drive C. If the problem still occurs, go to Procedure 2.
- Check 3 If drive C is listed as active in the FDISK menu, go to Check 4. If drive C is not listed as active, return to the FDISK menu and choose the option to set the active partition for drive C. Then go to Procedure 2.
- Check 4 Remove the system disk from the FDD and reboot the computer. If the problem still occurs, go to Procedure 2. Otherwise, the 2.5" HDD is operating normally.

### Procedure 2 Message Check

When the power is turned on, the system performs the Initial Reliability Test (IRT) installed in the BIOS ROM. When the test detects an error, an error message is displayed on the screen.

Make sure no floppy disk is in the FDD. Turn on the computer and check the message on the screen. When an OS starts from the 2.5" HDD, go to Procedure 3. Otherwise, start with Check 1 below and perform the other checks as instructed.

Check 1 If any of the following messages appear, go to Procedure 3. If the following messages do not appear, perform Check 2.

HDC ERROR

or

HDD #X ERROR (After 5 seconds this message will disappear.)

Check 2 If either of the following messages appears, go to Check 3. If the following messages do not appear, perform Check 4.

Insert system disk in drive  
Press any key when ready .....

or

Non-System disk or disk error  
Replace and press any key when ready

Check 3 Using the SYS command of the MS-DOS, transfer the system to the 2.5" HDD. If the system is not transferred, go to Procedure 3. Refer to the MS-DOS Manual for detailed operation.

If the following message appears on the display, the system program has been transferred to the HDD.

System Transferred

If an error message appears on the display, perform Check 4.

Check 4 2.5" HDD(s) and the connector(s) of system board may be defective (Refer to the steps described in Chapter 4, *Replacement Procedures* for disassembling.). Insert HDD(s) to the connector(s) firmly. If it is (or they are) firmly connected, go to Procedure 3.

### **Procedure 3    Format Check**

The computer's HDD is formatted using the MS-DOS FORMAT program or the physical format program of the test program. To format the HDD, start with Check 1 below and perform the other steps as required.

Refer to the MS-DOS Manual for the operation of MS-DOS. For the format by the test program, refer to the Chapter 3.

Check 1    Format an 2.5" HDD using MS-DOS FORMAT command. Type as **FORMAT C:/S/U**.

    If 2.5" HDD can not be formatted, perform Check 2.

Check 2    Using the MS-DOS FDISK command, set the 2.5" HDD partition. If the partition is not set, go to Check 3. If it is set, format 2.5" HDD using MS-DOS FORMAT command.

Check 3    Using the Diagnostic Disk, format 2.5" HDD with a format option (physical format). If HDD is formatted, set the 2.5" HDD partition using MS-DOS FDISK command.

    If you cannot format 2.5" HDD using the Tests and Diagnostic program, go to Procedure 4.



### Procedure 4 Diagnostic Test Program Execution Check

The HDD test program is stored in the Diagnostics Disk. Perform all of the HDD tests in the Hard Disk Drive Test. Refer to Chapter 3, *Tests and Diagnostics*, for more information about the HDD test program.

If an error is detected during the HDD test, an error code and status will be displayed. The error codes and statuses are described in Table 2-8. If an error code is not displayed but the problem still occurs, go to Procedure 5.


Table 2-8 2.5" Hard disk drive error code and status

Code	Status
05	HDD - HDC NOT RESET ERROR
07	HDD - DRIVE NOT INITIALIZE
09	HDD - DMA BOUNDARY ERROR
0B	HDD - BAD TRACK ERROR
BB	HDD - UNDEFINED ERROR
08	HDD - OVERRUN ERROR (DRQ ON)
01	HDD - BAD COMMAND ERROR
02	HDD - ADDRESS MARK NOT FOUND
04	HDD - RECORD NOT FOUND ERROR
10	HDD - ECC ERROR
20	HDD - HDC ERROR
40	HDD - SEEK ERROR
80	HDD - TIME OUT ERROR
11	HDD - ECC RECOVER ENABLE
AA	HDD - DRIVE NOT READY
CC	HDD - WRITE FAULT
E0	HDD - STATUS ERROR
0A	HDD - BAD SECTOR
EE	HDD - ACCESS TIME ERROR
DA	HDD - NO HDD
12	HDD - DMA CRC ERROR

### Procedure 5 Connector Check and Replacement Check

HDD(s) is/are connected to the connector(s) on the system board. The connection of HDD(s) and board may be defective. Otherwise, they may be faulty. Disassemble the computer following instructions in Chapter 4, *Replacement Procedures* and perform the following checks.

- Check 1 Make sure HDD(s) is/are firmly connected to the connector(s) on the system board.

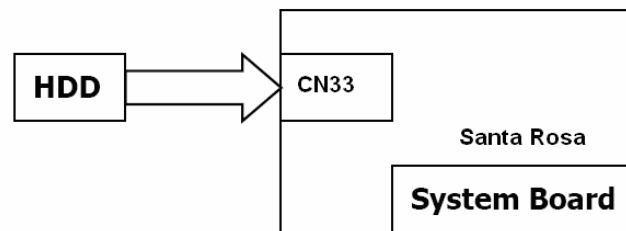

If any of the connections are loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

- Check 2 (One of) HDD(s) may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still occurs, perform Check 3.
- Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

### **2.7 Keyboard Troubleshooting**

To check if the computer's keyboard is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector and Replacement Check

#### **Procedure 1 Diagnostic Test Program Execution Check**


Execute the Keyboard Test (DIAGNOSTIC TEST) and Pressed key display test (ONLY ONE TEST) in the Diagnostic Program. Refer to Chapter 3, *Tests and Diagnostics*, for more information on how to perform the test program.

If an error occurs, go to Procedure 2. If an error does not occur, keyboard is functioning properly.

### Procedure 2 Connector and Replacement Check

The connection of cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

Check 1 Make sure keyboard cable is firmly connected to system board.

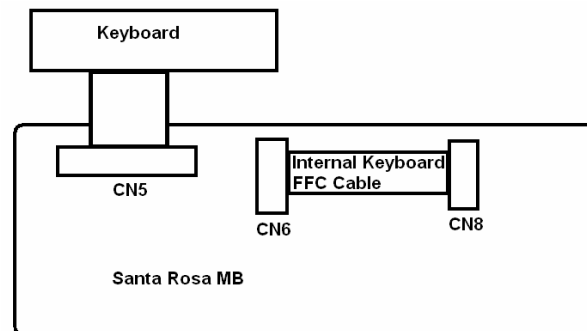

If the connection is loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

Check 2 Keyboard may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

### **2.8 Touch pad Troubleshooting**

To check if the computer's touch pad is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector and Replacement Check

#### **Procedure 1 Diagnostic Test Program Execution Check**


Execute the Touch pad test (ONLY ONE TEST) in the Diagnostic Program. Refer to Chapter 3, *Tests and Diagnostics*, for more information on how to perform the test program.

If an error occurs, go to Procedure 2. If an error does not occur, touch pad is functioning properly.

### Procedure 2 Connector and Replacement Check

The connection of cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

Check 1 Make sure the cable is firmly connected to system board.

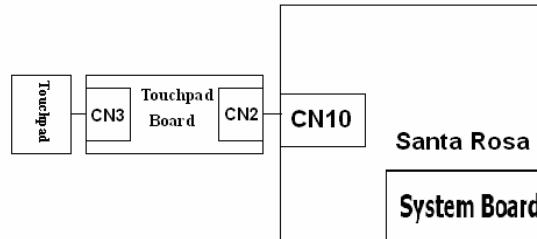

If the connection is loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

Check 2 Touch Pad or the cable may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*

## **2.9 Display Troubleshooting**

To check if the computer's display is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: External Monitor Check

Procedure 2: Diagnostic Test Program Execution Check

Procedure 3: Connector and Cable Check

Procedure 4: Replacement Check

### **Procedure 1 External Monitor Check**

Connect an external monitor to the computer's external monitor port, then boot the computer. The computer automatically detects the external monitor.

If the external monitor works correctly, the internal LCD may be faulty. Go to Procedure 3.

If the external monitor appears to have the same problem as the internal monitor, system board may be faulty. Go to Procedure 2.


### **Procedure 2 Diagnostic Test Program Execution Check**

The Display Test program is stored in Diagnostics disk. This program checks the display controller on system board. Insert the Diagnostics disk in the USB FDD, turn on the computer and run the test. Refer to Chapter 3, *Tests and Diagnostics* for details. If an error is detected, go to Procedure 3.

### **Procedure 3 Connector and Cable Check**

LCD Module is connected to system board by an LCD/FL cable. FL inverter board is also connected to system board by an LCD/FL cable. And, fluorescent lamp is connected to FL inverter board by HV cable. Their cables may be disconnected from system board or FL inverter board. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*.

If the connection is loose, reconnect firmly and restart the computer. If the problem still occurs, go to Procedure 4.

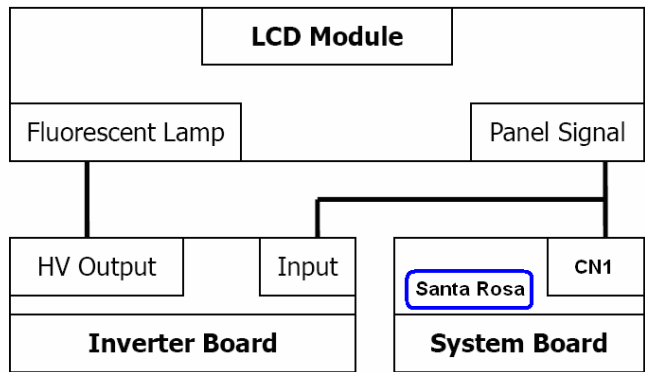



#### **Procedure 4 Replacement Check**

Fluorescent lamp, FL inverter, LCD module, HV cable and LCD/FL cable are connected to display circuits. Any of these components may be faulty. Refer to Chapter 4, *Replacement Procedures*, for instructions on how to disassemble the computer and then perform the following checks:

If fluorescent lamp does not light, perform Check 1.

If characters or graphics on the internal display are not displayed clearly, perform Check 4.

If some screen functions do not operate properly, perform Check 4.

If fluorescent lamp remains lit when the display is closed, perform Check 5.

Check 1 Replace fluorescent lamp with a new one following the instructions in Chapter 4, *Replacement Procedures* and test the display again. If the problem still occurs, perform Check 2.

Check 2 LCD/FL cable may be faulty. Replace FL/LCD cable with a new one following the instructions in Chapter 4, *Replacement Procedure* and test the display again. If the problem still occurs, perform Check 3.

Check 3 FL inverter may be faulty. Replace FL inverter with a new one following the instructions in Chapter 4, *Replacement Procedure* and test the display again. If the problem still occurs, perform Check 4.

Check 4 LCD module may be faulty. Replace LCD module with a new one following the instructions in Chapter 4, *Replacement Procedure* and test the display again. If the problem still occurs, perform Check 5.

Check 5 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedure*.

## 2.10 Optical Disk Drive Troubleshooting

To check if optical disk drive is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### Procedure 1 Diagnostic Test Program Execution Check

Execute the CD-ROM/DVD-ROM Test in the Diagnostic Program. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.


Prepare the tools before the test.

If any error is detected by the test, go to Procedure 2.

### Procedure 2 Connector Check and Replacement Check

The connection of optical disk drive and system board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4 and perform the following checks:

Check 1 Make sure optical disk drive is firmly connected to the connector on system board.

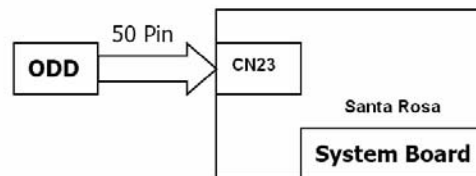

If the connection is loose, reconnect it firmly and return to Procedure 2. If the problem still occurs, perform Check 2.

Check 2 Optical disk drive may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with new one following the instructions in Chapter 4.

## **2.11 Modem Troubleshooting**

To check if modem is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### **Procedure 1 Diagnostic Test Program Execution Check**

Execute Modem test in the LAN/Modem/Bluetooth/IEEE1394 test program. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.


If any error is detected, perform Procedure 2.

### **Procedure 2 Connector Check and Replacement Check**

MDC (Modem Daughter Card) is used as the modem for this computer. MDC is connected to system board by connector CN31(Santa Rosa) or CN29(NAPA). And also, MDC is connected to system and LAN board by modem cable. If modem malfunctions, the connection of cable, board and module may be defective. Otherwise, they may be faulty.

Disassemble the computer following the steps described in Chapter 4 and perform the following checks:

Check 1 Make sure the following connections are firmly connected.

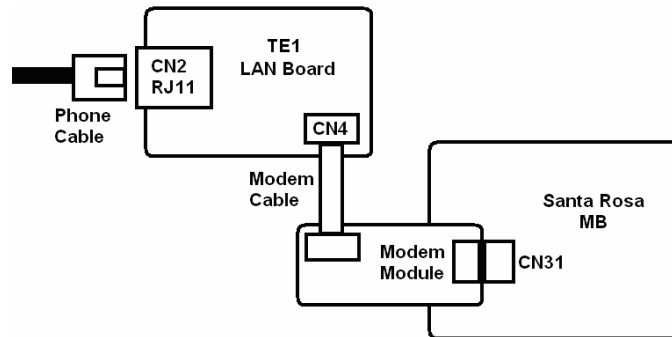

If any connector is disconnected, connect it firmly and return to Procedure 1. If the problem still occurs, perform Check 2.

## *Troubleshooting Procedures*

---

- Check 2 Modem cable may be faulty. Replace it with a new one. If the problem still occurs, perform Check 3.
- Check 3 MDC may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 4.
- Check 4 Cable between MDC and system board may be faulty. Replace it with a new one following the instructions in Chapter 4. If the problem still occurs, perform Check 5.
- Check 6 System board may be faulty. Replace it with a new one following the instruction in Chapter 4.

## 2.12 LAN Troubleshooting

To check if the computer's LAN is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### Procedure 1 Diagnostic Test Program Execution Check


Execute LAN test in the LAN/Modem test program. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.

If any error is detected by the test, go to Procedure 2.

### Procedure 2 Connector Check and Replacement Check

The LAN function is embedded on system board. If LAN malfunctions, its connection is defective or LAN cable and system board may be faulty.

Check 1 Make sure LAN cable is firmly connected to the connector CN9. If the problem still occurs, perform Check 2.

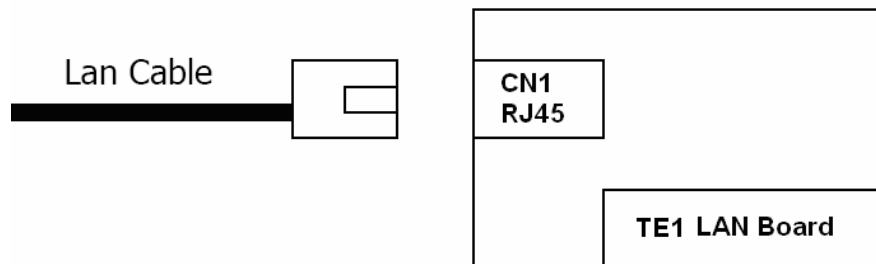

Check 2 LAN cable may be faulty. Replace it with a new one. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instruction in Chapter 4.

## **2.13 Wireless LAN Troubleshooting**

To check if the computer's Wireless LAN is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Transmitting-Receiving Check

Procedure 2: Antennas' Connection Check

Procedure 3: Replacement Check

### **Procedure 1      Transmitting-Receiving Check**


Before starting the test, make sure the wireless communication switch is set in the ON position.

Check 1    Execute Wireless LAN test program to check the transmitting-receiving function of wireless LAN. You will need a second computer that can communicate by wireless LAN. Perform the test following the instructions described in Chapter 3.

If the computer passes the test, the function is correctly working. If the computer does not pass the test, perform Procedure 2.

## Procedure 2      Antennas' Connection Check

The wireless LAN function-wiring diagram is shown below:

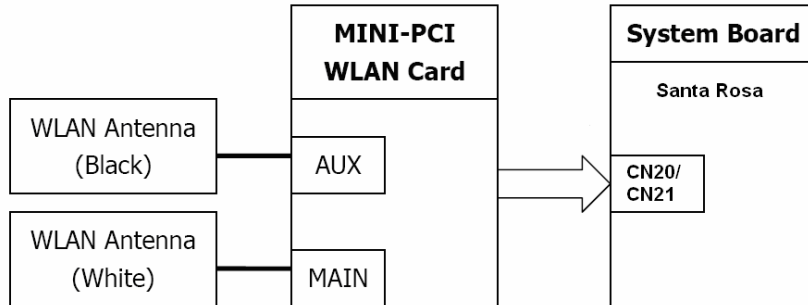

Any of the connections may be defective. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

- Check 1    Make sure the wireless communication switch is “On”.  
            If the switch is “Off”, turn it “On”. If the problem still occurs, perform Check 2.
- Check 2    Make sure wireless LAN card (Mini-PCI) is firmly connected to the CN2200 on system board. If the connector is defective, connect it firmly and perform Procedure 1. If the problem still occurs, perform Check 3.
- Check 3    Make sure that wireless LAN antenna cables (black and white) are firmly connected to the connectors on Wireless LAN card. If wireless LAN antenna cables are not connected properly, connect them firmly and perform Procedure 1. If the problem still occurs, go to the procedure 3.



**Procedure 3      Replacement Check**

Wireless LAN card, wireless LAN antenna or system board may be faulty. Refer to Chapter 4, *Replacement Procedures*, for instructions on how to disassemble the computer and then perform the following checks:

- Check 1    Wireless LAN antenna may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 2.
  
- Check 2    Wireless LAN card may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.
  
- Check3    System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.14 Sound Troubleshooting


To check if the sound function is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Connector Check

Procedure 2: Replacement Check

### Procedure 1 Connector Check

The connection of sound system is shown in the following figure.

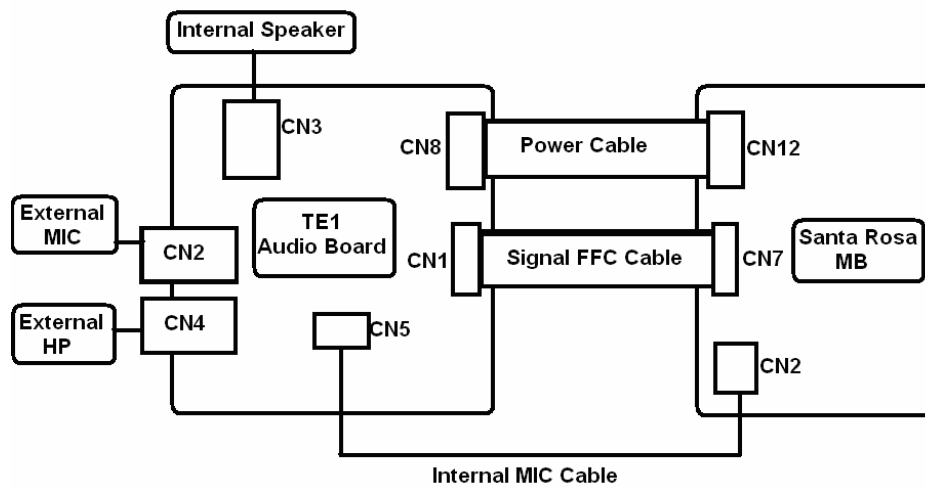

As the connection may be defective, disassemble the PC and check each connection.

If the problem still occurs, go to Procedure 2.

## **Procedure 2 Replacement Check**

- If External microphone/Headphone does not work properly, perform check 1.
- If Internal microphone /Speaker does not work properly, perform check 2.
- If HP out does not work properly, perform check 3.
- If Volume control does not work properly, perform check 4.

Check 1 External microphone/Headphone may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 5.

Check 2 Internal microphone /Speaker may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 5.

Check 3 HP out may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 5.

Check 4 Volume control may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 6.

Check 5 Flat cable between AD board/Speaker and system board may be faulty. Replace it with new cable following the instructions in Chapter 4. If the problem still occurs, perform Check 6.

Check 6 Audio board/System board may be faulty. Replace it with a new one following the instructions in Chapter 4.

## 2.15 Fingerprint Troubleshooting

To check if the computer's Fingerprint is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Connector Check and Replacement Check

### Procedure 1 Diagnostic Test Program Execution Check


Execute Fingerprint test in the test program. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.

If any error is detected, perform Procedure 2.

### Procedure 2 Connector Check and Replacement Check

The Fingerprint function is embedded on system board. If Fingerprint malfunctions, its connection is defective or Fingerprint cable and system board may be faulty.

Check 1 Make sure Fingerprint cable is firmly connected to the connector CN14(Santa Rosa) or CN8(NAPA). If the problem still occurs, perform Check 2.

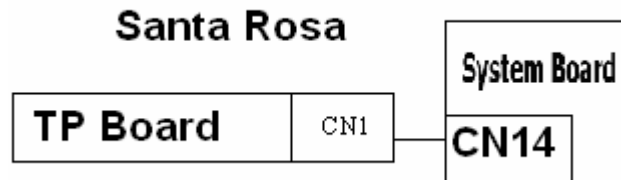

Check 2 Fingerprint cable may be faulty. Replace it with a new one. If the problem still occurs, perform Check4.

Check 3 Fingerprint may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 4.

Check 4 System board may be faulty. Replace it with a new one following the instruction in Chapter 4.

## 2.16 Bluetooth Troubleshooting


To check if the computer's Bluetooth is malfunctioning or not, follow the troubleshooting procedure below as instructed.

Procedure 1: Connector Check and Replacement Check

### Procedure 1 Connector Check and Replacement Check

The Bluetooth function is connected to system board. If Bluetooth malfunctions, its connection is defective or Bluetooth cable and system board may be faulty.

 Check 1 Make sure Bluetooth cable is firmly connected to the connector CN9(Santa Rosa) or CN13(NAPA). If the problem still occurs, perform Check 2.



Check 2 Bluetooth cable may be faulty. Replace it with a new one. If the problem still occurs, perform Check 3.

Check 3 Bluetooth may be faulty. Replace it with a new one following the steps in Chapter 4. If the problem still occurs, perform Check 4.

Check 4 System board may be faulty. Replace it with a new one following the instruction in Chapter 4.

---

# **Chapter 4**

# **Replacement Procedures**

---

---

## Chapter 4 Contents

---

4.1	Overview.....	4-1
	Safety Precautions.....	4-2
	Before You Begin.....	4-3
	Disassembly Procedure.....	4-4
	Assembly Procedure.....	4-5
	Tools and Equipment.....	4-5
	Screw Tightening Torque.....	4-6
	Grip Color.....	4-6
	Screw Notation.....	4-7
4.2	Battery pack.....	4-8
4.3	PC card.....	4-11
4.4	HDD.....	4-13
4.5	Wireless LAN card.....	4-17
4.6	Memory module.....	4-19
4.7	Keyboard.....	4-23
4.8	Optical disk drive.....	4-27
4.9	Top assembly.....	4-30
4.10	Display assembly.....	4-36
4.11	Touch pad.....	4-39
4.12	Lan board.....	4-42
4.13	System board.....	4-43
4.14	CPU.....	4-46
4.15	LCD unit / FL inverter.....	4-49
4.16	Application for thermal pad (T-Flex340) on North Bridge, VGA and V-RAM...	4-55

## Figures

Figure 4-1 Remove the battery pack.....	4-8
Figure 4-2-1 Remove a PC card.....	4-10
Figure 4-2-2 Insert a PC card.....	4-11
Figure 4-3 Remove the HDD assembly .....	4-12
Figure 4-4 Remove a HDD .....	4-14
Figure 4-5 Remove a wireless LAN card .....	4-16
Figure 4-7 Remove a memory module .....	4-21
Figure 4-8 Insert a memory module.....	4-21
Figure 4-9 Remove screws for KBD cover/keyboard.....	4-24
Figure 4-10 Remove the keyboard/KBD cover .....	4-24
Figure 4-11 Remove the keyboard.....	4-25
Figure 4-12/14 Remove an optical disk drive.....	4-26
Figure 4-15 Disassemble the side bracket .....	4-29
Figure 4-16 Remove the screws.....	4-30
Figure 4-17 Disconnect the Cable.....	4-31
Figure 4-18 Remove the Wireless LAN antenna connector .....	4-33
Figure 4-19 Remove the screws (from bottom side) .....	4-34
Figure 4-20 Remove the Wireless Antenna and LCD cable.....	4-36
Figure 4-21 Remove the hinge screw.....	4-36
Figure 4-22 Remove the LCD harness and remove display assembly.....	4-37
Figure 4-23 Remove the touch board and touch pad plate screw.....	4-39
Figure 4-24 Remove the touch pad.....	4-40
Figure 4-25 Remove the Lan board .....	4-42
Figure 4-26 Disconnect the battery cable .....	4-43
Figure 4-26-1 Remove the system board.....	4-45
Figure 4-27 Remove the CPU heat sink .....	4-46
Figure 4-28 Remove the CPU.....	4-47
Figure 4-29 Apply silicon grease.....	4-48
Figure 4-30 Remove the display mask.....	4-50
Figure 4-31 Remove the FL inverter .....	4-51



Figure 4-32 Remove the LCD unit ..... 4-52

Figure 4-33 Removing the LCD supports..... 4-53

Figure 4-34 Thermal Pad on North bridge(Intel without VGA board).....4-55

Figure 4-35 Thermal Pad on North bridge(Intel with VGA board).....4-56


Figure 4-36 Thermal Pad on VGA and V-RAM.....4-56

## 4.1 Overview

This chapter describes the procedure for removing and replacing the field replaceable units (FRUs) in the PC. It may not be necessary to remove all the FRUs in order to replace one. The chart below provides a guide as to which other FRUs must be removed before a particular FRU can be removed. The numbers in the chart indicate the relevant section numbers in this manual.

In all cases when removing an FRU, the battery pack must also be removed. When repairing an FRU that is the potential cause of a computer fault, use the chart to determine the order in which FRUs need to be removed.

The tilt stand, if it is installed, can be removed without any other FRUs removed.

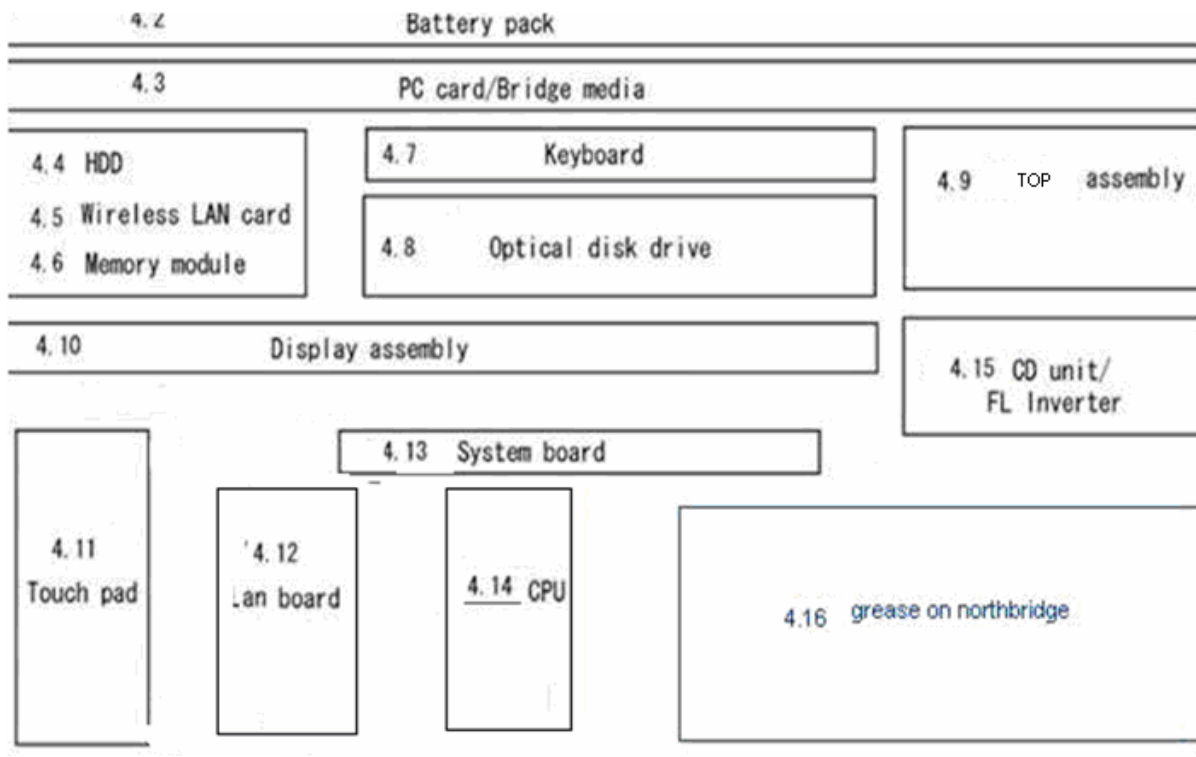

- Chart Notation

The chart shows the case for the following example:

- Removing a MDC

All FRUs down to the “4.2 Battery pack” to “4.11 Cover assembly” above a SD board/Microphone/MDC must be removed.

### Safety Precautions

Please read the following safety instructions before disassembling the computer and always follow the instructions while working on the computer.

- DANGER:**
- 1. In the case of the battery, always use authentic parts or equivalent parts approved by Toshiba. Other batteries may have different specifications that are incompatible with the computer and may result in fire or explosion.  
Due to the risk of alkali fluid leaks, never attempt to heat or disassemble the battery. Similarly, due to the risk of explosion, never expose the battery to flame.*
  - 2. Some parts including the power supply and FL inverter generate high voltages. If you need to turn on the power while disassembling the computer, do not touch any connectors or other components due to the risk of electric shock. Also, do not disassemble individual parts when performing routine maintenance.*

- WARNING:**
- 1. To prevent electric shock, turn off the power unplug the AC adapter from the power source.*
  - 2. As the battery installed to the computer is typically already charged, the risk of electric shock remains even when the AC adapter is unplugged from the socket. To prevent electric shock, always take off any metal jewelry or accessories such as necklaces, bracelets or rings before working on the computer. Never work with wet or moist hands.*
  - 3. Take care not to injury yourself on any edges or corners.*

- CAUTION:**
- 1. Confirm that replacement parts have compatible specifications before replacing on the computer. Never use incorrect parts as these may cause faults on the computer.*
  - 2. To prevent internal damage such as short circuits or burning, do not allow any screws, paper clips, or other metal objects to fall into the computer. When removing screws, always replace with the same size screw. Ensure that all screws are fully tightened. Loose screws may result in short circuits leading to overheating, smoke or flame.*
  - 3. To prevent electric shock, check that you have disconnected all cables from a part before removing the part.*
  - 4. When connecting to the AC power supply, use only an AC adapter and cable approved by Toshiba.*
  - 5. To prevent electric shock, ensure that all replacement parts are compatible with the computer and that all cables and connectors are securely connected.*

### **Before You Begin**

Take note of the following points before starting work. Always remove the AC adapter and battery pack before commencing any of the procedures. The procedure for removing the battery pack is described in section “4.2.1 Battery Pack”.

1. Do not disassemble the computer unless it is operating abnormally.
2. Use the designated tools.
3. Ensure that the environment for working on and storing parts does not contain any of the following.
  - Dust or dirt
  - Static electricity
  - Extremely hot, cold or humid conditions
4. Perform the diagnostic tests described in Chapter 2 to determine which FRU is the cause of the fault.
5. Do not perform any unnecessary work. Always work in accordance with the disassembly and reassembly procedures in this manual.
6. Keep parts removed from the computer in a safe place away from the computer where they will not be damaged or interfere with your work.
7. Disassembling requires the removal of a large number of screws. Keep removed screws in a safe place such that you can determine which screws belong to which part.
8. When reassembling, ensure that you use the correct screws and fit parts in the correct position. Screw sizes are noted in the text and figures.
9. As all parts have sharp edges and corners, take care not to cut yourself.
10. After replacing an FRU, check that the computer and replaced part operate correctly.

## **Disassembly Procedure**


Three main types of cable connector are used.

- Pressure plate connector
- Spring connector
- Normal pin connector


When disconnecting a pressure plate connector, lift up the tag on one side of the plastic pressure plate on the connector and pull the cable out from the connector. When reconnecting a cable to a pressure plate connector, lift up the pressure plate to a suitable height and insert the cable into the connector. Press down on both sides of the pressure plate such that both sides of the plate and connector are at the same height and that the cable is fixed in the correct position. Pull the cable to ensure that it is securely connected. If the cable is disconnected from the connector, reconnect it making sure that you lift the pressure plate high enough to insert fully the cable.

For spring connectors, lifting up the stopper frees the cable and allows it to be pulled out. To reconnect, hold the stopper in the up position and insert the cable, then lower the stopper to secure the cable.

Normal pin connectors are used for all other cables. Simply pull out or push in these connectors to disconnect or reconnect.

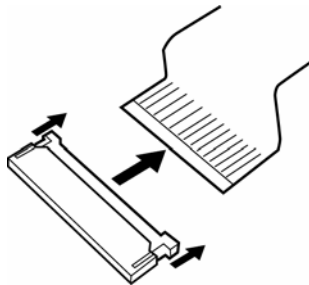

Pressure plate connector

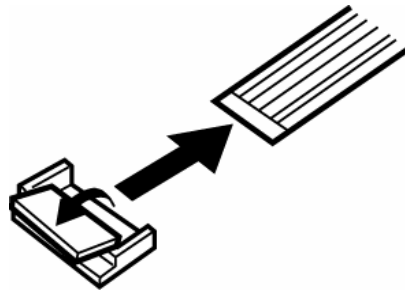

Spring connector

### **Assembly Procedure**

After the computer has been disassembled and the part that caused the fault has been repaired or replaced, the computer must be reassembled.

Take note of the following general points when assembling the computer.

- Take your time and follow the instructions carefully. Hurrying the assembly work will only introduce new problems.
- Check that all cables and connectors are securely connected.
- Before fastening FRUs or other parts in place, ensure that no cables are caught on screws or the FRU.
- Check that all latches are securely closed.
- Ensure that you have installed all FRUs correctly and do not have any screws left over. Using an incorrect screw may damage the thread or screw head and result in the FRU not being securely fastened in place.

After installing FRUs, check that the computer operates correctly.

### **Tools and Equipment**

For your safety and the safety of the people around you, it is important that you use Electrostatic Discharge (ESD) equipment. Correctly utilizing of the equipment increases the percentage of successful repairs and saves on the cost of damaged or destroyed parts. The following equipment is required for disassembly and assembly.

- One Philips screwdriver with type 0 bit (for THIN HEAD screws)
- One Philips screwdriver with type 1 bit (for screws other than above)
- Tweezers (for lifting screws)
- ESD mats (lay on work table or floor)
- An ESD wrist strap and heel grounder
- Anti-static carpet or flooring

## Screw Tightening Torque


Use the following torque when tightening screws.

**CAUTION:** *Over tightening may damage screws or parts. Under tightening may allow screws to loosen (and possibly fall out) causing a short circuit or other damage.*

**NOTE:** *To tighten screws quickly and accurately, an electric screwdriver is recommended.*

- M2 (2mm)                    0.167 N·m (1.7 kgf·cm)
- M2.5 (2.5mm)            0.245 N·m(2.5 kgf·cm)
- M2.5 (2.5mm)            0.392 N·m(4.0 kgf·cm) for Hinge support
- M3.0 (3mm)                0.245 N·m (2.5 kgf·cm)

**NOTE:** *To prevent damage to THIN HEAD screws, press along the axis of the screwdriver while turning the screw. This is because the contact area between the screw and driver is less than for a pan head screw (standard pan-shaped screw head).*

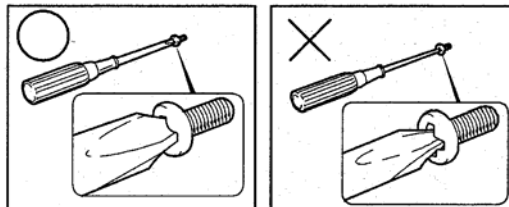

## Grip Color

Some screws have a colored grip area to help you determine the length of the screw.

- Even numbered length screws: Brown
- Odd numbered length screws: White
- Special length screw: Blue



“Special length screw” means screws whose length is indicated in an integral number to the first decimal places such as 2.5 mm, 2.8 mm and so on.

## **Screw Notation**

To make maintenance of the computer easier, markings of the kinds of the screws including the types and lengths of the screws are indicated on the computer body.

Format:

Screw shape + Screw length (mm)

Screw shape

B: Bind screw

F: Thin head screw

S: Super thin head screw

T: Tapping screw

U: Other screws (Unique screws: pan head, stud, etc.)

Example: B6 ... 6mm bind screw




## 4.2 Battery pack

### Removing the battery pack

The following describes the procedure of removing the battery pack (See Figure 4-1).

**CAUTION:** Take care not to short circuit the terminals when removing the battery pack. Similarly, do not drop, knock, scratch, disassemble, twist, or bend the battery pack.

1. Turn off the power of the computer.
2. Disconnect the AC adapter and all external devices from the computer.
3. Turn the computer upside down.
4. Slide and hold the battery release latch (1) to free the battery pack after moving the battery release lock (1) into unlock position – pick the battery pack out of the computer from fillister.

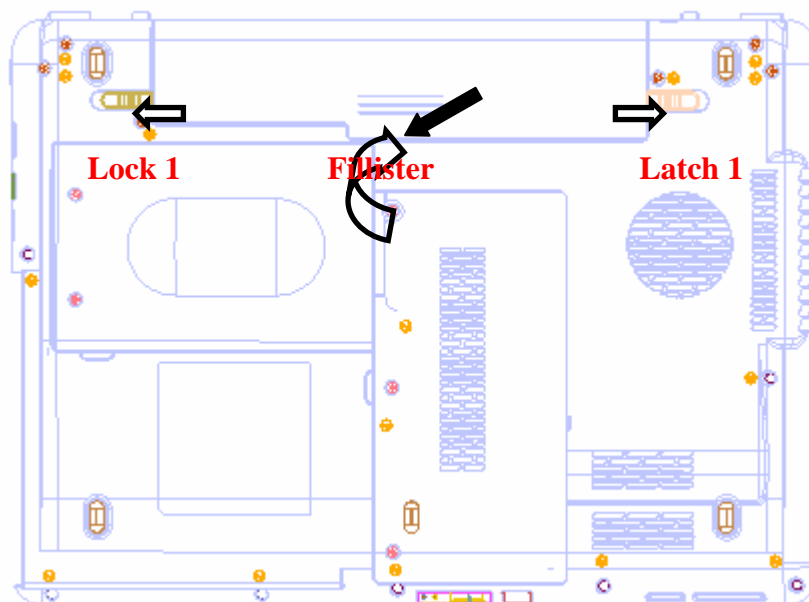

*Figure 4-1 Remove the battery pack*

**NOTE:** *Dispose of the used battery pack in accordance with the laws and ordinances of your local authority.*


### **Install the battery pack**

The following describes the procedure of installing the battery pack (See Figure 4-1-1).

**CAUTION:** *There is a danger that the lithium ion battery pack may explode if not fitted, operated, handled, or disposed correctly. Dispose always the used battery pack in accordance with the laws and ordinances of your local authority. Use only the batteries approved by Toshiba.*

**NOTE:** *Check visually the battery terminals and clean off any dirt with a dry cloth.*

1. Turn off the power of the computer.
2. Disconnect the AC adapter and all external devices from the computer.
3. Attach the **battery cover** to the **battery pack**.
4. Insert the battery pack
5. Ensure the battery release lock (1) is moved into its locked position

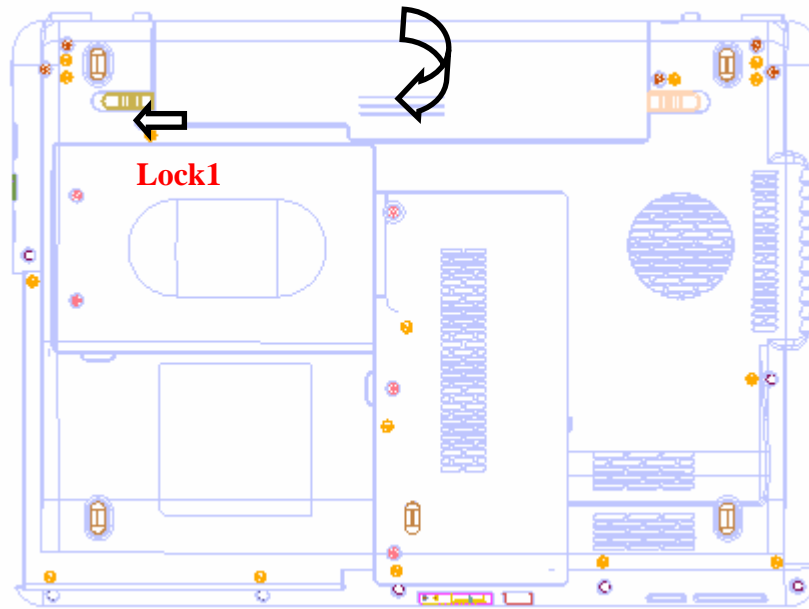

*Figure 4-2-1 Install the battery pack*

## 4.3 PC card

### Remove a PC card

The following describes the procedure of removing a PC card (See Figure 4-2-1).

**CAUTION:** Insert or remove a PC card according to the instructions of PC card manual or the manuals of the computer system you are using.

1. Push the **eject button** twice, It will pop out PCMCIA Card when you release it.
2. Grasp one of **PC card** and remove it.

**NOTE:** If a PC card is not inserted all the way, the eject button may not pop out. Be sure to push a PC card firmly and press the eject button again.


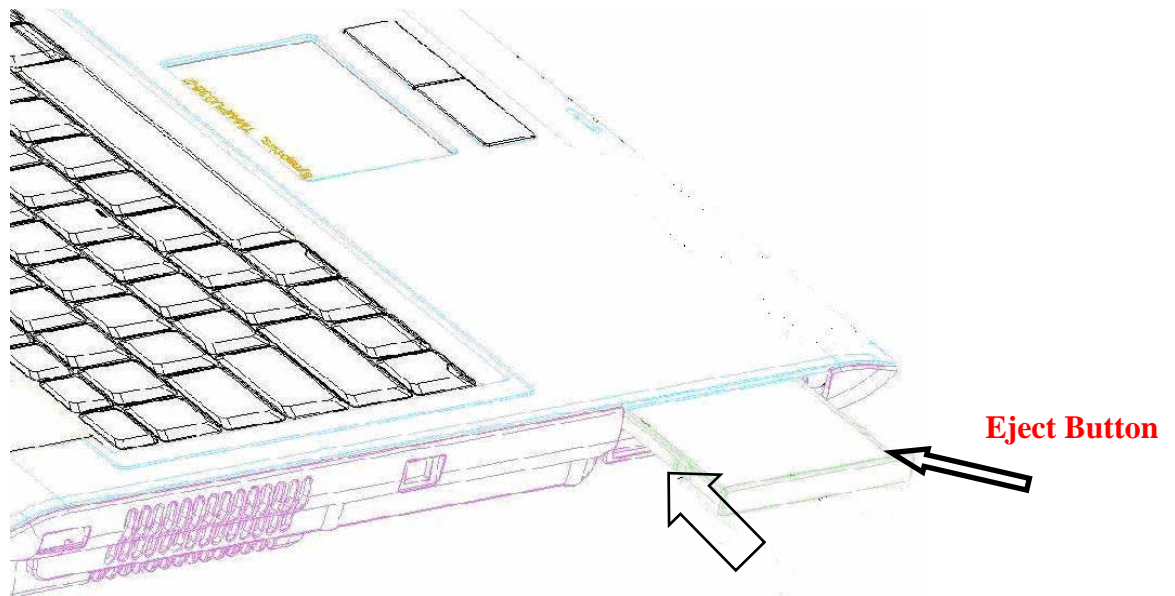


Figure 4-2-1 Remove a PC card

### **Install a PC card**

The following describes the procedure of inserting a PC card (See Figure 4-2-2).

1. Make sure the **eject button** does not stick out.
2. Insert a **PC card** and press it until it is securely connected.

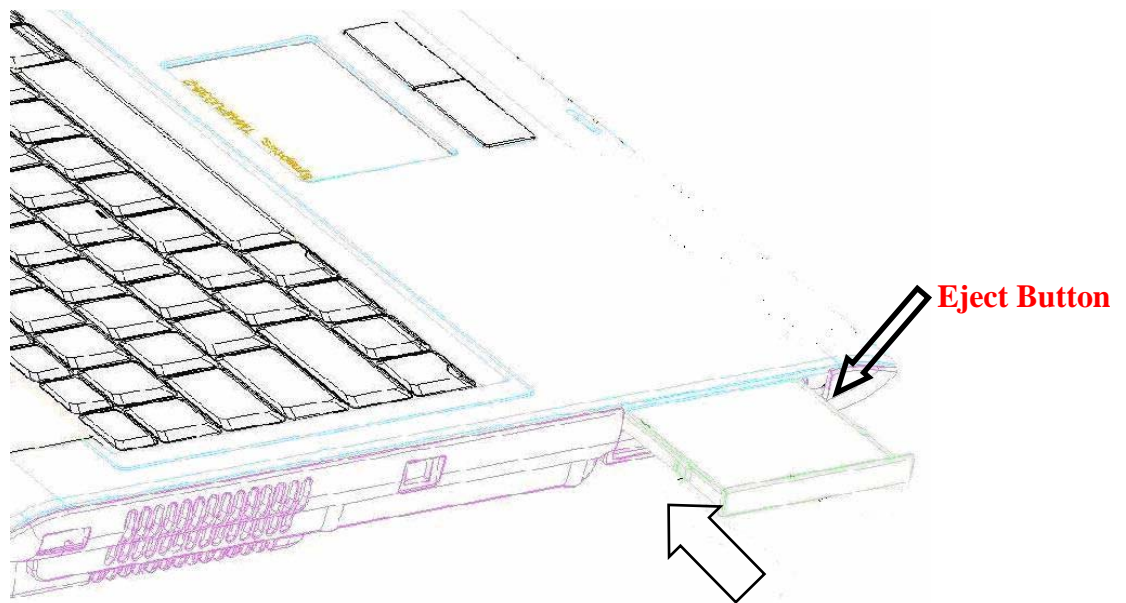

*Figure 4-3-2 Insert a PC card*

## 4.4 HDD


### Remove a HDD

The following describes the procedure for removing a HDD (See Figure 4-3 to 4-4).

**CAUTION:** *Take care not to press on the top or bottom of a HDD. Pressure may cause data loss or damage to the device.*

1. Turn the computer upside down.
2. Remove the following **screws** securing a HDD slot cover and remove a **HDD slot cover**.
  - M2.5×4.0B      FLAT BIND screw      x2
3. Remove the following **screws** securing the **HDD assembly**.
  - M2.5×4.0B      FLAT BIND screw      x4
4. Disconnect the **HDD assembly** from the connector on the system board.

**CAUTION:** When a HDD is installed, they are installed in the position as the following figure.

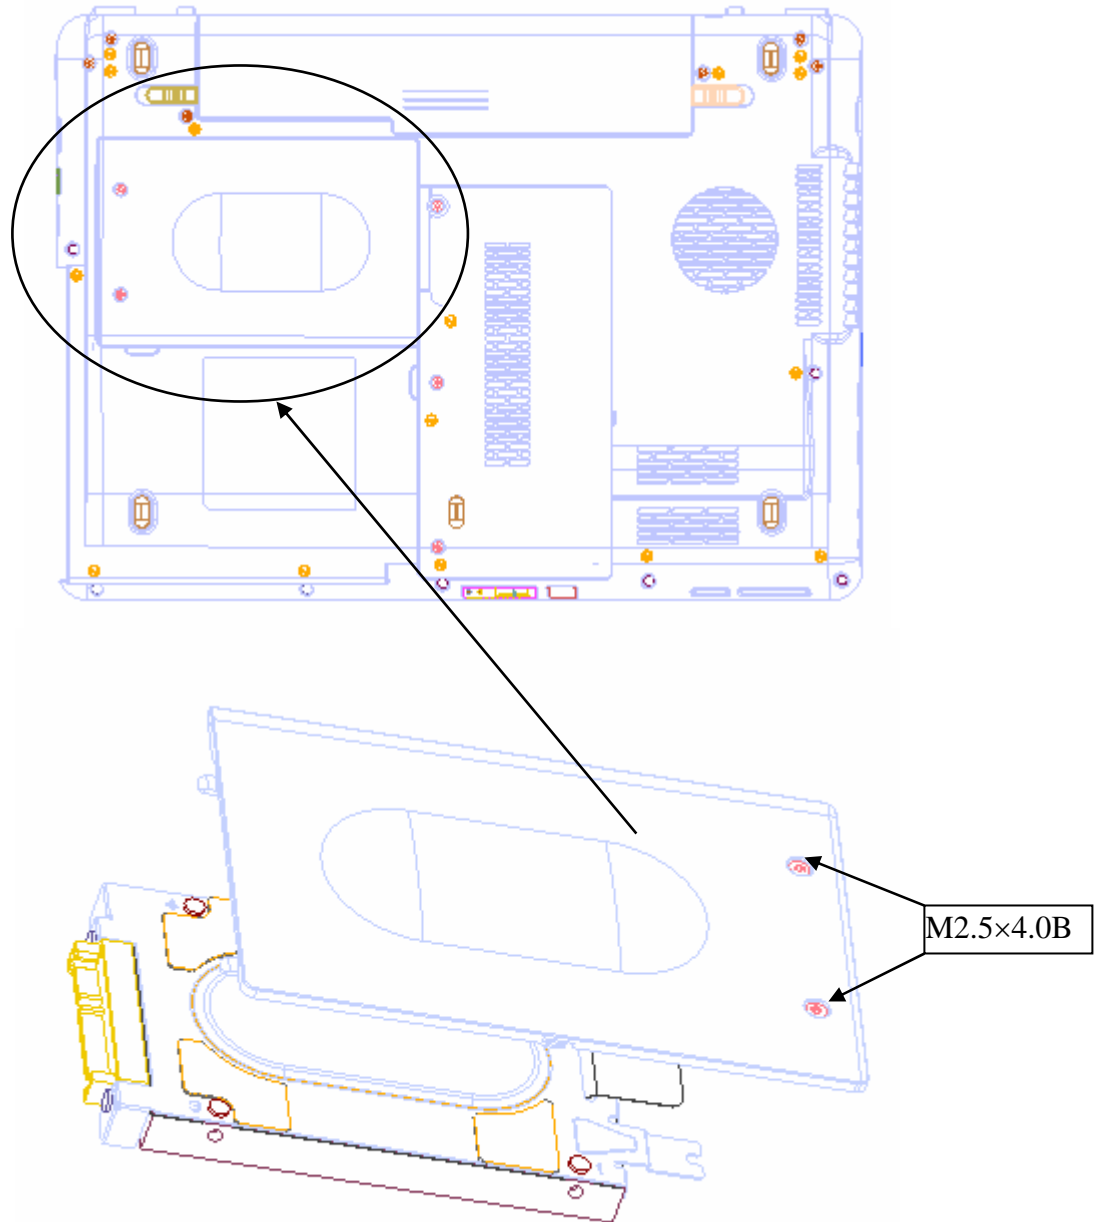


*Figure 4-4 Remove the HDD assembly*

## ***Replacement Procedures***

---

5. Remove the following **screws** securing the HDD holder, HDD adapt and remove the HDD holder and HDD adapt..

- M2.5×4.0B FLAT BIND screw x4
- M2.5×4.0B FLAT BIND screw x2

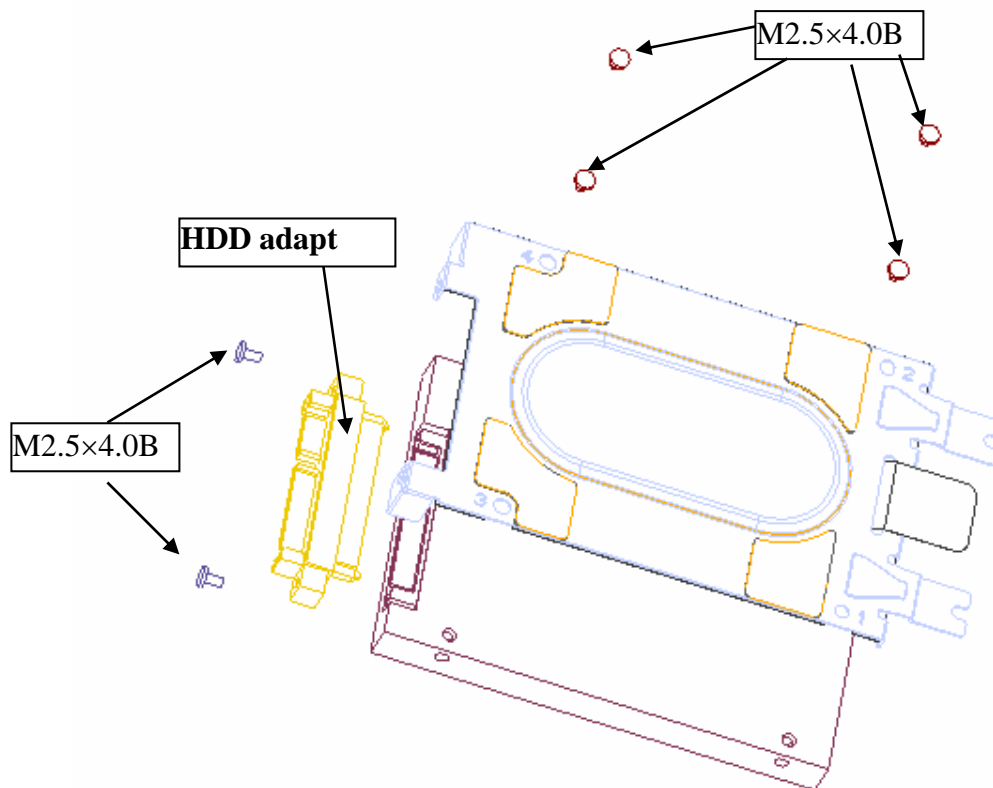

[

*Figure 4-4 Remove a HDD*



## **Install a HDD**

The following describes the procedure of installing a HDD (See Figure 4-3 to 4-4).

1. Install a HDD to the **HDD Adapt** and secure it with the following **screws**.

- M2.5×4.0B      FLAT BIND screw      x2

2. Install a HDD to the **HDD holder** and secure it with the following **screws**.

- M2.5×4.0B      FLAT BIND screw      x4

<p><i><b>NOTE:</b> Although they are 3mm head screws, screw torque must be set in 2.5kg-cm for four screws securing the HDD holder.</i></p>
---

3. Insert the **HDD assembly** into the HDD slot and connect it carefully to the **CN19** on the system board.

4. Secure the **HDD assembly** with the following **screw**.


- M2.5×4.0B      FLAT BIND screw      x2

## 4.5 Wireless LAN card

### Remove a Wireless LAN card

The following describes the procedure of removing a Wireless LAN card (See Figure 4-5).

1. Remove the following **screw** of wireless cover securing **wireless LAN card cover** and remove it. And remove screw of wireless board
  - 2.5.0 x 4.0B BIND screw x3
2. Disconnect the **wireless LAN antenna cable** from the connectors on a wireless LAN card.
3. Open the left and right latches to remove a **wireless LAN card** from the **connector** on the system board.

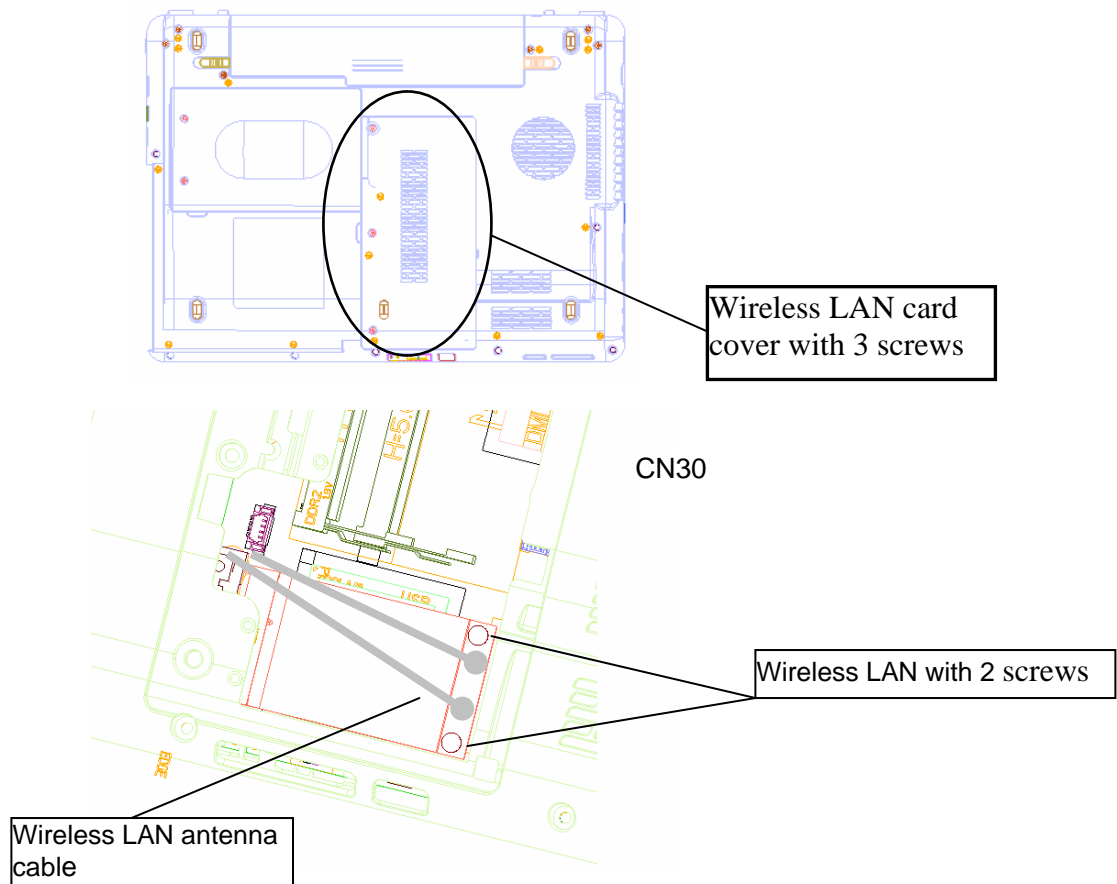

*Figure 4-5 Remove a wireless LAN card*

### **Install a Wireless LAN card**

The following describes the procedure of installing a Wireless LAN card (See Figure 4-5).

1. Insert a **wireless LAN card** terminal slantwise into the connector, press it and lock the screws.
2. Connect the **wireless LAN antenna cables** to the terminals on a wireless LAN card.
3. Install the **wireless LAN card cover** and secure it with the following **screws**.

## 4.6 Memory module

**CAUTION:** *The power of the computer must be turned off when you remove a memory module.*

*Do not touch memory module terminals. Any dirt on the terminals may cause memory access problems.*

*Never press hard or bend a memory module.*

### Remove a memory module


To remove a memory module, confirm that the computer is not in boot mode. Then perform the following procedure (See Figure4-6 and 4-7).

1. Loose the **screws** which secure the **memory slot cover**.


- 2.5 x 4.0B BIND screw x3

2. Remove the **memory slot cover**.

3. Open the left and right **latches** and remove the **memory module**.

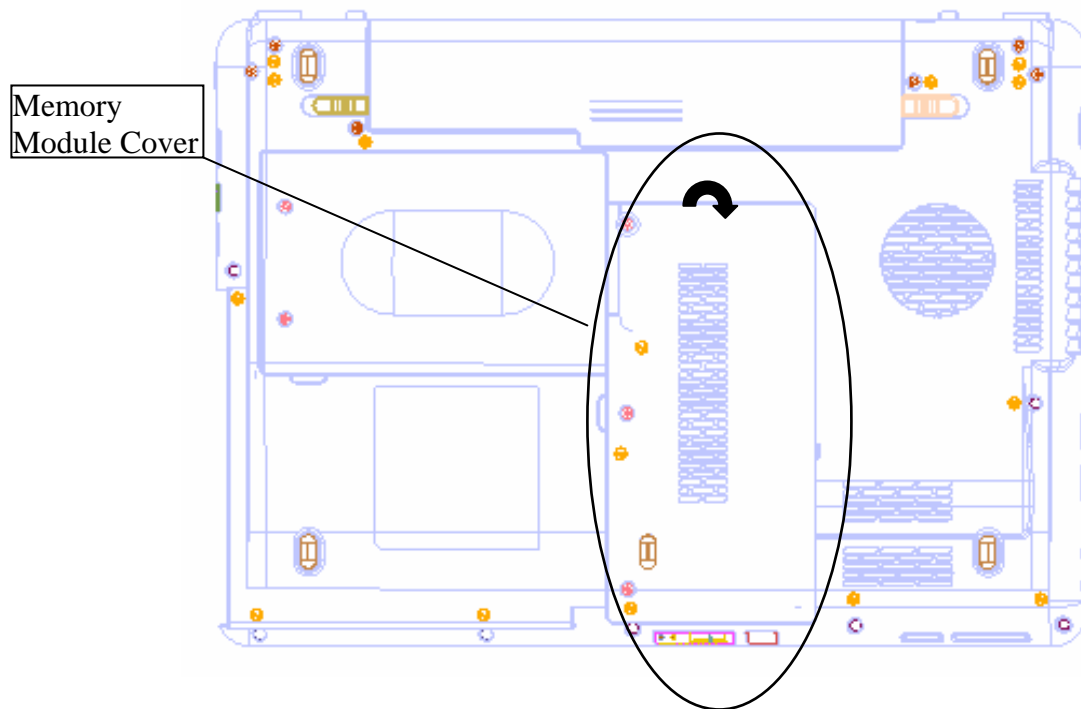

*Figure 4-6 Remove memory slot cover*

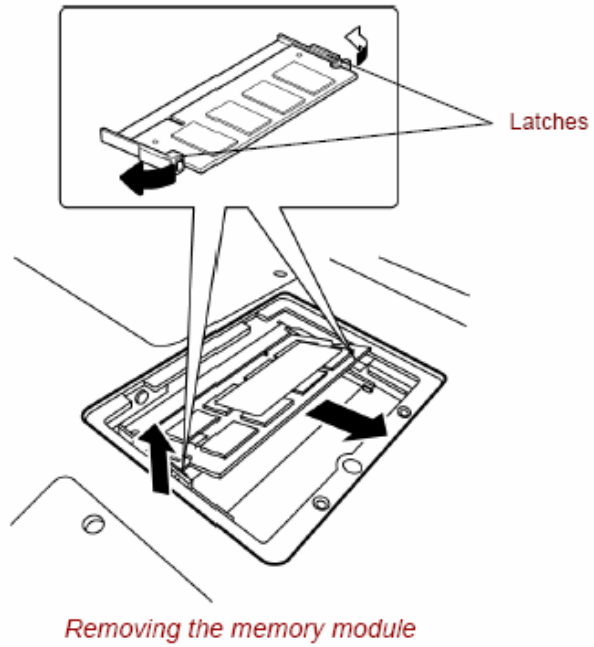


*Figure 4-7 Remove a memory module*

### **Install a memory module**

To install a memory module, confirm that the computer is not in boot mode. Then perform the following procedures (See Figure 4-7 and 4-8).

**CAUTION:** *The power must be turned off when you insert a memory module.  
Never press hard or bend a memory module.*

1. Insert a **memory module** into the connector slantwise (terminal side first) and press it to connector firmly.
2. Install the **memory slot cover** and secure it with the **screw**.
3. When the power of the computer is turned on, the computer checks automatically the memory size. Confirm that the new memory is detected correctly.
4. If the memory is not detected, check that it is connected correctly.

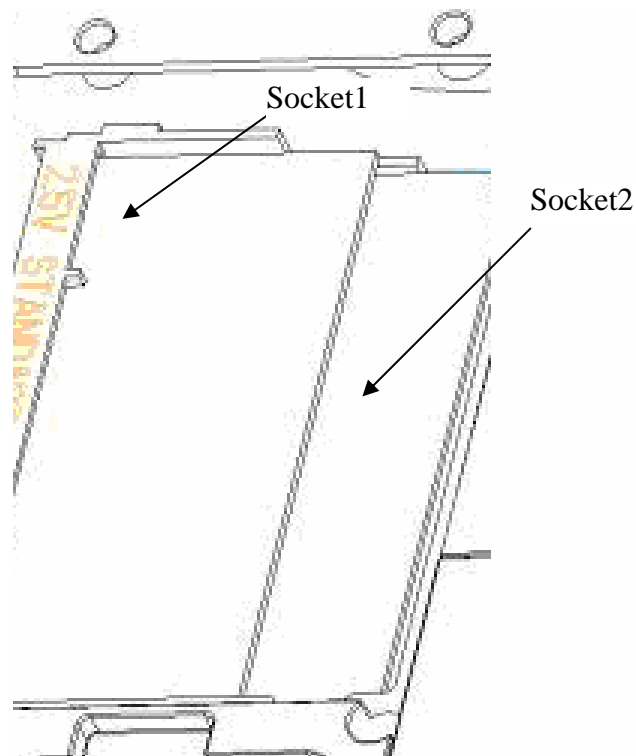

*Figure 4-8 Insert a memory module*

## 4.7 Keyboard


### Remove the keyboard

The following describes the procedure of removing the keyboard (See Figure 4-9 to 4-11).


**CAUTION:** *As the keycap may fall out, when handling the keyboard always hold it by the frame and do not touch the keycap.*

1. Turn the computer upside down
2. Remove the Battery
3. Loose the **screw** securing KB Holder.
  - M2.0x3.0B Flat BIND screws x2
4. Upside down the computer.
5. Open the display.
6. Remove KB holder. Insert your finger into the slot between the KB holder and the keyboard. Then, lift up the **keyboard holder** to remove it.
7. Loose the **screw** securing KB screws.
  - M2.0x3.0B BIND screws x2
8. Insert your finger into the keyboard slot and keyboard. Then lift up the keyboard to remove it.
9. Disconnect keyboard cable.



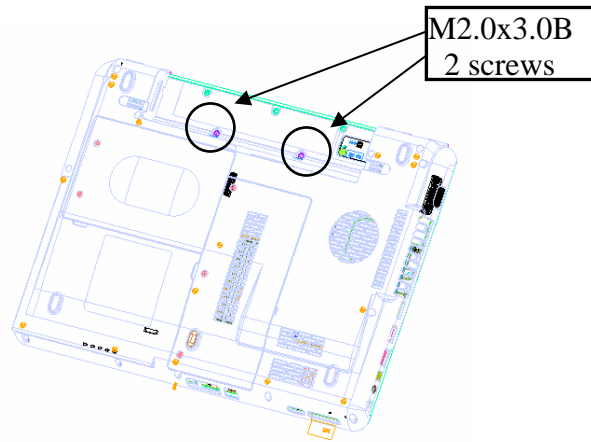

*Figure 4-9 Remove screws for KB Holder*

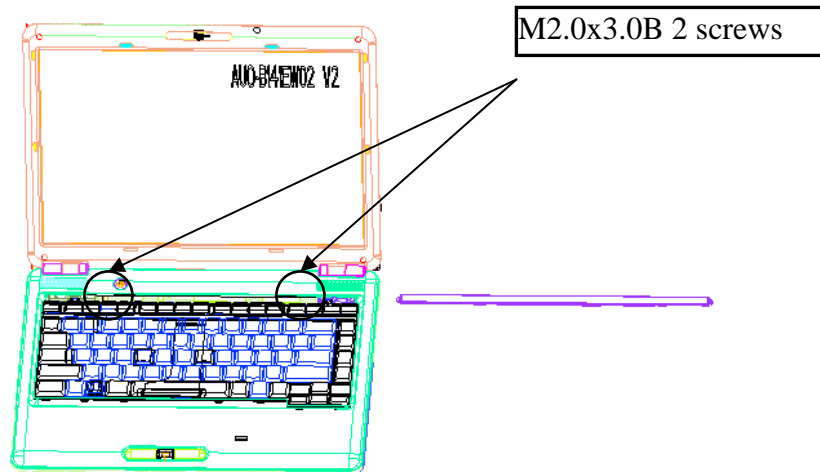

*Figure 4-10 Remove the KB Holder*



*Figure 4-11 Remove the KB*

## **Install the keyboard**

The following describes the procedure for installing the keyboard (See Figure 4-8 to 4-9).

1. Turn the keyboard upside down and place it on the palm rest as its face down. Connect the **keyboard flexible cable** to the connector on the system board.
2. Secure the **KB** with the following **screw**
  - M2.5×3.0B BIND screw x2
3. Install the **KB Holder**
4. Turn the computer upside down
5. Secure the **KB Holder** with the following **screw**
  - M2.0x3.0B Flat BIND screws x2
6. Install battery.


## 4.8 Optical disk drive

**NOTE:** Do not apply excessive force to the top of an optical disk drive.  
Do not touch the shaded portion of the figure below, when the drive is removed or installed.


### Remove an optical disk drive

The following describes the procedure of removing an optical disk drive (See Figure 4-12 to 4-15).

1. Remove the following **screw** of wireless cover securing Memory Module Cover and remove it.
  - 2.5 x 4.0B BIND screw x3
2. Remove the following **screw of optical disk drive BKT screw**.
  - 2.5 x 4.0B BIND screw x1
3. Remove the following **screw of side bracket**.
  - 2.0 x 3.0B BIND screw x3

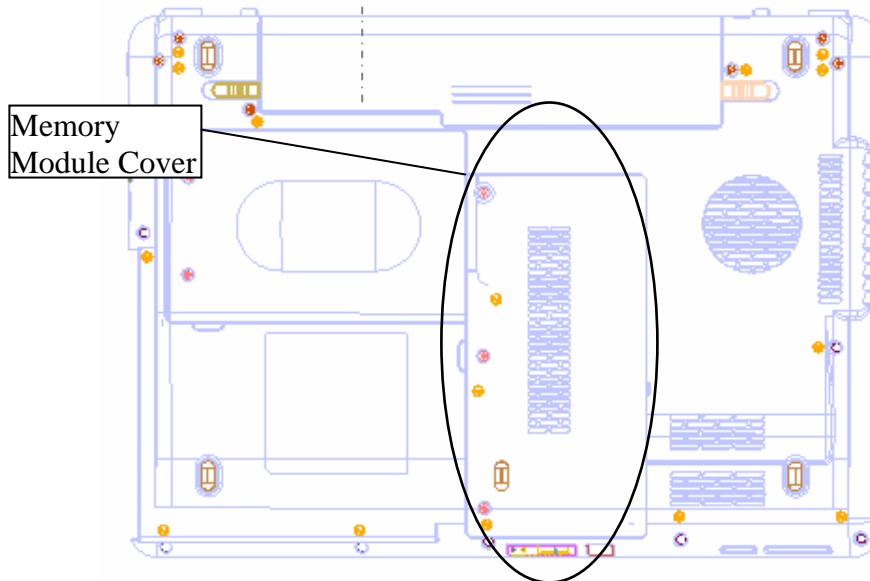


*Figure 4-12 Remove Memory Module Cover*

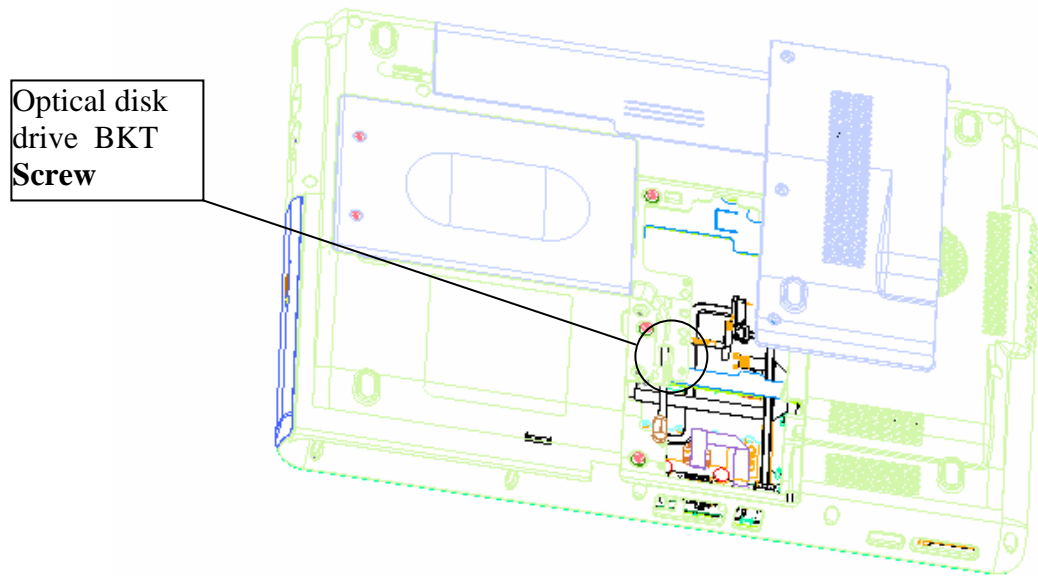


EX

*Figure 4-13 Remove optical disk drive BKT screw*

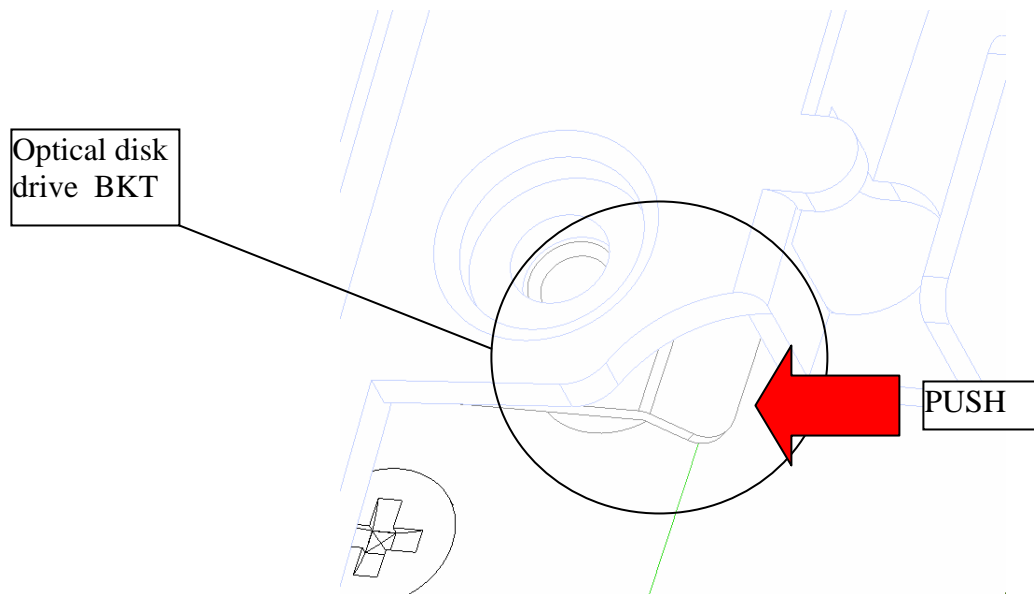

*Figure 4-14 Push optical disk drive Module out*

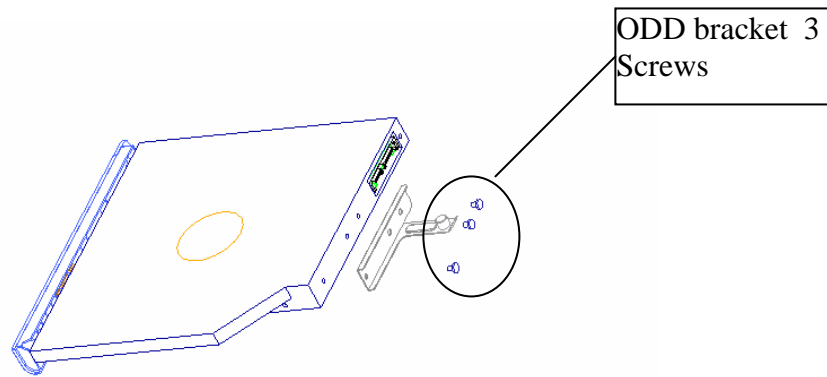

*Figure 4-15 Disassemble the side bracket*

### **Install an optical disk drive**

The following describes the procedure of installing an optical disk drive (See Figure 4-12 and 4-13).


1. Attach the **ODD bracket** to an optical disk drive and secure it with the following **screws**.
  - M2.0×3.0 Flat BIND screw x 3
2. Insert an optical disk drive assembly into the slot and connect it to the connector **CN26** on the system board.
3. Secure the ODD drive with the following **screw**.
  - M2.5X4.0 Flat BIND screw x 1
4. Secure the Memory Module Cover with the following **screw**.
  - M2.5×4.0B BIND screw x 3

## 4.9 Top assembly

### Remove the top assembly


The following describes the procedure of removing the cover assembly (See Figure 4-16 to 4-17).

1. Turn over the computer.
2. Remove the following **screws** securing the cover assembly from the back and bottom of computer.
  - M2.0×6.0 BIND screw Back x5
  - M2.5×10 BIND screw Back x6
  - M2.5×4.0 BIND screw Back x2
  - M2.0×3.0 FLAT BIND screw Back x3

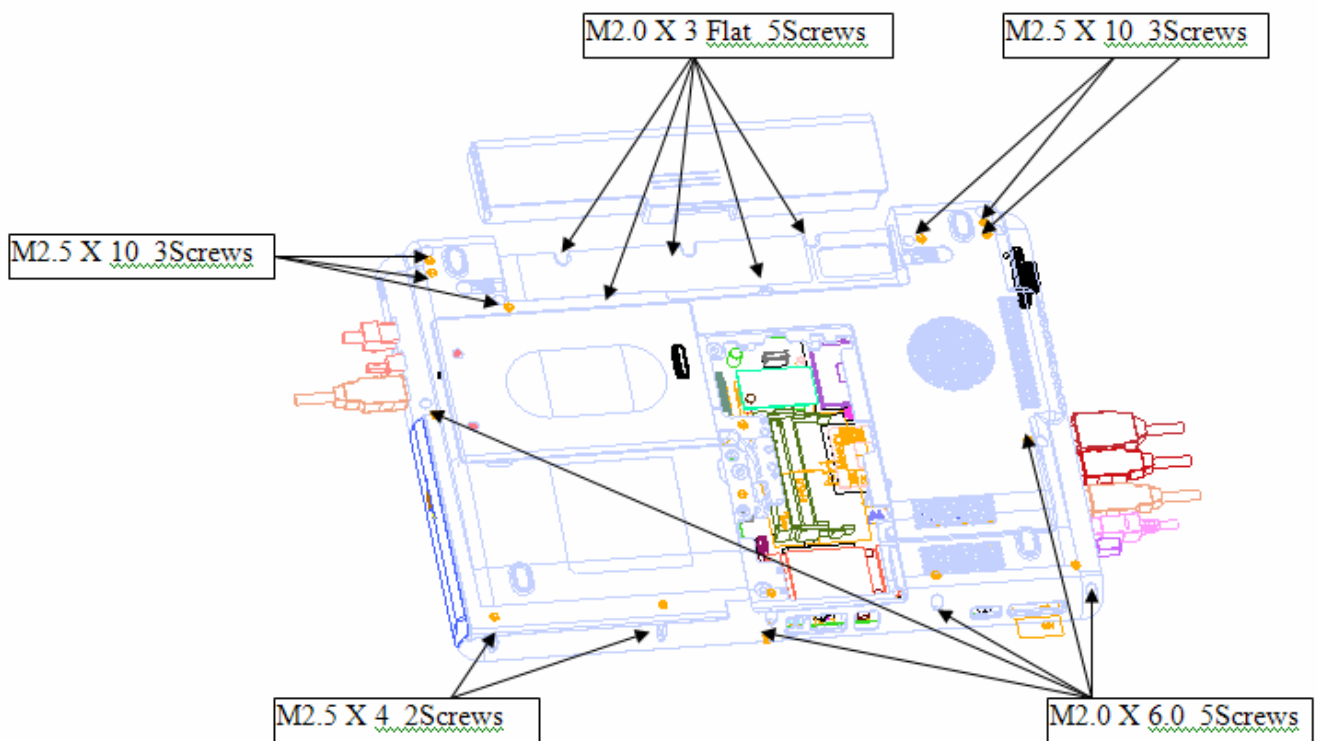


*Figure 4-16 remove the screws (back)*

3. Remove the following screws(front)

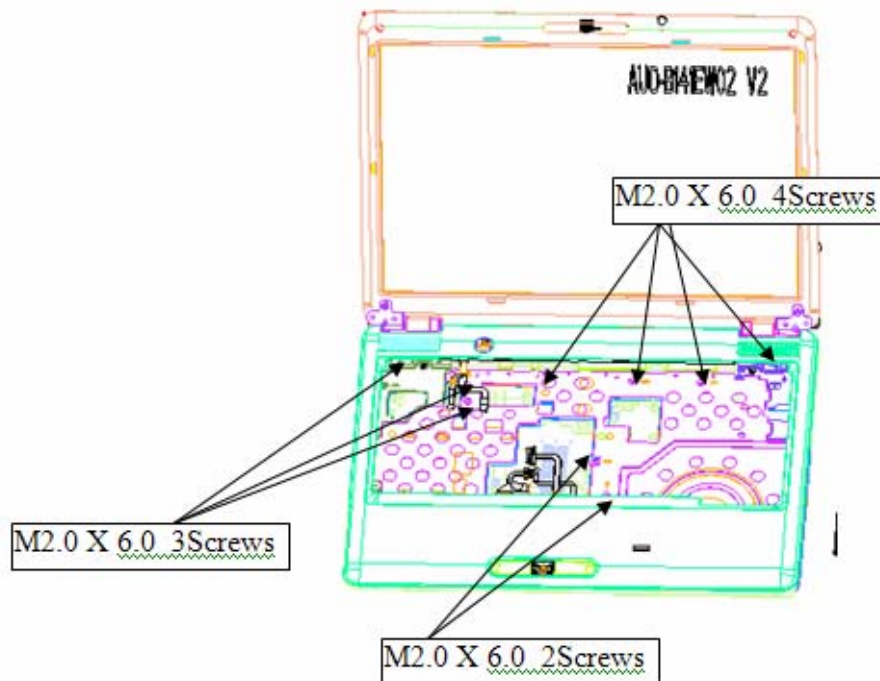

4. Disconnect the **touch pad flat cable/Fingerprint cable/Bluetooth Cable/Power board FFC/MMB Board FFC/Function Lens FFC** from the connector on the system board.

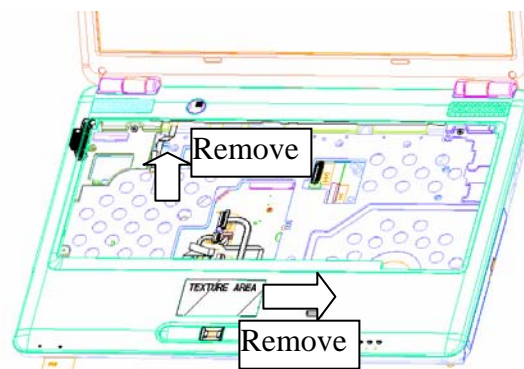

*Figure 4-17 Disconnect the Cable*

5. Remove the **top assembly** from the **base assembly**.



## **Install the top assembly**

The following describes the procedure for installing the cover assembly (See Figure 4-19 to 4-21).

1. Install the **top assembly** to the base assembly.

**NOTE:** *Be careful not to catch the cables between cover assembly and base assembly.*

2. Connect the **touch pad flat cable** to the connector on the system board.
3. Secure the cover assembly with the following **screws** from the top of computer.
  - M2.0×6.0 BIND screw Back x9
4. Secure the cover assembly with the following **screws** from the back and bottom of computer.
  - M2.0×6.0 BIND screw Back x5
  - M2.5×10 BIND screw Back x6
  - M2.5×4.0 BIND screw Back x2
  - M2.0×3.0 FLAT BIND screw Back x3
5. Free the cable from cable-drain when through the antenna cable to PCB hole.

## 4.10 Display assembly

### Remove the display assembly

The following describes the procedure for removing the display assembly (See Figure 4-18 to 4-22).

1. Close the display and turn the computer upside down.
2. Open the MINIPCI Door and remove the wireless LAN screws and antenna connector.


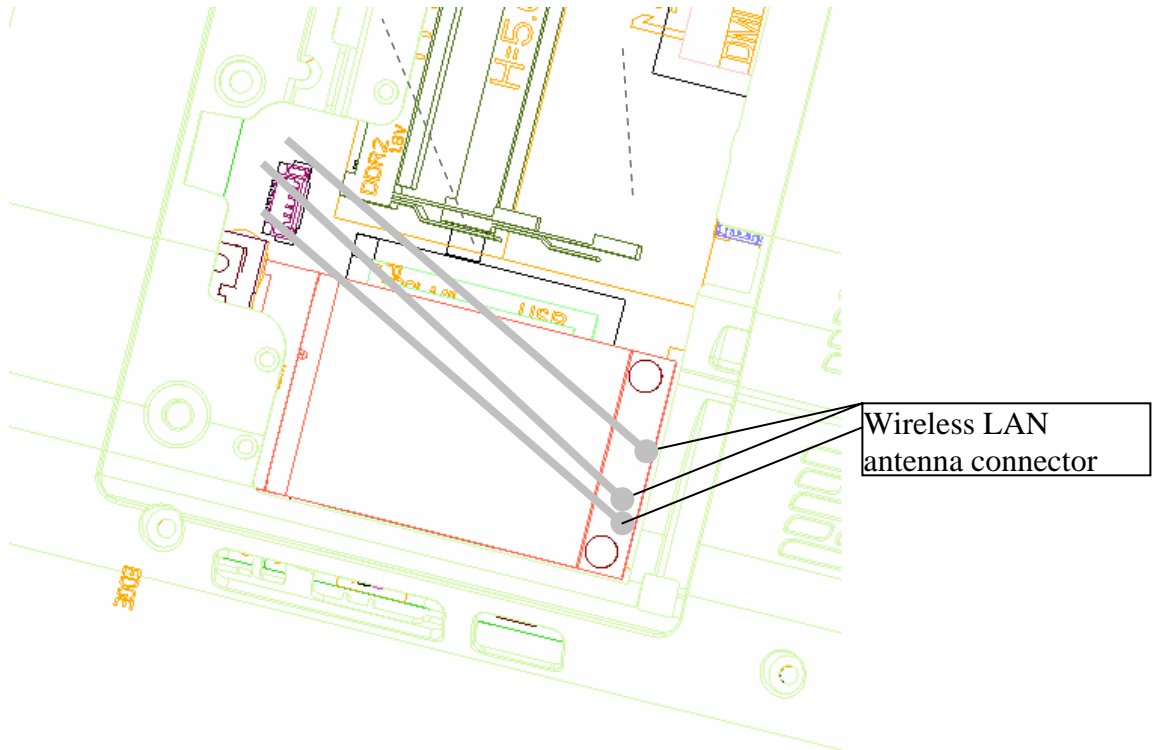



Figure 4-18 Remove the Wireless LAN antenna connector

3. Open the display and removing the **k/b holder** and **keyboard**. (please refer figure 4-9, figure 4-10, figure 4-11).

4. Disassembly TOP ASSY

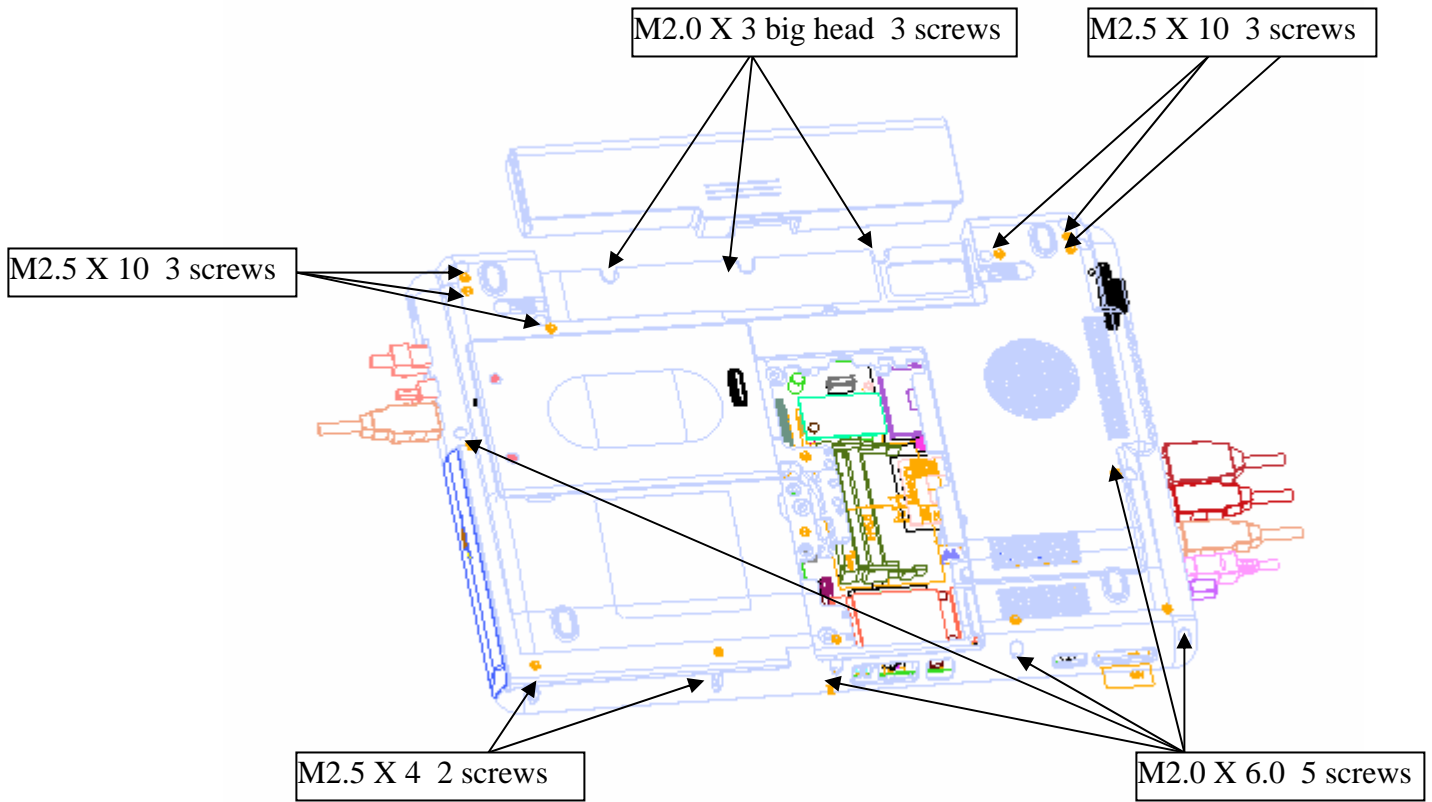


*Figure 4-19 Remove the screws (from bottom side)*

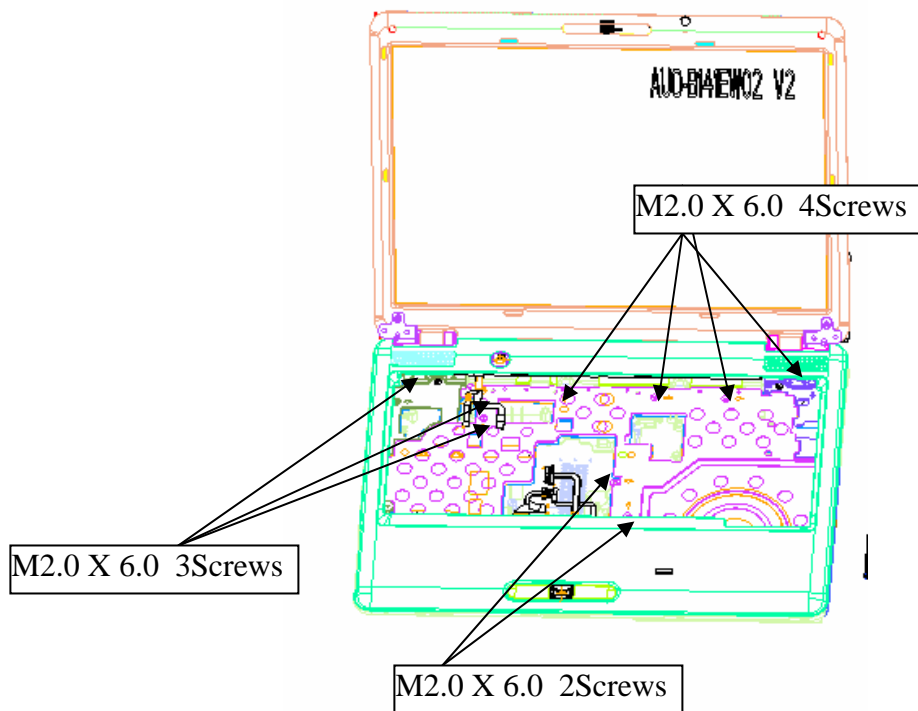

*Figure 4-19-1 Remove the screws (from top side)*


5. Disconnect the **touch pad flat cable/Fingerprint cable/Bluetooth Cable/Power board FFC/MMB Board FFC/Function Lens FFC** from the connector on the system board.
6. Remove TOP ASSY
7. Remove LAN board ASSY and pull out the **wireless LAN antenna and LCD cables** from the guide

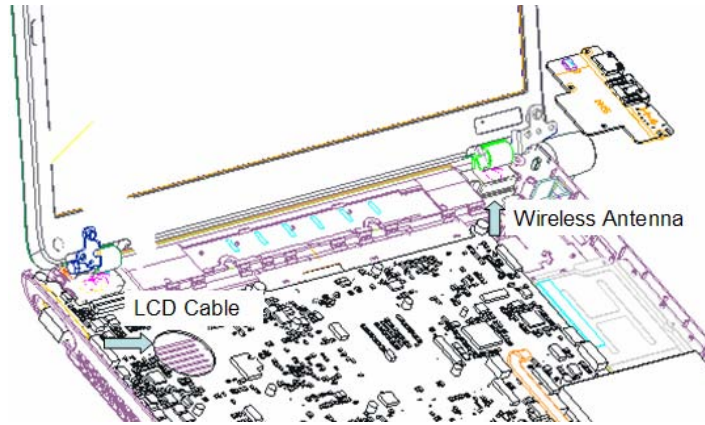

*Figure 4-20 Remove the Wireless Antenna and LCD cable*


8. Open the display to 100 degree, and remove the hinge screw.

- M2.5×5.0 BIND screw            x2    (Locktight)

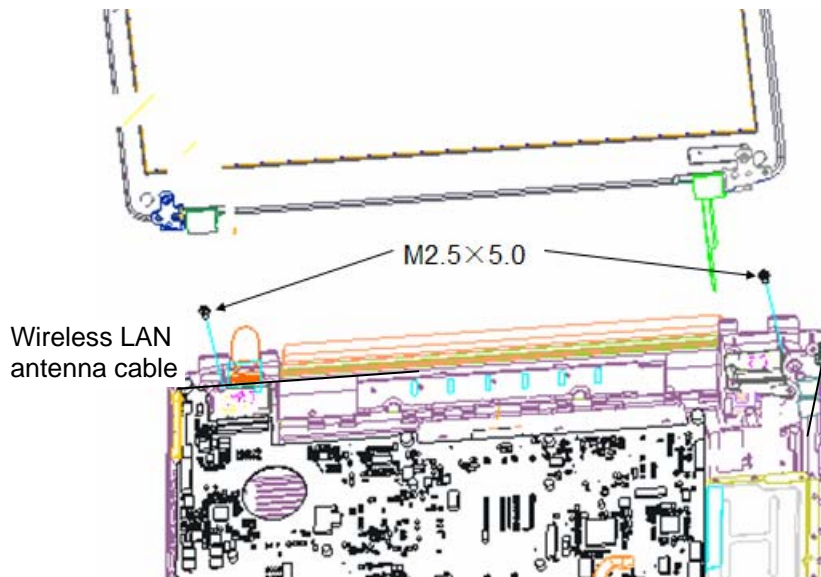

*Figure 4-21 Remove the hinge screw*

9. Pull out the **pole of hinge** from the **hole** of hinge assembly, remove the **display assembly** from the base assembly.

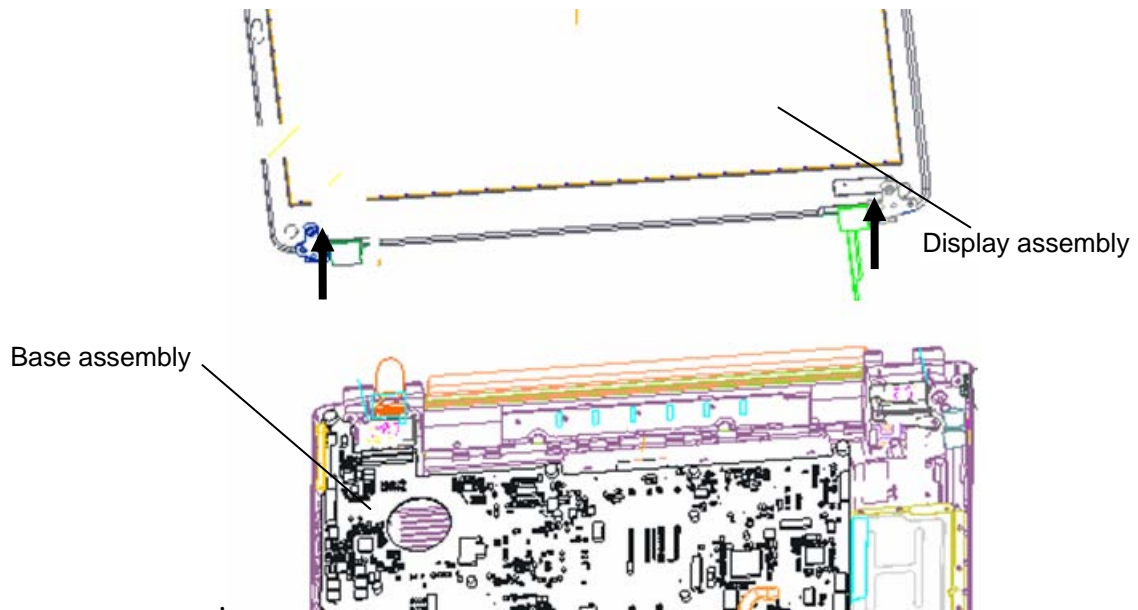

*Figure 4-22 Remove the LCD harness and remove display assembly*

## **Install the display assembly**

The following describes the procedure for installing the display assembly (See Figure 4-13 to 4-17).

1. Insert the **pole of hinge** to the **hole** of hinge assembly, set the **display assembly** on the base assembly.
2. Secure the **hinges** with the following **screws** secure the **display mask** with the following **screws** and stick the **mask seal** on them.

- M2.5×5.0B BIND screw x2

**NOTE:** Be sure to apply the lock tight to the screws instructed in the figure above.

3. Connect the **LCD harness** to the connector on the system board.
4. Arrange the wireless antenna cables along the guide (front) and secure them with **guide**.
5. Pass the cables to the back of computer through the **slot**.
6. Arrange the **wireless LAN antenna** along the guide and contact with the connector.
7. Install the LAN board and top ASSY of the system.

## 4.11 Touch pad

### Remove the touch pad

The following describes the procedure of removing the touch pad (See Figure 4-22).

1. Peel off the **glass tape** and disconnect the **touch pad flat cable, finger print cable** from the connector on the touch pad.
2. Remove the following **screws** securing the touch pad plate and **touch pad board**.
  - M2.0×3.0 Flat screw x4
  - M2.0×3.0 BIND screw x4

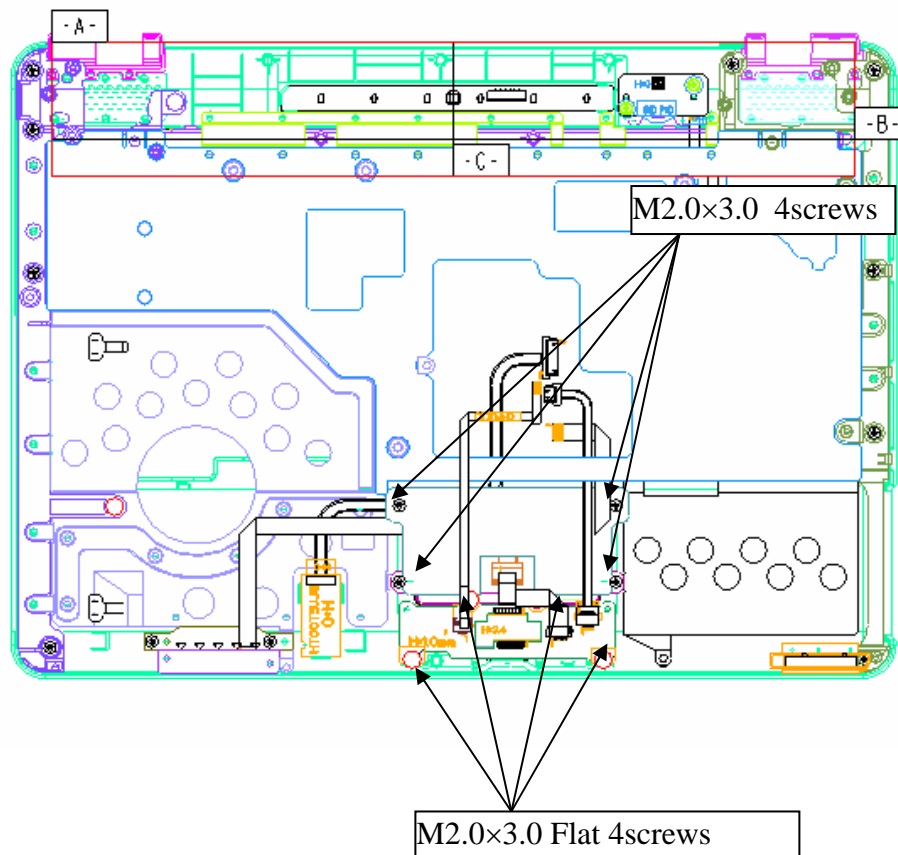


Figure 4-23 Remove the touch board and touch pad plate screw



3. Remove the **touch pad board** and **touch pad plate**.
4. Peel off and remove the **touch pad** from the cover assembly.

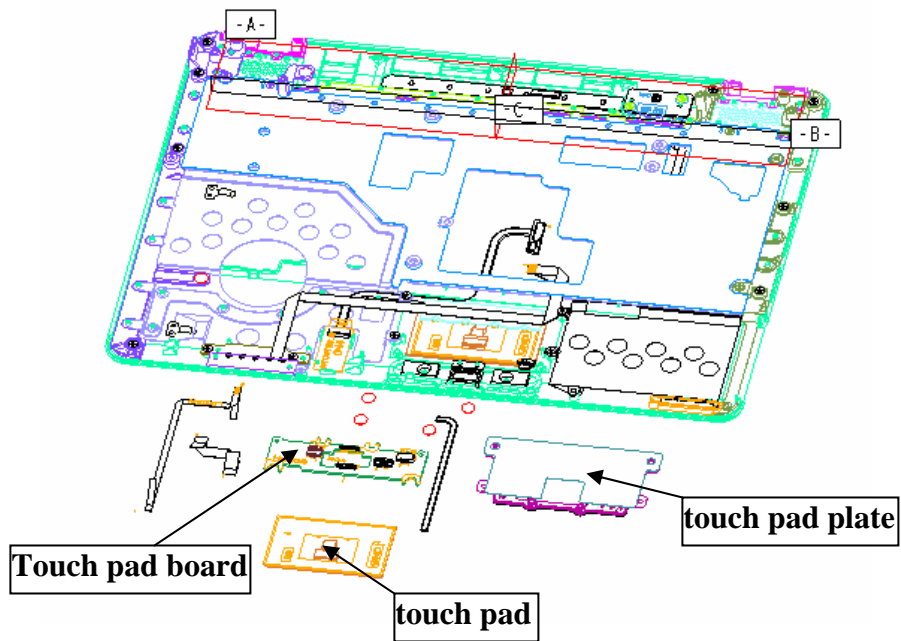


Figure 4-24 Remove **touch pad board** and **touch pad plate**

## **Install the touch pad**

The following describes the procedure for installing the touch pad (See Figure 4-22).

1. Peel off the separator covering on the sensor portion of a new touch pad.

**NOTE:** *Do not reuse the touch pad so that it can not be used after peeling off from the computer. Be sure to stick a new touch pad.*

*When sticking the touch pad, be careful not to get the bubbles under the touch pad.*

2. Stick and install the **touch pad** on the cover assembly.
3. Install the **touch pad plate** and secure it with the following **screws**.
  - M2.0×3.0B BIND screw x4
4. Install the **touch pad board** and secure it with the following **screws**.
  - M2.0×3.0B Flat screw x4
5. Connect the **touch pad flat cable** to the connector on the touch pad and stick the **glass tape** on the connector.


## 4.12 LAN Board

The following describes the procedure of removing the LAN board (See Figure 4-24).

### Remove LAN board

1. Remove the modern cable and Lan FPC
2. Loose below screw and pull out **lan board**

- M2.0x4.0 FLAT BIND screw x1

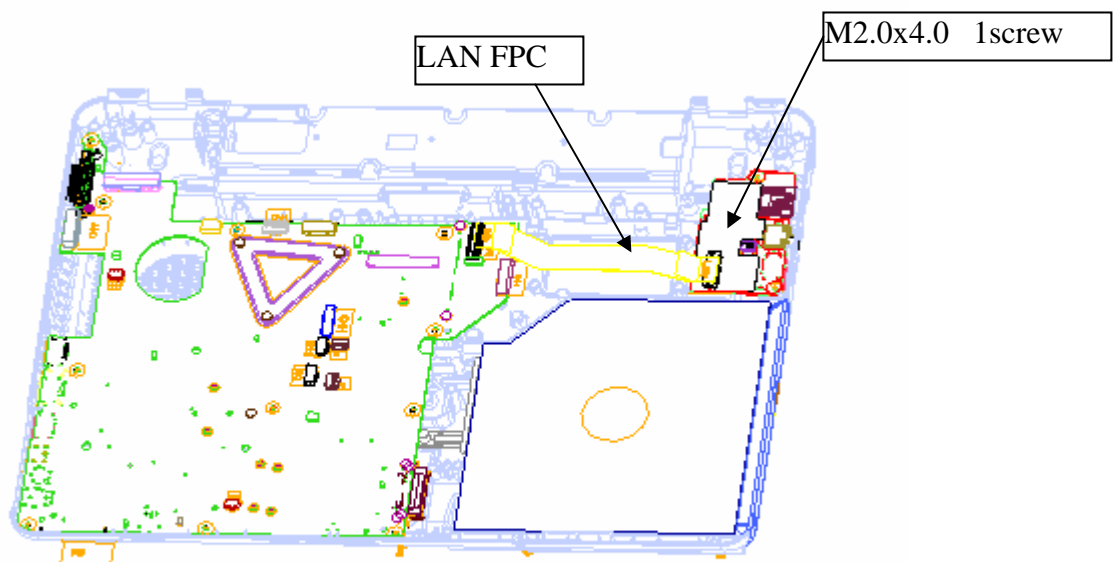

*Figure 4-25 Remove the LAN board*

### Installe the LAN Board

1. Put LAN board in correct location and fix below screw

- M2.0x4.0 BIND screw x1

2. Connect the modern cable and Lan FPC.

## 4.13 System board


**CAUTION:** 1. when handling the system board, always hold by the edges. Do not touch the printed circuit face.

2. If replacing with a new system board, execute the substest01 Initial configuration in section 3.3 “Setting of the hardware configuration”. Also update with the latest BIOS as described in Appendix G “BIOS Rewrite Procedures” and with the latest EC/KBC as described in Appendix H “EC/KBC Rewrite Procedures”.

### Remove the system board

The following describes the procedure for removing the system board.

1. Disconnect the Battery cable and DC cable from the system board (See Figure 4-25)

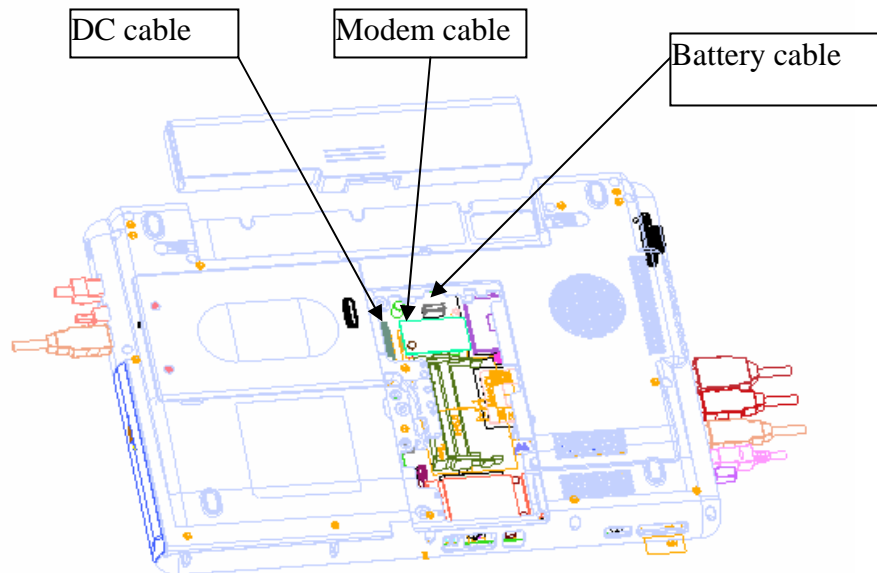

*Figure 4-26 Disconnect the Battery cable and DC cable*

2. Disconnect the **speaker cable** from the connector on the system board.
3. Disconnect the **Antenna cable** from the antenna connector.
4. Disconnect the **LAN FPC** from the connector on the LAN board

## *Replacement Procedures*


---

5. Remove the following **screws** securing the ODD FPC.

- M2.0×4.0 BIND screw x3

6. Remove the following **screws** securing the system board and remove the **system board**. (See Figure 4-26)

- M2.0×4.0 BIND screw x4

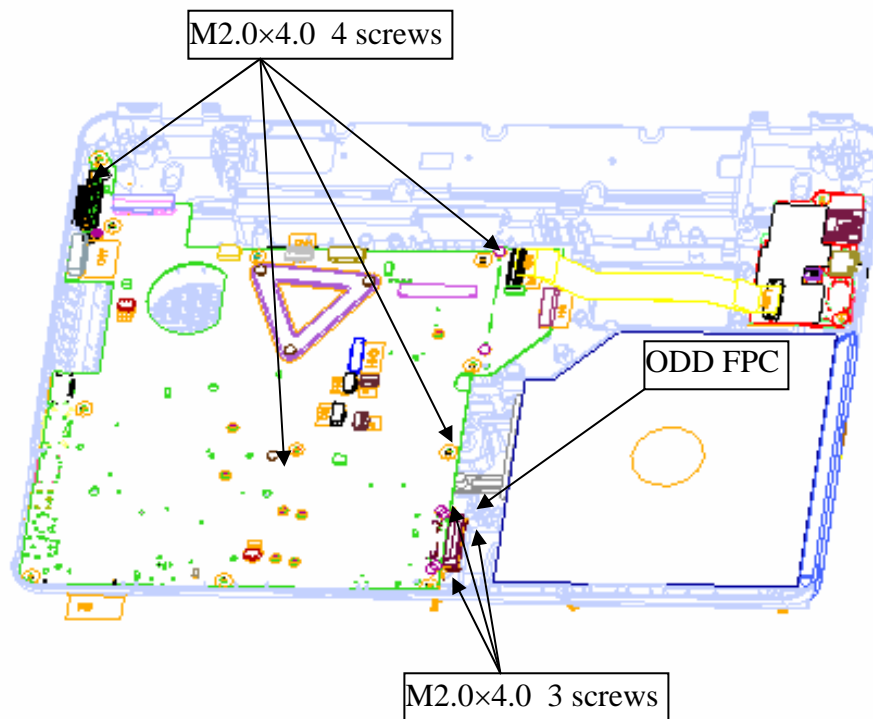

*Figure 4-26-1 Remove the system board*

## **Install the system board**

The following describes the procedure for installing the system board (See Figure 4-26).

1. Secure the system board with the following **screws**.
  - M2.0×4.0 BIND screw x4
2. Connect the LAN FPC to the LAN Board.
3. Connect the **speaker cable** the system board.
4. Connect the Battery cable and DC cable to the connector on the system board

## 4.14 CPU

### Remove the CPU heat sink


The following describes the procedure of removing the CPU heat sink (See Figure 4-27).

1. Disconnect the **Heat sink cable** from the connector on the system board
2. Remove the following **screws** securing the heat sink holder along 1 to 6.

- M2.0×3.0 Special Spring screw x3

**NOTE:** When removing the heat sink holder, be sure to remove the screws in the reverse order of the number marked on the holder.

3. Remove the **CPU heat sink**.

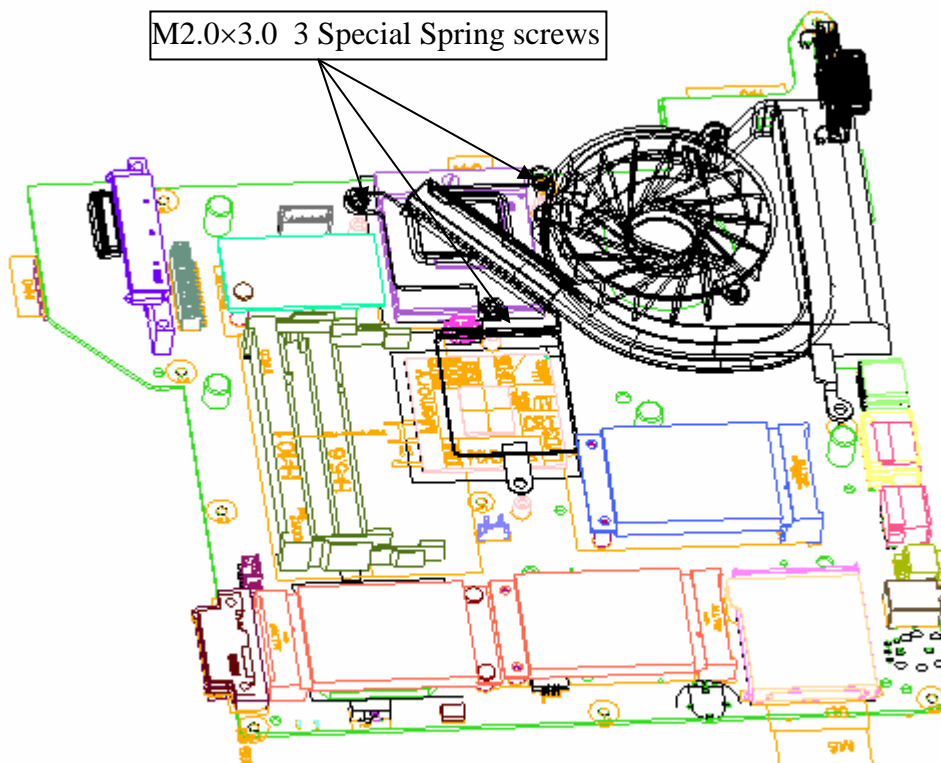

*Figure 4-27 Remove the CPU heat sink*

4. Unlock the **CPU** by rotating the **cam** on the CPU socket 120 degrees to the counterclockwise with a flat-blade screwdriver.
5. Remove the **CPU**.

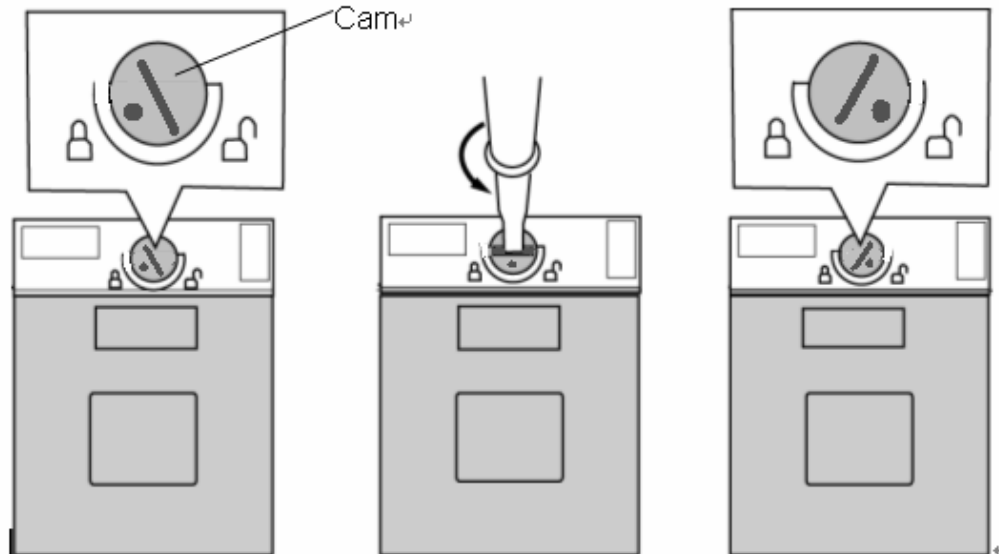


Figure 4-28 Remove the CPU


### Install the CPU

The following describes the procedure for installing the CPU (See Figure 4-27 to 4-28).

1. Check that the mark of cam is in the unlocking position.
2. Attach the **CPU** to the correct position in the **CPU socket**.
3. Fix the **CPU** by rotating the cam 120 degrees to the clockwise with a flat-blade screwdriver.
4. If there is already silicon grease on the CPU, clean it with a cloth.  
Using a special applicator, apply silicon grease so that the CPU chip on the CPU is completely covered.
5. Please apply 0.15cc silicon grease (Shinetsu 7762) for each repair and apply thermal pad on North Bridge, VGA and VRAM.



**NOTE:** Apply the silicon grease enough to cover the chip surface using the special applicator. Thermal pad is fixed for each one, no need special applicator.

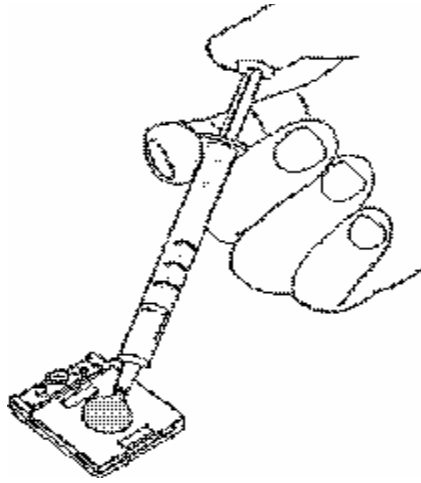

*Figure 4-29 Apply silicon grease*

6. Install the **CPU heat sink** and **heat sink holder** and secure them with the following **screws** along 1 to 6.
  - M2.0 X 3 Special Spring screw x3
7. Connect the **Heat sink cable** to the connector on the system board

**NOTE:** When securing the heat sink holder, be sure to secure the screws in the order of the number marked on the holder.

## 4.15 LCD unit / FL inverter

**CAUTION:** *When replacing a LCD, it is required that SVP parameter is set. Update with the latest EC/KBC as described in Appendix H “EC/KBC Rewrite Procedures”.*

### Remove the LCD unit / FL inverter


The following describes the procedure of removing the LCD unit and FL inverter (See Figure 4-30 to 4-33)

Remove Screw rubber cover X4

1. Remove the following **screws** securing the display mask


M2.5×5.0 BIND screw X4

2. Insert your finger between the edge of the display mask and the **LCD**, and remove the **display mask** while releasing the latches of display mask.

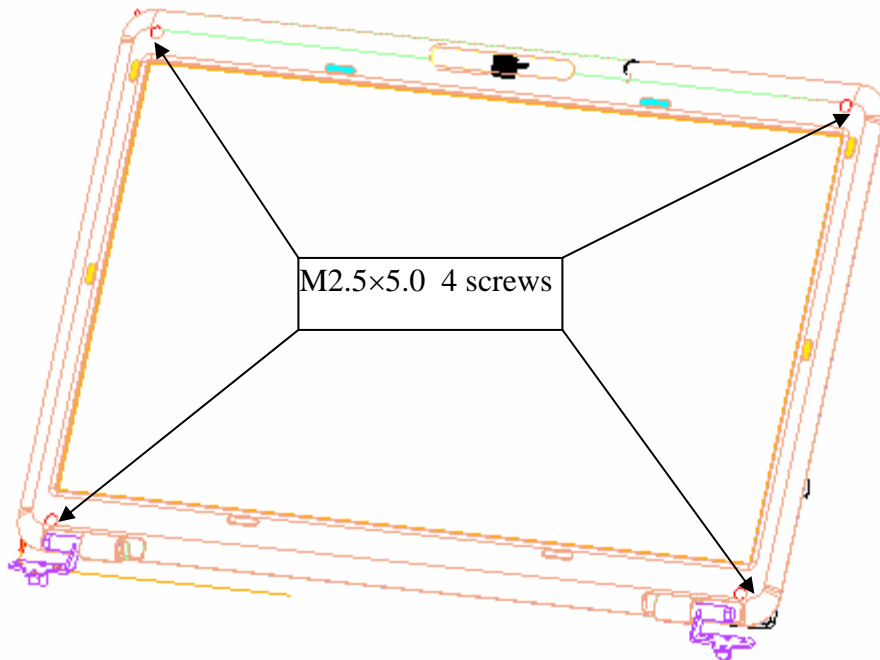

*Figure 4-30 Remove the display mask*

3. Pull out one **insulator** and peel off the other one adhered to the FL inverter.
4. Disconnect the **LCD harnesses** from the connectors **CN1** on the FL inverter.
5. Disconnect the **HV harnesses** from the connectors **CN2** on the FL inverter.
6. Remove the **FL inverter** while peeling off the **double-sided tape**.

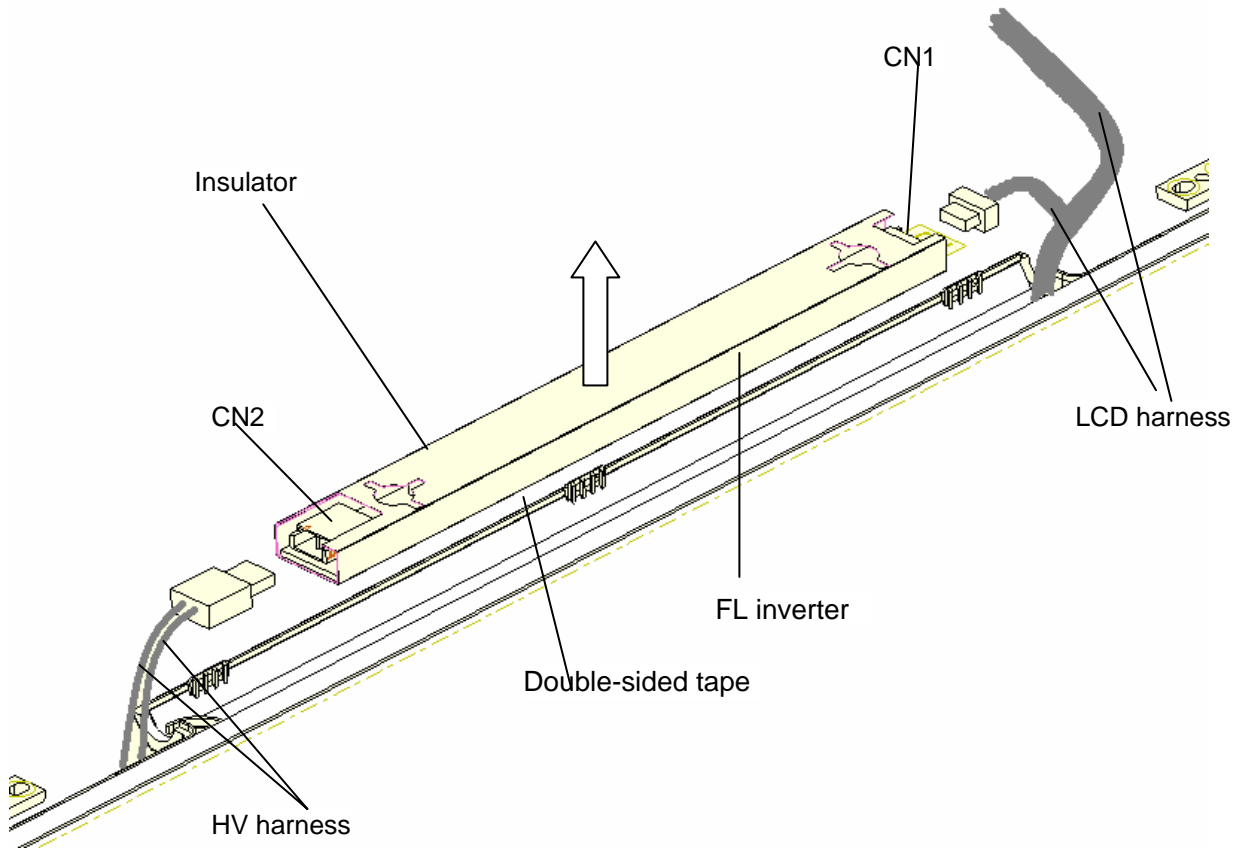


*Figure 4-31 Remove the FL inverter*

## *Replacement Procedures*

---


7. Remove the following **screws** securing the LCD unit.
  - M2.5x5.0 BINK HEAD screw                      x2
8. With the bottom edge of the LCD unit on the display cover, lift only the top edge of the LCD unit. After peeling off the **CONDUCTIVE tape**, disconnect the LCD harness from the connector on the back of the LCD.
9. Remove the **LCD unit**.

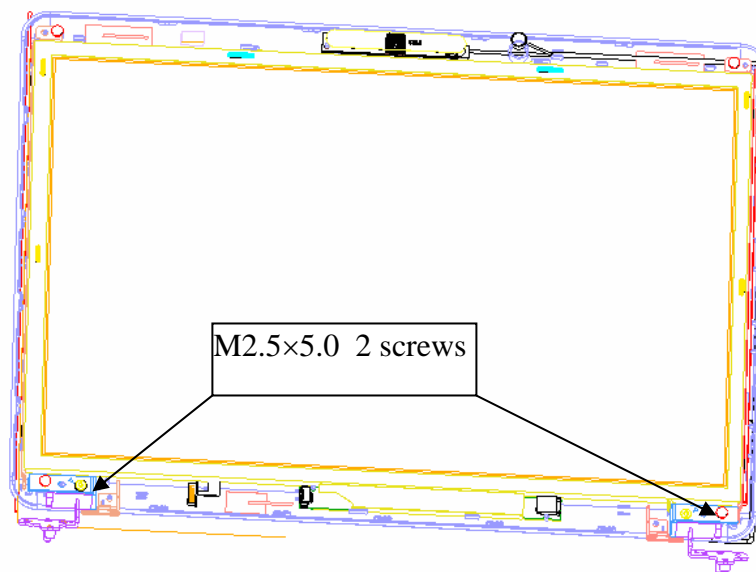

*Figure 4-32 Remove the LCD unit*

10. Remove the following **screws** securing the LCD support (LCD unit side) and remove the **LCD supports** from the LCD unit.

- M2.0x2.5 BINK screw x4

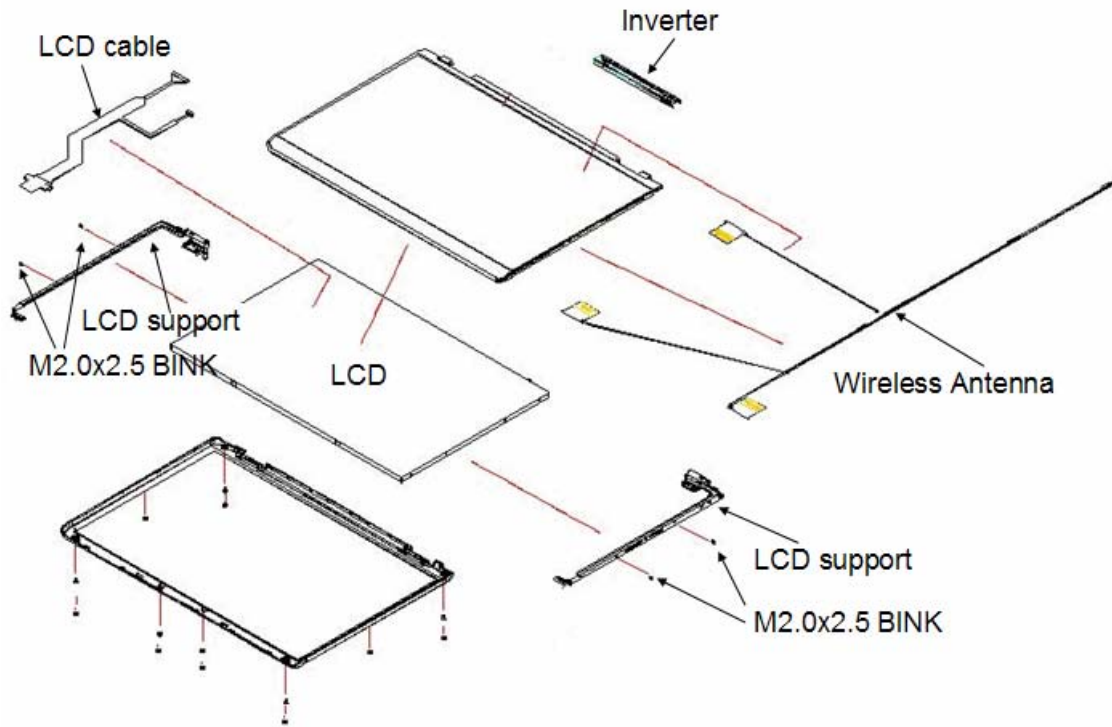

*Figure 4-33 Remove the LCD supports*

### **Install the LCD unit/FL Inverter**

The following describes the procedure for installing the LCD unit and FL inverter (See Figure 4-31 to 4-34).

1. Install the LCD supports (LCD unit side) to the LCD and secure them with the following **screws**.
  - M2.0×2.5 BINK screw x4
2. Stand the **LCD unit** on the display cover and connect the **LCD harness** to the connector on the back of LCD.
3. Stick the **conductive tape** on the connector of LCD harness.
4. Secure the LCD unit with the following **screws**.
  - M2.5×5.0 BINK screw x2
5. Connect **LCD harnesses** to the connector **CN1** of the FL inverter.

**CAUTION:** *Be careful not to connect the LCD harnesses to the wrong connectors of FL inverter.*

6. Connect **HV harnesses** to the connector **CN2** of the FL inverter.
7. Install the **display mask** while fitting the latches.
8. Secure the display mask with following **screws**
  - M2.5×5.0 BIND screw X4
9. Cover screws with Screw rubber cover X4


**NOTE:** *When installing the display mask, make sure there is no gap between the display mask and the display cover.*

## 4.16 Application for Thermal Pad on North Bridge, VGA and VRAM

I. For Satellite M300, Satellite Pro M300, Satellite L310, Satellite Pro L310, EQUIUM M300, SATEGO M300 (Intel without VGA board) , use Thermal Pad FSL-BS75 on North Bridge

1. Thermal Pad FSL-BS75
2. one Syringe contains 12mmX14mmX0.75mm

TSB P/N	Raw Material	Classification	Description
A000026940	JXBU2013010	NORTH BRIDGE THERMAL PAD	THERMAL PAD UMA FSL-BS BU2(JXBU2013,R3A)

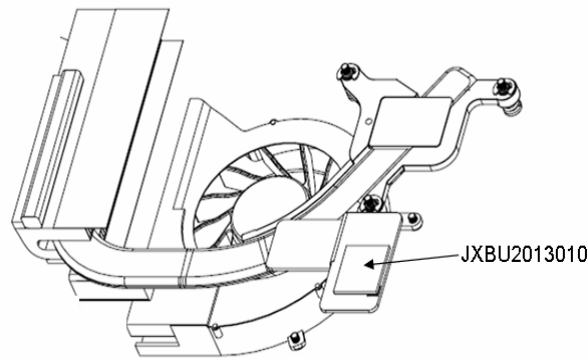


*Figure 4-34 Thermal Pad on North bridge(Intel without VGA board)*

II. For Satellite M300, Satellite Pro M300, Satellite L310, Satellite Pro L310, EQUIUM M300, SATEGO M300 (Intel with VGA board) , use following Thermal Pad on North Bridge, and a VGA and VRAM.

1. Thermal Pad T-Flex320
2. one Syringe contains 12mmX14mmX0.5mm


TSB P/N	Raw Material	Classification	Description
A000026950	JXTE1026010	NORTH BRIDGE THERMAL PAD	THERMAL PAD DIS TE1(JXTE1026,R3A)



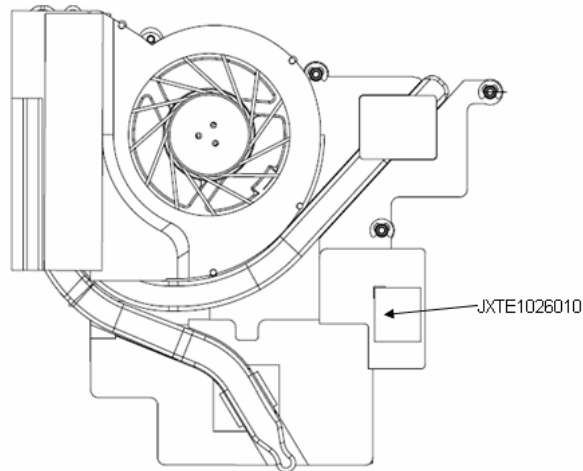

*Figure 4-35 Thermal Pad on North bridge(Intel with VGA board)*

TSB P/N	Raw material	Classification	Description
A000026960	JXTE1028010	VGA THERMAL PAD	THERMAL PAD VGA TE1(JXTE1028,R3A)
A000026970	JXTE1027010	V-RAM THERMAL PAD	THERMAL PAD V-RAM TE1(JXTE1027,R3A)

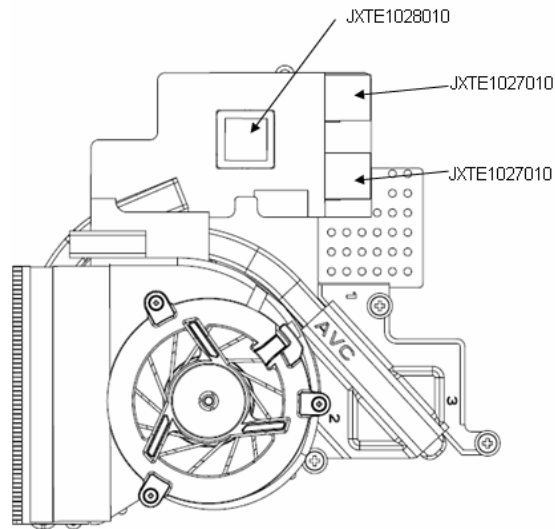

*Figure 4-36 Thermal Pad on VGA and V-RAM*

**NOTE:** When applying for thermal pad on North Bridge, VGA, V-RAM, Thermal pad is fixed for each one, no need special applicator

---


## Appendix A Handling the LCD Module

---

### Precautions for handling the LCD module

The LCD module can be easily damaged during assembly or disassembly. Observe the following precautions when handling the LCD module:

1. When installing the LCD module in the LCD cover, be sure to seat it so that it is properly aligned and maximum visibility of the display is maintained.

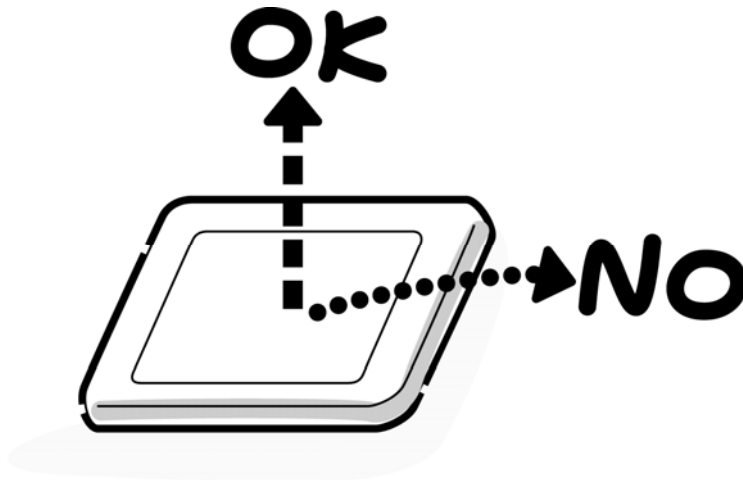

2. Be careful to align the holes at the four corners of the LCD module with the corresponding holes in the LCD cover before securing the module with screws. Do not force the module into place, because stress can affect its performance.

Also, the panel's polarized surface is easily scarred, so be careful when handling it.



3. If the panel's surface gets dirty, wipe it with cotton or a soft cloth. If it is still dirty, try breathing on the surface to create a light condensate and wipe it again.


If the surface is very dirty, we recommend a CRT cleaning agent. Apply the agent to a cloth and then wipe the panel's surface. Do not apply cleanser directly to the panel.




4. If water or other liquid is left on the panel's surface for a long period, it can change the screen's tint or stain it. Be sure to quickly wipe off any liquid.



5. Glass is used in the panel, so be careful not to drop it or let it strike a hard object, which could cause breakage or cracks.

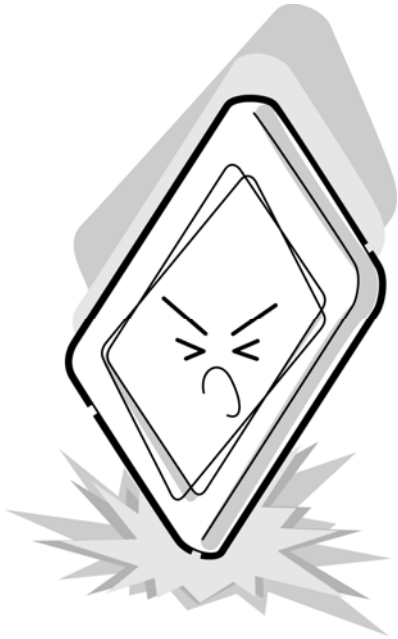


6. CMOS-LSI circuits are used in the module, so guard against damage from electrostatic discharge. Be sure to wear a wrist or ankle ground when handling the module.

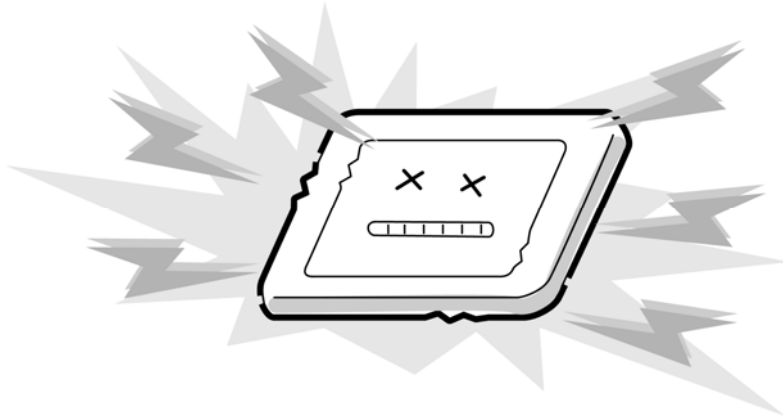


7. Do not expose the module to direct sunlight or strong ultraviolet rays for long periods.




8. Do not store the module at temperatures below specifications. Cold can cause the liquid crystals to freeze, lose their elasticity or otherwise suffer damage.

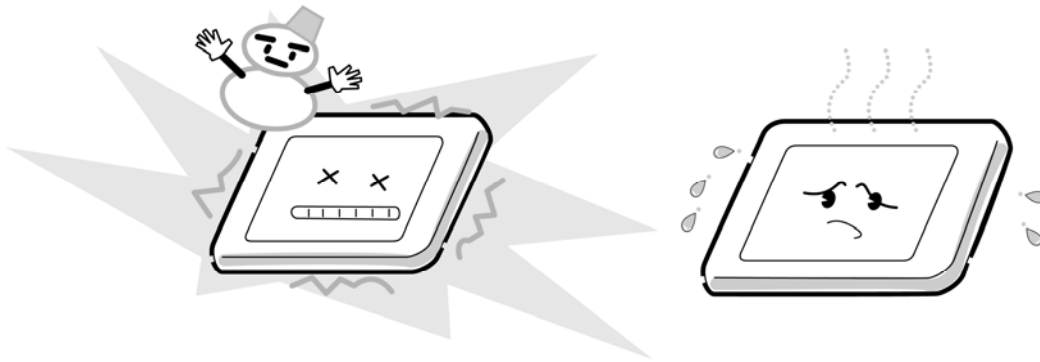

9. Do not disassemble the LCD module. Disassembly can cause malfunctions.

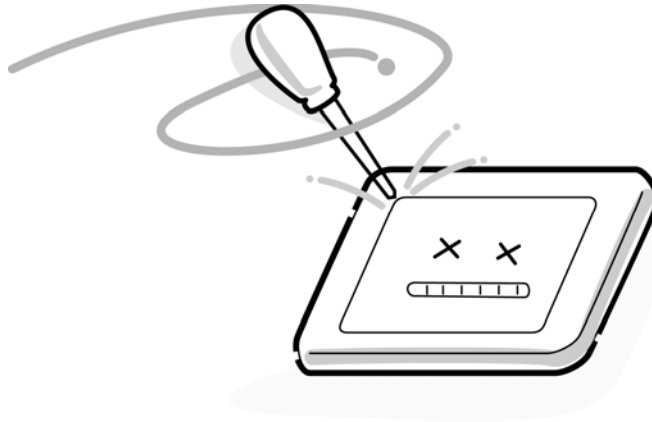

10. If you transport the module, do not use packing material that contains epoxy resin (amine) or silicon glue (alcohol or oxide). These materials can release gas that can damage the panel's polarization.

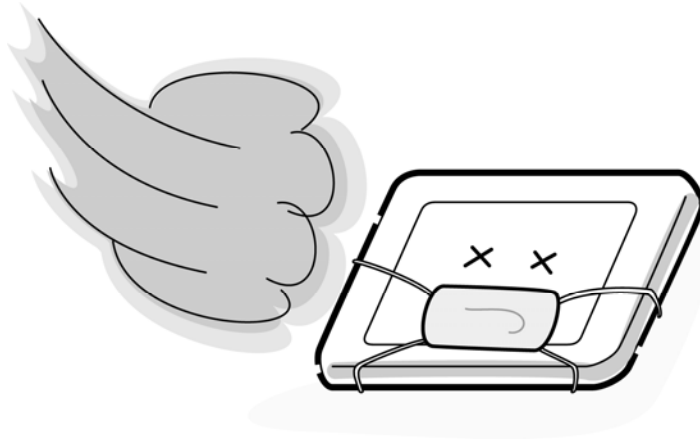

## Appendix B Board Layout

### B.1 System Board

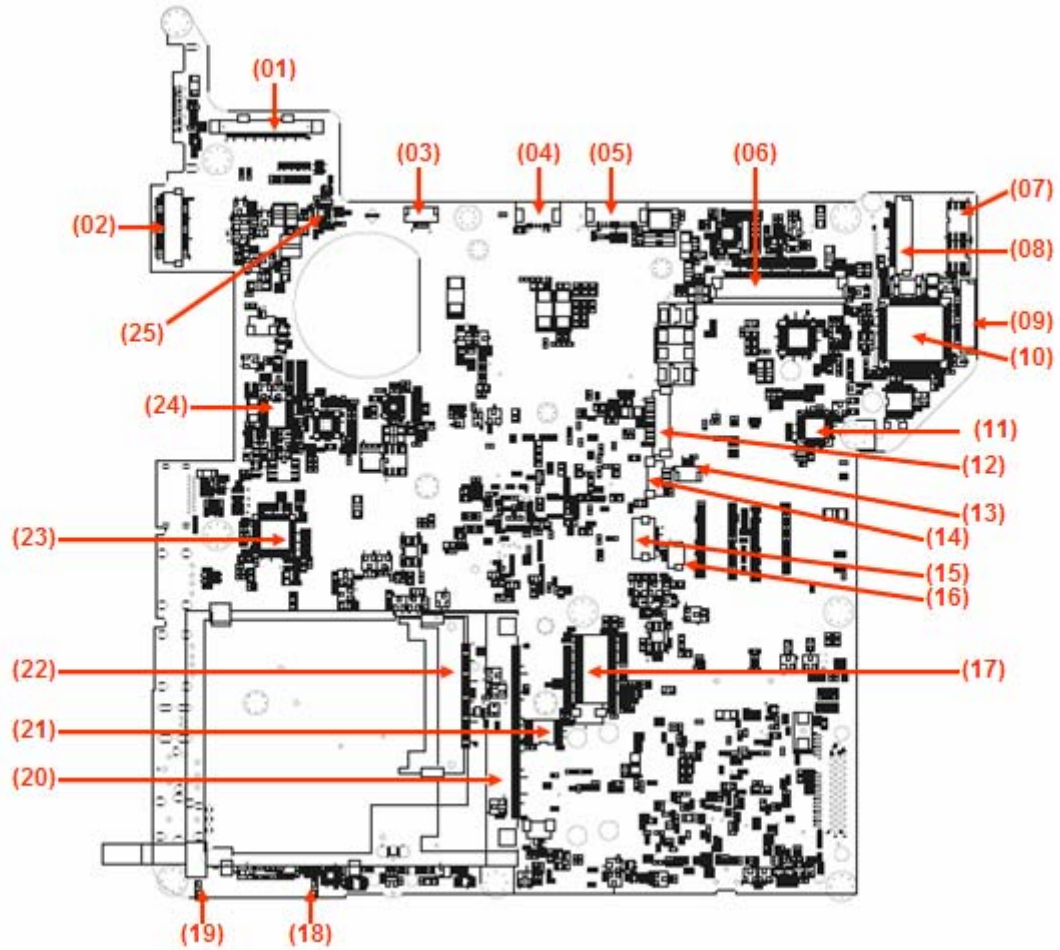


Figure B-1-1 System board layout (front)

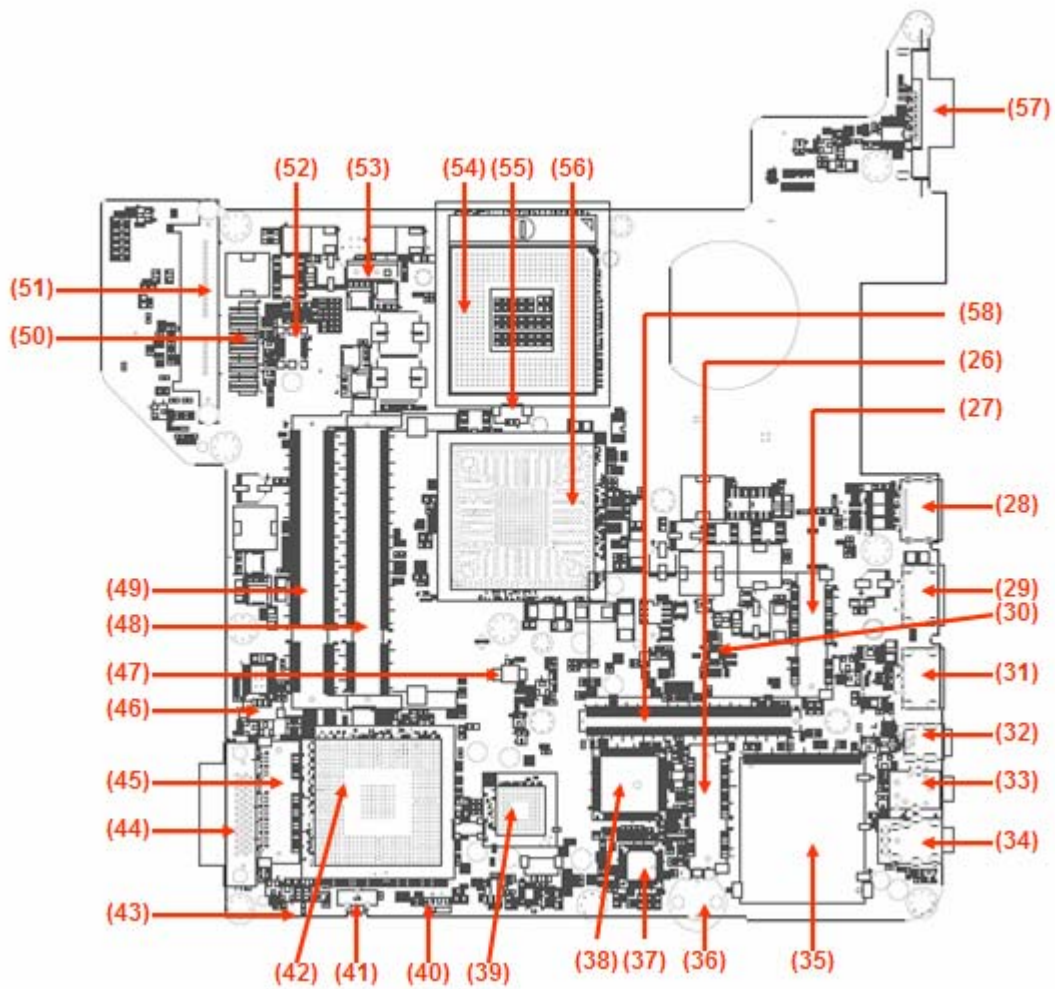


Figure B-1-2 System board layout (Back)



*Table B-1 System board ICs and connectors*

	<b>Location</b>	<b>Function</b>
(01)	CN1	M/B to LED type panel connector
(02)	CN5	M/B to CCFL type panel connector
(03)	CN4	M/B to Power Board connector
(04)	CN2	M/B to Mainstream Function board connector
(05)	CN3	M/B to Low Cost Function board connector
(06)	CN7	External Keyboard connector
(07)	U2	BIOS IC
(08)	CN6	M/B to LAN Board connector
(09)	CN8	M/B to External MINI card slot connector
(10)	U5	Embedded Controller IC (Winbond WPCE775C)
(11)	U33	G-sensor IC LIS3L02AQ3
(12)	CN10	M/B to Bluetooth module connector
(13)	CN11	M/B to Touch pad board connector
(14)	CN12	M/B to Touch pad with Fingerprint board connector
(15)	CN13	M/B to LED board connector
(16)	CN14	M/B to Ferica module connector
(17)	U13	Clock Gen IC ICS9LPRS365BGLFT
(18)	LED2	Satellite LED
(19)	LED1	Satellite LED
(20)	CN16	Card Bus connector
(21)	U16	Card Bus power switch IC ENE CP-2211
(22)	CN15	New Card connector
(23)	U12	Internal HDMI transmitter IC Sil1392
(24)	U9	CEC control IC R5F211A4SP
(25)	U1	LED Panel Drive IC
(26)	CN34	Internal MINI card slot
(27)	CN27	Internal MINI card slot
(28)	CN23	HDMI connector
(29)	CN26	USB connector
(30)	U17	New Card power switch IC OZ27C10LN-B1
(31)	CN29	USB connector
(32)	CN32	1394 connector
(33)	CN33	External MIC jack connector
(34)	CN38	HP/SPDIF jack connector
(35)	CN37	Card Reader connector
(36)	VR1	Volume wheel
(37)	U39	Codec IC CX20561-12Z
(38)	U36	Card reader/1394 control IC OZ129T
(39)	U38	Card Bus control IC CB1410

## ***Board Layout***

---

<b>(40)</b>	<b>U42</b>	<b>CIR controller IR-IRM-V538-TR1</b>
<b>(41)</b>	<b>SW2</b>	<b>Kill SW</b>
<b>(42)</b>	<b>U37</b>	<b>South Bridge ICH8</b>
<b>(43)</b>	<b>LED3</b>	<b>W-LAN&amp;BT LED</b>
<b>(44)</b>	<b>CN36</b>	<b>ODD connector</b>
<b>(45)</b>	<b>CN35</b>	<b>Internal MINI card slot</b>
<b>(46)</b>	<b>CN30</b>	<b>Internal speaker connector</b>
<b>(47)</b>	<b>CN28</b>	<b>RTC battery connector</b>
<b>(48)</b>	<b>CN25</b>	<b>DDR SO-DIMM(200P) slot</b>
<b>(49)</b>	<b>CN24</b>	<b>DDR SO-DIMM(200P) slot</b>
<b>(50)</b>	<b>CN21</b>	<b>Battery cable connector</b>
<b>(51)</b>	<b>CN19</b>	<b>HDD connector</b>
<b>(52)</b>	<b>CN20</b>	<b>Modem module connector</b>
<b>(53)</b>	<b>PJ1</b>	<b>AC cable connector</b>
<b>(54)</b>	<b>U26</b>	<b>CPU socket</b>
<b>(55)</b>	<b>CN22</b>	<b>FAN connector</b>
<b>(56)</b>	<b>U29</b>	<b>North Bridge</b>
<b>(57)</b>	<b>CN18</b>	<b>CRT connector</b>
<b>(58)</b>	<b>CN31</b>	<b>VGA board connector</b>

## B.2 Function Button board

<Front layout>

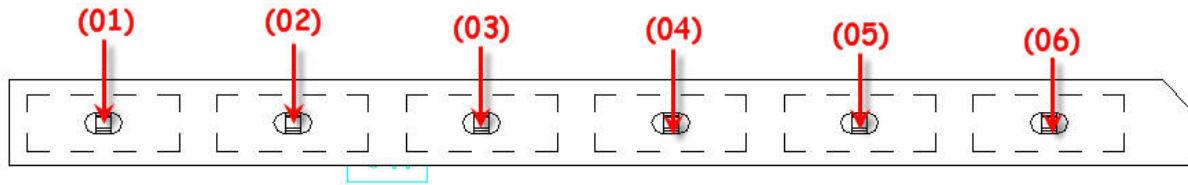


Figure B-2-1-1 Function Button board layout Mainstresam (Front)

<Back layout>

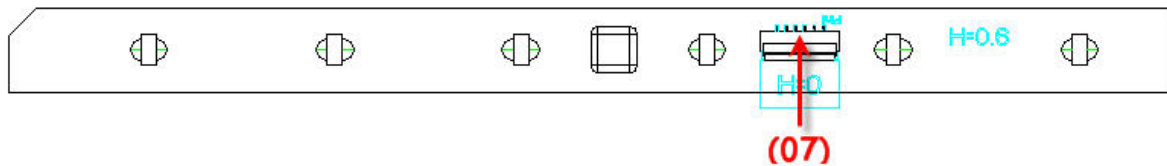


Figure B-2-1-2 Function Button board layout Mainstresam (Back)

Table B-2-1 Function Button board connectors

	Location	Function
(01)	SW1	Music Silence Button
(02)	SW2	Media Player Button
(03)	SW3	Music Play / Pause Button
(04)	SW4	Music Stop Button
(05)	SW5	Music Backward
(06)	SW6	Music Forward
(07)	J1	MMB board (Mainstream) to M/B connector

<Front layout>

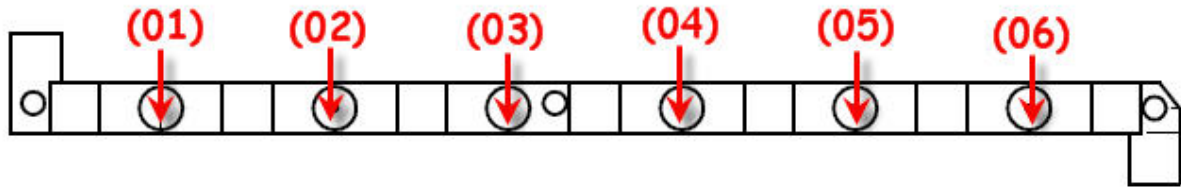


Figure B-2-2-1 Function Button board layout Lowcost (Front)

<Back layout>

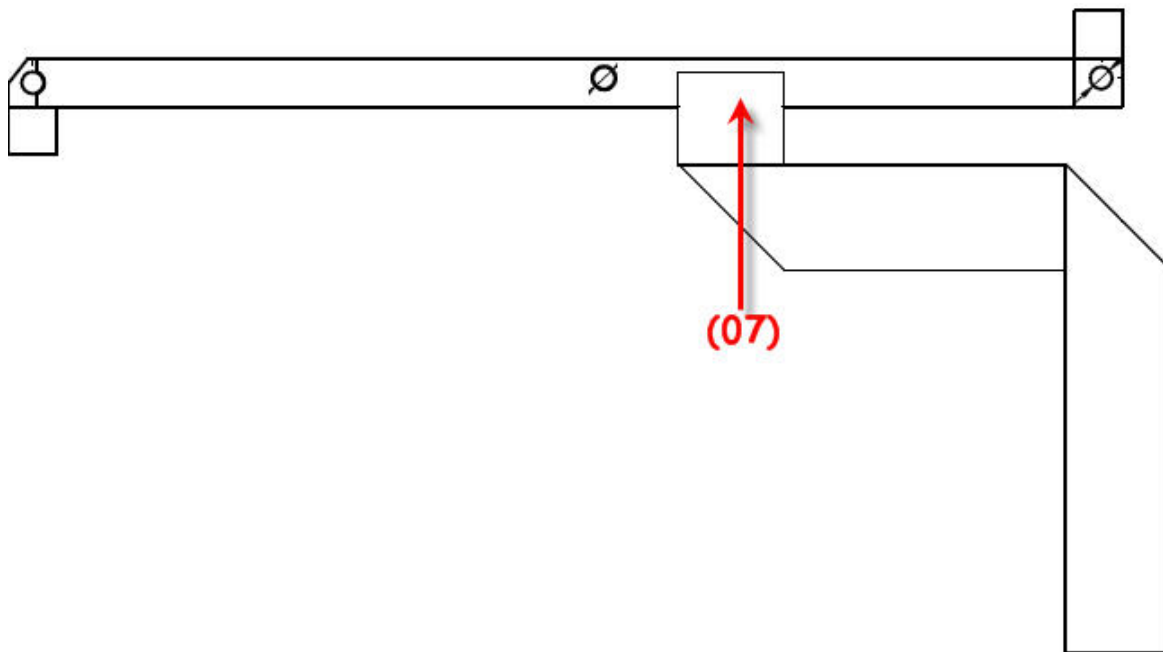


Figure B-2-2-2 Function Button board layout Lowcost (Back)

Table B-2-2 Function Button board connectors


	Location	Function
(01)	SW1	Music Silence Button
(02)	SW2	Media Player Button
(03)	SW3	Music Play / Pause Button
(04)	SW4	Music Stop Button
(05)	SW5	Music Backward
(06)	SW6	Music Forward
(07)	CN1	MMB board (Lowcost) to M/B connector (no mount)

***Board Layout***

---

		<b>connector, only with Hotbar)</b>
--	--	-------------------------------------

**B.3 Power Board**

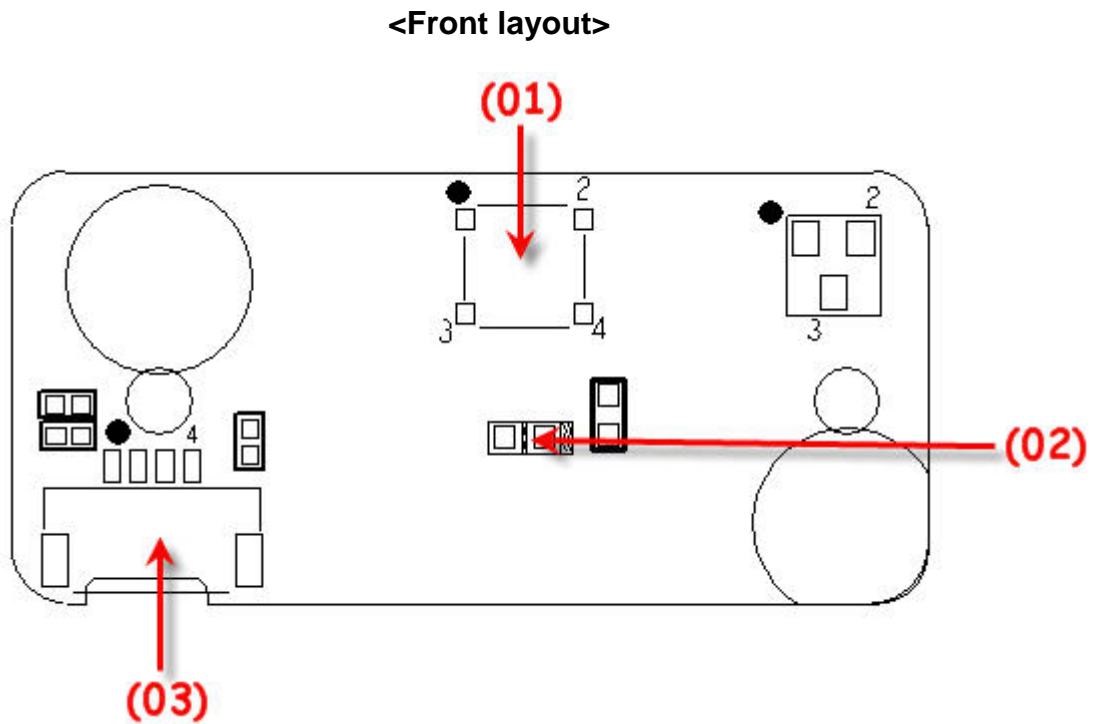

*Figure B-3 Power board layout*

*Table B-3 Power board connectors*

	<b>Location</b>	<b>Function</b>
<b>(01)</b>	<b>SW1</b>	<b>Power Button Switch</b>
<b>(02)</b>	<b>LED1</b>	<b>Power LED</b>
<b>(03)</b>	<b>CN1</b>	<b>Power board to M/B connector</b>

B.4 Touch Pad Board

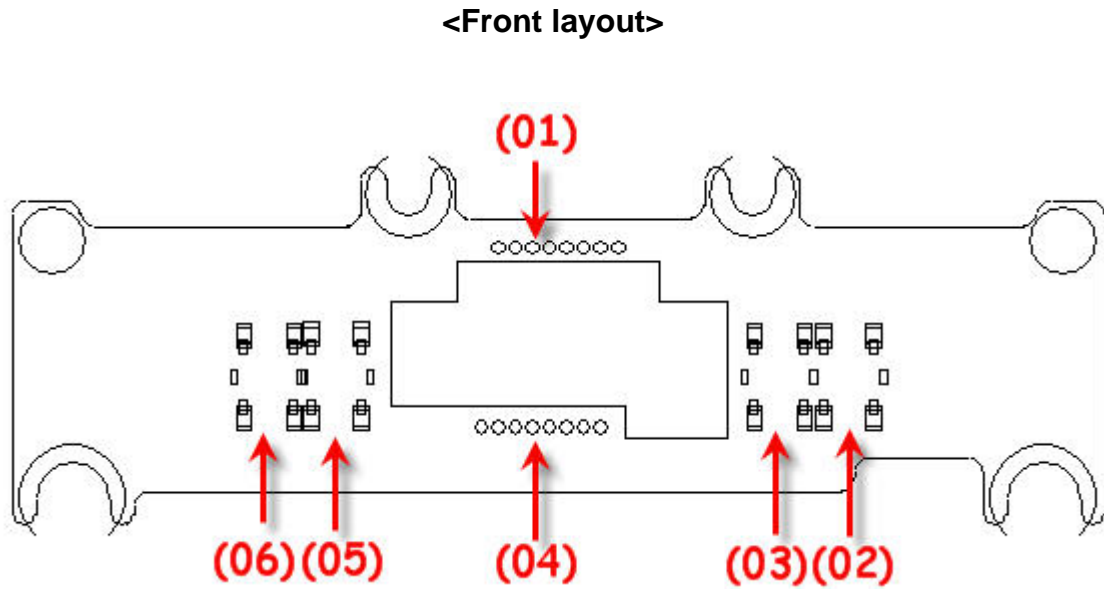


Figure B-4-1 Touch Pad board layout (Front)

Table B-4-1 Touch Pad board connectors (Front)

	Location	Function
(01)	CN4	Touch Pad board to Fingerprint board connector(Upper)
(02)	SW4	Mouse Button Right key
(03)	SW2	Mouse Button Right key
(04)	CN5	Touch Pad board to Fingerprint board connector(Lower)
(05)	SW3	Mouse Button Left key
(06)	SW1	Mouse Button Left key

<Back layout>

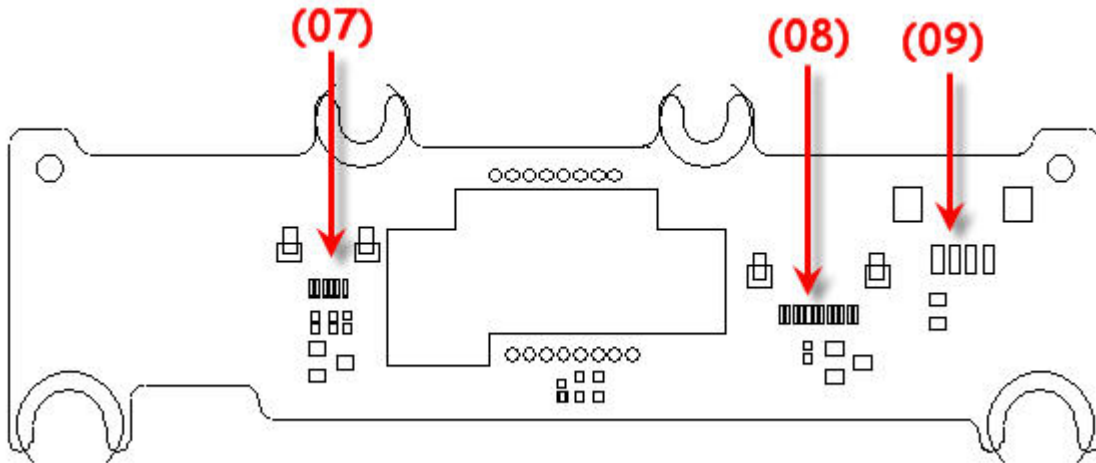


Figure B-4-2 Touch pad board layout (Back)


Table B-4-2 Touch pad board connectors (Back)

	Location	Function
(07)	CN1	Touch Pad board to M/B connector for Module use
(08)	CN3	Touch Pad board to Touch Pad Module connector
(09)	CN2	Touch Pad board to M/B connector for Fingerprint board use



**B.5 LAN Board – 10/100/Giga RJ11 Modem Board**

<Front layout>

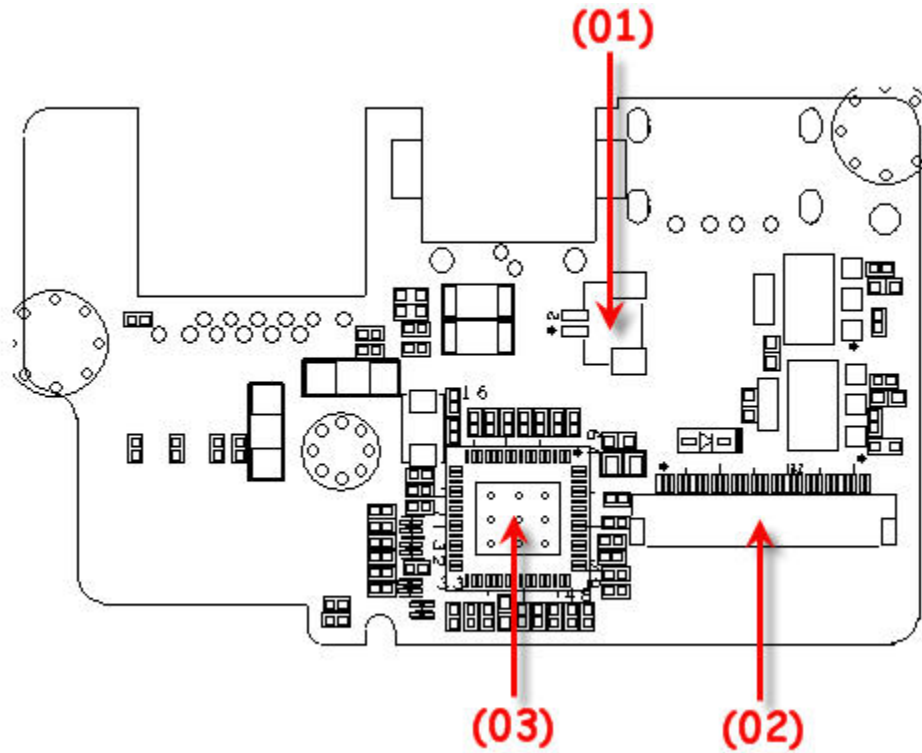

*Figure B-5-1 LAN board 10/100 RJ11 layout (Front)*

*Table B-5-1 LAN board 10/100 RJ11 layout (Front)*

	<b>Location</b>	<b>Function</b>
<b>(01)</b>	<b>CN1</b>	<b>Modem signal to MDC connector</b>
<b>(02)</b>	<b>CN2</b>	<b>LAN board to M/B connector</b>
<b>(03)</b>	<b>U1</b>	<b>LAN board Marvell controller IC 88E8040T for 10/100 88E8072 for Giga</b>

<Back layout>

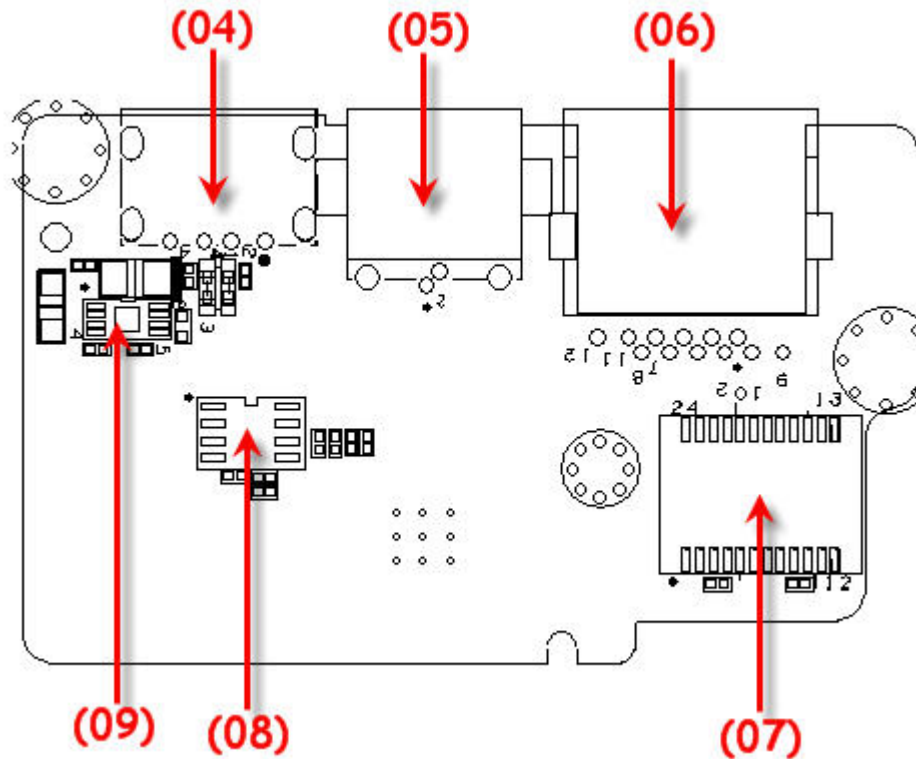



Figure B-5-2 LAN board 10/100 RJ11 layout (Back)

Table B-5-2 LAN board 10/100 RJ11 layout (Back)

	Location	Function
(04)	CN3	USB connector
(05)	CN5	RJ11 connector
(06)	CN4	RJ45 connector
(07)	U4	LAN transformer IC
(08)	U3	LAN EEPROM IC
(09)	U2	LAN board USB power switch

**B.6 LAN Board – Giga FM Board**

<Front layout>

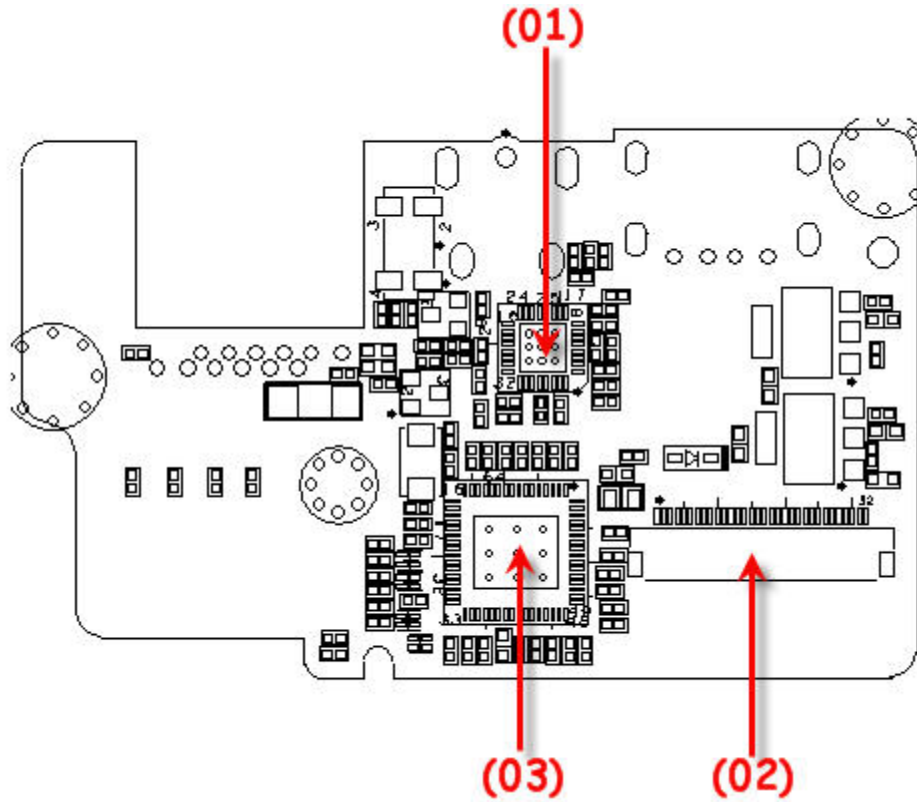

*Figure B-6-1 LAN board Giga FM layout (Front)*

*Table B-6-1 LAN board Giga FM layout (Front)*

	<b>Location</b>	<b>Function</b>
<b>(01)</b>	<b>U1</b>	<b>FM tuner controller IC</b>
<b>(02)</b>	<b>CN2</b>	<b>LAN board to M/B connector</b>
<b>(03)</b>	<b>U2</b>	<b>LAN board Marvell controller IC 88E8072 for Giga</b>

<Back layout>

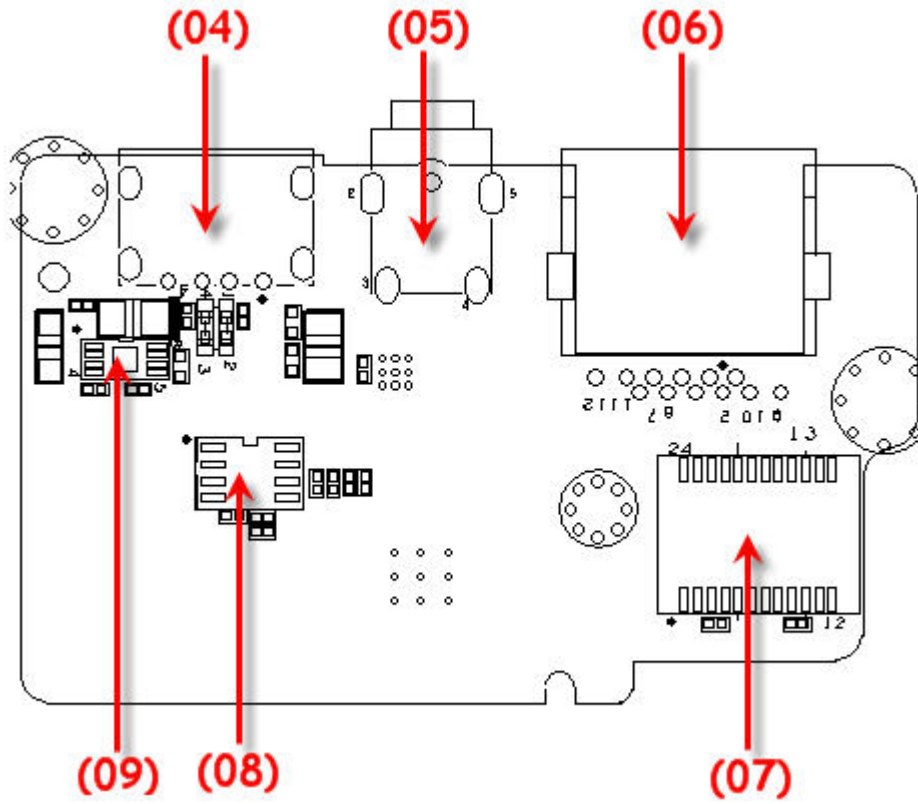


Figure B-6-2 LAN board Giga FM layout (Back)

Table B-6-2 LAN board Giga FM layout (Back)

	Location	Function
(04)	CN2	USB connector
(05)	CN3	FM RF connector
(06)	CN4	RJ45 connector
(07)	U5	LAN transformer IC
(08)	U4	LAN Flash IC
(09)	U3	LAN board USB power switch

## B.7 Fingerprint Board

<Front layout>

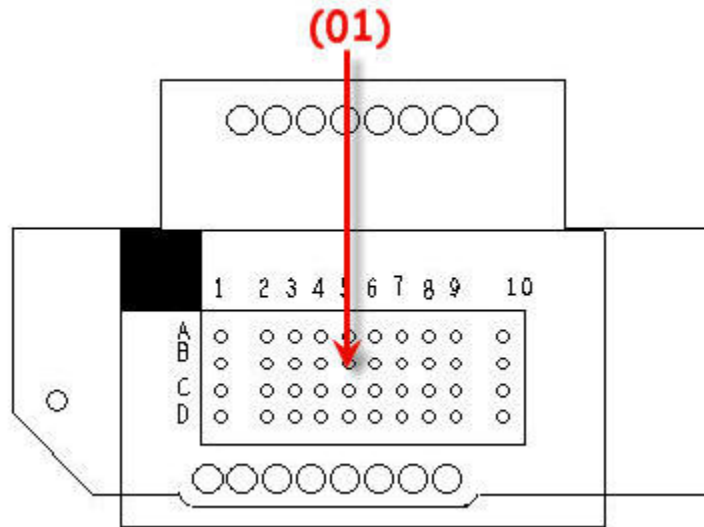


Figure B-7-3 Fingerprint board layout (Front)

Table B-7-1 Fingerprint board layout (Front)

	Location	Function
(01)	U1	Finger Printer IC AES1610

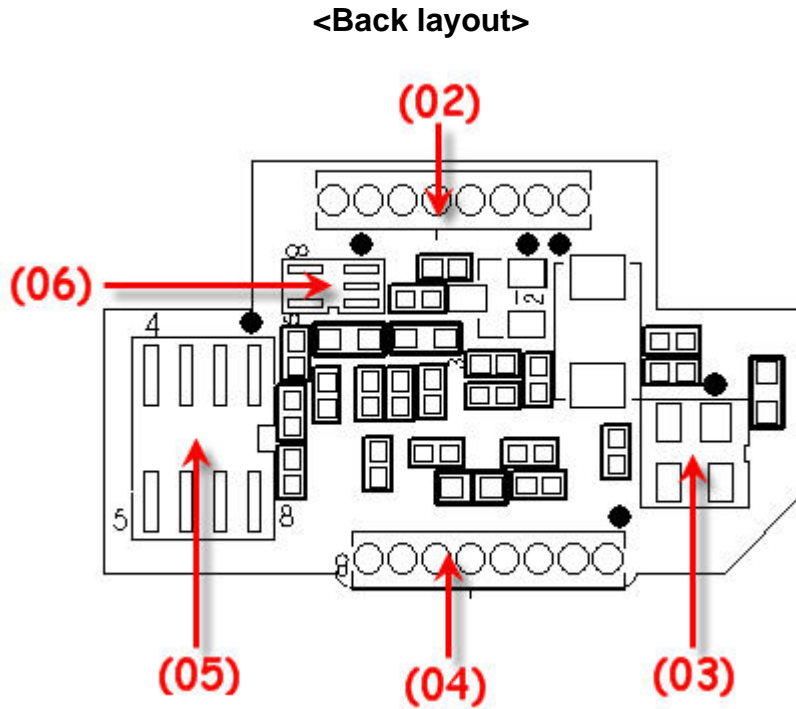


Figure B-7-2 Fingerprint board layout (Back)

Table B-7-2 Fingerprint board layout (Back)

	<b>Location</b>	<b>Function</b>
<b>(02)</b>	<b>CN2</b>	<b>Fingerprint board to Touch Pad Board connector (Upper)</b>
<b>(03)</b>	<b>U2</b>	<b>Fingerprint Sensor ESD protect IC</b>
<b>(04)</b>	<b>CN3</b>	<b>Fingerprint board to Touch Pad Board connector (Lower)</b>
<b>(05)</b>	<b>U5</b>	<b>Fingerprint Flash IC</b>
<b>(06)</b>	<b>U3</b>	<b>Fingerprint current limited IC</b>

## B.8 Modem Board

<Front layout>

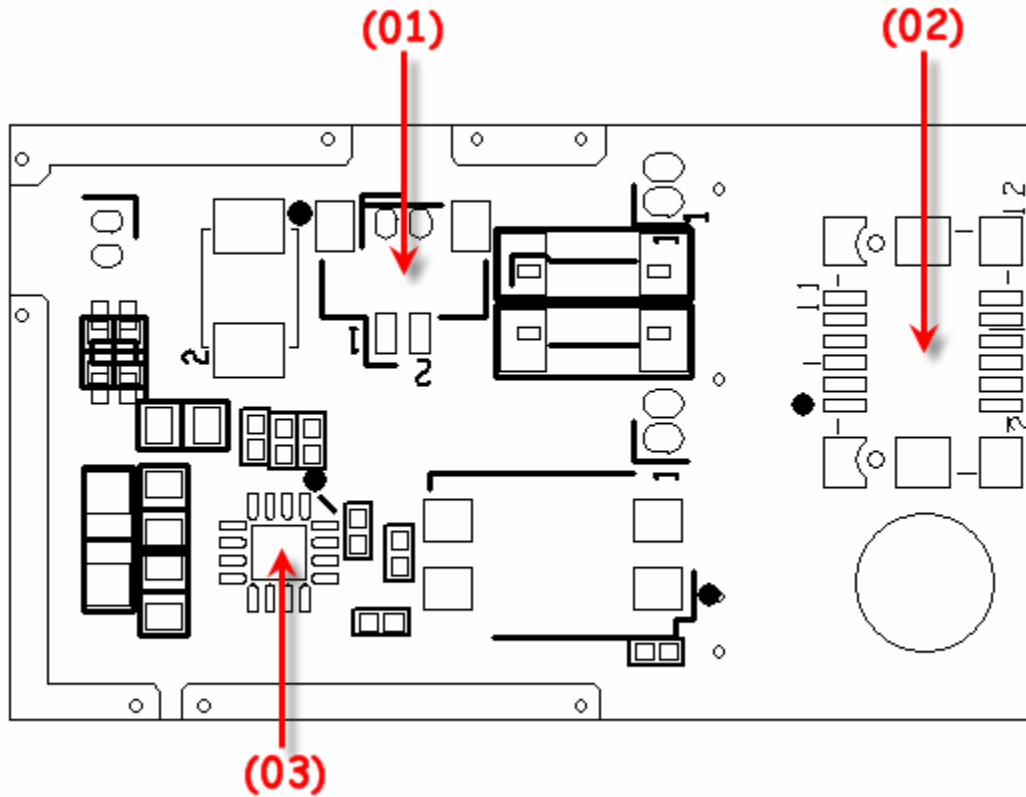


Figure B-8 Modem board layout

Table B-8 Modem board layout

	Location	Function
(01)	MJ2	Modem board to LAN board modem connector
(02)	CN1	Modem board to M/B connector
(03)	MU1	Modem board controller IC

**B.9 LED Board**

<Front layout>

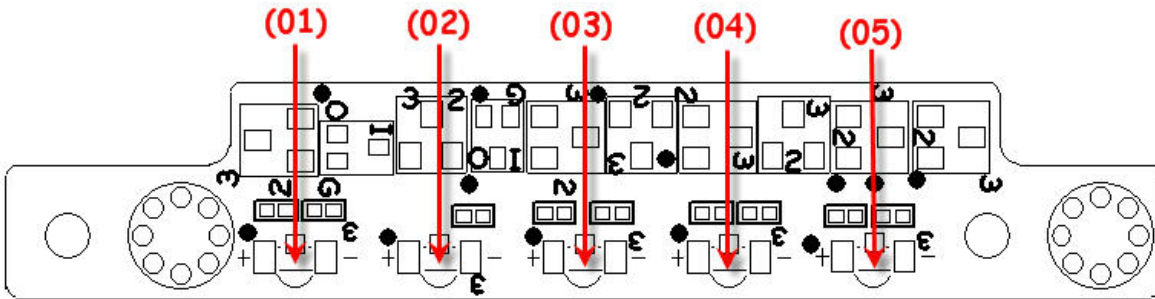



Figure B-9-4 LED board layout (Front)

Table B-9-1 LED board layout (Front)

	Location	Function
(01)	LED7	ACIN signal detected light
(02)	LED3	Power signal detected light
(03)	LED1	Battery signal detected light
(04)	LED8810	HDD signal detected light
(05)	LED2	Card Reader signal detected light



**<Back layout>**

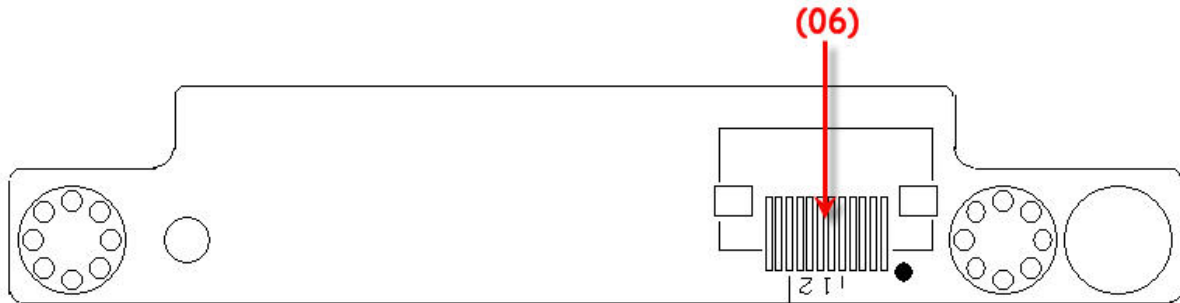

*Figure B-9-2 LED board layout (Back)*

*Table B-9-2 LED board layout (Back)*

	<b>Location</b>	<b>Function</b>
<b>(06)</b>	<b>CN1</b>	<b>LED board to M/B connector (no mount connector, only with Hotbar)</b>

---

## **Appendix C Pin Assignment**

---

### **CN1 LED Panel Connector**

P/N : DFHS40FS736 CONN SMD HOUSING 40P 2R FS(P0.5,H2.6)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	MIC_DATA	I/O	2	ADOGND	---
3	GND	---	4	NC	---
5	LED_PWR	---	6	LED_PWR	---
7	LED_PWR	---	8	LED_PWR	---
9	LED_PWR	---	10	LED_PWR	---
11	NC	---	12	LED_GND6	---
13	LED_GND5	---	14	LED_GND4	---
15	LED_GND3	---	16	LED_GND2	---
17	LED_GND1	---	18	GND	---
19	LED_EDIDCLK	I/O	20	LED_EDIDDATA	I/O
21	GND	---	22	LED_TXLCLKOUT-	I/O
23	LED_TXLCLKOUT+	I/O	24	GND	---
25	LED_TXLOUT0-	I/O	26	LED_TXLOUT0+	I/O
27	GND	---	28	LED_TXLOUT1-	I/O
29	LED_TXLOUT1+	I/O	30	GND	---
31	LED_TXLOUT2-	I/O	32	LED_TXLOUT2+	I/O
33	GND	---	34	USBP3+_LED	I/O
35	USBP3-_LED	I/O	36	GND	---

## ***Pin Assignment***

---

37	LCDVCC	---	38	LCDVCC	---
39	+3V	---	40	CCD_POWER	---
41	GND	---	42	GND	---
43	GND	---	44	GND	---
45	NC	---	46	NC	---

### **CN2 Mainstream Function board connector**

P/N : DFFC06FR013 CONN SMD FFC 6P 1R FR(P1.0,H2.02)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+3VPCU	---	2	+5VPCU	---
3	KEY_INT	---	4	GND	---
5	3ND_MBDATA	I/O	6	3ND_MBCLK	I/O
7	GND	---	8	GND	---

### **CN3 Low Cost Function board connector**

P/N : DFFC10FR012 CONN SMD FFC 10P 1R FR(P1.0,H2.02)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+3VPCU	---	2	MX5	I
3	MX2	I	4	MY1	I
5	GND	---	6	MX3	I
7	LOW_DET	I	8	MX4	I
9	FN0#	O	10	FN1#	O

## *Pin Assignment*

---

### **CN4 Power Board connector**

P/N : DFFC04FR012 CONN SMD FFC 4P 1R FR(P1.0,H1.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	PWRLED#	I
3	NBSWON#	I	4	+5VPCU	---

### **CN5 CCFL type panel connector**

P/N : DFHS30FSB28 CONN SMD HOUSING 30P 2R FS (P1.0,H3.9)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	INVCC0	---	2	LCDVCC	---
3	INVCC0	---	4	LCDVCC	---
5	NC	---	6	NC	---
7	+3V	---	8	GND	---
9	CCD_POWER	---	10	LCD_TXLCLKOUT+	I/O
11	ADOGND	---	12	LCD_TXLCLKOUT-	I/O
13	MIC_DATA	I	14	GND	---
15	DISPON	---	16	LCD_TXLOUT0+	I/O
17	LCD_VADJ	---	18	LCD_TXLOUT0-	I/O
19	LCD_EDIDCLK	I/O	20	GND	---
21	LCD_EDIDDATA	I/O	22	LCD_TXLOUT1+	I/O
23	GND	---	24	LCD_TXLOUT1-	I/O
25	USBP3+_LCD	---	26	GND	---

## ***Pin Assignment***

---

27	USBP3-_LCD	---	28	LCD_TXLOUT2+	I/O
29	GND	I/O	30	LCD_TXLOUT2-	I/O
31	GND	---	32	GND	---

### **CN6 LAN Board connector**

P/N:DFFC32FR003 CONN SMD FPC 32P 1R FR(P0.5,H2.13)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+5VPCU	---	2	+5VPCU	---
3	+5VPCU	---	4	+5VPCU	---
5	USB_EN#0	I	6	USBOC#0	O
7	+3V_S5	---	8	+3V_S5	---
9	FM_RIGHT	O	10	FM_LEFT	O
11	SB_GPIO7	I	12	FM_INT	O
13	SB_GPIO27	I	14	LOM_DISABLE#	O
15	GND	---	16	USBP0-	I/O
17	USBP0+	I/O	18	GND	---
19	CLK_PCIE_LAN	O	20	CLK_PCIE_LAN#	O
21	GND	---	22	PCIE_TXN5	O
23	PCIE_TXP5	O	24	GND	---
25	PCIE_RXP5	I	26	PCIE_RXN5	I
27	GND	---	28	PLTRST#	O
29	PCIE_WAKE#	I	30	+3V	---

***Pin Assignment***

---

31	FM_DET	I	32	GND	---
----	--------	---	----	-----	-----

**CN7 External Keyboard connector**

P/N:DFFC34FR003 CONN SMD FFC 34P,1R,FR(P0.8,H2.0)

PIN No.	Signal name	I/O	PIN No.	Signal name	I/O
1	K_LED_P	I	2	MY16	O
3	NC	---	4	MY17	O
5	NC	---	6	K_LED_P	I
7	MY2	O	8	MY1	O
9	MY0	O	10	MY4	O
11	MY3	O	12	MY5	O
13	MY14	O	14	MY6	O
15	MY6	O	16	MY13	O
17	MY8	O	18	MY9	O
19	MY10	O	20	MY11	O
21	MY12	O	22	MY15	O
23	MX7	O	24	MX2	O
25	MX3	O	26	MX4	O
27	MX0	O	28	MX5	O
29	MX6	O	30	MX1	O
31	K_LED_P	I	32	CAPSLED	I
33	FN_F10	I	34	NUMLED	I
35	GND	---	36	GND	---

### **CN8 External MINI card slot connector**

P/N:DFFC14FR009 CONN SMD FFC 14P 1R FR(P1.0,H1.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	PLTRST#	---	2	NC	---
3	GND	---	4	CLK_PCIE_MINI4#	I
5	CLK_PCIE_MINI4	I	6	GND	---
7	PCIE_RXN4	I	8	PCIE_RXP4	I
9	GND	---	10	PCIE_TXN4	O
11	PCIE_TXP4	O	12	GND	---
13	+1.5V	---	14	+3V	---

### **CN10 Bluetooth module connector**

P/N: DFHD10MR008 CONN SMD HEADER 10P 1R MR(P1.25,H1.9)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	USBP2+	I/O
3	USBP2-	I/O	4	WCS_CLK	I
5	GND	---	6	BT_RESET	---
7	WCS_DAT	O	8	+3V	---
9	USB_DETACH	---	10	GND	---
11	GND	---	12	GND	---

### **CN11 Touch pad board connector**

P/N:DFFC06FR019 CONN SMD FFC 6P 1R FR(P0.5,H2.0)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+5V_TP	---	2	TPDATA	I/O
3	TPCLK	I/O	4	TP_LED_ON	I
5	GND	---	6	GND	---

### **CN12 Touch pad with Fingerprint board connector**

P/N:DFHD04MRA75 CONN SMD HEADER 4P 1R MR(P1.25,H1.95)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+3V_Fingerprint	---	2	USBP1-	I/O
3	USBP1+	I/O	4	GND	---

### **CN13 LED board connector**

P/N:DFFC12FR285 CONN SMD FFC 12P 1R FR (P0.5,H2.2)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	GND	---
3	+5VPCU	---	4	+5VPCU	---
5	+5V	---	6	BATLED1#	I



## ***Pin Assignment***

---

7	BATLED0#	I	8	PWRLED#	I
9	SUSLED_EC	I	10	IDE_LED#	---
11	TP_XD_LED	I	12	ACIN	---

### **CN14 Ferica module connector**

P/N: DFFC06FR003 CONN SMD FPC 6P 1R FR(P0.5,H1.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	+5V_Felica	---	2	USBP4-	I/O
3	USBP4+	I/O	4	GND	---
5	NC	---	6	Test point	---

### **CN15 New Card connector**

P/N:DFHD26MR074 CONN SMD HEADER 26P 1R MR (P1.0,H5.4)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	USBP9-_R	I/O
3	USBP9+_R	I/O	4	CPUSB#	O
5	NC	---	6	NC	---
7	NEW_SMCLK	O	8	NEW_SMDATA	O
9	+NEW_1.5V	---	10	+NEW_1.5V	---
11	PCIE_WAKE#	---	12	+NEW_3VAUX	---
13	PERST#	O	14	+NEW_3V	---
15	+NEW_3V	---	16	NEW_CLKREQ#	O
17	CPPE#	O	18	CLK_PCIE_NEW#	I

## ***Pin Assignment***

---

19	CLK_PCIE_NEW	I	20	GND	---
21	PCIE_RXN1	I	22	PCIE_RXP1	I
23	GND	---	24	PCIE_TXN1	O
25	PCIE_TXP1	O	26	GND	---
27	GND	---	28	GND	---
29	GND	---	30	GND	---

### **CN16 Card Bus connector**

P/N:DFHD68MR710 CONN SMD HEADER 68P 2R MR(P0.635,H5.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	A_CAD0	I/O
3	A_CAD1	I/O	4	A_CAD3	I/O
5	A_CAD5	I/O	6	A_CAD7	I/O
7	A_CC/BE0#	O	8	A_CAD9	I/O
9	A_CAD11	I/O	10	A_CAD12	I/O
11	A_CAD14	I/O	12	A_CC/BE1#	O
13	A_CPAR	I/O	14	A_CPERR#	O
15	A_CGNT#	I	16	A_CINT#	O
17	AVCC	---	18	AVPP	---
19	A_CCLK	I	20	A_CIRDY#	O
21	A_CC/BE2#	O	22	A_CAD18	I/O
23	A_CAD20	I/O	24	A_CAD21	I/O
25	A_CAD22	I/O	26	A_CAD23	I/O

## *Pin Assignment*

---

27	A_CAD24	I/O	28	A_CAD25	I/O
29	A_CAD26	I/O	30	A_CAD27	I/O
31	A_CAD29	I/O	32	A_CRSDV/D2	I/O
33	A_CCLKRUN#	I	34	GND	---
35	GND	---	36	A_CCD1#	I/O
37	A_CAD2	I/O	38	A_CAD4	I/O
39	A_CAD6	I/O	40	A_CRSDV/D14	I/O
41	A_CAD8	I/O	42	A_CAD10	I/O
43	A_CVS1#	O	44	A_CAD13	I/O
45	A_CAD15	I/O	46	A_CAD16	I/O
47	A_CRSDV/A18	I/O	48	A_CBLOCK#	I
49	A_CSTOP#	O	50	A_CDEVSEL#	I
51	AVCC	---	52	AVPP	---
53	A_CTRDY#	O	54	A_CFRAME#	I
55	A_CAD17	I/O	56	A_CAD19	I/O
57	A_CVS2#	O	58	A_CRST#	I
59	A_CSERR#	I	60	A_CREQ#	I
61	A_CC/BE3#	O	62	A_CAUDIO	I
63	A_CSTSCHG	I	64	A_CAD28	I/O
65	A_CAD30	I/O	66	A_CAD31	I/O
67	A_CCD2#	I/O	68	GND	---

### **CN18 CRT connector**

P/N:DFDS15FR581 CONN DIP D-SUB 15P 2R FR(H10,P1.145)

## ***Pin Assignment***

---

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	CRT_R1	I	2	CRT_G1	I
3	CRT_B1	I	4	NC	---
5	GND	---	6	GND	---
7	GND	---	8	GND	---
9	5V_CRT2	---	10	GND	---
11	CRT_SENSE#	O	12	CRTDDAT	I
13	CRTHSYNC	I	14	CRTVSYNC	I
15	CRTDCLK	I	16	GND	---
17	GND	---			

### **CN19 HDD connector**

P/N:DFHS22FR056 CONN DIP HOUSING 22P 1R FR(P1.27,H12.15)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	SATA_TXP0	O
3	SATA_TXN0	O	4	GND	---
5	SATA_RXN0	I	6	SATA_RXP0	I
7	GND	---	8	+3.3VSATA	---
9	+3.3VSATA	---	10	+3.3VSATA	---
11	GND	---	12	GND	---
13	GND	---	14	+5VSATA	---
15	+5VSATA	---	16	+5VSATA	---
17	GND	---	18	NC	---

## ***Pin Assignment***

---

19	GND	---	20	NC	---
21	NC	---	22	NC	---
23	GND	---	24	GND	---

### **CN20 Modem module connector**

P/N:DFHS12FS002 CONN SMD HOUSING 12P 2R FS(P0.8,H8.35)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	NC	---	2	NC	---
3	NC	---	4	NC	---
5	NC	---	6	NC	---
7	DIB_P	I	8	NC	---
9	DIB_N	I	10	NC	---
11	NC	---	12	NC	---

### **CN21 Battery cable Connector**

P/N: DFHD14MS014 CONN SMD HEADER 14P 2R MS(P1.5,H19.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	GND	---
3	GND	---	4	GND	---
5	MBCLK	I/O	6	MBDATA	I/O
7	TEMP_MBAT	O	8	GND	---
9	ID	O	10	NC	---
11	MBAT+	---	12	MBAT+	---

## ***Pin Assignment***

---

13	MBAT+	---	14	MBAT+	---
----	-------	-----	----	-------	-----

### **CN22 FAN connector**

P/N:DFWF03MS000 CONN SMD WAFER,3P,1R,MS(P1.25,H4.7)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	TH_FAN_POWER	---	2	GND	---
3	+3V/ FANSIG	---			

### **CN23 HDMI connector**

P/N:DFHD19MR011 CONN SMD HDMI 19P 2R MR(P1.0,H6.53)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	HDMITX2P	O	2	GND	---
3	HDMITX2N	O	4	HDMITX1P	O
5	GND	---	6	HDMITX1N	O
7	HDMITX0P	O	8	GND	---
9	HDMITX0N	O	10	HDMICLK+	I/O
11	GND	---	12	HDMICLK-	I/O
13	CEC	---	14	NC	---
15	HDMI_DDCCLK	I/O	16	HDMI_DDCDATA	I/O
17	GND	---	18	DDC5V	---

## ***Pin Assignment***

---

19	HDMI_HP	---	20	GND	---
21	GND	---	22	GND	---
23	GND	---			

### **CN24 DDR2 SO-DIMM(200P) slot**

P/N:DGМК0000040 IC SOCKET DDR2 SO-DIMM(200P,H10.5,RVS)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	SMDDR_VREF_DIMM	---	2	GND	---
3	GND	---	4	M_B_DQ4	I/O
5	M_B_DQ0	I/O	6	M_B_DQ1	I/O
7	M_B_DQ5	I/O	8	GND	---
9	GND	---	10	M_B_DM0	I
11	M_B_DQS#0	I/O	12	GND	---
13	M_B_DQS0	I/O	14	M_B_DQ2	I/O
15	GND	---	16	M_B_DQ6	I/O
17	M_B_DQ7	I/O	18	GND	---
19	M_B_DQ3	I/O	20	M_B_DQ12	I/O
21	GND	---	22	M_B_DQ13	I/O
23	M_B_DQ9	I/O	24	GND	---
25	M_B_DQ8	I/O	26	M_B_DM1	I
27	GND	---	28	GND	---

## Pin Assignment

---

29	M_B_DQS#1	I/O	30	M_CLK_DDR3	I
31	M_B_DQS1	I/O	32	M_CLK_DDR#3	I
33	GND	---	34	GND	---
35	M_B_DQ11	I/O	36	M_B_DQ14	I/O
37	M_B_DQ10	I/O	38	M_B_DQ15	I/O
39	GND	---	40	GND	---
41	GND	---	42	GND	---
43	M_B_DQ20	I/O	44	M_B_DQ16	I/O
45	M_B_DQ17	I/O	46	M_B_DQ21	I/O
47	GND	---	48	GND	---
49	M_B_DQS#2	I/O	50	PM_EXTTTS#1	O
51	M_B_DQS2	I/O	52	M_B_DM2	I
53	GND	---	54	GND	---
55	M_B_DQ22	I/O	56	M_B_DQ18	I/O
57	M_B_DQ23	I/O	58	M_B_DQ19	I/O
59	GND	---	60	GND	---
61	M_B_DQ29	I/O	62	M_B_DQ24	I/O
63	M_B_DQ28	I/O	64	M_B_DQ25	I/O
65	GND	---	66	GND	---
67	M_B_DM3	I	68	M_B_DQS#3	I/O
69	NC	---	70	M_B_DQS3	I/O
71	GND	---	72	GND	---
73	M_B_DQ26	I/O	74	M_B_DQ30	I/O



## *Pin Assignment*

---

75	M_B_DQ27	I/O	76	M_B_DQ31	I/O
77	GND	---	78	GND	---
79	M_CKE3	I	80	M_CKE4	I
81	+1.8VSUS	---	82	+1.8VSUS	---
83	NC	---	84	NC	---
85	M_B_BS#2	I	86	M_B_A14	---
87	+1.8VSUS	---	88	+1.8VSUS	---
89	M_B_A12	I/O	90	M_B_A11	I/O
91	M_B_A9	I/O	92	M_B_A7	I/O
93	M_B_A8	I/O	94	M_B_A6	I/O
95	+1.8VSUS	---	96	+1.8VSUS	---
97	M_B_A5	I/O	98	M_B_A4	I/O
99	M_B_A3	I/O	100	M_B_A2	I/O
101	M_B_A1	I/O	102	M_B_A0	I/O
103	+1.8VSUS	---	104	+1.8VSUS	---
105	M_B_A10	I/O	106	M_B_BS1	I
107	M_B_BS0	I	108	M_B_RAS#	I
109	M_B_WE#	I	110	M_CS#2	I
111	+1.8VSUS	---	112	+1.8VSUS	---
113	M_B_CAS#	I	114	M_ODT2	I
115	M_CS#3	I	116	M_B_A13	I/O
117	+1.8VSUS	---	118	+1.8VSUS	---
119	M_ODT3	I	120	NC	---

## Pin Assignment

---

121	GND	---	122	GND	---
123	M_B_DQ37	I/O	124	M_B_DQ32	I/O
125	M_B_DQ38	I/O	126	M_B_DQ36	I/O
127	GND	---	128	GND	---
129	M_B_DQS#4	I/O	130	M_B_DM4	I
131	M_B_DQS4	I/O	132	GND	---
133	GND	---	134	M_B_DQ39	I/O
135	M_B_DQ34	I/O	136	M_B_DQ33	I/O
137	M_B_DQ35	I/O	138	GND	---
139	GND	---	140	M_B_DQ44	I/O
141	M_B_DQ40	I/O	142	M_B_DQ45	I/O
143	M_B_DQ41	I/O	144	GND	---
145	GND	---	146	M_B_DQS#5	I/O
147	M_B_DM5	I	148	M_B_DQS5	I/O
149	GND	---	150	GND	---
151	M_B_DQ46	I/O	152	M_B_DQ42	I/O
153	M_B_DQ43	I/O	154	M_B_DQ47	I/O
155	GND	---	156	GND	---
157	M_B_DQ53	I/O	158	M_B_DQ52	I/O
159	M_B_DQ49	I/O	160	M_B_DQ48	I/O
161	GND	---	162	GND	---
163	NC	---	164	M_CLK_DDR4	I
165	GND	---	166	M_CLK_DDR#4	I

## Pin Assignment

---

167	M_B_DQS#6	I/O	168	GND	---
169	M_B_DQS6	I/O	170	M_B_DM6	I
171	GND	---	172	GND	---
173	M_B_DQ51	I/O	174	M_B_DQ55	I/O
175	M_B_DQ54	I/O	176	M_B_DQ50	I/O
177	GND	---	178	GND	---
179	M_B_DQ56	I/O	180	M_B_DQ60	I/O
181	M_B_DQ57	I/O	182	M_B_DQ61	I/O
183	GND	---	184	GND	---
185	M_B_DM7	I	186	M_B_DQS#7	I/O
187	GND	---	188	M_B_DQS7	I/O
189	M_B_DQ59	I/O	190	GND	---
191	M_B_DQ62	I/O	192	M_B_DQ63	I/O
193	GND	---	194	M_B_DQ58	I/O
195	CGDAT_SMB	I/O	196	GND	---
197	CGCLK_SMB	I/O	198	GND	---
199	+3V	---	200	+3V	---

### CN25 DDR2 Connector

P/N: DGMK0000037 IC SOCKET DDR2 SO-DIMM(200P,H6,RVS)

PIN No.	Signal name	I/O	PIN No.	Signal name	I/O
1	SMDDR_VREF_DIMM	---	2	GND	---

## *Pin Assignment*

---

3	GND	---	4	M_A_DQ4	I/O
5	M_A_DQ6	I/O	6	M_A_DQ0	I/O
7	M_A_DQ5	I/O	8	GND	---
9	GND	---	10	M_A_DM0	I
11	M_A_DQS#0	I/O	12	GND	---
13	M_A_DQS0	I/O	14	M_A_DQ7	I/O
15	GND	---	16	M_A_DQ1	I/O
17	M_A_DQ2	I/O	18	GND	---
19	M_A_DQ3	I/O	20	M_A_DQ13	I/O
21	GND	---	22	M_A_DQ12	I/O
23	M_A_DQ9	I/O	24	GND	---
25	M_A_DQ8	I/O	26	M_A_DM1	I
27	GND	---	28	GND	---
29	M_A_DQS#1	I/O	30	M_CLK_DDR0	I
31	M_A_DQS1	I/O	32	M_CLK_DDR#0	I
33	GND	---	34	GND	---
35	M_A_DQ14	I/O	36	M_A_DQ10	I/O
37	M_A_DQ11	I/O	38	M_A_DQ15	I/O
39	GND	---	40	GND	---
41	GND	---	42	GND	---
43	M_A_DQ17	I/O	44	M_A_DQ16	I/O
45	M_A_DQ20	I/O	46	M_A_DQ21	I/O
47	GND	---	48	GND	---

## Pin Assignment

---

49	M_A_DQS#2	I/O	50	PM_EXTTTS#0	O
51	M_A_DQS2	I/O	52	M_A_DM2	I
53	GND	---	54	GND	---
55	M_A_DQ23	I/O	56	M_A_DQ18	I/O
57	M_A_DQ19	I/O	58	M_A_DQ22	I/O
59	GND	---	60	GND	---
61	M_A_DQ28	I/O	62	M_A_DQ29	I/O
63	M_A_DQ25	I/O	64	M_A_DQ24	I/O
65	GND	---	66	GND	---
67	M_A_DM3	I	68	M_A_DQS#3	I/O
69	NC	---	70	M_A_DQS3	I/O
71	GND	---	72	GND	---
73	M_A_DQ26	I/O	74	M_A_DQ30	I/O
75	M_A_DQ27	I/O	76	M_A_DQ31	I/O
77	GND	---	78	GND	---
79	M_CKE0	I	80	M_CKE1	I
81	+1.8VSUS	---	82	+1.8VSUS	---
83	NC	---	84	NC	---
85	M_A_BS#2	I	86	M_A_A14	---
87	+1.8VSUS	---	88	+1.8VSUS	---
89	M_A_A12	I/O	90	M_A_A11	I/O
91	M_A_A9	I/O	92	M_A_A7	I/O
93	M_A_A8	I/O	94	M_A_A6	I/O

## Pin Assignment

---

95	+1.8VSUS	---	96	+1.8VSUS	---
97	M_A_A5	I/O	98	M_A_A4	I/O
99	M_A_A3	I/O	100	M_A_A2	I/O
101	M_A_A1	I/O	102	M_A_A0	I/O
103	+1.8VSUS	---	104	+1.8VSUS	---
105	M_A_A10	I/O	106	M_A_BS1	I
107	M_A_BS0	I	108	M_A_RAS#	I
109	M_A_WE#	I	110	M_CS#0	I
111	+1.8VSUS	---	112	+1.8VSUS	---
113	M_A_CAS#	I	114	M_ODT0	I
115	M_CS#1	I	116	M_A_A13	I/O
117	+1.8VSUS	---	118	+1.8VSUS	---
119	M_ODT1	I	120	NC	---
121	GND	---	122	GND	---
123	M_A_DQ36	I/O	124	M_A_DQ32	I/O
125	M_A_DQ37	I/O	126	M_A_DQ33	I/O
127	GND	---	128	GND	---
129	M_A_DQS#4	I/O	130	M_A_DM4	I
131	M_A_DQS4	I/O	132	GND	---
133	GND	---	134	M_A_DQ35	I/O
135	M_A_DQ39	I/O	136	M_A_DQ38	I/O
137	M_A_DQ34	I/O	138	GND	---
139	GND	---	140	M_A_DQ44	I/O

## Pin Assignment

---

141	M_A_DQ40	I/O	142	M_A_DQ45	I/O
143	M_A_DQ41	I/O	144	GND	---
145	GND	---	146	M_A_DQS#5	I/O
147	M_A_DM5	I	148	M_A_DQS5	I/O
149	GND	---	150	GND	---
151	M_A_DQ42	I/O	152	M_A_DQ43	I/O
153	M_A_DQ46	I/O	154	M_A_DQ47	I/O
155	GND	---	156	GND	---
157	M_A_DQ53	I/O	158	M_A_DQ48	I/O
159	M_A_DQ49	I/O	160	M_A_DQ52	I/O
161	GND	---	162	GND	---
163	NC	---	164	M_CLK_DDR1	I
165	GND	---	166	M_CLK_DDR#1	I
167	M_A_DQS#6	I/O	168	GND	---
169	M_A_DQS6	I/O	170	M_A_DM6	I
171	GND	---	172	GND	---
173	M_A_DQ50	I/O	174	M_A_DQ54	I/O
175	M_A_DQ51	I/O	176	M_A_DQ55	I/O
177	GND	---	178	GND	---
179	M_A_DQ56	I/O	180	M_A_DQ61	I/O
181	M_A_DQ60	I/O	182	M_A_DQ57	I/O
183	GND	---	184	GND	---
185	M_A_DM7	I	186	M_A_DQS#7	I/O

## ***Pin Assignment***

---

187	GND	---	188	M_A_DQS7	I/O
189	M_A_DQ62	I/O	190	GND	---
191	M_A_DQ63	I/O	192	M_A_DQ58	I/O
193	GND	---	194	M_A_DQ59	I/O
195	CGDAT_SMB	I/O	196	GND	---
197	CGCLK_SMB	I/O	198	GND	---
199	+3V	---	200	GND	---

### **CN26 USB connector**

P/N:DFHS04FRB11 CONN DIP USB HOUSING 4P 1R FR(H7.6)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	BUSBP7+	I/O
3	BUSBP7-	I/O	4	USBPWR	---

### **CN27 Internal MINI card slot**

P/N:DFHD52MS146 CONN SMD HEADER,52P,2R,MS(P0.8,H9)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	NC	---	2	+3V	---
3	NC	---	4	GND	---
5	NC	---	6	+1.5V	---
7	NC	I	8	NC	---
9	GND	O	10	NC	---



## *Pin Assignment*

---

11	CLK_PCIE_MINI3#	I	12	NC	---
13	CLK_PCIE_MINI3	I	14	NC	---
15	GND	---	16	NC	---
17	NC	---	18	GND	---
19	NC	---	20	NC	---
21	GND	---	22	PLTRST#	I
23	PCIE_RXN2	I	24	NC	---
25	PCIE_RXP2	I	26	GND	---
27	GND	---	28	+1.5V	---
29	GND	---	30	NC	---
31	PCIE_TXN2	O	32	NC	---
33	PCIE_TXP2	O	34	GND	---
35	GND	---	36	NC	---
37	NC	---	38	NC	---
39	NC	---	40	GND	---
41	NC	---	42	NC	---
43	NC	---	44	NC	---
45	NC	---	46	NC	---
47	NC	---	48	+1.5V	---
49	NC	---	50	GND	---
51	NC	---	52	+3V	---

### **CN28 RTC battery connector**

P/N:DFWF02MS000 CONN SMD WAFER 2P 1R MS(P1.25)

## *Pin Assignment*

---

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	VCCRTC_4	---	2	GND	---

### **CN29 USB connector**

P/N: DFHS04FRB11 CONN DIP USB HOUSING 4P 1R FR(H7.6)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	BUSBP6+	I/O
3	BUSBP6-	I/O	4	USBPWR	---

### **CN30 Internal speaker connector**

P/N:DFWF04MS002 CONN SMD WAFER,4P,1R,MS(P1.25,H4.7)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	INSPKR-N	---	2	INSPKR+N	---
3	INSPKL-N	---	4	INSPKL+N	---
5	NC	---	6	NC	---

### **CN31 VGA board connector**

P/N:DFHSK0FS001 CONN SMD HOUSING 200P FS(P5.15,H8.65)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	PEG_RXN15	I	2	PEG_TXN15	O
3	PEG_RXP15	I	4	PEG_TXP15	O
5	GND	---	6	GND	---

## *Pin Assignment*

---

7	PEG_RXN14	I	8	PEG_TXN14	O
9	PEG_RXP14	I	10	PEG_TXP14	O
11	GND	---	12	GND	---
13	PEG_RXN13	I	14	PEG_TXN13	O
15	PEG_RXP13	I	16	PEG_TXP13	O
17	GND	---	18	GND	---
19	PEG_RXN12	I	20	PEG_TXN12	O
21	PEG_RXP12	I	22	PEG_TXP12	O
23	GND	---	24	GND	---
25	PEG_RXN11	I	26	PEG_TXN11	O
27	PEG_RXP11	I	28	PEG_TXP11	O
29	GND	---	30	GND	---
31	PEG_RXN10	I	32	PEG_TXN10	O
33	PEG_RXP10	I	34	PEG_TXP10	O
35	GND	---	36	GND	---
37	PEG_RXN9	I	38	PEG_TXN9	O
39	PEG_RXP9	I	40	PEG_TXP9	O
41	GND	---	42	GND	---
43	PEG_RXN8	I	44	PEG_TXN8	O
45	PEG_RXP8	I	46	PEG_TXP8	O
47	GND	---	48	GND	---
49	PEG_RXN7	I	50	PEG_TXN7	O
51	PEG_RXP7	I	52	PEG_TXP7	O

## Pin Assignment

---

53	GND	---	54	GND	---
55	PEG_RXN6	I	56	PEG_TXN6	O
57	PEG_RXP6	I	58	PEG_TXP6	O
59	GND	---	60	GND	---
61	PEG_RXN5	I	62	PEG_TXN5	O
63	PEG_RXP5	I	64	PEG_TXP5	O
65	GND	---	66	GND	---
67	PEG_RXN4	I	68	PEG_TXN4	O
69	PEG_RXP4	I	70	PEG_TXP4	O
71	GND	---	72	GND	---
73	PEG_RXN3	I	74	PEG_TXN3	O
75	PEG_RXP3	I	76	PEG_TXP3	O
77	GND	---	78	GND	---
79	PEG_RXN2	I	80	PEG_TXN2	O
81	PEG_RXP2	I	82	PEG_TXP2	O
83	GND	---	84	GND	---
85	PEG_RXN1	I	86	PEG_TXN1	O
87	PEG_RXP1	I	88	PEG_TXP1	O
89	GND	---	90	GND	---
91	PEG_RXN0	I	92	PEG_TXN0	O
93	PEG_RXP0	I	94	PEG_TXP0	O
95	GND	---	96	GND	---
97	CLK_MXM#	I	98	EXT_CRT_DDCCLK	I/O

## Pin Assignment

---

99	CLK_MXM	I	100	EXT_CRT_DDCDAT	I/O
101	GND	---	102	GND	---
103	GFXRST#	I	104	EXT_HDMI_DDCCLK	I/O
105	SYSFANON#	O	106	EXT_HDMI_DDCDATA	I/O
107	MAINON	I	108	GND	---
109	GFXPG	O	110	EXT_LVDS_PNLCLK	I/O
111	3ND_MBDATA	I/O	112	EXT_LVDS_PNLDAT	I/O
113	3ND_MBCLK	I/O	114	GND	---
115	EXT_LVDS_BLON	O	116	EXT_VGA_RED	O
117	EXT_DISP_ON	O	118	GND	---
119	DVI_HPD	I	120	EXT_VGA_GRN	O
121	GND	---	122	GND	---
123	EXT_HSYNC	O	124	EXT_VGA_BLU	O
125	EXT_VSYNC	O	126	GND	---
127	GND	---	128	EXT_LVDS_TXL#2	---
129	NC	---	130	EXT_LVDS_TXL2	
131	NC	---	132	GND	---
133	GND	---	134	EXT_LVDS_TXL#1	
135	NC	---	136	EXT_LVDS_TXL1	
137	NC	---	138	GND	---
139	GND	---	140	EXT_LVDS_TXL#0	
141	NC	---	142	EXT_LVDS_TXL0	
143	NC	---	144	GND	---

## Pin Assignment

---

145	GND	---	146	EXT_LVDS_TXLCK#	
147	NC	---	148	EXT_LVDS_TXLCK	
149	NC	---	150	GND	---
151	GND	---	152	NC	---
153	GND	---	154	GND	---
155	GND	---	156	NC	---
157	GND	---	158	GND	---
159	GND	---	160	NC	---
161	NC	---	162	GND	---
163	+5V	---	164	EXT_HDMICLK-	O
165	+5V	---	166	EXT_HDMICLK+	O
167	NC	---	168	GND	---
169	GND	---	170	EXT_HDMITX2N	O
171	NC	---	172	EXT_HDMITX2P	O
173	+3V	---	174	GND	---
175	+3V	---	176	EXT_HDMITX1N	O
177	+3V	---	178	EXT_HDMITX1P	O
179	+3V	---	180	GND	---
181	+3V	---	182	EXT_HDMITX0N	O
183	NC	---	184	EXT_HDMITX0P	O
185	GND	---	186	GND	---
187	NC	---	188	NC	---
189	VIN_VGA	---	190	VIN_VGA	---

## ***Pin Assignment***

---

191	VIN	---	192	VIN	---
193	VIN	---	194	VIN	---
195	VIN	---	196	VIN	---
197	VIN	---	198	VIN	---
199	VIN	---	200	VIN	---

### **CN32 1394 connector**

P/N:DFHS04FR109 CONN DIP 1394 4P FR(P0.8,H6.6)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	L1394_TPB0-	O	2	L1394_TPB0+	O
3	L1394_TPA0-	O	4	L1394_TPA0+	O
5	GND	---	6	GND	---
7	GND	---	8	GND	---

### **CN33 External MIC jack connector**

P/N:DFTJ06FR102 CONN DIP PHONE JACK 6P 1R FR(H6.6)BLACK

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	ADOGND	---	2	MIC1-L1	O
3	MIC1-R1	O	4	Port_B#	O
5	ADOGND	---	6	NC	---
7	ADOGND	---	8	ADOGND	---

### **CN34 Internal MINI card slot**

P/N:DFHS52FR011 CONN SMD HOUSING 52P 2R FR(P0.8,H7.5) VGA

P/N:DFHS52FR010 CONN SMD HOUSING 52P 2R FR(P0.8,H5.6) UMA

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	NC	---	2	+3V	---
3	NC	---	4	GND	
5	NC	---	6	+1.5V	---
7	NC	---	8	LAD0_PCIE	I/O
9	GND	---	10	LAD1_PCIE	I/O
11	CLK_PCIE_MINI2#	I	12	LAD2_PCIE	I/O
13	CLK_PCIE_MINI2	I	14	LAD3_PCIE	I/O
15	GND	---	16	LFRAME#_PCIE	I
17	NC	---	18	GND	---
19	NC	---	20	NC	---
21	GND	---	22	PLTRST#	I
23	PCIE_RXN3	I	24	NC	---
25	PCIE_RXP3	I	26	GND	---
27	GND	---	28	+1.5V	---
29	GND	---	30	NC	---
31	PCIE_TXN3	O	32	NC	---
33	PCIE_TXP3	O	34	GND	---



## ***Pin Assignment***

---

35	GND	---	36	Test point	---
37	NC	---	38	Test point	---
39	NC	---	40	GND	---
41	NC	---	42	NC	---
43	NC	---	44	NC	---
45	PCLK__debug	I	46	NC	---
47	PLTRST#_debug	I	48	+1.5V	---
49	LDRQ#1__debug	O	50	GND	---
51	SERIRQ_debug	O	52	+3V	---

### **CN35 Internal MINI card slot**

P/N:DFHS52FR016 CONN DIP HOUSING 52P 2R FR(P0.8,H6.5)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	WLAN_WAKE#	O	2	+3V	---
3	WCS_DATR	I/O	4	GND	---
5	WCS_CLKR	I/O	6	+1.5V	---
7	NC	---	8	NC	---
9	GND	---	10	NC	---
11	CLK_PCIE_MINI#	I	12	NC	---
13	CLK_PCIE_MINI	I	14	NC	---

## *Pin Assignment*

---

15	GND	---	16	NC	---
17	NC	---	18	GND	
19	NC	---	20	RF_EN_WLAN	I
21	GND	---	22	PLTRST#	I
23	PCIE_RXN6	I	24	+3V_S5	---
25	PCIE_RXP6	I	26	GND	---
27	GND	---	28	+1.5V	---
29	GND	---	30	WL_SMCLK	I/O
31	PCIE_TXN6	O	32	WL_SMDATA	I/O
33	PCIE_TXP6	O	34	GND	---
35	GND	---	36	USBP5-_C	I/O
37	GND	---	38	USBP5+_C	I/O
39	NC	---	40	GND	---
41	NC	---	42	WiMAX_LED#_B	O
43	GND	---	44	NC	---
45	CL_CLK1_WLAN	I/O	46	NC	---
47	PLTRST#_PCIE	I/O	48	+1.5V	---
49	CL_RST#1_WLAN	I	50	GND	---
51	NC	---	52	+3V	---

### **CN36 ODD connector**

P/N: DFHS50FR034 CONN DIP HOUSING 50P 2R FR(P0.8,H3.45)

## *Pin Assignment*

---

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	NC	---	2	NC	---
3	NC	---	4	GND	---
5	-IDERST	O	6	PDD8	I/O
7	PDD7	I/O	8	PDD9	I/O
9	PDD6	I/O	10	PDD10	I/O
11	PDD5	I/O	12	PDD11	I/O
13	PDD4	I/O	14	PDD12	I/O
15	PDD3	I/O	16	PDD13	I/O
17	PDD2	I/O	18	PDD14	I/O
19	PDD1	I/O	20	PDD15	I/O
21	PDD0	I/O	22	PDDREQ	O
23	GND	---	24	PDIOR#	I
25	PDIOW#	I	26	GND	---
27	PDIORDY	O	28	PDDACK#	I
29	IRQ14	O	30	NC	---
31	PDA1	I/O	32	DIAG#	---
33	PDA0	I/O	34	PDA2	I/O
35	PDCS1#	I	36	PDCS3#	O
37	ODD_LED#	O	38	+5V	---
39	+5V	---	40	+5V	---
41	+5V	---	42	+5V	---
43	GND	---	44	GND	---

## ***Pin Assignment***

---

45	GND	---	46	GND	---
47	GND	---	48	GND	---
49	NC	---	50	NC	---
51	GND	---	52	GND	---

### **CN37 Card Reader connector**

P/N:DFHD42MS005 CONN SMD HEADER 42P 1R MS(P0.76,H5.6)

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	GND	---	2	XD_CD#	O
3	XD_R/B#	I	4	XD_RE#	I/O
5	XD_CE#	I	6	XD_CLE	O
7	XD_ALE	I	8	XD_WE#	I
9	GND	I/O	10	GND	---
11	SD_D3	I/O	12	VCC_XD	---
13	XD_WPO#	O	14	SD/MS_CLK_C	---
15	SD_CMD	I	16	MS_D3/XD_D0	I/O
17	GND	---	18	MS_CD#	---
19	GND	---	20	MS_D2/XD_D1	I/O
21	VCC_XD	---	22	MS_D0/XD_D2	I/O
23	MS_D3/XD_D0_C	I/O	24	MS_D1/XD_D7	I/O
25	SD/MS_CLK	I/O	26	MS_BS/XD_D3	I
27	MS_D2/XD_D1_C	I/O	28	GND	---

## ***Pin Assignment***

---

29	GND	---	30	MS_D0/XD_D2_C	I/O
31	SD_D0	I/O	32	MS_BS/XD_D3_C	I/O
33	XD_D4	I/O	34	SD_D1	I/O
35	XD_D5	I/O	36	XD_D6	I/O
37	MS_D1/XD_D7_C	I/O	38	VCC_XD	---
39	SD_CD#	I/O	40	GND	---
41	SM_WPI#/SD_WP	I	42	GND	---
43	GND	---	44		---

### **CN38 HP/SPDIF jack connector**

P/N:DFTJ05FR015 CONN DIP PHONE JACK 5P 1R FR(H6.6)BLACK

<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>	<b>PIN No.</b>	<b>Signal name</b>	<b>I/O</b>
1	ADOGND	---	2	HPR_SYS	I
3	HPL_SYS	I	4	ADOGND	---
5	HP_JD	---	6	GND	---
7	+3V_SPD	---	8	SPDIF_OUT	I
9	NC	---	10	NC	---

## Appendix D Display Codes

### D.1 Display Codes

Table D-1 Scan codes (set 1 and set 2) (1/4)

Cap No.	Keypop	Code set 1		Code set 2		Note	
		Make	Break	Make	Break		
01	‘ ~	29	A9	0E	F0	0E	
02	1 !	02	82	16	F0	16	
03	2 @	03	83	1E	F0	1E	
04	3 #	04	84	26	F0	26	
05	4 \$	05	85	25	F0	25	
06	5 %	06	86	2E	F0	2E	
07	6 ^	07	87	36	F0	36	
08	7 &	08	88	3D	F0	3D	*2
09	8 *	09	89	3E	F0	3E	*2
10	9 (	0A	8A	46	F0	46	*2
11	0 )	0B	8B	45	F0	45	
12	- _	0C	8C	4E	F0	4E	
13	= +	0D	8D	55	F0	55	
15	BkSp	0E	8E	66	F0	66	
16	Tab	0F	8F	0D	F0	0D	
17	Q	10	90	15	F0	15	
18	W	11	91	1D	F0	1D	
19	E	12	92	24	F0	24	
20	R	13	93	2D	F0	2D	
21	T	14	94	2C	F0	2C	
22	Y	15	95	35	F0	35	
23	U	16	96	3C	F0	3C	*2
24	I	17	97	43	F0	43	*2
25	O	13	98	44	F0	44	*2
26	P	19	99	4D	F0	4D	*2
27	[ {	1A	9A	54	F0	54	
28	] }	1B	9B	5B	F0	5B	



Table D-1 Scan codes (set 1 and set 2) (2/4)

Cap No.	Keytop	Code set 1		Code set 2		Note	
		Make	Break	Make	Break		
29	\	2B	AB	5D	F0	5D	*5
30	Caps Lock	3A	BA	58	F0	58	
31	A	1E	9E	1C	F0	1C	
32	S	1F	9F	1B	F0	1B	
33	D	20	A0	23	F0	23	
34	F	21	A1	2B	F0	2B	
35	G	22	A2	34	F0	34	
36	H	23	A3	33	F0	33	
37	J	24	A4	3B	F0	3B	*2
38	K	25	A5	42	F0	42	*2
39	L	26	A6	4B	F0	4B	*2
40	; :	27	A7	4C	F0	4C	*2
41	' "	28	A8	52	F0	52	
43	Enter	1C	9C	5A	F0	5A	*3
44	Shift (L)	2A	AA	12	F0	12	
45	No.102 key	56	D6	61	F0	61	
46	Z	2C	AC	1A	F0	1A	
47	X	2D	AD	22	F0	22	
48	C	2E	AE	21	F0	21	
49	V	2F	AF	2A	F0	2A	
50	B	30	B0	32	F0	32	
51	N	31	B1	31	F0	31	
52	M	32	B2	3A	F0	3A	*2
53	, <	33	B3	41	F0	41	*2
54	. >	34	B4	49	F0	49	*2
55	/ ?	35	B5	4A	F0	4A	*2
57	Shift (R)	36	B6	59	F0	59	



Table D-1 Scan codes (set 1 and set 2) (3/4)

Cap No.	Keypop	Code set 1				Code set 2				Note
		Make		Break		Make		Break		
58	Ctrl	1D		9D		14		F0 14		*3
60	Alt (L)	38		B8		11		F0 11		*3
61	Space	39		B9		29		F0 29		
62	ALT (R)	E0	38	E0	B8	E0	11	E0	F0 11	
75	Ins	E0	52	E0	D2	E0	70	E0	F0 70	*1
76	Del	E0	53	E0	D3	E0	71	E0	F0 71	*1
79	←	E0	4B	E0	CB	E0	6B	E0	F0 6B	*1
80	Home	E0	47	E0	C7	E0	6C	E0	F0 6C	*1
81	End	E0	4F	E0	CF	E0	69	E0	F0 69	*1
83	↑	E0	48	E0	C8	E0	75	E0	F0 75	*1
84	↓	E0	50	E0	D0	E0	72	E0	F0 72	*1
85	PgUp	E0	49	E0	C9	E0	7D	E0	F0 7D	*1
86	PgDn	E0	51	E0	D1	E0	7A	E0	F0 7A	*1
89	→	E0	4D	E0	CD	E0	74	E0	F0 74	*1
110	Esc	01		81		76		F0 76		
112	F1	3B		BB		05		F0 05		
113	F2	3C		BC		06		F0 06		
114	F3	3D		BD		04		F0 04		
115	F4	3E		BE		0C		F0 0C		
116	F5	3F		BF		03		F0 03		
117	F6	40		C0		0B		F0 0B		
118	F7	41		C1		83		F0 83		
119	F8	42		C2		0A		F0 0A		
120	F9	43		C3		01		F0 01		
121	F10	44		C4		09		F0 09		*3

Table D-1 Scan codes (set 1 and set 2) (4/4)

Cap No.	Keytop	Code set 1				Code set 2				Note
		Make		Break		Make		Break		
122	F11	57	D7	78	F0	78			*3	
123	F12	58	D8	07	F0	07			*3	
124	PrintSc	*6	*6	*6	*6				*6	
126	Pause	*7	*7	*7	*7				*7	
202	Fn	—	—	—	—				*4	
203	Win	E0	5B	E0	DB	E0	1F	E0	F0	1F
204	App	E0	5D	E0	DD	E0	2F	E0	F0	2F

**Notes:**

1. \* Scan codes differ by mode.
2. \* Scan codes differ by overlay function.
3. \* Combined with the **Fn** key makes different codes.
4. \* **Fn** key does not generate a code by itself.
5. \* This key corresponds to key No. 42 in a 102-key model.
6. \* Refer to Table D-6, No. 124 key scan code.
7. \* Refer to Table D-7, No. 126 key scan code.

Table D-2 Scan codes with left Shift key

Cap No.	Key top	Code set 1				Code set 2			
		Make		Break		Make		Break	
55	/	E0 AA	E0 35	E0 B5	E0 2A	E0 F0	12 E0 4A	E0 F0	4A E0 12
75	INS	E0 AA	E0 52	E0 D2	E0 2A	E0 F0	12 E0 70	E0 F0	70 E0 12
76	DEL	E0 AA	E0 53	E0 D3	E0 2A	E0 F0	12 E0 71	E0 F0	71 E0 12
79	←	E0 AA	E0 4B	E0 CB	E0 2A	E0 F0	12 E0 6B	E0 F0	6B E0 12
80	Home	E0 AA	E0 47	E0 C7	E0 2A	E0 F0	12 E0 6C	E0 F0	6C E0 12
81	End	E0 AA	E0 4F	E0 CF	E0 2A	E0 F0	12 E0 69	E0 F0	69 E0 12
83	↑	E0 AA	E0 48	E0 C8	E0 2A	E0 F0	12 E0 75	E0 F0	75 E0 12
84	↓	E0 AA	E0 50	E0 D0	E0 2A	E0 F0	12 E0 72	E0 F0	72 E0 12
85	PgUp	E0 AA	E0 49	E0 C9	E0 2A	E0 F0	12 E0 7D	E0 F0	7D E0 12
86	PgDn	E0 AA	E0 51	E0 D1	E0 2A	E0 F0	12 E0 7A	E0 F0	7A E0 12
89	→	E0 AA	E0 4D	E0 CD	E0 2A	E0 F0	12 E0 74	E0 F0	74 E0 12
203	Win	E0 AA	E0 5B	E0 DB	E0 2A	E0 F0	12 E0 1F	E0 F0	1F E0 12
204	App	E0 AA	E0 5D	E0 DD	E0 2A	E0 F0	12 E0 2F	E0 F0	2F E0 12

**Note :** The table above shows scan codes with the left **Shift** key. In combination with the right **Shift** key, scan codes are changed as listed below:

	With left <b>Shift</b>	With right <b>Shift</b>
Set 1	E0 AA _____	E0 B6
	E0 2A _____	E0 36
Set 2	E0 F0 12 _____	E0 F0 59
	E0 12 _____	E0 59

Table D-3 Scan codes in Numlock mode

Cap No.	Key top	Code set 1				Code set 2			
		Make		Break		Make		Break	
75	INS	E0 2A E0 52	E0 D2 E0 AA	E0 12 E0 70	E0 F0 70 E0 F0 12				
76	DEL	E0 2A E0 53	E0 D3 E0 AA	E0 12 E0 71	E0 F0 71 E0 F0 12				
79	←	E0 2A E0 4B	E0 CB E0 AA	E0 12 E0 6B	E0 F0 6B E0 F0 12				
80	Home	E0 2A E0 47	E0 C7 E0 AA	E0 12 E0 6C	E0 F0 6C E0 F0 12				
81	End	E0 2A E0 4F	E0 CF E0 AA	E0 12 E0 69	E0 F0 69 E0 F0 12				
83	↑	E0 2A E0 48	E0 C8 E0 AA	E0 12 E0 75	E0 F0 75 E0 F0 12				
84	↓	E0 2A E0 50	E0 D0 E0 AA	E0 12 E0 72	E0 F0 72 E0 F0 12				
85	PgUp	E0 2A E0 49	E0 C9 E0 AA	E0 12 E0 7D	E0 F0 7D E0 F0 12				
86	PgDn	E0 2A E0 51	E0 D1 E0 AA	E0 12 E0 7A	E0 F0 7A E0 F0 12				
89	→	E0 2A E0 4D	E0 CD E0 AA	E0 12 E0 74	E0 F0 74 E0 F0 12				
203	Win	E0 2A E0 5B	E0 DB E0 AA	E0 12 E0 1F	E0 F0 1F E0 F0 12				
204	App	E0 2A E0 5D	E0 DD E0 AA	E0 12 E0 2F	E0 F0 2F E0 F0 12				

Table D-4 Scan codes with Fn key

Cap No.	Keytop	Code set 1		Code set 2	
		Make	Break	Make	Break
43	ENT	E0 1C	E0 9C	E0 5A	E0 F0 5A
58	CTRL	E0 1D	E0 9D	E0 14	E0 F0 14
60	LALT	E0 38	E0 B8	E0 11	E0 F0 11
121	ARROW	45	C5	77	F0 77
122	NUMERIC	45	C5	77	F0 77
123	Scrl	46	C5	7E	F0 7E

Table D-5 Scan codes in overlay mode

Cap No.	Keytop		Code set 1		Code set 2		
			Make	Break	Make	Break	
09	8	(8)	48	C8	75	F0	75
10	9	(9)	49	C9	7D	F0	7D
11	0	(*)	37	B7	7C	F0	7C
23	U	(4)	4B	CB	6B	F0	6B
24	I	(5)	4C	CC	73	F0	73
25	O	(6)	4D	CD	74	F0	74
26	P	(-)	4A	CA	7B	F0	7B
37	J	(1)	4F	CF	69	F0	69
38	K	(2)	50	D0	72	F0	72
39	L	(3)	51	D1	7A	F0	7A
40	;	(+)	4E	CE	79	F0	79
52	M	(0)	52	D2	70	F0	70
54	.	(.)	53	D3	71	F0	71
55	/	(/)	E0 35	E0 B5	40 4A	E0 F0	4A

Table D-6 No.124 key scan code

Key top	Shift	Code set 1				Code set 2			
		Make		Break		Make		Break	
Prt Sc	Common	E0 2A	E0 37	E0 B7	E0 AA	E0 12	E0 7C	E0 F0	7C E0 F0 12
	Ctrl +	E0 37		E0 B7		E0 7C		E0 F0	7C
	Shift +	E0 37		E0 B7		E0 7C		E0 F0	7C
	Alt +		54	D4		84		F0	B4

*Table D-7 No.126 key scan code*

Key top	Shift	Code set 1						Code set 2							
		Make						Make							
Pause	Common*	E1	1D	45	E1	9D	C5	E1	14	77	E1	F0	14	F0	77
	Ctrl*	E0	46	E0	C6			E0	7E	E0	F0	7E			

\*: This key generates only make codes.

# Appendix E Keyboard Layout

## 1. United States (US) Keyboard

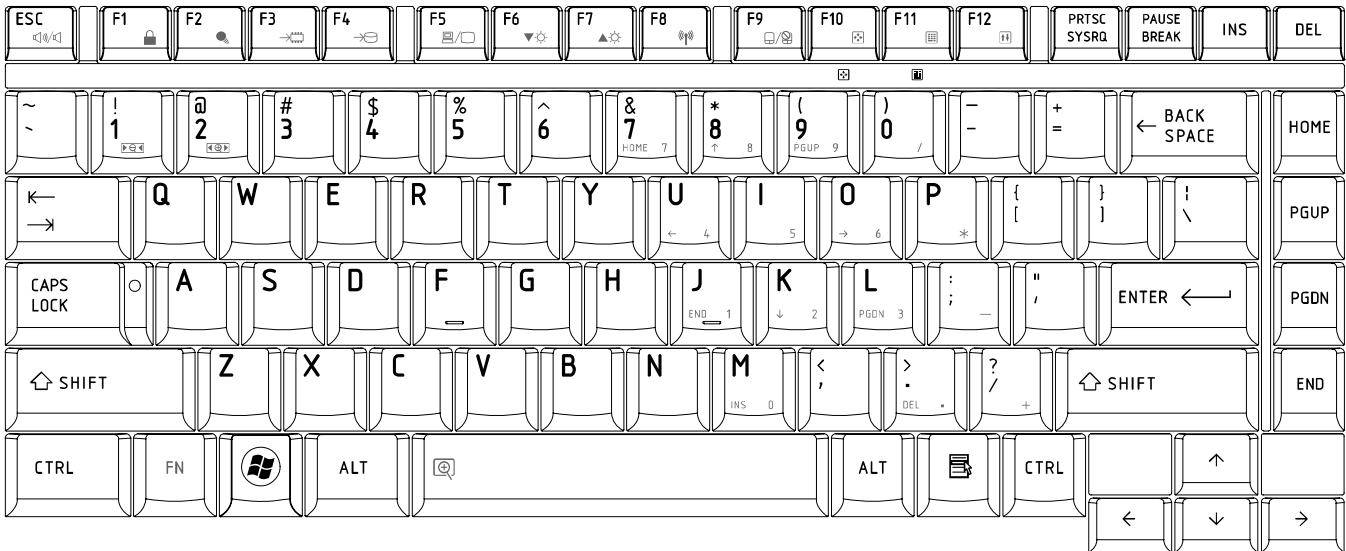


Figure US keyboard (L300mm x W131.3mm)

## 2. Traditional Chinese (CH) Keyboard

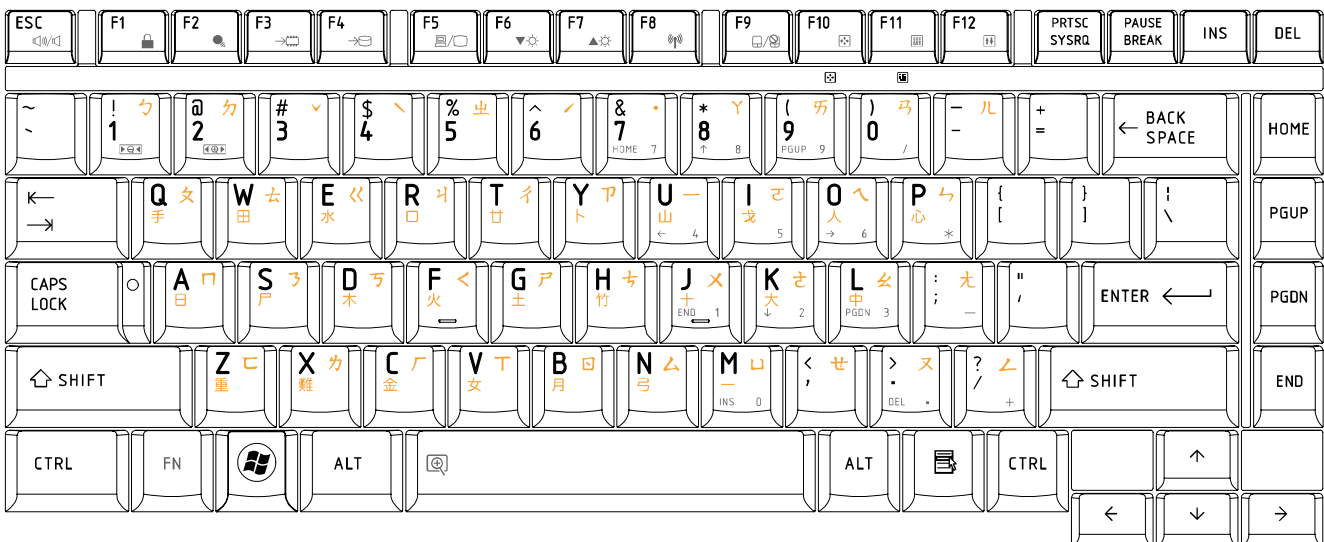


Figure CH keyboard (L300mm x W131.3mm)

### 3. Thai (TI) Keyboard

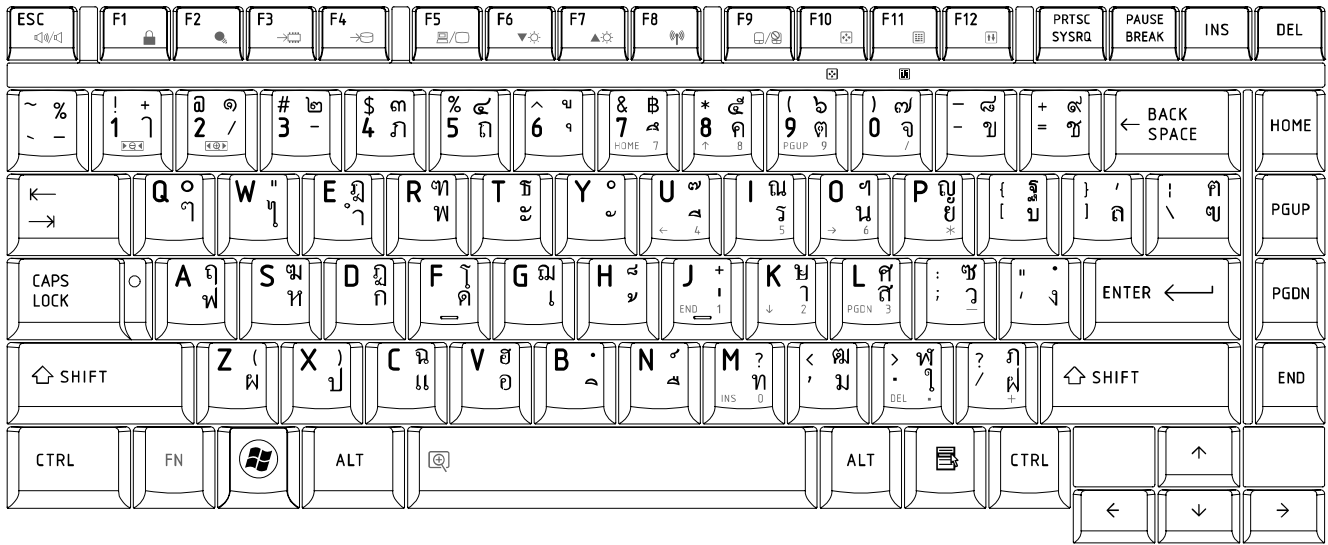


Figure TI keyboard (L300mm x W131.3mm)

### 4. Korean (KO) Keyboard

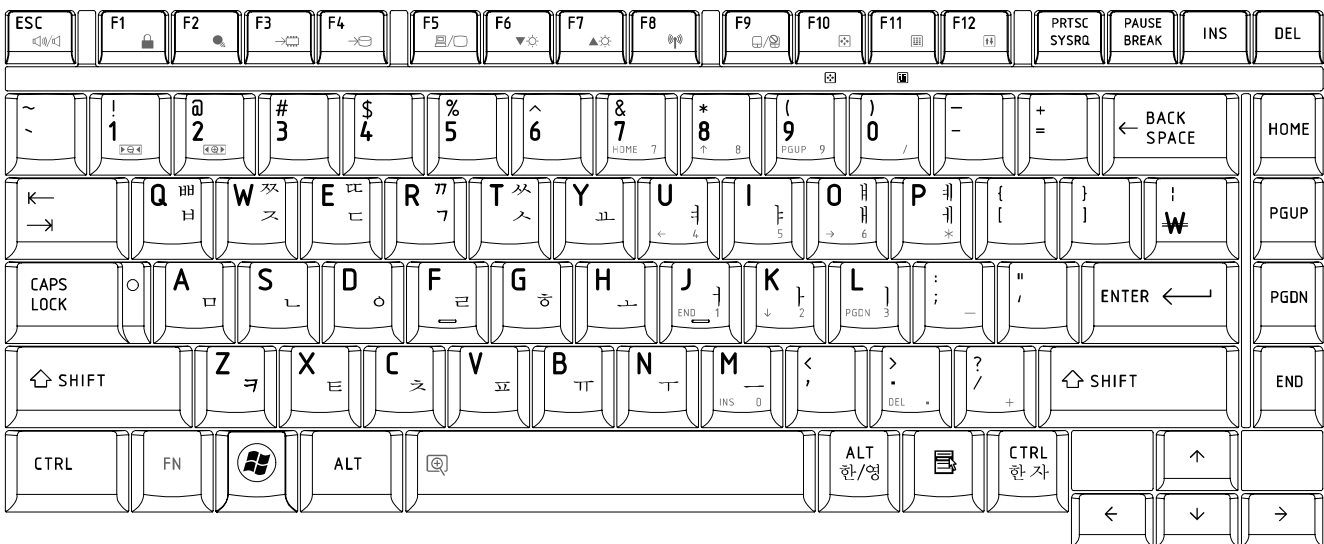


Figure KO keyboard (L300mm x W131.3mm)



## 5. United Kingdom (UK) Keyboard

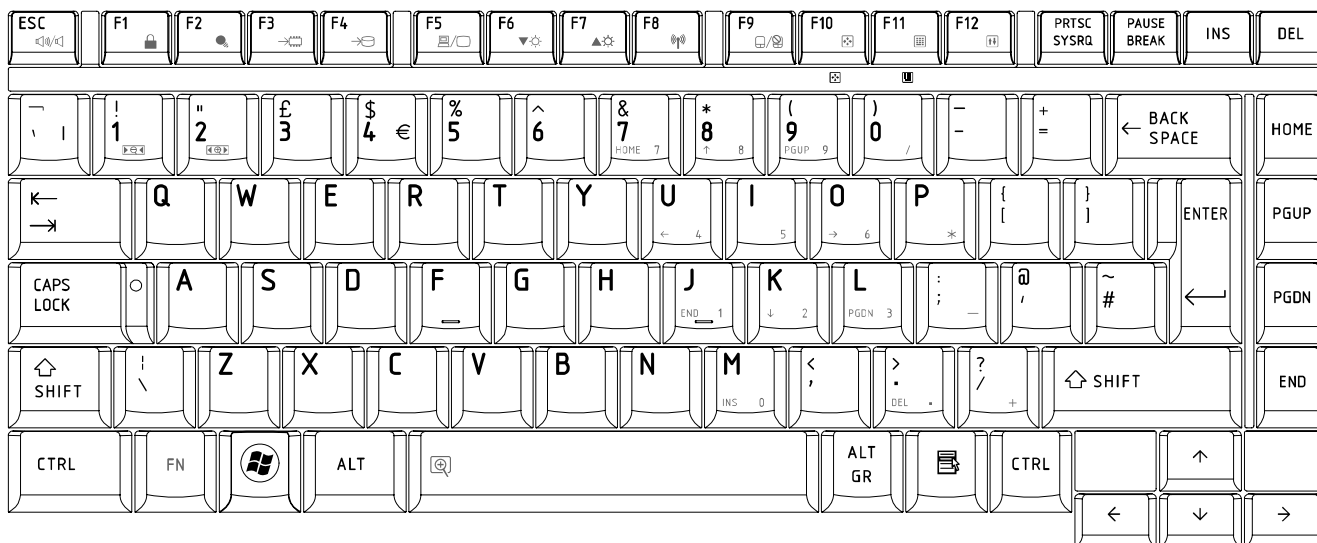


Figure UK keyboard (L300mm x W131.3mm)

## 6. US International (UI) Keyboard

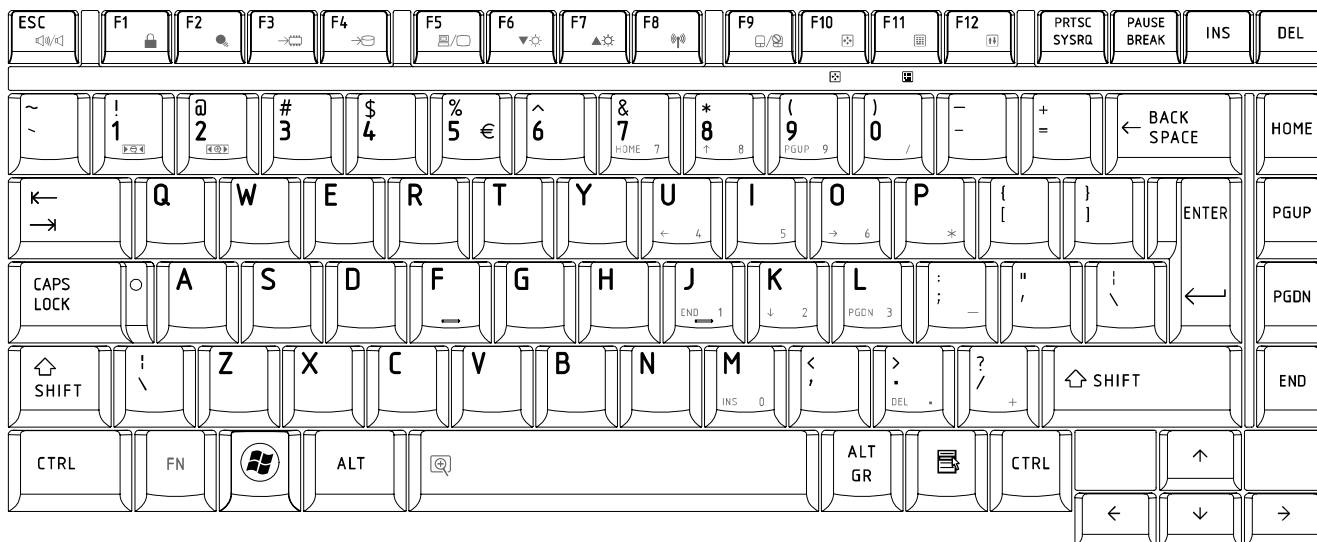


Figure UI keyboard (L300mm x W131.3mm)

## 7. Hebrew (HB) Keyboard

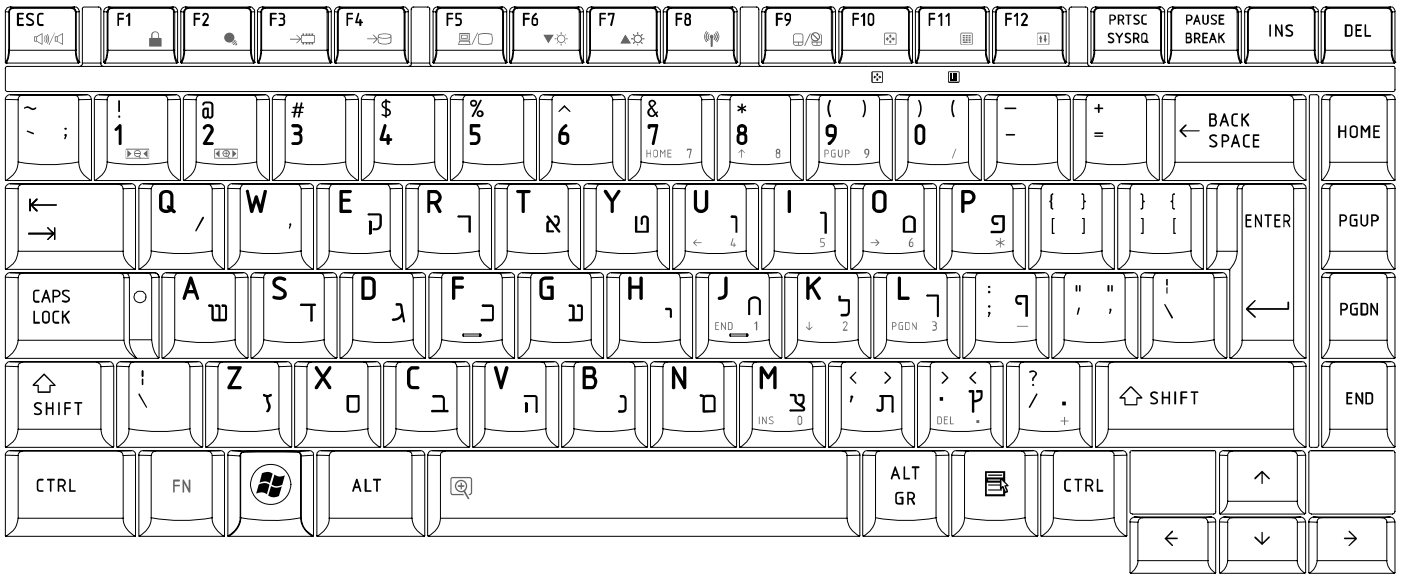


Figure HB keyboard (L300mm x W131.3mm)

## 8. Danish (DM) Keyboard

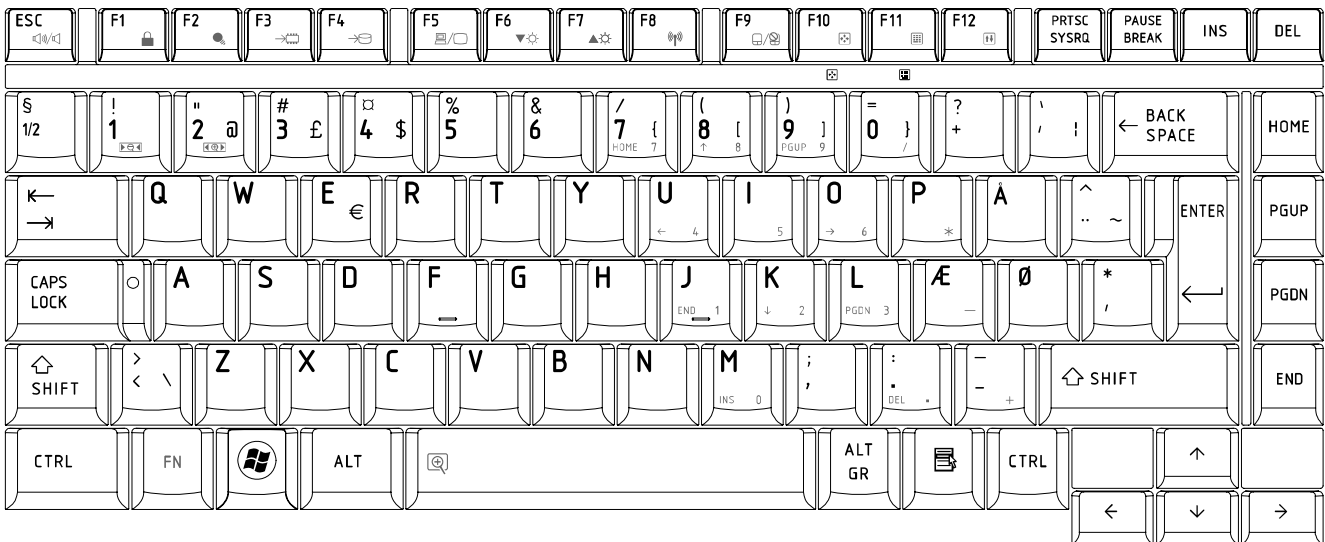


Figure DM keyboard (L300mm x W131.3mm)

## 9. Swiss (SW) Keyboard

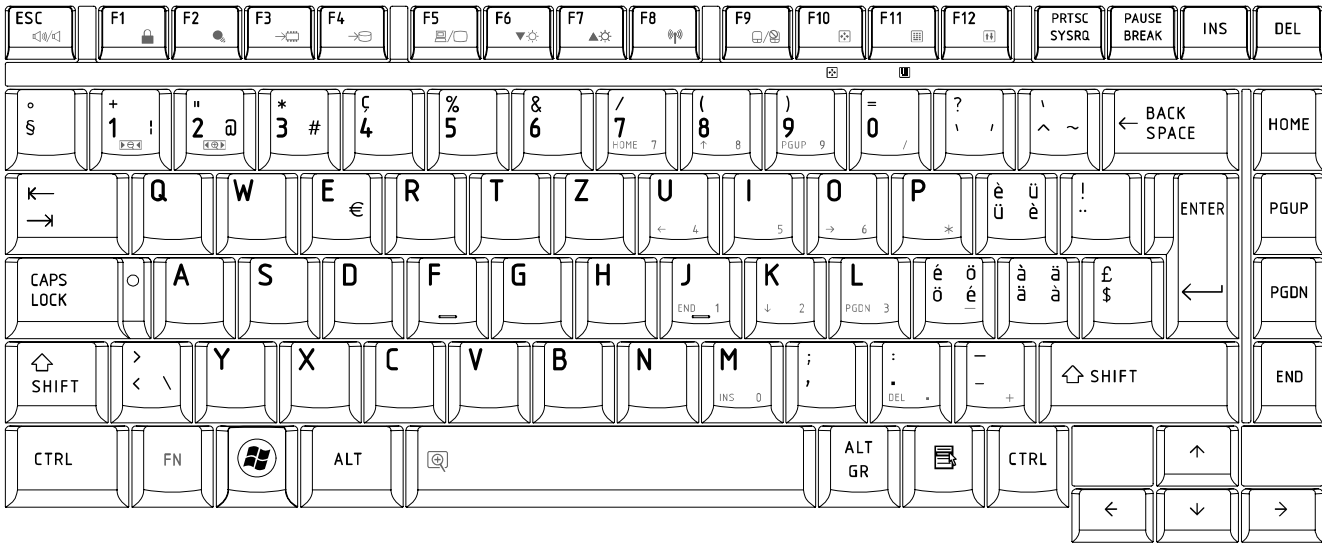


Figure SW keyboard (L300mm x W131.3mm)

## 10. Arabic (ARE) Keyboard

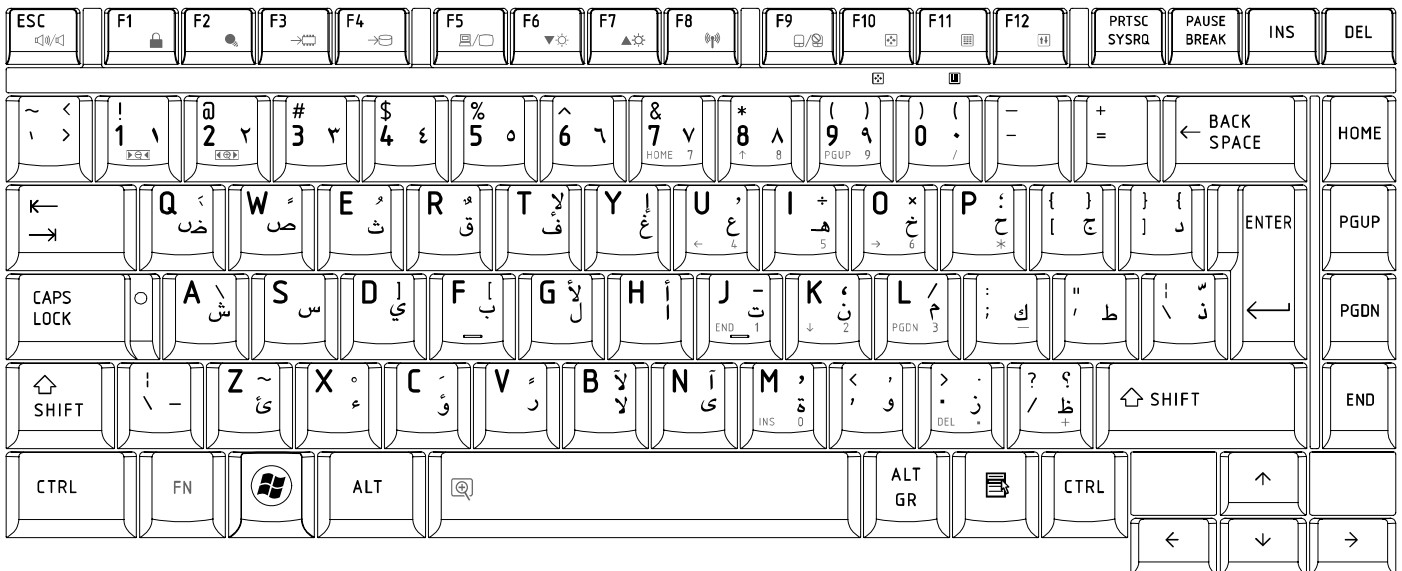


Figure ARE keyboard (L300mm x W131.3mm)

## 11. Czech (CZ) Keyboard

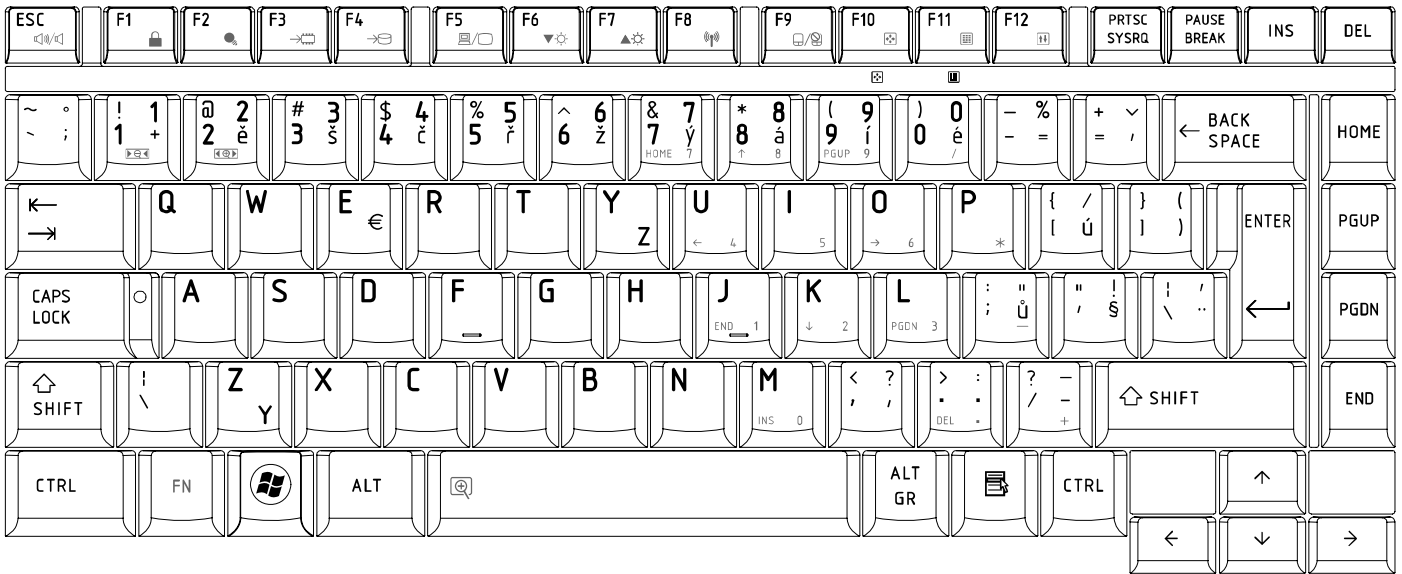


Figure CZ keyboard (L300mm x W131.3mm)

## 12. Russian (RU) Keyboard

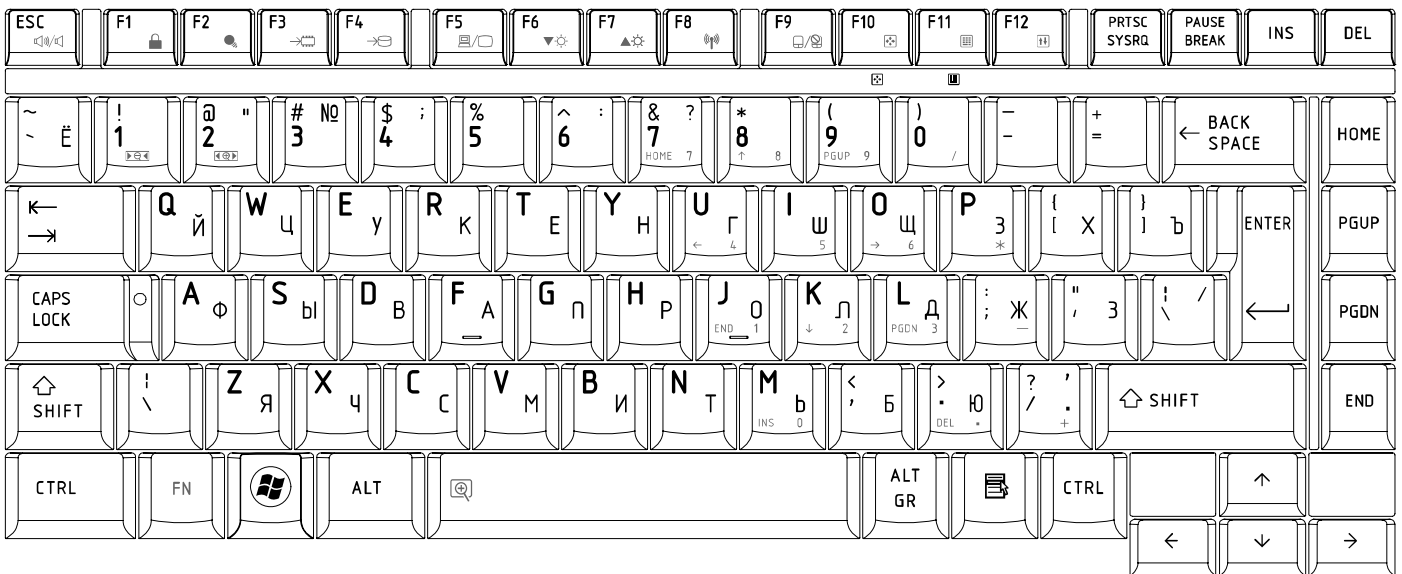


Figure RU keyboard (L300mm x W131.3mm)

### 13. Portuguese (PO) Keyboard

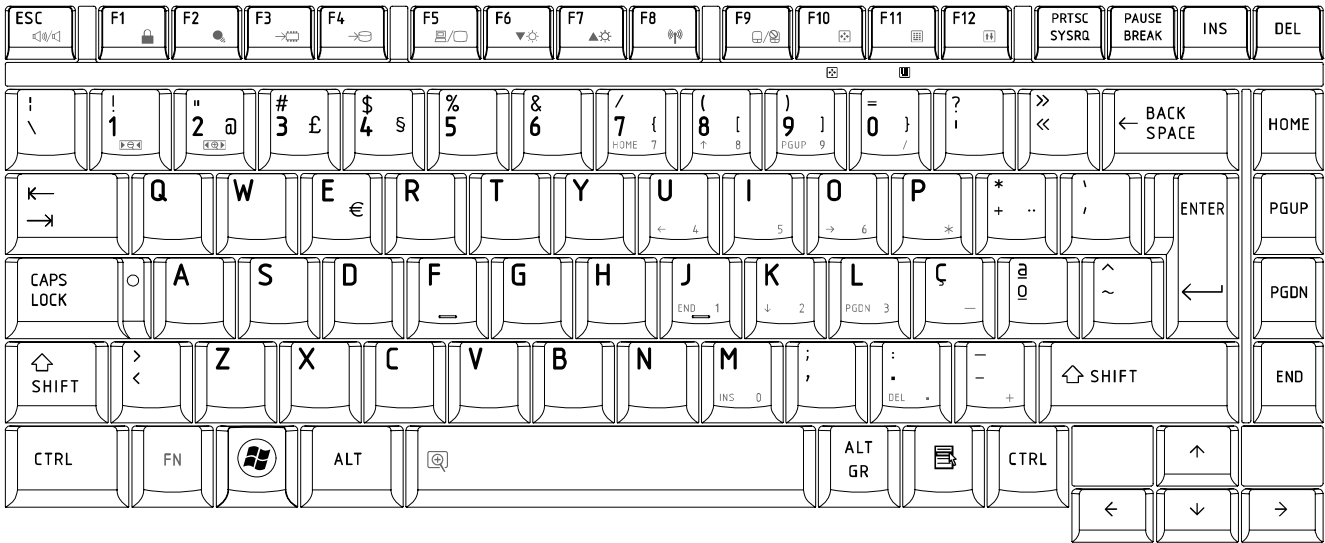


Figure PO keyboard (L300mm x W131.3mm)

### 14. Slovakian (SL) Keyboard

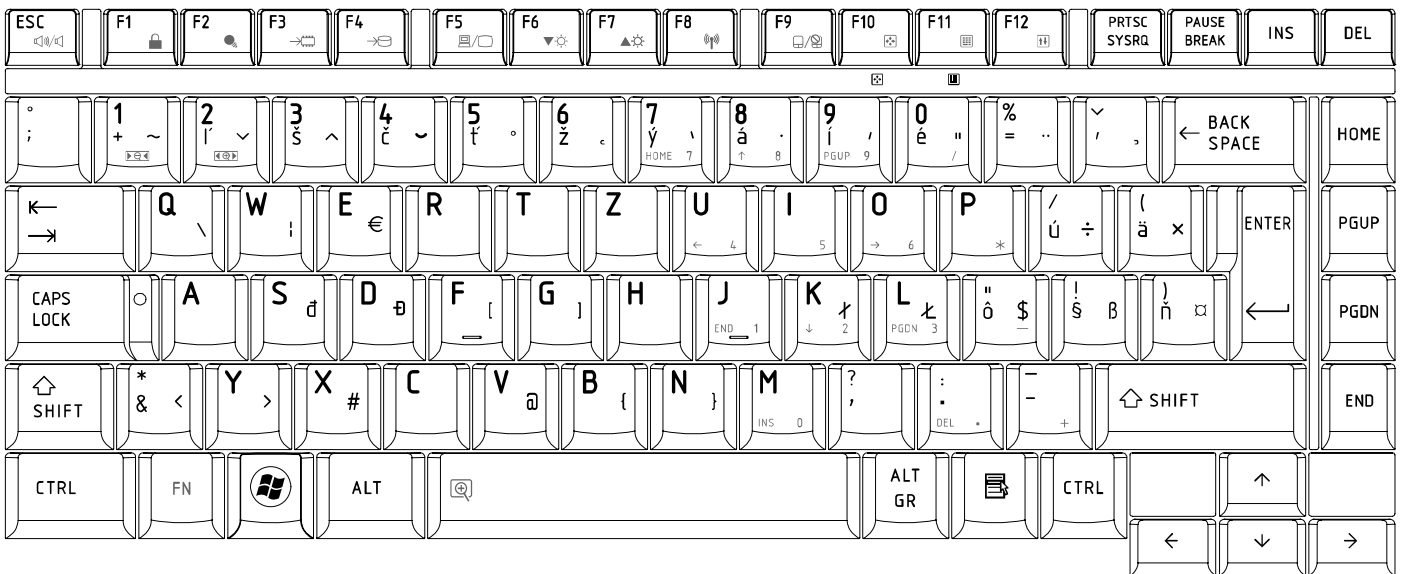


Figure SL keyboard (L300mm x W131.3mm)

## 15. Italian (IT) Keyboard

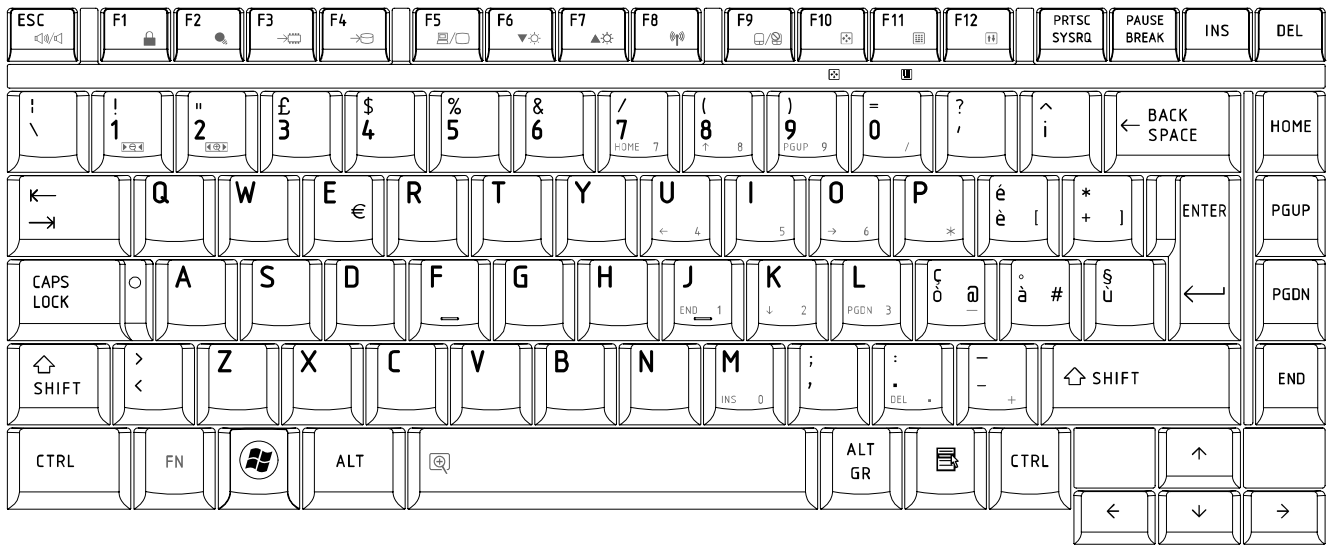


Figure IT keyboard (L300mm x W131.3mm)

## 16. French (FR) Keyboard

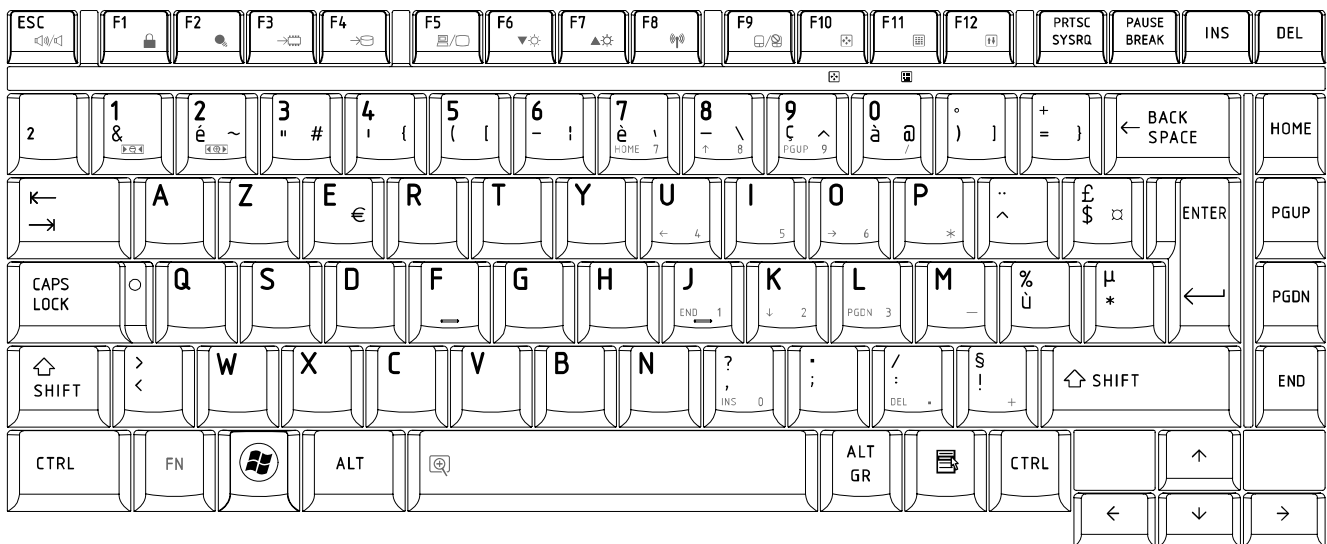


Figure FR keyboard (L300mm x W131.3mm)

## 17. German (GR) Keyboard

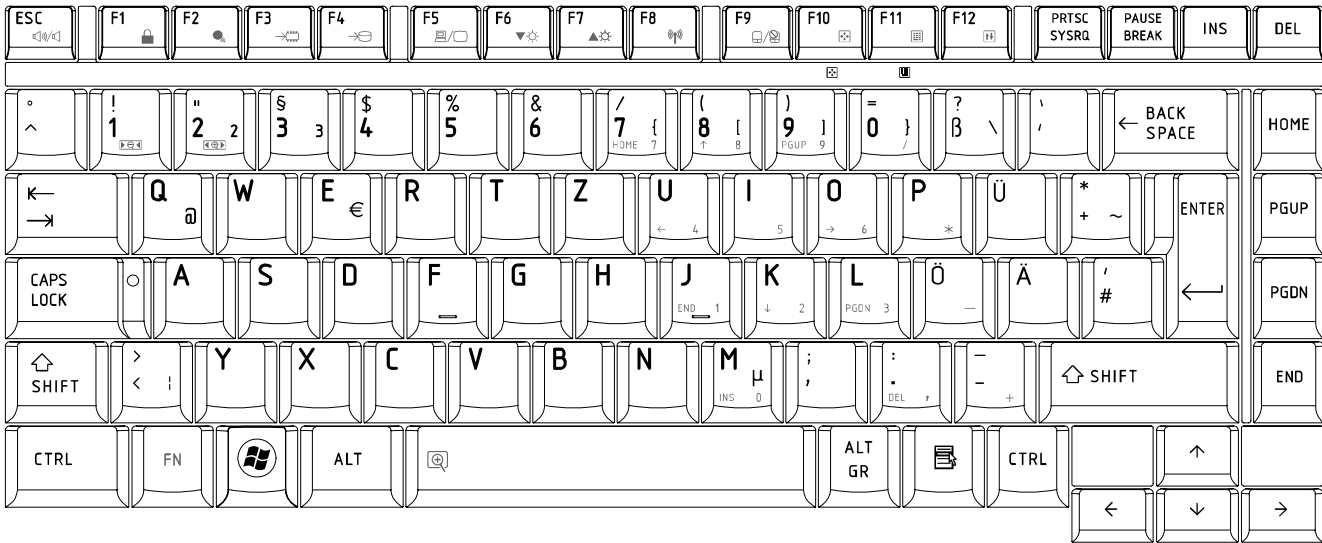


Figure GR keyboard (L300mm x W131.3mm)

## 18. Greek (GK) Keyboard

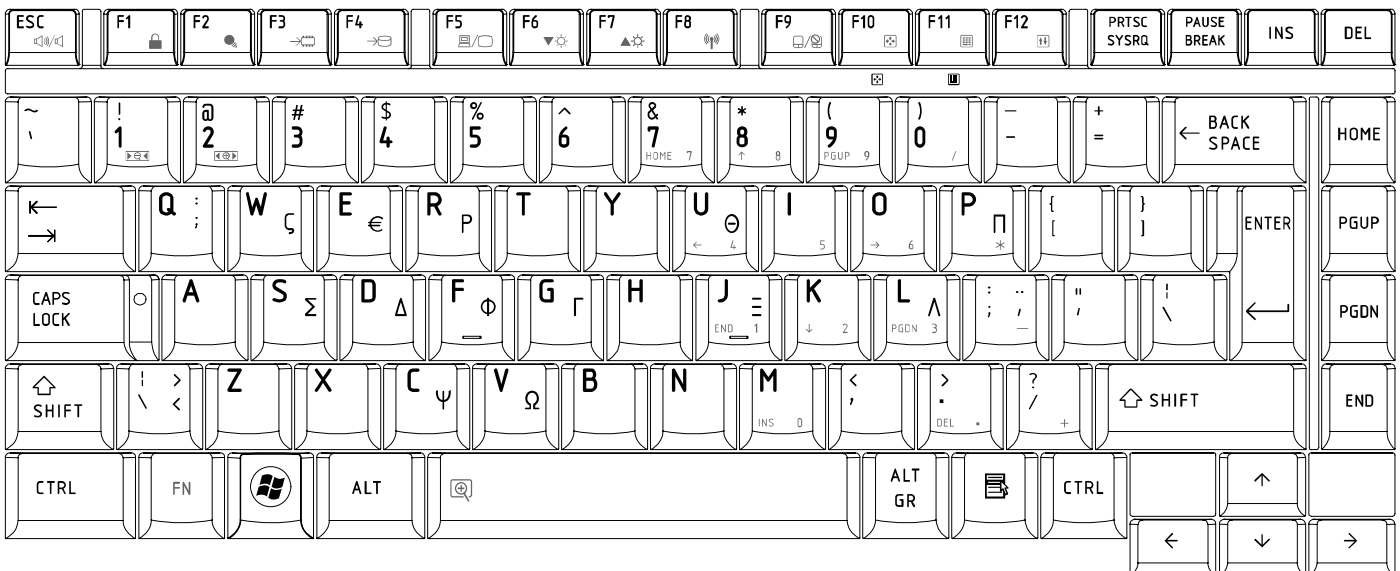


Figure GK keyboard (L300mm x W131.3mm)

## 19. Canada French (CF) Keyboard

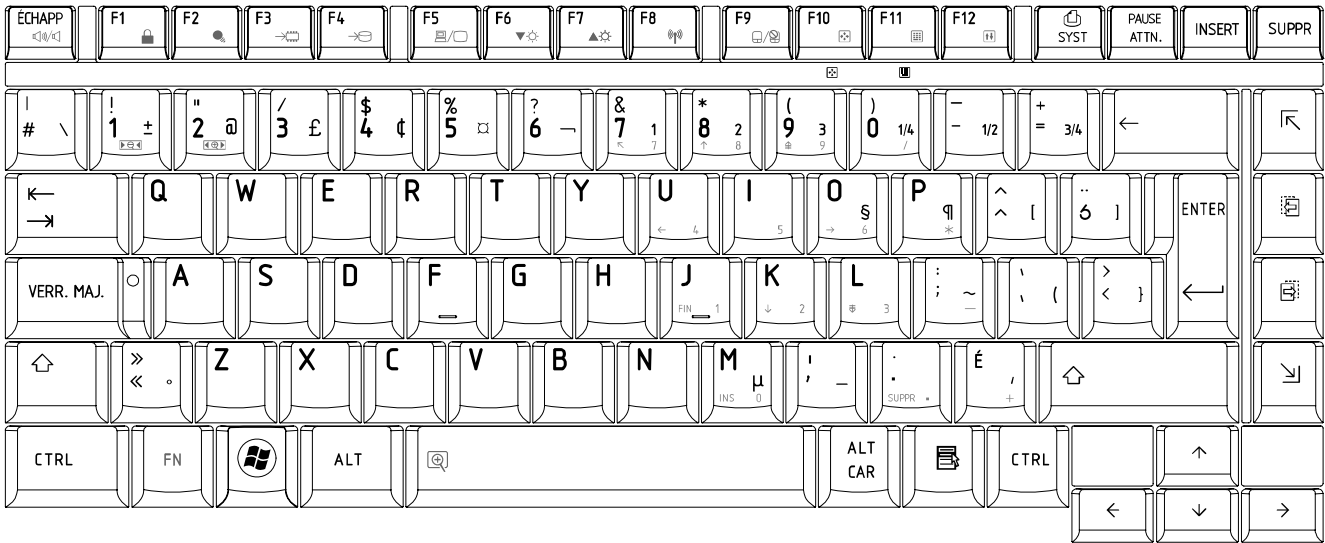


Figure CF keyboard (L300mm x W131.3mm)

## 20. Hungarian (HG) Keyboard

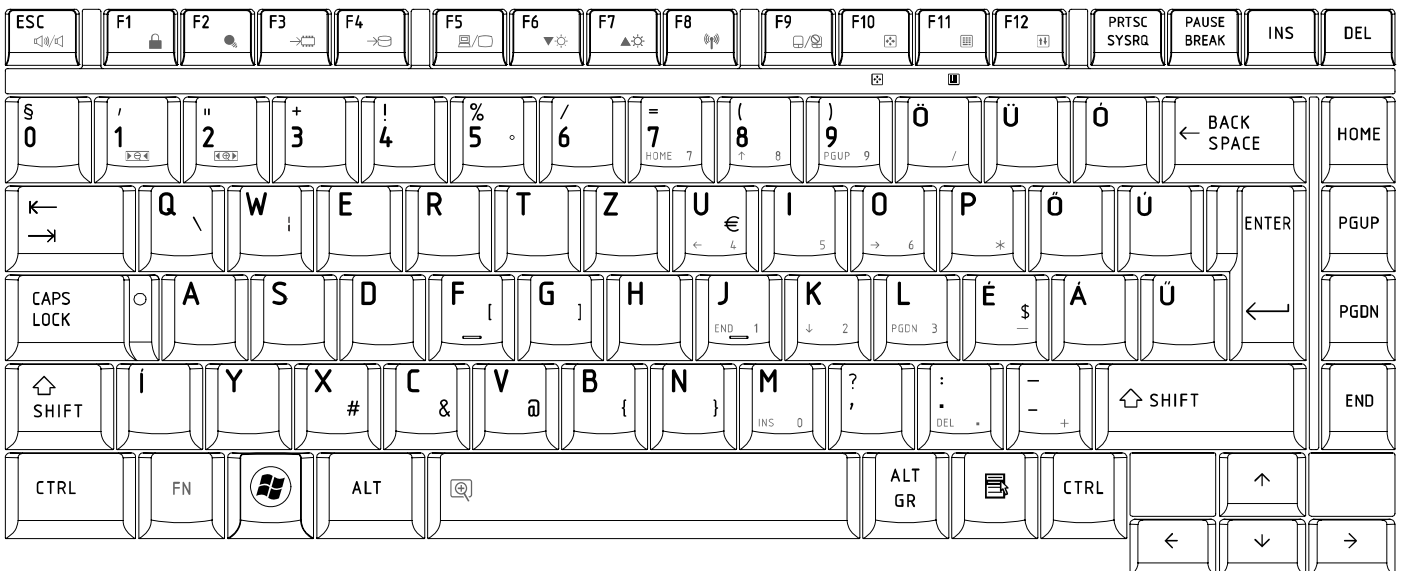


Figure HG keyboard (L300mm x W131.3mm)



## 21. Spanish (SP) Keyboard

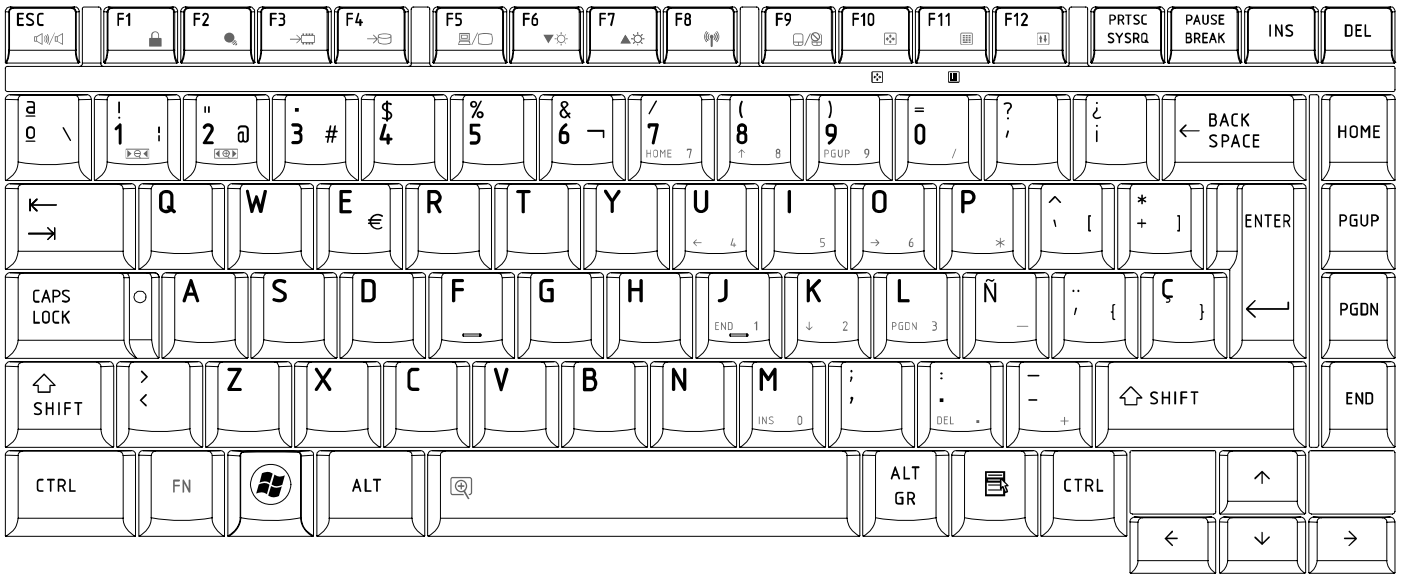


Figure SP keyboard (L300mm x W131.3mm)

## 22. Turkish (TR) Keyboard

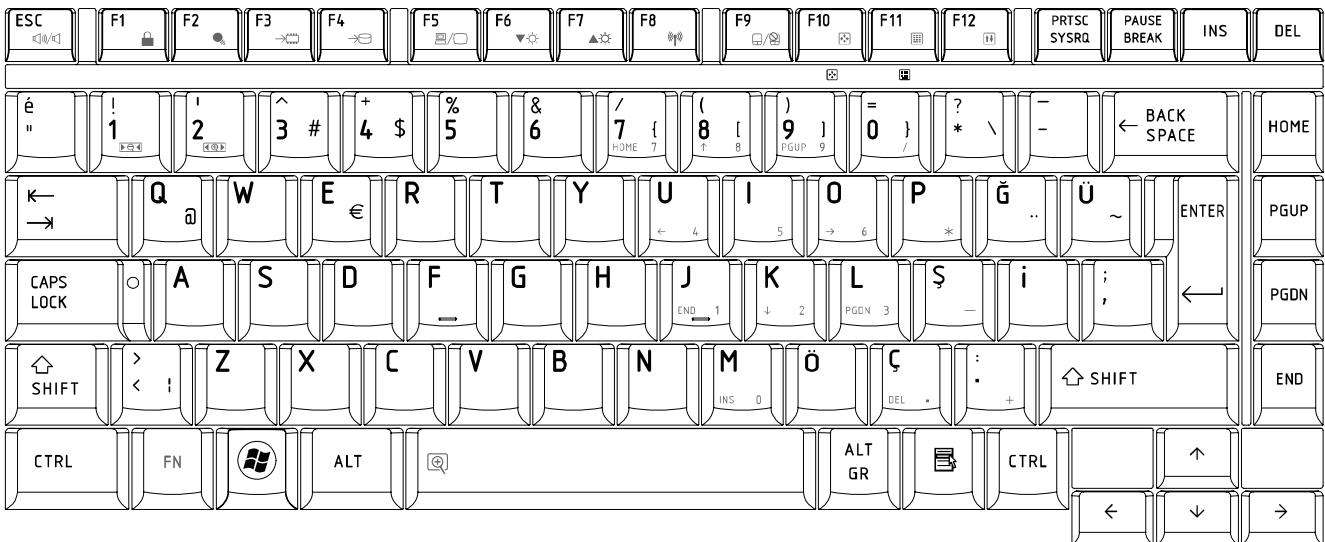


Figure TR keyboard (L300mm x W131.3mm)

## 23. Turkish F (TF-F) Keyboard

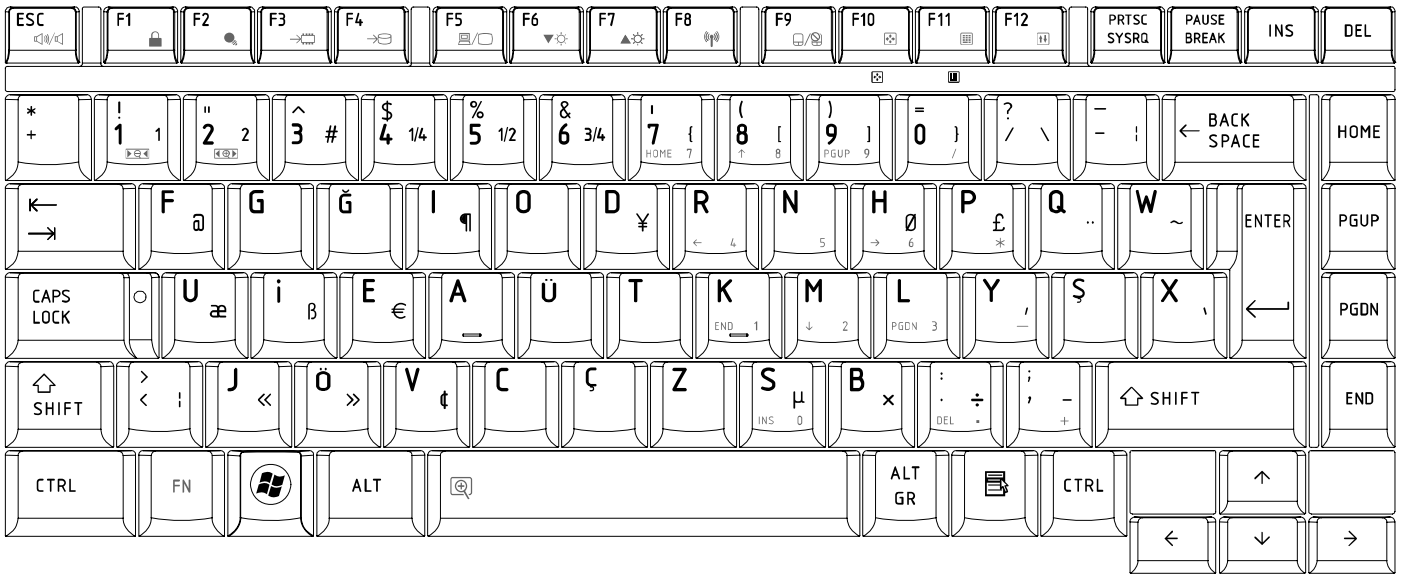


Figure TF-F keyboard (L300mm x W131.3mm)

## 24. Swedish (SD) Keyboard

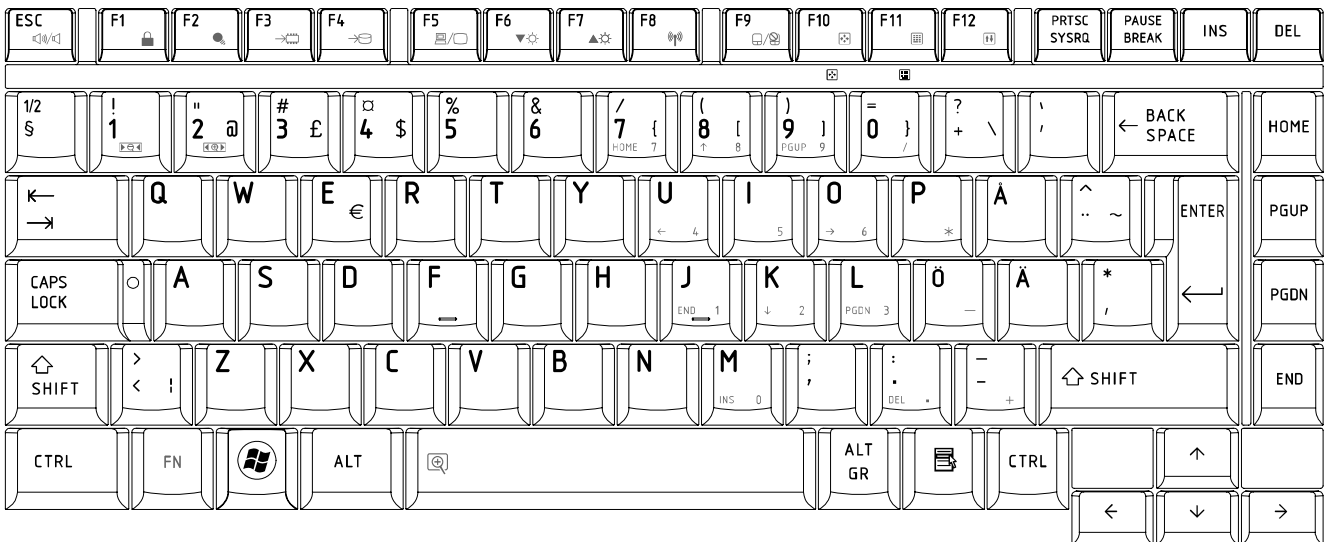


Figure SD keyboard (L300mm x W131.3mm)

## 25. Belgian (BE) Keyboard

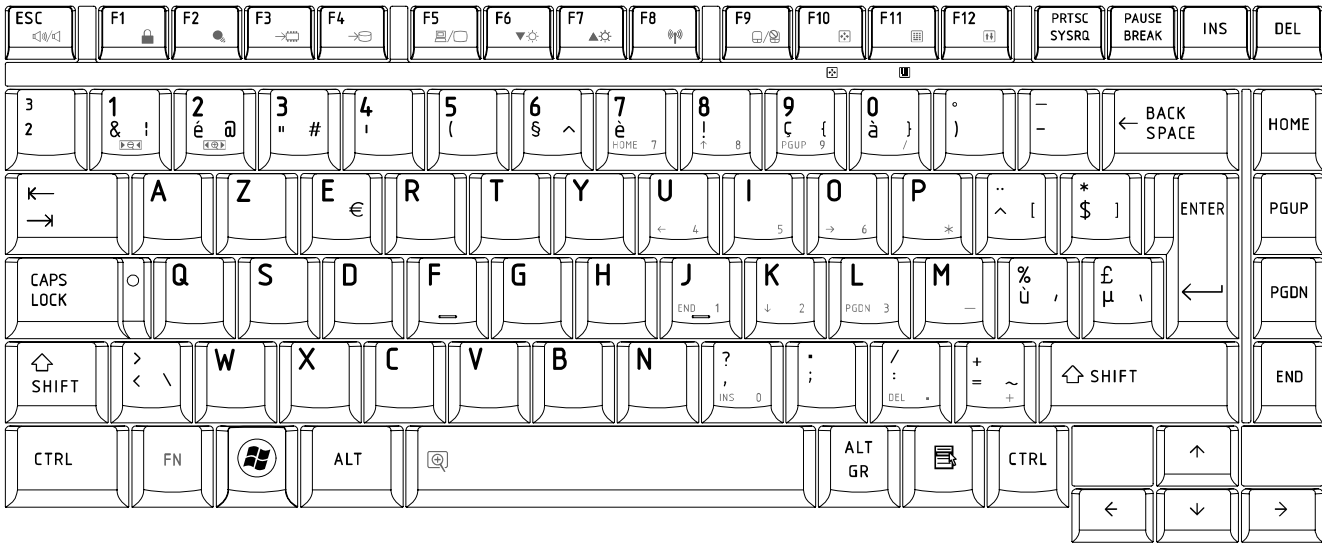


Figure BE keyboard (L300mm x W131.3mm)

## 26. Yugoslavian (YU) Keyboard

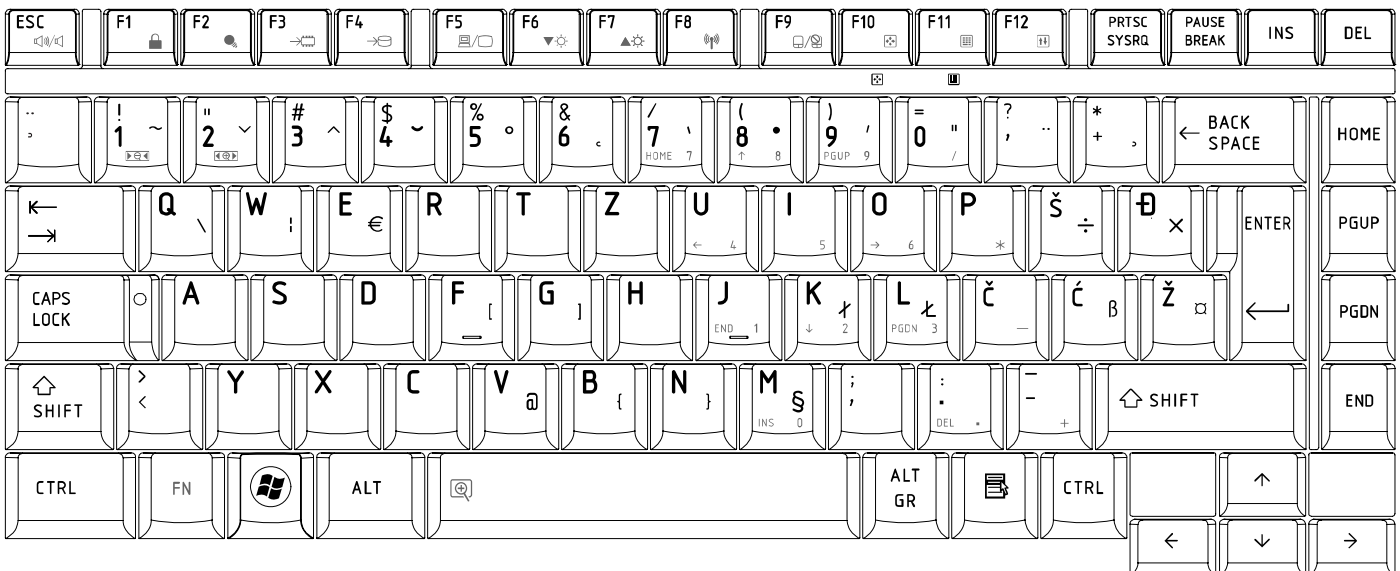


Figure YU keyboard (L300mm x W131.3mm)

## 27. Norwegian (NW) Keyboard

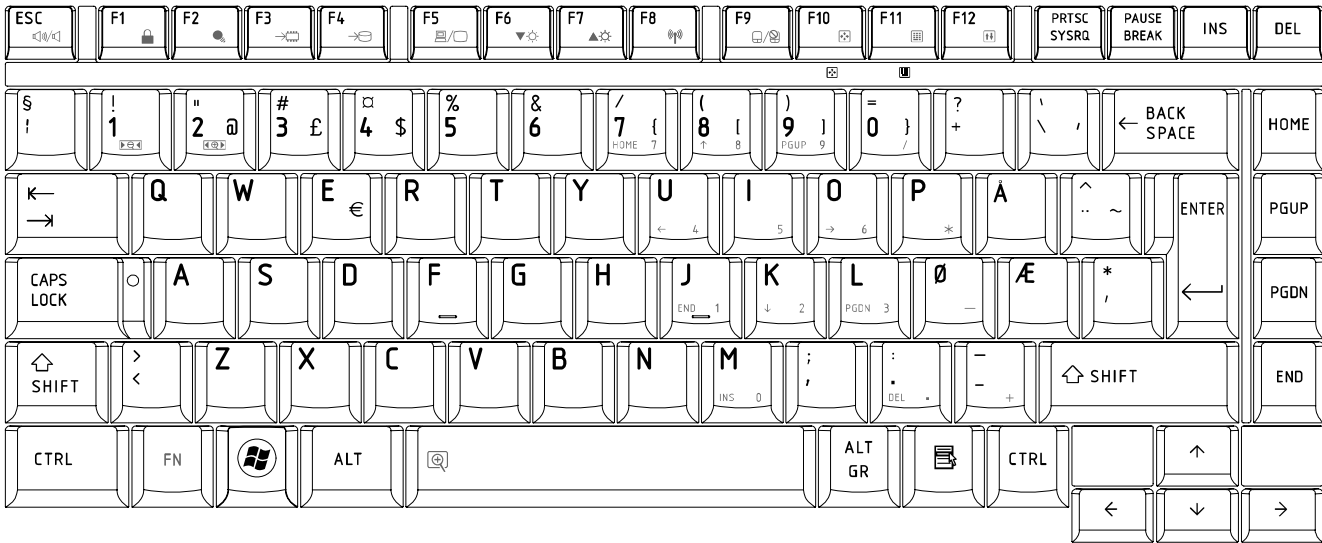


Figure NW keyboard (L300mm x W131.3mm)

## 28. Scandinavian (ND) Keyboard

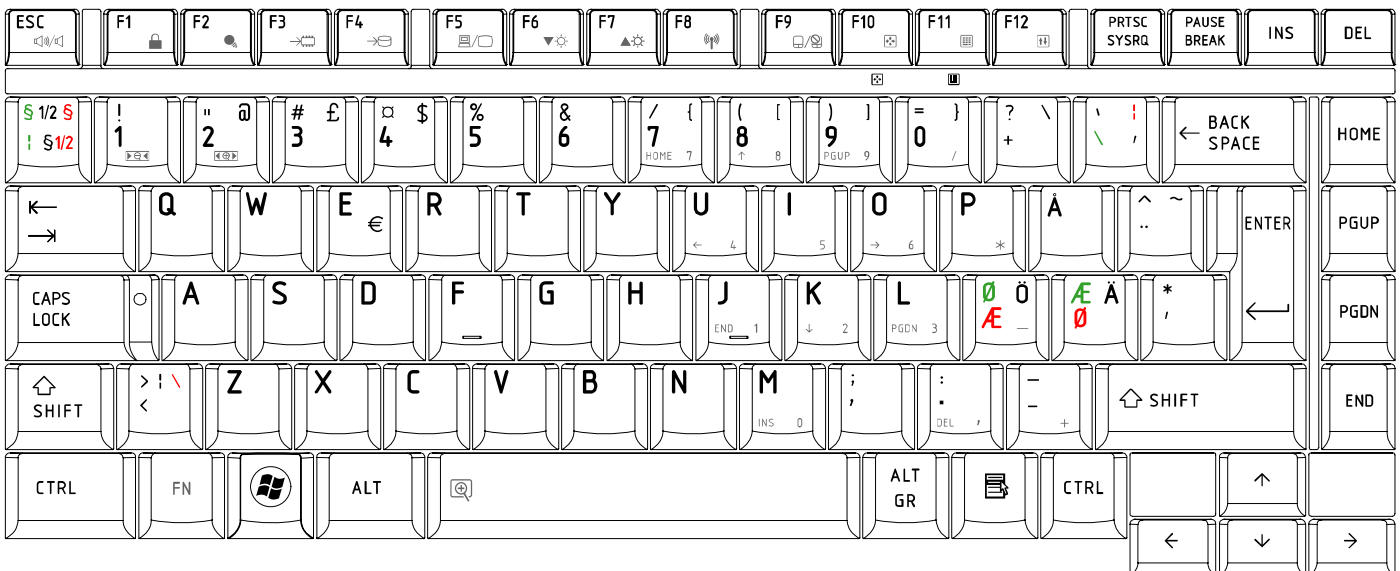


Figure ND keyboard (L300mm x W131.3mm)

## 29. Canadian Multinational (AC) Keyboard



Figure AC keyboard (L300mm x W131.3mm)

## 30. Canadian Bilingual (CB) Keyboard



Figure CB keyboard (L300mm x W131.3mm)

### 31. Japanese (JP) Keyboard

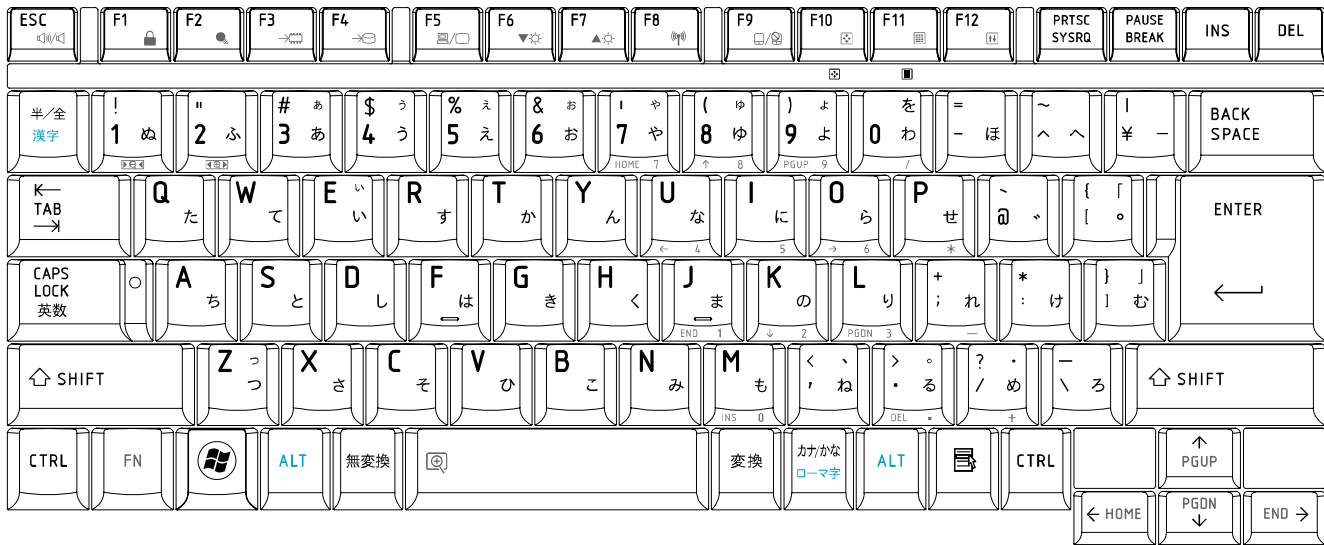


Figure JP keyboard (L300mm x W131.3mm)

---

## Appendix F Wiring Diagrams

---

### F.1 RGB Monitor ID Wraparound connector

(1) RED	_____	RED	(1)
(2) GREEN	_____	GREEN	(2)
(3) BLUE	_____	BLUE	(3)
(4) NC	_____	NC	(4)
(5) GND	_____	GND	(5)
(6) GND	_____	GND	(6)
(7) GND	_____	GND	(7)
(8) GND	_____	GND	(8)
(9) 5V	_____	5V	(9)
(10) GND	_____	GND	(10)
(11) NC	_____	NC	(11)
(12) SDA	_____	SDA	(12)
(13) HSYNC	_____	HSYNC	(13)
(14) VSYNC	_____	VSYNC	(14)
(15) SDL	_____	SCL	(15)

*Figure F-1 RGB Monitor ID Wraparound connector (15PIN to 15PIN)*

### F.2 LAN Loopback Connector

(1) BIBAP (TX+)	_____	(3) BIDBP (RX+)
(2) BIDAN (TX-)	_____	(4) BIDBN (RX-)

*Figure F-2 LAN loopback connector*

---

## Appendix G BIOS Rewrite Procedures

---

This Appendix explains how to rewrite the system BIOS program when you update the system BIOS.

### Tools

To rewrite the BIOS, you need the following tool:

- BIOS/EC/KBC rewriting disk
- USB doggle

### Rewriting the BIOS

1. Turn off the power to the computer.
2. Remove the external cables and cards.
3. Connect an external FDD and insert the BIOS rewriting disk into the external FDD.
4. Connect the USB doggle special for BIOS rewrite
5. Turn on the power
6. The BIOS rewriting starts.
7. When the process is completed, it beeps and the system automatically reboots.

**NOTE:**

1. *Connect the AC adaptor to the computer when you rewrite the BIOS.*
2. *Do not turn off the power while you are rewriting the BIOS. If the rewrite fails, it might be impossible to start up the computer.*
3. *If you fail to rewrite BIOS, then when you next turn on the power, a message may be displayed that the contents of the BIOS have been erased or system can not boot . In this case, insert the BIOS rewriting disk, and the BIOS will be rewritten.*



---

## **Appendix H EC/KBC Rewrite Procedures**

---

Same as BIOS rewrite Procedures, please refer appendix G

---

## Appendix I Reliability

---

The following table shows MTBF (Mean Time Between Failures) in maximum configuration.

*Table I-1 MTBF*

<b>Component</b>	<b>Time (hours)</b>
System	4138.00