

## V632UK, V642UK, V752UK, V852UK

### **Symptom**

Playback appears to have no head switching also VCR has no playback sound. On screen menu is in a foreign language and front buttons do not operate as they are labeled. Test switches do not operate.

### **Cause**

The above symptoms may occur due to a mains supply interruption.

### **Cure**

The above machines are effectively locked up and need to be released from this lockout before you can enter service mode and re enter the NVM data.

**V852UK** Hold audio dub button on remote control for more than 10 secs, then immediately proceed as per the NVRam option setting instructions on the next page.

**V752UK, V711UK, V701UK, V632UK.** To release these models try: Front eject button, Any front button or short the contacts on any ghost button on the pcb, then proceed with NVRam procedure on the next page.

***This sheet should be used only after unlock procedure has been followed as described above.***

### **NVRAM Option Setting After Recovery From Lockup**

Note: Fig 5 -14 and Fig 5 -15 are examples only, for correct settings refer to Table 5 - 2

- 1) Press the "MENU" button on the remote control about 5 seconds then option setting display is appeared.  
(See Fig. 5-14)
- 2) Select the option number (See Table 5-2) of corresponding model with "CURSOR" button on the remote control.
- 3) If selecting the option number is completed, press the "OK" button of remote control.  
(If "OK" button is pressed, the selected number is changes reversed color. ; See Fig. 5-14)
- 4) Press the "MENU" button of remote control again to store the option number.  
( "PLEASE WAIT" is displayed for a second as shown Fig. 5-15 and this setting is completed.)
- 5) Turn the Power off.

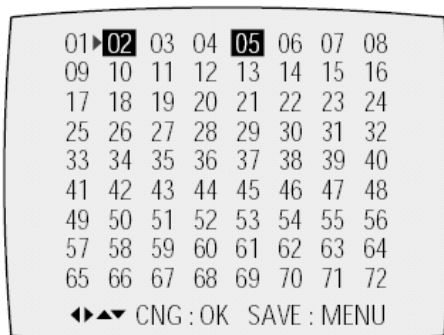


Fig. 5-14

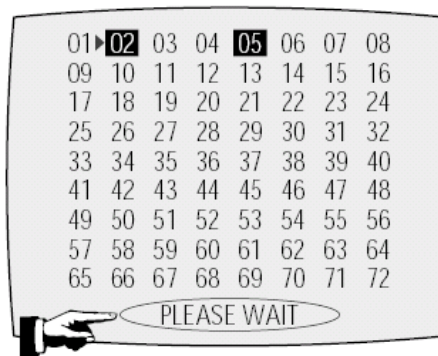


Fig. 5-15

<Table 5-2>

MODEL	OPTION NUMBER
V-752UK	3, 4, 5, 6, 8, 9, 10, 11, 12, 14, 15, 17, 18, 25, 26, 29, 33, 39, 40, 41, 46, 49, 50, 52, 53, 60, 61, 62, 63, 72
V-852UK	3, 4, 5, 6, 8, 9, 10, 11, 12, 14, 15, 16, 17, 18, 19, 23, 25, 26, 29, 32, 33, 39, 40, 41, 46, 48, 49, 50, 52, 53, 60, 61, 62, 63, 72
V-642UK	4, 5, 6, 8, 9, 10, 11, 12, 14, 15, 18, 25, 26, 29, 33, 38, 40, 41, 46, 49, 50, 53, 60, 61, 62, 63, 72
V-632UK	4, 5, 6, 8, 9, 10, 11, 12, 14, 18, 25, 26, 29, 33, 38, 40, 41, 46, 49, 50, 53, 60, 61, 62, 63, 72
V-652UK	3, 4, 5, 6, 8, 9, 10, 11, 12, 14, 15, 17, 18, 25, 26, 29, 33, 38, 40, 41, 46, 49, 51, 52, 53, 60, 61, 62, 63, 72

The above procedure will normally recover a locked up VCR but it should be borne in mind that the machine could revert to this condition again if a similar mains interruption is encountered. In areas where mains supply interruptions are more common it may be advisable to replace the main microprocessor IC601 with a new improved type available from our spares department Part Number BY631197.